


Service Manual

Digital Video Camcorder/Digital Video Camera

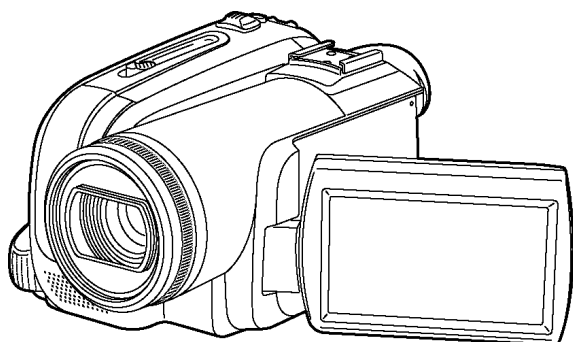

- NV-GS330E
- NV-GS330EB
- NV-GS330EF
- NV-GS330EE
- NV-GS330EG
- NV-GS330EK
- NV-GS330EP
- NV-GS330GC
- NV-GS330GN
- NV-GS330SG

VOL.1

Colour

(S).....Silver Type

Please use this manual together with the service manual for Model No.NV-GS320EG-S, Order No.VM0701006CE.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

1 Changes in Replacement Parts List

Note:

Refer to the "Replacement Parts List" of NV-GS320EG(VM0701006CE) Service manual.

Ref. No.	Change of Part No.		Parts Name & Description	Pcs.	Remarks
	NV-GS320	NV-GS330			
1	LSYK1910	LSYK2381	SIDE (R) SHAFT U	1	
2	LSYK1913	LSYK2380	FRONT CASE U	1	
6	LSXK0305	LSXK0305-A	EVF SPRING	1	
22	LSXK0306	LSXK0306-A	EVF EARTH SPRING	1	
101	VEP03H08B	VEP03H08L	MAIN P.C.B.	1	(RTL) E,EB,EF,EG,EP
101	VEP03H08C	VEP03H08M	MAIN P.C.B.	1	(RTL) EK
101	VEP03H08D	VEP03H08N	MAIN P.C.B.	1	(RTL) GC,GN,SG
101	-----	VEP03H08P	MAIN P.C.B.	1	(RTL) EE
106	LSXK0287	LSXK0336-A	BOTTOM CASE U	1	
201	LSYK1922	LSYK2382	LCD CASE (A) U	1	
204	L5BDDYH00022	L5BDDYH00025	LCD PANEL	1	
301-2	VGQ9217	VGQ9810	CCD HEAT TRANSFER SHEET	1	
401	LSPG2322	LSPG2601	PACKING CASE	1	
402	LSPN0786	LSPN0898	PAD	1	
409	K1HA05CD0010	VFA0453-A	USB CABLE	1	
411	VQT1A41	-----	O/I	1	(Deletion) EG,EK
411	VQT1A42	-----	O/I	1	(Deletion) EG,EF,EK
411	VQT1A83	-----	O/I	1	(Deletion)EG,EK
411	VQT1A43	-----	O/I	1	(Deletion) E
411	VQT1A44	-----	O/I	1	(Deletion) E
411	VQT1A47	-----	O/I	1	(Deletion) EB
411	VQT1A45	-----	O/I	1	(Deletion) EP
411	VQT1A46	-----	O/I	1	(Deletion) EP
411	VQT1A48	-----	O/I	1	(Deletion) GC,SG
411	VQT1A49	-----	O/I	1	(Deletion) GC,SG
411	VQT1A50	-----	O/I	1	(Deletion) GC,SG
411	VQT1A51	-----	O/I	1	(Deletion) EE
411	VQT1A52	-----	O/I	1	(Deletion) GN
411	VQT1A38	-----	O/I	1	(Deletion) PL
411	VQT1A39	-----	O/I	1	(Deletion) GT
411	VQT1A53	-----	O/I	1	(Deletion) GK
411	-----	VQT1L39	O/I	1	(Addition) E
411	-----	VQT1L40	O/I	1	(Addition) E
411	-----	VQT1L43	O/I	1	(Addition) EB
411	-----	VQT1L37	O/I	1	(Addition) EG,EF,EK
411	-----	VQT1L47	O/I	1	(Addition) EE
411	-----	VQT1L36	O/I	1	(Addition) EG,EK
411	-----	VQT1L38	O/I	1	(Addition) EG,EK
411	-----	VQT1L41	O/I	1	(Addition) EP
411	-----	VQT1L42	O/I	1	(Addition) EP
411	-----	VQT1L44	O/I	1	(Addition) GC,SG
411	-----	VQT1L45	O/I	1	(Addition) GC,SG
411	-----	VQT1L46	O/I	1	(Addition) GC,SG
411	-----	VQT1L48	O/I	1	(Addition) GN
412	VFF0305-S	VFF0412-S	CD-ROM	1	