



5.4 REPLACEMENT PARTS LIST FOR ES8068

[TOP PREVIOUS](#)

NOTE:

*A= available as an optional accessory

*B= only available as set

*C= available individually

Ref. No.	Part No.	Part Name& Description	Remarks	Per Unit
1	WES881X7158	PROTECTIVE CAP		1
2	WES9075P	OUTER FOIL		1
3	WES8068N0048	OUTER FOIL FRAME		1
4	WES9070P	INNER BLADE	*B	2
5	WES882L9709	SCREW	*C SUS M7/M3*8	2
6	WES8068L0207	RETAINING PLATE		1
7	WES8003L0327	WATER-PROOF RUBBER		1
8	WES8068H0007	BLADE MOUNTING BASE		1
9	WES8068K3267	FOIL FRAME RELEASE BUTTON	*C	2
10	WES3001L0177	SPRING FOR RELEASE BUTTON	*C	2
11	WES8068N3159	HOUSING		1
12	WES8068K3207	SWITCH HANDLE		1
13	WES8068N0367	LOCK BUTTON		1
14	WES8068K3968	SWITCH PANEL		1
15	WES8068K1507	TRIMMER		1
16	WES8068K3847	BOTTOM COVER		1
17	WES762L6007	SCREW	*C	2
18	WES8068L1077	TRIMMER DRIVING BAR B		1
19	WES8068L1087	TRIMMER DRIVING BAR A		1
20	WES8068L4307	LINEAR MOTOR ASSEMBLY		1
21	WES8068L1007	LINEAR MOTOR		1
22	WES8068L2127	MODULE		1
23	WES8068L0777	CHASSIS		1
24	WES882L2508	RECHARGEABLE BATTERY	NI-MH	1
25	WES8068N3039	BODY BLOCK		1
26	WES8068H7666	CHARGING ADAPTOR	O PLUG	1
27	WES663H7667	WALL MOUNTING HOLDER		1
28	WES8068H7007	SOFT CASE		1
29	WES861B7057	CLEANING BRUSH		1
-	WES8068N8010	INDIVIDUAL BOX		1
-	WES8068N8110	OPERATING INSTRUCTIONS		1

@

[TOP PREVIOUS](#)