

# Service Manual

## Telephone Equipment

*Supplement*

Model No. KX-TGF372S/  
 KX-TGF373S/KX-TGF374S/  
 KX-TGF375S/KX-TG585SK/  
 KX-TGFA30S/KX-TGFA30M/  
 KX-TGF380M/KX-TGF382M/  
 KX-TGF383M/KX-TGF370LAS/  
 KX-TGFA30LAS/KX-TGF380LAM/  
 KX-TGFA30LAM/KX-TGF380LCM/  
 KX-TGFA30LCM/KX-TGF370AGS/  
 KX-TGFA30AGS/KX-TGF380AGM/  
 KX-TGFA30AGM/KX-TGF372AZS/  
 KX-TGFA30AZS/KX-TGF380AZM/  
 KX-TGF382AZM/KX-TGFA30AZM

Link-to-Cell Bluetooth Convergence Solution  
 Digital Corded/Cordless Phone with Link-to-Cell  
 Digital Cordless Phone with Dual Keypad and  
 Link-to-Mobile

Digital Corded/Cordless Phone with Link-to-  
 Mobile

S: Silver Version

M: Metallic Black Version

Please use this manual with the original service manual mentioned on the next page.

### WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

## TABLE OF CONTENTS

	PAGE	PAGE
<b>1 ORIGINAL SERVICE MANUAL INFORMATION</b> -----	<b>2</b>	
<b>2 CORRECTION</b> -----	<b>2</b>	
2.1. Service Mode-----	<b>2</b>	
2.1.1. How to Clear User Setting and User Data (Base Unit and Handset)-----	<b>2</b>	

**Panasonic®**

© Panasonic System Networks Co., Ltd. 2016  
 Unauthorized copying and distribution is a violation  
 of law.

# 1 ORIGINAL SERVICE MANUAL INFORMATION

Model No. on S/M	Destinations	Order No. of S/M	Suffix Code	
			Base Unit	Handset
KX-TGF372S/KX-TGF373S/KX-TGF374S/KX-TGF375S/KX-TG585SK/KX-TGFA30S/KX-TGFA30M	USA	KM41501897CE	---	---
KX-TGF380M/KX-TGF382M/KX-TGF383M/KX-TGFA30M	USA	KM41501899CE	---	---
KX-TGF370LAS/KX-TGFA30LAS	Panama/Ecuador/Costa Rica/ Guatemala/El Salvador/ Colombia/Cuba	KM41506926CE	---	---
KX-TGF380LAM/KX-TGFA30LAM	Panama/Ecuador/Costa Rica/ Guatemala/El Salvador/ Colombia/Cuba	KM41506927CE	---	---
KX-TGF380LCM/KX-TGFA30LCM	Chile/Peru/Uruguay/Bolivia	KM41508942CE	---	---
KX-TGF370AGS/KX-TGFA30AGS	Argentina	KM41510953CE	---	---
KX-TGF380AGM/KX-TGFA30AGM	Argentina	KM41511964CE	---	---
KX-TGF372AZS/KX-TGFA30AZS	New Zealand	KM41507937CE	---	---
KX-TGF380AZM/KX-TGF382AZM/KX-TGFA30AZM	Australia/New Zealand	KM41508940CE	---	---

## 2 CORRECTION

### 2.1. Service Mode

[Changed from original section "9 Service Mode"]

#### 2.1.1. How to Clear User Setting and User Data (Base Unit and Handset)

Handset

Press **1**, **5**, **9**, **\*** simultaneously until a beep sound is heard. Then base unit and single handset are initialized.  
(The contents of user setting are reset to factory default.

The data of Phonebook, Caller ID, Redial, Call block and recorded message in Answering system are erased.)

\*Usage time is cleared.