# Service Manual Telephone Equipment



Model No. KX-TGF372S/ KX-TGF373S/KX-TGF374S/ KX-TGF375S/KX-TG585SK/ KX-TGFA30S/KX-TGFA30M/ KX-TGF380M/KX-TGF382M/ KX-TGF383M/KX-TGF382M/ KX-TGFA30LAS/KX-TGF380LAM/ KX-TGFA30LAM/KX-TGF380LCM/ KX-TGFA30LCM/KX-TGF380ACM/ KX-TGFA30AGS/KX-TGF380AGM/ KX-TGFA30AGS/KX-TGF380AZM/ KX-TGFA30AZS/KX-TGF380AZM/

Link-to-Cell Bluetooth Convergence Solution Digital Corded/Cordless Phone with Link-to-Cell Digital Cordless Phone with Dual Keypad and Link-to-Mobile

Digital Corded/Cordless Phone with Link-to-Mobile

S: Silver Version

M: Metallic Black Version

Please use this manual with the original service manual mentioned on the next page.

## 

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

# TABLE OF CONTENTS

PAGE
------

- 1 ORIGINAL SERVICE MANUAL INFORMATION ------ 2 2 CORRECTION------ 2
  - 2.1. Service Mode------2
    - 2.1.1. How to Clear User Setting and User Data (Base Unit and Handset)------2



© Panasonic System Networks Co., Ltd. 2016 Unauthorized copying and distribution is a violation of law.

### PAGE

#### **ORIGINAL SERVICE MANUAL INFORMATION** 1

Model No. on S/M	Destinations	Order No. of S/M	Suffix Code	
			Base Unit	Handset
KX-TGF372S/KX-TGF373S/KX-TGF374S/KX-TGF375S/KX- TG585SK/KX-TGFA30S/KX-TGFA30M	USA	KM41501897CE		
KX-TGF380M/KX-TGF382M/KX-TGF383M/KX-TGFA30M	USA	KM41501899CE		
KX-TGF370LAS/KX-TGFA30LAS	Panama/Ecuador/Costa Rica/ Guatemala/El Salvador/ Colombia/Cuba	KM41506926CE		
KX-TGF380LAM/KX-TGFA30LAM	Panama/Ecuador/Costa Rica/ Guatemala/El Salvador/ Colombia/Cuba	KM41506927CE		
KX-TGF380LCM/KX-TGFA30LCM	Chile/Peru/Uruguay/Bolivia	KM41508942CE		
KX-TGF370AGS/KX-TGFA30AGS	Argentina	KM41510953CE		
KX-TGF380AGM/KX-TGFA30AGM	Argentina	KM41511964CE		
KX-TGF372AZS/KX-TGFA30AZS	New Zealand	KM41507937CE		
KX-TGF380AZM/KX-TGF382AZM/KX-TGFA30AZM	Australia/New Zealand	KM41508940CE		

#### CORRECTION 2

#### 2.1. **Service Mode**

[Changed from original section "9 Service Mode"]

#### How to Clear User Setting and User Data (Base Unit and Handset) 2.1.1. Handset

Press 1, 5, 9, 🕱 simultaneously until a beep sound is heard. Then base unit and single handset are initialized. (The contents of user setting are reset to factory default.

The data of Phonebook, Caller ID, Redial, Call block and recorded message in Answering system are erased.) \*Usage time is cleared.