

# Service Manual

## Telephone Equipment

Caller ID Compatible

### KX-TCD530AXM KX-TCA151AXM

#### Digital Cordless Phone

Metallic Grey Version


(for Asia, Middle Near East and Other areas)



KX-TCA151AXM  
(CORDLESS HANDSET)



KX-TCD530AXM  
(BASE UNIT)

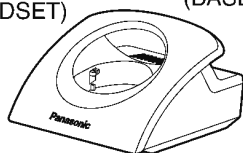

(CHARGER UNIT)

#### Configuration for each model

Model No	Base Unit	Cordless Handset	Charger Unit
KX-TCD530	1	1 (TCA151)	1
KX-TCA151		1	1

KX-TCA151 is also an optional accessory, which contains a cordless handset and a charger.

#### SPECIFICATION

Standard:	DECT= (Digital Enhanced Cordless Telecommunications) GAP=(Generic Access Profile)	Power source:	AC Adaptor (220 V - 240 V AC, 50 Hz)
Number of channels:	120 Duplex Channels	Power consumption, Base Unit:	Standby: Approx. 2.6 W/Maximum: Approx. 9.2 W
Frequency range:	1.88 GHz to 1.9 GHz	Charger Unit:	Standby: Approx. 2.3 W/Maximum: Approx. 6.8 W
Duplex procedure:	TDMA (Time Division Multiple Access)	Battery life, Cordless Handset (if batteries are fully charged):	Stand-by: Up to 120 hours (Ni-MH) Talk: Up to 10 hours (Ni-MH)
Channel spacing:	1728 kHz	Operating conditions:	5 - 40 °C, 20 - 80 % relative air humidity (dry)
Bit rate spacing:	1152 kbit/s	Dimensions, Base Unit (D x W x L):	53 mm x 205 mm x 197 mm
Modulation:	GFSK= (Gaussian Frequency Shift Keying)	Dimensions, Cordless Handset (D x W x L):	143 mm x 48 mm x 32 mm
RF Transmission Power:	approx. 250 mW	Dimensions, Charger Unit (D x W x L):	60 mm x 86 mm x 84 mm
Voice coding:	ADPCM 32 kbit/s	Weight, Base Unit:	about 670 g
Operation range:	Up to 300 m outdoors, Up to 50 m indoors	Weight, Cordless Handset:	about 125 g
Analog telephone connection:	Telephone Line	Weight, Charger Unit:	about 113 g
		Connection jack:	RJ11 Plug

Specifications are subject to change.

The illustrations used in this manual may differ slightly from the original device.

#### IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product the printed circuit boards will be marked PbF.

Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark.

When this mark does appear please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

# Panasonic

© 2003 Panasonic Communications Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

## ⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.

# CONTENTS

	Page		Page
<b>1 ABOUT LEAD FREE SOLDER (PbF: Pb free)</b>	<b>4</b>	8.5. Handset Registration to a Base Unit	42
1.1. Suggested PbF Solder	4	8.6. Base Unit Selection	44
1.2. How to recognize that Pb Free solder is used	5	<b>9 DISASSEMBLY INSTRUCTIONS</b>	<b>45</b>
<b>2 FOR SERVICE TECHNICIANS</b>	<b>8</b>	9.1. Base Unit	45
<b>3 CAUTION</b>	<b>8</b>	9.2. Cordless Handset	46
<b>4 BATTERY</b>	<b>9</b>	9.3. Charger Unit	47
4.1. Battery Installation	9	<b>10 TROUBLESHOOTING GUIDE</b>	<b>48</b>
4.2. Battery Charge	9	10.1. Check Power	49
4.3. Battery Information	10	10.2. Check Battery Charge	50
4.4. Replacing the Batteries	10	10.3. Check Link	51
<b>5 LOCATION OF CONTROLS</b>	<b>11</b>	10.4. Check Cordless Handset Transmission	55
5.1. Base Unit	11	10.5. Check Cordless Handset Reception	55
5.2. Cordless Handset	12	10.6. Check Curl Cord Handset Transmission	55
5.3. Charger Unit	12	10.7. Check Curl Cord Handset Reception	55
5.4. Icons above SOFT KEYS	13	10.8. Check Caller ID	55
<b>6 SETTINGS</b>	<b>14</b>	10.9. Bell Reception	56
6.1. Connection	14	10.10. Check DTMF Dial	56
6.2. Symbols Used for Operations	15	<b>11 CHECK PROCEDURE (BASE UNIT)</b>	<b>57</b>
6.3. Setting the Ringer Volume	17	11.1. Preparation	57
6.4. Settings Menu Chart	18	11.2. PC Setting	57
6.5. PIN Code	19	<b>12 CHECK PROCEDURE (CORDLESS HANDSET)</b>	<b>58</b>
6.6. Reset the Settings	20	12.1. Preparation	58
6.7. Key Lock	21	12.2. PC Setting	58
6.8. Recall Feature	21	<b>13 ADJUSTMENTS (BASE UNIT AND CHARGER UNIT)</b>	<b>59</b>
6.9. Dialling Pause for PBX line/long distance service users	22	13.1. Adjustment (Base Unit)	59
6.10. Call Restriction	22	13.2. Adjustment Standard (Base Unit)	63
6.11. Call Bar On/Off (Call Prohibition On/Off)	23	13.3. Adjustment (Charger Unit)	65
6.12. Selecting the Display Language	24	13.4. Adjustment Standard (Charger Unit)	65
6.13. Selecting the Dialling Mode (Tone/Pulse)	25	<b>14 ADJUSTMENTS (CORDLESS HANDSET)</b>	<b>66</b>
6.14. Selecting the Flash/Earth Mode	25	14.1. Adjustment (Cordless Handset)	66
6.15. Storing Your Area Code	26	14.2. Adjustment Standard (Cordless Handset)	70
<b>7 DISPLAY</b>	<b>27</b>	<b>15 RF SPECIFICATION</b>	<b>71</b>
7.1. Display Icons	27	15.1. Base Unit	71
7.2. Caller ID Service	28	15.2. Cordless Handset	71
7.3. Before Requesting Help (Troubleshooting)	29	<b>16 HOW TO CHECK THE CORDLESS HANDSET AND BASE UNIT SPEAKER</b>	<b>71</b>
<b>8 OPERATIONS</b>	<b>32</b>	<b>17 HOW TO CHECK THE CORDLESS HANDSET RECEIVER</b>	<b>72</b>
8.1. Power ON/OFF	32	<b>18 FREQUENCY TABLE (MHz)</b>	<b>73</b>
8.2. Setting the Date and Time	32	<b>19 BLOCK DIAGRAM (BASE UNIT)</b>	<b>74</b>
8.3. Redialling	33	<b>20 CIRCUIT OPERATION (BASE UNIT)</b>	<b>75</b>
8.4. Phonebook	34		

20.1. Outline .....	75	<b>32 CABINET AND ELECTRICAL PARTS LOCATION (CHARGER UNIT) .....</b>	<b>96</b>
20.2. Power Supply Circuit .....	76	<b>33 ACCESSORIES AND PACKING MATERIALS .....</b>	<b>97</b>
20.3. Telephone Line Interface .....	77	33.1. KX-TCDS530AXM .....	97
20.4. Transmitter/Receiver .....	77	33.2. KX-TCA151AXM .....	98
20.5. Pulse Dialing .....	77	<b>34 TERMINAL GUIDE OF THE ICs, TRANSISTORS AND DIODES .....</b>	<b>99</b>
<b>21 BLOCK DIAGRAM (CORDLESS HANDSET) .....</b>	<b>78</b>	34.1. Base Unit .....	99
<b>22 CIRCUIT OPERATION (CORDLESS HANDSET) .....</b>	<b>79</b>	34.2. Cordless Handset .....	99
22.1. Outline .....	79	34.3. Charger Unit .....	99
22.2. Power Supply Circuit/Reset Circuit .....	79	<b>35 REPLACEMENT PARTS LIST .....</b>	<b>100</b>
22.3. Charge Circuit .....	79	35.1. Base Unit .....	100
22.4. Battery Low/Power Down Detector .....	79	35.2. Cordless Handset .....	102
22.5. Speakerphone and Headset Jack .....	79	35.3. Charger Unit .....	104
<b>23 CIRCUIT OPERATION (CHARGER UNIT) .....</b>	<b>80</b>	35.4. Accessories and Packing Materials .....	104
23.1. Power Supply Circuit .....	80	35.5. Fixtures and Tools .....	105
<b>24 SIGNAL ROUTE .....</b>	<b>81</b>	<b>36 FOR SCHEMATIC DIAGRAM .....</b>	<b>106</b>
<b>25 CPU DATA (BASE UNIT) .....</b>	<b>82</b>	36.1. Base Unit (SCHEMATIC DIAGRAM (BASE UNIT)) .....	106
25.1. IC2 (BBIC) .....	82	36.2. Cordless Handset (SCHEMATIC DIAGRAM (CORDLESS HANDSET)) .....	106
<b>26 CPU DATA (CORDLESS HANDSET) .....</b>	<b>84</b>	36.3. Memo .....	107
26.1. IC1 (BBIC) .....	84	<b>37 SCHEMATIC DIAGRAM (BASE UNIT) .....</b>	<b>108</b>
<b>27 EEPROM LAYOUT (BASE UNIT) .....</b>	<b>86</b>	37.1. Main .....	108
27.1. Scope .....	86	37.2. Operation .....	110
27.2. Introduction .....	86	37.3. Memo .....	111
27.3. EEPROM Layout .....	86	<b>38 SCHEMATIC DIAGRAM (CORDLESS HANDSET) .....</b>	<b>112</b>
<b>28 EEPROM LAYOUT (CORDLESS HANDSET) .....</b>	<b>91</b>	<b>39 SCHEMATIC DIAGRAM (CHARGER UNIT) .....</b>	<b>114</b>
28.1. Scope .....	91	<b>40 CIRCUIT BOARD (BASE UNIT) .....</b>	<b>115</b>
28.2. Introduction .....	91	40.1. Main .....	115
28.3. EEPROM contents .....	91	40.2. Operation .....	117
<b>29 HOW TO REPLACE FLAT PACKAGE IC .....</b>	<b>93</b>	<b>41 CIRCUIT BOARD (CORDLESS HANDSET) .....</b>	<b>119</b>
29.1. Preparation .....	93	41.1. Component View .....	119
29.2. Procedure .....	93	41.2. Flow Solder Side View .....	120
29.3. Modification Procedure of Bridge .....	93	<b>42 CIRCUIT BOARD (CHARGER UNIT) .....</b>	<b>121</b>
<b>30 CABINET AND ELECTRICAL PARTS LOCATION (BASE UNIT) .....</b>	<b>94</b>	42.1. Component View .....	121
<b>31 CABINET AND ELECTRICAL PARTS LOCATION (CORDLESS HANDSET) .....</b>	<b>95</b>	42.2. Flow Solder Side View .....	121

# 1 ABOUT LEAD FREE SOLDER (PbF: Pb free)

## Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder although, with some precautions, standard Pb solder can also be used.

## Caution




- PbF solder has a melting point that is 50°F ~70°F (30°C ~ 40°C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700°F ± 20°F (370°C ± 10°C). In case of using high temperature soldering iron, please be careful not to heat too long.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100°F (600°C).
- If you must use Pb solder on a PCB manufactured using PbF solder, remove as much of the original PbF solder as possible and be sure that any remaining is melted prior to applying the Pb solder.
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

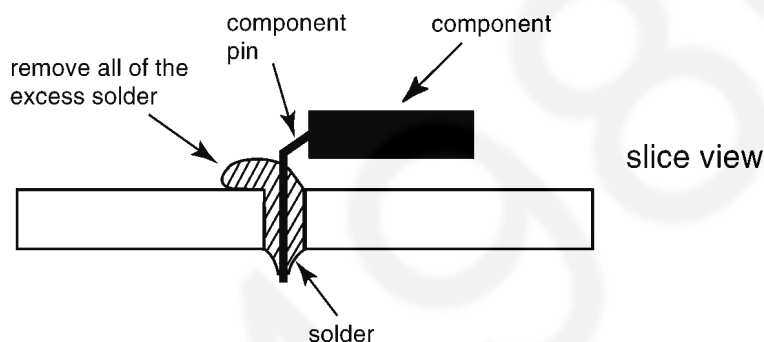

## 1.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu) or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials.


The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3mm, 0.6mm and 1.0mm.

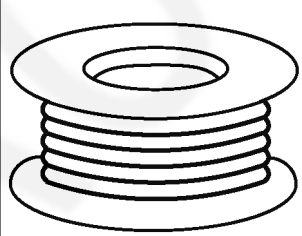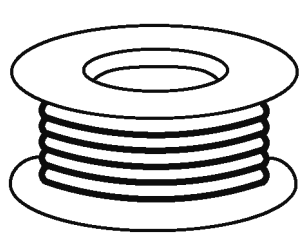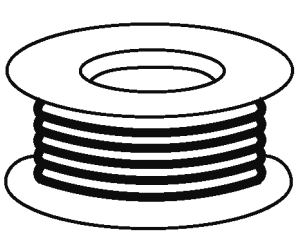0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
		

## 1.2. How to recognize that Pb Free solder is used

### 1.2.1. Base Unit PCB


#### 1.2.1.1. Main

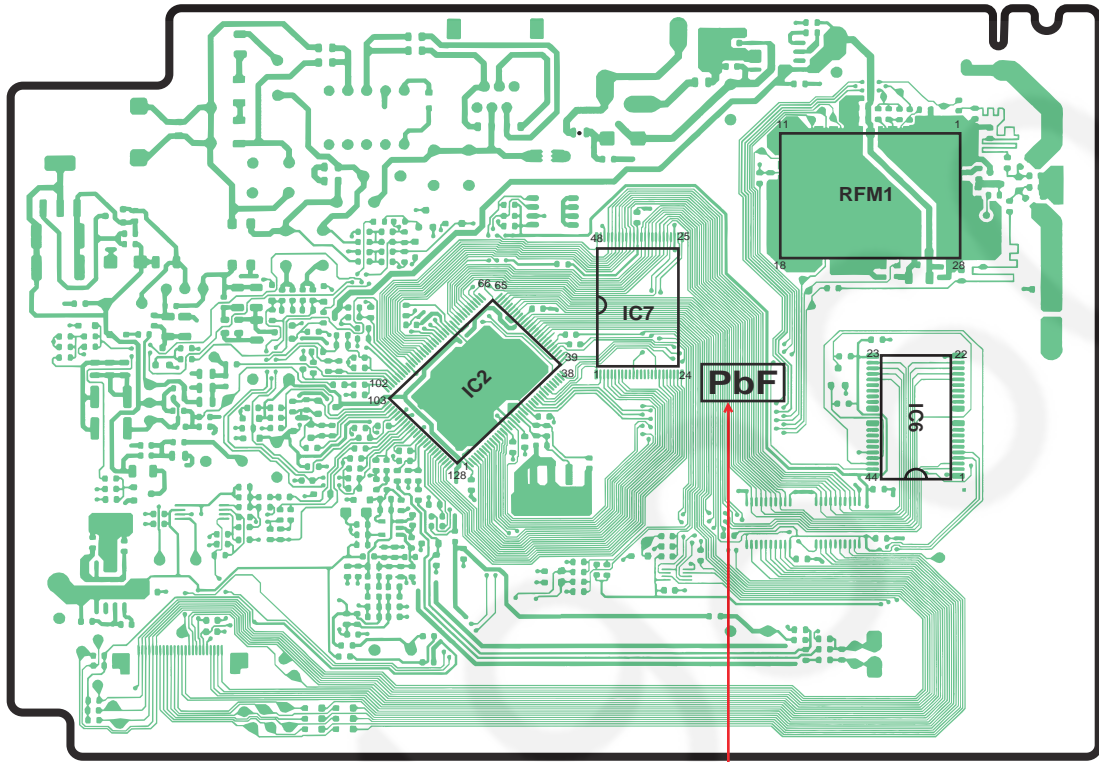

Marked



(Component View)

Marked

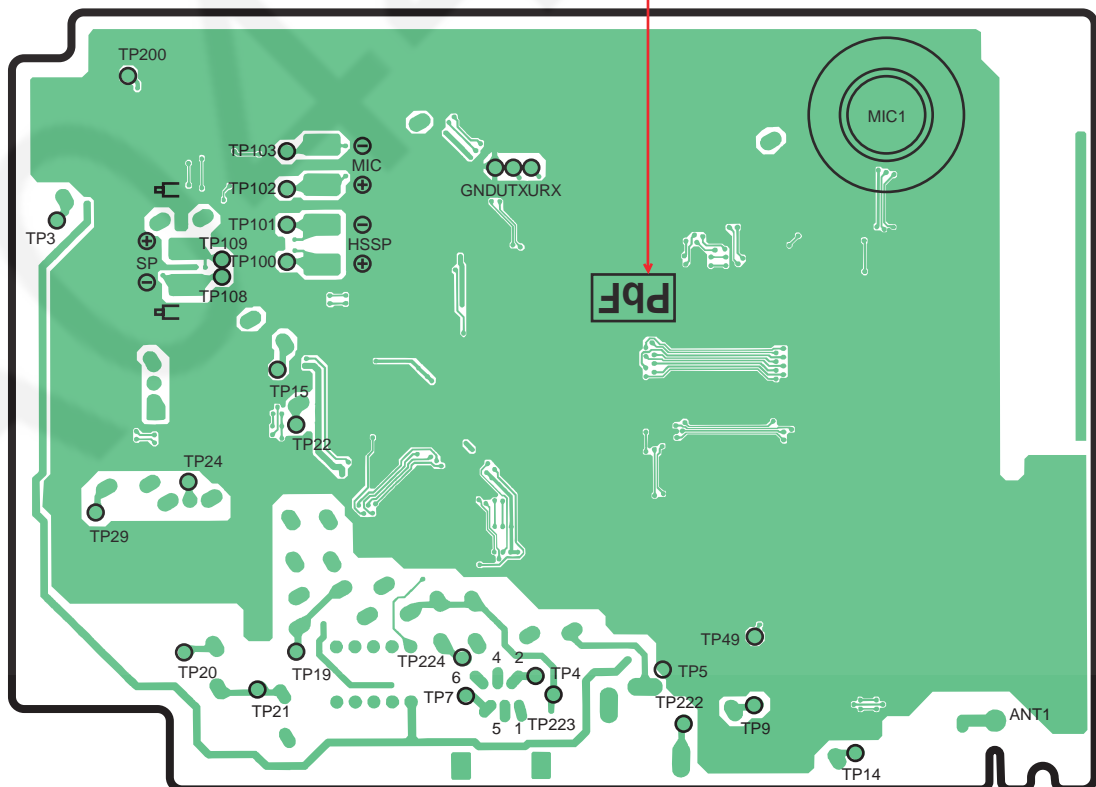

(Flow Solder Side View)


### 1.2.1.2. Operation

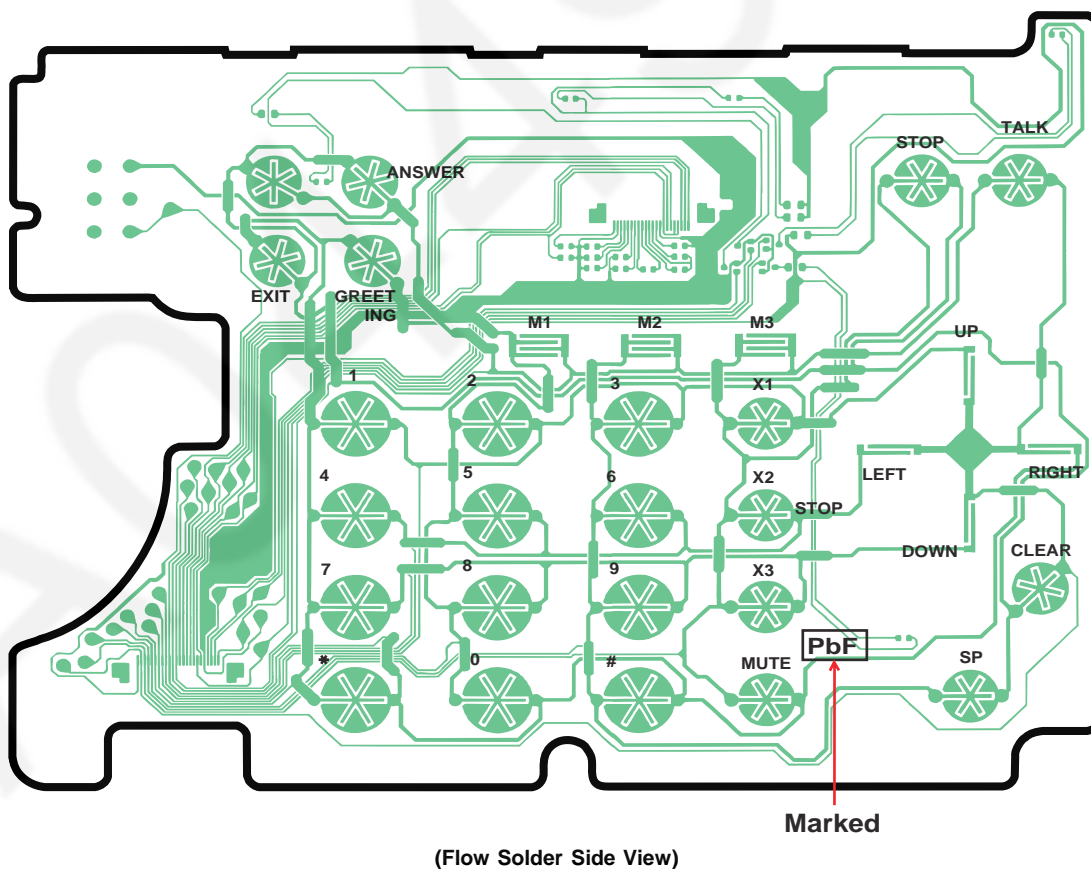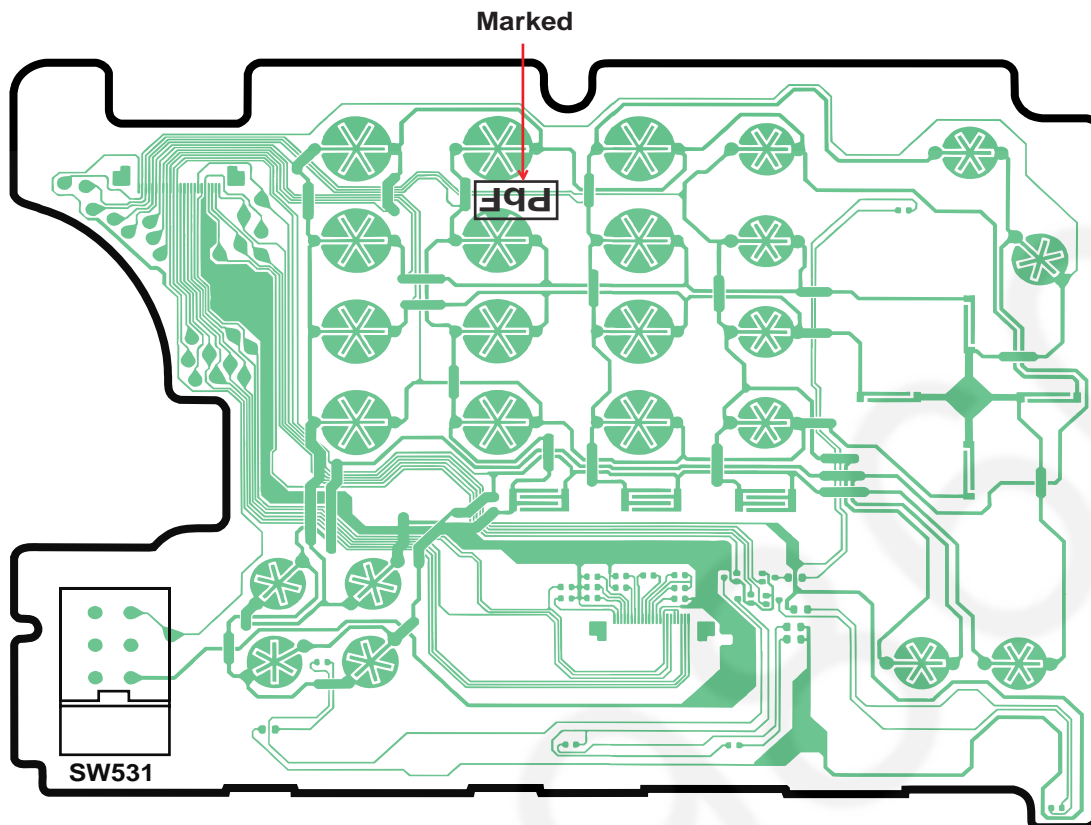

**Note:**

The location of the "PbF" mark is subject to change without notice.


### 1.2.2. Cordless Handset PCB

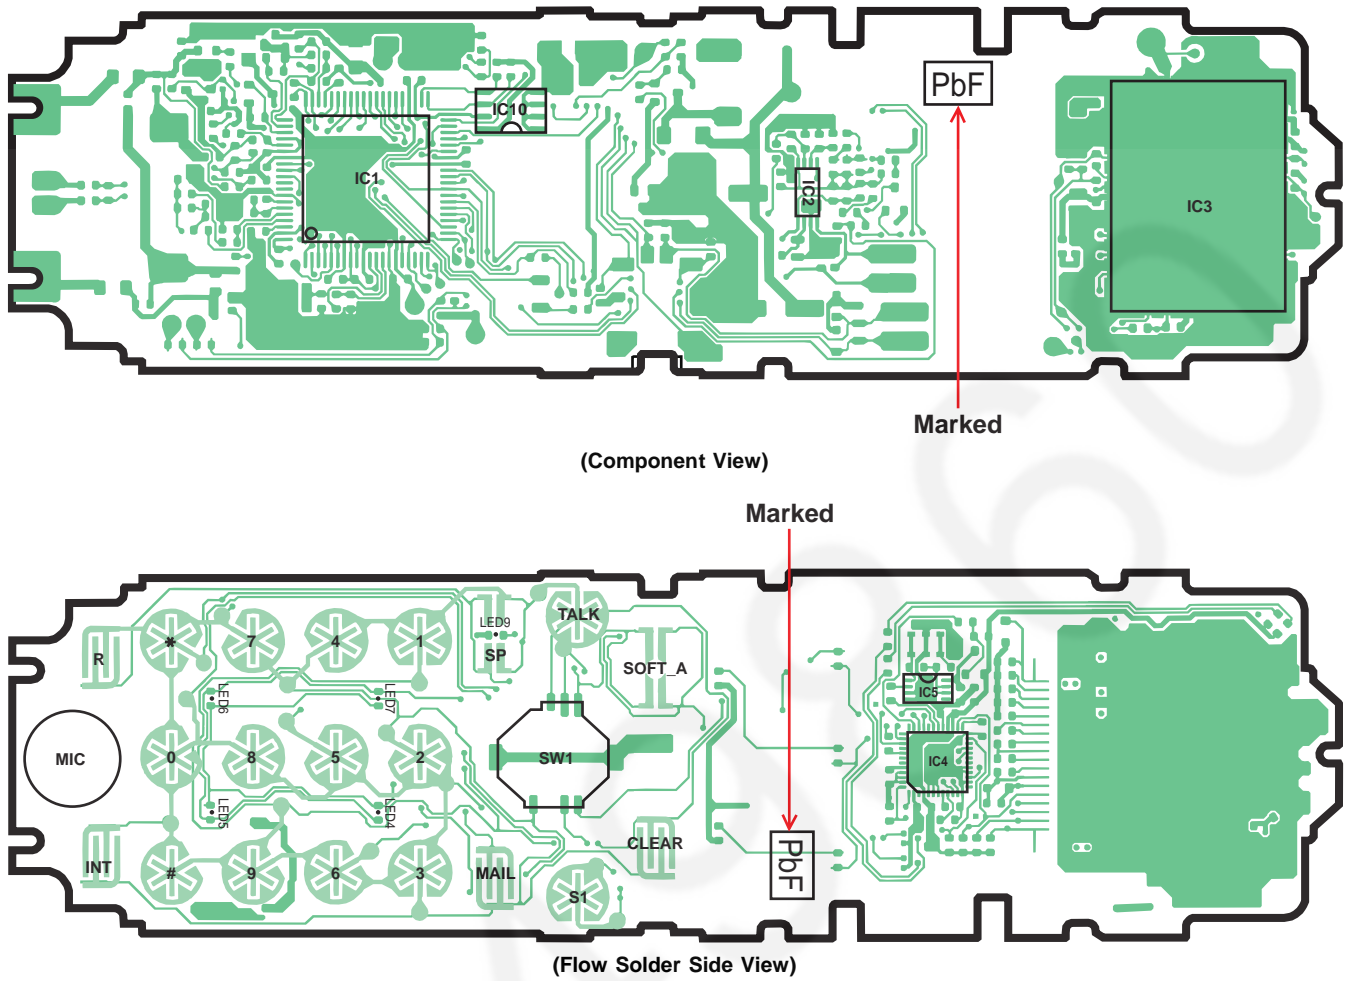

**Note:**

The location of the "PbF" mark is subject to change without notice.

### 1.2.3. Charger Unit PCB

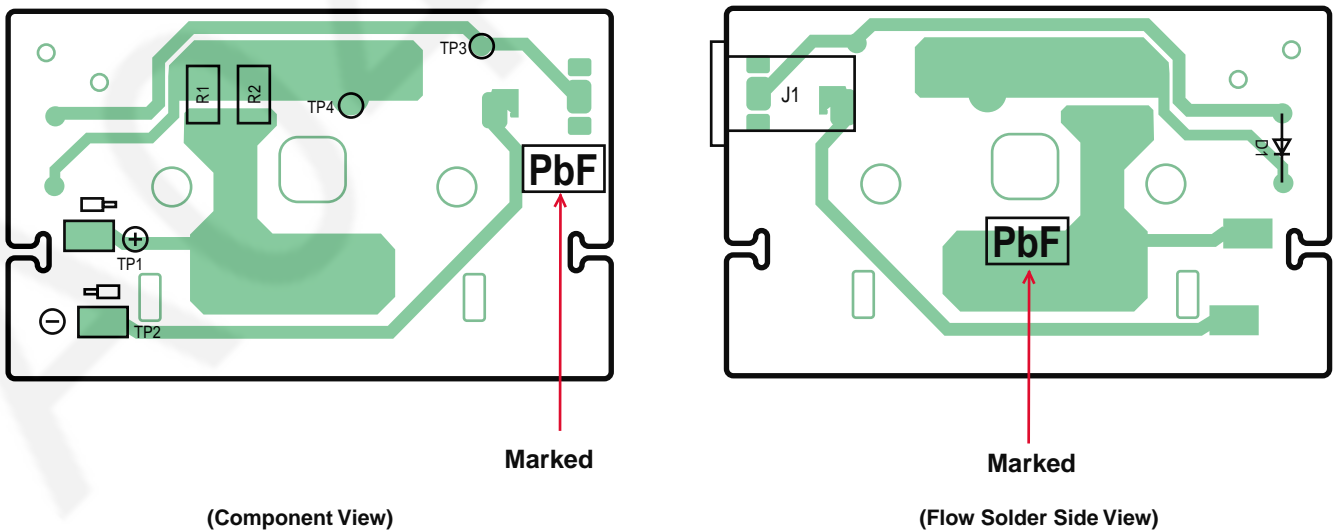

**Note:**

The location of the "PbF" mark is subject to change without notice.

## 2 FOR SERVICE TECHNICIANS

ICs and LSIs are vulnerable to static electricity.

**When repairing, the following precautions will help prevent recurring malfunctions.**

1. Cover the plastic parts boxes with aluminum foil.
2. Ground the soldering irons.
3. Use a conductive mat on the worktable.
4. Do not touch IC or LSI pins with bare fingers.

## 3 CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacture's Instructions.




## 4 BATTERY

### 4.1. Battery Installation

Please ensure the batteries are inserted as shown. ⊖ part should be inserted first.

Close the cover as indicated by the arrow.


- When you replace the batteries, ⊕ part should be removed first.

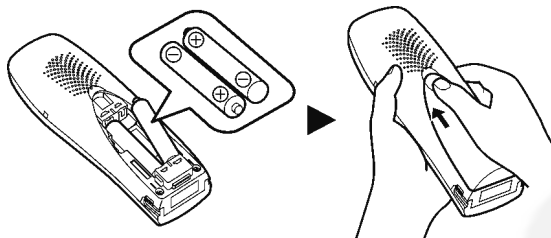

### 4.2. Battery Charge

At the time of shipment, the batteries are not charged. To charge, place the cordless handset on the charger.

**Please charge the batteries for about 7 hours before initial use.** During charging, the charge LED will light as shown below.

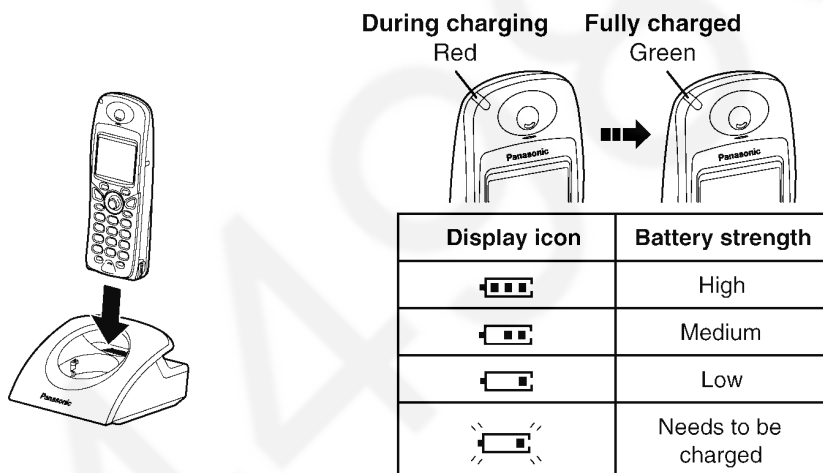

The cordless handset, even when switched off, will be turned on automatically when it is placed on the charger.

**The cordless handset will not operate while it is on the charger.**

If the handset display flashes when the cordless handset is lifted off the charger, please charge the cordless handset batteries at least 15 minutes.

#### Note for Service:

- The battery strength may not be indicated correctly if the battery is disconnected and connected again, even after it is fully charged.

In that case, by recharging the battery as mentioned above, you will get a correct indication of the battery strength.

- Confirmation of Antenna Pict ( ) indication:

If Antenna Pict is indicated, charge time is about 7 hours.

However, if Antenna Pict is flashing, charge time becomes long.

### 4.3. Battery Information


After your Panasonic battery is fully charged:

#### Ni-MH Batteries (typical 700 mAh)


Operation	Operating Time
While in use (TALK)	10 hrs approx.
While not in use (Standby)	120 hrs approx.

#### Ni-Cd Batteries (typical 250 mAh)

Operation	Operating Time
While in use (TALK)	4 hrs approx.
While not in use (Standby)	40 hrs approx.

- Times indicated are for peak performance.
- The battery operating time may be shortened depending on usage conditions and ambient temperature.
- **Clean the charge contacts of the cordless handset and the charger with a soft, dry cloth. Clean if the unit is subject to grease, dust or high humidity.**  
Otherwise the battery may not charge properly.
- The batteries cannot be overcharged unless they are repeatedly removed and replaced.
- For maximum battery life, it is recommended that the cordless handset not be recharged until the battery icon flashes .

### 4.4. Replacing the Batteries

If the  icon flashes after a few telephone calls even when the cordless handset batteries have been fully charged, both batteries must be replaced.

 
- **Charge new batteries for approximately 7 hours before initial use.**
- **When replacing the batteries, be sure to set up the battery type even if you install the same type of batteries to initialise battery remaining memory of your cordless handset.**
- **Do not use non-rechargeable batteries. If non-rechargeable batteries are installed and start charging, battery electrolyte may leak from the unit.**
- Open the battery cover by pressing down firmly on the notch and sliding it as indicated by the arrow below.



Replace both batteries and close the cover. Charge the cordless handset for about 7 hours.


**Please order Panasonic HHR-4EPT (Ni-MH) or P-4NPT (Ni-Cd) batteries.**

#### Note for Service:

- When Ni-Cd batteries are loaded with the "BATTERY TYPE" setting in "Ni-MH",  icon might disappear and stop charging even if the handset is on the cradle for avoiding overcharge.

# 5 LOCATION OF CONTROLS


## 5.1. Base Unit

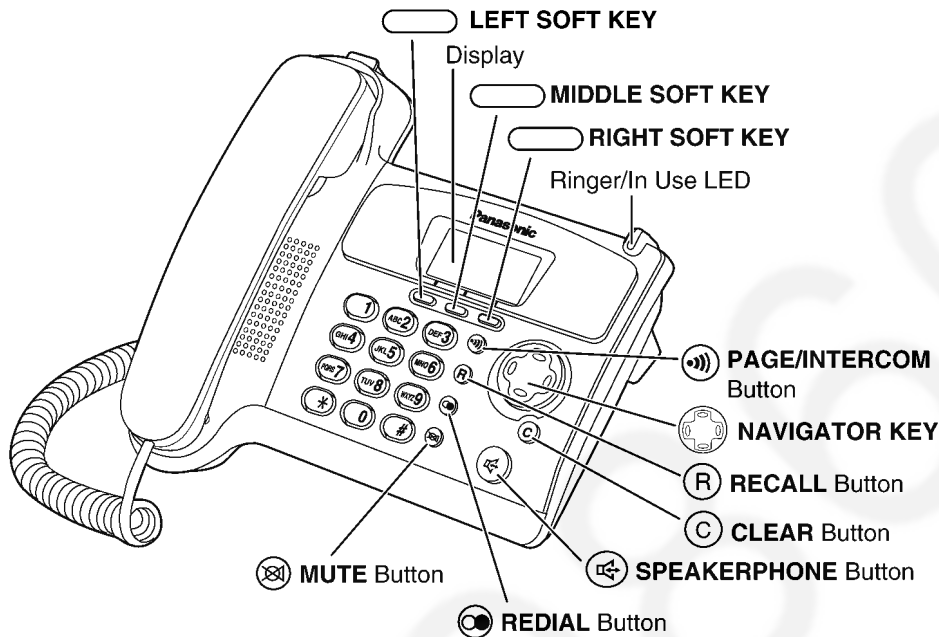

### How to Use the Base Unit Soft Keys

The 3 soft keys are used to select functions displayed directly above the keys. Functions displayed above the keys will change depending on the state of use. For example, on the standby mode display, “”, “” and “” are displayed above the soft keys.

**Example:** Standby Mode Display

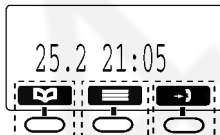

To operate “” (Phonebook), press **LEFT SOFT KEY**.


To operate “” (Menu), press **MIDDLE SOFT KEY**.

To operate “” (Caller ID List), press **RIGHT SOFT KEY**.

When “” is displayed above a soft key, the soft key has no function.



### How to Use the Navigator Key

This key has four active areas.

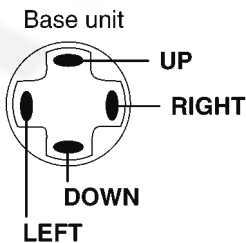

<b>UP</b>	<ul style="list-style-type: none"> <li>• Scrolls up through the function menu, Caller List and the Base Unit Phonebook.</li> <li>• Increases the volume.</li> </ul>
<b>DOWN</b>	<ul style="list-style-type: none"> <li>• Scrolls down through the function menu, Caller List and the Base Unit Phonebook.</li> <li>• Decreases the volume.</li> </ul>
<b>RIGHT</b>	<ul style="list-style-type: none"> <li>• Selects your menu choices.</li> </ul>
<b>LEFT</b>	<ul style="list-style-type: none"> <li>• Returns to the previous display.</li> </ul>


## 5.2. Cordless Handset

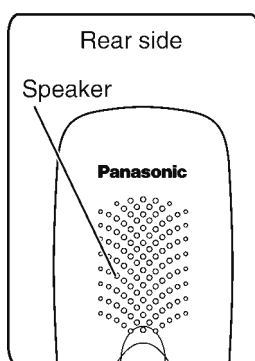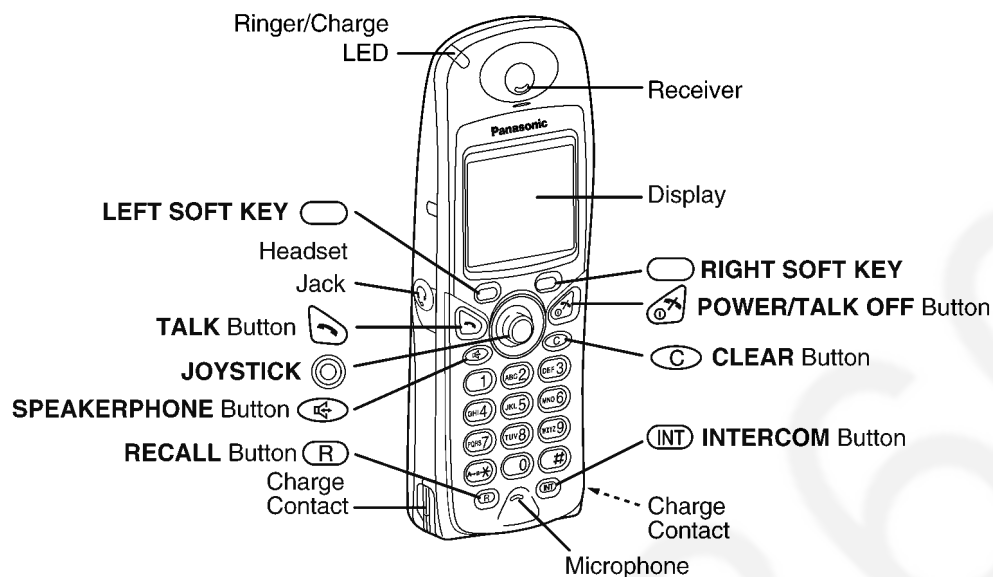

### How to Use the Cordless Handset Soft Keys

The 3 soft keys are used to select functions displayed directly above the keys. Functions displayed above the keys will change depending on the state of use. For example, on the standby mode display, "☰", "☷", "☶" are displayed above the soft keys.

**Example:** Standby Mode Display

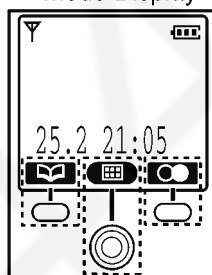

To operate "☰" (Phonebook), press **LEFT SOFT KEY**.


To operate "☷" (Menu), press the centre of the **JOYSTICK**, used as the middle soft key.

To operate "☶" (Redial), press **RIGHT SOFT KEY**.

When "☼" is displayed above a soft key, the soft key has no function.






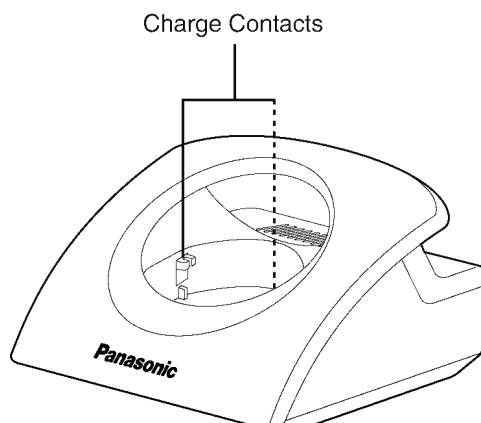


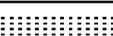
- "☷" (Menu) can be selected when in the standby mode by moving **JOYSTICK** up, down, left or right.

## 5.3. Charger Unit

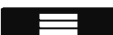

## 5.4. Icons above SOFT KEYS

### 5.4.1. Base Unit

Icons	Functions	Icons	Functions
	Go Back		Delete
	Menu		Pause
	OK		Intercom/Paging
	Phonebook		Caller ID List
	No Function		

### 5.4.2. Cordless Handset

Icons	Functions	Icons	Functions
	Go Back		Alphabet
	Menu		Numeric
	Sub-Menu		Greek
	OK		Extended 1
	Redial		Extended 2
	Phonebook		Russian
	New Phonebook		Select
	Search		Pause
	Key Lock		Mute
	12/24 Hour Clock		Delete
	No Function		

## 6 SETTINGS

### For your Information

Throughout these Service Manuals, Cordless Handset and Base Unit are used to indicate with which unit an operation can be performed.

Cordless Handset: Perform with cordless handset.

Base Unit: Perform with the base unit.

Cordless Handset/Base Unit: perform with the cordless handset or base unit separately.

Cordless Handset and Base Unit: Perform with the cordless handset and base unit together.

### Environment

Do not use this unit near water. This unit should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5°C or greater than 40°C.

The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is located/installed near the unit and is accessible.

### Location

- For maximum distance and noise-free operation, place your base unit:
  - Away from electrical appliances such as TVs, radios, personal computers or other phones.
  - In a convenient, high, and central location.


## 6.1. Connection

The unit will not work during a power failure. We recommend you connect a standard telephone on the same line for power protection.

### 6.1.1. Base Unit

Plug in the AC adaptor and the telephone line cord in order **1, 2, 3, 4**.


The cords can be hidden from view when using the base unit on a desktop by tucking them under the wall mounting adaptor.

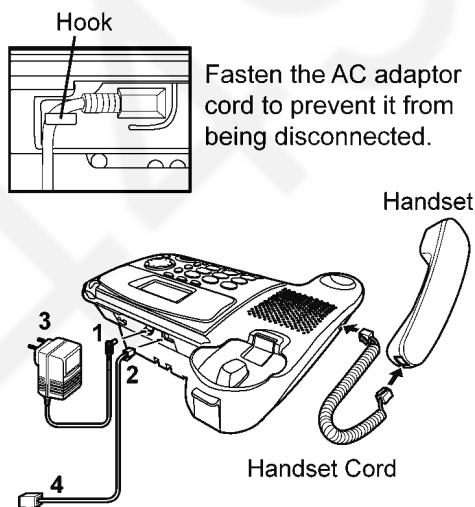


- The AC adaptor must remain connected at all times (It is normal for the adaptor to feel warm during use).
- Never install telephone wiring during a lightning storm.
- USE ONLY WITH Panasonic AC ADAPTOR PQLV19BXZ.

## 6.1.2. Charger Unit

The batteries must be fully charged before initial use of the cordless handset.

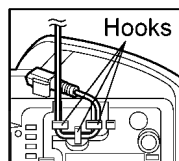

Fasten the AC adaptor cord to prevent it from being disconnected.

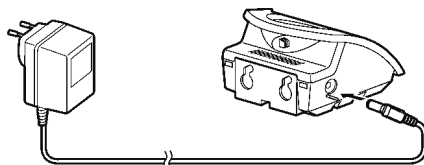


- The AC adaptor must remain connected at all times (It is normal for the adaptor to feel warm during use).
- USE ONLY WITH Panasonic AC ADAPTOR PQLV200BXZ.

## 6.1.3. Optional Headset

Plugging an optional headset into the cordless handset allows hands-free phone conversations. Please use only the Panasonic KX-TCA89BX headset. While using the headset, speakerphone is not available. To switch to speakerphone, disconnect the headset.



### Connecting the Optional Headset to the Cordless Handset

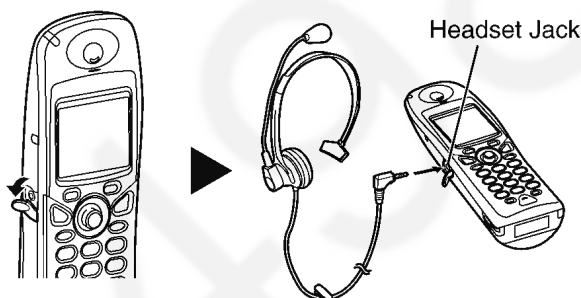Open the headset jack cover, and connect the optional headset to the headset jack as shown.



## 6.2. Symbols Used for Operations

### 6.2.1. Base Unit/Cordless Handset

Symbol	Meaning
➡	Go to the next step.
“ ”	The words in “ ” indicate the text shown on the display.
 	The phone is ringing.

## 6.2.2. Base Unit

Symbol	Meaning	
	Press <b>NAVIGATOR KEY</b> up or down. e.g., Search for the desired item.	
e.g., OK 	e.g., Display of menu items 	Press <b>MIDDLE SOFT KEY</b> .  In this example, the desired item is selected.
e.g., Caller ID List 	e.g., Standby Mode Display 	Press <b>RIGHT SOFT KEY</b> .  In this example, the newest caller information is displayed.
e.g., Go Back 	e.g., Display of menu items 	Press <b>LEFT SOFT KEY</b> .  In this example, the display returns to the previous menu.

## 6.2.3. Cordless Handset


Symbol	Meaning	
	Move the <b>JOYSTICK</b> up, down, left or right. e.g., Search for the main menu.	
e.g., OK 	e.g., Display of menu items 	Press <b>JOYSTICK</b> directly in the centre.  In this example, the desired item is selected.
e.g., Redial 	e.g., Standby Mode Display 	Press <b>RIGHT SOFT KEY</b> .  In this example, the telephone number last dialled is displayed.
e.g., Go Back 	e.g., Display of menu items 	Press <b>LEFT SOFT KEY</b> .  In this example, the display returns to the previous menu.  has the same function as Go Back.
	Press <b>POWER/TALK OFF</b> Button. <b><u>Press this button at any time to return the display to the standby display mode.</u></b>	




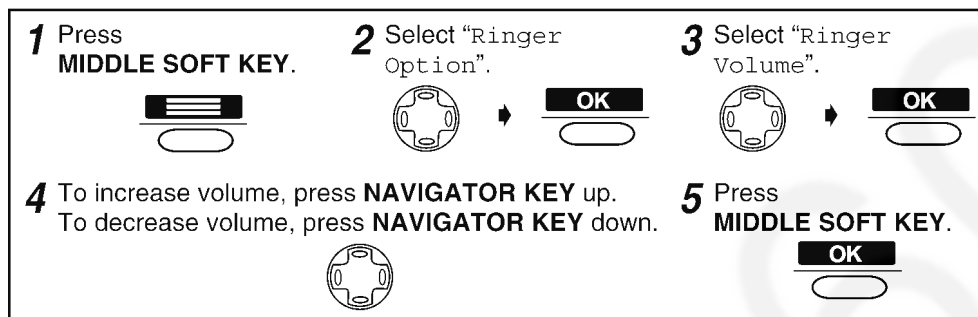
## 6.3. Setting the Ringer Volume

### 6.3.1. Base Unit

The choices for the base unit ringer volume are 3 levels and off.


If you set the volume to OFF, “” is displayed.


To exit the operation, press  at any time.



- The factory preset is medium.

### 6.3.2. Cordless Handset

The choices are 6 levels and off. If you set the volume to OFF, “” is displayed, however, the volume of a paging and intercom call is still at level 1.

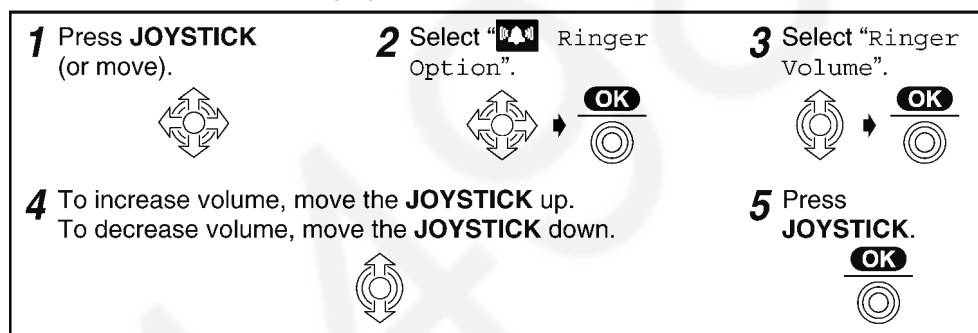

- The factory preset is 6.

## 6.4. Settings Menu Chart

### 6.4.1. Base Unit


1st Menu	2nd Menu	3rd Menu
Setting Base	Call Option	Dial Mode
		Recall
		Pause Time
		Emergency Call
		Set ARS
		Call Restricted
	Cancel Handset	
	Other Option	Change Base PIN
		Reset Base


### 6.4.2. Cordless Handset

1st Menu	2nd Menu	3rd Menu
Setting Handset	Set Date/Time	
	Memo Alarm	
	Ringer Option	Ringer Volume
		EXT Ringer Type
		INT Ringer Type
		Paging Tone
		Private Ring
	Tone Option	Key Tone
	Display Option	Standby Display
		Talk Display
		Select Language
		Private Colour
		Category Name
	Call Option	Call Bar
		Direct Call No.
		Direct On/Off
	Registration	Register H/set
		Cancel Base
	Select Base	Auto
		Base 1
		⋮
		Base 4
	Other Option	Change H/S PIN
		Change H/S Name
		Auto Talk
		Battery Type
		Reset Handset

## 6.5. PIN Code


### 6.5.1. Base Unit

To exit the operation, press  at any time.

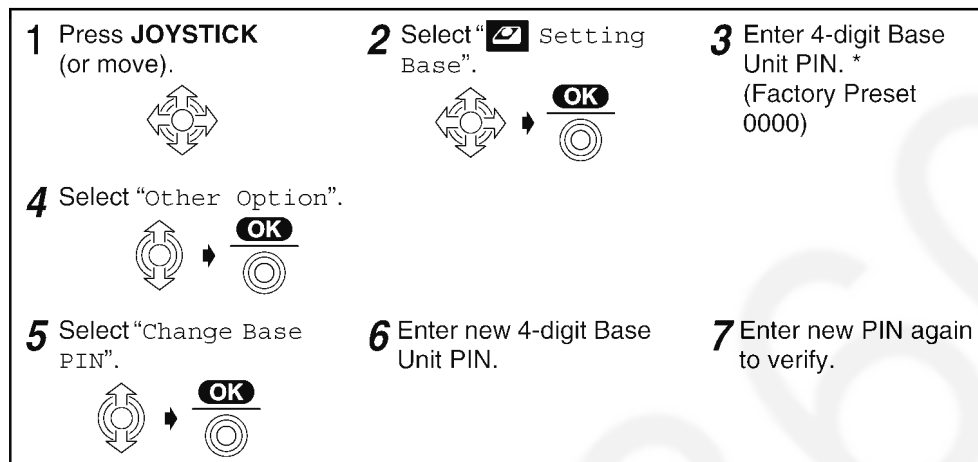


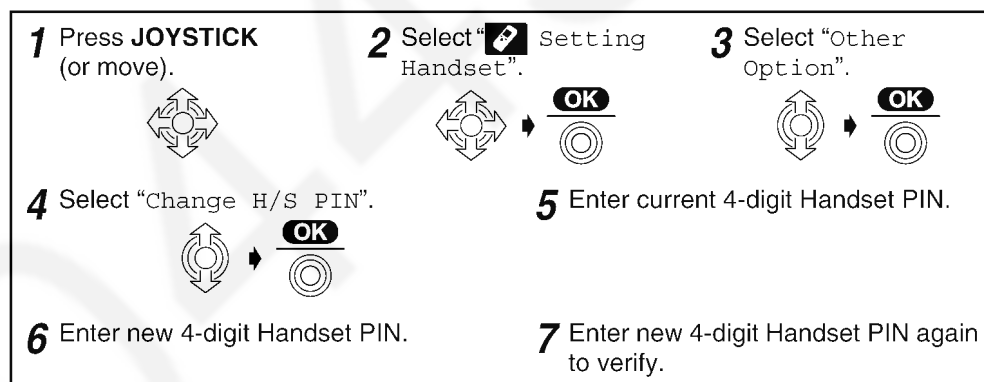
#### For Service Hint:

\* : If the current 4-digit Base Unit PIN is forgotten, follow the procedures below.


1. If Base Unit and Handset are not linked with, first, follow the steps in **Handset Registration to a Base Unit** (P.42).
2. Follow the steps above in **Base Unit** (P.19) of PIN Code. At step 3, enter  7 0 0 0 , and you will able to enter new Base Unit PIN.

### 6.5.2. Handset

To exit the operation, press  at any time.




#### For Service Hint:











\* : If the current 4-digit PIN is forgotten, press  7 0 0 0 and you will be able to enter new Handset PIN. This password is useful whether Base Unit and Handset are linked with or not.

## 6.6. Reset the Settings

### 6.6.1. Base Unit

You can reset all of the base unit settings to their initial settings.

To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "  Setting Base".  → 	<b>3</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)
<b>4</b> Select "Other Option".  → 	<b>5</b> Select "Reset Base".  → 	<b>6</b> Select "Yes", then "Deleted" is displayed.  → 


#### Initial Settings for Base Unit









 

Function	Initial Setting	Remarks (selectable options)
4-Digit Base Unit PIN	0000	-
Base Unit External Ringer Pattern	1	1 to 6
Base Unit Receiver Volume	Medium	High / Low / Medium / OFF
Call Bar Mode	OFF	ON / OFF
Display Language	English	-
Redial Memory	Delete All	-
Phonebook List	Remain	-
Caller ID List	Delete All	-
Area Code	Delete All	-
Date/Time	31-12-03/00:00	-

- All of the other base unit settings are cleared or turned to their factory preset when you reset the base unit settings.

### 6.6.2. Cordless Handset

You can reset all of the handset settings to their initial settings.

To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "  Setting Handset".  → 	<b>3</b> Select "Other Option".  → 
<b>4</b> Select "Reset Handset".  → 	<b>5</b> Enter 4-digit Handset PIN. (Factory Preset 0000)	<b>6</b> Select "Yes", then "Deleted" is displayed.  → 



### Initial Settings for Cordless Handset

Functions	Initial Settings	Remarks (selectable options)
Display Language	English	-
4-Digit Handset PIN	0000	-
Phonebook List	Remain	-
Select Base	Automatic Base Unit Selection	-
Redial Memory	Delete All	-
Walkie-Talkie Setting	Group	-
Private Colour	Green	Green / Red / Orange
Category Name	Remain	-
Handset Name	Remain	-
Date/Time	Remain	-

- All of the other handset settings are cleared or turned to their factory preset when you reset the handset settings.


## 6.7. Key Lock

You lock the cordless handset dialling buttons. While locked, the buttons cannot be used and therefore calls cannot be made. Incoming calls can be answered while the key lock is ON.

When the key lock is ON, the menu icon  changes to .

**When the key lock is ON, emergency calls cannot be made until key lock is cancelled.**

<Key Lock ON>

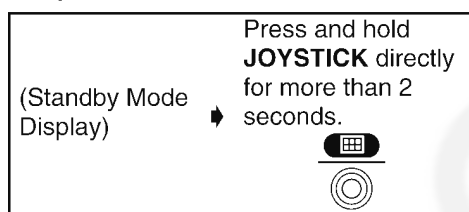





<Key Lock OFF>



#### Note for Service:

 The key lock is cancelled if the handset is turned off.

## 6.8. Recall Feature

 **RECALL**  (on the cordless handset) or  (on the base unit) is used to access special telephone services. Contact your telephone company for details. If your unit is connected to a PBX, pressing  (on the cordless handset) or  (on the base unit) allows you to access certain features of your host PBX, such as transferring an extension call.

#### Cross Reference:


Selecting the Flash/Earth Mode (P.25)

## 6.9. Dialling Pause for PBX line/long distance service users


A dialling pause can be entered when a pause in the dialling of a phone number is necessary when using a PBX or accessing a long distance service.



For example, if using the unit with a PBX, a line access number (0 , in this example) must be dialled before the telephone number:
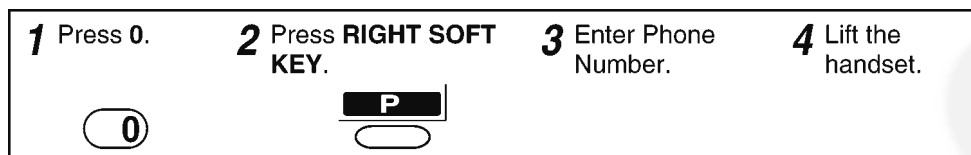
### 6.9.1. Base Unit

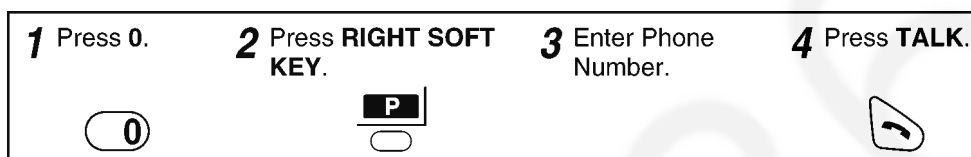


### 6.9.2. Cordless Handset




- You can also press  (for cordless handset) or  (for base unit) to make a call.
- Entering a pause can prevent misdialling when you redial or dial a stored number.
- Pressing **RIGHT SOFT KEY** more than once increases the length of the pause between numbers.

## 6.10. Call Restriction

You can restrict selected cordless handset(s) or the base unit from dialling selected phone numbers. You can assign up to 6 call restriction numbers (up to 8 digits). If you dial a restricted number, the call does not connect and the restricted number flashes.

To exit the operation, press  at any time.

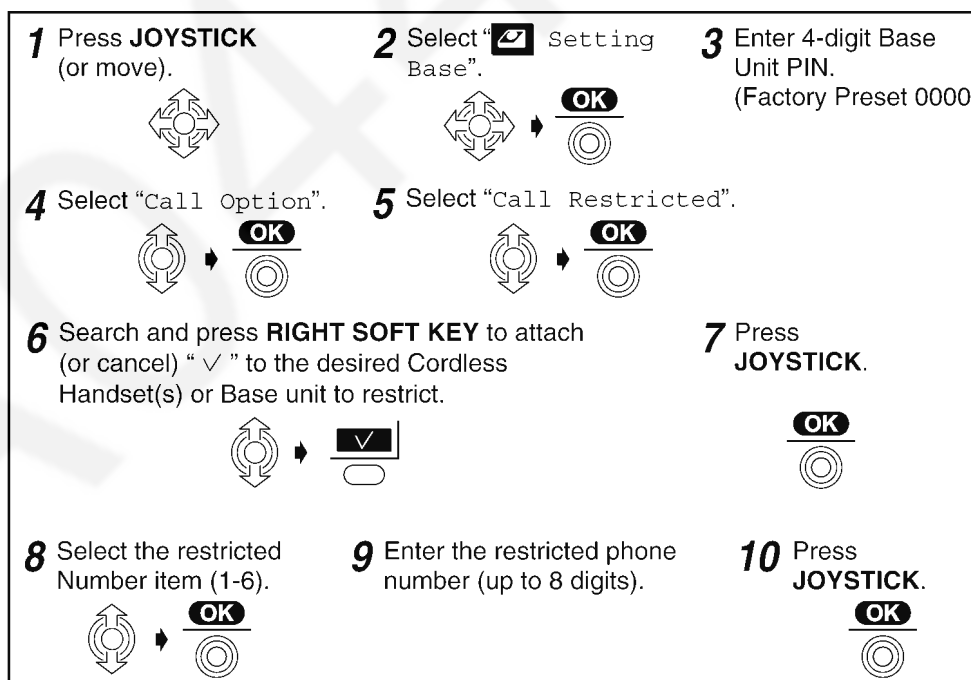


#### NOTE:


When you put a first digit on step 9, it must overwrite the current displayed numbers. We recommend you to write down the restricted phone number you entered.


## 6.11. Call Bar On/Off (Call Prohibition On/Off)

When this feature is set to ON, outgoing calls cannot be made. Intercom calls and calls to numbers assigned as emergency numbers can be made.


### 6.11.1. Base Unit

To exit the operation, press  at any time.

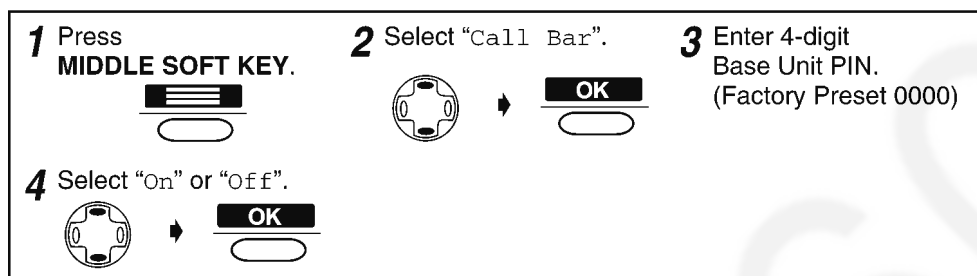


- The factory preset is "Off".
- While the Call Bar mode is turned on, "" is displayed.

### 6.11.2. Cordless Handset

To exit the operation, press  at any time.









- The factory preset is "Off".
- While the Call Bar mode is turned on, "" is displayed.

## 6.12. Selecting the Display Language





You can select one of 19 languages on the cordless handset and the base unit separately. The factory preset is English.

### 6.12.1. Base Unit


To exit the operation, press  at any time.









<b>1</b> Press <b>MIDDLE SOFT KEY.</b> 	<b>2</b> Select "Select Language".  → 	<b>3</b> Select the desired language.  → 
--	---	---

- If you set a language you cannot read, reset the display language to your desired language.

 








Press  → Press  (DOWN) twice → Press  → Select desired language  
→ Press .

### 6.12.2. Cordless Handset

To exit the operation, press  at any time.











<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "  Display Option".  → 	<b>3</b> Select "Select Language".  → 
<b>4</b> Select the desired language.  → 		

 - If you set a language you cannot read, reset the display language to your desired language.

Press  → Press  → Move  → Press  → Move  four times → Press  →  
Move  twice → Press  → Select the desired language → Press .

#### Note for Service:










(for optional handset)

- Press  → Press  → Move  → Press  → Move  four times → Press  → Move  twice → Press  →  
Select the desired language by moving  → Press .



## 6.13. Selecting the Dialling Mode (Tone/Pulse)












You can change the dialling mode to tone or pulse depending upon your telephone company. If you have a touch tone service, select "Tone". If you have rotary or pulse service, select "Pulse".

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "Setting Base".  → 	<b>3</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)
<b>4</b> Select "Call Option".  → 	<b>5</b> Select "Dial Mode".  → 	<b>6</b> Select "Tone" or "Pulse".  → 

- The factory preset is "Tone".

## 6.14. Selecting the Flash/Earth Mode












An earth relay can be installed as an option depending on your PBX requirements. On installation, you can select the flash or earth mode to suit your PBX or telephone company.



<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "Setting Base".  → 	<b>3</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)
<b>4</b> Select "Call Option".  → 	<b>5</b> Select "Recall".  → 	<b>6</b> Select "Flash" or "Earth".  → 
When "Flash" was selected; <b>7</b> Select the desired flash type. (see below)  → 		

- The factory preset is "Flash".
- "Type 1" : 100 ms, "Type 2" : 600 ms, "Type 3" : 300 ms. The factory preset is "Type2".

## 6.15. Storing Your Area Code

If you store your area code, phone numbers from the same area will be dialed without the area code. When you call back from the Caller ID List, you do not need to edit numbers.

 
<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "Setting Base".  → 	<b>3</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)
<b>4</b> Select "Call Option".  → 		
<b>5</b> Select "Set ARS".  → 	<b>6</b> Select "Set Area Code". 	<b>7</b> Select the desired number (1-25).  → 
<b>8</b> Enter Area Code. (max. 5 digits)	<b>9</b> Press <b>JOYSTICK</b> . 	

- To erase the area code, press  in step 8, then press .

## 7 DISPLAY

### 7.1. Display Icons

#### 7.1.1. Base Unit

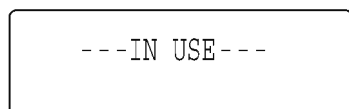

Intercom/Paging



Making or Answering calls



Call Bar ON



Phonebook Mode



Ringer Volume OFF



New call (Caller ID only)

---IN USE---

The line is being used by another unit.




H/set 1

Intercom Mode

Cordless Handset Name (e.g.,  
Cordless Handset 1)

#### 7.1.2. Cordless Handset

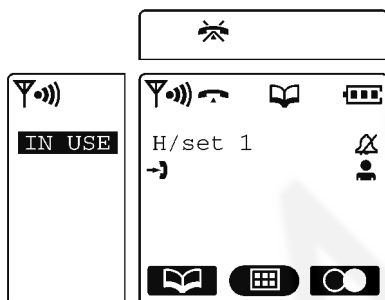

Phonebook Mode



Battery strength



Direct Call ON



Ringer Volume OFF



Within range of a base unit

Out of range/No registration/  
No power on base unitIntercom/Paging/  
While connecting with base unit

Making or answering calls



Call Bar ON



New call (Caller ID only)



H/set 1

Cordless Handset Name (e.g., Cordless  
Handset 1)

IN USE

The line is being used by another unit.

#### Main Menu Display

To go to the **Main Menu**, press **JOYSTICK**  directly in the centre (or move ) while in the standby mode display. The selected menu icon is turned over, and its title is displayed.

**Example:** "Caller ID" is selected.



"Caller ID"



"Ringer Option"



"Display Option"



"Setting Handset"



"Setting Base"



"Walkie-Talkie"

#### For Service Hint:



icon will be displayed if the unit took a signal from Telephone Company as a Voice Message signal.

In that case, press the left button of the Navigator key for a few seconds.

## 7.2. Caller ID Service

Caller ID is a service of your telephone company and will operate only if you have subscribed to this service.

After subscribing to Caller ID, this phone can display the phone number of the caller when you receive a call. If the telephone number received by Caller ID is stored in the unit's phonebook along with a name, the caller's name will be displayed.

The last 50 callers' phone numbers are stored in the order the calls were received. When the 51st call is received, the oldest caller information is cleared. If the caller's name has been stored with the number in the phonebook (see **Storing Caller Information in the Phonebook** (P.35)), the caller's name will also be displayed.


If your unit is connected to a PBX or a telephone line that does not support this service, you will not be able to use it.

When new calls have been received, the display shows the number of calls.


In the example below, 10 new calls have been received.

### Standby Mode Display

#### Base Unit

 10 Calls  
17.8 14:59






#### Cordless Handset

H/set 1  
 10 Calls  
17.8 14:59

### 7.3. Before Requesting Help (Troubleshooting)

If you experience any problems with the normal use of your apparatus, you should unplug it from the telephone outlet and connect a known working telephone in its place. If the known working telephone still has problems, then please contact the customer service department of your telephone company. If it operates correctly, then the problem is likely to be a fault in your apparatus. In this case, contact your supplier for advice. Your telephone company may charge you if they attend a service call that is not due to an apparatus supplied by them.

**Turn the power OFF then ON (Cordless Handset)/Disconnect then connect the AC adaptor (Base Unit).**

Problem	Possible cause	Solution
The unit does not work.	<ul style="list-style-type: none"> <li>Batteries not installed properly.</li> <li>AC adaptor of base unit not connected properly.</li> </ul>	<ul style="list-style-type: none"> <li>Re-install batteries properly.</li> <li>Disconnect and then connect AC adaptor.</li> </ul>
Display is blank.	<ul style="list-style-type: none"> <li>Cordless handset not turned on.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on power. (Refer to <b>Power ON/OFF</b>.)</li> </ul>
Cordless handset will not turn on.	<ul style="list-style-type: none"> <li>Batteries not inserted.</li> <li>Batteries not charged.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the 2 rechargeable batteries supplied.</li> <li>Place cordless handset on charger and connect AC adaptor to charger and AC outlet (full charge period 7 hrs).</li> </ul>
Battery charge icon not counting up.	<ul style="list-style-type: none"> <li>Dirty charge contacts.</li> <li>Charger not powered up.</li> </ul>	<ul style="list-style-type: none"> <li>Clean charge/battery contacts and retry charge.</li> <li>Connect AC adaptor to charger and AC outlet.</li> </ul>
 icon flashes.	<ul style="list-style-type: none"> <li>Cordless handset not registered to base unit.</li> <li>Cordless handset out of range of base unit.</li> <li>No power into base unit.</li> </ul>	<ul style="list-style-type: none"> <li>Register cordless handset to base unit.*1</li> <li>Move cordless handset closer to base unit.</li> <li>Connect AC adaptor to base unit and AC outlet.</li> </ul>
Cordless handset busy tone heard when  is pressed.	<ul style="list-style-type: none"> <li>Cordless handset out of range of base unit.</li> <li>Another unit in use.</li> </ul>	<ul style="list-style-type: none"> <li>Move cordless handset closer to base.</li> <li>Wait for the other user to complete call.</li> </ul>
No dial tone.	<ul style="list-style-type: none"> <li>Telephone line not connected.</li> </ul>	<ul style="list-style-type: none"> <li>Insert telephone line cord to network.</li> <li>Turn power OFF then ON. (Refer to <b>Power ON/OFF</b>.)</li> </ul>
Cannot dial out.	<ul style="list-style-type: none"> <li>Dialling mode setting may be incorrect.</li> <li>Call Bar mode set.</li> <li>Particular dialled number is restricted.</li> <li>Key lock mode ON.</li> </ul>	<ul style="list-style-type: none"> <li>Check whether the dialling mode setting is correct.</li> <li>Turn feature off. (Refer to <b>Call BAR ON/OFF</b>.)</li> <li>Remove number from call restricted list. (Refer to <b>Call Restriction</b>.)</li> <li>Turn key lock OFF. (Refer to <b>Key Lock</b>.)</li> </ul>
Cordless handset will not ring.	<ul style="list-style-type: none"> <li>Ringer switched off.</li> </ul>	<ul style="list-style-type: none"> <li>Set ringer to one of 6 volume levels.</li> </ul>
Last number redial does not work.	<ul style="list-style-type: none"> <li>Number exceeded 24 digits.</li> </ul>	<ul style="list-style-type: none"> <li>Redial manually.</li> </ul>
No Caller ID number displayed.	<ul style="list-style-type: none"> <li>Service not supplied.</li> <li>Caller has withheld info.</li> </ul>	<ul style="list-style-type: none"> <li>Caller ID service must be arranged with telephone company.</li> </ul>
 icon flashes.	<ul style="list-style-type: none"> <li>Battery low.</li> </ul>	<ul style="list-style-type: none"> <li>Recharge batteries.</li> </ul>
Cannot register cordless handset to base unit.	<ul style="list-style-type: none"> <li>Max. number of base units already registered to cordless handset.</li> <li>Max. number of cordless handsets already registered to base unit.</li> <li>Wrong PIN number entered (Default 0000).</li> <li>Electrical noise in local area.</li> </ul>	<ul style="list-style-type: none"> <li>Delete unused base unit registrations from cordless handset.</li> <li>Delete unused cordless handset registrations from base unit.</li> <li>If PIN number is lost, refer to <b>PIN Code</b>.</li> <li>Move base/cordless handset away from sources of electrical noise (e.g., TVs, radios, etc.).</li> </ul>
The display is blank even if the unit is charged.	<ul style="list-style-type: none"> <li>Battery low.</li> </ul>	<ul style="list-style-type: none"> <li>Recharge batteries more than about 15 minutes.</li> </ul>
Date and time disappeared.	<ul style="list-style-type: none"> <li>Power failure on base unit.</li> </ul>	<ul style="list-style-type: none"> <li>Set the date and time.</li> </ul>
A beep sounds when  or  on the base unit is pressed.	<ul style="list-style-type: none"> <li>Another unit in use.</li> </ul>	<ul style="list-style-type: none"> <li>Wait for the other user to complete the operation.</li> </ul>
A beep sounds when entering caller list or base unit phonebook with cordless handset.	<ul style="list-style-type: none"> <li>Another unit in use.</li> </ul>	<ul style="list-style-type: none"> <li>Wait for the other user to complete the operation.</li> </ul>

**Cross Reference:****Power ON/OFF** (P.32)**Call Bar On/Off (Call Prohibition On/Off)** (P.23)**Call Restriction** (P.22)**Key Lock** (P.21)**PIN Code** (P.19)**Note:**


\*1: It will take time for both Base Unit and Handset to be linked with.

## 8 OPERATIONS

### 8.1. Power ON/OFF

#### Power ON


Press and hold **POWER**.



When **POWER** is released, the display changes to the standby mode.


#### Power OFF


Press and hold **POWER**.







 




The display goes blank.

 

 
 
 

 

 



### 8.2. Setting the Date and Time

After a mains power failure, the clock needs to be set. Ensure that the  icon is not flashing. After the date and time are set, the base unit display also shows the date and time. This feature can be operated with the cordless handset only.

To exit the operation, press  at any time.


<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "  Setting Handset".  → 	<b>3</b> Select "Set Date/Time".  → 
<b>4</b> Enter the date (see below). 	<b>5</b> Enter the time (see below). 	<b>6</b> Press <b>JOYSTICK</b> . 

**Example:** To set 16 February, 2003, 7:15 pm.


Date			Time		
Day	Month	Year	Hour	Minute	12/24 hour clock
 	→  	→  	→  	→  	→  

#### To select 12/24 Hour Clock

Press **RIGHT SOFT KEY** repeatedly.



24 hour clock → 12 hour clock (AM) → 12 hour clock (PM)

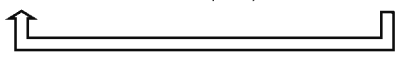







## 8.3. Redialling

The last 10 numbers dialled on the cordless handset and the base unit are automatically stored in the redial list.




### 8.3.1. Dialling with the Redial List


 
#### 8.3.1.1. Base Unit

<b>1</b> Press <b>REDIAL</b> . 	<b>2</b> Search for the desired dialled item. 	<b>3</b> Lift the handset.
---	--	----------------------------

- If there are no items stored in the redial list when  is pressed, the base unit display shows "Memory Empty".
- If you scroll to the end of the list when searching for an item, an end tone will sound.
- You can also press  to make a call.

#### 8.3.1.2. Cordless Handset

<b>1</b> Press <b>RIGHT SOFT KEY</b> . 	<b>2</b> Search for the desired dialled item. 	<b>3</b> Press <b>TALK</b> . 
---	--	---





- If there are no items stored in the redial list when  is pressed, the handset display shows "Memory Empty".
- If you scroll to the end of the list when searching for an item, an end tone will sound.
- You can also press  to make a call.

### 8.3.2. Dialling the Last Number Dialed

#### 8.3.2.1. Base Unit

<b>1</b> Lift the handset.	<b>2</b> Press <b>REDIAL</b> . 
----------------------------	---





##### Auto Redial

If you press  then  to redial a number and the number is engaged, the unit will automatically redial the number every 40 seconds, up to 12 times. When using Auto Redial, press  after pressing  if the muting has not been cancelled.

#### 8.3.2.2. Cordless Handset

<b>1</b> Press <b>TALK</b> . 	<b>2</b> Press <b>RIGHT SOFT KEY</b> . 
---	---

##### Auto Redial

If you press  then  to redial a number and the dialled number is engaged, the unit will automatically redial the number every 40 seconds, up to 12 times. When using Auto Redial, press  after pressing  if the muting has not been cancelled.

## 8.4. Phonebook

You can store up to 200 caller information in the handset phonebook and up to 20 caller information in the base unit phonebook. If you subscribed to Caller ID and you received a call from the same phone number you stored with name in each phonebook, the display will show the caller's name.

When same phone number has been registered to the handset and the base unit phonebook with different names, each display will show the each registered caller's name.

### Private Category Feature

You can categorise caller information in the handset phonebook. There are 9 categories available. For example, category 1 can be used to save all friends' numbers. For each category, you can rewrite the category names (max. 10 characters), you can select one of 3 Ringer LED colours and one of 15 ringer types. **This feature is available only after subscription to Caller ID Service.** Please contact your telephone company for further information.


#### Example

Private Category No.	Ringer LED Colour*			Private Ringer Type	Category Name
	Green	Orange	Red		
1		✓		3	Friends
3			✓	2	Customers


\* The factory preset LED colour is green.


- The unit will indicate an incoming call using the factory preset LED colour (green) and the ringer pattern assigned to external calls momentarily until Caller ID information is received from the telephone company.


### Setting the Private Colour

To exit the operation, press  at any time.


**1** Press **JOYSTICK** (or move).




**2** Select " Display Option".

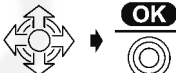


**3** Select "Private Colour".



**4** Select the desired category.




**5** Select Private Colour "Green", "Red" or "Orange" for each category.









- The factory preset is "Green".
- When you select the private colour on step 5, the Ringer LED will flash at the selected colour.

## 8.4.1. Storing Caller Information in the Phonebook


### 8.4.1.1. Base Unit Phonebook






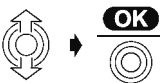

This feature can be operated with the cordless handset only.  
To exit the operation, press  at any time.

<b>1</b> Press <b>LEFT SOFT KEY</b> . 	<b>2</b> Press <b>JOYSTICK</b> . 	<b>3</b> Select "Base Phonebook". 
<b>4</b> Enter Name. (max. 16 characters:) 	<b>5</b> Press <b>JOYSTICK</b> . 	<b>6</b> Enter Phone Number. (max. 24 digits) 
<b>7</b> Press <b>JOYSTICK</b> . 	<b>8</b> Select "Save", then "Saved" is displayed. 	

- If "Memory Full" is displayed when you select "Base Phonebook", the base unit phonebook is full. To store, delete other stored items in the base unit phonebook.
- To continue storing other caller information, repeat from step 4.


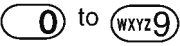

 
 
 
### 8.4.1.2. Cordless Handset Phonebook

To exit the operation, press  at any time.

<b>1</b> Press <b>LEFT SOFT KEY</b> . 	<b>2</b> Press <b>JOYSTICK</b> . 	<b>3</b> Select "H/set Phonebook". 
<b>4</b> Enter Name. (max. 16 characters:) 	<b>5</b> Press <b>JOYSTICK</b> . 	<b>6</b> Enter Phone Number. (max. 24 digits) 
<b>7</b> Press <b>JOYSTICK</b> . 	<b>8</b> Select the desired category or "Off". 	<b>9</b> Select "Save", then "Saved" is displayed. 

- If "Memory Full" is displayed when you select "H/set Phonebook", the handset phonebook is full. To store, delete other stored items in the handset phonebook.
- To continue storing other caller information, repeat from step 4.


## 8.4.2. Entering Names/Characters

Keys	Operations
	Move the <b>JOYSTICK</b> up, down, left or right to move the cursor (a flashing digit).
	Press to enter letters/numbers. (Items are added to the left of the cursor. If the cursor is at the beginning of a line, the item is added at the beginning.)
	Press to delete characters. (Character on the cursor is deleted. To delete all characters, press and hold.)
	Press to change between upper and lower case.
	Press to insert a blank space (except when in Numeric input mode).
	Press to insert a symbol ( *, #, /, etc.) (except when in Numeric input mode).

### Selecting the Input Mode

You can select one of 6 input modes by pressing **RIGHT SOFT KEY** while entering a name. The function icon above the key displays the current input mode. The factory preset is "**Alphabet Mode**".

For the full character map, see **Phonebook Character Table**.

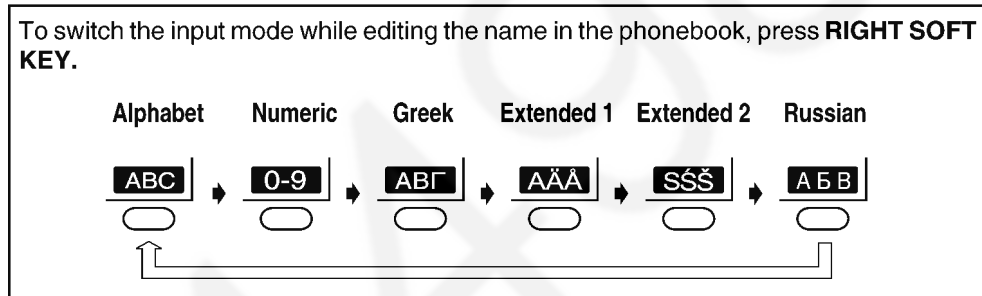

### Example (Alphabet Mode)

Enter the name using the letters on the keypad. For example, to enter "Anne" in Alphabet Mode:



### Cross Reference:

Phonebook Character Table (P.37)

## 8.4.3. Phonebook Character Table


Buttons	Alphabet (ABC)	Numeric (0-9)	Greek(ΑΒΓ)	Extended 1(AĂÄ)	Extended 2 (SŠŠ)	Russian (АБВ)
<b>1</b>	Space # & ' ( ) ×, - . / 1	1	Space # & ' ( ) ×, - . / 1			
<b>ABC 2</b>	ABC 2 a b c 2	2	Α Β Γ 2	AĂÄĂÄĂÄĂÄÆBCÇ2 a à á â ã ä å æ b c ç 2	AĂÄĂBCČČ2 a á â Ā b c Č Č 2	А Б В Г 2
<b>DEF 3</b>	DEF 3 d e f 3	3	Δ Ε Ζ 3	DEĚĚĚĚĚF3 d e ě ě ě ě f 3	DĚĚĚĚĚF3 d ě ě ě ě f 3	Д Е Ж 3 3
<b>GHI 4</b>	GHI 4 g h i 4	4	Η Θ Ι 4	GĜHIİİİİİİİ4 g ĝ h i i i i i i i 4	GHIÍ4 g h i i 4	И Й К Л 4
<b>JKL 5</b>	JKL 5 j k l 5	5	Κ Λ Μ 5	JKL5 j k l 5	JKLŁŁŁŁ5 j k l Ł Ł Ł Ł 5	М Н О П 5
<b>MNO 6</b>	MNO 6 m n o 6	6	Ν Ξ Ο 6	MNŃOÓÓÓÓÖØ6 m n ñ o ó ó ó ö ø 6	MNŃŃOÓÓÖÖ6 m n Ń Ń o ó ó ö ö 6	Р С Т У 6
<b>PQRS 7</b>	PQRS 7 p q r s 7	7	Π Ρ Σ 7	PQRSŞŞß7 p q r s Ş Ş ß 7	PQRŘŘŞŞŞ7 p q r Ř ř s Š Š 7	Ф Х Ц Ч 7
<b>TUV 8</b>	TUV 8 t u v 8	8	Τ Υ Φ 8	TUÛÜÜÜÜÜV8 t u ú ú ü ü ü v 8	TŤUÛÜÜÜüV8 t ť u ú ü ü ü v 8	Ш Щ Ъ Ы 8
<b>WXYZ 9</b>	WXYZ 9 w x y z 9	9	Χ Ψ Ω Ξ 9	WŴXYŷZ9 w Ŵ x y ŷ z 9	WXYŷŶZŽŽŽ9 w x y ŷ ŷ z Ž Ž Ž 9	Ь Э Ю Я 9
<b>0</b>	Space 0	0	Space 0			


- The following small (or capital) letters of Greek, Russian (Cyrillic), Polish, Czech and Slovakian are not available. Then same letter as capital (or small) will be displayed.  $\alpha \acute{\alpha} \check{\alpha} \epsilon \iota \iota' \acute{\eta} \emptyset \acute{\rho} \acute{\varsigma} \acute{\varsigma} \acute{\varsigma} \acute{\tau} \acute{\upsilon} \acute{\omega} \acute{\gamma} \acute{\gamma} \acute{\gamma} \acute{\gamma}$
- Press **↔** to change letter size; Capital > Small, Small > Capital.

#### 8.4.4. Storing the Number in the Handset Phonebook

##### From the Caller ID List Menu

You can save the numbers from the Caller ID list into the handset phonebook, and you can edit (for calling) or delete item(s) in the Caller ID List.


To exit the operation, press  at any time.

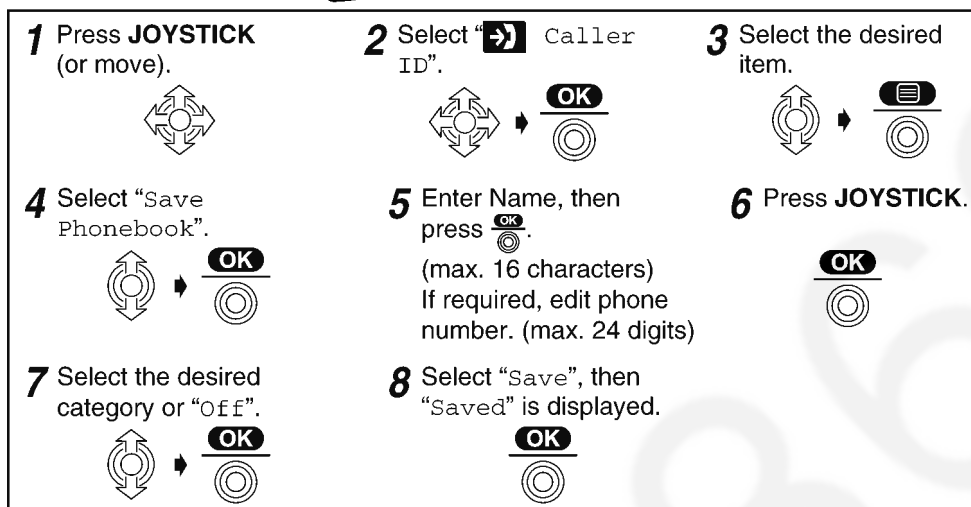



- If you scroll to the end of the list when searching for an item, an end tone will sound.
- If there are no items stored in the caller list when "Caller ID" is selected, the handset display shows "Memory Empty".

##### From the Redial List Menu

You can save numbers from the redial list into the handset phonebook, and you can edit (for calling) or delete item(s) in the redial list.


To exit the operation, press  at any time.

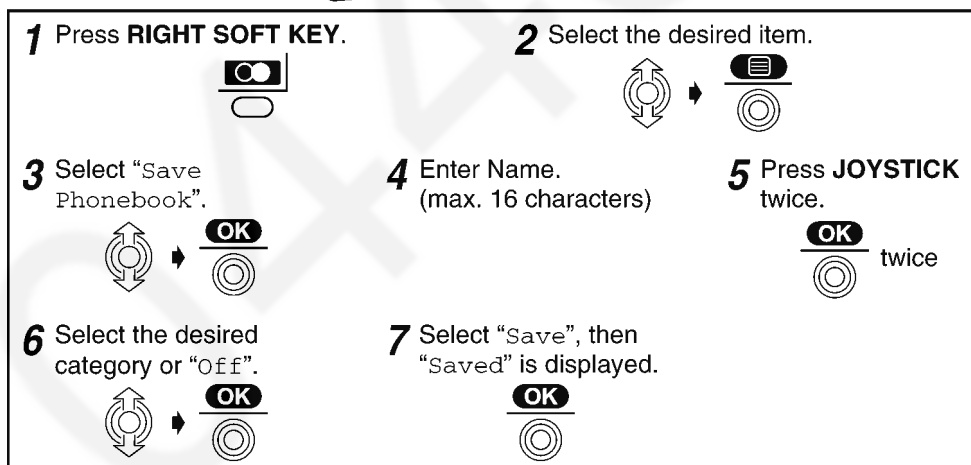









- If there are no items stored in the redial list when  is pressed, the handset display shows "Memory Empty".


### 8.4.5. Hot Keys (: Speed Dial)

You can assign the dialling buttons **1** through **9** as hot keys. You can choose 9 phone numbers from the handset phonebook.

To exit the operation, press  at any time.

#### Registering a Phone Number as a Hot Key





<b>1</b> Press <b>LEFT SOFT KEY</b> . 	<b>2</b> Select the desired item.  → 	<b>3</b> Select "Reg. to Hot Key".  → 
<b>4</b> Select the desired dialling button number.  → 	<b>5</b> Select "Save", then "Saved" is displayed. 	

- If there are no items stored in the handset phonebook when searching for the desired item, the handset display shows "Memory Empty".
- If an item is already assigned to a hot key, "✓" will be displayed on the left of the key number. If a hot key number with "✓" is selected, press  to select "Overwrite".

#### Dialling with a Hot Key

<b>1</b> Press and hold the dialling button registered as a hot key until a phone number is displayed.	<b>2</b> Press <b>TALK</b> or <b>SPEAKERPHONE</b> .  OR 
--	--


#### Deleting the Hot Key Registration

<b>1</b> Press and hold the dialling button registered as a hot key until a phone number is displayed.	<b>2</b> Press <b>JOYSTICK</b> . 	<b>3</b> Select "Delete". 
<b>4</b> Select "Yes", then "Deleted" is displayed.  → 		











- Handset phonebook registration will not be erased when hot key registration is deleted.

### 8.4.6. Phonebook Copy

You can copy handset phonebook information between cordless handsets registered to the same base unit. The handset phonebook copy must be performed while in intercom mode.


To exit the operation, press  at any time.


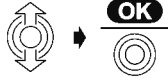




#### Example: Copying a Handset Phonebook Item to Another Handset Phonebook

	<Cordless Handset 1: Receiver> (During an intercom call)	<Cordless Handset 2: Sender> (During an intercom call)
1	Press <b>JOYSTICK</b> . 	
2	Select "Recv Phonebook". "Start Copying" is displayed.  → 	
3		Press <b>JOYSTICK</b> . 
4		Select "Send Phonebook".  → 
5		Select the desired item to copy.  → 
6		Select "Copy One Item" then "Start Copying" is displayed.  → 







### Example: Copying All Handset Phonebook Items to Another Handset Phonebook

To exit the operation, press  at any time.

	<Cordless Handset 1: Receiver> (During an intercom call)	<Cordless Handset 2: Sender> (During an intercom call)
1	Press <b>JOYSTICK</b> . 	
2	Select "Recv Phonebook". "Start Copying" is displayed. 	
3		Press <b>JOYSTICK</b> . 
4		Select "Send Phonebook". 
5		Press <b>JOYSTICK</b> . 
6		Select "Copy All Items" then "Start Copying" is displayed. 

- When copying is completed, a beep sounds and "Copy Complete" is displayed. After a few seconds, the handset display will return to the intercom call. "Copy Incomplete" will be displayed on the sender handset if the receiver handset memory is full. If "Copy Failure" is displayed on the sender handset, the receiver did not prepare for copying.
- If you move the **JOYSTICK** up or down before pressing **JOYSTICK** on step 5, all items will not be copied. The items, from the item indicated now to the last item, are copied.

### Example: Copying a Handset Phonebook Item to the Base Unit Phonebook

1 Press <b>INTERCOM</b> . 	2 Press <b>JOYSTICK</b> . 	3 Select "Copy to Base". 
4 Select the desired item. 		


- If "Memory Full" is displayed when you select "Copy to Base", the base unit phonebook is full.
- Items in the handset phonebook can be copied one at a time.













## 8.5. Handset Registration to a Base Unit


The cordless handset supplied with the base unit is already registered. If an optional cordless handset is purchased, it must be registered as follows.

**Charge the optional cordless handset batteries for 7 hours before initial use.**

**Handset registration must be completed within 1 minute after pressing . If over 1 minute, press  then start over again.**

To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "  Setting Handset".  → 	<b>3</b> Select "Registration".  → 
<b>4</b> Select "Register H/set".  → 	<b>5</b> Press and hold  button on the Base Unit (for about 3 seconds) until the tone sounds.	
<b>6</b> Select the desired base unit.  → 	<b>7</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)	<b>8</b> Press <b>JOYSTICK</b> . 

When a cordless handset is registered successfully, a confirmation tone sounds and the " " icon is displayed.


- If you enter the incorrect Base Unit PIN, an error tone sounds. Repeat from step 1.
- To register a cordless handset to more than one base unit, repeat from step 1 with the other base unit(s).
- The cordless handset main menu may change depending on the base unit that the cordless handset is registered to.









### Note for Service:

At step 7, enter  7 0 0 0 . Finally Handset will be linked to Base Unit.

### Cancelling a Cordless Handset

 
Each cordless handset can cancel itself or another cordless handset. This feature is usually used to cancel a link between Cordless Handset and Base Unit.













To exit the operation, press  at any time.

<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "Setting Base".  → 
<b>3</b> Enter 4-digit Base Unit PIN. (Factory Preset 0000)	<b>4</b> Select "Cancel Handset".  → 
<b>5</b> Search and press <b>RIGHT SOFT KEY</b> to attach "✓" to the handset(s) to cancel.  → 	<b>6</b> Press <b>JOYSTICK</b> . 

### Cancelling a Base Unit

If a cordless handset is out of range and/or power is OFF when **Cancelling a Cordless Handset**, the previous base unit number will still remain in the cancelled cordless handset. Therefore, you need to cancel the base unit registered in the cancelled cordless handset.


To exit the operation, press  at any time.









<b>1</b> Press <b>JOYSTICK</b> (or move). 	<b>2</b> Select "Setting Handset".  → 	<b>3</b> Select "Registration".  → 
<b>4</b> Select "Cancel Base".  → 	<b>5</b> Enter 4-digit Handset PIN. (Factory Preset 0000)	
<b>6</b> Search and press <b>RIGHT SOFT KEY</b> to attach "✓" to the base unit to cancel.  → 	<b>7</b> Press <b>JOYSTICK</b> . 	
<b>8</b> Select "Yes", then "Deleted" is displayed.  → 		

## 8.6. Base Unit Selection

When "Auto" (Automatic Base Unit Selection) is selected, the cordless handset automatically searches for other registered base units if you move outside of the radio range of the current base unit.

When a specified base unit is selected, the cordless handset will access that base unit only. Calls (both incoming and outgoing) can be conducted only via the selected base unit, even if the radio cells overlap with neighbouring base units.

To exit the operation, press  at any time.

<p><b>1</b> Press <b>JOYSTICK</b> (or move).</p> 	<p><b>2</b> Select " Setting Handset".</p>  → 
<p><b>3</b> Select "Select Base".</p>  → 	<p><b>4</b> Select "Auto" or desired base unit.</p>  → 

- The factory preset is "Auto".

## 9 DISASSEMBLY INSTRUCTIONS

### 9.1. Base Unit

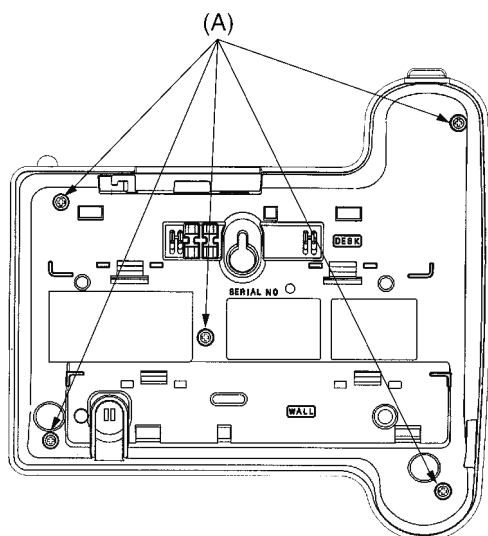


Fig. 1

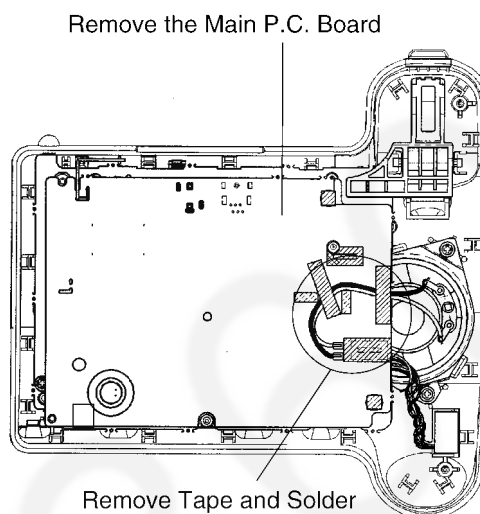


Fig. 2

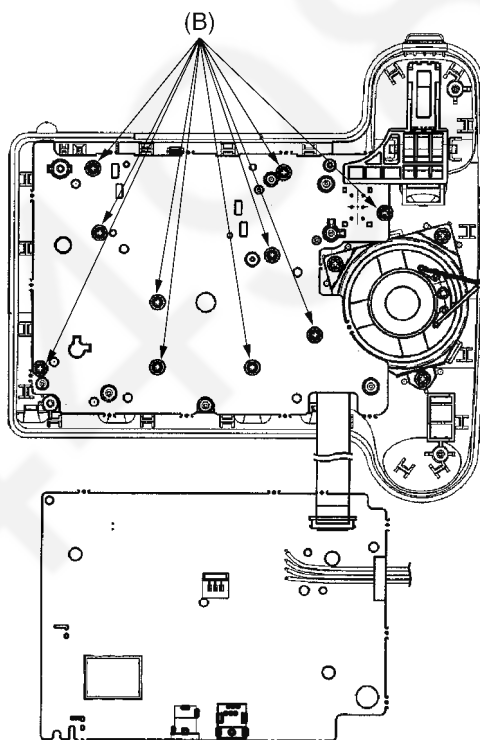


Fig. 3

Shown in Fig.-	To Remove	Remove
1	Lower Cabinet	Screws (2.6 × 14).....(A) × 5
2	Main P.C. Board	Tape and Solder Main P.C. Board
3	Operational P.C. Board	Screws (2.6 × 8).....(B) × 10 Operational P.C. Board

## 9.2. Cordless Handset

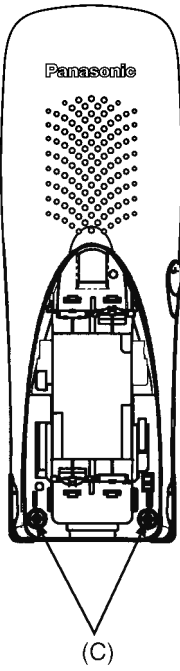


Fig.4



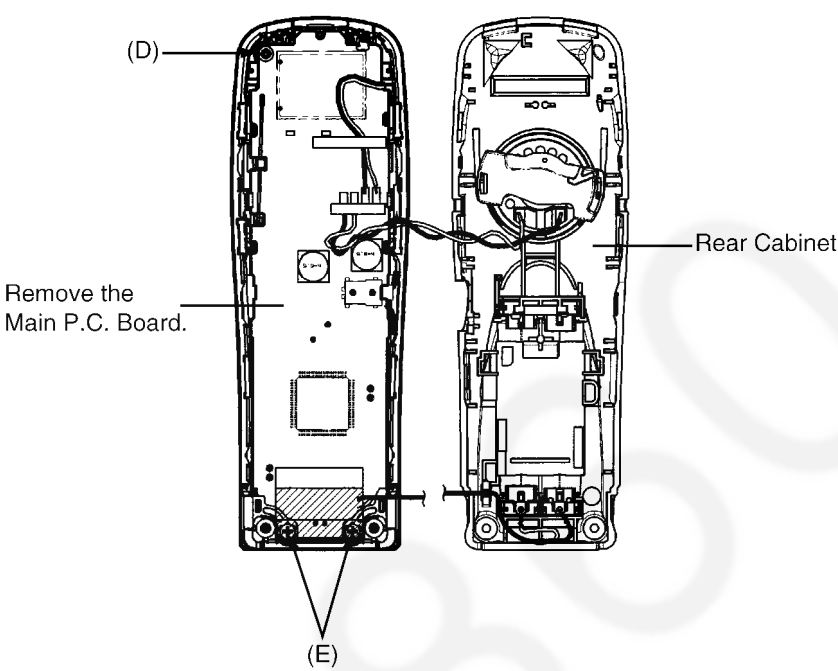



Fig.6

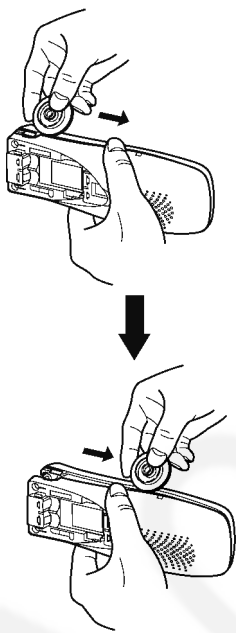

Insert a JIG (PQDJ10006Y) between the Front and the Rear Cabinet, then pull it along the gap to open the Cabinet.

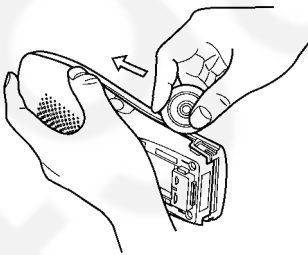

Likewise, open the other side of the Cabinet.

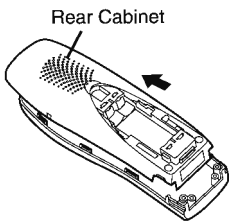

Remove the Rear Cabinet by pushing it upward.

Fig.5

Shown in Fig.-	To Remove	Remove
4	Rear Cabinet	Screws (2 × 10).....(C) × 2
5		Follow the procedure.
6	Main P.C. Board	Screw (2 × 8).....(D) × 1
		Screws (2 × 8).....(E) × 2
		Main P.C. Board

9.3. Charger Unit

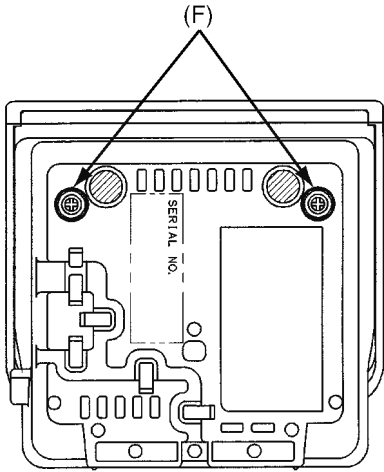


Fig. 7

Remove the Main P.C. Board.


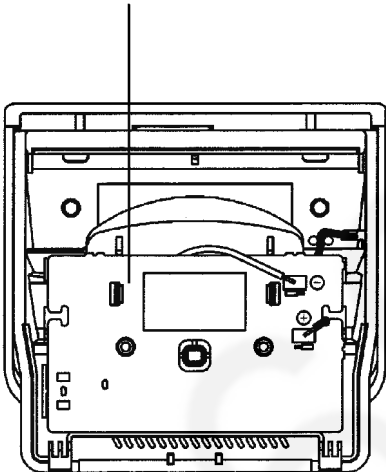


Fig. 8

Shown in Fig.-	To Remove	Remove
7	Lower Cabinet	Screws (2.6 × 14).....(F) × 2
8	Main P.C. Board	Main P.C. Board

# 10 TROUBLESHOOTING GUIDE

## Flow Chart

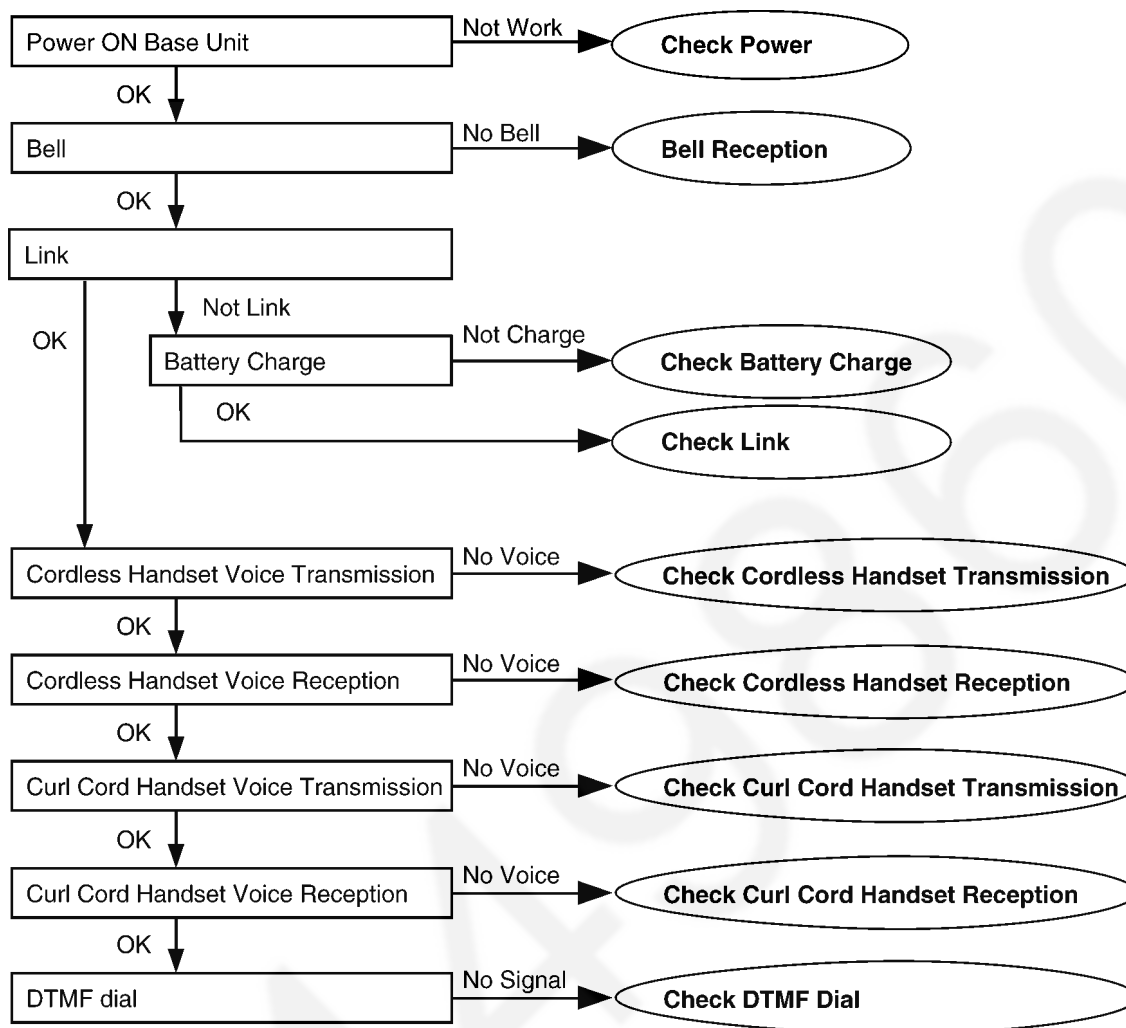

## Cross Reference:

**Check Power** (P.49)

**Bell Reception** (P.56)

**Check Battery Charge** (P.50)

**Check Link** (P.51)

**Check Cordless Handset Transmission** (P.55)

**Check Cordless Handset Reception** (P.55)

**Check Curl Cord Handset Transmission** (P.55)

**Check Curl Cord Handset Reception** (P.55)


**Check DTMF Dial** (P.56)



## 10.1. Check Power

### 10.1.1. Base Unit

Is the AC Adaptor inserted into AC outlet? (Check AC Adaptor's specification.)

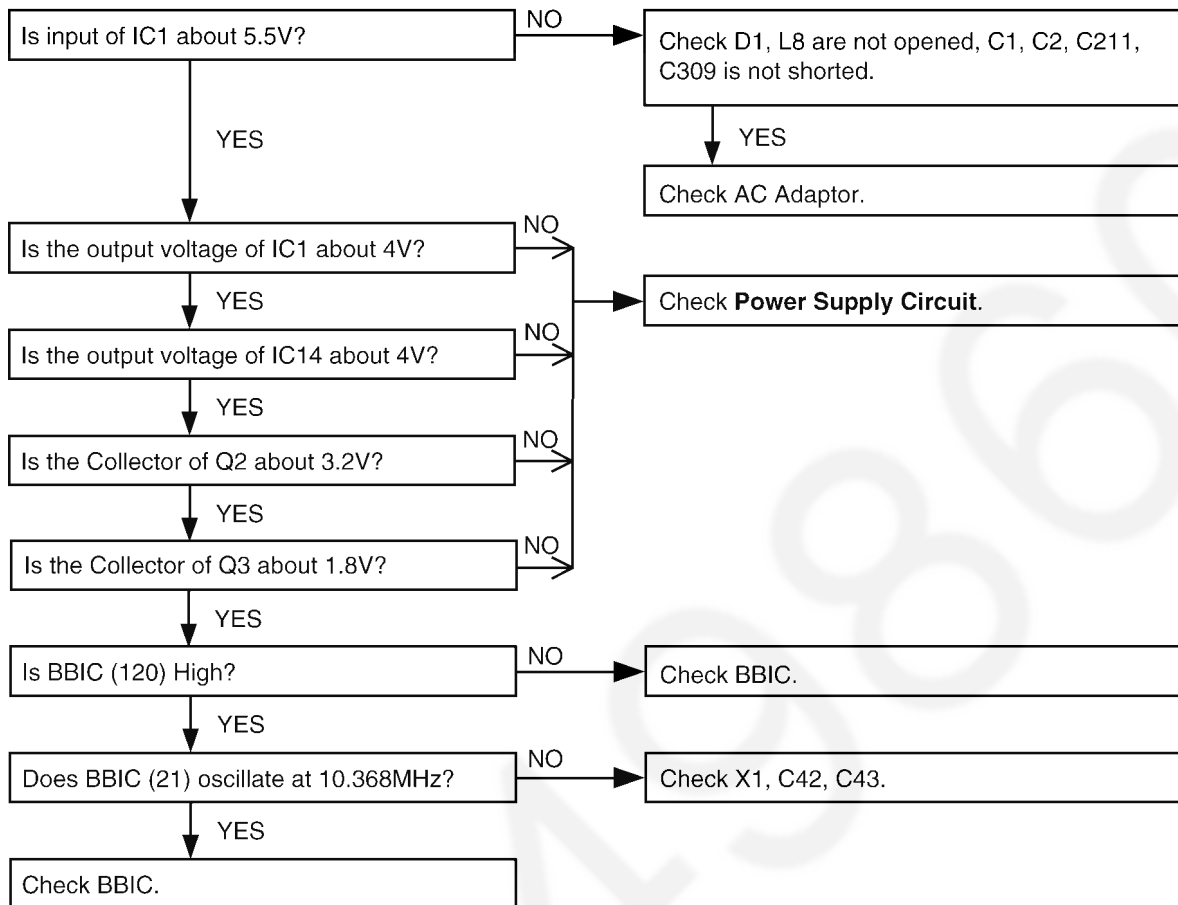


#### Cross Reference

**Power Supply Circuit** (P.76)

#### Note:

BBIC is IC2.

### 10.1.2. Cordless Handset

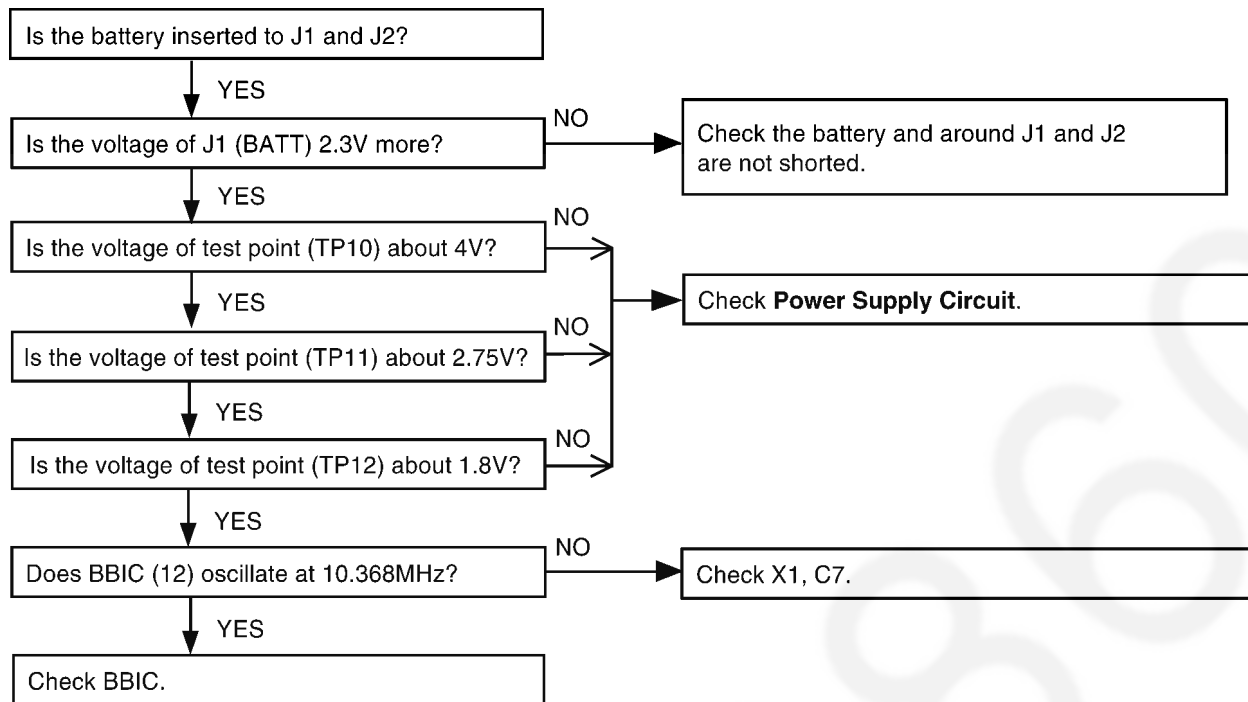

#### Cross Reference


Power Supply Circuit/Reset Circuit (P.79)

#### Note:

BBIC is IC1.

## 10.2. Check Battery Charge

### 10.2.1. Cordless Handset

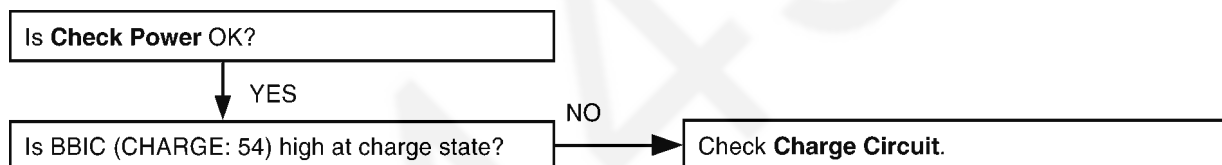

#### Cross Reference:


Check Power (P.49)

Charge Circuit (P.79)

#### Note:

BBIC is IC1.

### 10.2.2. Charger Unit

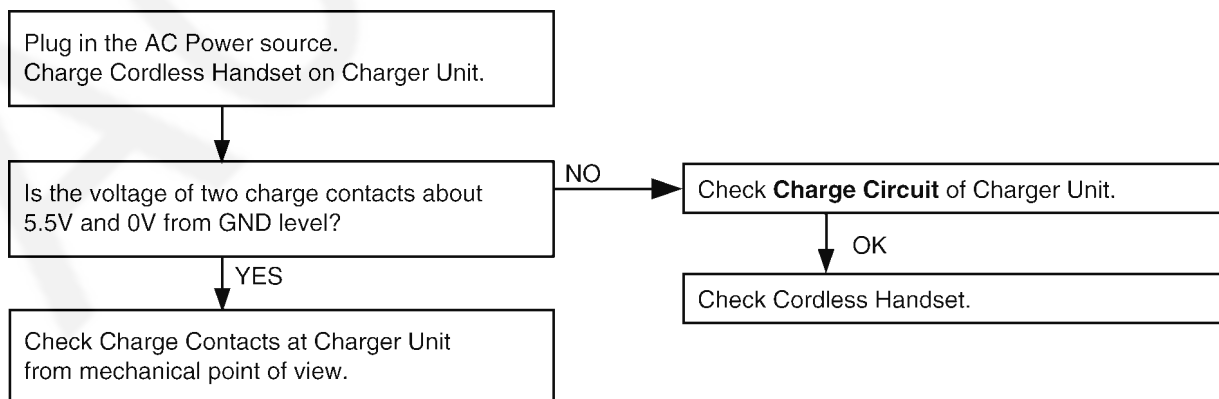



#### Cross Reference:

Charge Circuit (P.79)


## 10.3. Check Link


### 10.3.1. Base Unit

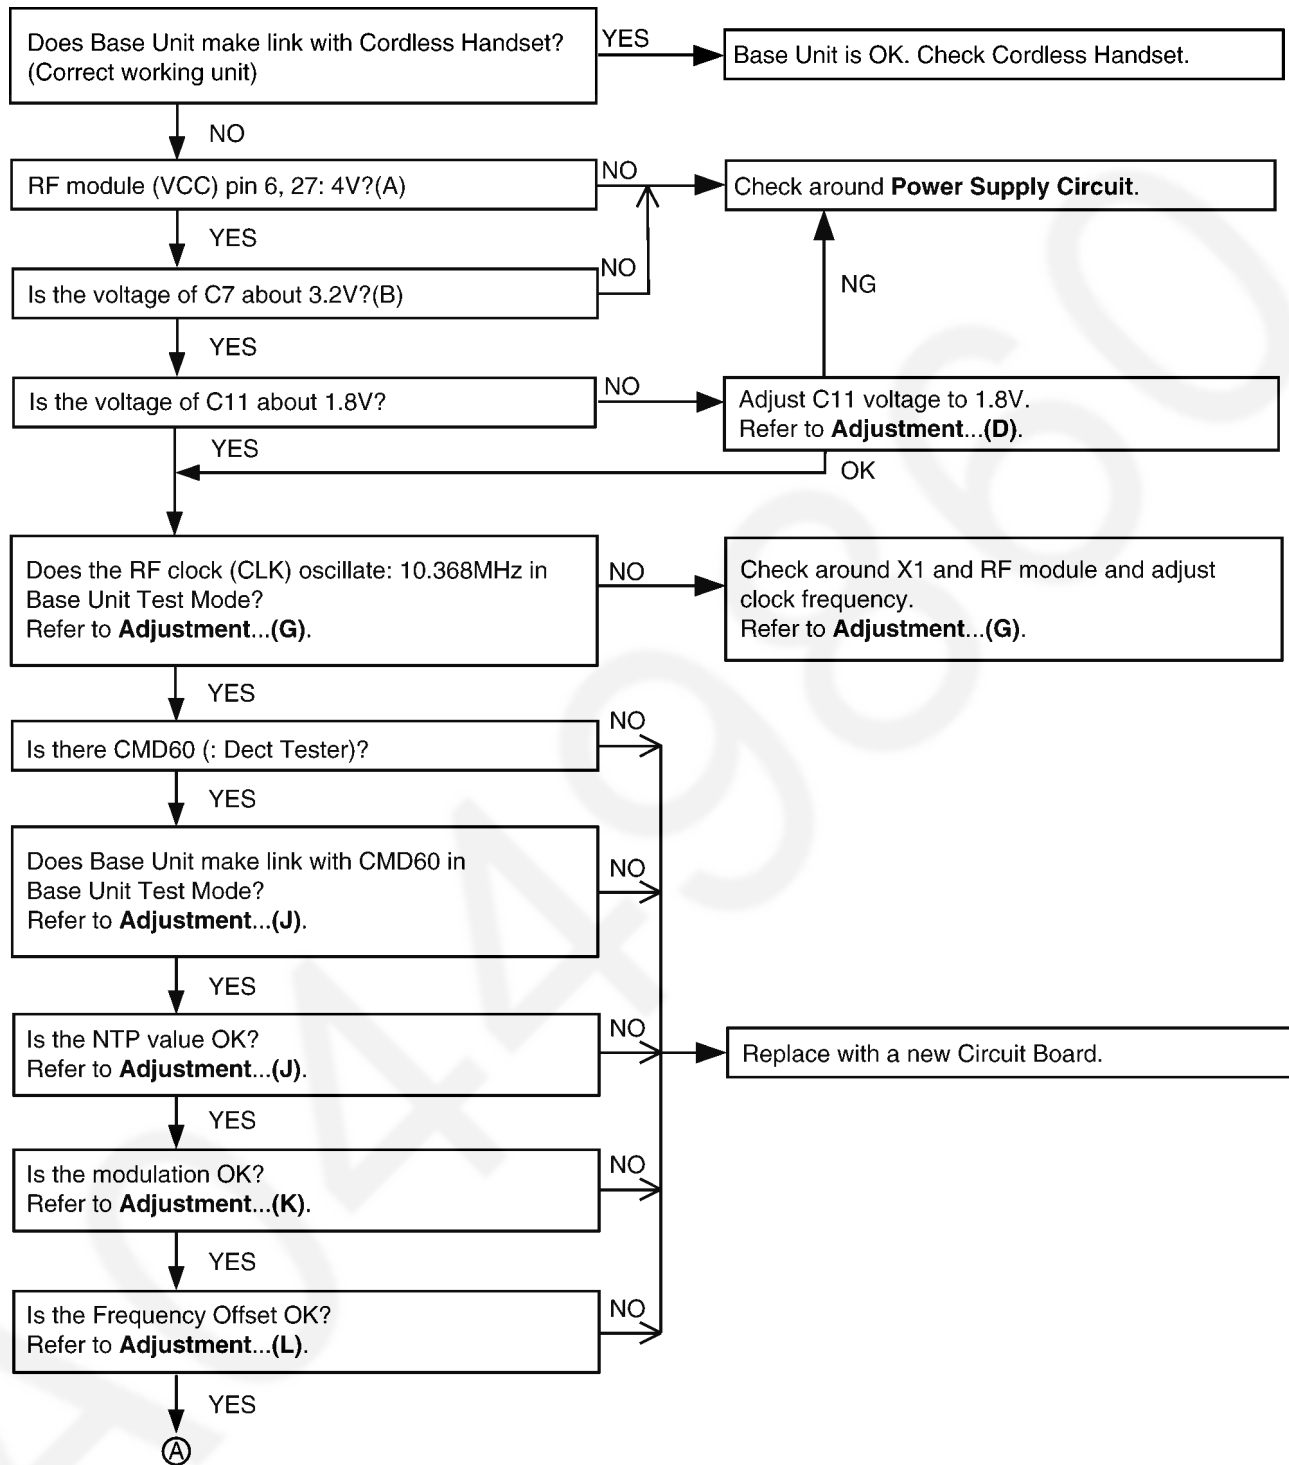

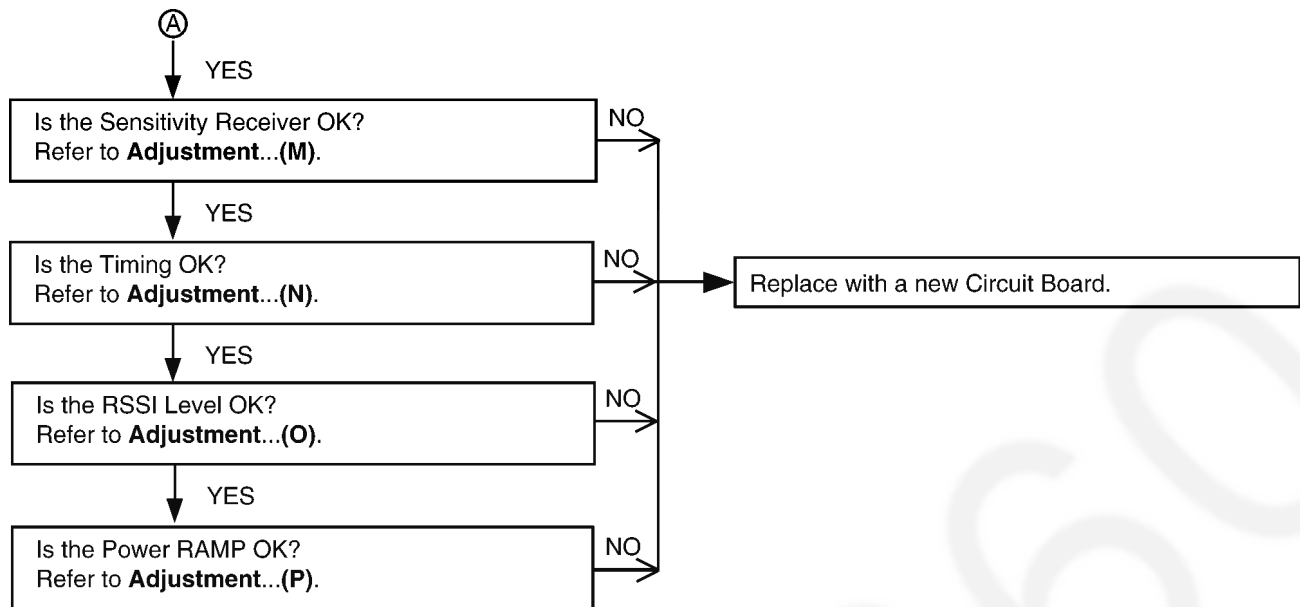**Cross Reference:****Power Supply Circuit/Reset Circuit** (P.79)**Adjustment (Base Unit)** (P.59)

### 10.3.2. Cordless Handset

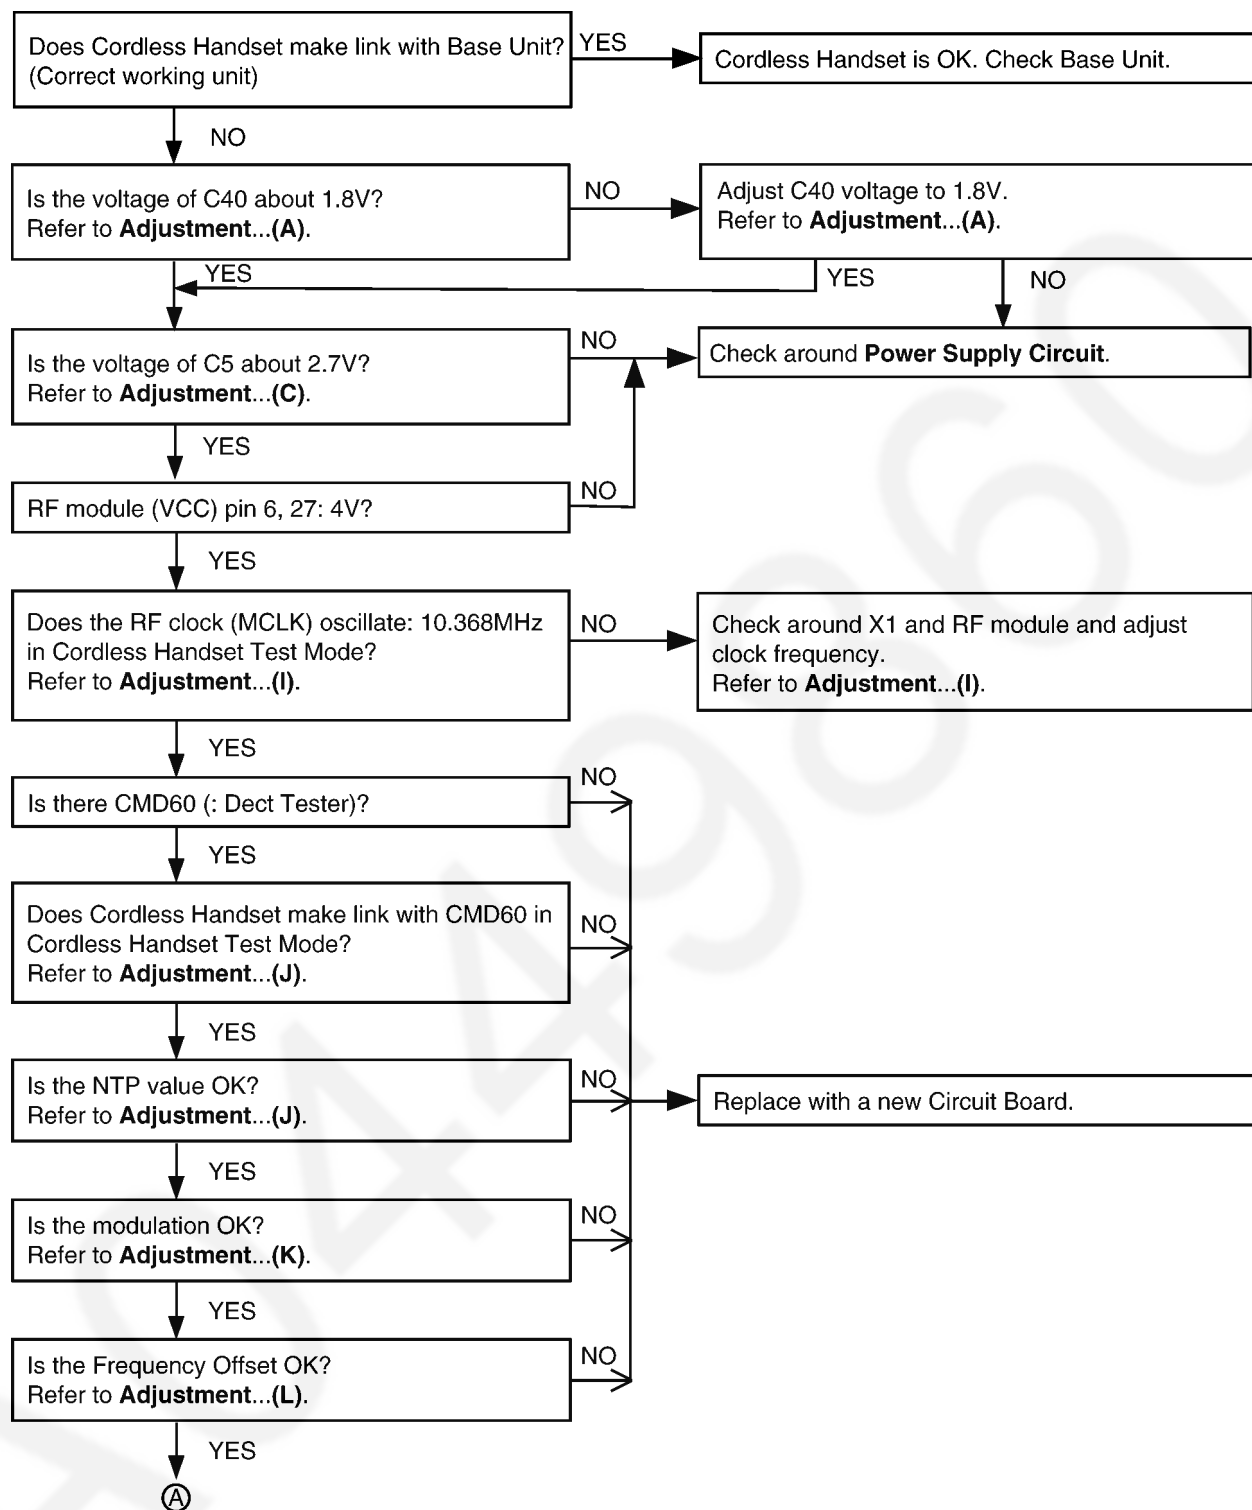

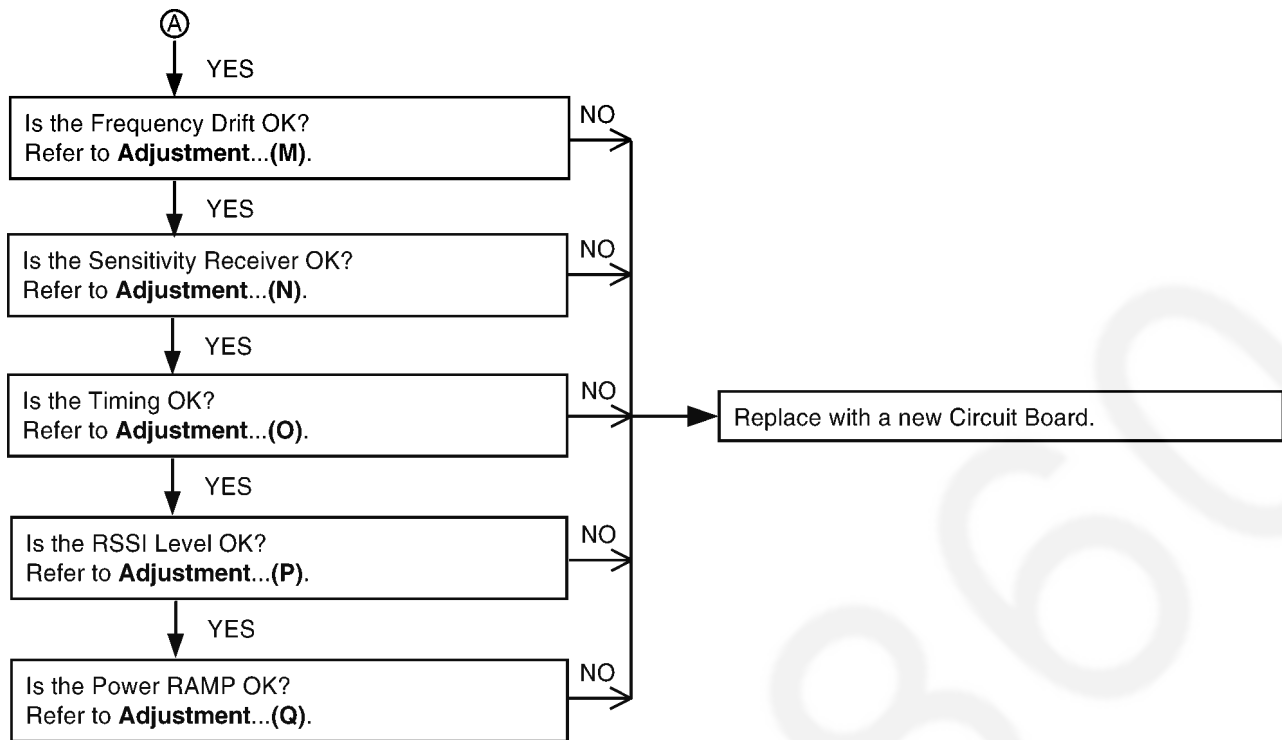**Cross Reference**


Power Supply Circuit/Reset Circuit (P.79)

Adjustment (Cordless Handset) (P.66)

## 10.4. Check Cordless Handset Transmission

Cross Reference:


**SIGNAL ROUTE** (P.81)

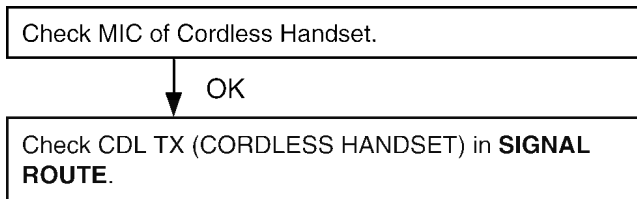

Cross Reference:

**SIGNAL ROUTE** (P.81)

## 10.5. Check Cordless Handset Reception

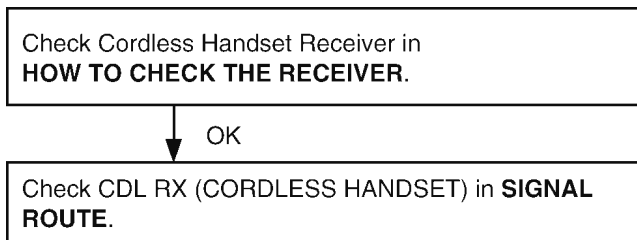


Cross Reference:

**HOW TO CHECK THE CORDLESS HANDSET RECEIVER** (P.72).

**SIGNAL ROUTE** (P.81)

## 10.6. Check Curl Cord Handset Transmission

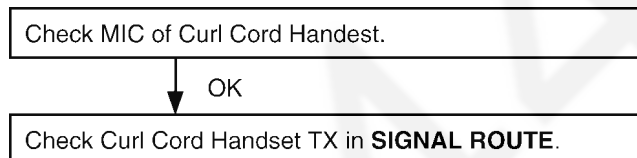

Cross Reference:

**SIGNAL ROUTE** (P.81)

## 10.7. Check Curl Cord Handset Reception



Cross Reference:

**HOW TO CHECK THE CORDLESS HANDSET RECEIVER** (P.72)


**SIGNAL ROUTE** (P.81)

## 10.8. Check Caller ID



## 10.9. Bell Reception


### 10.9.1. Base Unit

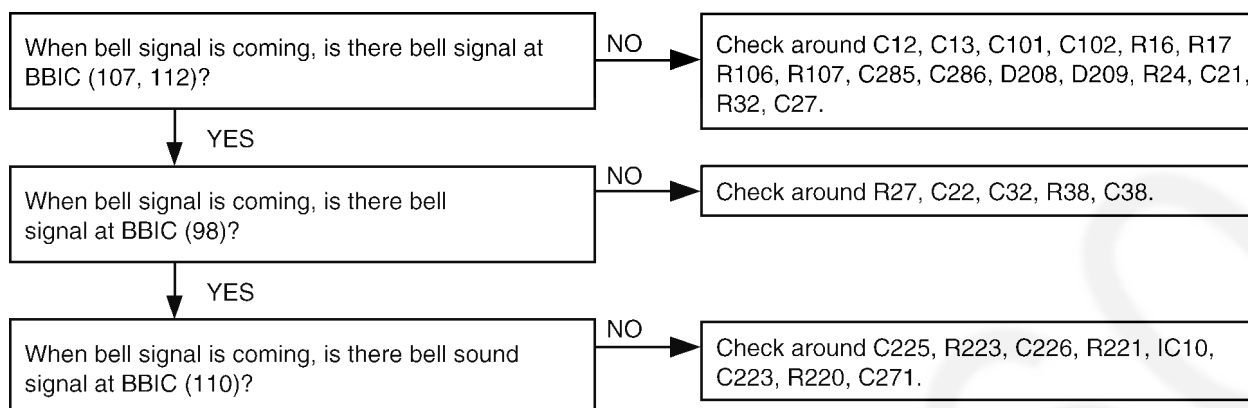

**Note:**

BBIC is IC2.

### 10.9.2. Cordless Handset

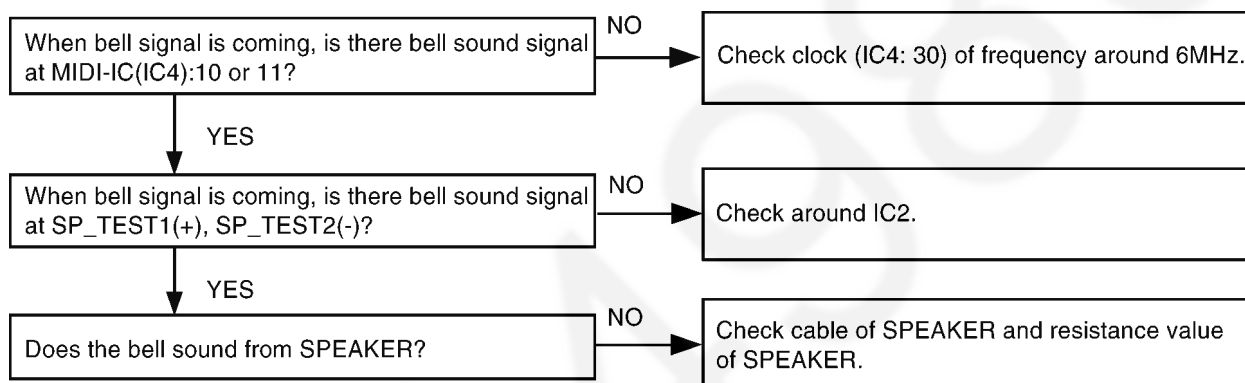

**Cross Reference:**

Telephone Line Interface (P.77)

Check Link (P.51)

HOW TO CHECK THE CORDLESS HANDSET AND BASE UNIT SPEAKER (P.71)

**Note:**

BBIC is IC1.

## 10.10. Check DTMF Dial

Check DTMF TONE TEL OUT in **SIGNAL ROUTE**.

**Cross Reference:**

**SIGNAL ROUTE** (P.81)



# 11 CHECK PROCEDURE (BASE UNIT)

## 11.1. Preparation

### 11.1.1. Equipment Required


- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: it must be precise to be able to measure 1Hz (precision;  $\pm 4\text{ppm}$ ).  
Hewlett Packard, 53131A is recommended.
- DC power: it must be able to output at least 1A current under 9V.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

### 11.1.2. JIG and PC

- EEPROM serial JIG  
JIG Cable: PQZZ1CD505E
- PC which runs in DOS mode
- **Batch file** for setting: PQZZTCD530AX

## 11.2. PC Setting

### 11.2.1. Connections

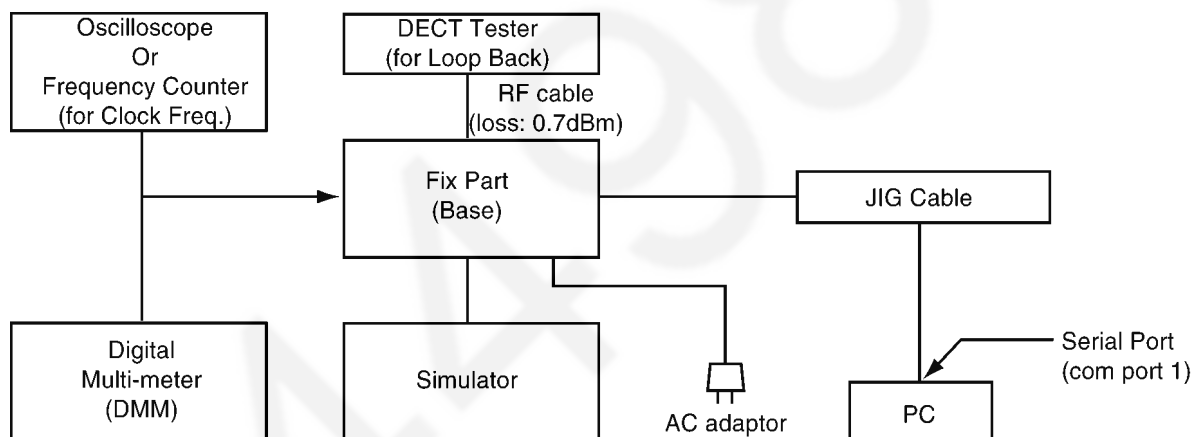

### 11.2.2. PC Setting

1. Open a window of MS-DOS mode from the start-up menu.
2. Change a directory.
3. Type **"SET COM 1"** from the keyboard (when COM port 1 is used for the connection).
4. Type "doskey".

#### Note:

See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
setfreq	adjust Frequency of RFIC	Type "setfreq nn".
hookoff	off-hook mode on Base	Type "sethooksw 01".
hookon	on-hook mode on Base	Type "sethooksw 00".
Getchk	Read checksum	Type "getchk".
Wreeprom	write eeprom	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

#### For Service Hint:

Please make sure the speed of COM port is "9,600 bps" or less.

## 12 CHECK PROCEDURE (CORDLESS HANDSET)

### 12.1. Preparation

#### 12.1.1. Equipment Required


- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: it must be precise to be able to measure 1Hz (precision;  $\pm 4\text{ppm}$ ).  
Hewlett Packard, 53131A is recommended.
- DC power: it must be able to output at least 1A current under 2.4V for Cordless Handset, 9V for JIG.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

#### 12.1.2. JIG and PC

- EEPROM serial JIG  
JIG Cable: PQZZ1CD505E
- PC which runs in DOS mode.
- Batch file for PC setting: PQZZTCD530AX

### 12.2. PC Setting

#### 12.2.1. Connections

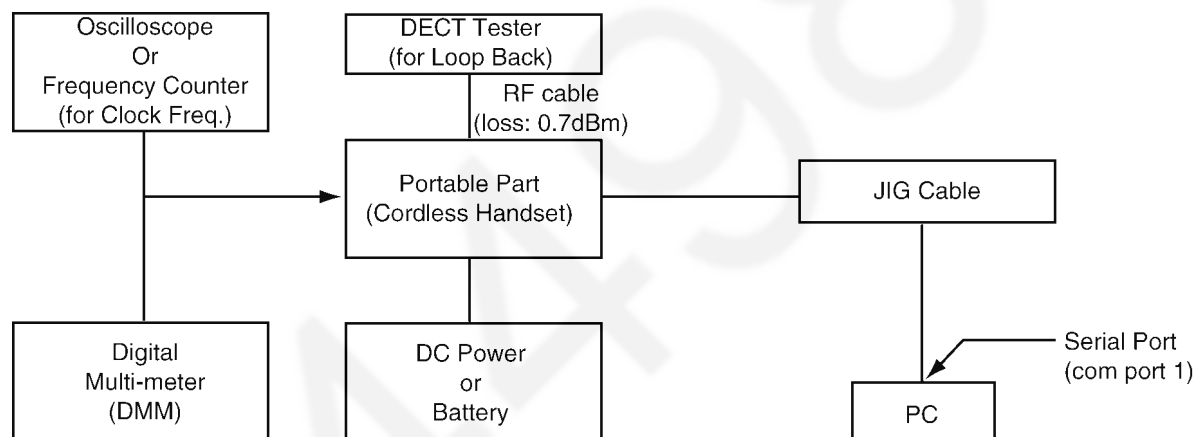

#### 12.2.2. PC Setting

1. Open a window of MS-DOS mode from the start-up menu.
2. Change a directory.
3. Type "**SET COM 1**" from the keyboard (when COM port 1 is used for the connection).
4. Type "doskey".

#### Note:

See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
setfreq	adjust Frequency of RFIC	Type "setfreq nn".
Getchk	Read checksum	Type "getchk".
Wreeprom	write eeprom	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

#### For Service Hint:

Please make sure the speed of COM port is "9,600 bps" or less.

# 13 ADJUSTMENTS (BASE UNIT AND CHARGER UNIT)

If your unit has below symptoms, adjust or confirm each item using remedy column from the table.

Symptom	Remedy*
The base unit does not respond to a call from cordless handset.	Make adjustments in item (A)~(H), (J)~(P).
The base unit does not transmit or the transmit frequency is off.	Make adjustments in item (A)~(G), (J)~(P).
The transmit frequency is off.	Make adjustments in item (A)~(G), (J)~(P).
The transmit power output is low, and the operating distance between base unit and cordless handset is less than normal.	Make confirmation in item (J), (M).
The reception sensitivity of base unit is low with noise.	Make confirmation in item (M).
The transmit level is high or low.	Make confirmation in item (Q)~(S).
The reception level is high or low.	Make confirmation in item (Q)~(S).
The unit does not link.	Make adjustments in item (A)~(P).

\* : Refer to **Adjustment (Base Unit)** (P.59)

## 13.1. Adjustment (Base Unit)

Please follow the items below when BBIC or EEPROM or FLASH ROM is replaced.

	Items	Adjustment Point	Procedure	Check or Replace Parts						
(A)	4.0V Supply Confirmation	TP14	1. Confirm that the voltage between TP14 and GND is 4.0V ± 0.2V.	CN2, L8, L9, D1, C1, C2, C211, C309, IC1, C114, C3, C306						
(B)	4.0V Supply Confirmation	TP3	1. Confirm that the voltage between TP3 and GND is 4.0V ± 0.2V.	CN2, L8, L9, D1, C1, C2, C211, C309, IC15, C273, C212, C308, C310						
(C)	3.2V Supply Confirmation	TP22	1. Confirm that the voltage between TP22 and GND is 3.15V ± 0.2V.	Q2, R12, C6, C7, C8, R13, R14						
(D)*	1.8V Supply Confirmation	TP15	1. Confirm that the voltage between TP15 and GND is 1.8V ± 0.02V. 2. Adjust the 1.8V voltage of TP15 executing the command "bandgap XX" (XX is the value).	Q3, R15, C11 C10						
(E)*	BBIC Confirmation	-	1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value. Connection of checksum value and program number is shown below. <div>ex.)<table><tr><td>checksum value</td><td>program number</td></tr><tr><td>0CA5</td><td>D33DZB</td></tr></table></div>	checksum value	program number	0CA5	D33DZB	IC2, X1, C42, C43, C34, C37, C39, C44, C48, C45, R111, C28		
checksum value	program number									
0CA5	D33DZB									
(F)*	EEP-ROM Confirmation	-	1. EEP-ROM Confirmation (Execute the command). 2. Confirm the returned checksum value. Connection of command and checksum value is shown below. <table><tr><td>confirmation command</td><td>checksum value</td></tr><tr><td>chk530AXHv07.bat</td><td>1B754</td></tr><tr><td>chk530AXHv08.bat</td><td>1B750</td></tr></table>	confirmation command	checksum value	chk530AXHv07.bat	1B754	chk530AXHv08.bat	1B750	IC3, C53, R56, R57, IC2
confirmation command	checksum value									
chk530AXHv07.bat	1B754									
chk530AXHv08.bat	1B750									
(G)*	BBIC Clock Adjustment	TP49	1. Execute the command "Conttx". 2. Input Command "rdeeprom 02 86 01", then you can confirm the current value. 3. Adjust the frequency of TP49 executing the command "setfreq xx (where xx is the value)" so that the reading of the frequency counter is 10.368000MHz ± 10Hz.	IC2, IC4, L1, C63, X1, C42, C43						
(H)*	Hookswitch Check with DC Characteristics	-	1. Connect CN1 (Telephone Socket) to Tel-simulator which is connected with 600 Ω. 2. Set line voltage to 48V at on-hook condition and line current to 40mA at off-hook condition of normal telephone. 3. Execute the command "sethooksw 01". 4. Confirm that the line current is 40mA ± 5mA. 5. Execute the command "sethooksw 00". 6. Confirm that the line current is 0mA + 0.2mA.	CN1, L6, L7, Q4, R23, R25, Q5, R26, R28 IC2, D3						

	Items	Adjustment Point	Procedure	Check or Replace Parts
(I)*	DTMF Generator Confirmation	-	1. Connect CN1 (Telephone Socket) to DTMF tester. 2. Execute the command "sethooksw 01" and "dtmf_Hi". 3. Confirm that the high frequency (1477.06Hz) group is -6dBm $\pm$ 2dBm. 4. Execute the command "dtmf_lo". 5. Confirm that the low frequency (852.05Hz) group is -8dBm $\pm$ 2dBm. 6. Execute the command "dialtone 0".	IC2, R39, C41, R49, C46, C47, R43, R44, R45, R46, R47, R48, C40, C108, C109, C36, R42, Q8, D4, R34
(J)*	Transmitted Power Confirmation	-	Remove the Antenna before starting step from 1 to 7. 1. Configure the DECT tester (CMD60) as follows; <Setting> • Test mode: FP • Traffic Carrier: 5 • Traffic Slot: 4 • Mode: Loopback • PMID: 0000 • RF LEVEL = -70dBm. 2. Execute the command "testmode". 3. Execute the command "sendchar dmv 2 2". 4. Check that "Signalling Status" has been set to "Locked", then press "ACCEPT RFPI". 5. Initiate connection from Dect tester ("set up connect") 6. Execute the command "ant0". 7. Confirm that the NTP value at ANT is 20dBm ~ 25dBm.	IC2, L1, C63, C84, C71, C73, C104, C62, C59, C64, C100, C58, C57, C105, C55, C82, C72, R59, R60, R61, R112, R113, R91, R92, L3, DA1 RFM1, C311, C312, C320, C322, C323
(K)	Modulatoin Check and Adjustment	ANT	Follow steps 1 to 6 of (J) above. 7. Confirm that the B-Field Modulation is 360kHz/div ~ 380kHz/div using data type Fig31. 8. Adjust the B-Field Modulation if required. (Execute the command "readmod" and "wrtmod xx", where xx is the value.)	IC2, L1, C63, C84, C71, C73, C104, C62, C59, C64, C100, C58, C57, C105, C55, C82, C72, R59, R60, R61, R112, R113, R91, R92, L3, DA1 RFM1, C311, C312, C320, C322, C323
(L)	Frequency Offset Confirmation	-	Follow steps 1 to 6 of (J) above. 7. Confirm that the frequency offset -50kHz ~ +50kHz.	IC2, L1, C63, C84, C71, C73, C104, C62, C59, C64, C100, C58, C57, C105, C55, C82, C72, R59, R60, R61, R112, R113, R91, R92, L3, DA1 RFM1, C311, C312, C320, C322, C323
(M)	Sensitivity Receiver Confirmation	-	Follow steps 1 to 6 of (J) above. 7. Set DECT tester power to -88dBm. 8. Confirm that the BER is < 1000ppm.	IC2, L1, C63, C84, C71, C73, C104, C62, C59, C64, C100, C58, C57, C105, C55, C82, C72, R59, R60, R61, R112, R113, R91, R92, L3, DA1 RFM1, C311, C312, C320, C322, C323

	Items	Adjustment Point	Procedure	Check or Replace Parts
(N)	Timing Confirmation	-	Follow steps 1 to 6 of (J) above. 7. Confirm that the Timing accuracy is -2.0ppm ~ +2.0ppm.	IC2, L1, C63, C84, C71, C73, C104, C62, C59, C64, C100, C58, C57, C105, C55, C82, C72, R59, R60, R61, R112, R113, R91, R92, L3, DA1 RFM1, C311, C312, C320, C322, C323
(O)*	RSSI Level Confirmation	-	Follow steps 1 to 6 of (J) above. 7. Execute the command "readrssi". 8. Confirm that the returned value is 11(hex) ~ 25(hex).	IC2, L1, C63, C84, C71, C73, C104, C62, C59, C64, C100, C58, C57, C105, C55, C82, C72, R59, R60, R61, R112, R113, R91, R92, L3, DA1 RFM1, C311, C312, C320, C322, C323
(P)	Power RAMP Confirmation	-	Follow steps 1 to 6 of (J) above. 7. Confirm that Power RAMP is Matching.	IC2, L1, C63, C84, C71, C73, C104, C62, C59, C64, C100, C58, C57, C105, C55, C82, C72, R59, R60, R61, R112, R113, R91, R92, L3, DA1 RFM1, C311, C312, C320, C322, C323
(Q)*	Audio Check (Cordless Handset)	-	1. Link with Cordless Handset. 2. Input -45dBm/1kHz to Headset MIC of Cordless Handset. Measure the Level at Line I/F and distortion level. 3. Confirm that the level is -10dBm $\pm$ 5dB and confirm that the distortion level is < 5%. (600 $\Omega$ Road) 4. Input -20dBm/1kHz to Line I/F. Measure the level at Headset Receiver of Cordless Handset and distortion level (*Receive volume set to middle). 5. Confirm that the level is -23dBm $\pm$ 5dB and confirm that the distortion level is < 5%. (Volume Middle, 150 $\Omega$ Road)	IC2, CN1, SA1, L6, L7, D3, Q4, Q5, R23, R25, R26, R28

	Items	Adjustment Point	Procedure	Check or Replace Parts
(R)	Audio Check (Curl Cord Handset)	-	<ol style="list-style-type: none"> <li>1. Input -45dBm/1kHz to MIC of Curl Cord Handset. Measure the Level at Line I/F and distortion level.</li> <li>2. Confirm that the level is -15dBm <math>\pm</math> 5dB and confirm that the distortion level is &lt; 5%. (600<math>\Omega</math> Road)</li> <li>3. Input -20dBm/1kHz to Line I/F. Measure the level at Receiver of Carl Cord Handset and distortion level (*Receive volume set to middle).</li> <li>4. Confirm that the level is -24dBm <math>\pm</math> 5dB and confirm that the distortion level is &lt; 5%. (Volume Middle, 150<math>\Omega</math> Road)</li> </ol>	IC2, CN1, SA1, L6, L7, D3, Q4, Q5, R23, R25, R26, R28, C291, R282, C287, C289, IC15, R283, R284, R285, R286, R287, R288, R289, R290, R291, R292, R231, R279, R266, C288, C290, C267, C275, C232, C233, C292, C295, C296, C301, C302, C304, C305, C303, C300, C297, C298, C299, C314, C315, C316
(S)	SP Phone Audio Check	-	<ol style="list-style-type: none"> <li>1. Press SP-Phone button.</li> <li>2. Press MUTE button.</li> <li>3. Input -20dBm/1kHz/600<math>\Omega</math> to Line I/F. (SP-Phone volume Maximum)</li> <li>4. Measure the output level at Speaker (between TP108 and TP109).</li> <li>5. Confirm that the level is -3 <math>\pm</math> 5dBm.</li> <li>6. Press MUTE button.</li> <li>7. Input -45dBm/1kHz/600<math>\Omega</math> to SP-Phone Mic. (TP60-TP61)</li> <li>8. Measure the output level at Line I/F.</li> <li>9. Confirm that the level is 0 <math>\pm</math> 5dBm.</li> </ol>	IC2, C255, R251, C258, C293, D215, C231, R230, R276, C230, R281, R265, C266, C274, R264, MIC1, C225, R223, C226, R221, R220, C223, C224, C227, C282, C283, D11, IC10, C221, C220, C271, CN1, SA1, L6, L7, D3, Q4, Q5, R23, R25, R26, R28

**Note:**

After the measuring, sock up the solder of TP.


\* : **PC Setting** (P.57) is required beforehand.

The connection of adjustment equipment are as shown in **Adjustment Standard (Base Unit)** (P.63).

# 13.2. Adjustment Standard (Base Unit)


When connecting the Simulator Equipments for checking, please refer to below.

## 13.2.1. Component View

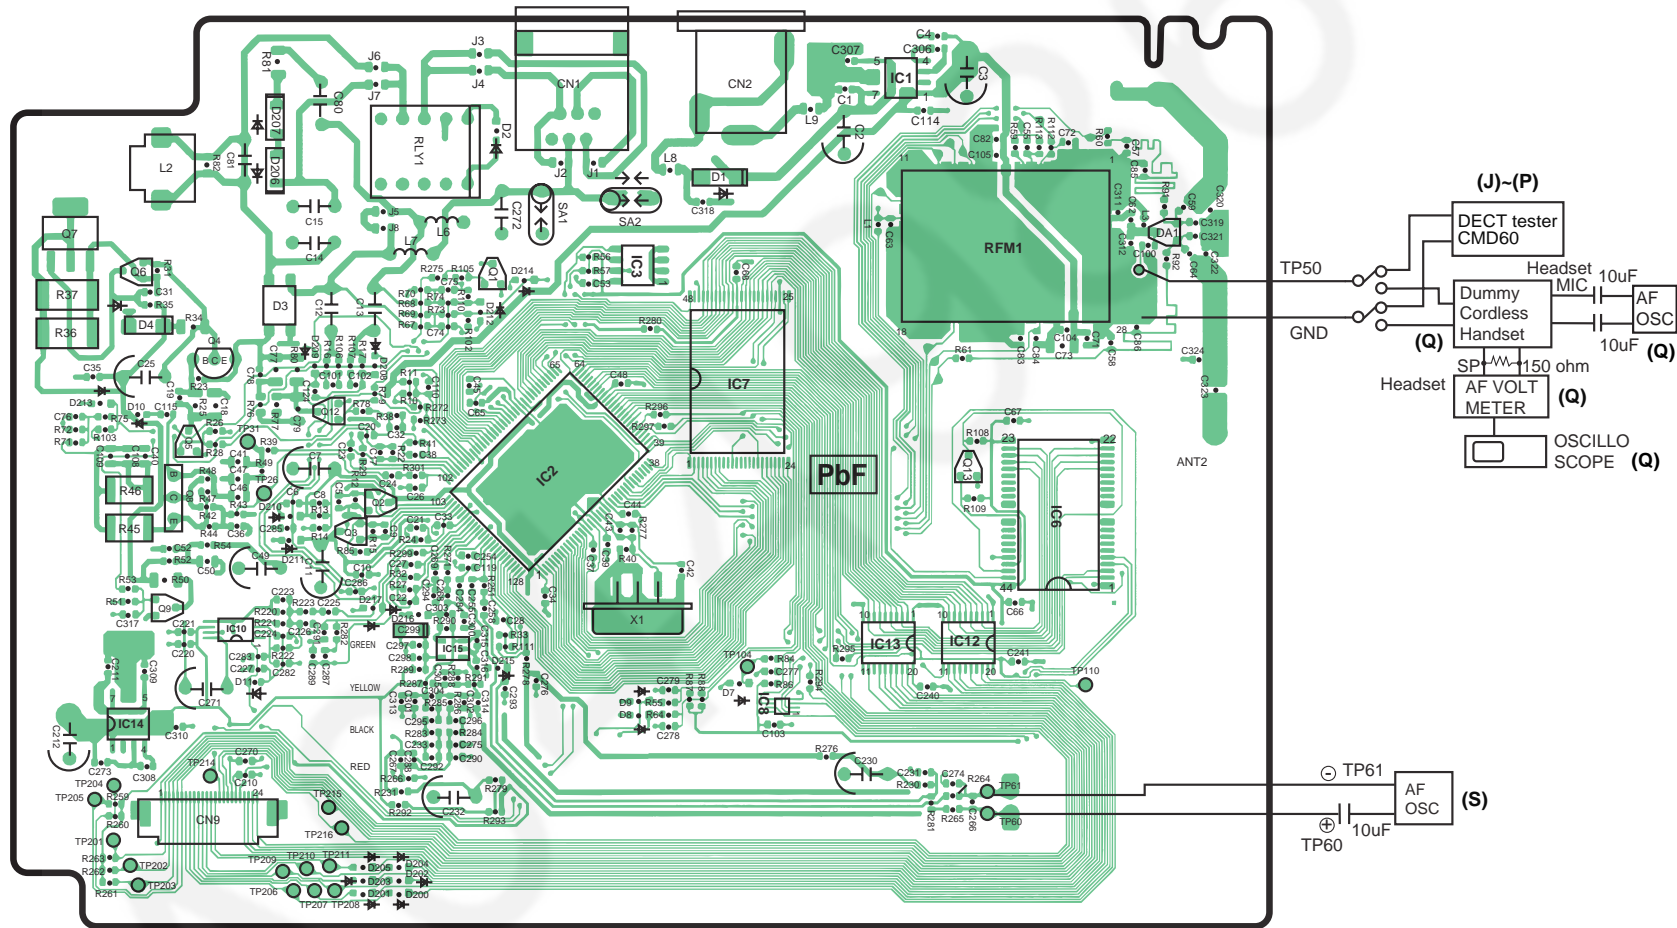

Note:

(J) - (P) is referred to ADJUSTMENTS (BASE UNIT AND CHARGER UNIT) (P.59)

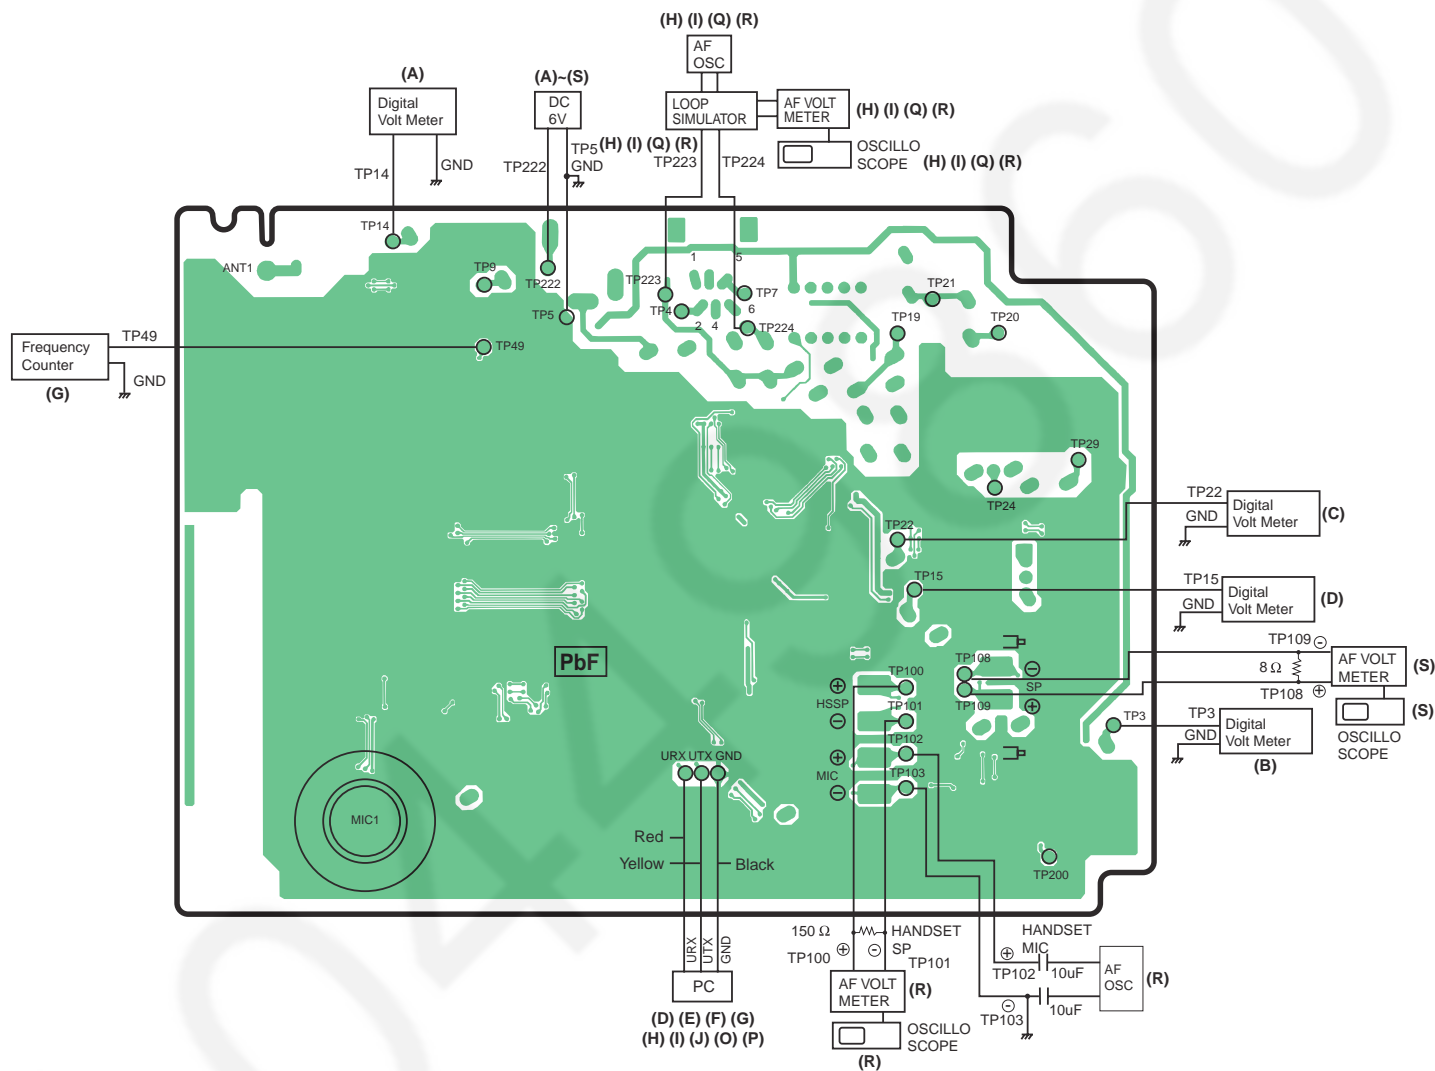

(A) - (S) is referred to **ADJUSTMENTS (BASE UNIT AND CHARGER UNIT)** (P.59)



### 13.3. Adjustment (Charger Unit)

	Items	Adjustment Point	Procedure	Check or Replace Parts
(A)	Charging Check	-	1. Connect Charge Contact 12Ω/2W register between charge+ and charge-. 2. Measure and confirm voltage across the register is $2.7V \pm 0.2V$ .	D1,R1,R2

**Note:**


After the measuring, sock up the solder of TP.

The connection of adjustment equipment are as shown in **Adjustment Standard (Charger Unit)** (P.65).

### 13.4. Adjustment Standard (Charger Unit)

When connecting the Simulator Equipments for checking, please refer to below.

#### 13.4.1. Flow Solder Side View

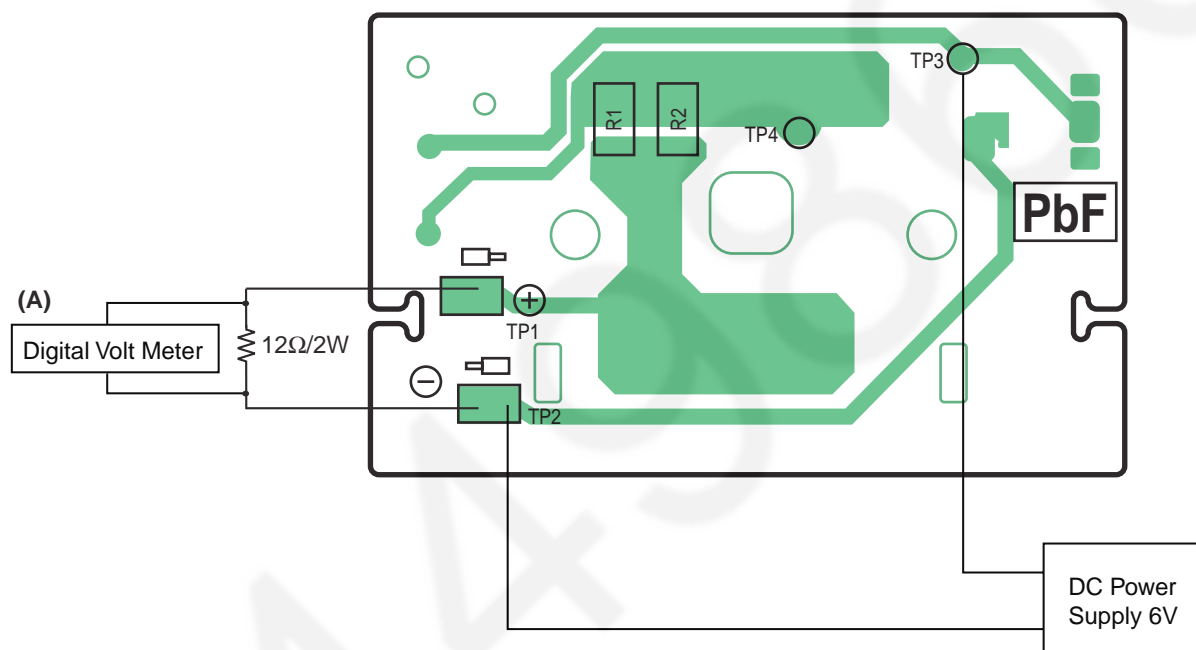

**Note:**

(A) is referred to **ADJUSTMENTS (BASE UNIT AND CHARGER UNIT)** (P.59)

# 14 ADJUSTMENTS (CORDLESS HANDSET)

If your unit has below symptoms, adjust or confirm each item using remedy column from the table.

Symptom	Remedy*
The movement of Battery Low indicator is wrong.	Make adjustments in item (A)~(D), (G), (H).
The cordless handset does not respond to a call from base unit.	Make adjustments in item (A)~(D), (I)~(P).
The cordless handset does not transmit or the transmit frequency is off.	Make adjustments in item (A)~(D), (I)~(L), (M), (O).
The transmit frequency is off.	Make adjustments in item (A)~(D), (I)~(L), (M), (O).
The transmit power output is low, and the operating distance between base unit and cordless handset is less than normal.	Make confirmation in item (J), (N).
The reception sensitivity of base unit is low with noise.	Make confirmation in item (N).
Does not link between base unit and cordless handset.	Make adjustments in item (A)~(D), (I)~(P).
The Audio level is high or low.	Make confirmation in item (R).
The SP-Phone level is high or low.	Make confirmation in item (S).
The cordless Headset level is high or low.	Make confirmation in item (T).

\* : Refer to **Adjustment (Cordless Handset)** (P.66)

## 14.1. Adjustment (Cordless Handset)

Please follow the items below when BBIC or EEPROM is replaced.

	Items	Adjustment Point	Procedure	Check or Replace Parts						
(A)*	1.8V Supply Confirmation	TP12	1. Confirm that the voltage between test point "TP12" and GND is 1.8V ± 0.02V. 2. Adjust the 1.8V voltage of TP12 executing command "bandgap XX" (XX is the value).	IC1, Q2, C40, R4						
(B)	4.0V Supply Confirmation	TP10	1. Confirm that the voltage between "TP10" and GND is 3.85V ± 0.2V.	IC1, F1, C1, C2, C3, C57, C74, R1, R2, R3, Q1, D1, L1, R57						
(C)	2.7V Supply Confirmation	TP11	1. Confirm that the voltage between "TP11" and GND is 2.7V ± 0.1V.	IC1, Q3, C4, C5, R9, R10, R11						
(D)*	BBIC Confirmation	-	1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value. Connection of checksum value and program number is shown below. ex.) <table><tr><td>checksum value</td><td>program number</td></tr><tr><td>6458</td><td>D312ZE</td></tr><tr><td>5DC4</td><td>D312ZH</td></tr></table>	checksum value	program number	6458	D312ZE	5DC4	D312ZH	IC1, X1, C7
checksum value	program number									
6458	D312ZE									
5DC4	D312ZH									
(E)	Charge Control Check & Charge Current Monitor Confirmation	-	1. Apply 6V between J3(+) and J4(-) with current limit of PSU to 200mA. 2. Confirm that the charge current is ON/OFF. 3. SW to decrease current limit of PSU to 100mA. 4. Confirm that the charge current is stable.	IC1, Q4, Q5, Q9, D6, D7, L4, L5, C73, C74, R5, R6, R7, R72, F1						
(F)*	Charge Detection (OFF) Confirmation	-	1. Stop supplying 6V to J3(+) and J4(-). 2. Execute the command "charge". 3. Confirm that the returned value is 0x01 (hex).	IC1, Q4, Q5, Q9, D6, D7, L4, L5, C73, C74, R5, R6, R7, R72, F1						
(G)*	Battery Monitor Confirmation & Adjustment	-	1. Apply 2.3V ± 0.005V between BATT(+) and BATT(-). 2. Execute the command "Backloff", then "readbatt". 3. Confirm: 29 ≤ returned value ≤ 36 (Hex) (If the returned value is within the range, no need to do step 4.) 4. If the reading is out of range in step 3 above, adjust the battery monitor excuting command "wreeprom 00 01 01 XX". (XX is the reading at step 3.) Then excute command "wreeprom 00 36 01 YY". (YY can be confirmed by the following calculation; YY = XX - 0E)	IC1,F1, C74,C2, C3,R81,R24, R73,C9						
(H)	Battery low Confirmation	-	1. Apply 2.40V between BATT(+) and BATT(-). 2. Confirm that there is no flashing of Battery Icon. 3. Apply 2.20V between BATT(+) and BATT(-). 4. Confirm that there is flashing of Battery Icon.	IC1, F1, C74, C2, C3, R81, R24, R73, C9						

	Items	Adjustment Point	Procedure	Check or Replace Parts
(I)*	BBIC Clock Adjustment	CLK	1. Execute the command "contx". 2. Input Command "rdeeprom 00 57 01", then you can confirm the current value. 3. Adjust the frequency of CLK executing the command "setfreq xx (where xx is the value)" so that the reading of the frequency counter is 10.368000MHz $\pm$ 10Hz. Note: CLK is displayed only for a few seconds when executing the command "contx" after battery is inserted.	IC1, X1, IC3, C7, L2, C54
(J)*	Transmitted Power Confirmation	-	Remove the Antenna before starting step from 1 to 4. 1. Configure the DECT tester (CMD60) as follows; <Setting> <ul style="list-style-type: none"> <li>• Test mode: PP</li> <li>• RFPI: 0102030408</li> <li>• Traffic Carrier: 5</li> <li>• Traffic Slot: 4</li> <li>• Mode: Loopback</li> <li>• RF LEVEL = -70dBm</li> </ul> 2. Execute the command "regcmd60 01 02 03 04 08". 3. Initiate connection from DECT tester. 4. Confirm that the NTP value at A201 (TP15) is 20dBm ~ 25dBm.	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76
(K)*	Modulatoion Check and Adjusment	-	Follow steps 1 to 3 of (J) above. 4. Confirm that the B-Field Modulation is 360kHz/div ~ 380kHz/div using data type Fig 31. 5. Adjust the B-Field Modulation if required. (Execute the command "Readmod" and "wrtmod xx", where xx is the value.)	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76
(L)	Frequency Offset Confirmation	-	Follow steps 1 to 3 of (J) above. 4. Confirm that the frequency Offset is < $\pm$ 50kHz.	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76
(M)	Frequency Drift Confirmation	-	Follow steps 1 to 3 of (J) above. 4. Confirm that the frequency Drift is < $\pm$ 30kHz/ms.	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76
(N)	Sensitivity Receiver Confirmation	-	Follow steps 1 to 3 of (J) above. 4. Set DECT tester power to -88dBm. 5. Confirm that the BER is < 1000ppm.	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76

	Items	Adjustment Point	Procedure	Check or Replace Parts
(O)	Timing Confirmation	-	Follow steps 1 to 3 of (J) above. 4. Confirm that the Timing accuracy is $< \pm 0.5\text{ppm}$ .	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76
(P)*	RSSI Level Confirmation	-	Follow steps 1 to 3 of (J) above. 4. Set DECT tester power to -81dBm. 5. Execute the command "readrssi". 6. Confirm that the returned value is 0x09 ~ 0x19 (hex). 7. Set DECT tester power to -63dBm. 8. Execute the command "readrssi". 9. Confirm that the returned value is 0x16 ~ 0x26 (hex).	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76
(Q)	Power RAMP Confirmation	-	Follow steps 1 to 3 of (J) above. 4. Confirm that Power RAMP is matching.	IC1, IC3, L2, C54, C60, C61, C62, C63, C64, C65, C66, C67, C69, C81, C82, C56, R58, R55, R76
(R)	Audio Check and confirmation	-	1. Link to BASE which is connected to Line Simulator. 2. Set line voltage to 48V and line current to 40mA. 3. Input -45dBm/1KHz to MIC and measure Line output level. 4. Confirm that the level is -10dBm $\pm$ 5dB and confirm that the distortion level is $< 5\%$ at TEL Line(600 $\Omega$ Road). 5. Input -20dBm/1KHz to Line I/F and measure Receiving level at REV1 and REV2. 6. Confirm that the level is -23dBm $\pm$ 5dB and confirm that the distortion level is $< 5\%$ at Receiver(Volume Middle, 150 $\Omega$ Road).	IC1, IC2, C68, C37, C90, C91, R25, R26, C12, C87, C10, R29, C89, C17, R37, R38, R80, C92, C13, R35, C15, C16, D8, C86, C75, C77, C38, C80, R74, R36
(S)	SP phone Audio check and confirmation	-	1. Link to Base which is connected to Line Simulator. 2. Set line voltage to 48V and line current to 40mA. 3. Set the handset off-hook using SP-Phone key. 4. Input -45dBm/1KHz to MIC and measure Line output level. 5. Confirm that the level is -6dBm $\pm$ 1.5dB and confirm that the distortion level is $< 5\%$ . 6. Input -20dBm/1KHz to Line I/F and measure Receiving level at SP1 and SP2. 7. Confirm that the level is -6.5dBm $\pm$ 1.5dB and confirm that the distortion level is $< 5\%$ .	IC1, IC2, C68, C37, C90, C91, R25, R26, C12, C87, C10, R29, C89, C17, R37, R38, R80, C92, C13, R35, C15, C16, D8, C86, C75, C77, C38, C80, R74, R36
(T)	Headset Audio check and confirmation	-	1. Link to BASE which is connected to Line Simulator. 2. Set line voltage to 48V and line current to 40mA. 3. Input -45dBm/1kHz across Mic terminals on headset cable. 4. Confirm that the level is -15dBm $\pm$ 5dB and confirm that the distortion level is $< 5\%$ . 5. Input -20dBm/1kHz to Line I/F. 6. Confirm that the level is -24dBm $\pm$ 5dB and confirm that the distortion level is $< 5\%$ . (SP terminals on headset cable is load of 150 $\Omega$ )	IC1, IC2, CN4, R50, R71, R75, C42, D4, D5, R29, R25

	Items	Adjustment Point	Procedure	Check or Replace Parts
(U)*	EEP-ROM confirmation	-	Program number is D312ZE. 1. EEP-ROM Confirmation (Execute the command "chk151AXRv02.bat"). 2. Confirm the returned checksum value (checksum is 7546).  Program number is D312ZH. 1. EEP-ROM Confirmation (Execute the command "chk151AXRv04.bat"). 2. Confirm the returned checksum value (checksum is 753E).	IC10, IC1, R39, R40

**Note:**


After the measuring, sock up the solder of TP.

\* : **PC Setting** (P.58) is required beforehand.

The connection of adjustment equipment are as shown in **Adjustment Standard (Cordless Handset)** (P.70).

## 14.2. Adjustment Standard (Cordless Handset)

When connecting the Simulator Equipments for checking, please refer to below.

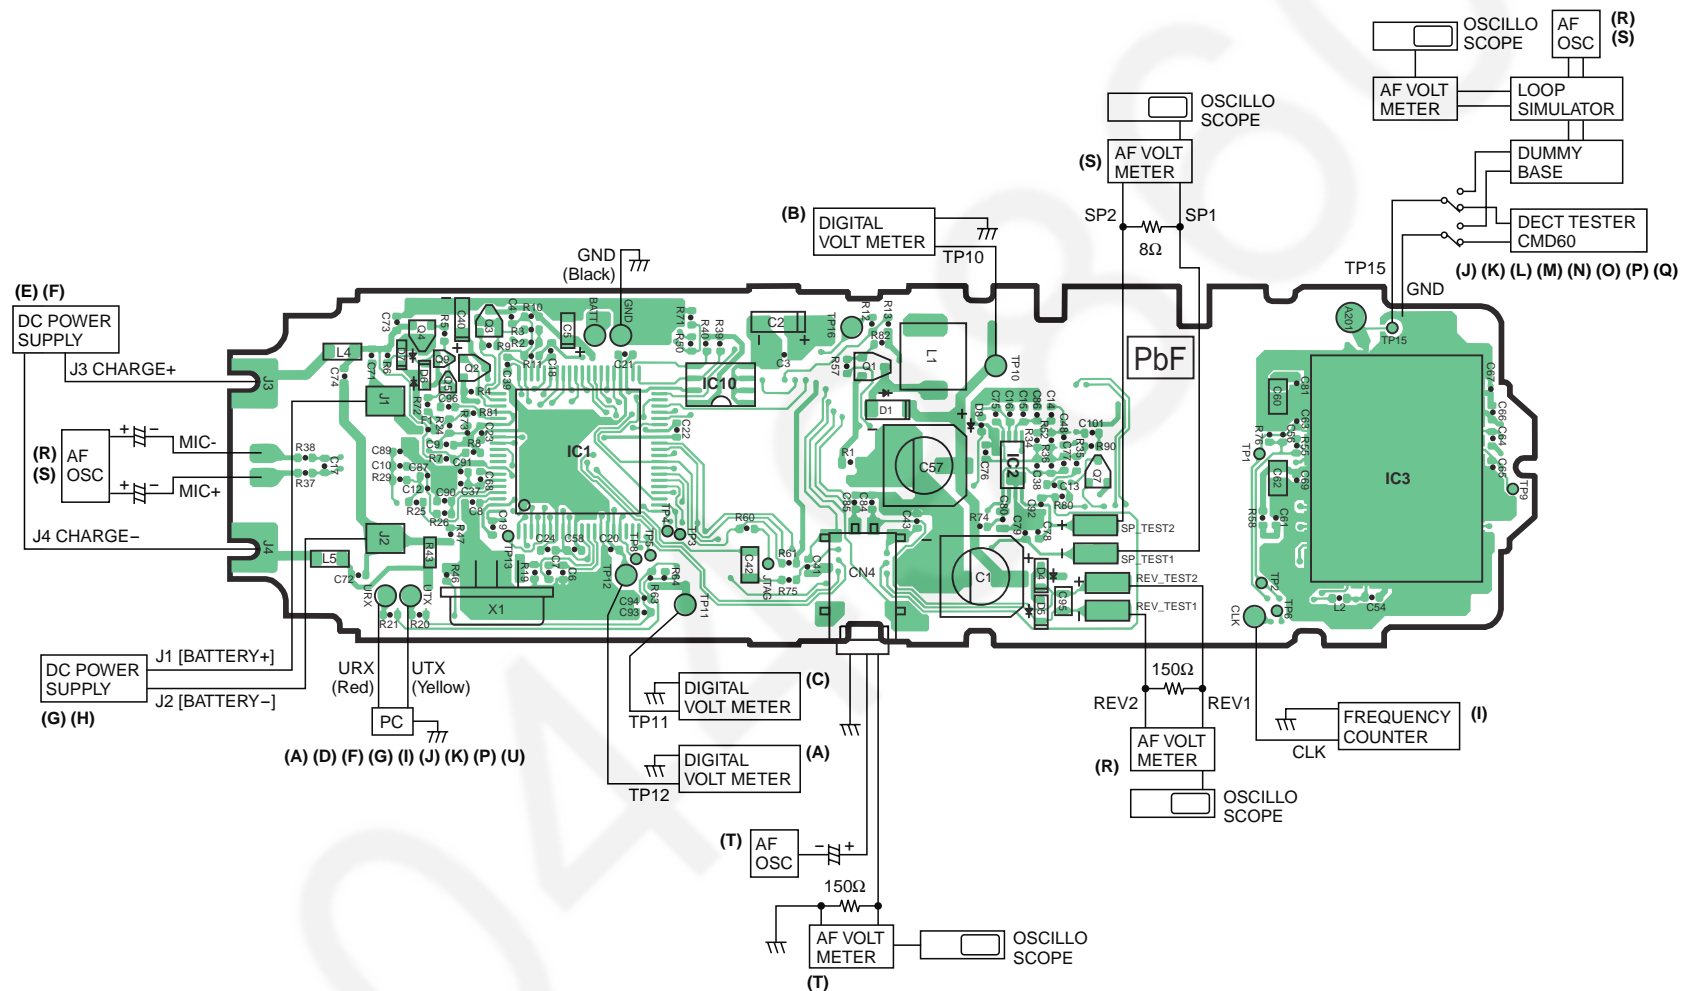

### Note:

(A) - (U) is referred to **ADJUSTMENTS (CORDLESS HANDSET)** (P.66)

## 15 RF SPECIFICATION

### 15.1. Base Unit

Item	Value	Refer to -. *	Remarks
TX Power	20 dBm ~ 25 dBm	<b>Adjustment (Base Unit) (I)</b>	
Modulation	360 kHz/div ~ 380 kHz/div	<b>Adjustment (Base Unit) (J)</b>	Data type: Fig31
Frequency Offset	-50 kHz ~ +50 kHz	<b>Adjustment (Base Unit) (K)</b>	
RX Sensitivity	< 1000 ppm	<b>Adjustment (Base Unit) (M)</b>	
Timing Accuracy	-2.0 ppm ~ +2.0 ppm	<b>Adjustment (Base Unit) (N)</b>	
RSSI Level	0x11 (hex) ~ 0x25 (hex)	<b>Adjustment (Base Unit) (O)</b>	

\* : Refer to **Adjustment (Base Unit)** (P.59)


### 15.2. Cordless Handset

Item	Value	Refer to -. **	Remarks
TX Power	20 dBm ~ 25 dBm	<b>Adjustment (Cordless Handset) (J)</b>	
Modulation	360 kHz/div ~ 380 kHz/div	<b>Adjustment (Cordless Handset) (K)</b>	Data type: Fig31
Frequency Offset	-50 kHz ~ +50 kHz	<b>Adjustment (Cordless Handset) (L)</b>	
Frequency Drift	< $\pm 30$ kHz / ms	<b>Adjustment (Cordless Handset) (M)</b>	
RX Sensitivity	< 1000 ppm	<b>Adjustment (Cordless Handset) (N)</b>	
Timing Accuracy	< $\pm 0.5$ ppm	<b>Adjustment (Cordless Handset) (O)</b>	
RSSI Level	0x09 (hex) ~ 0x19 (hex) (at -81dBm) 0x16 (hex) ~ 0x26 (hex) (at -63dBm)	<b>Adjustment (Cordless Handset) (P)</b>	
Power RAMP	Power RAMP is matching	<b>Adjustment (Cordless Handset) (Q)</b>	

\*\* : Refer to **Adjustment (Cordless Handset)** (P.66)

## 16 HOW TO CHECK THE CORDLESS HANDSET AND BASE UNIT SPEAKER

1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
2. Put the probes at the speaker terminals as shown below.

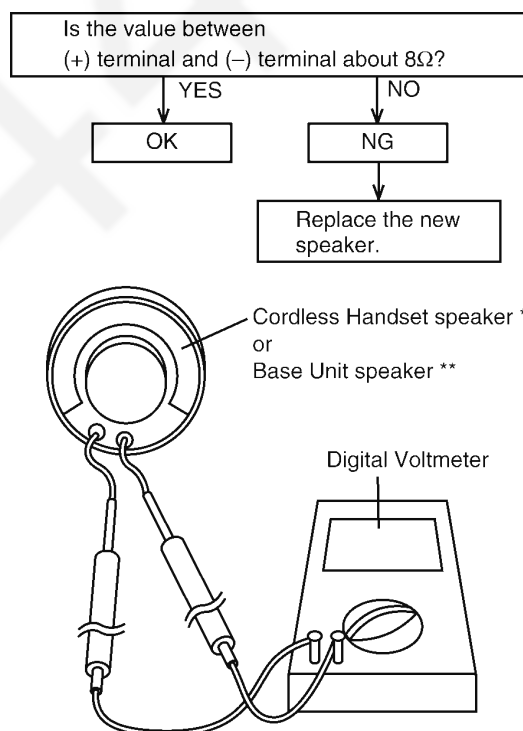



**Note:**

\* : Refer to **Cabinet and Electrical Parts** (P.102) of Cordless Handset replacement part lists.

\*\* : Refer to **Cabinet and Electrical Parts** (P.100) of Base Unit replacement part lists.

## 17 HOW TO CHECK THE CORDLESS HANDSET RECEIVER

1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
2. Put the probes at the receiver terminals as shown below.

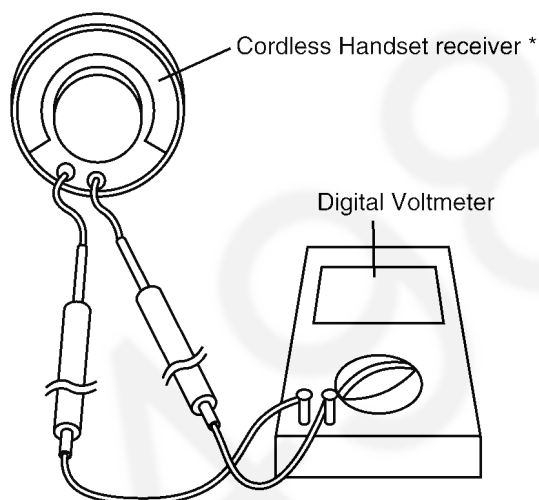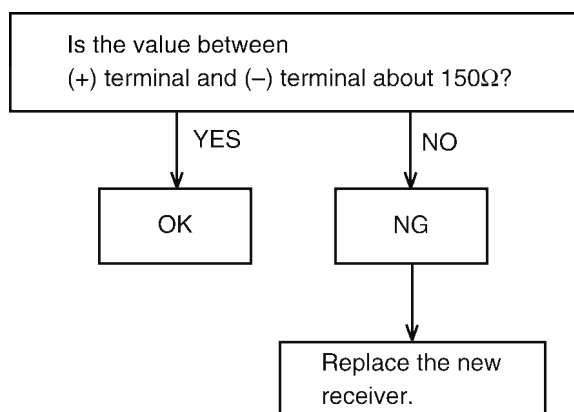

**Note:**

\* : Refer to **Cabinet and Electrical Parts** (P.102) of cordless Handset replacement part lists.




## 18 FREQUENCY TABLE (MHz)

Channel No	BASE UNIT		CORDLESS HANDSET	
	Transmit Frequency	Receive Frequency	Transmit Frequency	Receive Frequency
1	1897.344	1897.344	1897.344	1897.344
2	1895.616	1895.616	1895.616	1895.616
3	1893.888	1893.888	1893.888	1893.888
4	1892.160	1892.160	1892.160	1892.160
5	1890.432	1890.432	1890.432	1890.432
6	1888.704	1888.704	1888.704	1888.704
7	1886.976	1886.976	1886.976	1886.976
8	1885.248	1885.248	1885.248	1885.248
9	1883.520	1883.520	1883.520	1883.520
10	1881.792	1881.792	1881.792	1881.792

**Note:**

**Channel No. 10:** In the Test Mode on Base Unit and Cordless Handset.

# 19 BLOCK DIAGRAM (BASE UNIT)

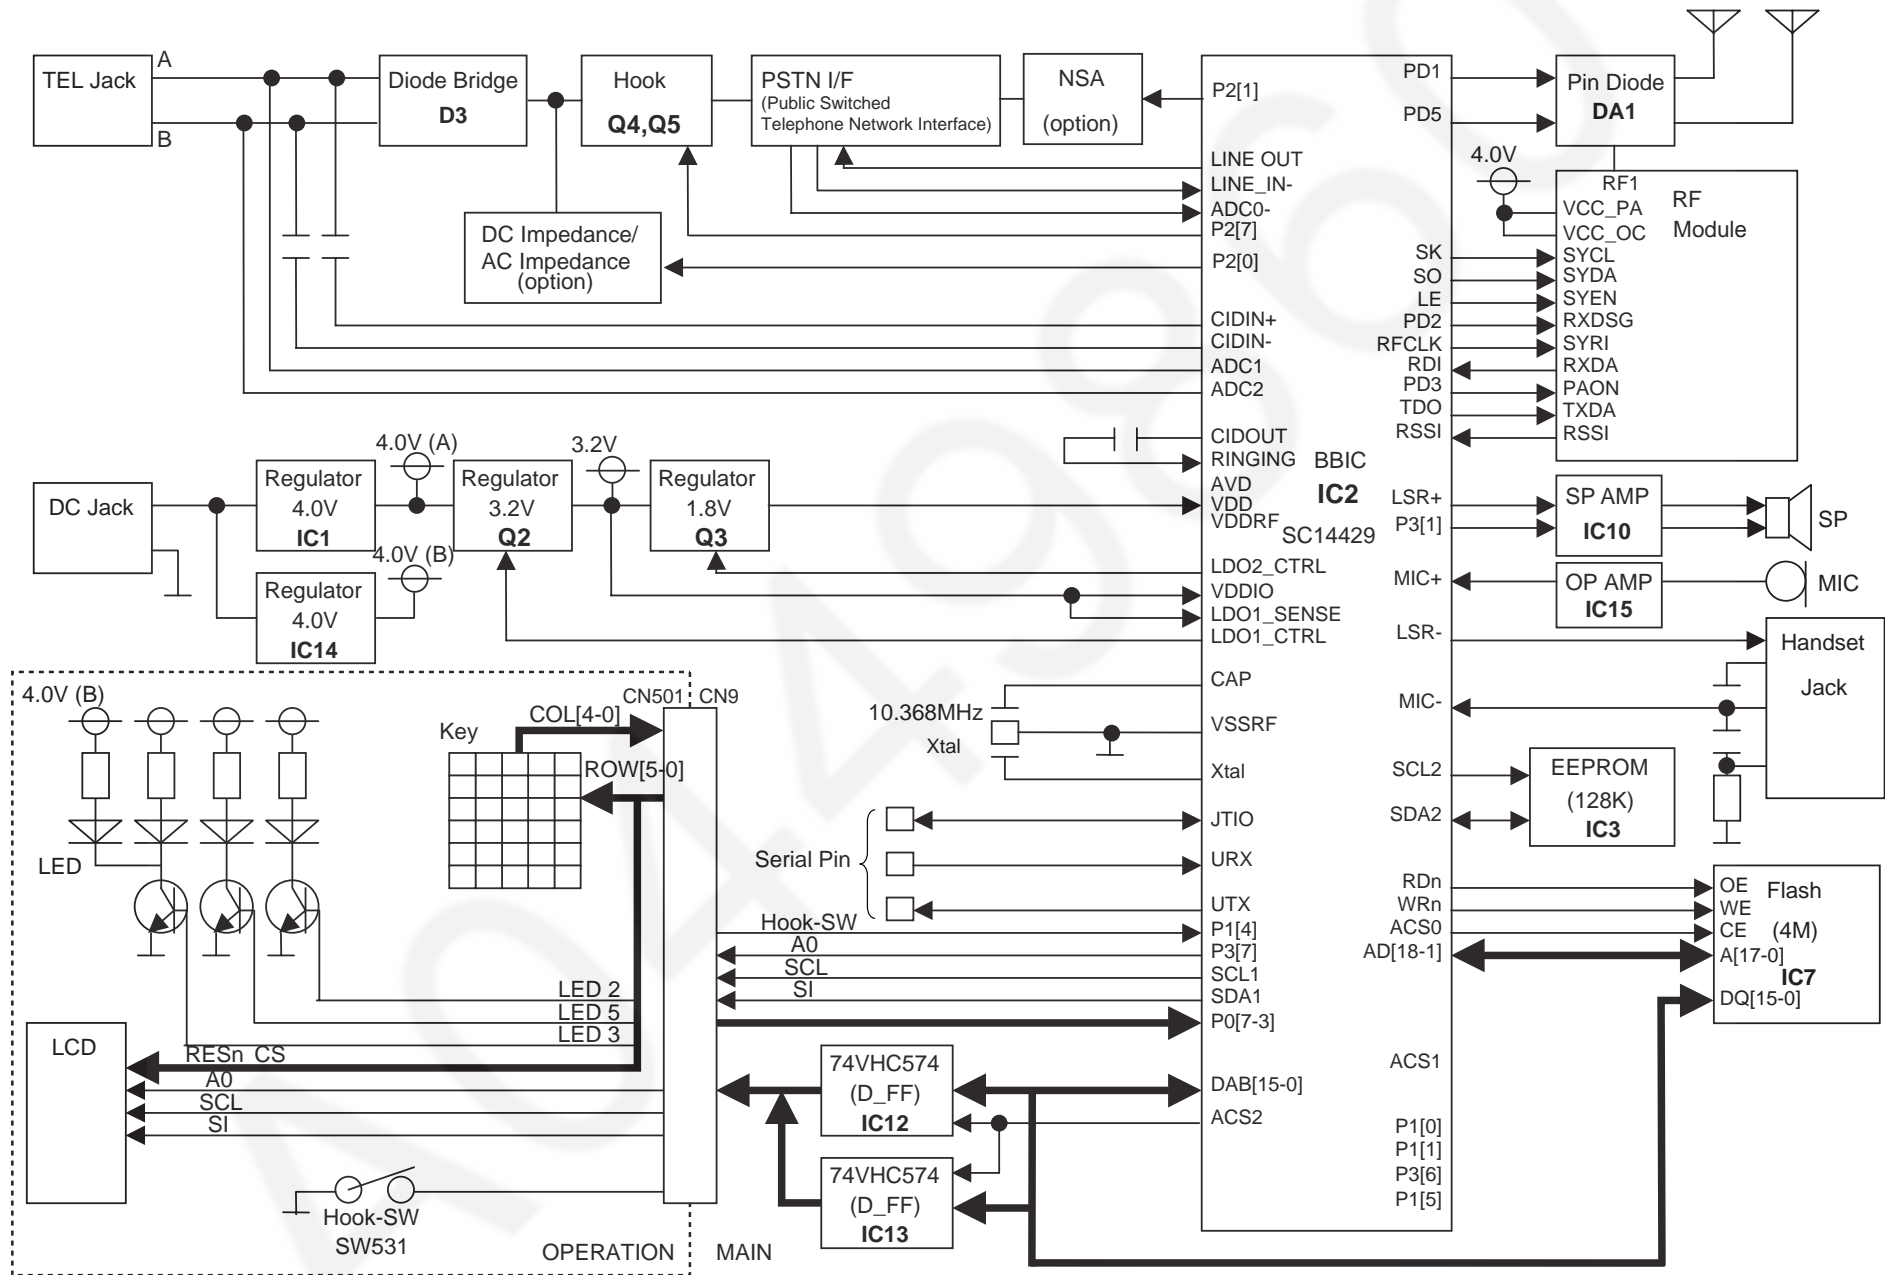

KX-TCD530AXM BLOCK DIAGRAM (BASE UNIT)

## 20 CIRCUIT OPERATION (BASE UNIT)

### 20.1. Outline

Base Unit consists of the following ICs as shown in **BLOCK DIAGRAM (BASE UNIT)** (P.74).

- DECT BBIC (**B**ase **B**and IC): IC2
  - Handling all the audio, signal and data processing needed in a DECT base unit
  - Controlling the DECT specific physical layer and radio section (**B**urst **M**odule **C**ontroller section)
  - ADPCM codec filter for speech encoding and speech decoding (DSP section)
  - Echo-cancellation and Echo-suppression (DSP section)
  - Any tones (tone, sidetone, ringing tone, etc.) generation (DSP section)
  - DTMF receiver (DSP section)
  - Clock Generation for RF Module
  - ADC, DAC, timer, and power control circuitry
  - All interfaces (ex: RF module, EEPROM, LED, Analog Front End, etc.)
- RF Module: RFM1
  - PLL Oscillator
  - Detector
  - Compress/Expander
  - First/Second Mixer
  - Amplifier for transmission and reception
- FLASH MEMORY: IC7
  - Program D/L (DownLoad) Area
- EEPROM: IC3
  - Temporary operating parameters (for RF, etc.)


Refer to **EEPROM LAYOUT (BASE UNIT)** (P.86).

- Additionally,
  - Power Supply Circuit (+4.0V (A), +3.2V, +1.8V output)
  - Crystal Circuit (10.368MHz)
  - Telephone Line Interface Circuit
  - SP Phone Circuit
  - Curl Cord Handset Interface Circuit

## 20.2. Power Supply Circuit

The power is supplied to the DECT BBIC, RF Module, EEPROM, SP AMP, LED from AC Adaptor (+6V) as shown in Fig.101. The power supply is as follows;

- DECT BBIC (IC2): CN2(+6V) → L8 → D1 → IC1 → Q2 → IC2
- RF Module (RFM1): CN2(+6V) → L8 → D1 → IC1 → RF Module
- EEPROM (IC3): CN2(+6V) → L8 → D1 → IC1 → Q2 → IC3
- Flash Memory (IC7): CN2(+6V) → L8 → D1 → IC1 → Q2 → IC7
- SP AMP (IC10): CN2(+6V) → L8 → D1 → IC14 → IC10
- Logic IC (IC12, IC13): CN2(+6V) → L8 → D1 → IC1 → Q2 → IC12, IC13
- LCD (CN502): CN2(+6V) → L8 → D1 → IC1 → Q2 → CN9 → CN501 → CN502(LCD)
- LED (LED501, LED502, LED503, LED504): CN2(+6V) → L8 → D1 → IC14 → CN9 → CN501 → LED
- OP AMP (IC15): CN2(+6V) → L8 → D1 → IC14 → IC15

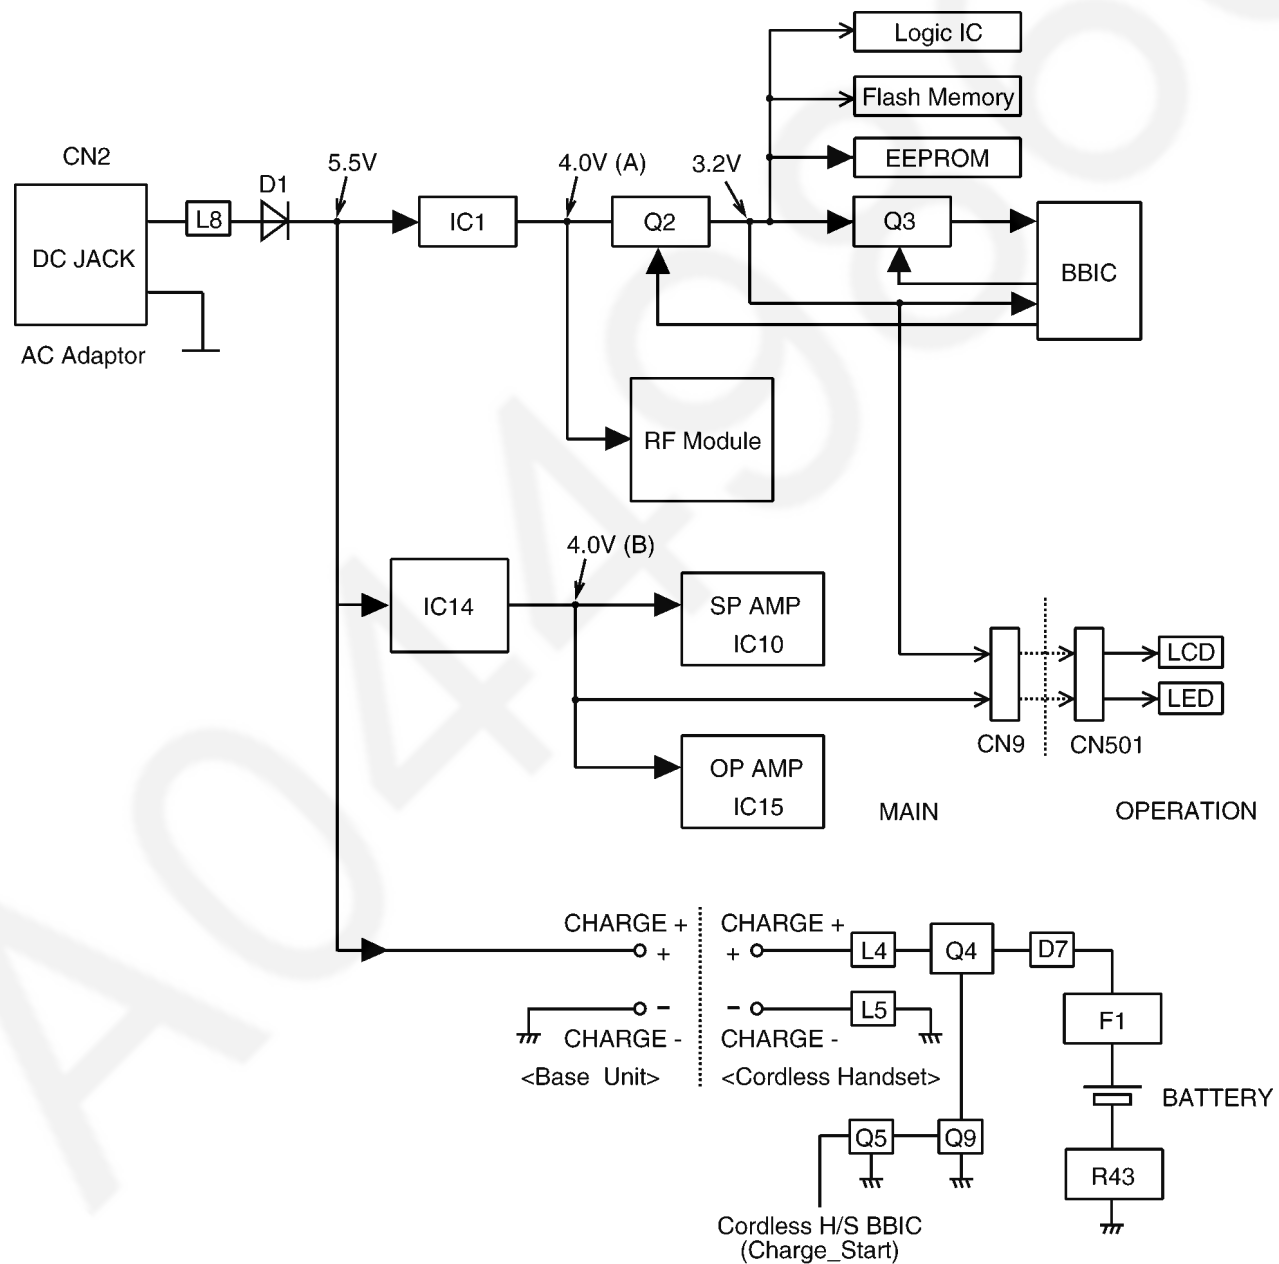

<Fig.101>

## 20.3. Telephone Line Interface

### <Function>

- Bell signal detection
- Clip signal detection
- ON/OFF hook circuit
- Audio circuits

### Bell & Clip (: Calling Line Identification Presentation: Caller ID) signal detection:

In the standby mode, Q4 is open to cut the DC loop current and decrease the ring load.

When ring voltage appears at the TP21 (A) and TP19 (B) leads (when the telephone rings), the signal is transferred as follows;

- A → C13 → R17 → R24 → IC2 Pin 107 (CID IN +)
- B → C12 → R16 → R32 → IC2 Pin 112 (CID IN -)

### ON/OFF hook circuit:

In the standby mode, Q4 is open, and connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an **on-hook condition**.

When IC2 detects a ring signal or press SP Key or pick up Curl Cord Handset or press the TALK Key onto the handset, Q5 turns on and then Q4 turns on, thus providing an **off-hook condition** (active DC current flow through the circuit) and the following signal flow is for the loop current.

- A → D3 → Q4 → R34 → Q8 → R45 → R46 → D3 → B [OFF HOOK]

## 20.4. Transmitter/Receiver

Base Unit and Cordless Handset mainly consist of RF Module and DECT BBIC.

Base Unit and Cordless Handset transmit/receive voice signal and data signal through the antenna on carrier frequency.

### Signal Pass:

\*Refer to **SIGNAL ROUTE** (P.81).

### 20.4.1. Transmitter Block

The voice signal input from the TEL LINE interface goes to RF Module (RFM1) through DECT BBIC (IC2) as shown in **BLOCK DIAGRAM (BASE UNIT)** (P.74)

The voice signal passes through the analog part of IC2 where it is amplified and converted to a digital audio stream signal. The burst switch controller processes this stream performing encryption and scrambling, adding the various other fields to produce the GAP (**Generic Access Profile**) standard DECT frame, assigning to a time slot and channel etc.

In RFM1, the carrier frequency is changing, and frequency modulated RF signal is generated and amplified, and radiated from antenna. Cordless Handset detects the voice signal or data signal in the circuit same as the following explanation of Receiver Block.

### 20.4.2. Receiver Block


The signal of 19.2 MHz band (18.81792 MHz ~ 18.97344 MHz) which is input from antenna is input to RFM1 as shown in **BLOCK DIAGRAM (BASE UNIT)** (P.74).

In RFM1, the signal of 19.2 MHz band is downconverted to 864 kHz signal and demodulated, and goes to IC2 as GAP (**Generic Access Profile**) standard DECT frames. It passes through the decoding section burst switch controller where it separates out the frame information and performs de-encryption and de-scrambling as required. It then goes to the DSP section where it is turned back into analog audio. This is amplified by the analog front end, and goes to the TEL LINE Interface.

## 20.5. Pulse Dialing

During pulse dialing the hookswitch (Q4, Q5) is used to generate the pulses using the HOOK control signal, which is set high during pulses. To force the line impedance low during the "pause" intervals between dial pulses, the PULSE\_DIAL signal turns on Q9.

## 21 BLOCK DIAGRAM (CORDLESS HANDSET)

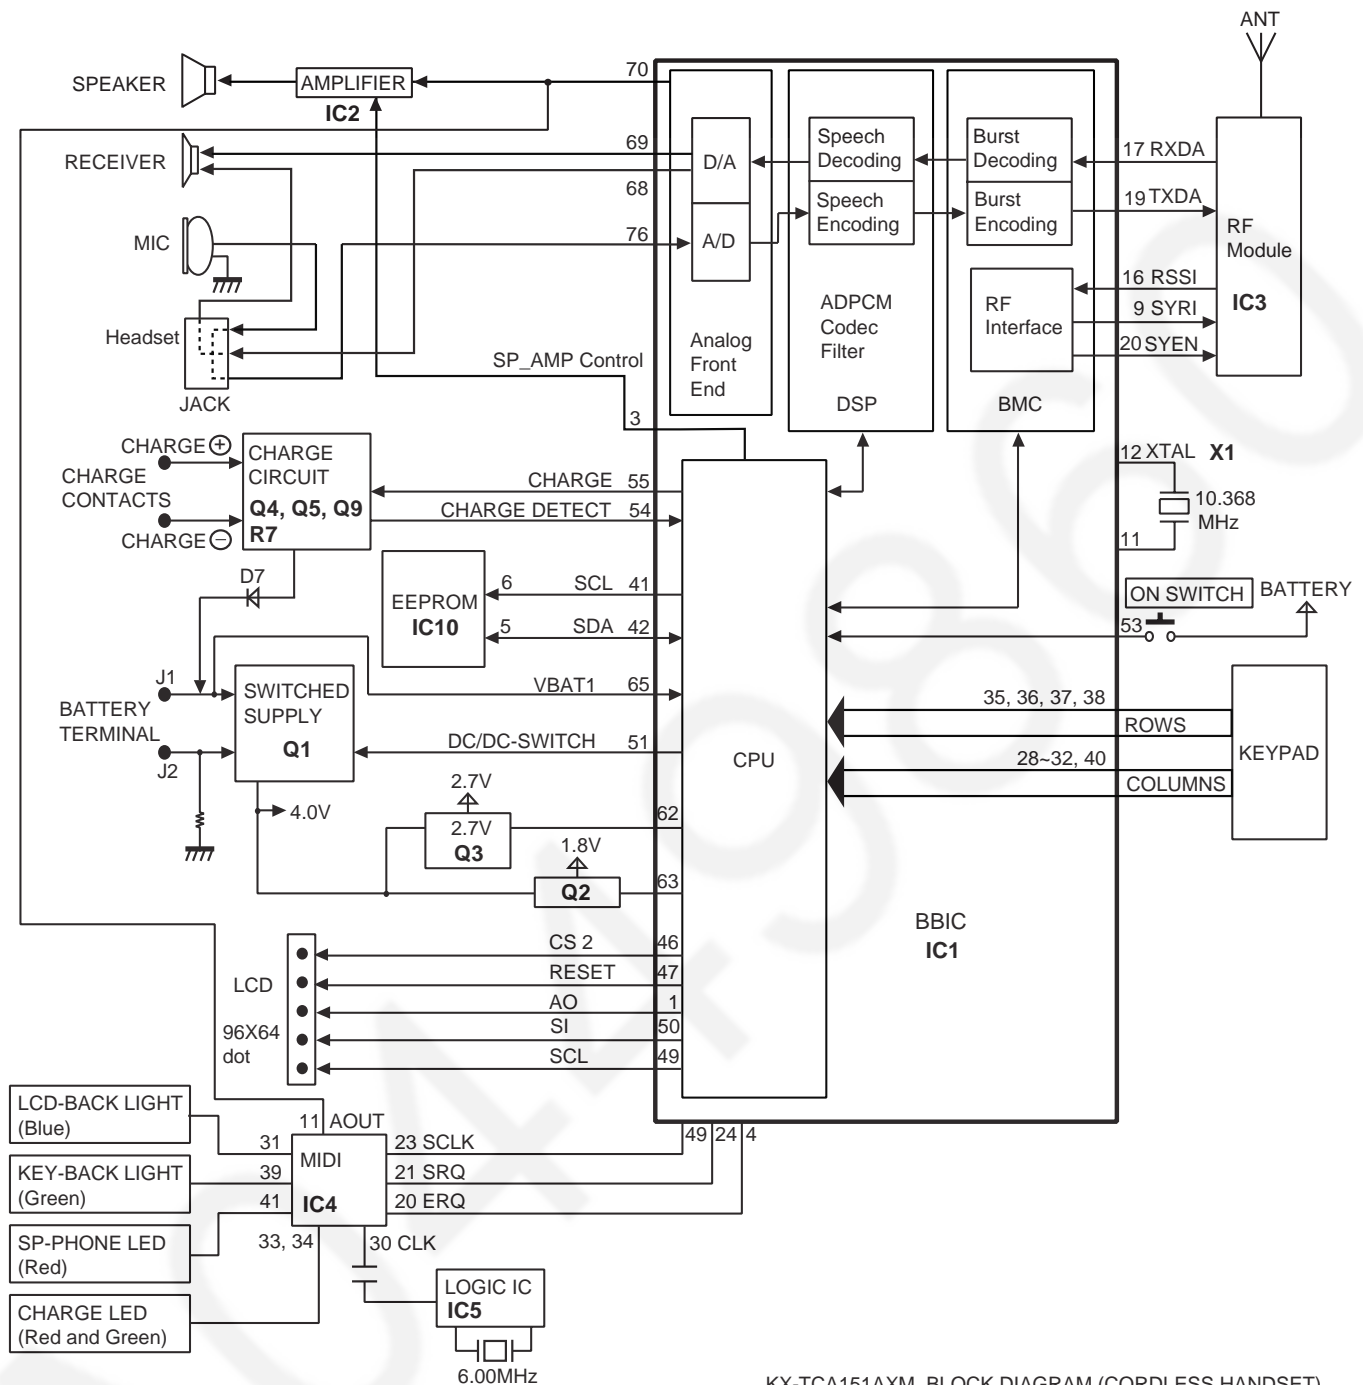

KX-TCA151AXM BLOCK DIAGRAM (CORDLESS HANDSET)

## 22 CIRCUIT OPERATION (CORDLESS HANDSET)

### 22.1. Outline

Cordless Handset consists of the following ICs as shown in **BLOCK DIAGRAM (CORDLESS HANDSET)** (P.78).

- DECT BBIC (**B**ase **B**and IC): IC1
  - All data signals (forming/analyzing ACK or CMD signal)
  - All interfaces (ex: Key, Detector Circuit, Charge, DC/DC Converter, EEPROM, LCD)
- RF Module: IC3
  - PLL Oscillator
  - Detector
  - Compress/Expander
  - Amplifier for transmission and reception
- AMP: IC2
  - Single OP\_AMP for SP
- MIDI (**M**usical **I**nstrument **D**igital **I**nterface): IC4
  - 16-Tone 32-Poly PCM Sound Generator
  - Port (LED direct driver with PWM)
- EEPROM: IC10
  - Temporary operating parameters (for RF, etc.)

Refer to **EEPROM LAYOUT (CORDLESS HANDSET)** (P.91).

### 22.2. Power Supply Circuit/Reset Circuit

#### Circuit Operation:

When power on the Cordless Handset, the voltage is as follows;

BATTERY(2.2 V ~ 2.6V: J1) → L1, D1, Q2 (1.8V) → Q3 (2.7V) → Q1 (4.0V)

The Reset signal generates IC1 (78) and 1.8V.

### 22.3. Charge Circuit

#### Circuit Operation:

When charging the cordless handset on the Base Unit, the charge current is as follows;

DC+(5.5V ~ 6V) → D1 → R4, R5 → CHARGE+(Base) → CHARGE+(Cordless Handset) → L4 → Q4 → D7 → F1 → BATTERY+  
... Battery ... BATTERY- → R43 → GND → CHARGE-(Cordless Handset) → CHARGE-(Base) → GND → DC-(GND)

In this way, the BBIC on Cordless Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q5 of Cordless Handset.

Refer to Fig.101 in **Power Supply Circuit** (P.76).

### 22.4. Battery Low/Power Down Detector

#### Circuit Operation:

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

- Battery Low

Battery voltage:  $V(\text{Batt}) \leq 2.3V \pm 50\text{mV}$

The BBIC detects this level and " " starts flashing.

- Power Down

Battery voltage:  $V(\text{Batt}) \leq 2.2V \pm 50\text{mV}$

The BBIC detects this level and power down.

Refer to **Adjustment (Cordless Handset)** (P.66).


### 22.5. Speakerphone and Headset Jack

The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm. IC2 is used to switch off the telephone loudspeaker and is used to amplify the signal to drive the hands-free loudspeaker. They are selected using the SP\_AMP line from pin 70 of the BBIC. 2.5mm headset jack is also available.

## 23 CIRCUIT OPERATION (CHARGER UNIT)


### 23.1. Power Supply Circuit

The power supply is as shown.

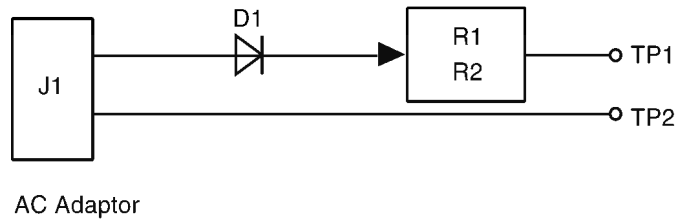



# 24 SIGNAL ROUTE

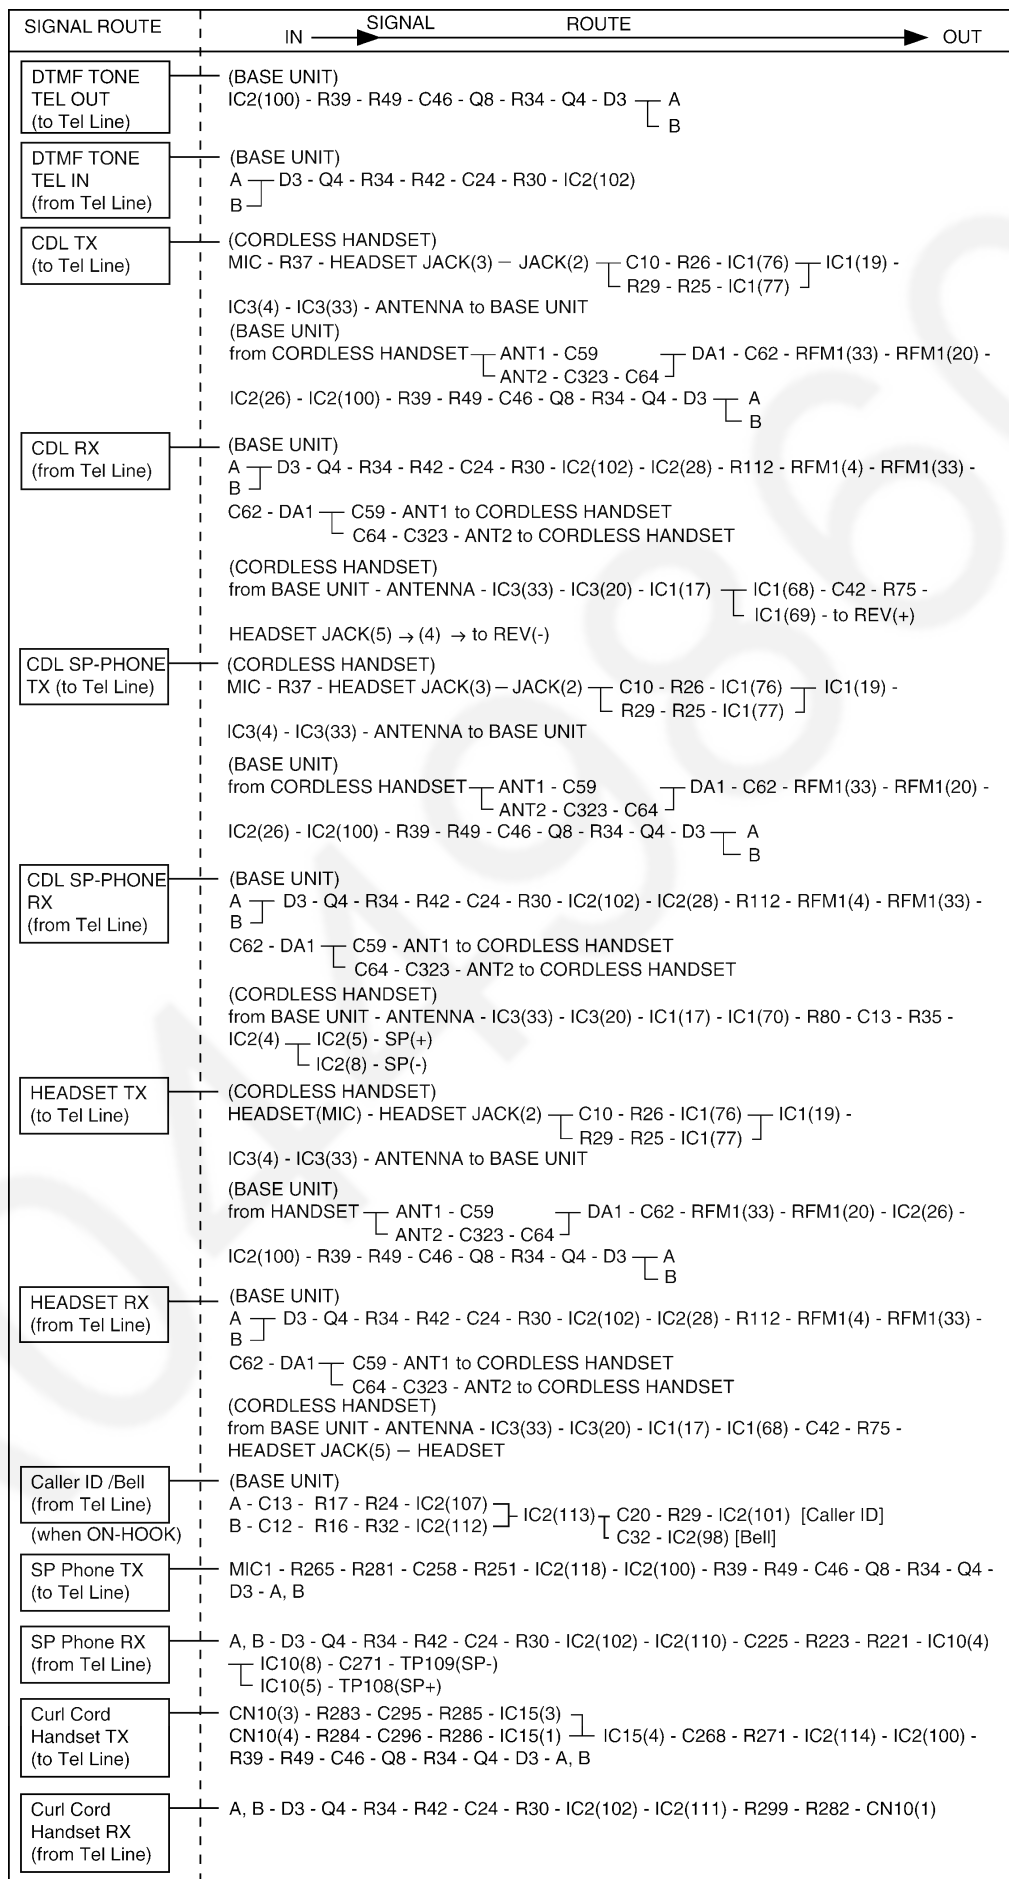

## 25 CPU DATA (BASE UNIT)

### 25.1. IC2 (BBIC)

Pin No	Description	I/O	Connection	at Normal mode	at Reset mode
1	VDDIO	-	VDDIO	-	-
2	VSS	-	VSS	-	-
3	AD8	D.O	AD8	O	O-Hi
4	AD9	D.O	AD9	O	O-Hi
5	AD10	D.O	AD10	O	O-Hi
6	AD11	D.O	AD11	O	O-Hi
7	AD12	D.O	AD12	O	O-Hi
8	AD13	D.O	AD13	O	O-Hi
9	AD14	D.O	AD14	O	O-Hi
10	P3[7]/PD7	D.O	P3[7]	O	O-Hi-Z
11	P3[1]/PD1	D.O	P3[1]	O	O-Hi-Z
12	P3[5]/PD5	D.O	ANT1	O	O-Hi-Z
13	P3[4]/PD4	D.O	ANT2	O	O-Hi-Z
14	P3[3]/PD3	D.O	PAON	O	O-Hi-Z
15	P3[2]/PD2	D.O	RXDSG	O	O-Hi-Z
16	VDD	-	VDD	-	-
17	VSS	-	VSS	-	-
18	RFCLK	D.O	RFCLK	O	O-Low
19	VDDRF	-	VDDRF	-	-
20	VSSRF	-	VSSRF	-	-
21	Xtal1	A.I	Xtal1	I	I
22	CAP	A.I	CAP	I	I
23	AVS	-	AVS	-	-
24	AVD	-	AVD	-	-
25	RSSI	A.I	RSSI	I	I
26	RDI	A.I	RXDA	I	I
27	CMPREF	A.I	CMPREF	I	I
28	TDO	A.O	TXDA	O	O-Hi-Z
29	AD15	D.O	AD15	O	O-Hi
30	AD16	D.O	AD16	O	O-Hi
31	AD17	D.O	AD17	O	O-Hi
32	AD18	D.O	AD18	O	O-Hi
33	AD19	D.O	AD19	O	O-Hi
34	AD20	D.O	AD20	O	O-Hi
35	AD21	D.O	AD21	O	O-Hi
36	AD22	D.O	AD22	O	O-Hi
37	AD23	D.O	AD23	O	O-Hi
38	LE	D.O	LE	O	O-Low
39	SO	D.O	SO	O	O-Low
40	SK	D.O	SK	O	O-Hi-Z
41	DAC/ADC2	A.I	ADC2	I	I
42	P3[6]/PD6	D.O	CE	O	O-Hi-Z
43	RDN	D.O	RDN	O	O-Hi
44	WRN	D.O	WRN	O	O-Hi
45	MI/READY	D.O	MI/READY	O	I
46	SCLK	D.O	SCLK	O	O-Hi
47	UTX/P0[0]	D.O	UTX	O	I
48	URX/P0[1]	D.I	URX	I	I
49	JTIO/P0[2]	D.I/O	JTIO	I/O	I
50	PCM_FSC1/P0[3]	D.I	P0[3]	I	I
51	PCM_FSC0/P0[4]	D.I	P0[4]	I	I
52	PCM_CLK/P0[5]	D.I	P0[5]	I	I
53	PCM_DOUT/P0[6]	D.I	P0[6]	I	I
54	PCM_DIN/P0[7]	D.I	P0[7]	I	I
55	VDDIO	-	VDDIO	-	-
56	VSS	-	VSS	-	-
57	INT0n/P1[0]	D.O	ALE	O	I
58	INT1n/P1[1]	D.O	CLE	O	I
59	ACS1/INT2n/P1[2]	D.O	ACS1	O	I
60	ACS0	D.O	ACS0	O	O-Hi
61	ACS2/INT3n/P1[3]	D.O	ACS2	O	I
62	INT4n/P1[4]	D.I	HOOK_SW	I	I

Pin No	Description	I/O	Connection	at Normal mode	at Reset mode
63	INT5n/P1[5]	D.I	R/_B	I	O-Hi
64	BE1n	D.O	BE1n	O	O-Hi
65	BE0n	D.O	BE0n	O	O-Hi
66	SCL2/P3[0]	D.O	SCL2	O	O-Hi-Z
67	SDA2	D.I/O	SDA2	I/O	I
68	DAB0	D.I/O	DAB0	I/O	I
69	DAB8	D.I/O	DAB8	I/O	I
70	DAB1	D.I/O	DAB1	I/O	I
71	DAB9	D.I/O	DAB9	I/O	I
72	DAB2	D.I/O	DAB2	I/O	I
73	DAB10	D.I/O	DAB10	I/O	I
74	DAB3	D.I/O	DAB3	I/O	I
75	DAB11	D.I/O	DAB11	I/O	I
76	VSS	-	VSS	-	-
77	VDD	-	VDD	-	-
78	VDDIO	-	VDDIO	-	-
79	P2[0]/PWM0	D.O	P2[0]	O	I
80	P2[1]/PWM1	D.O	PULSE_CTRL	O	I
81	P2[2]/ADC0	A.I	ADC0	I	I
82	P2[3]/ADC1	A.I	ADC1	I	I
83	P2[4]/SCL1	D.O	SCL1	O	I
84	P2[5]/SDA1	D.O	SDA1	O	I
85	DAB4	D.I/O	DAB4	I/O	I
86	DAB12	D.I/O	DAB12	I/O	I
87	DAB5	D.I/O	DAB5	I/O	I
88	DAB13	D.I/O	DAB13	I/O	I
89	DAB6	D.I/O	DAB6	I/O	I
90	DAB14	D.I/O	DAB14	I/O	I
91	DAB7	D.I/O	DAB7	I/O	I
92	DAB15	D.I/O	DAB15	I/O	I
93	TM	D.I	TM	I	O-Low
94	P2[7]/SPIDO	D.O	P2[7]	O	O-Hi-Z
95	P1[6]/PON	A.I	PON	I	I
96	P1[7]/CHARGE	D.I	P1[7]	I	I
97	P2[6]/stop_charge	D.O	P2[6]	O	O-Low
98	VBAT3/RINGING	A.I	RINGING	I	I
99	LINEREF	A.O	LINEREF	O	-
100	LINEOUT	A.O	LINEOUT	O	-
101	LINE_IN+	A.I	LINE_IN+	I	-
102	LINE_IN-	A.I	LINE_IN-	I	-
103	LDO1_Senes	A.I	LDO1_Senes	I	I
104	LDO1_CTRL	A.O	LDO1_CTRL	O	O-Hi
105	LDO2_CTRL	A.O	LDO2_CTRL	O	O-Low
106	VBAT2	A.I	VBAT2	I	I
107	CIDIN+	A.I	CIDIN+	I	I
108	AVS2	-	AVS2	-	-
109	AVD2	-	AVD2	-	-
110	LSR+/REF	A.O	LSR+	O	O
111	LSR-/REF	A.O	LSR-	O	O
112	CIDIN-	A.I	CIDIN-	I	O
113	CIDOUT	A.O	CIDOUT	O	O
114	MIC-	A.I	MIC-	I	I
115	VREF-	A.O	VREF-	O	O
116	VBUF	A.O	VBUF	O	O
117	AGND	A.O	AGND	O	O
118	MIC+	A.I	MIC+	I	I
119	VREF+	A.O	VREF+	O	I
120	RSTn	A.I	RSTn	I	I
121	AD0/EXT_MEMORY	D.I	EXT_MEMORY	I	I
122	AD1	D.O	AD1	O	O-Hi
123	AD2	D.O	AD2	O	O-Hi
124	AD3	D.O	AD3	O	O-Hi
125	AD4	D.O	AD4	O	O-Hi
126	AD5	D.O	AD5	O	O-Hi
127	AD6	D.O	AD6	O	O-Hi
128	AD7	D.O	AD7	O	O-Hi

## 26 CPU DATA (CORDLESS HANDSET)

### 26.1. IC1 (BBIC)

Pin No	Description	I/O	Connection	at Normal mode	at Reset mode
1	P3_7/PD7	D,O	LCD_A0	O	O
2	P3_1/PD1	D,O	RXDSG	O	O
3	P3_5/PD5	D,O	SPAMP CD	O	O
4	P3_4/PD4	D,I/O	MIDI_ERQ	I	O
5	P3_3/PD3	D,O	PAON	O	O
6	P3_2/PD2	D,O	PSEL	O	O
7	VDD	-	-	-	-
8	VSS	-	-	-	-
9	RFCLK	D,O	SYRI	O	O
10	VDDRF	-	-	-	-
11	VSSRF	-	-	-	-
12	Xtal1	A,I	←	I	O
13	CAP	A,I	←	I	O
14	AVS	-	-	-	-
15	AVD	-	-	-	-
16	RSSI	A,I	RSSI	I	O
17	RDI	D,I	RXDA	I	O
18	CMPREF	A,I	NC	OPEN	O
19	TDO	A,O	TXDA	A,O	O
20	LE	D,O	SYEN	D,O	O
21	SO	D,O	SYDA	D,O	O
22	SK	D,O	SYCL	D,O	O
23	DAC/ADC2	D,I	JACK DETECTION	I	O
24	P3_6/PD6	D,I/O	MIDI_SRQ	I	O
25	UTX/P0_0	D,O	UTX	O	O
26	URX/P0_1	D,I	URX	I	O
27	JTIO/P0_2	D,I	JTAG	I	O
28	PCM_FSC1/P0_3	D,I	COL1	I	O
29	PCM_FSC0/P0_4	D,I	COL2	I	O
30	PCM_CLK/P0_5	D,I	COL3	I	O
31	PCM_DOUT/P0_6	D,I	COL4	I	O
32	PCM_DIN/P0_7	D,I	COL5	I	O
33	VDDIO	-	-	-	-
34	VSS	-	-	-	-
35	INT0n/P1_0	D,O	ROW0	O	O
36	INT1n/P1_1	D,O	ROW1	O	O
37	INT2n/P1_2	D,O	ROW2	O	O
38	INT3n/P1_3	D,O	ROW3	O	O
39	INT4n/P1_4	D,I	MIDI_IRQ	I	O
40	VDDE/INT5n/P1_5	D,O	COL0	O	-
41	SCL2/P3_0	D,O	SCL	O	O
42	SDA2	D,I/O	SDA	I/O	O
43	VSS	-	-	-	-
44	VDD	-	-	-	-
45	P2_0/PWM0	D,O	PWM0	O	O
46	P2_1/PWM1	D,O	CS2	O	O
47	P2_2/ADC0	D,O	EX_RESET	O	O
48	P2_3/ADC1	D,O	MIDI-CS	O	O
49	P2_4/SCL1	D,O	LCD-SCLK MIDI_SCLK	O	O
50	P2_5/SDA1	D,O	LCD-SCLK MIDI_SCLK	O	O
51	P2_7/DC_CTRL	D,O	DC_CTRL	O	O
52	DC_I	A,I	←	I	O
53	P1_6/PON/INT6n	A,I	PON	I	O
54	P1_7/CHARGE/INT7n	A,I	CHARGE	I	O
55	P2_6/stop_charge	A,O	STOP-CHARGE	O	O
56	VBAT3/RINGING	A,I	VBAT3	I	O
57	DC_stab	A,O	←	O	O
58	DC_Sense	A,I	←	I	O
59	AVS_sense	A,I	←	I	O
60	ADC3	A,I	←	I	O
61	LDO1_sense	A,I	←	I	O

Pin No	Description	I/O	Connection	at Normal mode	at Reset mode
62	LDO1_CTRL	A,O	←	O	O
63	LDO2_CTRL	A,O	←	O	O
64	VBAT2	A,I	←	I	O
65	VBAT1	A,I	←	I	O
66	AVS2	-	-	-	-
67	AVD2	-	-	-	-
68	LSR+/REF	A,O	LSR+	O	O
69	LSR-/REF	A,O	LSR-	O	O
70	LSR_HS/CIDIN-	A,O	LSR_HS	O	O
71	VREF_HS/CIDOUT	A,O	NC	OPEN	-
72	MIC-	A,I	←	I	O
73	VREF-	A,O	←	O	O
74	VBUF	A,O	←	O	O
75	AGND	A,O	←	O	O
76	MIC+	A,I	←	I	O
77	VREF+/CIDIN+	A,O	VREF+	O	O
78	RSTN	D,I	←	I	O
79	VDDIO	-	-	-	-
80	VSS	-	-	-	-

**Note:**

JACK DETECTION; Detect if a Headset is inserted into the JACK or not. Without a Headset, 1.5V is measured at pin 23, while with a Headset, 0V is measured at pin 23.

## 27 EEPROM LAYOUT (BASE UNIT)

### 27.1. Scope

The purpose of this section is to describe the layout of the EEPROM (IC3) for the KX-TCD530 Base Unit.

The EEPROM contains hardware, software, and user specific parameters. Some parameters are set during production of the base e.g. crystal frequency adjustment at address 0286, some are set by the user configuration e.g. ringer volume at address 02C5, and some are set during normal use of the phone e.g. Caller ID data at address 096A..0FDB.

### 27.2. Introduction

The base unit uses a 128K bit serial EEPROM (IC3) for storing volatile parameters. All parameters are set up before the base leaves the factory. Some of these are vital for the operation of the hardware so a set of default parameters is programmed before the actual hardware fine-tuning can be initiated. This document lists all default settings with a short description.

In the tables below values in a range that are similar are not repeated; i.e. Address 00 to 01 contains the value 00 simply means that the value 00 is repeated in all addresses in the range. All values in this document are in hexadecimal notation.

Initial Type	Description
F	The data initialized by only F command
0	The data initialized by F and 0 command
1	The data initialized by F, 0 and 1 command
2	The data initialized by all command (F,0,1,2)

Country Setting	Description
x	Default - no specific country setting, so revert to default value.

### 27.3. EEPROM Layout

#### 27.3.1. General Setup1

Address	Initial Type	Name	Description	Default value	Country Setting
0	-	EEP_EepromType	<b>EEPROM type</b> 0x00:32kbit type TCD500/510 0x55:64kbit type TCD530/540 0xAA:128kbit type TCD505/515/535/545 other:32kbit type	0x00	0x55
1	F	EEP_ModelInfo	<b>Model information</b> Bit0:TAM 1:Enable 0:Disable Bit1:Base Phonebook 1...1:Enable, 0:Disable Bit2:Audible Call...1:Enable, 0:Disable Bit3:SP-PHONE...1:Enable, 0:Disable Bit4-7:Not used TCD500/505: 0x00 TCD510/515: 0x07 TCD530/535: 0x0A TCD540/545: 0x0F	0x00	0x0A
24A	1	EEP_MenusEnabled	<b>Menus Enabled</b> Bit0= Menu of Select Dial Mode 1:Enable 0:Disable Bit1=Flash Type1 Menu...1:Enable, 0:Disable Bit2=Flash Type2 Menu...1:Enable, 0:Disable Bit3=Flash Type3 Menu...1:Enable, 0:Disable Bit4=Menu of Select Pause time...1:Enable, 0:Disable	0x1E	0x1F

#### 27.3.2. General Setup2

Address	Initial Type	Name	Description	Default value	Country Setting
280	F	EEP_Rfpi	<b>Base ID</b> written data by adjustment checker or ID writer RFPI (5Byte)	0xFF, 0xFF, 0xFF, 0xFF, 0xFF	x
286	F	EEP_FreqTrim_L	<b>Setting value of FREQ_TRM_RE</b>	0x75	x
287	F	EEP_BandGap	<b>Setting value of BandGap REG</b>	0x08	x
288	F	EEP_Rc0	<b>BMC internal Register 0</b>	0x10	0x12
29B	1	EEP_RxAteCrcError Rsc	<b>Attenuation parameter Crc Error Rsc</b>	0x43	0x03
398	0	EEP_Ps0_InUseFlag	<b>IN-Use Flag</b> 00:Invalid / 01:Valid	0x00	x

Address	Initial Type	Name	Description	Default value	Country Setting
399	0	EEP_Ps0_DectPsNo	<b>DECT PS No.</b> 00-3F:PS No. / FF:Invalid	0xFF	x
39A	0	EEP_Ps0_PsType	<b>PS Type</b> 00:KME's PS (Group Page ) 01:KME's PS (Group Page/Message Waiting) 02:TD-7500 or TD-7590 / FF:Another Maker's PS	0xFF	x
39B	0	EEP_Ps0_Ipui	<b>PS ID</b> first byte:0xA8 (Length Infomation) from second byte:IPUI (Normal:5byte Max.13byte)	0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00	x
3E0	0	EEP_Ps1_InUseFlag	<b>IN-Use Flag</b> 00:Invalid / 01:Valid	0x00	x
3E1	0	EEP_Ps1_DectPsNo	<b>DECT PS No.</b> 00-3F:PS No. / FF:Invalid	0xFF	x
3E2	0	EEP_Ps1_PsType	<b>PS Type</b> 00:KME's PS (Group Page ) / 01:KME's PS (Group Page/Message Waiting) 02:TD-7500 or TD-7590 / FF:Another Maker's PS	0xFF	x
3E3	0	EEP_Ps1_Ipui	<b>PS ID</b> IPUI (14Byte)	0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00	x
428	0	EEP_Ps2_InUseFlag	<b>IN-Use Flag</b> 00:Invalid / 01:Valid	0x00	x
429	0	EEP_Ps2_DectPsNo	<b>DECT PS No.</b> 00-3F:PS No. / FF:Invalid	0xFF	x
42A	0	EEP_Ps2_PsType	<b>PS Type</b> 00:KME's PS (Group Page ) / 01:KME's PS (Group Page/Message Waiting) 02:TD-7500 or TD-7590 / FF:Another Maker's PS	0xFF	x
42B	0	EEP_Ps2_Ipui	<b>PS ID</b> IPUI (14Byte)	0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00	x
470	0	EEP_Ps3_InUseFlag	<b>IN-Use Flag</b> 00:Invalid / 01:Valid	0x00	x
471	0	EEP_Ps3_DectPsNo	<b>DECT PS No.</b> 00-3F:PS No. / FF:Invalid	0xFF	x
472	0	EEP_Ps3_PsType	<b>PS Type</b> 00:KME's PS (Group Page ) / 01:KME's PS (Group Page/Message Waiting) 02:TD-7500 or TD-7590 / FF:Another Maker's PS	0xFF	x
473	0	EEP_Ps3_Ipui	<b>PS ID</b> IPUI (14Byte)	0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00	x
4B8	0	EEP_Ps4_InUseFlag	<b>IN-Use Flag</b> 00:Invalid / 01:Valid	0x00	x
4B9	0	EEP_Ps4_DectPsNo	<b>DECT PS No.</b> 00-3F:PS No. / FF:Invalid	0xFF	x
4BA	0	EEP_Ps4_PsType	<b>PS Type</b> 00:KME's PS (Group Page ) / 01:KME's PS (Group Page/Message Waiting) 02:TD-7500 or TD-7590 / FF:Another Maker's PS	0xFF	x
4BB	0	EEP_Ps4_Ipui	<b>PS ID</b> IPUI (14Byte)	0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00	x
500	0	EEP_Ps5_InUseFlag	<b>IN-Use Flag</b> 00:Invalid / 01:Valid	0x00	x
501	0	EEP_Ps5_DectPsNo	<b>DECT PS No.</b> 00-3F:PS No. / FF:Invalid	0xFF	x
502	0	EEP_Ps5_PsType	<b>PS Type</b> 00:KME's PS (Group Page ) / 01:KME's PS (Group Page/Message Waiting) 02:TD-7500 or TD-7590 / FF:Another Maker's PS	0xFF	x

### 27.3.3. Flash Time Setting

Address	Initial Type	Name	Description	Default value	Country Setting
E	1	FlashTime1	<b>Calibrated loop-break time for short break</b> Unit : 10 ms, defaults to 700 ms	0x46	0x0A
F	1	FlashTime2	<b>Calibrated loop-break time for long break</b> Unit : 10 ms, defaults to 80 ms	0x08	0x3C
10	1	FlashTime3	<b>Calibrated loop-break time for extra-long break</b> Unit : 10 ms, defaults to 400 ms	0x28	0x1E

### 27.3.4. Clip (Caller ID) configuration

Address	Initial Type	Name	Description	Default value	Country Setting
51	1	EEP_RingDetectfmin	<b>Lower Limit for detection of ring frequency</b> Unit : 1Hz, Default = 18Hz	0x12	0x0E
59	1	EEP_ClipDetectConfig	<b>CLIP detect configuration</b> Bit0-2:Mode...0:Learn mode, 1:DTMF only, 2:FSK only, 3:FSK/DTMF both, 4:Russian CLIP only Bit3:Unused3 Bit4:Onhook...1=enable, 0=disable Bit5:Offhook...1=enable, 0=disable Bit6:MsgWaiting...1=enable, 0=disable Bit7:Unused7	0x73	x
5A	1	EEP_ClipRingConfig	<b>Ring configuration</b> Bit0:Rpas...1=enable, 0=disable Bit1:RpasAlert...1=enable, 0=disable Bit2:Rpas2LongAlert...1=enable, 0=disable Bit3:Suppress1stRing...1=enable, 0=disable Bit4-7:Unused	0x00	x
5B	1	EEP_ImpSetConfig	<b>Impedance Set configuration</b> Bit0:Polarity...1=enable, 0=disable Bit1:Dtas...1=enable, 0=disable Bit2:Rpas...1=enable, 0=disable Bit3:PowerRing...1=enable, 0=disable Bit4:LearnImpPattern...1=enable, 0=disable Bit5:CheckPolStatus...1=enable, 0=disable Bit6-7: Unused	0x15	x
5C	1	EEP_ImpRemConfig	<b>Impedance Remove configuration</b> Bit0:Polarity...1=enable, 0=disable Bit1:Ringing...1=enable, 0=disable Bit2:ClipReceived...1=enable, 0=disable Bit3:Offhook...1=enable, 0=disable Bit4:ChszDet...1=enable, 0=disable Bit5-7:Unused	0x0F	x
5D	1	EEP_CasAckDtmf	<b>CAS Acknowledge DTMF tone</b> 00:DTMF 0 - 09:DTMF 9 0A:DTMF A 0B:DTMF B 0C:DTMF C 0D:DTMF D 0E:DTMF * 0F:DTMF #	0x0D	x
5E	1	EEP_DtmfReceiveData Count	<b>Valid Receive data Count (for INDIA)</b>	0x04	x
5F	1	EEP_ClipPhaseConfig	<b>CLIP phase set configuration</b> Bit0:ForwardNumber...1=enable, 0=disable Bit1:CallingNumber...1=enable, 0=disable Bit2:Dutch...1=enable, 0=disable Bit3:Canadian...1=enable, 0=disable Bit4:KpnVmwi...1=enable, 0=disable Bit5:PriorityCheck...1=enable, 0=disable Bit6-7:AddZero...0:no add zero, 1:add zero absolutely 2:Check Number's top is zero. If it is zero, add zero.	0x04	x
60	1	EEP_ClipPhaseConfig2	<b>CLIP phase set configuration</b> Bit0:FskRemoveParity...1=enable, 0=disable Bit1:AutoRappel...1=enable, 0=disable Bit2:KpnStartEndNg Bit3-7:Unused	0x01	x
61	1	EEP_AddZeroDataCount	<b>Valid data for Add Zero (for NewZealand)</b>	0x05	x
62	1	EEP_RingVmwiConfig	<b>CLIP RingVmwi set configuration</b> Bit0:LongBellFuncOff...1=enable, 0=disable Bit1:StatusSucceed...1=enable, 0=disable Bit2-7:Unused	0x01	x
63	1	EEP_RpasMinDuration	<b>RPAS minimum duration</b> Unit : 10ms, Default : 180ms	0x12	x



Address	Initial Type	Name	Description	Default value	Country Setting
64	1	EEP_RpasMaxDuration	<b>RPAS maximum duration</b> Unit : 10ms, Default : 320ms	0x20	x
65	1	EEP_DtasMinDuration	<b>DTAS minimum duration</b> Unit : 10ms, Default : 60ms	0x06	x
66	1	EEP_DtasMaxDuration	<b>DTAS maximum duration</b> Unit : 10ms, Default : 130ms	0x0D	x
67	1	EEP_DtasDataTimeout	<b>DTAS to FSK data timeout</b> Unit : 100ms, Default : 1s	0x0A	x
68	1	EEP_ImpSetTimeout	<b>Impedance Set timeout (RPAS for France)</b> Unit : 10ms, Default : 250ms [Standard : 200-350ms]	0x14	x
69	1	EEP_ImpRemRpasTimeout	<b>Impedance Remove timeout (RPAS)</b> Unit : 10ms, Default : 1250ms [Standard : 1450ms (subtract Impedance Set timeout)]	0x7D	x
6A	1	EEP_ImpRemChszTimeout	<b>Impedance Remove timeout (Channel Seizure)</b> Unit : 10ms, Default : 450ms [Standard : 420-570ms]	0x2D	x
6B	1	EEP_ImpRemContTimeout	<b>Impedance Remove timeout</b> Unit : 100ms, Default : 1s	0x0A	x
6C	1	EEP_CasMinDuration	<b>CAS minimum duration</b> Unit : 10ms, Default : 60ms	0x06	x
6D	1	EEP_CasMaxDuration	<b>CAS maximum duration</b> Unit : 10ms, Default : 130ms	0x0D	x
6E	1	EEP_CasAckDelay Timeout	<b>CAS to Acknowledge DTMF Delay Timeout</b> Unit : 1ms, Default : 0ms	0x00	x
6F	1	EEP_CasAckDuration	<b>Acknowledge DTMF tone duration</b> Unit : 1ms, Default : 70ms	0x46	x
70	1	EEP_CasAckDataTimeout	<b>CAS to FSK data timeout</b> Unit : 10ms, Default : 600ms	0x3C	x
71	1	EEP_FskInterdigitTimeout	<b>FSK Interdigit timeout</b> Unit : 10ms, Default : 80ms	0x08	x
72	1	EEP_FskMarkoutTimeout	<b>FSK Markout timeout after FSK received</b> Unit : 10ms, Default : 100ms	0x0A	x
73	1	EEP_DtmfMinDuration	<b>DTMF minimum duration</b> Unit : 10ms, Default : 20ms	0x02	x
74	1	EEP_DtmfMaxDuration	<b>DTMF maximum duration</b> Unit : 10ms, Default : disable(0xFF)	0xFF	x
75	1	EEP_DtmfInterdigitTimeout	<b>DTMF Interdigit timeout</b> Unit : 10ms, Default : 500ms	0x32	x
76	1	EEP_DtmfMuteTimeout	<b>Mute timeout when OFFHOOK CLIP received (for DK)</b> Unit : 100ms, Default : 5s	0x32	x
77	1	EEP_DtmfBellWaitTimeout	<b>Bell Wait timeout</b> Unit : 100ms, Default : 10s	0x64	x
78	1	EEP_RingVmwMinDuration	<b>Bell Ring minimum duration (for KPN VoiceMail)</b> Unit : 1s, Default : 14s	0x0E	x
79	1	EEP_RingVmwMaxDuration	<b>Bell Ring maximum duration (for KPN VoiceMail)</b> Unit : 1s, Default : 22s	0x16	x
7A	1	EEP_RingPulseMin	<b>Bell Ring on minimum duration (for KPN VoiceMail)</b> Unit : 10ms, Default : 600ms	0x3C	x
7B	1	EEP_VmwRingInterdigitMax	<b>Bell Ring Interdigit maximum (for KPN VoiceMail)</b> Unit : 100ms, Default : 5000ms	0x32	x
7C	1	EEP_RuDtmfDurationMin	<b>RU_DTMF minimum duration</b> Unit : 10ms, Default : 10ms	0x01	x
7D	1	EEP_RuDtmfDurationMax	<b>RU_DTMF maximum duration</b> Unit : 10ms, Default : 70ms	0x07	x
7E	1	EEP_RuDtmfDurationOff	<b>RU_DTMF Off duration</b> Unit : 10ms, Default : 50ms	0x05	x
7F	1	EEP_RuConfig	<b>Russian CLIP Configuration</b> Bit0:Unused Bit1:RuClipMode...1=Auto, 0=Manual Bit2:RuClipRbtOnOff...1=on, 0=off Bit3-7:Unused	0x00	x
80	1	EEP_RuClipReqLength	<b>Length of REQ signal</b> Unit : 10ms, Default : 140ms	0x0E	x
81	1	EEP_RuClipDelayBetween Req	<b>Delay between REQ signal</b> Unit : 10ms, Default : 200ms	0x14	x
82	1	EEP_RuClipBackTrace Timeout	<b>Back Trace Start Timeout</b> Unit : 10ms, Default : 600ms	0x3C	x
83	1	EEP_RuClipRepeatReq	<b>Number of repeat REQ request Sent</b> Default : 3 repeat	0x03	x
84	1	EEP_RuClipDelayBeforeReq	<b>Delay before Send REQ signal</b> Unit : 10ms, Default : 200ms	0x14	x

Address	Initial Type	Name	Description	Default value	Country Setting
85	1	EEP_RuRcvDigitBeforeReq	<b>Receive Digit Before REQ</b> Default : 2digit	0x02	x
86	1	EEP_PseudoBellLength	<b>Pseudo Bell Length</b> Unit : 10ms, Default : 800ms	0x50	x
87	1	EEP_PseudoBellInterdigit Timeout	<b>Pseudo Bell Interdigit Timeout</b> Unit : 100ms, Default : 3200ms	0x20	x
88	1	EEP_PseudoBellEndTimeout	<b>Pseudo Bell End Timeout</b> Unit : 1s, Default : 30s	0x1E	x
89	1	EEP_RuClipReqLev	<b>RCID REQ signal Level</b> Default : -4.3dBm	0x00, 0x19	x
272	2	EEP_RuClipOnOff	<b>Russian CLIP On/Off</b>	0x01	x
273	2	EEP_RuClipRingNum BeforeSequence	<b>Number Of Rings Patterns Before Start Sequence</b> Default : 1	0x01	x
274	2	EEP_RuClipDisplayDigit	<b>Number Of digits to be displayed</b> Default:7 digits	0x07	x

## 28 EEPROM LAYOUT (CORDLESS HANDSET)

### 28.1. Scope

The purpose of this section is to describe the layout of the EEPROM (IC10) for the KX-TCA151 Cordless Handset.

The EEPROM contains hardware, software, and user specific parameters. Some parameters are set during production of the cordless handset e.g. crystal oscillator adjustment at 0057, some are set by the user when configuring the cordless handset e.g. ringing volume at 00A1, and some during normal use of the phone e.g. redial memory at 1EF6..1F77.

### 28.2. Introduction

The handset uses a 64k bit serial EEPROM (IC10) for storing volatile parameters. All parameters are set up before the cordless handset the factory. Some of these are vital for the operation of the hardware so a set of default parameters is programmed before the actual hardware fine-tuning can be initiated. This document lists all default settings with a short description.

This document lists all default parameters with a short description.

In the tables below values in a range that are similar are not repeated; i.e. Address 00 to 01 contains the value 00 simply means that the value 00 is repeated in all addresses in the range.

Initial Type	Description
F	The data initialized by only F command
0	The data initialized by F and 0 command
1	The data initialized by F, 0 and 1 command
2	The data initialized by all command (F,0,1,2)

Country Setting	Description
x	Default - no specific country setting, so revert to default value.

### 28.3. EEPROM contents

#### 28.3.1. General Setup

Address	Initial Type	Name	Description	Default value	Country Setting
52	F	EEP_Ipei	<b>International Portable Part Equipment Identities.</b> A concatenation of an EMC and a unique 20 bit Serial Number.	0x00, 0x00, 0x00, 0x00, 0x00	x
57	F	EEP_FreqTrim_L	<b>Setting value of FREQ_TRIM_REG</b>	0x75	x
58	F	EEP_BandGap	<b>Setting value of BandGap REG</b>	0x08	x
6B	1	EEP_LowQualityLevel	<b>Signal quality level at which handover is initiated(CRC error count).</b>	0x10	x
74	1	EEP_RxMuteSyncError	<b>Continuous SYNC error times for the Rx Mute(0-0xFF:Error times).</b>	0x0A	0x02
131	0	EEP_HandsetNumber	<b>HandsetNumber each Subscription.</b> (wordx4subs)	0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF	x
139	0	EEP_Subscription0	<b>GAP Subscription Data. Storage for 4 subscriptions each with 53bytes.</b> <Subscription> 12E : SUB_boAssignedIPUI 12F : SUB_abIPUI[14] 13D : SUB_abPARK[5] 142 : SUB_abSARI[4] 146 : SUB_bPLI 147 : SUB_bLAL 148 : SUB_abARIplusRPN[5] 14D : SUB_boZAP 14E : SUB_bZAP 14F : SUB_boServiceClass 150 : SUB_bServiceClass 151 : AK_boUAKavailable 152 : AK_boUAKproven 153 : AK_boUAK_or_AC [16]	All 0x00	x
1EBE	2	EEP_HSPinCode	<b>Handset Pin : 4 BCD Digits</b>	0x00, 0x00	x

### 28.3.2. MMI Setting

Address	Initial Type	Name	Description	Default value	Country Setting
82	1	EEP_FactoryLanguage Setting	<b>Selected Language for LCD</b> GERAM:0 ENGLISH:1 SPANISH:2 NORWEGIAN:3 FRENCH:4 ITALIAN:5 DENISH:6 DUTCH:7 SWEDISH:8 FINNISH:9 GREEK:10 TURKISH:11 HUNGARIAN:12 PORTUGUESE:13 RUSSIAN:14 POLISH:15 SLOVAKIAN:16 CZECH:17 CROATIAN:18 CATALAN:19	0x01	x
83	1	EEP_Available_Language	<b>Select Available Language</b> 0:Disable 1:Enable	0xFF, 0xBF, 0xFF	x
1EEF	2	EEP_Language	<b>User Setting Language</b> GERAM:0 ENGLISH:1 SPANISH:2 NORWEGIAN:3 FRENCH:4 ITALIAN:5 DENISH:6 DUTCH:7 SWEDISH:8 FINNISH:9 GREEK:10 TURKISH:11 HUNGARIAN:12 PORTUGUESE:13 RUSSIAN:14 POLISH:15 SLOVAKIAN:16 CZECH:17 CROATIAN:18 CATALAN:19	0x01	x
1EF0	2	EEP_SmsEatonLanguage	<b>Eatoni Setting Language</b> GERAM:0 ENGLISH:1 SPANISH:2 NORWEGIAN:3 FRENCH:4 ITALIAN:5 DENISH:6 DUTCH:7 SWEDISH:8 FINNISH:9 GREEK:10 TURKISH:11 HUNGARIAN:12 PORTUGUESE:13 RUSSIAN:14 POLISH:15 SLOVAKIAN:16 CZECH:17 CROATIAN:18 CATALAN:19	0x01	x
1FED	1	EEP_CountryFunction	<b>Country parameter</b> 0bit: Reset Ear-SP Vol. after Talk...0: Hold, 1: Disable 1bit: PBX Phone-Book...0: Hold, 1: Disable 2-7bit: Reserve	0x02	x

### 28.3.3. MMI1 Setting

Address	Initial Type	Name	Description	Default value	Country Setting
2	1	EEP_DspSdt2Level	<b>DSP Parameter SideTone2</b> Main:SideTone2 Main route level MicroRcv:SideTone2 Mlc to Receiver level	0xFF, 0x7F, 0x00, 0x18	x
6	1	EEP_DspToneLevel	<b>DSP Parameter ToneLevel</b> Talk:Tone Level in Talk mode Spp:Tone Level in Spp mode	0xFF, 0x7F, 0xFF, 0x7F	x
A	1	EEP_DspRxMuteLevel	<b>DSP Parameter RxMute Level</b> Talk:RxMute Level in Talk mode Spp:RxMute Level in Spp mode	0xFF, 0x7F, 0xFF, 0x7F	x
E	1	EEP_DspRcvVol	<b>DSP Parameter Receiver Volume TX Level</b> TxTalk:Receiver Volume Tx Level in Talk mode TxSpp:Receiver Volume Tx Level in Spp mode	0xFF, 0x7F, 0xFF, 0x7F	x
39	1	EEP_LcdContrast	<b>LCD contrast</b>	0x1E	x
4B	1	EEP_CountryFunction01	<b>Country parameter</b> Bit0: Call waiting Tone on/off ...1:on, 0:off Bit1-7: Reserve	0x01	x
4C	2	EEP_EEToneConfig	<b>Tone Option Data</b> Bit 0:Keytone on/off00 - 0000 = Off / 0001 = Tone On Bit 1:Keytone on/off01 - Reserve Bit 2:Keytone on/off02 - Reserve Bit 3:Keytone on/off03 - Reserve Bit 4:Call waiting on/off - 1/0 Bit 5:Range alarm on/off - 1/0 Bit 6:Battery low alarm on/off - 1/0	0x51	x

### 28.3.4. Battery Paramters

Address	Initial Type	Name	Description	Default value	Country Setting
1	F	EEP_LowVoltage	<b>Number of ADC step for battery low</b>	0x30	x
36	F	EEP_NoVoltage	<b>Number of ADC step for batter empty</b>	0x22	x

## 29 HOW TO REPLACE FLAT PACKAGE IC

### 29.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of 700°F ± 20°F (370°C ± 10°C)

**Note:** We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

- Flux


Recommended Flux: Specific Gravity → 0.82.

Type → RMA (lower residue, non-cleaning type)

**Note:** See **ABOUT LEAD FREE SOLDER (PbF: Pb free)** (P.4).

### 29.2. Procedure


1. Tack the flat pack IC to the PCB by temporarily soldering two diagonally opposite pins in the correct positions on the PCB.

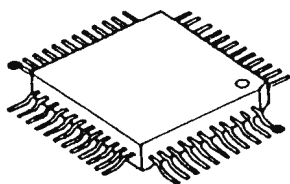

- - - - - - Temporary soldering point.


Be certain each pin is located over the correct pad on the PCB.

2. Apply flux to all of the pins on the IC.

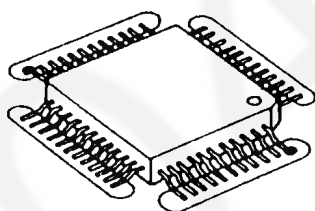


○ - - - - - Flux

3. Being careful to not unsolder the tack points, slide the soldering iron along the tips of the pins while feeding enough solder to the tip so that it flows under the pins as they are heated.

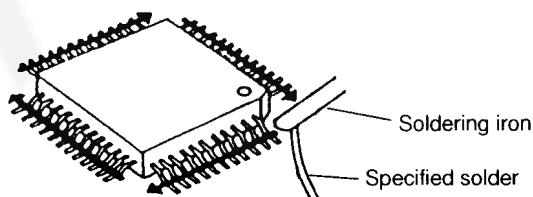





### 29.3. Modification Procedure of Bridge

1. Add a small amount of solder to the bridged pins.
2. With a hot iron, use a sweeping motion along the flat part of the pin to draw the solder from between the adjacent pads.

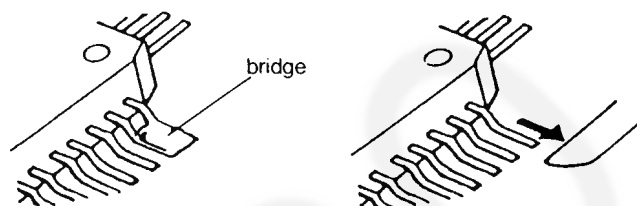





## 30 CABINET AND ELECTRICAL PARTS LOCATION (BASE UNIT)

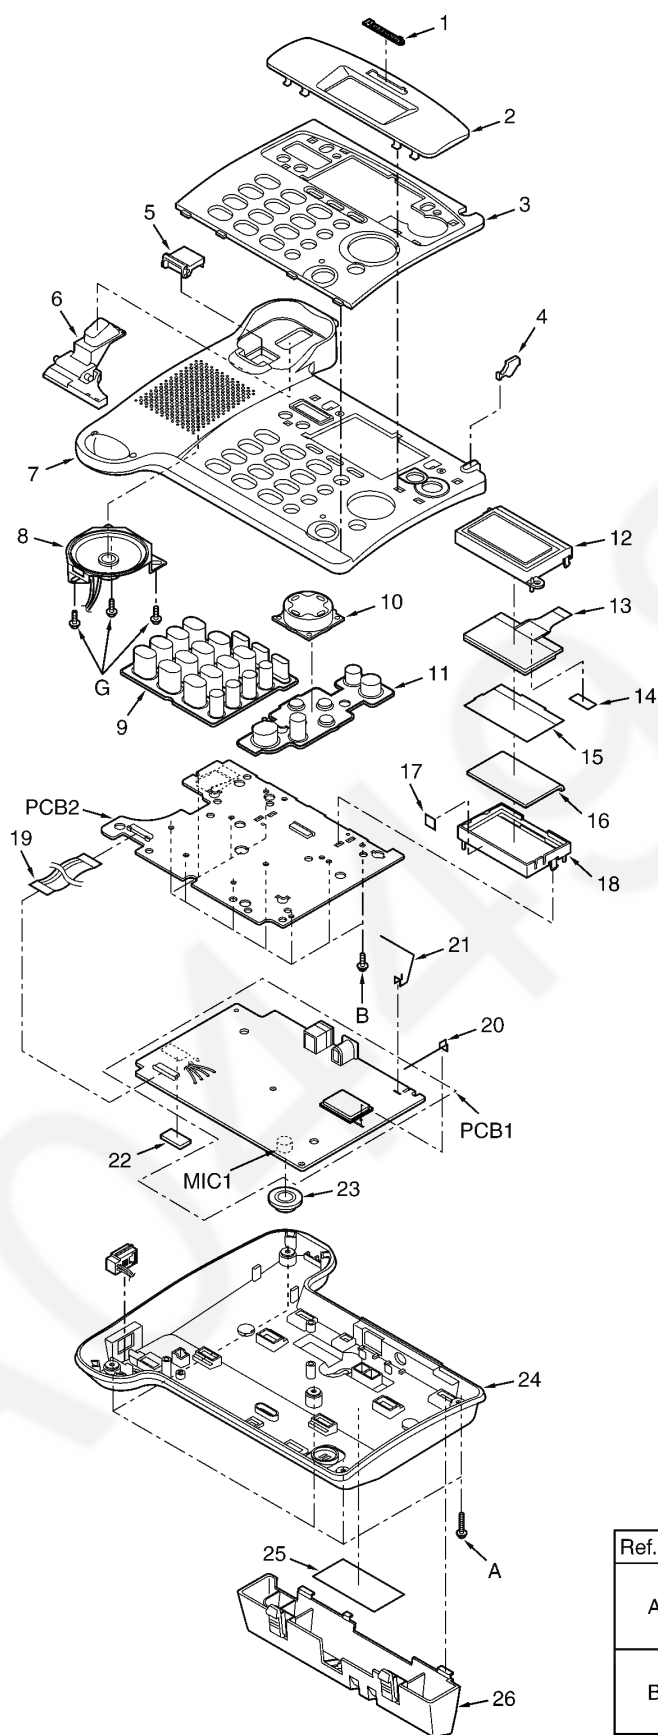

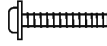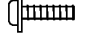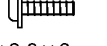
Ref.No.	Part No.	Figure
A	XTW26+14P	 φ 2.6 × 14mm
B	XTW26+8P	 φ 2.6 × 8mm
G	XTW26+8P	 φ 2.6 × 8mm


## 31 CABINET AND ELECTRICAL PARTS LOCATION (CORDLESS HANDSET)

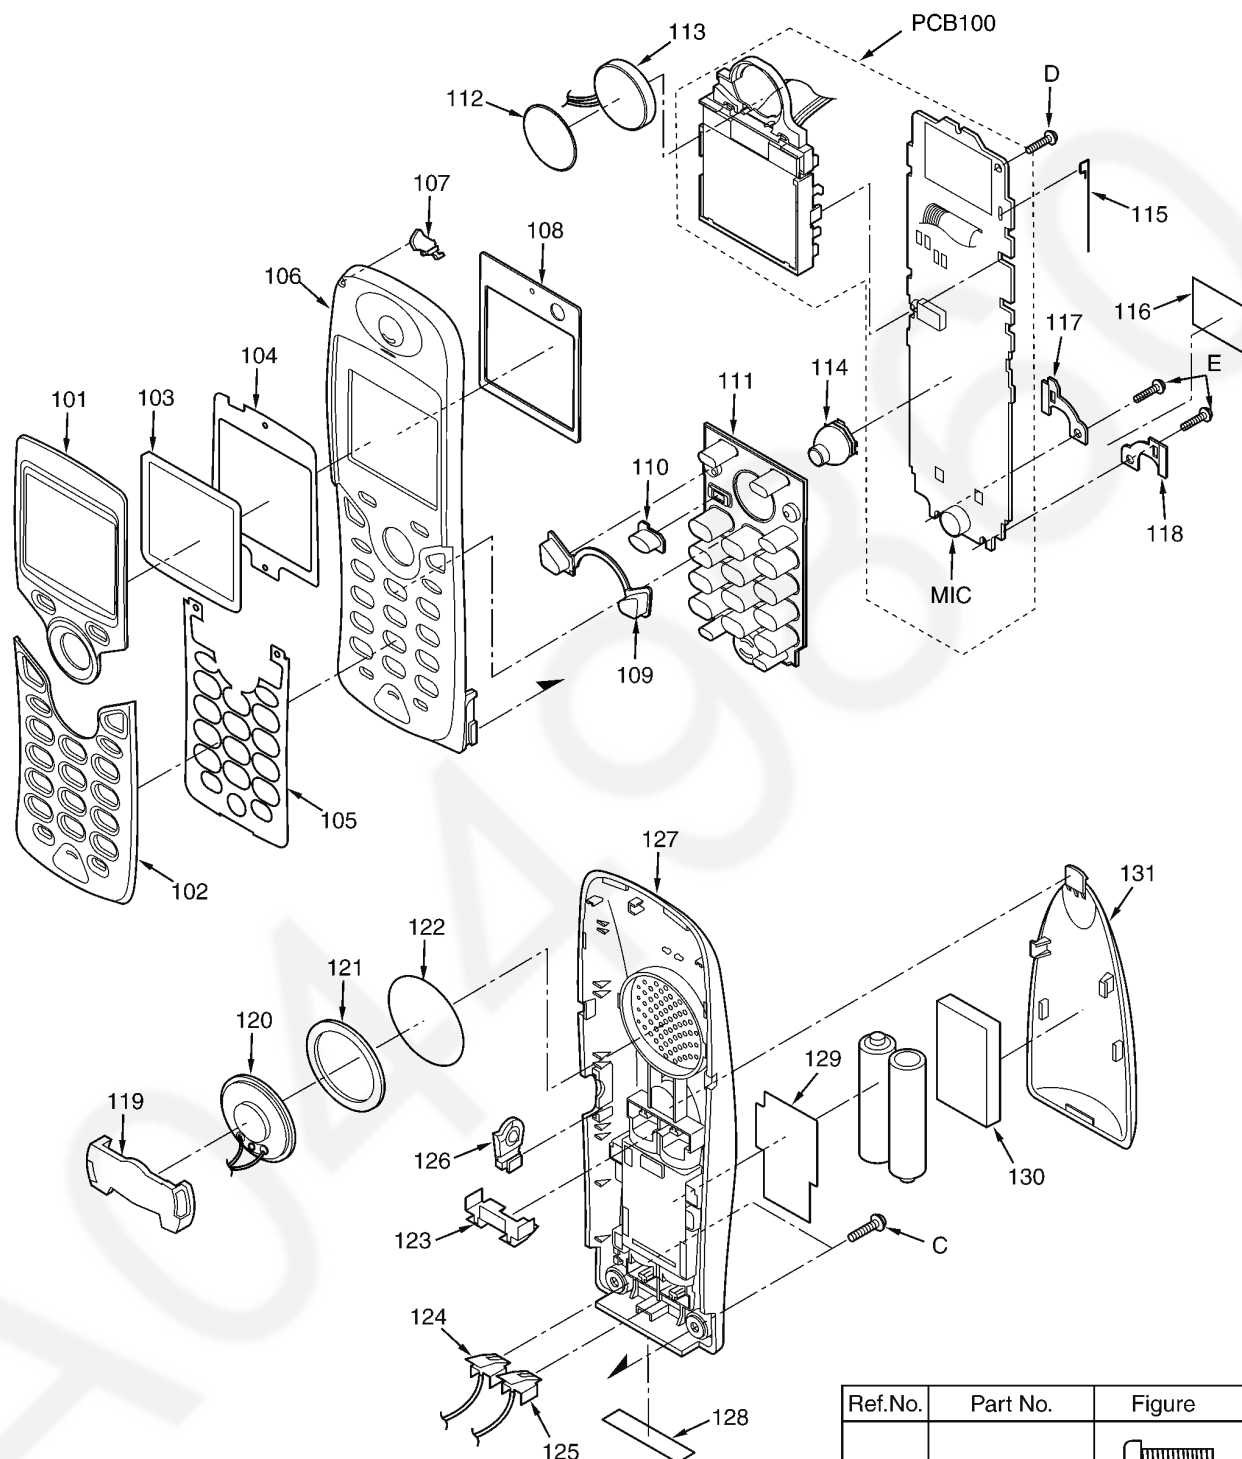

   Ref.No.	Part No.	Figure
C	XTB2+10G	 φ2 × 10mm
D	XTB2+8G	 φ2 × 8mm
E	XTB2+8G	 φ2 × 8mm

## 32 CABINET AND ELECTRICAL PARTS LOCATION (CHARGER UNIT)

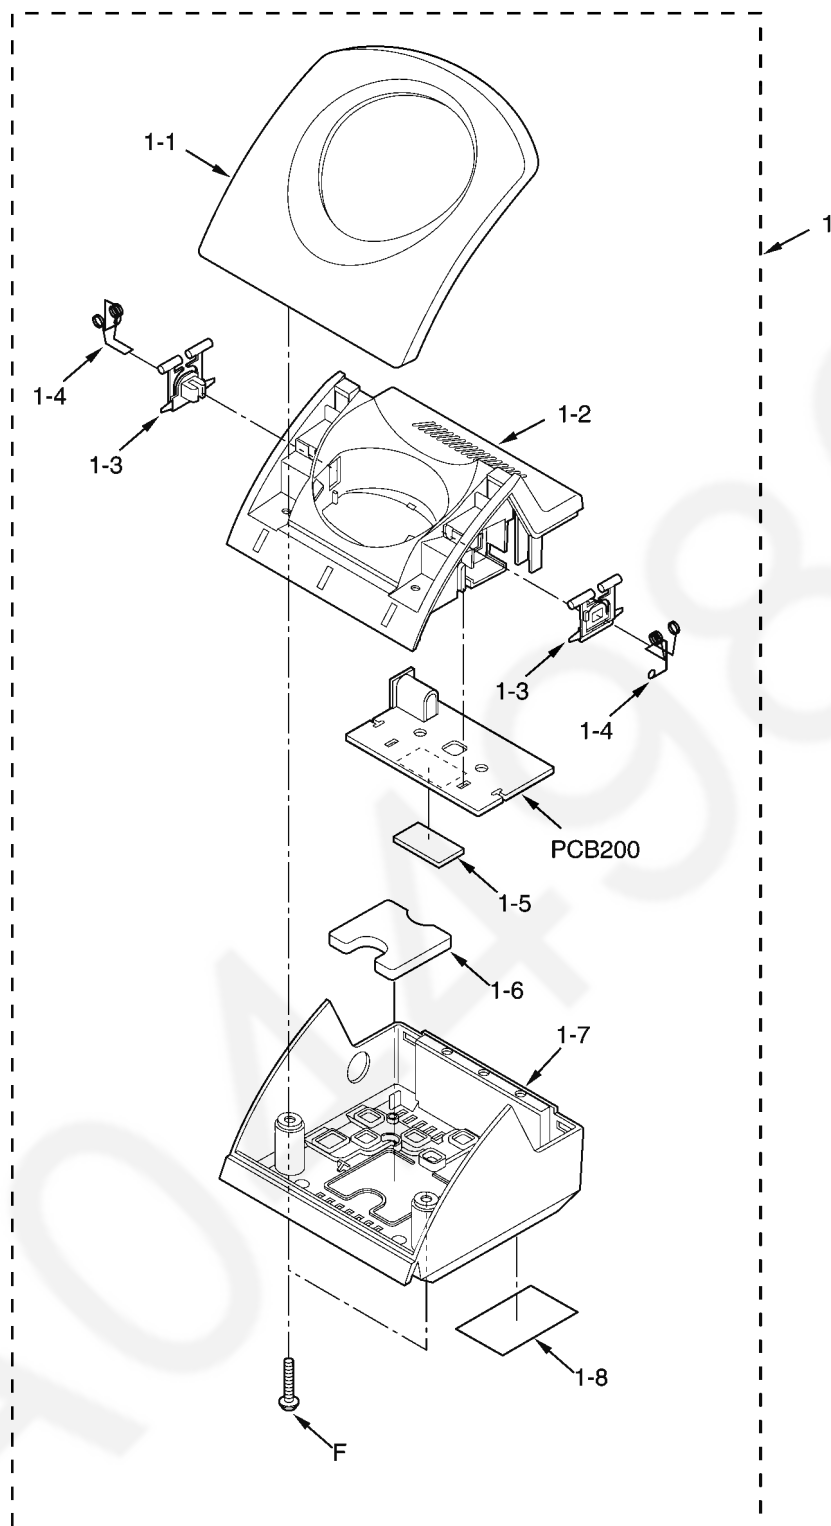


Ref.No.	Part No.	Figure
F	XTW26+14P	 $\phi 2.6 \times 14\text{mm}$




## 33 ACCESSORIES AND PACKING MATERIALS

### 33.1. KX-TCD530AXM














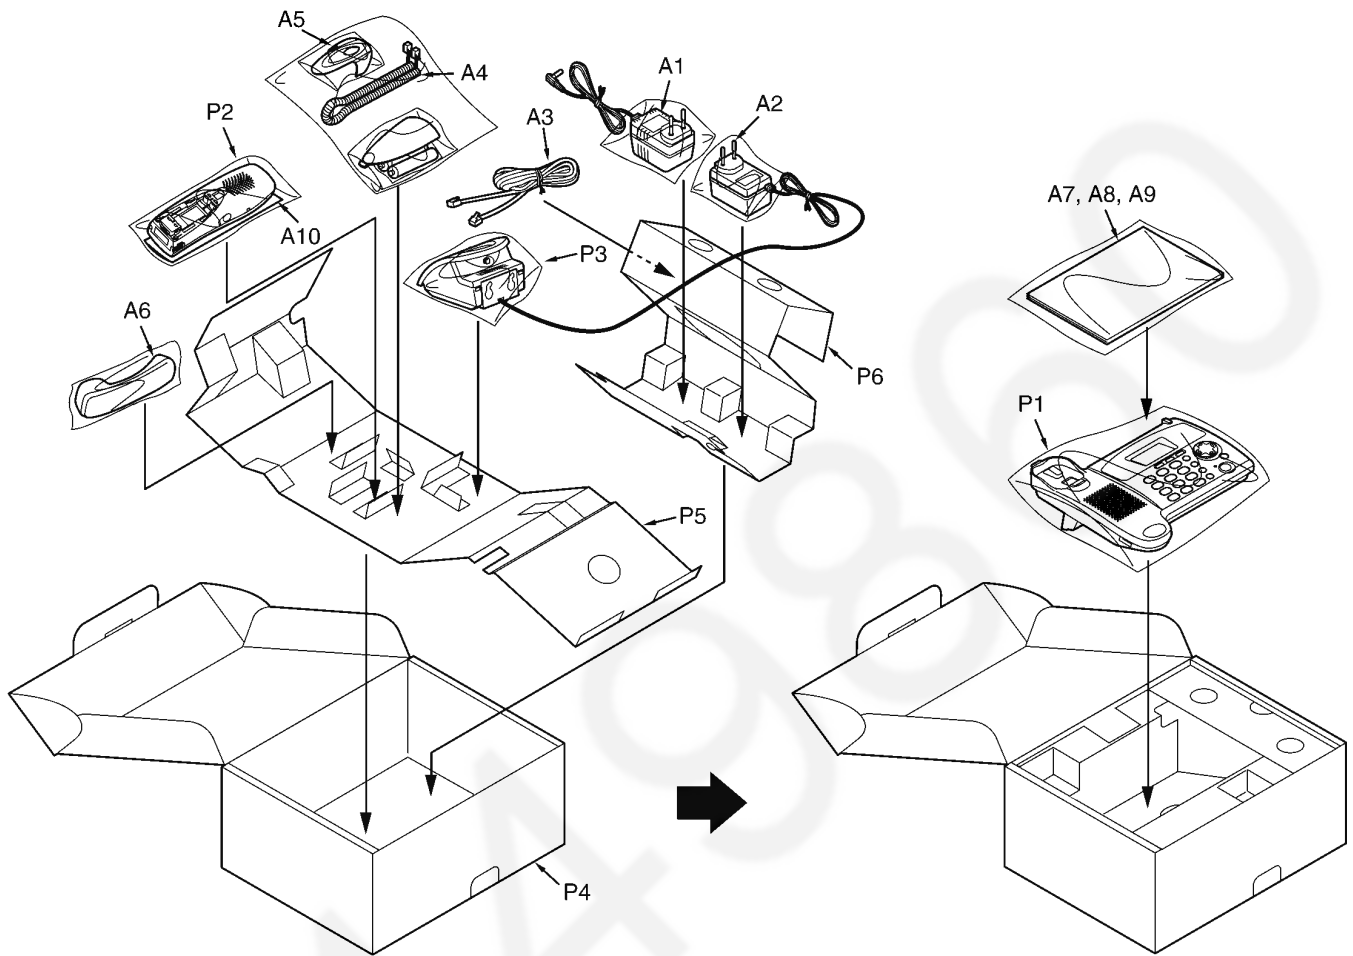


## 33.2. KX-TCA151AXM









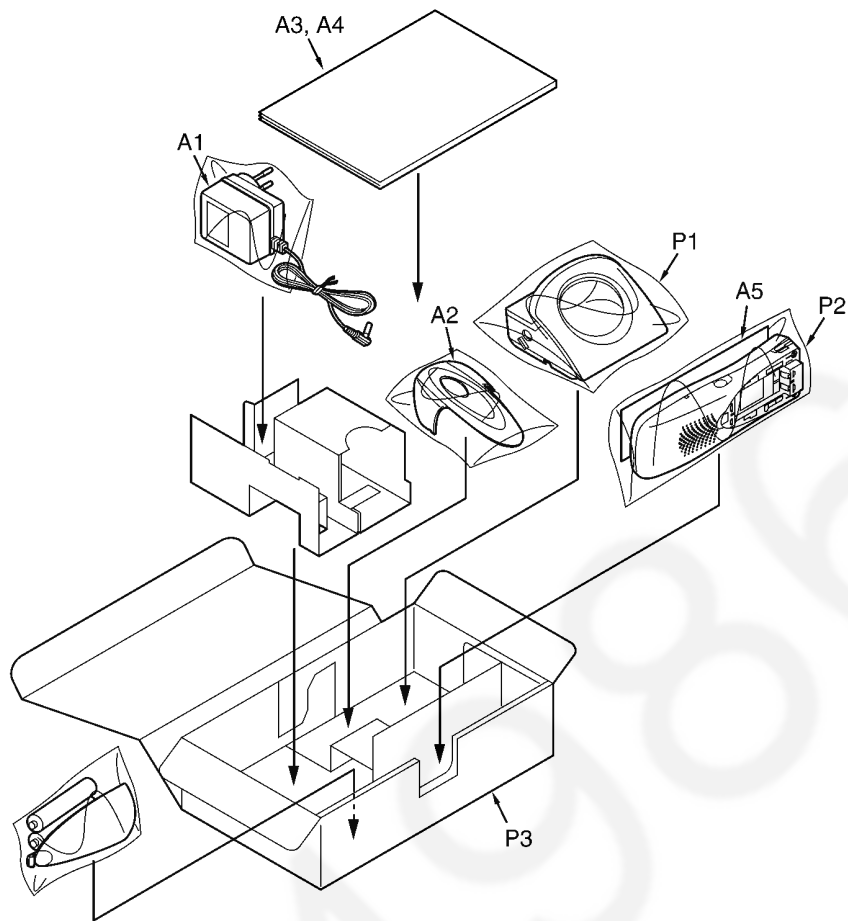


## 34 TERMINAL GUIDE OF THE ICs, TRANSISTORS AND DIODES


### 34.1. Base Unit

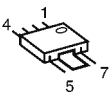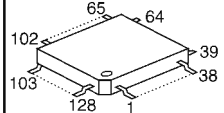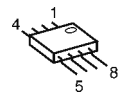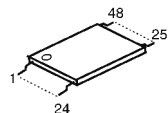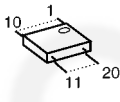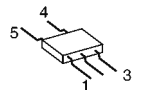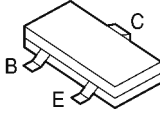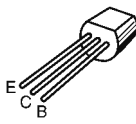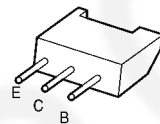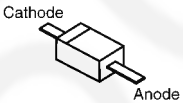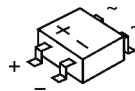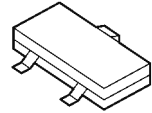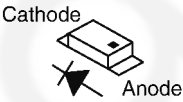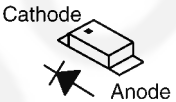				
C0DBZGE00007	C1CB00001613	PQWI2D530AXH C1BB00000265	PQWI1D530AXH	C0JBAF000223
	 B1ABCE000009 B1ADGE000004 PQVTBF822T7 PQVTDTC143XU	 2SA1625	 2SD1994A	 B0JCME000035 MA1Z300 MA8047 B0JCDD000002 MA111 B0BC2R1A0006
 PQVDS1ZB60F1	 B0DDCM000001	 PQVDBR1111C	 LNJ408K84RAK LNJ308G8JRA	

### 34.2. Cordless Handset

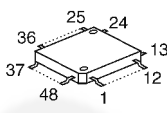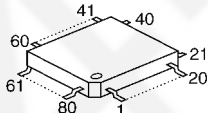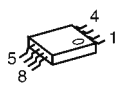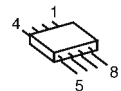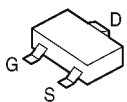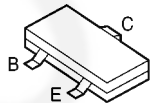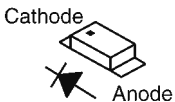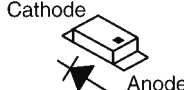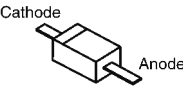				
C1BB00000783	C1CB00001598	C1BB00000265	PQWI1D530AXR PQWI1D151AXR C0JBAB000371	PQVTFDN335N
 PSVTDTC143X, PQVT143XK146, UN9219J, B1ADGE000004, B1ABCF000103		 B3AEB0000029 LNJ308G8JRA	 PQVDBR1111C	 B0BC2R1A0006 MA8036H MA8047 B0JCDD000002 MA2Z72000 B0JCME000035

### 34.3. Charger Unit

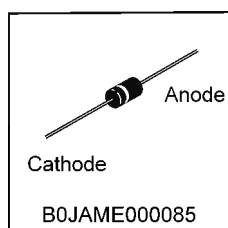

# 35 REPLACEMENT PARTS LIST

## 1. RTL (Retention Time Limited)

### Note:

The marking (RTL) indicates that the Retention Time is limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

## 2. Important safety notice

Components identified by the  $\Delta$  mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

## 3. The S mark means the part is one of some identical parts.

For that reason, it may be different from the installed part.

## 4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.

## 5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms ( $\Omega$ ) K=1000 $\Omega$ , M=1000k $\Omega$

All capacitors are in MICRO FARADS ( $\mu$ F)P= $\mu$ F

\*Type & Wattage of Resistor

Type

ERC:Solid	ERX:Metal Film	PQ4R:Chip
ERDS:Carbon	ERG:Metal Oxide	ERS:Fusible Resistor
ERJ:Chip	ER0:Metal Film	ERF:Cement Resistor

Wattage

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W
------------	------------	---------	------	------	------

\*Type & Voltage Of Capacitor

Type

ECFD:Semi-Conductor	ECED,ECKD,ECBT,F1K,ECUV:Ceramic
ECQS:Styrol	ECQE,ECQV,ECQG:Polyester
ECUV,PQCUV,ECUE:Chip	ECEA,ECST,EEE:Electlytic
ECQMS:Mica	ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others		
1H:50V	05:50V	0F:3.15V	0J :6.3V	1V :35V	
2A:100V	1:100V	1A:10V	1A :10V	50,1H:50V	
2E:250V	2:200V	1V:35V	1C :16V	1J :16V	
2H:500V		0J:6.3V	1E,25:25V	2A :100V	

## 35.1. Base Unit

### 35.1.1. Cabinet and Electrical Parts

Ref. No.	Part No.	Part Name & Description	Remarks
1	PQGB10019Z1	BADGE, PANASONIC	
2	PQGG10178Z1	GRILLE, LCD	ABS-HB
3	PQGG10177Z1	GRILLE	ABS-HB
4	PQGP10246Z	OPTIC CONDUCTIVE PARTS, LED LENS	ABS-HB
5	PQKE10070Z7	GUIDE, H/S HOLDER	ABS-HB
6	PQBH10041Z1	PUSH BUTTON, HOOK	ABS-HB
7	PQKM10612Z1	CABINET BODY	ABS-HB
8	PQAS57P03Y	SPEAKER	
9	PQSL10249Z	KEYBOARD SWITCH, 12KEY	
10	PQBC10393Z1	PUSH BUTTON, NAVI	ABS-HB

Ref. No.	Part No.	Part Name & Description	Remarks
11	PQSL10250Z	KEYBOARD SWITCH, NAVI KEY	
12	PQGP10245Z1	PANEL, LCD	AS-HB
13	L5DCBFD00002	LIQUID CRYSTAL DISPLAY	
14	PQHS10601Z	TAPE, CUT OFF LIGHT	
15	PQHX11209Z	SPACER, LCD COVER SHEET	
16	PQHR11010Z	SPACER, LCD PLATE	PMMA-HB
17	PQHS10557Z	SPACER	
18	PQHR11009Z	GUIDE, LCD HOLDER	ABS-HB
19	PQJE10114Z	LEAD WIRE, FFC	
20	PQSA10141Z	ANTENNA, MAIN	
21	PQSA10142Z	ANTENNA, SUB	
22	PQHE10150Z	SPACER, CUSHION URETHAN	
23	PQMG10025Z	RUBBER PARTS, MIC	
24	PQYP10580Z1	CABINET COVER	PS-HB
25	PQGT16613Z	NAME PLATE	
26	PQKL10059Z1	STAND, WALL MOUNT ADAPTOR	ABS-HB

### 35.1.2. Main P.C.Board Parts

#### Note:

(\*1) When replacing IC3 or IC7, data need to be written to them with PQZZTCD530AX.

Ref. No.	Part No.	Part Name & Description	Remarks
PCB1	PQWP1D530AXH	MAIN P.C.BOARD ASS`Y (RTL)	
		(ICS)	
IC1	C0DBZGE00007	IC	
IC2	C1CB00001613	IC	
IC3	PQWI2D530AXH	IC (*1)	
IC7	PQWID530AXH	IC (*1)	
IC10	C1BB00000265	IC	
IC12	C0JBAF000223	IC	
IC13	C0JBAF000223	IC	
IC14	C0DBZGE00007	IC	
IC15	C0ABAA000055	IC	
		(TRANSISTORS)	
Q2	B1ADGE000004	TRANSISTOR(SI)	
Q3	B1ADGE000004	TRANSISTOR(SI)	
Q4	2SA1625	TRANSISTOR(SI)	S
Q5	PQVTFB822T7	TRANSISTOR(SI)	
Q8	2SD1994A	TRANSISTOR(SI)	
Q9	B1ABCE000009	TRANSISTOR(SI)	
		(DIODES)	
D1	B0JCME000035	DIODE(SI)	
D3	PQVDS1ZB60F1	DIODE(SI)	S
D4	MA1Z300	DIODE(SI)	S
D7	MA8047	DIODE(SI)	S
D8	MA8047	DIODE(SI)	S
D9	MA8047	DIODE(SI)	S
D11	B0JCDD000002	DIODE(SI)	
D200	MA111	DIODE(SI)	S
D201	MA111	DIODE(SI)	S
D202	MA111	DIODE(SI)	S
D203	MA111	DIODE(SI)	S
D204	MA111	DIODE(SI)	S
D205	MA111	DIODE(SI)	S
D208	B0BC2R1A0006	DIODE(SI)	
D209	B0BC2R1A0006	DIODE(SI)	
D213	B0BC2R1A0006	DIODE(SI)	
D215	MA8047	DIODE(SI)	S
D216	MA8047	DIODE(SI)	S
DA1	B0DDCM000001	DIODE(SI)	
		(COILS)	
L1	PQLQR4D4R7K	COIL	
L6	PQLQXF330K	COIL	S
L7	PQLQXF330K	COIL	S
C62	PQLQR2M1N8S	COIL	S
C311	PQLQR2M33NKT	COIL	
C320	PQLQR2M1N8S	COIL	S

Ref. No.	Part No.	Part Name & Description	Remarks
C322	PQLQR2M1N8S	COIL	S
		(JACKS & CONNECTOR)	
CN1	PQJJ1T023Y	JACK	S
CN2	PQJJ1T022Z	JACK	
CN9	K1MN24B00077	CONNECTOR	
CN10	PQJJ1T030Y	JACK	
		(RESISTORS)	
R10	ERJ3GEYJ473	47K	
R12	ERJ3GEYJ562	5.6K	
R15	ERJ3GEYJ153	15K	
R16	ERJ3GEYJ223	22K	
R17	ERJ3GEYJ223	22K	
R22	ERJ3GEYJ562	5.6K	
R23	ERJ3GEYJ104	100K	
R24	ERJ3GEYJ101	100	
R25	PQ4R18XJ272	2.7K	S
R26	ERJ3GEYJ103	10K	
R27	ERJ3GEYJ562	5.6K	
R28	ERJ3GEYJ222	2.2K	
R29	ERJ3GEYJ101	100	
R30	ERJ3GEYJ101	100	
R32	ERJ3GEYJ101	100	
R34	PQ4R18XJ000	0	S
R38	ERJ3GEYJ104	100K	
R39	ERJ3GEYJ560	56	
R42	ERJ3GEYJ273	27K	
R43	ERJ3GEYJ822	8.2K	
R44	ERJ3GEYJ272	2.7K	
R45	ERJ12YJ120	12	
R46	ERJ12YJ270	27	
R47	ERJ3GEYJ104	100K	
R48	ERJ3GEYJ473	47K	
R49	ERJ3GEYJ560	56	
R50	PQ4R18XJ100	10	S
R51	ERJ3GEYJ103	10K	
R52	ERJ3GEY0R00	0	
R53	ERJ3GEYJ222	2.2K	
R54	ERJ3GEYJ821	820	
R55	ERJ3GEYJ102	1K	
R56	ERJ3GEYJ103	10K	
R57	ERJ3GEYJ103	10K	
R59	ERJ3GEYJ103	10K	
R60	ERJ3GEYJ220	22	
R61	ERJ3GEYJ220	22	
R64	ERJ3GEYJ102	1K	
R71	ERJ3GEYJ104	100K	
R72	ERJ3GEYJ474	470K	
R75	ERJ3GEY0R00	0	
R78	ERJ3GEYJ103	10K	
R79	ERJ3GEY0R00	0	
R84	ERJ3GEYJ102	1K	
R85	ERJ3GEY0R00	0	
R86	ERJ3GEYJ103	10K	
R87	ERJ3GEYJ103	10K	
R88	ERJ3GEYJ103	10K	
R91	ERJ3GEYJ181	180	
R92	ERJ3GEYJ181	180	
R102	ERJ3GEYJ103	10K	
R106	ERJ3GEYJ273	27K	
R107	ERJ3GEYJ273	27K	
R108	ERJ3GEYJ103	10K	
R110	ERJ3GEYJ103	10K	
R111	ERJ3GEYJ103	10K	
R112	ERJ3GEYJ220	22	
R113	ERJ3GEYJ223	22K	
R220	ERJ3GEYJ124	120K	
R221	ERJ3GEYJ101	100	
R223	ERJ3GEYJ393	39K	
R230	ERJ3GEYJ222	2.2K	
R231	ERJ3GEYJ222	2.2K	
R251	ERJ3GEYJ101	100	
R259	ERJ3GEYJ123	12K	
R260	ERJ3GEYJ123	12K	

Ref. No.	Part No.	Part Name & Description	Remarks
R261	ERJ3GEYJ123	12K	
R262	ERJ3GEYJ123	12K	
R263	ERJ3GEYJ123	12K	
R264	ERJ3GEYJ330	33	
R265	ERJ3GEYJ330	33	
R266	ERJ3GEYJ222	2.2K	
R271	ERJ3GEYJ101	100	
R272	ERJ3GEYJ103	10K	
R276	ERJ3GEYJ331	330	
R278	ERJ3GEYJ2R2	2.2	
R279	ERJ3GEYJ331	330	
R280	ERJ3GEYJ2R2	2.2	
R281	ERJ3GEY0R00	0	
R282	ERJ3GEYJ330	33	
R283	ERJ3GEYJ102	1K	
R284	ERJ3GEYJ102	1K	
R285	ERJ3GEYJ103	10K	
R286	ERJ3GEYJ103	10K	
R287	ERJ3GEYJ104	100K	
R288	ERJ3GEYJ104	100K	
R289	ERJ3GEYJ220	22	
R290	ERJ3GEYJ183	18K	
R291	ERJ3GEYJ223	22K	
R292	ERJ3GEY0R00	0	
R294	ERJ3GEYJ101	100	
R295	ERJ3GEYJ103	10K	
R296	ERJ3GEY0R00	0	
R297	ERJ3GEY0R00	0	
R299	ERJ3GEYJ330	33	
C323	ERJ3GEY0R00	0	
L8	PQ4R10XJ000	0	S
L9	PQ4R10XJ000	0	S
		(CAPACITORS)	
C1	ECUV1H100DCV	10P	
C2	ECA1CM221	220P	
C3	ECEA1AKA101	100	
C6	ECUV1H100DCV	10P	
C7	ECEA0JKS101	100	
C8	ECUV1H040CCV	4P	
C10	ECUV1H100DCV	10P	
C11	ECEA0JKS101	100	
C12	ECQE2223KF	0.022	
C13	ECQE2223KF	0.022	
C14	ECKD2H681KB	680P	S
C15	ECKD2H681KB	680P	S
C17	ECUV1H561KBV	560P	
C20	ECUV1C104KBV	0.1	
C21	ECUV1H100DCV	10P	
C22	ECUV1H561KBV	560P	
C23	ECUV1H100DCV	10P	
C24	ECUV1C104KBV	0.1	
C26	ECUV1H100DCV	10P	
C27	ECUV1H100DCV	10P	
C28	ECUV1C224KBV	0.22	
C32	ECUV1C223KBV	0.022	
C33	ECUV1A105KBV	1	
C34	ECUV1C104KBV	0.1	
C36	ECUV1H472KBV	0.0047	S
C37	ECUV1C104KBV	0.1	
C38	ECUV1C823KBV	0.082	
C39	ECUV1C104KBV	0.1	
C40	PQCUV1A225KB	2.2	
C41	PQCUV1C224KB	0.22	
C42	ECUV1H300JCV	30P	
C43	ECUV1H120JCV	12P	
C44	ECUV1C104KBV	0.1	
C45	ECUV1C104KBV	0.1	
C46	PQCUV1A105KB	1	
C47	PQCUV1C224KB	0.22	
C48	ECUV1C104KBV	0.1	
C49	ECEA1HKS100	10	S
C53	ECUV1C104KBV	0.1	
C55	ECUV1H100DCV	10P	

Ref. No.	Part No.	Part Name & Description	Remarks
C57	ECUV1H100DCV	10P	
C58	ECUV1H100DCV	10P	
C59	ECUV1H020CCV	2P	
C63	ECUV1H330JCV	33P	
C64	ECUV1H060DCV	6P	S
C65	ECUV1C104KBV	0.1	
C68	ECUV1A105KBV	1	
C71	ECUV1H020CCV	2P	
C72	ECUV1H821JCV	820P	
C73	ECUV1A475KB	4.7	
C76	ECUV1H103KBV	0.01	
C82	ECUV1H020CCV	2P	
C84	ECUV1H020CCV	2P	
C100	ECUV1H100DCV	10P	
C101	ECUV1H682KBV	0.0068	S
C102	ECUV1H682KBV	0.0068	S
C104	ECUV1H060DCV	6P	S
C105	ECUV1H100DCV	10P	
C108	PQCUV1A225KB	2.2	
C109	PQCUV1A105KB	1	
C110	ECUV1H103KBV	0.01	
C114	ECUV1H100DCV	10P	
C119	ECUV1C683KBV	0.068	
C210	ECUV1C104KBV	0.1	
C211	ECUV1C104KBV	0.1	
C212	ECEA1AKA101	100	
C220	ECUV1H100DCV	10P	
C221	ECUV1C104KBV	0.1	
C223	ECJ1VB1H221K	220P	
C224	ECUV1H220JCV	22P	
C225	ECUV1C104KBV	0.1	
C226	ECUV1H100DCV	10P	
C227	ECUV1C105ZFB	1	
C230	ECEA1CK101	100	S
C231	ECUV1H100DCV	10P	
C232	ECEA1CK101	100	S
C233	ECUV1H100DCV	10P	
C240	ECUV1C104KBV	0.1	
C241	ECUV1C104KBV	0.1	
C254	ECUV1C683KBV	0.068	
C255	ECUV1H331JCV	330P	S
C258	ECUV1C104KBV	0.1	
C266	ECUV1H100DCV	10P	
C267	ECUV1H100DCV	10P	
C268	ECUV1C104KBV	0.1	
C269	ECUV1H331JCV	330P	S
C270	ECUV1C104KBV	0.1	
C271	ECEA1AKA221	220	
C272	ECKD2H681KB	680P	S
C273	ECUV1H100DCV	10P	
C274	ECUV1H100DCV	10P	
C275	ECUV1H100DCV	10P	
C276	ECUV1A105KBV	1	
C282	ECUV1C105ZFB	1	
C283	ECUV1C105ZFB	1	
C285	ECUV1H121JCV	120P	
C286	ECUV1H121JCV	120P	
C287	ECUV1H821KBV	820P	
C288	ECUV1H821KBV	820P	
C289	ECUV1H821KBV	820P	
C290	ECUV1H821KBV	820P	
C291	ECUV1H821KBV	820P	
C292	ECUV1H821KBV	820P	
C293	ECUV1H821KBV	820P	
C294	ECUV1H100DCV	10P	
C295	ECUV1C104KBV	0.1	
C296	ECUV1C104KBV	0.1	
C297	ECUV1C104KBV	0.1	
C298	ECUV1H100DCV	10P	
C299	ECST0JY106	10	
C300	ECUV1H681JCV	680P	S
C301	ECUV1H101JCV	100P	
C302	ECUV1H101JCV	100P	

Ref. No.	Part No.	Part Name & Description	Remarks
C303	ECUV1H101JCV	100P	
C304	ECUV1H100DCV	10P	
C305	ECUV1C104KBV	0.1	
C306	ECUV1H471JCV	470P	S
C308	ECUV1H471JCV	470P	S
C309	ECUV1H100DCV	10P	
C310	ECUV1H100DCV	10P	
C312	ECUV1H010CCV	1P	
C313	ECUV1H100DCV	10P	
C314	ECUV1H100DCV	10P	
C315	ECUV1H100DCV	10P	
C316	ECUV1H100DCV	10P	
C317	ECUV1H100DCV	10P	
C325	PQCUV1H100DC	10P	
		(OTHERS)	
MIC1	L0CBAB000052	MICROPHONE	
RFM1	J3FKK0000003	RF UNIT	
SA1	PQVDDSS301L	VARISTOR (SURGE ABSORBER)	S
X1	H0D103500003	CRYSTAL OSCILLATOR	

### 35.1.3. Operational P.C. Board Parts

Ref. No.	Part No.	Part Name & Description	Remarks
PCB2	PQWP2D535EH	OPERATIONAL P.C.BOARD ASS'Y (RTL)	
		(TRANSISTORS)	
Q501	PQVTDTC143XU	TRANSISTOR (SI)	S
Q503	PQVTDTC143XU	TRANSISTOR (SI)	S
Q504	PQVTDTC143XU	TRANSISTOR (SI)	S
		(DIODES)	
LED501	PQVDBR1111C	LED	S
LED503	LNJ408K84RAK	LED	
LED504	LNJ408K84RAK	LED	
LED505	LNJ308G8JRA	LED	
		(CONNECTORS)	
CN501	K1MN24B00072	CONNECTOR	
CN502	K1MN22B00047	CONNECTOR	
		(RESISTORS)	
R501	PQ4R10XJ221	220	S
R503	PQ4R10XJ151	150	S
R504	PQ4R10XJ151	150	S
R505	PQ4R10XJ121	120	S
R507	ERJ3GEYJ103	10K	
		(CAPACITORS)	
C501	ECUV1C474KBV	0.47	
C502	ECUV1C474KBV	0.47	
C503	ECUV1C474KBV	0.47	
C504	ECUV1C474KBV	0.47	
C505	ECUV1C474KBV	0.47	
C506	ECUV1A105KBV	1	
C507	ECUV1A105KBV	1	
C508	ECUV1A105KBV	1	
C509	ECUV1A105KBV	1	
C510	ECUV1A105KBV	1	
		(OTHERS)	
SW531	PQSH2B105Z	PUSH SWITCH	S

## 35.2. Cordless Handset

### 35.2.1. Cabinet and Electrical Parts

Ref. No.	Part No.	Part Name & Description	Remarks
101	PQGG10159Z1	GRILLE, LCD	ABS-HB
102	PQGP10230Z1	PANEL, KEY	ABS-HB
103	PQGS10231Z	PANEL, LCD	PC-HB
104	PQHS10567Z	TAPE, DOUBLE SIDE (LCD)	
105	PQHS10568Z	TAPE, DOUBLE SIDE (KEY)	
106	PQKM10595Z1	CABINET BODY	ABS-HB
107	PQGP10232Z	OPTIC CONDUCTIVE PARTS, LED LENS	ABS-HB
108	PQHE10141Z	SPACER, LCD SPONGE	

Ref. No.	Part No.	Part Name & Description	Remarks
109	PQBX10369Z1	PUSH BUTTON, TALK	ABS-HB
110	PQBC10380Z1	PUSH BUTTON, SP PHONE	ABS-HB
111	PQSX10226Z	KEYBOARD SWITCH	
112	PQHS10467Z	COVER, SP NET	
113	LOAD02A00015	SPEAKER	
114	PQBC10381Z1	PUSH BUTTON, CURSOR	ABS-HB
115	PQSA10134Z	ANTENNA	
116	PQHX11202Z	INSULATOR, SHEET	
117	PQJT10204Z	TERMINAL (L)	
118	PQJT10205Z	TERMINAL (R)	
119	PQHR10964Z	GUIDE, SPEAKER	ABS-HB
120	LOAD02A00010	SPEAKER	
121	PQHG10666Z	SPACER, SP RUBBER SHEET	
122	PQHS10457Z	COVER, SP NET	
123	PQJC10056Z	BATTERY TERMINAL C	
124	PQJC10057Z	BATTERY TERMINAL A	
125	PQJC10058Z	BATTERY TERMINAL B	
126	PQKE10357Z1	COVER, EARPHONE	
127	PQKF10583Y6	CABINET COVER	ABS-HB
128	PQGT16324Z	NAME PLATE	
129	PQHX11230Y	PLASTIC PARTS, BATTERY COVER SHEET	
130	PQHS10561Y	SPACER, BATTERY COVER	
131	PQKK10134Y6	LID, BATTERY COVER	ABS-HB

### 35.2.2. Main P.C.Board Parts

#### Note:

(\*2) When replacing IC10, data need to be written to them with PQZTCD530AX.

Ref. No.	Part No.	Part Name & Description	Remarks
PCB100	PQWP1D530AXR	MAIN P.C.BOARD ASS'Y (RTL) (for KX-TC530AXM)	
PCB100	PQWP1D151AXR	MAIN P.C.BOARD ASS'Y (RTL) (for KX-TCA151AXM)	
		(ICS)	
IC1	C1CB00001598	IC	
IC2	C1BB00000265	IC	
IC4	C1BB00000783	IC	
IC5	C0JBAB000371	IC	
IC10	PQW1D530AXR	IC (for KX-TC530AXM) (*2)	
IC10	PQW1D151AXR	IC (for KX-TCA151AXM) (*2)	
		(TRANSISTORS)	
Q1	PQVTFDN335N	TRANSISTOR(SI)	S
Q2	BLADGE000004	TRANSISTOR(SI)	
Q3	BLADGE000004	TRANSISTOR(SI)	
Q4	BLADGE000004	TRANSISTOR(SI)	
Q5	BIABCF000103	TRANSISTOR(SI)	
Q7	PQVT143XK146	TRANSISTOR(SI)	S
Q8	BLADGE000004	TRANSISTOR(SI)	
Q9	UN9219J	TRANSISTOR(SI)	
Q10	PSVTDTC143X	TRANSISTOR(SI)	S
Q11	PSVTDTC143X	TRANSISTOR(SI)	S
		(DIODES)	
D1	BOJCM000035	DIODE(SI)	
D3	MA8036H	DIODE(SI)	S
D4	MA8047	DIODE(SI)	S
D5	MA8047	DIODE(SI)	S
D6	BOBC2R1A0006	DIODE(SI)	
D7	MA2Z72000	DIODE(SI)	
D8	BOJCDD000002	DIODE(SI)	
LED1	B3AEB0000029	LED	
LED2	B3AEB0000029	LED	
LED4	LNJ308G8JRA	LED	
LED5	LNJ308G8JRA	LED	
LED6	LNJ308G8JRA	LED	
LED7	LNJ308G8JRA	LED	
LED8	LNJ308G8JRA	LED	
LED9	PQVDBR1111C	LED	S
LED10	PQVDBR1111C	LED	S
		(COILS)	

Ref. No.	Part No.	Part Name & Description	Remarks
F1	PQLQR2M5N6K	COIL	S
L1	GLA470L00001	COIL	
L2	PQLQR4D4R7K	COIL	
L4	GLC100MA0072	COIL	
L5	GLC100MA0072	COIL	
		(CRYSTAL OSCILLATORS)	
X1	H0D103500002	CRYSTAL OSCILLATOR	
X2	H2D600400004	CRYSTAL OSCILLATOR	
		(RESISTORS)	
R1	ERJ6RSJR10V	0.1	
R2	ERJ3EKF6802	0	S
R3	ERJ3EKF1803	0	S
R4	ERJ3GEYJ153	15K	
R5	ERJ3GEYJ471	470	
R6	ERJ3GEYJ103	10K	
R7	ERJ3GEYJ224	220K	
R9	ERJ3GEYJ562	5.6K	
R10	ERJ3GEYF203	20K	
R11	ERJ3GEYF103	10K	
R12	ERJ3GEYJ393	39K	
R14	ERJ3GEYJ330	33	
R15	ERJ3GEYJ100	10	
R17	ERJ3GEYJ470	47	
R18	ERJ3GEYJ121	120	
R20	ERJ3GEYJ102	1K	
R21	ERJ3GEYJ102	1K	
R24	ERJ3GEYJ474	470K	
R25	ERJ3GEYJ331	330	
R26	ERJ3GEYJ101	100	
R29	ERJ3GEYJ222	2.2K	
R34	ERJ3GEYJ184	180K	
R35	ERJ3GEYJ273	27K	
R36	ERJ3GEYJ683	68K	
R37	ERJ3GEYJ330	33	
R38	ERJ3GEYJ330	33	
R39	ERJ3GEYJ103	10K	
R40	ERJ3GEYJ223	22K	
R43	ERJ6RQJR22	0.22	
R46	ERJ3GEYJ562	5.6K	
R47	ERJ3GEYJ562	5.6K	
R48	ERJ3GEYJ330	33	
R50	ERJ3GEYJ101	100	
R51	ERJ3GEYJ105	1M	
R52	ERJ3GEYJ183	18K	
R55	ERJ3GEYJ103	10K	
R57	ERJ3GEYJ680	68	
R58	ERJ3GEYJ2R2	2.2	
R59	ERJ3GEYJ560	56	
R60	ERJ3GEYJ102	1K	
R61	ERJ3GEYJ103	10K	
R62	ERJ3GEYJ103	10K	
R63	ERJ3GEYJ103	10K	
R64	ERJ3GEYJ103	10K	
R66	ERJ3GEYJ103	10K	
R71	ERJ3GEYJ104	100K	
R72	ERJ3GEYJ102	1K	
R73	ERJ3GEYJ564	560K	
R74	ERJ3GEY0R00	0	
R75	ERJ3GEY0R00	0	
R76	ERJ3GEYJ223	22K	
R77	ERJ3GEYJ681	680	
R80	ERJ3GEYJ100	10	
R81	ERJ3GEY0R00	0	
R90	ERJ3GEYJ103	10K	
		(CAPACITORS)	
C1	EEE0JA331P	330	
C2	ECST0JY106	10	
C3	ECUV1C104KBV	0.1	
C4	ECUV1H100DCV	10P	
C5	ECST0JY106	10	
C7	ECUV1H100DCV	10P	
C8	ECUV1A224KBV	0.22	
C9	ECUV1C683KBV	0.068	

Ref. No.	Part No.	Part Name & Description	Remarks
C10	ECUV1C104KBV	0.1	
C12	ECUV1A105KBV	1	
C13	ECUV1C104KBV	0.1	
C14	ECUV1C104KBV	0.1	
C15	ECUV1C105ZFBV	1	
C16	ECUV1C104KBV	0.1	
C17	ECUV1H100DCV	10P	
C18	ECUV1H102KBV	0.001	
C19	ECUV1C104KBV	0.1	
C20	ECUV1C104KBV	0.1	
C21	ECUV1C104KBV	0.1	
C22	ECUV1C104KBV	0.1	
C23	ECUV1C104KBV	0.1	
C24	ECUV1C104KBV	0.1	
C27	ECUV1A105KBV	1	S
C28	ECUV1A105KBV	1	S
C29	ECUV1A105KBV	1	S
C30	ECUV1A105KBV	1	S
C31	ECUV1C474KBV	0.47	
C32	ECUV1C474KBV	0.47	
C33	ECUV1C474KBV	0.47	
C34	ECUV1C474KBV	0.47	
C35	ECUV1C474KBV	0.47	
C37	ECUV1C683KBV	0.068	
C38	ECUV1H471JCV	470P	S
C39	ECUV1A105ZFBV	1	
C40	ECST0JY106	10	
C42	ECUV1A106ZF	10	S
C44	ECUV1A105ZFBV	1	
C45	ECUV1C104KBV	0.1	
C46	ECUV1C104KBV	0.1	
C47	ECUV1C104KBV	0.1	
C48	ECUV1C473KBV	0.047	
C49	ECUV1C104KBV	0.1	
C52	ECUV1C104KBV	0.1	
C54	ECUV1H330JCV	33P	
C55	ECUV1C104KBV	0.1	
C56	ECUV1H680JCV	68P	
C57	EEEE0JA331P	330	
C58	ECUV1C104KBV	0.1	
C59	ECUV1A105ZFBV	1	
C60	ECUV1A475KB	4.7	
C61	ECUV1A105KBV	1	
C62	ECUV1A475KB	4.7	
C63	ECUV1H562KBV	0.0056	
C64	ECUV1H020CCV	2P	
C65	ECUV1H020CCV	2P	
C66	ECUV1H020CCV	2P	
C67	F1G1H100A420	10P	
C68	ECUV1C683KBV	0.068	
C69	ECUV1H020CCV	2P	
C70	ECUV1C104KBV	0.1	
C73	ECUV1C104KBV	0.1	
C74	ECUV1C104KBV	0.1	
C75	ECUV1H100DCV	10P	
C77	ECUV1H100DCV	10P	
C80	PQCUV1A225ZF	2.2	
C81	ECUV1H020CCV	2P	
C82	ECUV1H020CCV	2P	
C86	ECUV1C105ZFBV	1	
C87	ECUV1H100DCV	10P	
C89	ECUV1H100DCV	10P	
C90	ECUV1H100DCV	10P	
C91	ECUV1H100DCV	10P	
C92	ECUV1H100DCV	10P	
C93	ECUV1H101JCV	100P	
C94	ECUV1H101JCV	100P	
C100	ECUV1A105ZFBV	1	
C101	ECUV1C104KBV	0.1	
		(OTHERS)	
MIC	L0CBAB000052	MICROPHONE	
IC3	J3FFK0000003	RF UNIT	
CN4	K2HD103D0001	JACK	

Ref. No.	Part No.	Part Name & Description	Remarks
SW1	K0C115A00003	SEESAW SWITCH	

## 35.3. Charger Unit

### 35.3.1. Cabinet and Electrical Parts

Ref. No.	Part No.	Part Name & Description	Remarks
1	PQLV30018ZM1	CHARGER UNIT	
1-1	PQGG10155Y5	GRILLE	ABS-HB
1-2	PQKM10591Z3	CABINET BODY	PS-HB
1-3	PQKE10356Z1	GUIDE, CHARGE TERMINAL CASE	POM-HB
1-4	PQJT10206Z	CHARGE TERMINAL	
1-5	PQHX10991Z	CUSHION, URETHANE FORM	
1-6	PQMH10426Z	WEIGHT	
1-7	PQYF10563Z3	CABINET COVER	PS-HB
1-8	PQGT15735W	NAME PLATE (Made in Malaysia)	
1-8	PQGT15735X	NAME PLATE (Made in Thailand)	

### 35.3.2. Main P.C.Board Parts

Ref. No.	Part No.	Part Name & Description	Remarks
PCB200	PQWPA142ESCH	MAIN P.C.BOARD ASS'Y (RTL)	
		(DIODE)	
D1	B0JAME000085	DIODE(SI)	
		(JACK)	
J1	PQJJ1B4Y	JACK	S
		(RESISTORS)	
R1	ERJ1WYJ220	22	
R2	ERJ1WYJ270	27	

## 35.4. Accessories and Packing Materials

### 35.4.1. KX-TCDS30AXM

Ref. No.	Part No.	Part Name & Description	Remarks
A1	PQLV19BXZ	AC ADAPTOR	△
A2	PQLV200BXZ	AC ADAPTOR	△
A3	PQJA10075Z	CORD, TELEPHONE	
A4	PQJA212K	CORD, TELEPHONE	
A5	PQKE10355Z1	HANGER, BELT CLIP	PC+ABS-HB
A6	PQJXH0128Y	HANDSET	
A7	PQX13810Z	INSTRUCTION BOOK	
A8	PQQW13027Z	QUICK GUIDE	
A9	PQQW13233Z	QUICK GUIDE (for Arabic)	
A10	PQQW12846W	LEAFLET, RECHARGE	
P1	PQPP170Y	PROTECTION COVER (for Base Unit)	
P2	PFPH1050Z	PROTECTION COVER (for Cordless Handset)	
P3	PQPP10086Z	PROTECTION COVER (for Charger Unit)	
P4	PQPK14198Z	GIFT BOX	
P5	PQPD10577Z	CUSHION	
P6	PQPD10573Z	CUSHION	

### 35.4.2. KX-TCA151AXM

Ref. No.	Part No.	Part Name & Description	Remarks
A1	PQLV200BXZ	AC ADAPTOR	△
A2	PQKE10355Z1	HANGER, BELT CLIP	PC+ABS-HB
A3	PQX13835Z	INSTRUCTION BOOK	
A4	PQX14003Z	INSTRUCTION BOOK (for Arabic)	
A5	PQQW12846W	LEAFLET, RECHARGE	
P1	PQPP10086Z	PROTECTION COVER (for Charger Unit)	



Ref. No.	Part No.	Part Name & Description	Remarks
P2	PQPP10084Z	PROTECTION COVER (for Cordless Handset)	
P3	PQPK14041Z	GIFT BOX	

### 35.5. Fixtures and Tools

Part No.	Part Name & Description	Remarks
PQZZ1CD505E	JIG CABLE	
PQZZTCD530AX	BATCH FILE	

**Note:**

See **CHECK PROCEDURE (BASE UNIT)** (P.57), and **CHECK PROCEDURE (CORDLESS HANDSET)** (P.58).

## 36 FOR SCHEMATIC DIAGRAM

### 36.1. Base Unit (SCHEMATIC DIAGRAM (BASE UNIT))

**Notes:**

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

**Important Safety Notice:**

Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. This schematic diagram may be modified at any time with the development of new technology.

### 36.2. Cordless Handset (SCHEMATIC DIAGRAM (CORDLESS HANDSET))


**Notes:**

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
2. The schematic diagrams and circuit board may be modified at any time with the development of new technology.


### 36.3. Memo

### 37 SCHEMATIC DIAGRAM (BASE UNIT)


### 37.1. Main

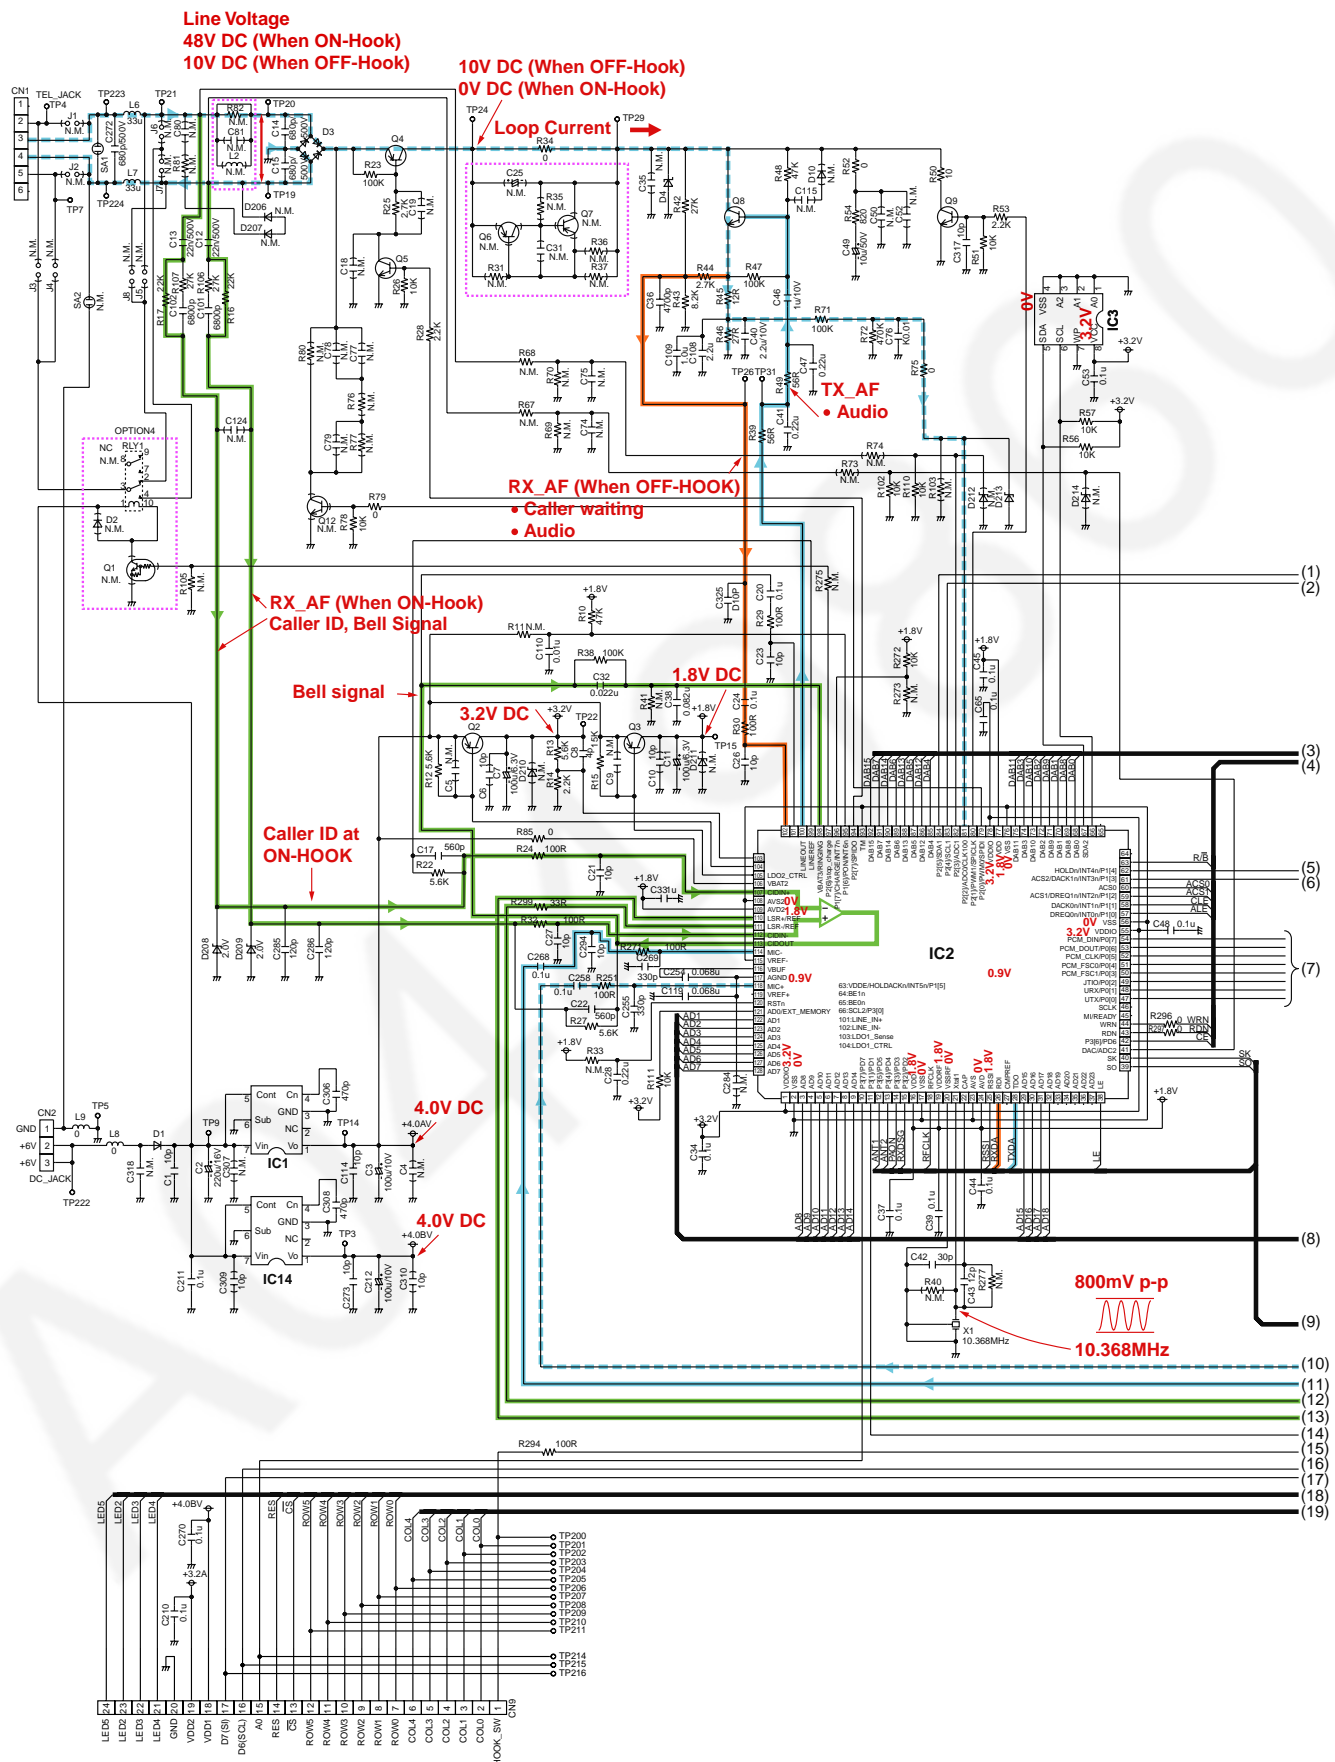

: No Components

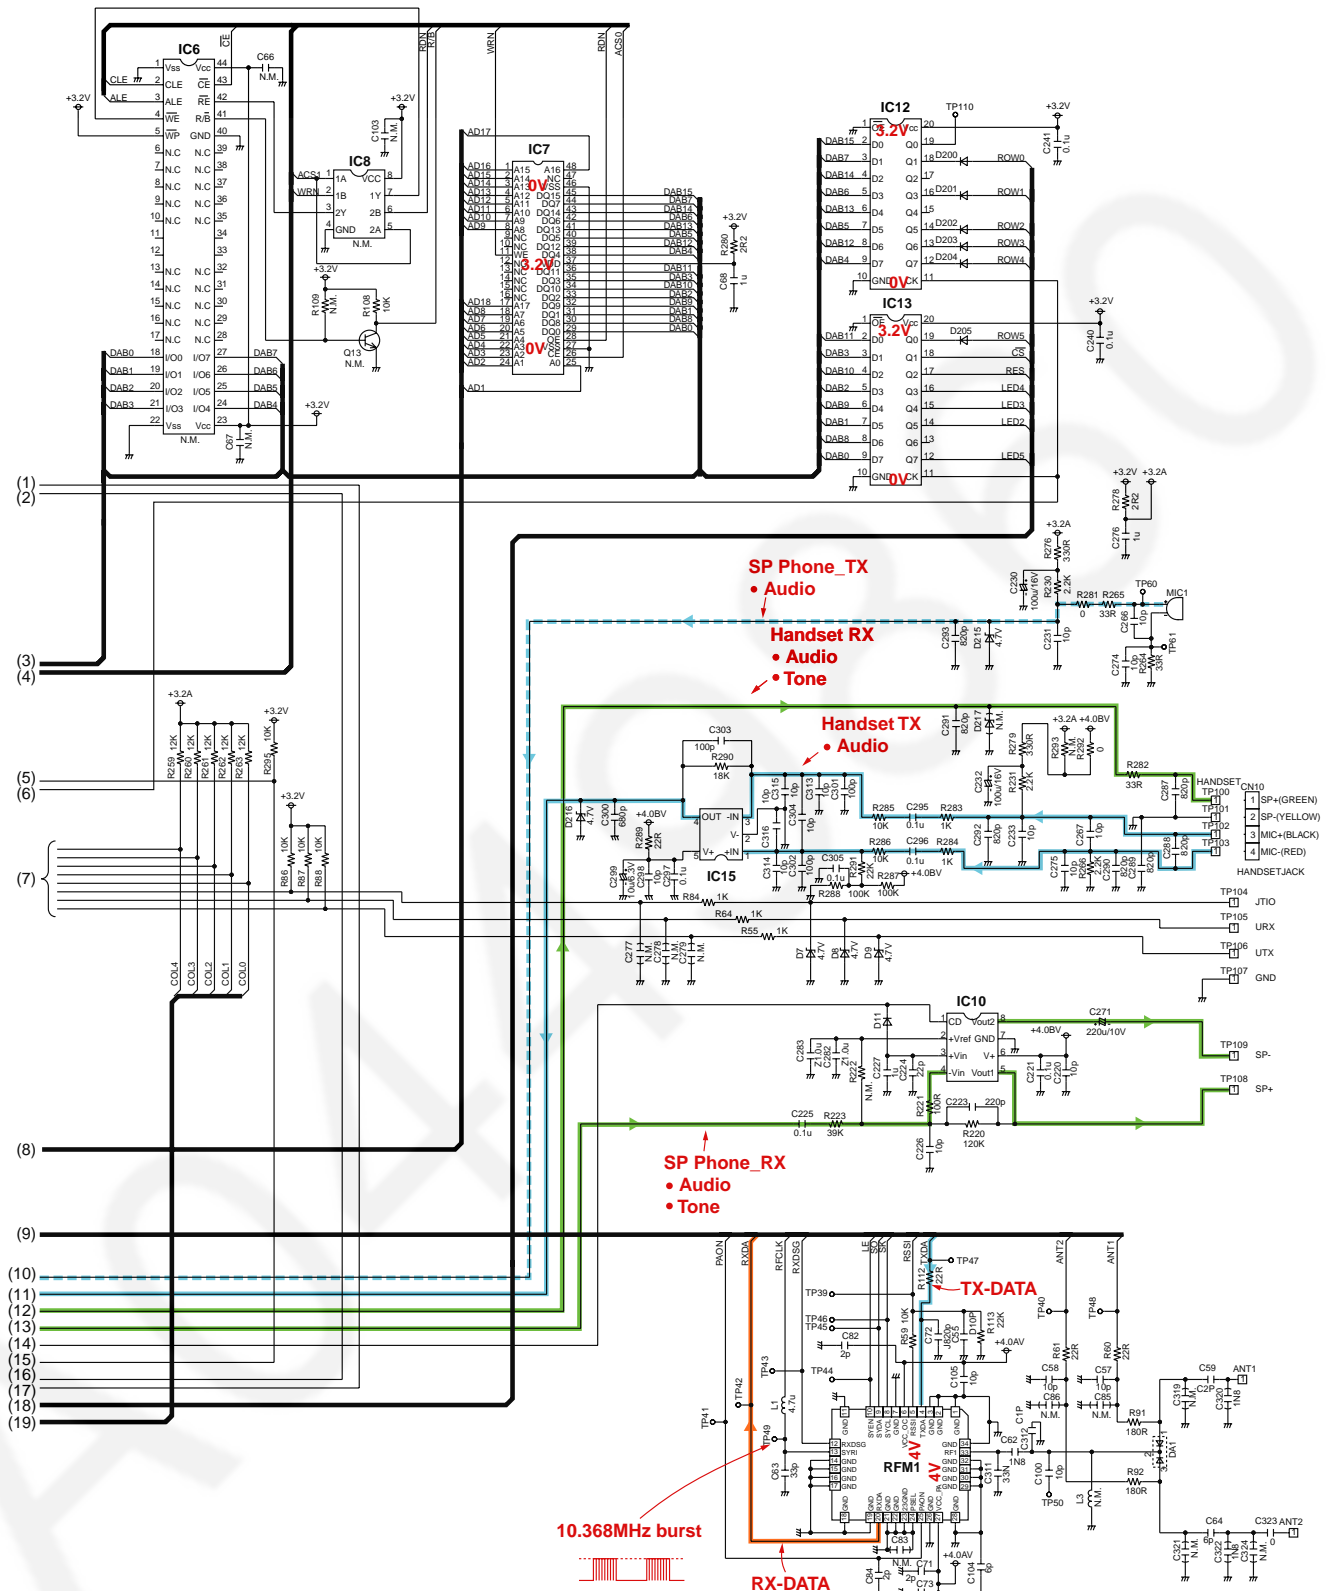


KX-TC530AXM: SCHEMATIC DIAGRAM (BASE UNIT) Main

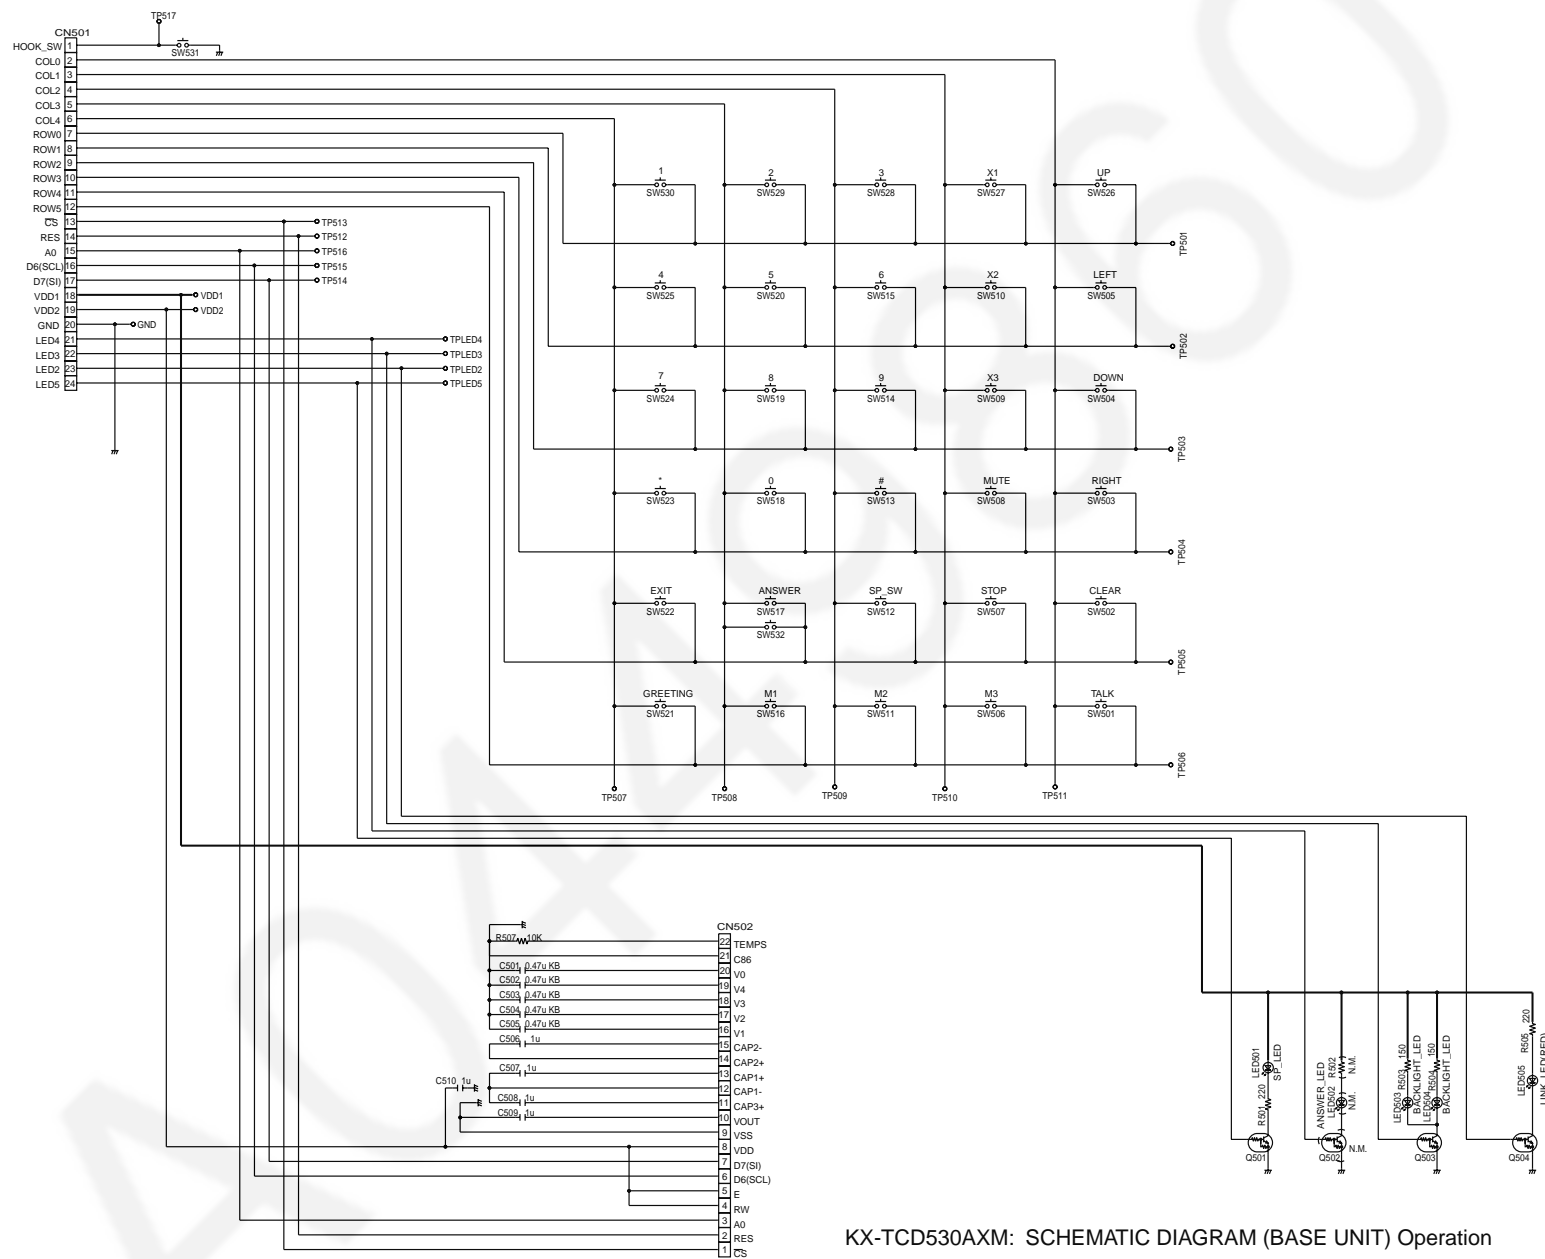


### KX-TC530AXM: SCHEMATIC DIAGRAM (BASE UNIT) Operation

### 37.3. Memo

# 38 SCHEMATIC DIAGRAM (CORDLESS HANDSET)

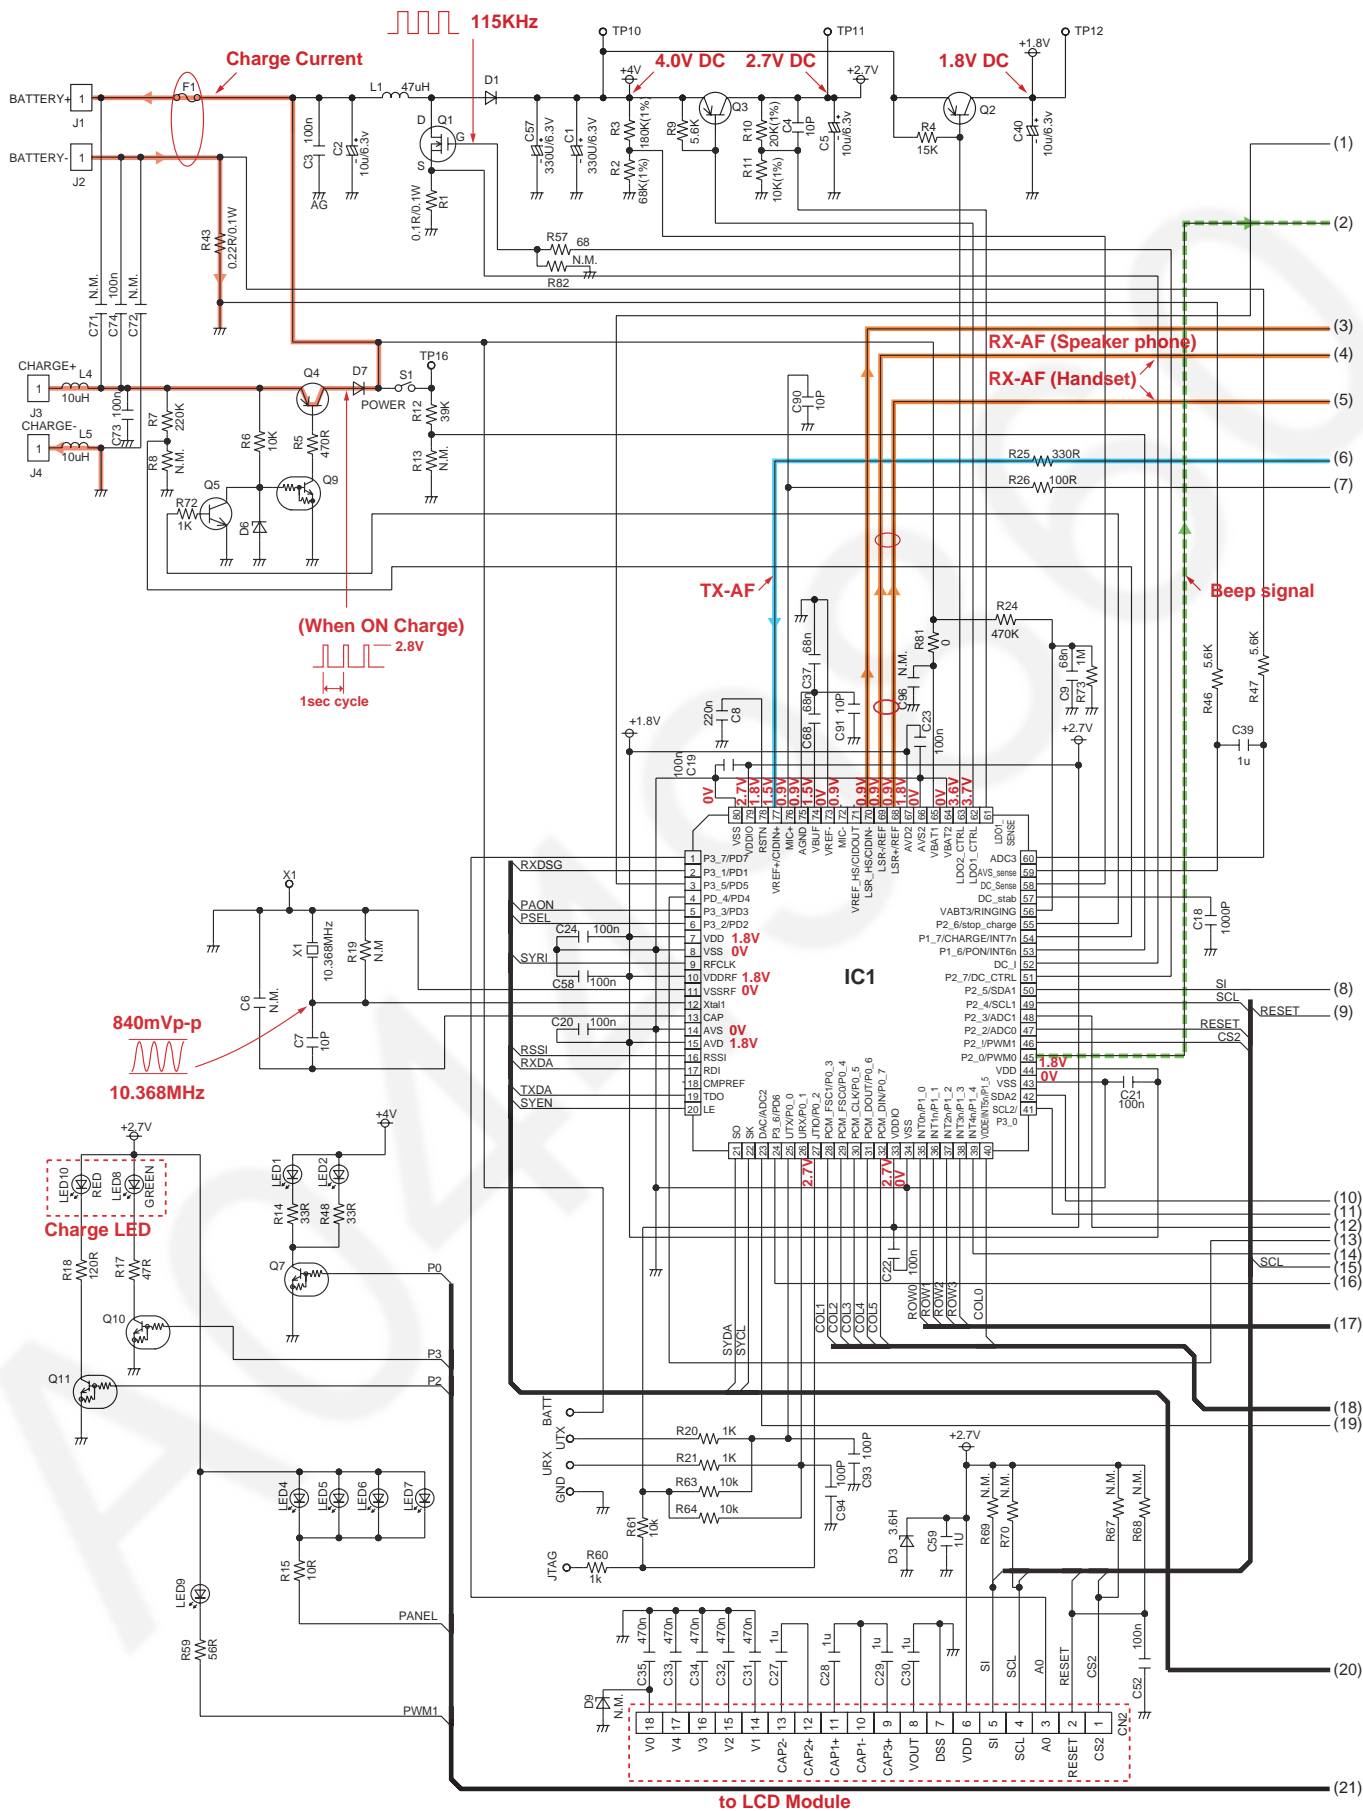




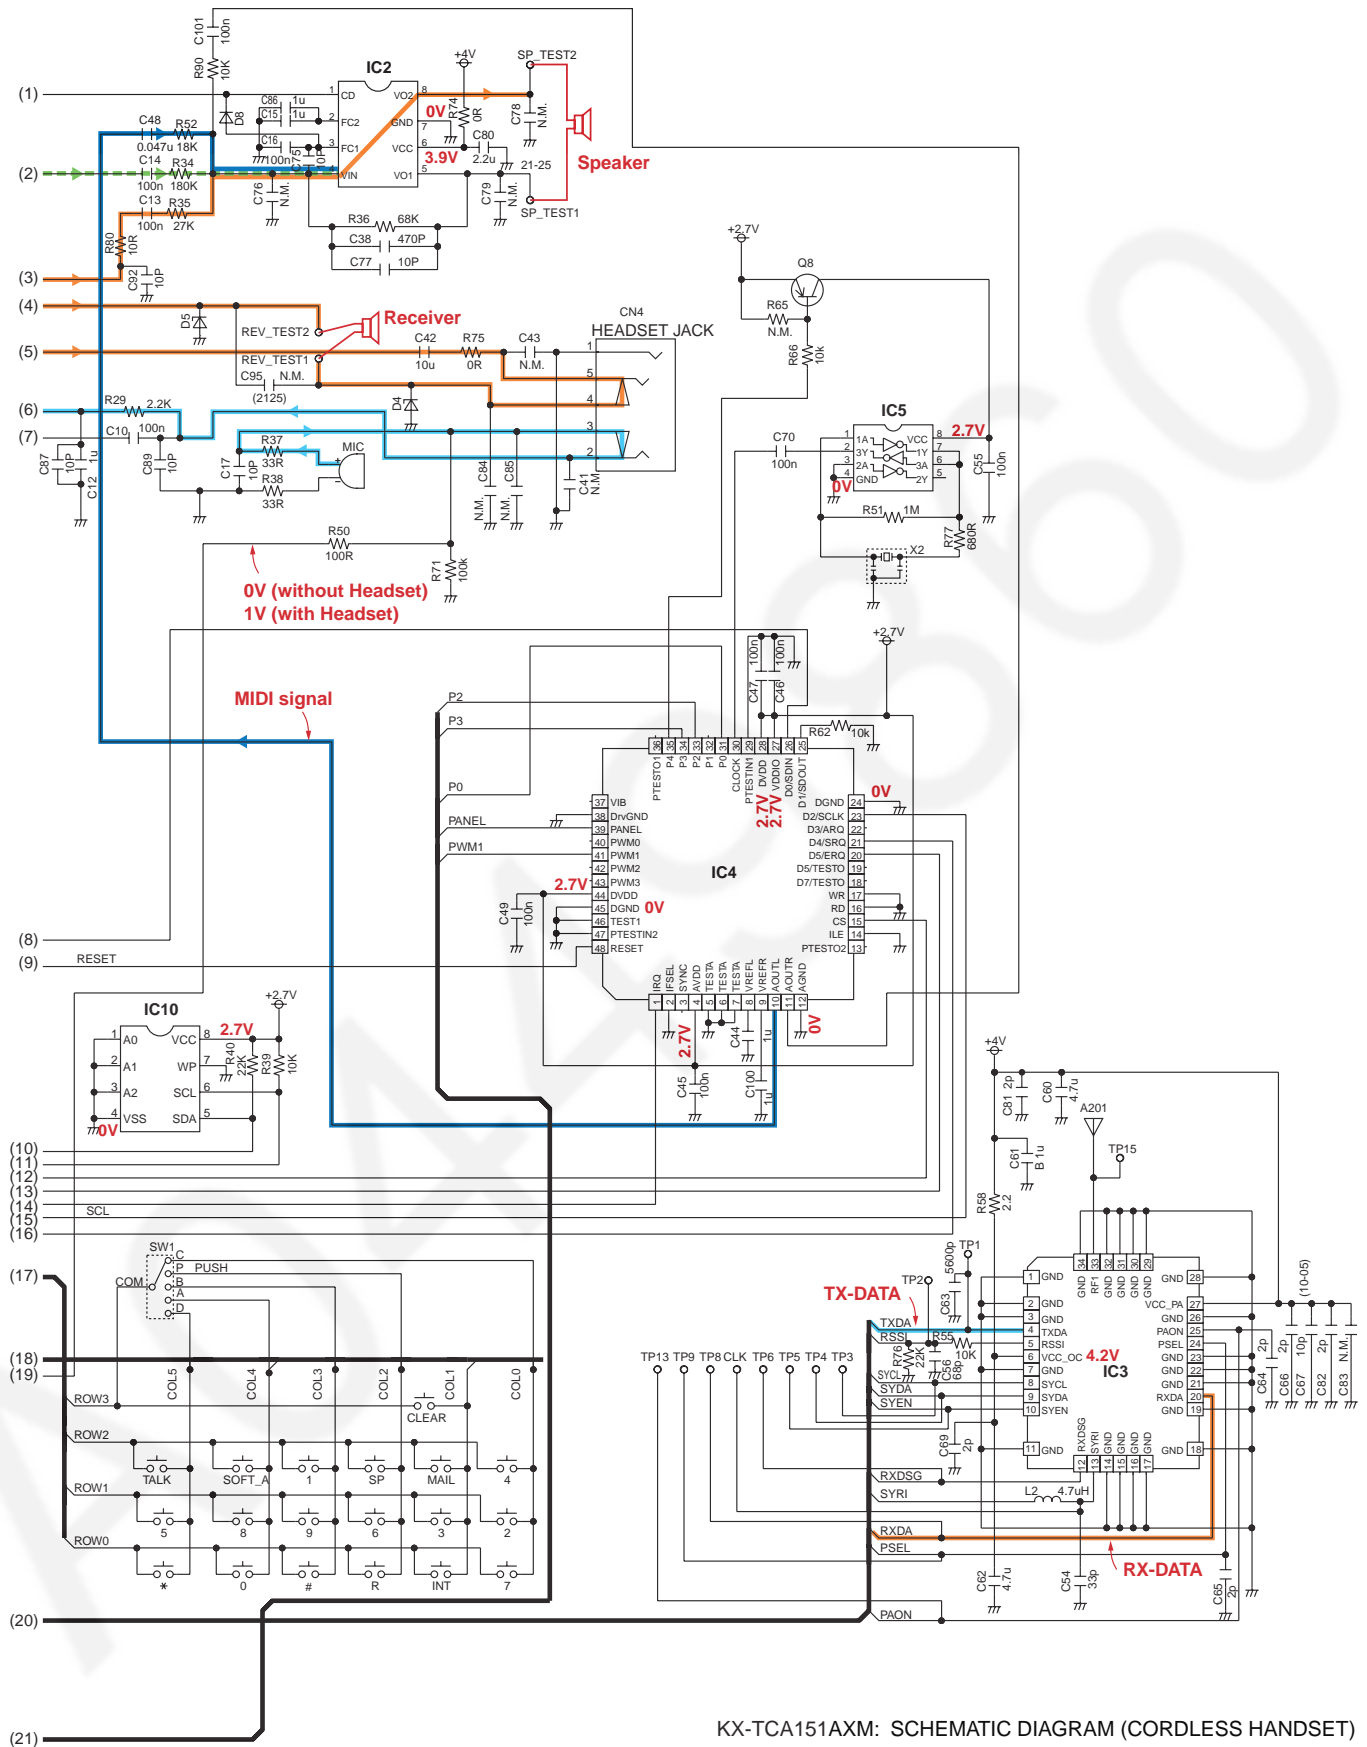

KX-TCA151AXM: SCHEMATIC DIAGRAM (CORDLESS HANDSET)

## 39 SCHEMATIC DIAGRAM (CHARGER UNIT)

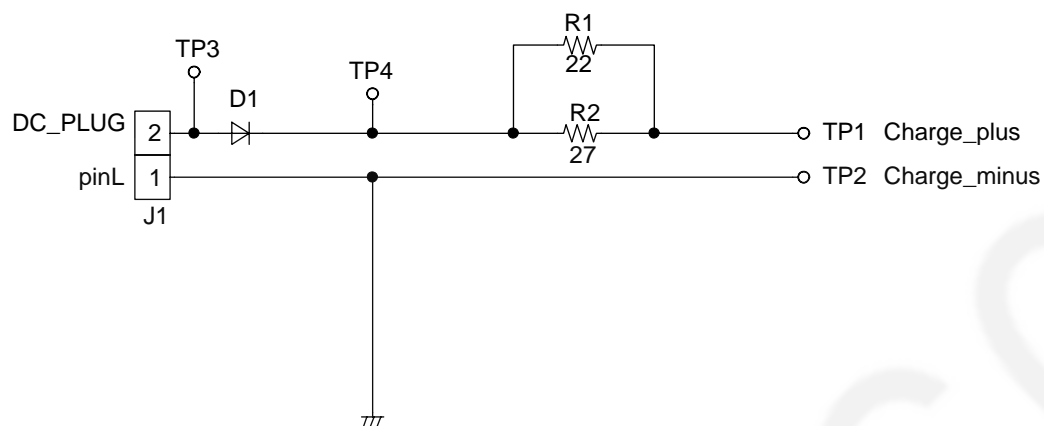


SCHEMATIC DIAGRAM (CHARGER UNIT)

# 40 CIRCUIT BOARD (BASE UNIT)


## 40.1. Main

### 40.1.1. Component View

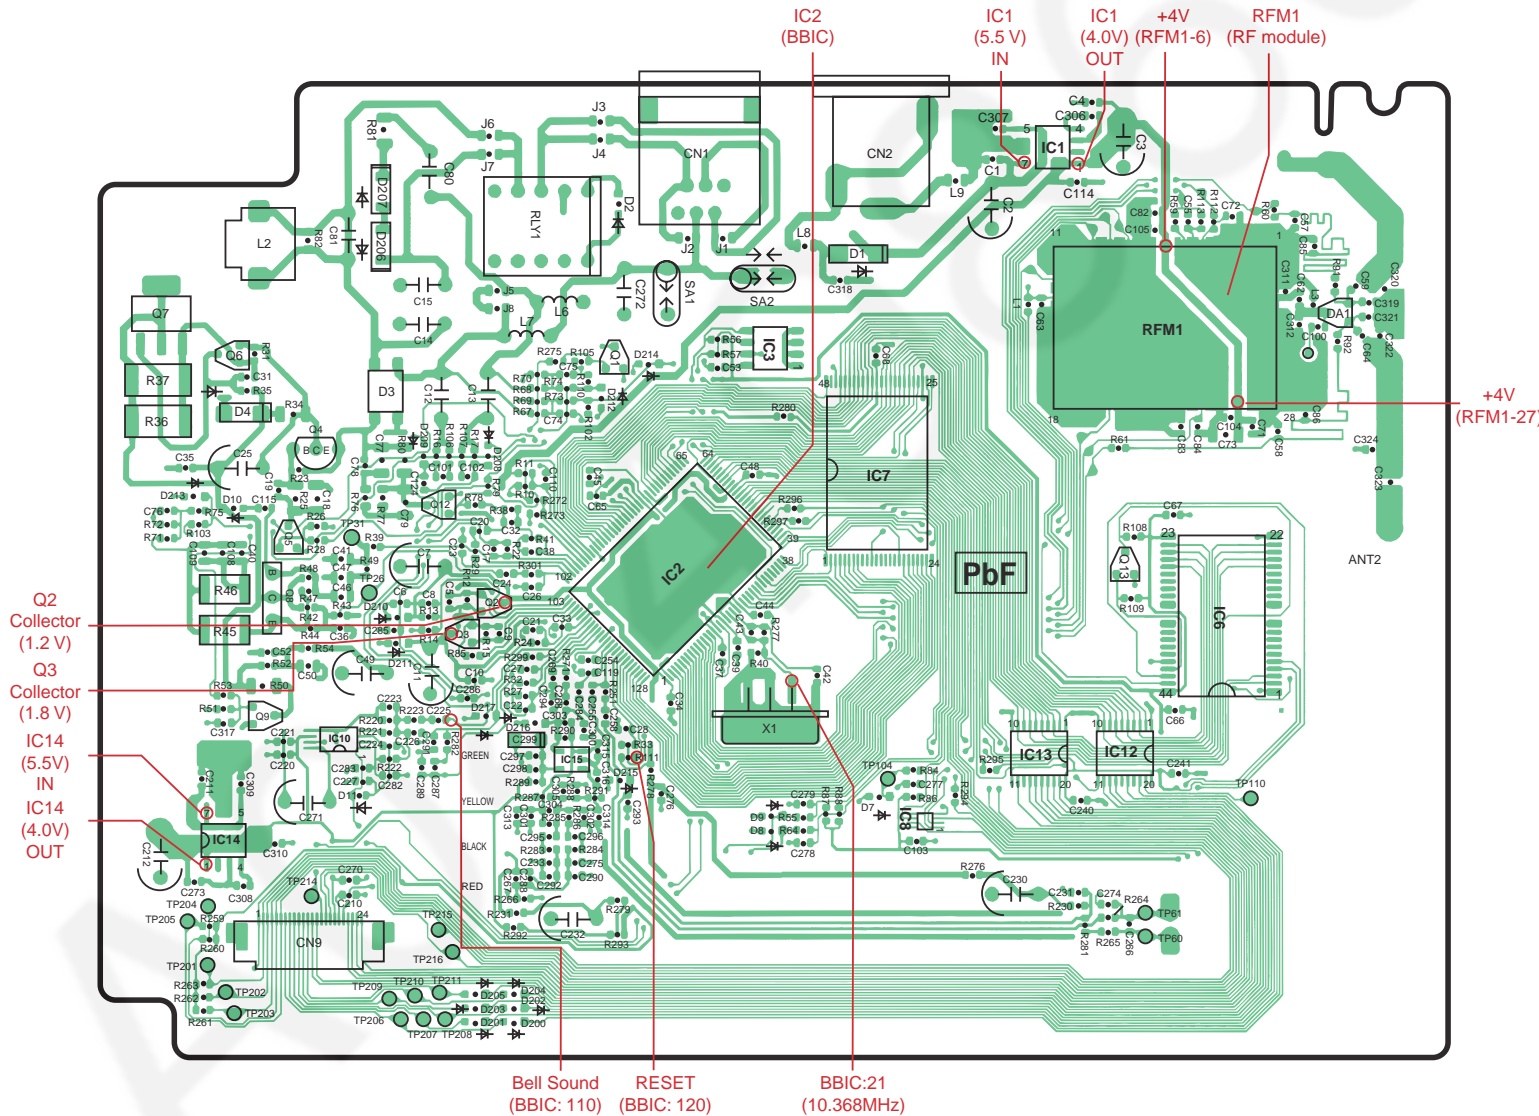

KX-TC5030AXM / KX-TC5030AXM CIRCUIT BOARD (BASE UNIT) Main (Component View)


## 40.1.2. Flow Solder Side View

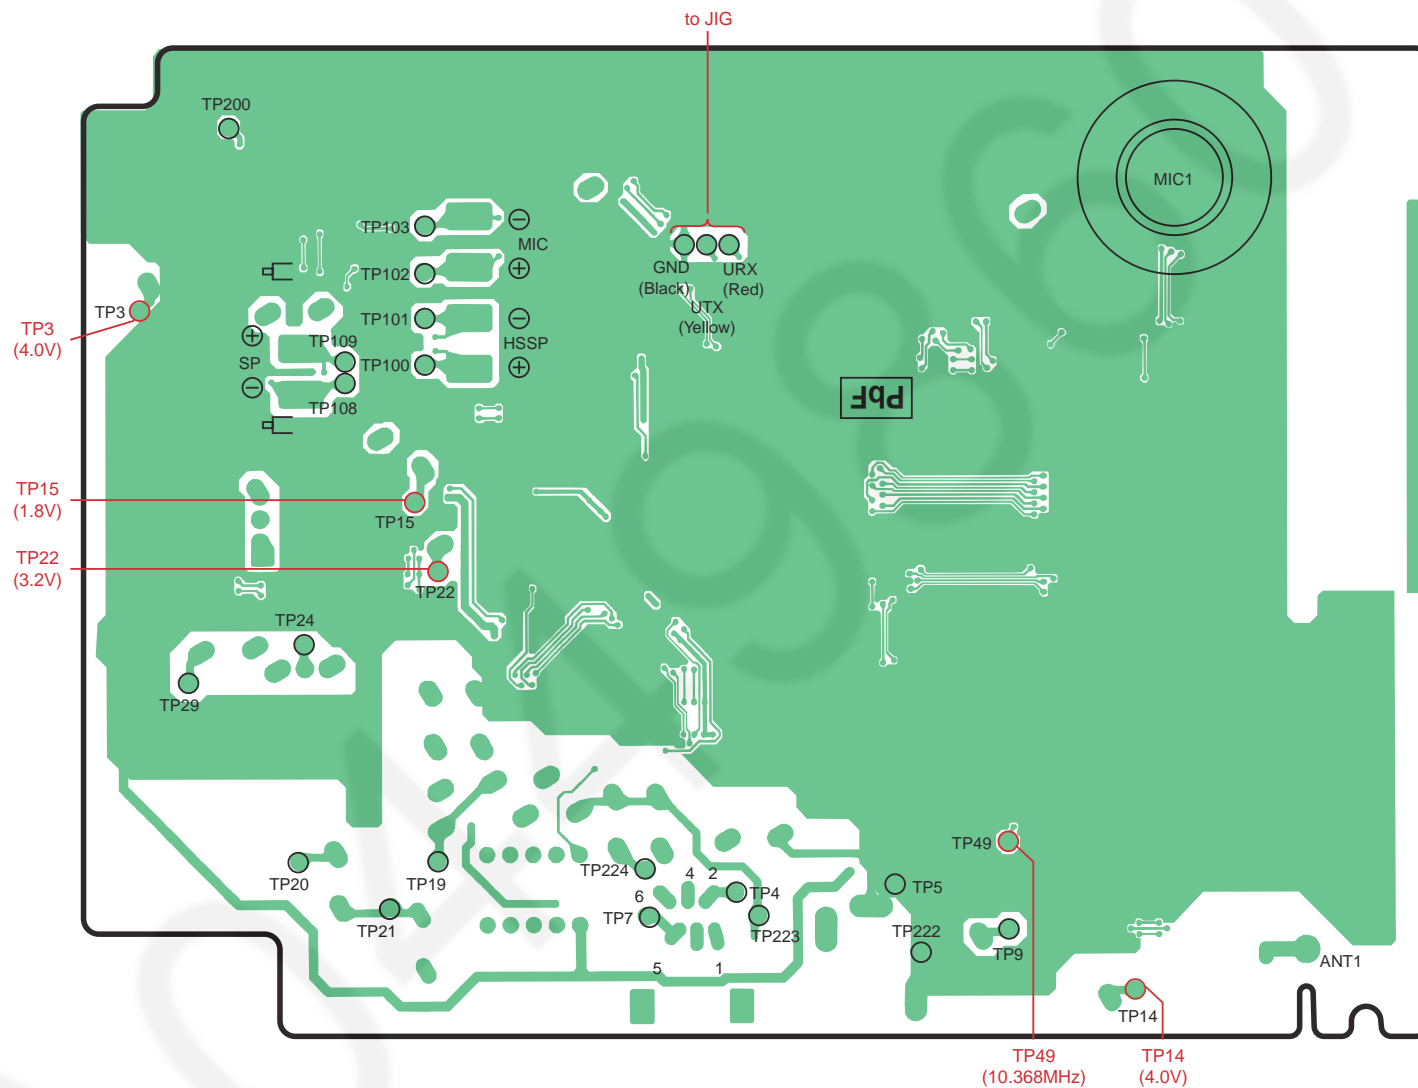

KX-TCDS30AXM CIRCUIT BOARD (BASE UNIT) Main (Flow Solder Side View)


40.2. Operation

40.2.1. Component View

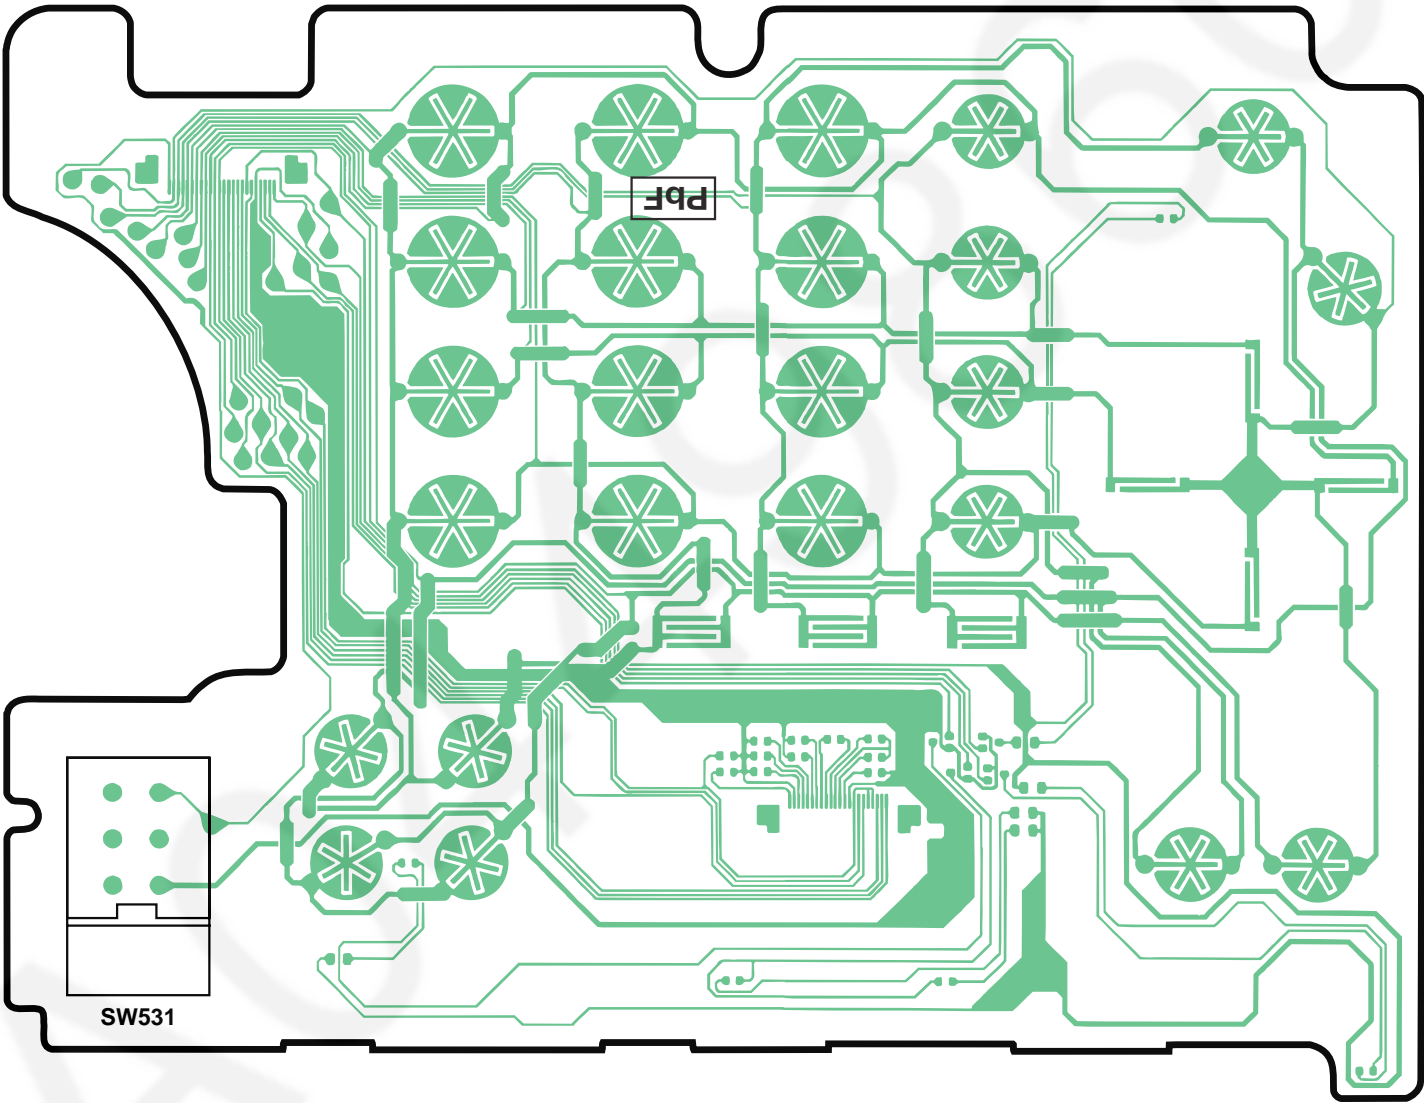

KX-TC530AXM CIRCUIT BOARD (BASE UNIT) Operation (Component View)


## 40.2.2. Flow Solder Side View

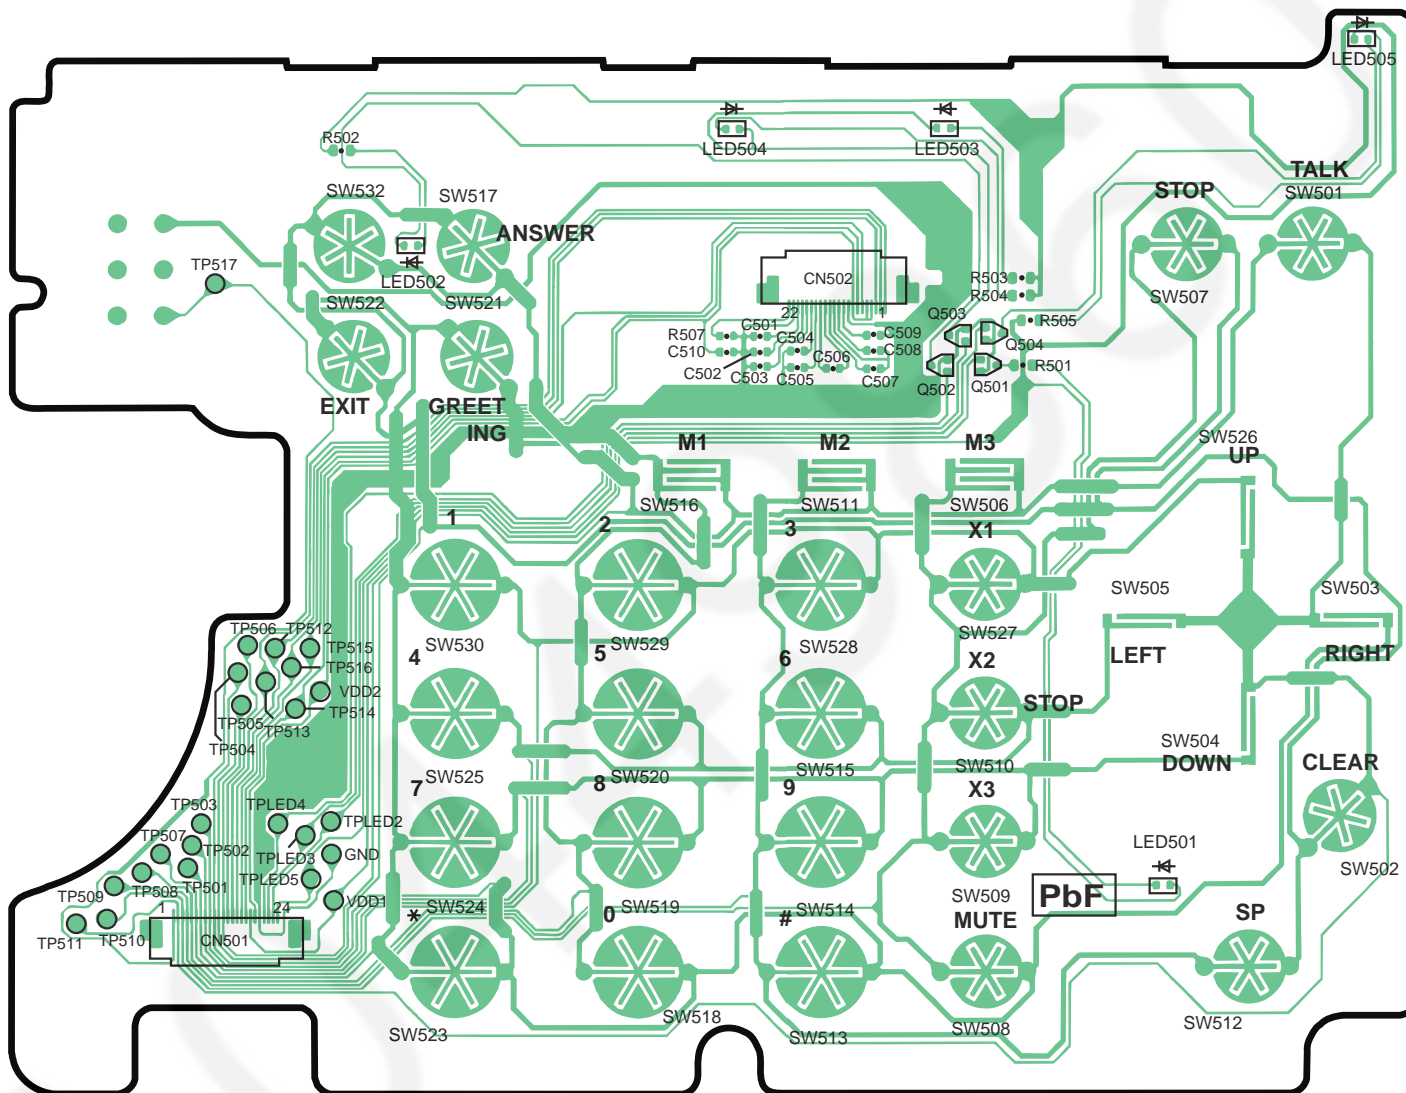

KX-TCD530AXM CIRCUIT BOARD (BASE UNIT) Operation (Flow Solder Side View)

# 41 CIRCUIT BOARD (CORDLESS HANDSET)


## 41.1. Component View

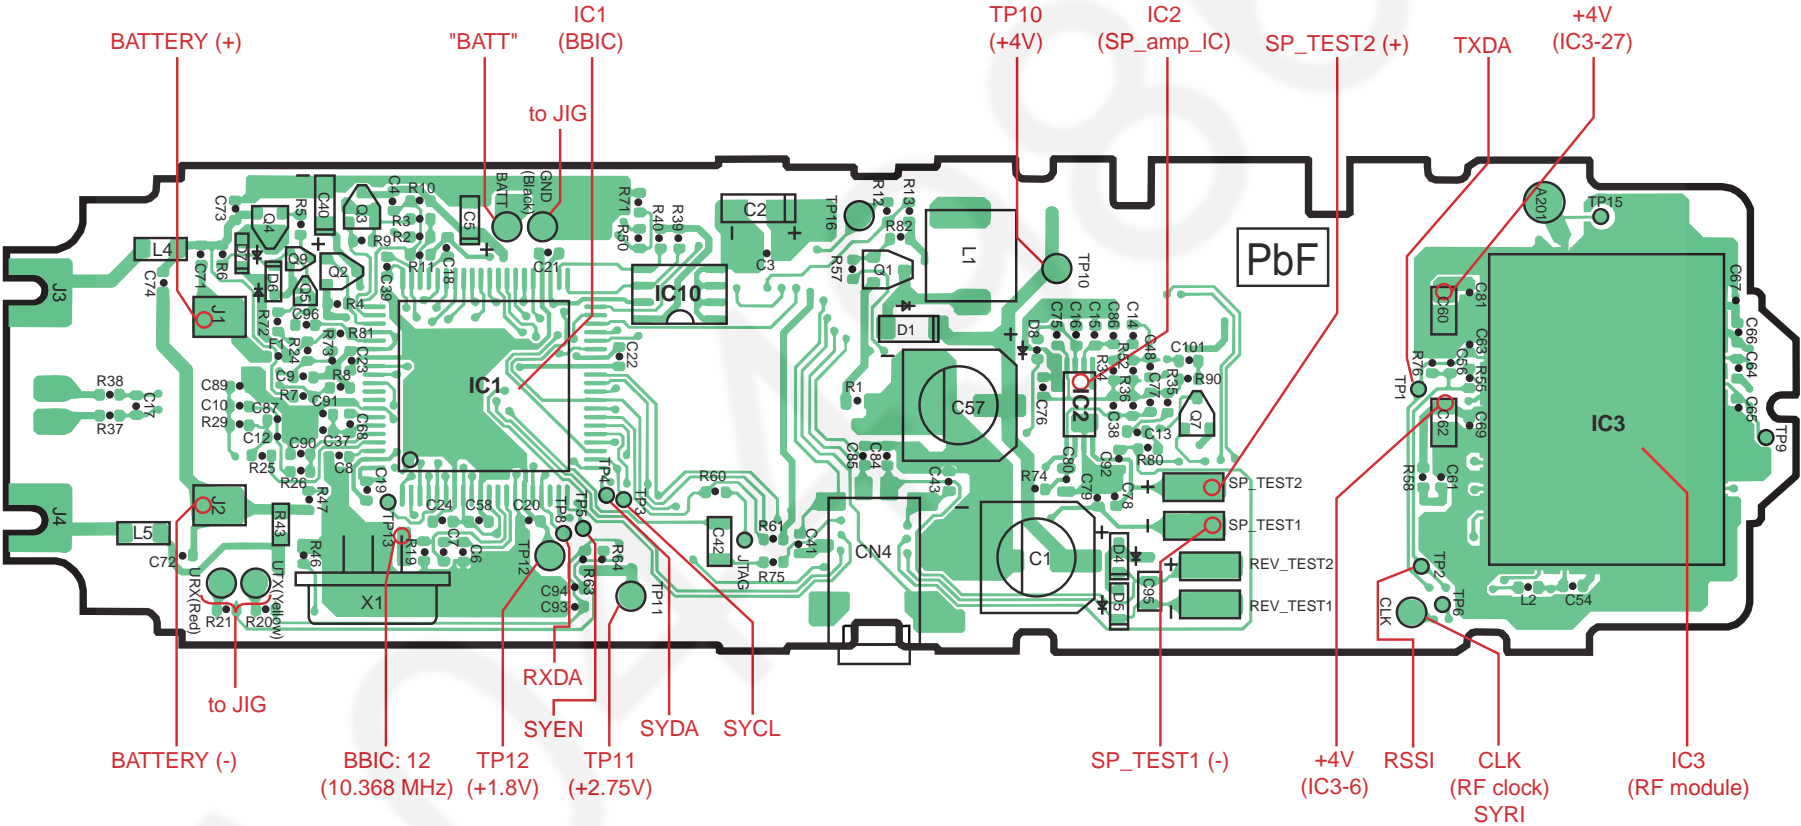

KX-TCA151AXM CIRCUIT BOARD (CORDLESS HANDSET) Component View



## 41.2. Flow Solder Side View

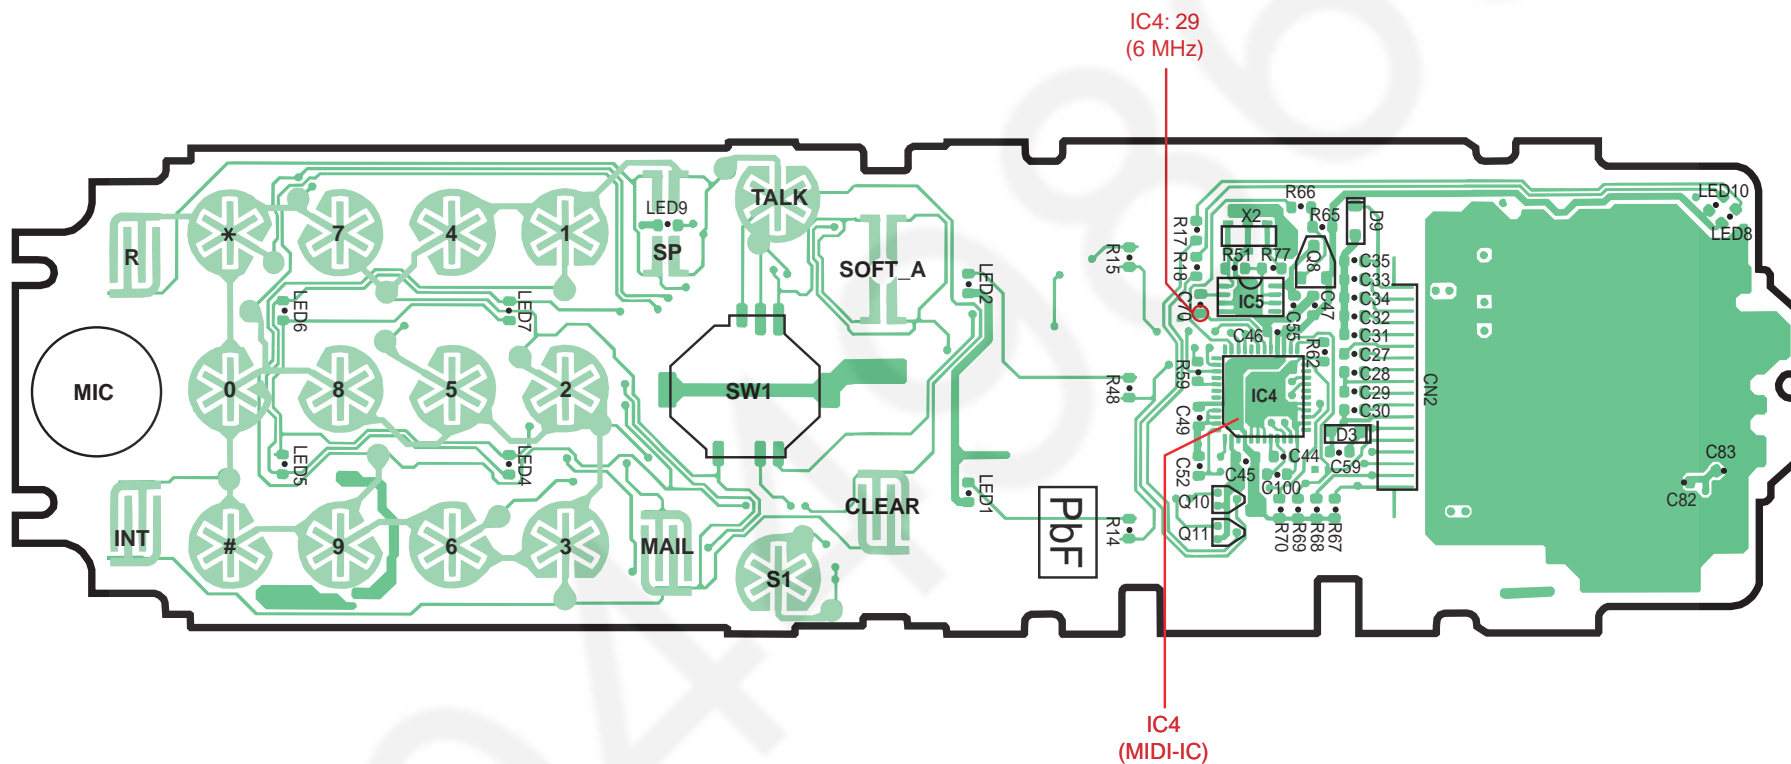


KX-TCA151AXM CIRCUIT BOARD (CORDLESS HANDSET) Flow Solder Side View




## 42 CIRCUIT BOARD (CHARGER UNIT)

### 42.1. Component View

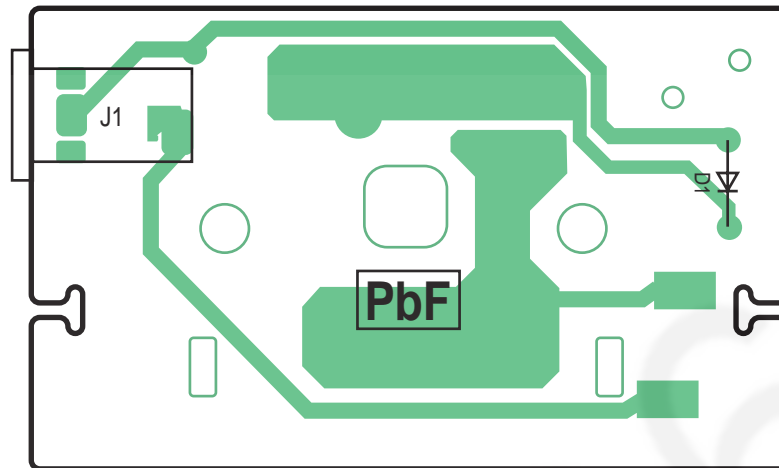

CIRCUIT BOARD (CHARGER UNIT) Component View

### 42.2. Flow Solder Side View

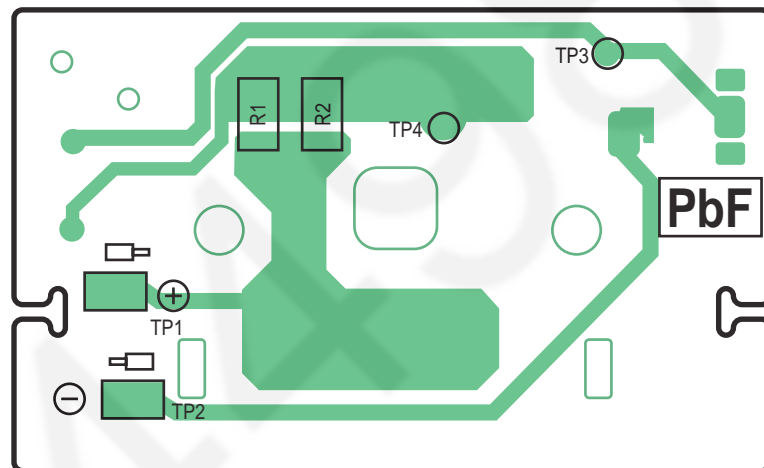

CIRCUIT BOARD (CHARGER UNIT) Flow Solder Side View