# Service Manua

Caller ID Compatible



KX-TGA641BXT (Cordless Handset)

(Base Unit)



(Charger Unit)

#### Configuration for each model

Model No	Base Unit	Handset	Charger Unit	Expandable
KX-TG6461	1 (TG6461)	1 (TGA641)	1	Up to 6
KX-TGA641*		1 (TGA641)	1	

<sup>\*</sup> KX-TGA641 is also an optional accessory, which contains a handset and a charger.

# **Telephone Equipment** Model No. KX-TG6461BXT **KX-TGA641BXT**

**Digital Cordless Answering System** 

T: Titanium Black Version (for Middle Near East and Africa)

## **MARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

#### **IMPORTANT SAFETY NOTICE**

There are special components used in this equipment which are important for safety. These parts are marked by  $\triangle$  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

## · IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary sllightly from the actual product.

# **TABLE OF CONTENTS**

		PAGE
1	Safety Precautions	4
	1.1. For Service Technicians	4
2	Warning	
	2.1. Battery Caution	
	2.2. About Lead Free Solder (Pbf: Pb free)	
	2.3. Discarding of P. C. Board	
	Specifications	
4	Technical Descriptions	
	4.1. Block Diagram (Base Unit)	/
	4.2. Circuit Operation (Base Unit)	
	4.3. Block Diagram (Cordless Handset)	
	4.4. Circuit Operation (Cordless Handset)4.5. Circuit Operation (Charger Unit)	
	4.6. Signal Route	1 <del>4</del> 15
5	Location of Controls and Components	
	Installation Instructions	
	Operating Instructions	
-	7.1. Programmable Settings	
	7.2. For Service Hint	
8	Service Mode	
	8.1. Engineering Mode	19
	8.2. Copying Phonebook Items when Repairing	23
	8.3. How to Clear User Setting	25
9	Troubleshooting Guide	26
	9.1. Troubleshooting Flowchart	
	9.2. Troubleshooting by Symptom (Base Unit and	t
	Charger Unit)	
	9.3. Troubleshooting by Symptom (Cordless	
40	Handset) Disassembly and Assembly Instructions	
ΙU		16
	10.1. Disassembly Instructions	46
	10.1. Disassembly Instructions 10.2. Assembly Instructions	46 50
	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments	46 50 <b>52</b>
	10.1. Disassembly Instructions 10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required	46 50 52
	10.1. Disassembly Instructions 10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)	46 50 52 52
	10.1. Disassembly Instructions 10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required	46 50 52 52 54
	10.1. Disassembly Instructions	46 50 52 52 54 55
	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)	46 50 52 52 54 55
	10.1. Disassembly Instructions	46 50 52 54 55 s 56
	10.1. Disassembly Instructions	46 50 52 52 54 55 s 56 58
	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification	46 50 52 52 54 55 s 58 58
	10.1. Disassembly Instructions	46 50 52 54 55 s 56 58 59
11	10.1. Disassembly Instructions	46 50 52 52 54 55 s 56 59 61 r
11	10.1. Disassembly Instructions	46 50 52 55 55 s 56 58 59 61 r
11	10.1. Disassembly Instructions	46 50 52 55 55 s 56 58 59 61 r
11	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification  11.9. How to Check the Cordless Handset Speake or Receiver  11.10. Frequency Table (MHz)  Miscellaneous  12.1. How to Replace the Flat Package IC	4650525455 s56585961 r6263
11	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification  11.9. How to Check the Cordless Handset Speake or Receiver  11.10. Frequency Table (MHz)  Miscellaneous  12.1. How to Replace the Flat Package IC  12.2. How to Replace the Shield Case	4650525455 s56585961 r6263
11	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification  11.9. How to Check the Cordless Handset Speake or Receiver  11.10. Frequency Table (MHz)  Miscellaneous  12.1. How to Replace the Flat Package IC  12.2. How to Replace the Shield Case  12.3. How to Replace the LLP (Leadless Leadframe	4650525455 s56585961 r6263
11	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification  11.9. How to Check the Cordless Handset Speake or Receiver  11.10. Frequency Table (MHz)  Miscellaneous  12.1. How to Replace the Flat Package IC  12.2. How to Replace the Shield Case  12.3. How to Replace the LLP (Leadless Leadframe Package) IC	4650525455 s565861 r626363
11	10.1. Disassembly Instructions	465052545556585961 r626365
11	10.1. Disassembly Instructions	465052545556585961 r626365
11	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification  11.9. How to Check the Cordless Handset Speake or Receiver  11.10. Frequency Table (MHz)  Miscellaneous  12.1. How to Replace the Flat Package IC  12.2. How to Replace the Shield Case  12.3. How to Replace the LLP (Leadless Leadframe Package) IC  12.4. Terminal Guide of the ICs, Transistors and Diodes  Schematic Diagram	4650525455 s5661 r62636365 e67 d
11	10.1. Disassembly Instructions	4650525455 s5661 r62636365 e67 d69
11	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification  11.9. How to Check the Cordless Handset Speake or Receiver  11.10. Frequency Table (MHz)  Miscellaneous  12.1. How to Replace the Flat Package IC  12.2. How to Replace the Shield Case  12.3. How to Replace the LLP (Leadless Leadframe Package) IC  12.4. Terminal Guide of the ICs, Transistors and Diodes  Schematic Diagram  13.1. For Schematic Diagram	4650525455 s565861 r62636365 e67 d6971
11	10.1. Disassembly Instructions  10.2. Assembly Instructions  Measurements and Adjustments  11.1. Equipment Required  11.2. The Setting Method of JIG (Base Unit)  11.3. Adjustment Standard (Base Unit)  11.4. Adjustment Standard (Charger Unit)  11.5. The Setting Method of JIG (Cordless Handset)  11.6. Adjustment Standard (Cordless Handset)  11.7. Things to Do after Replacing IC or X'tal  11.8. RF Specification  11.9. How to Check the Cordless Handset Speake or Receiver  11.10. Frequency Table (MHz)  Miscellaneous  12.1. How to Replace the Flat Package IC  12.2. How to Replace the Shield Case  12.3. How to Replace the LLP (Leadless Leadframe Package) IC  12.4. Terminal Guide of the ICs, Transistors and Diodes  Schematic Diagram  13.1. For Schematic Diagram (Base Unit_Main)	4650525455 s565861 r62636365 e67 d67 d71

	PAGI
13.6. Schematic Diagram (Charger Unit)	78
14 Printed Circuit Board	79
14.1. Circuit Board (Base Unit_Main)	79
14.2. Circuit Board (Base Unit_Operation)	81
14.3. Circuit Board (Cordless Handset)	83
14.4. Circuit Board (Charger Unit)	85
15 Exploded View and Replacement Parts List	86
15.1. Cabinet and Electrical Parts (Base Unit)	86
15.2. Cabinet and Electrical Parts (Cordless	3
Handset)	87
15.3. Cabinet and Electrical Parts (Charger Unit)	88
15.4. Accessories	89
15.5. Replacement Parts List	90

# 1 Safety Precautions

## 1.1. For Service Technicians

- Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work.
  - 1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
  - 2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
  - 3. FASTON terminals shall be plugged straight in and unplugged straight out.
- · ICs and LSIs are vulnerable to static electricity.

When repairing, the following precautions will help prevent recurring malfunctions.

- 1. Cover plastic parts boxes with aluminum foil.
- 2. Ground the soldering irons.
- 3. Use a conductive mat on worktable.
- 4. Do not grasp IC or LSI pins with bare fingers.

# 2 Warning

## 2.1. Battery Caution

- 1. Danger of explosion if battery is incorrectly replaced.
- 2. Replace only with the same or equivalent type recommended by the manufacturer.
- 3. Dispose of used batteries according to the manufacturer's Instructions.

## 2.2. About Lead Free Solder (Pbf: Pb free)

#### Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.

#### Caution


- PbF solder has a melting point that is 50 °F ~ 70 ° F (30 °C ~ 40 °C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 °F ± 20 ° F (370 °C ± 10 °C).
- Exercise care while using higher temperature soldering irons.:
- Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

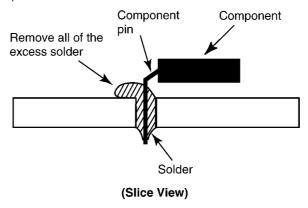

## 2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu), or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials.

The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

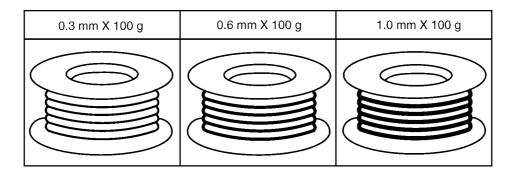

# 2.3. Discarding of P. C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

# 3 Specifications

#### ■ Standard:

DECT (Digital Enhanced Cordless Telecommunications), GAP (Generic Access Profile)

#### ■ Number of channels:

120 Duplex Channels

# ■ Frequency range: 1.88 GHz to 1.90 GHz

#### ■ Duplex procedure:

TDMA (Time Division Multiple Access)

#### **■** Channel spacing:

1,728 kHz

## ■ Bit rate:

1,152 kbit/s

#### ■ Modulation:

GFSK (Gaussian Frequency Shift Keying)

#### ■ RF transmission power:

Approx. 10 mW (average power per channel)

#### ■ Voice coding:

ADPCM 32 kbit/s

#### ■ Power source (AC Adaptor):

100–240 V AC, 50/60 Hz **Base unit:** PQLV219BXZ **Charger:** PQLV219BXZ

■ Power consumption

#### Base unit:

Standby: Approx. 1.0 W Maximum: Approx. 2.0 W

#### Charger:

Standby: Approx. 0.2 W Maximum: Approx. 3.2 W

## ■ Operating conditions:

0 °C-40 °C, 20 %-80 % relative air humidity (dry)

## **■** Dimensions:

**Base unit:** Approx. 68 mm x 214 mm x 175 mm **Handset:** Approx. 158 mm x 48 mm x 32 mm **Charger:** Approx. 52 mm x 75 mm x 87 mm

#### ■ Mass (weight):

**Base unit:** Approx. 450 g **Handset:** Approx. 130 g **Charger:** Approx. 60 g

## Note:


• Design and specifications are subject to change without notice.

#### Note for Service:

- Operation range: Up to 300 m outdoors, Up to 50 m indoors, depending on the condition.
- Analog telephone connection: Telephone Line

# 4 Technical Descriptions

# 4.1. Block Diagram (Base Unit)

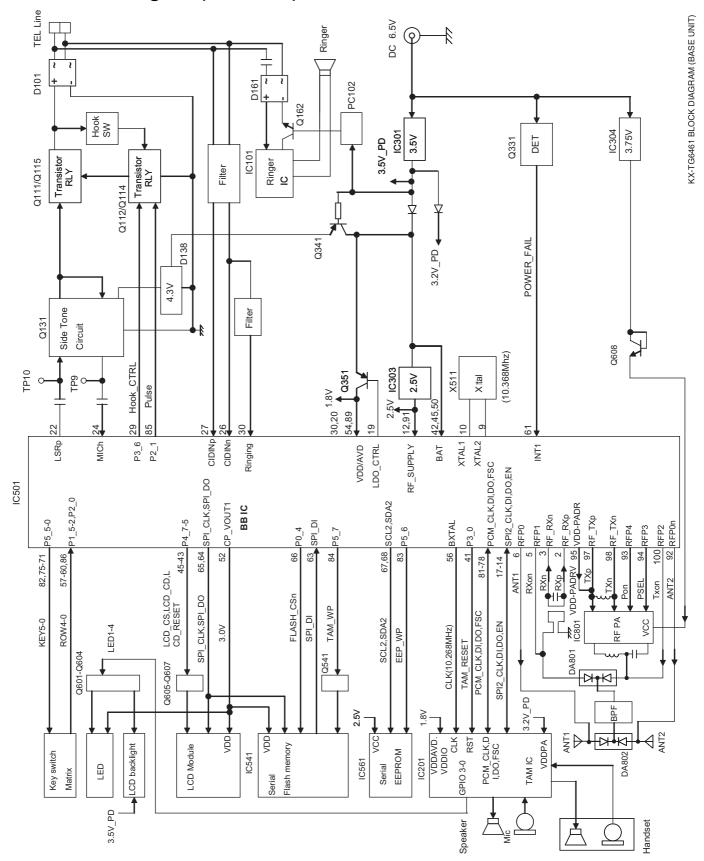

## 4.2. Circuit Operation (Base Unit)

#### 4.2.1. **Outline**

Base unit consists of the following ICs as shown in **Block Diagram (Base Unit)** (P.7).

- DECT BBIC (Base Band IC): IC501
  - Handling all the audio, signal and data processing needed in a US DECT base unit
  - Controlling the US DECT specific physical layer and radio section (Burst Module Controller section)
  - ADPCM code filter for speech encoding and speech decoding (DSP section)
  - Echo-cancellation and Echo-suppression (DSP section)
  - Any tones (tone, sidetone, ringing tone, etc.) generation (DSP section)
  - DTMF receiver (DSP section)
  - Clock Generation for RF Module
  - ADC, DAC, timer, and power control circuitry
  - All interfaces (ex: RF module, EEPROM, LED, Analog Front End, etc.)
  - RF Tranceiver (LNA Mixer IF Filter, Modulator/Demodulator, PLL, Vco)
- EEPROM: IC561
  - Temporary operating parameters (for RF, etc.)
- FLASH MEMORY: IC541
  - Voice Prompt (TAM) D/L Area
  - ICM/OGM/MEMO Recording Area
- TAM Companion: IC201
  - Voice data compression and decompression
  - Speaker Amp
- · Additionally,
  - Power Supply Circuit (+4.0 V, +3.3 V, +2.5 V, +1.8 V output)
  - Crystal Circuit (10.368 MHz)
  - Telephone Line Interface Circuit

## 4.2.2. Power Supply Circuit

The power is supplied to the BBIC,TAM Companion,Power AMP,LCD module,EEPROM,Flash Memory,LED,LCD backlight from AC Adaptor(+6.5V) as shown in Fig 1.

When power line failure, the power is supplied to BBIC,TAM companion,EEPROM from telephone line instead of AC Adaptor through D138 and Q341.

• BBIC (IC501)

AC adaptor 
$$\rightarrow$$
 F301  $\rightarrow$  D301 $\rightarrow$  IC301  $\rightarrow$  D311 Q351  $\rightarrow$  IC501 (VDD 1.8V) (When power fail) IC501 (BAT 3.2V) Telephone line  $\rightarrow$  line interface  $\rightarrow$  D138  $\rightarrow$  Q341 IC501 (RF\_SUPPLY)

• TAM Companion (IC201)

AC adaptor 
$$\rightarrow$$
 F301  $\rightarrow$  D301  $\rightarrow$  D311 (When power fail) Q351  $\rightarrow$  IC201 (VDD 1.8V) Telephone line  $\rightarrow$  line interface  $\rightarrow$  D138  $\rightarrow$  Q341

AC adaptor  $\rightarrow$  F301  $\rightarrow$  D301 $\rightarrow$  IC301  $\rightarrow$  D353  $\rightarrow$  IC201 (VDDPA 3.2V)

• RF Power AMP (IC801)

AC adaptor  $\rightarrow$  F301  $\rightarrow$  D301 $\rightarrow$  IC304  $\rightarrow$  Q608  $\rightarrow$  IC801 (VCC)

• EEPROM (IC561)

AC adaptor 
$$\rightarrow$$
 F301  $\rightarrow$  D301 $\rightarrow$  IC301  $\rightarrow$  D311 (When power fail) IC303  $\rightarrow$  IC561 (VCC 2.5V) Telephone line  $\rightarrow$  line interface  $\rightarrow$  D138  $\rightarrow$  Q341

• Flash memory (IC541)

 $AC \ adaptor \rightarrow F301 \rightarrow D301 \rightarrow IC301 \rightarrow D311 \rightarrow IC501 \ (BAT:CP\_VOUT1) \rightarrow IC541 \ (VDD \ 3.0V)$ 

LCD module


AC adaptor  $\rightarrow$  F301  $\rightarrow$  D301 $\rightarrow$  IC301  $\rightarrow$  D311  $\rightarrow$  IC501 (BAT:CP\_VOUT1)  $\rightarrow$  CN1  $\rightarrow$  LCD module (VDD 3.0V)

• LED

 $\mathsf{AC}\;\mathsf{adaptor} \to \mathsf{F301} \to \mathsf{D301} \to \mathsf{IC301} \to \mathsf{D311} \to \mathsf{IC501}\;(\mathsf{BAT}.\mathsf{CP\_VOUT1}) \to \mathsf{CN1} \to \mathsf{LED}\;(3.0\mathsf{V})$ 

· LCD backlight

AC adaptor  $\rightarrow$  F301  $\rightarrow$  D301  $\rightarrow$  IC301 $\rightarrow$  CN2  $\rightarrow$  LCD backlight (3.5V)

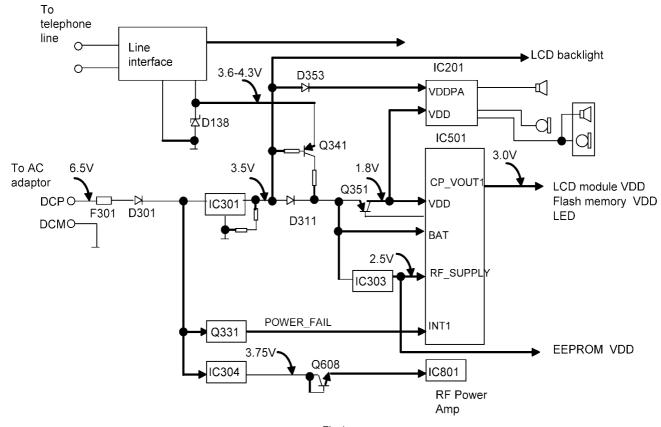

## 4.2.3. Telephone Line Interface

#### **Function**

- · Bell signal detection
- · CLIP signal detection
- · ON/OFF hook and pulse dial circuit

## Bell & CLIP (Calling Line Identification Presentation: Caller ID) signal detection:

In standby mode,Q111/Q115 is open to cut the DC Loop current and decrease the ring load.

When ringing voltage appears at the TIP and RING, AC ring voltages transferred as followings;

#### **CLIP** signal detection

 $\mathsf{TIP} \to \mathsf{C181} \to \mathsf{R182} \to \mathsf{R185} \to \mathsf{IC501(26)(BBIC\text{-}CIDINn)}$ 

 $RING \rightarrow C191 \rightarrow R192 \rightarrow R195 \rightarrow IC501(27)(BBIC-CIDINp)$ 

#### Bell signal detection

 $TIP \rightarrow C181 \rightarrow R182 \rightarrow C184 \rightarrow R186 \rightarrow C187 \rightarrow IC501(30)(BBIC-RINGING)$ 

When power line failure (Because this case is no power to IC501)

 $TIP \rightarrow C164 \rightarrow D161(2) \rightarrow D161(1) \rightarrow IC101(1:5) \rightarrow R167 \rightarrow RINGERP$ 

RING  $\leftarrow$  D161(3)  $\leftarrow$  D161(4)  $\leftarrow$  Q162(c:e)  $\leftarrow$  IC101(2:8)  $\leftarrow$  RINGERM

#### **ON/OFF** hook circuit

#### ON hook:

Q111/Q115 is open to cut the DC loop current and voice signal, caused by the following control:

Hook switch (between hook2-4 and hook2-6) is opened and IC501(29)(Hook CTRL) is Low, (and Q114 is open), then Q112 is OFF.so Q111/115 is OPEN

#### OFF hook:

Q111/Q115 is ON to make the DC loop current and be possible to transfer voice signal, caused by the following control:

Hook switch (between hook2-4 and hook2-6) make and IC501(29)(Hook CTRL) is High. (and Q114 is open), then Q112 is ON.

## 4.2.4. Audio signal Flow (Out line)

The audio signal from Mic (for SP-phone and Corded Handset) is converted from Analog to digital in TAM companion IC(IC201), then is transferred to BBIC(IC501) through PCM interface.

In BBIC(IC501), these data is converted to Analog, then send out tel line through tel line interface.


On the other hand, the audio signal from tel line is converted from Analog to digital in BBIC(IC501), then is transferred to TAM companion IC(IC201) through PCM interface.

In TAM companion IC(IC201), these data is converted to Analog, then sound out from speaker.

On the recorded and replay TAM data, as following.

On recording sound, the audio signal from the tel line is converted to digital data in BBIC, then is transfered to TAM companion IC through SPI2 interface and compressed. This compressed data re-transfer to BBIC, then BBIC transfer these data to Flashmemory(IC541) through SPI interface. On replaying the recorded TAM data, the compressed data in Flash-memory is transferd to BBIC through SPI interface. Then BBIC transfer these data to TAM companion IC through SPI2 interface to decompress these data. TAM companion IC send back the decompress data to BBIC. BBIC transfer them to TAM companion IC through PCM interface, finally these data is coverted to Analog signal, then sound out Speaker.

Refer to the fig.2.

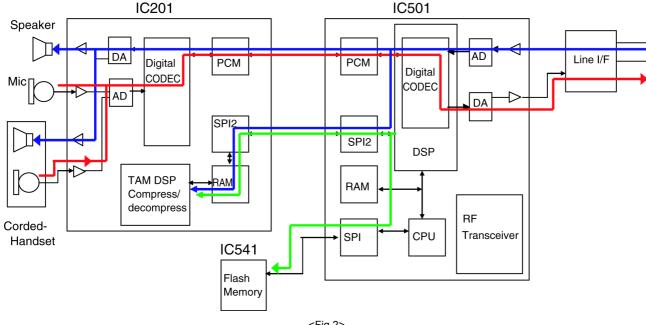


## 4.2.5. RF cuircuit

BBIC(IC501) inclueds the RF transceiver circuit. (LNA,Mixer, IF filter, modulator/Demodulator,PLL, VCO etc). This RF transceiver is interfaced with Power-AMP(IC801) and Antenna circuit.

## 4.2.6. Pulse Dialling

During pulse dialling the hookswitch (Q3, Q4) is used to generate the pulses using the HOOK control signal, which is set high during pulses. To force the line impedance low during the "pause" intervals between dial pulses, the PULSE\_DIAL signal turns on Q2.

# 4.3. Block Diagram (Cordless Handset)

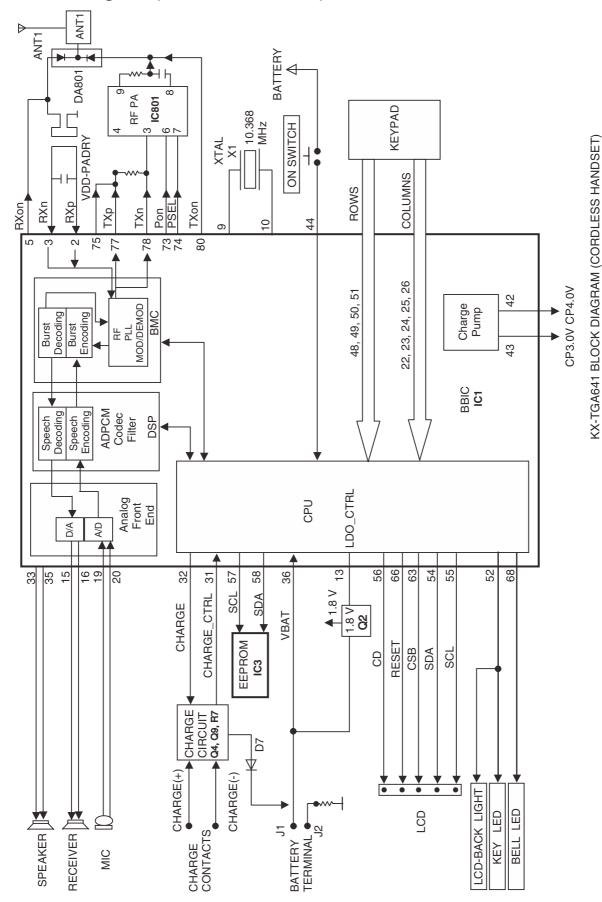

## 4.4. Circuit Operation (Cordless Handset)

#### 4.4.1. **Outline**

Cordless Handset consists of the following ICs as shown in Block Diagram (Cordless Handset) (P.12).

- DECT BBIC (Base Band IC): IC1
  - All data signals (forming/analyzing ACK or CMD signal)
  - All interfaces (ex: Key, Detector Circuit, Charge, DC/DC Converter, EEPROM, LCD, RF Power Amp.)
  - PLL Oscillator
  - Detector
  - Compress/Expander
  - Reception
- RF Power Amp: IC801
  - Amplifier for transmission
- EEPROM: IC3
  - Temporary operating parameters (for RF, etc.)


## 4.4.2. Power Supply Circuit/Reset Circuit

## **Circuit Operation:**

When power on the Cordless Handset, the voltage is as follows;

BATTERY(2.2 V ~ 2.6 V: BATT+)  $\rightarrow$  F1  $\rightarrow$  Q2 (1.8 V), IC1-43pin (2.5V)

The Reset signal generates IC1 (61 pin) and 1.8 V.

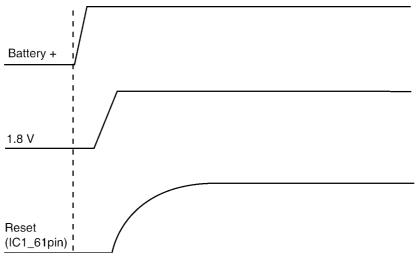

## 4.4.3. Charge Circuit

#### **Circuit Operation:**

When charging the Cordless Handset on the Charger Unit, the charge current is as follows;

 $DC+(6.5 \text{ V}) \rightarrow F1 \rightarrow R1 \rightarrow CHARGE+(Charger) \rightarrow CHARGE+(Cordless \ Handset) \rightarrow L4 \rightarrow Q4 \rightarrow D7 \rightarrow F1 \rightarrow BATTERY+...$  Battery...

BATTERY-  $\rightarrow$  L8  $\rightarrow$  R45  $\rightarrow$  GND  $\rightarrow$  L5  $\rightarrow$  CHARGE-(Cordless Handset) $\rightarrow$  CHARGE-(Charger)  $\rightarrow$  GND  $\rightarrow$  DC-(GND) In this way, the BBIC on Cordless Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q9 of Cordless Handset.

#### 4.4.4. Battery Low/Power Down Detector

#### **Circuit Operation:**

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

· Battery Low

Battery voltage: V(Batt) ≤ 2.25 V ± 50 mV

The BBIC detects this level and " starts flashing.

• Power Down

Battery voltage:  $V(Batt) \le 2.0 \text{ V} \pm 50 \text{ mV}$ The BBIC detects this level and power down.


## 4.4.5. Speakerphone

The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm.

# 4.5. Circuit Operation (Charger Unit)


# 4.5.1. Power Supply Circuit


The power supply is as shown.

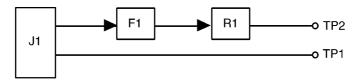

AC Adaptor

## 4.6. Signal Route

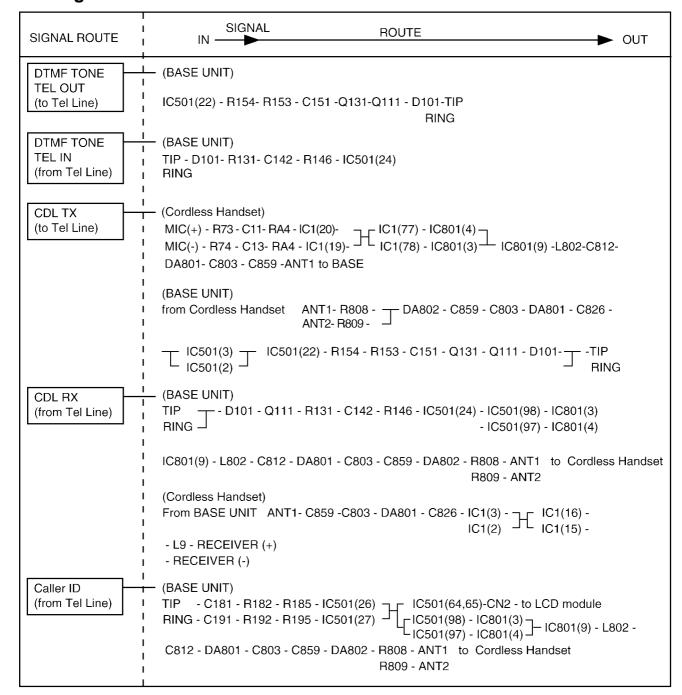

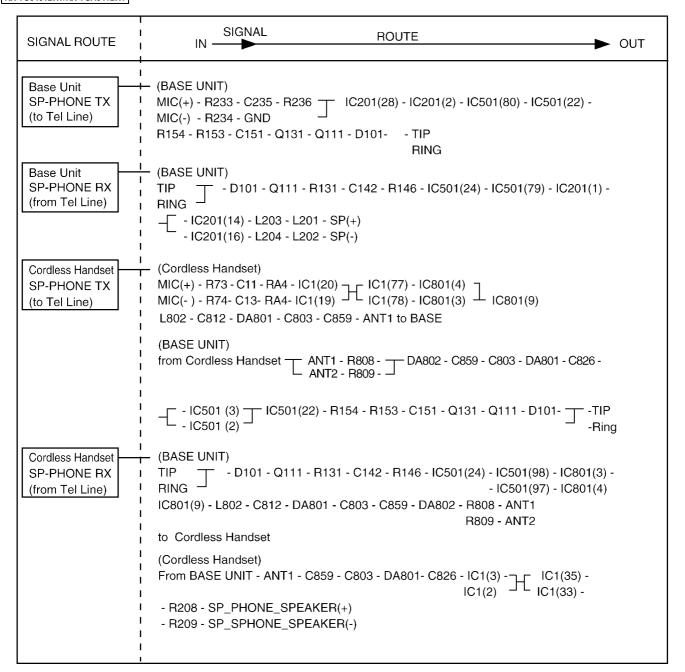

```
SIGNAL
                                                                      ROUTE
SIGNAL ROUTE
                                  IN -
                                                                                                                    ► OUT
 Message Play
                          (BASE UNIT)
 (to Tel Line)
                          IC541(2) - IC501(63:16) - IC201(9:10) - IC501(17:22) - R154 - R153 - C151 - Q131 - Q111 -
                          D101 - TIP
                                  RING
                          (BASE UNIT)
 OGM Rec
 (from BASE UNIT)
                          MIC(+) - R233 - C235 - R236 T IC201(28:2) - IC501(80:16) - IC201(9:10) - IC501(17:64) -
                          MIC(-) - R234 - GND
                          - IC541(5)
 Memo/OGM
                           (Cordless Handset)
 Recording
                           \begin{array}{c} \text{MIC(+) - R73 - C11- RA4 - IC1(20)-} \\ \text{MIC(-) - R74 - C13- RA4 - IC1(19)-} \end{array} \\ \begin{array}{c} \text{IC1(77)-} \\ \text{IC1(78)-} \end{array} \\ \begin{array}{c} \text{IC801(4)} \\ \text{IC801(9) -} \end{array} \\ \end{array} 
 (from Cordless
 Handset)
                          L802 - C812- DA801- C803 - C859 - ANT1 to BASE
                          (BASE UNIT)
                          From Cordless Handset ANT1 - C852 - ___ DA802 - C859 - C803 - DA801 - C826 -
                                                     ANT2 - C853 - \square
                            - [ IC501(3) ] ☐
                                              - IC501(16) - IC201(9:10) - IC501(17:64) - IC541(5)
                          (BASE UNIT)
 ICM Recording
                          TIP — - D101 - Q111 - R131 - C142 - R146 - IC501(24:16) - IC201(9:10) - IC501(17:64)
 (from Tel Line)
                          RING \operatorname{\square}
                          - IC541(5)
 Message Play
                          (BASE UNIT)
 (to Cordless
                          IC541(2) - IC501(63:16) - IC201(9:10) - IC501(17) - -
                                                                                    IC501(98) - IC801(3) -
                                                                                                               - - IC801(9) -
                                                                                     IC501(97) - IC801(4)
 Handset)
                          L802 - C812 - DA801 - C803 - C859 - DA802 - C852 - ANT1 to Cordless Handset
                                                                           C853 - ANT2
                          (CordlessHandset)
                          from BASE UNIT - ANT1 - C859 - C803 - DA801 - C826 - ICI(3) - ICI(35) - ICI(2) - ICI(33) -
                          -R208 - SP_PHONE_SPEAKER(+)
                          -R209 - SP PHONE SPEAKER(-)
                          (BASE UNIT)
 Message Play
                          IC541(2) - IC501(63:16) - IC201(9:10) - IC501(17:79) - IC201(1) - IC201(14) - L203 - L201 - SP(+) - IC201(16) - L204 - L202 - SP(-)
 (to BASE UNIT)
                                       SIGNAL
                                                                      ROUTE
SIGNAL ROUTE
                                  IN -
                                                                                                                      OUT
Corded Handset TX
                          (BASE UNIT)
(to Tel Line)
                          HS_MIC_P - L221 - C227 - R222 - IC201(27) — - IC201(2) - IC501(80:22) - R154 -
                          HS_MIC_N - L224 - C224 - R224 - IC201(31)
                           R153 - C151 - Q131 - Q111 - D101- - TIP
                                                                       RING
Corded Handset RX
                          (BASE UNIT)
(from Tel Line)
                                    - - D101 - Q111 - R131 - C142 - R146 - IC501(24:79) - IC201(1) -
                          RING-
                             - - IC201(25) - C213 - L222 - HS_SP_P
                           ┴ - IC201(26) - C214 - L223 - HS_SP_N
```

# 5 Location of Controls and Components

Refer to the Operating Instructions.

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

# 6 Installation Instructions

Refer to the Operating Instructions.

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

# 7 Operating Instructions

Refer to the Operating Instructions.

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

## 7.1. Programmable Settings

## 7.1.1. Answering System Settings

Answering system setting	Default setting	Remarks (selectable options)
Answering system on/off	Answer On	Answer On/Answer Off
Remote access code	_	000~999/Off ([×])
Number of rings	4 Rings	Auto/2 to 7 Rings
Caller's recording time	3 Minutes	1 Minute/3 Minutes/Greeting Only
Call screening	On	On/Off

## 7.2. For Service Hint

Items	Contents				
Battery	You could use other rechargeable batteries sold in a market, but the unit is not guaranteed to work properly.				
	The battery strength may not be indicated correctly if the battery is disconnected and connected again, even after it is fully charged. In that case, by recharging the battery as mentioned in the Operating Instructions, you will get a correct indication of the battery strength.				
PIN Code	<ul> <li>Change the PIN using the following method.</li> <li>1</li></ul>				


## 8 Service Mode

## 8.1. Engineering Mode

## 8.1.1. Base Unit

## Important:


Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

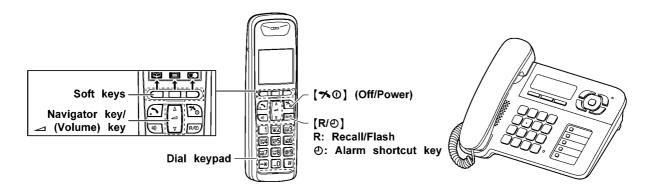

## H/S key operation

- 1). Register a Handset to a Base Unit.
- 2). Press **=** .
- 3). Select "Base Unit Setup" using [▲]or[▼] then press ok.
- 4). Enter "7", "2", "6", "2", "7", "6", "6", "4". **Note:** 7262 7664 = PANA SONI (see letters printed on dial keys)
- 5). Select "Write EEP" using [▲] or [▼] then press ok .
- 6). Enter "●", "●", "●", "●" (Address). (\*1)
- 7). Enter "\*", "\*" (New Data). (\*1)
- 8). Press **OK**, a long confirmation beep will be heard.
- 9). Press [ 🏞 ] (off) to return to standby mode.

  After that, turn the base unit power off and then power on.

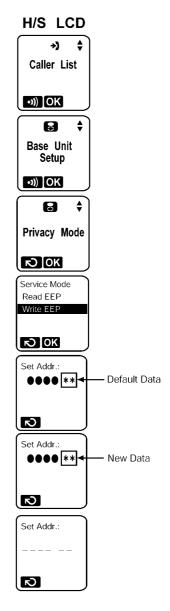

## KX-TG6461BXT/KX-TGA641BXT

# Frequently Used Items (Base Unit) ex.)

Items	Address	Default Data	New	Data	Remarks
C-ID (FSK) sensitivity	05 A4	00	01 (6 dB up)	02 (12 dB up)	When hex changes from "00" to "01" or "02", gain increases by 6 dB or 12 dB.
C-ID (DTMF) sensitivity	05 B2	50	60 (6 dB up)	70 (12 dB up)	When hex changes from "50" to "60" or "70", gain increases by 6 dB or 12 dB.
Frequency	00 02/00 01	03/50	-	-	Use these items in a READ-ONLY mode to
ID	00 10~00 14	Given value	-	-	confirm the contents. Careless rewriting may cause serious damage to the computer system.
Bell length	02 11	64(10sec) (*2)	1E (3 sec)	14 (2 sec)	This is time until bell stops ringing. (Unit: 100 ms)
PULSE Dial speed (10PPS -> 20PPS)	01 EF	28 (40 msec) (*2)	14 (20 msec)	-	This is pulse make time. (Unit:1 ms)
	01 F0	3C (60 msec) (*2)	1E (30 msec)	-	This is pulse break time. (Unit:1 ms)
	01 FE	57 (870 msec) (*2)	2C (440 msec)	-	This is inter-digit time in pulse mode. (Unit:10 ms)

#### Note:

(\*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex)	Input Keys	Desired Number (hex)	Input Keys
0	0	A	[R] + 0
1	1	В	[R] + 1
		С	[R] + 2
		D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5


(\*2)

Bell length	64 (hex) = 100 (dec) $\rightarrow$ 100 $\times$ 100 msec = 10000 msec (10 sec)
PULSE Dial speed	28 (hex) = 40 (dec) → 40 × 1 msec = 40 msec
(10PPS -> 20PPS)	3C (hex) = $60$ (dec) $\rightarrow 60 \times 1$ msec = $60$ msec
	57 (hex) = 87 (dec) → 87 × 10 msec = 870 msec

## 8.1.2. Cordless Handset

## Important:


Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

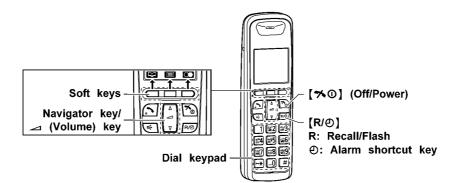

## H/S key operation

- 1). Press 🔳.
- 2). Select "Handset Setup" using [▲] or [▼] then press **OK**.
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4". **Note:** 7262 7664 = PANA SONI (see letters printed on dial keys)
- 4). Select "Write EEP" using (▲) or (▼) then press oK.
- 5). Enter "●", "●", "●", "●" (Address). (\*1)
- 6). Enter "\*", "\*" (New Data). (\*1)
- 7). Press **OK**, a long confirmation beep will be heard.
- 8). Press [ 🛪 ••] (off) to return to standby mode.

  After that, remove and reinsert the batteries. Press the Power button for about 1 second if the power is not turned on.

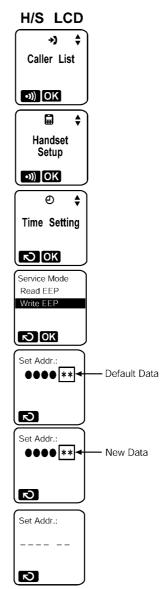

KX-TG6461BXT/KX-TGA641BXT

## Frequently Used Items (Cordless Handset)

ex.

Items	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Sending level	00 06	Adjusted value	Given value	6F	00	(*2)
Receiving level	00 07	Adjusted value	Given value	00	3F	(*3)
Battery Low	00 04	70	-	-	-	
Frequency	00 02/00 01	02/70	-	-	-	(*4)
ID	00 10~00 14	Given value	-	-	-	*

#### Note:

(\*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	Α	[R] + 0
1	1	В	[R] + 1
		С	[R] + 2
		D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5

(\*2) When adding "01" (hex) to default value, sending level increases by 0.25 dB. ex.)

Item	Default Data	New Data	
	35	39	31
Sending level	-4dBm	-3dBm	-5dBm

(\*3) When reducing "01" (hex) from default value, receiving level increases by 0.25 dB. ex.)


Item	Default Data	New Data	
	18	1C	14
Receiving level	-21dBm	-22dBm	-20dBm

(\*4) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the cordless handset.


## 8.2. Copying Phonebook Items when Repairing


You can copy the base unit (Maximum number of contacts is 100.) phonebook to another (compatible Panasonic) cordless handset. This will help to save the original phonebook data which the customer has registered.

\* You cannot copy the base unit phonebook to another base unit. Refer to the following procedures.

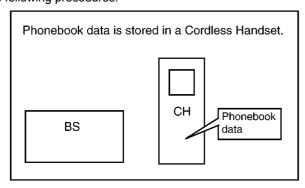

Case 1: A base unit has a defect.
(Replacing a base unit PCB etc...)

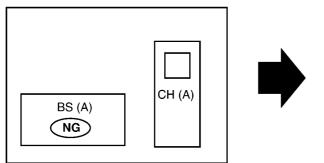


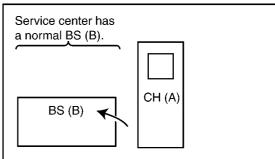


 Register CH (A) to BS (B).
 CH (A) is normal, therefore no need to copy the phonebook data.

Case 2: A base unit has a defect.

(Replacing both a base unit and a Cordless Handset)

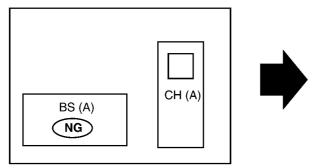

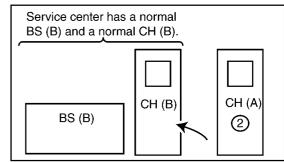


- 1. Register CH (A) to BS (B) as a handset no. 2.
- 2. Copy the phonebook data from CH (A) to CH (B).
- 3. Cancel the CH 2 (CH (A)).

#### Note:


- BS=Base Unit , CH=Cordless Handset
- If the max number of Cordless Handsets are already registered to the base unit, a new Cordless Handsets cannot be registered.

Case 3: A Cordless Handset has a defect.
(Radio transmission is functioning.)

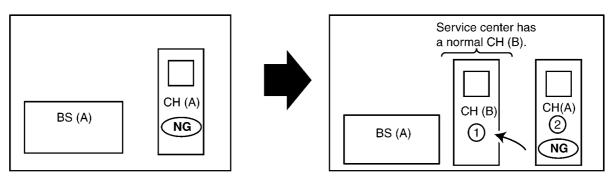

- 1. Cancel CH (A).
- 2. Register CH (B) as a Cordless Handset no. 1.
- 3. Register CH (A) as a Cordless Handset no. 2.
- 4. Copy the phonebook data from CH (A) to CH (B).
- 5. Cancel CH 2 (CH (A)).

Case 4: A Cordless Handset has a defect.
(Radio transmission is functioning.)

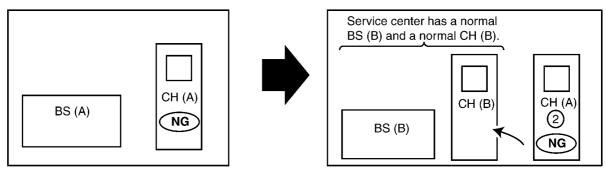

- 1. Register CH (A) as a Cordless Handset no. 2.
- 2. Copy the phonebook data from CH (A) to CH (B).
- 3. Cancel CH 2 (CH (A)).

## Note:

- BS=Base Unit , CH=Cordless Handset
- If the max number of Cordless Handsets are already registered to the base unit, a new Cordless Handsets cannot be registered.

## 8.3. How to Clear User Setting


Units are reset to the Factory settings by this operation (Erase recorded voice messages, stored Phone numbers, Caller list and etc.)

#### Note:

- The reset menus differ depending on the following operations.
- · This operation should not be performed for a usual repair.

## 8.3.1. Resetting both base unit and Cordless Handset

Both the base unit and the registered cordless handset which you did the following steps ① to ④ are reset. Other registered cordless handset will not be reset.

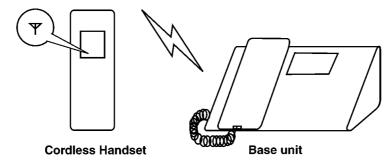


- ① Connect the AC adaptor to the base unit and install the charged batteries into the cordless handset.
- ② Confirm the cordless handset is registered to the base unit ( $\Upsilon$  lights).

  If the cordless handset is not registered to the base unit ( $\Upsilon$  is flashing), register it.
- 3 Lift the cordless handset and press [OFF] to put the cordless handset in standby mode.
- 4 Press 1, 5, 9 and  $\times$  key of the cordless handset simultaneously until a confirmation tone is heard.
- (5) Disconnect the AC adaptor, then remove the battery.

## 8.3.2. Resetting only Cordless Handset

The only Cordless Handset is reset by doing the following steps 1 to 4.

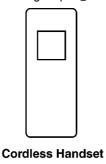

- (1) Install the charged batteries into the cordless handset.
- 2 Lift the cordless handset and press (OFF) to put the cordless handset in standby mode.
- (3) Press (3), (5), (7) and (#) key of the cordless handset simultaneously until a confirmation tone is heard. (\*1)
- 4 Remove the battery.


#### Note: (\*1)

- The cordless handset registration to the base unit is cancelled.
- If users do not bring the base unit with them, the registration procedure has to be done by users themselves.

# **Troubleshooting Guide**

## **Troubleshooting Flowchart**

Flow Chart

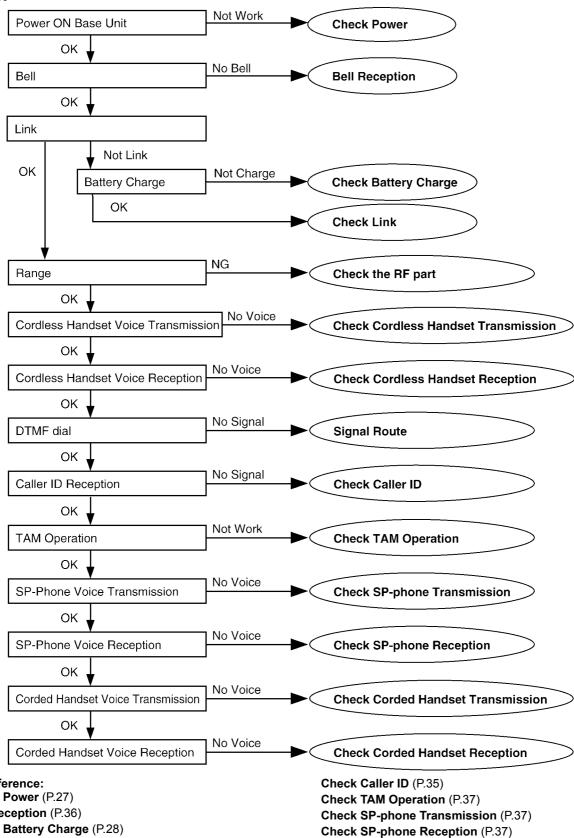

**Cross Reference:** 

Check Power (P.27)

**Bell Reception** (P.36)

Check Battery Charge (P.28)

Check Link (P.29)

Check the RF part (P.33)

**Check Cordless Handset Transmission** (P.35)

**Check Cordless Handset Reception (P.35)** 

Signal Route (P.15)


(\*1) Refer to Specifications (P.6) for part number and

supply voltage of AC adaptor.

#### 9.1.1. Check Power


#### 9.1.1.1. Base Unit

Is the AC Adaptor inserted into AC outlet? (\*1)

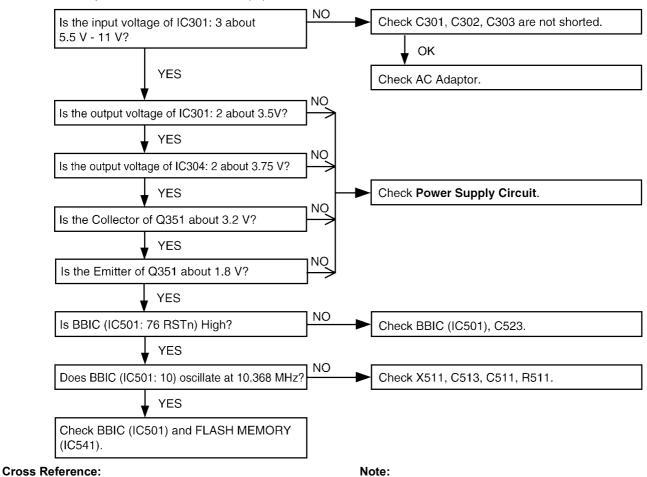

#### 9.1.1.2. Cordless Handset

**Power Supply Circuit (P.9)** 

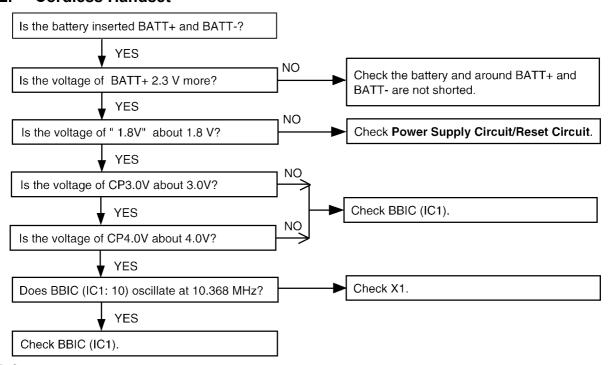


**Cross Reference:** 

Power Supply Circuit/Reset Circuit (P.13)

KX-TG6461BXT/KX-TGA641BXT

## 9.1.2. Check Battery Charge

## 9.1.2.1. Cordless Handset

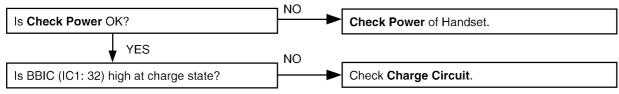


#### **Cross Reference:**

Check Power (P.27)

Charge Circuit (P.13)

## 9.1.2.2. Charger Unit

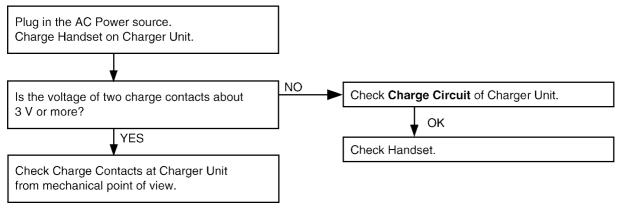


## **Cross Reference:**

Charge Circuit (P.13)

## 9.1.3. Check Link

#### 9.1.3.1. Base Unit

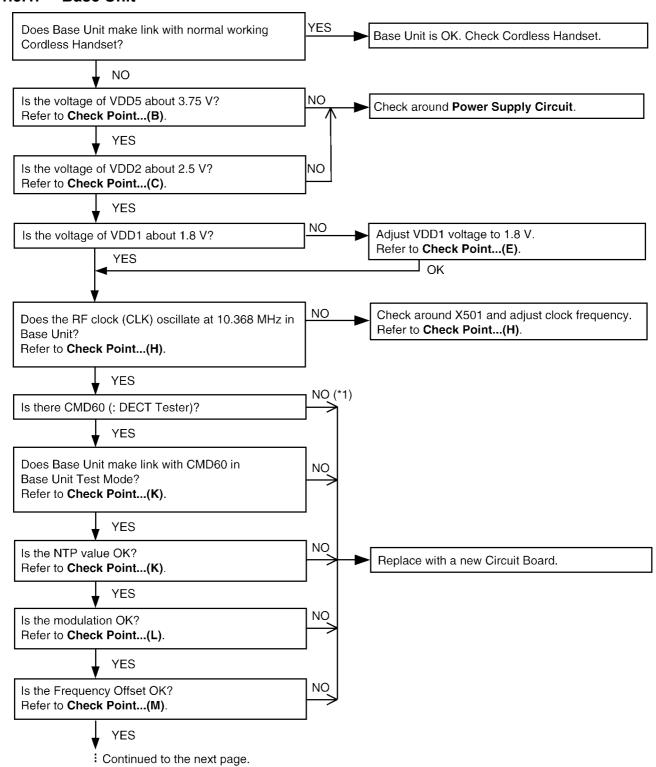

#### **Cross Reference:**


**Power Supply Circuit (P.9)** 

Check Point (Base Unit) (P.38)

#### Note:

(\*1) Refer to Troubleshooting by Symptom (Base Unit and Charger Unit) (P.38).


## KX-TG6461BXT/KX-TGA641BXT

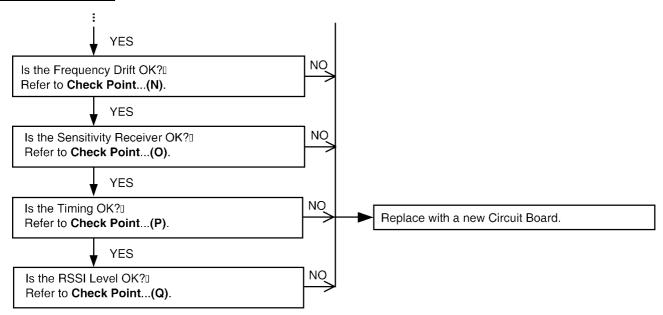

## **Cross Reference:**

Check Point (Base Unit) (P.38)

## 9.1.3.2. Cordless Handset

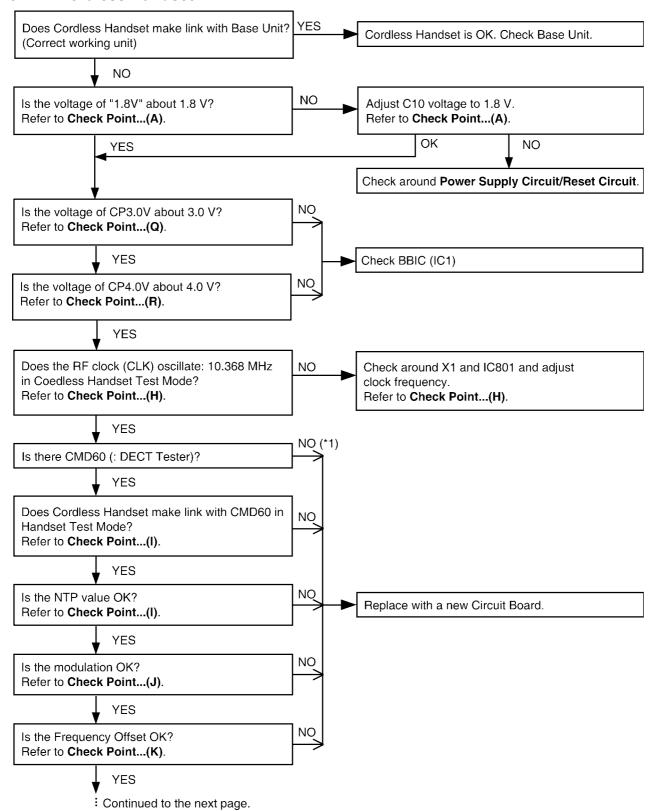

#### **Cross Reference:**


Power Supply Circuit/Reset Circuit (P.13)

Check Point (Cordless Handset) (P.42)

#### Note:

(\*1) Refer to Troubleshooting by Symptom (Cordless Handset) (P.42).

## KX-TG6461BXT/KX-TGA641BXT

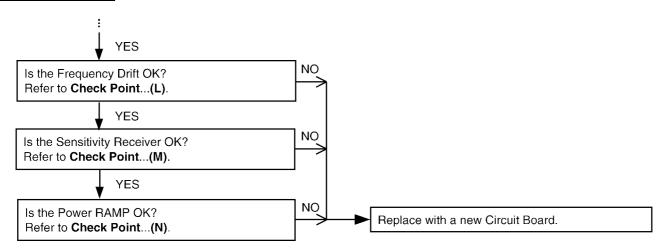

#### **Cross Reference:**

Check Point (Cordless Handset) (P.42)


## 9.1.4. Check the RF part

## 9.1.4.1. Finding out the Defective part

- 1. Prepare Regular CH (Cordless Handset) and Regular BU (Base unit).
- 2. a. Re-register regular CH (Normal mode) to Base Unit (to be checked).
  - If this operation fails in some ways, the Base Unit is defective.
  - b. Re-register Cordless Handset (to be checked) to regular BU (Normal mode). If this operation fails in some ways, the Cordless Handset is defective.


#### After All the Checkings or Repairing

1. Re-register the checked Cordless Handset to the checked Base Unit, and Regular CH to Regular BU.

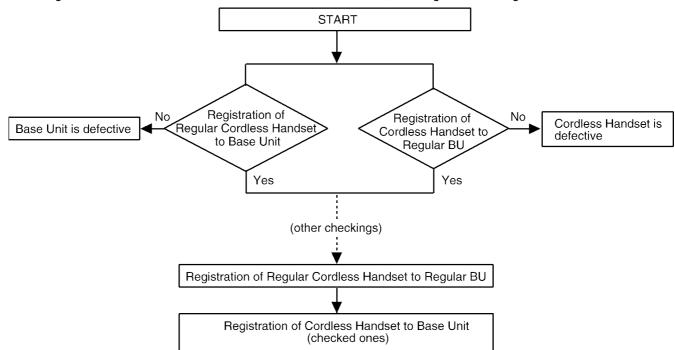

## 9.1.4.2. RF Check Flowchart

Each item (1  $\sim$  4) of RF Check Flowchart corresponds to **Check Table for RF part** (P.35). Please refer to the each item.

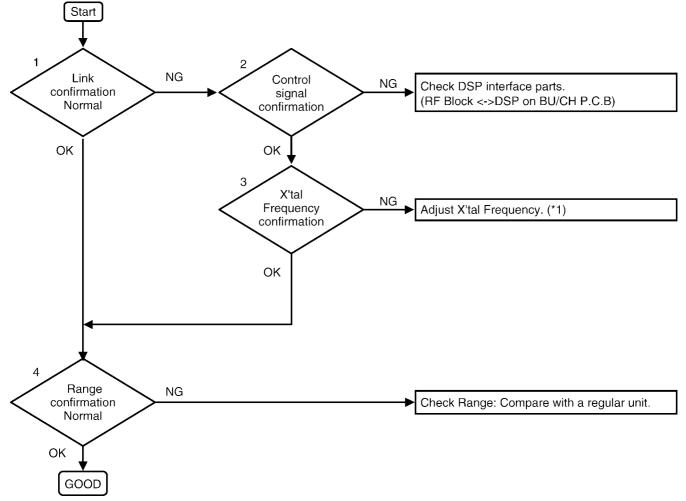

#### Note:

- (\*1) Base unit refer to (H) of Check Point (Base Unit) (P.38)
- (\*2) Cordless Handset refer to (J) of Check Point (Cordless Handset) (P.42)


## 9.1.4.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	CH (Cordless Handset) Check
1	Link Confirmation Normal	Register Regular CH to BU (to be checked).     Press [Talk] key of the Regular HS to establish link.	Register CH (to be checked) to Regular BU.     Press [Talk] key of the CH to establish link.
2	Control signal confirmation	Check BBIC interface.	Check BBIC interface.
3	X'tal Frequency confirmation	1. Check X'tal Frequency. (*1) (10.368 MHz ± 100 Hz)	1. Check X'tal Frequency. (*2) (10.368 MHz ±100 Hz)
4	Range Confirmation Normal	Register Regular CH to BU (to be checked).     Press [Talk] key of the Regular CH to establish link.     Compare the range of the BU (being checked) with that of the Regular BU.	Register CH (to be checked) to Regular BU.     Press [Talk] key of the CH to establish link.     Compare the range of the CH (being checked) with that of the Regular CH.

#### Note:

- (\*1) Refer to Adjustment Standard (Base Unit) (P.54)
- (\*2) Refer to Adjustment Standard (Cordless Handset) (P.58)

#### 9.1.5. Check Cordless Handset Transmission

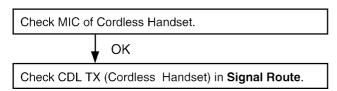

#### **Cross Reference:**

Signal Route (P.15)

## 9.1.6. Check Cordless Handset Reception

Check Cordless Handset Speaker in How to Check the Portable Speaker or Receiver.

OK

Check CDL RX (Cordless Handset) in Signal Route.

## Cross Reference:

How to Check the Cordless Handset Speaker or Receiver (P.62). Signal Route (P.15)

## 9.1.7. Check Caller ID

Check Caller ID in Signal Route.


#### **Cross Reference:**

Signal Route (P.15)

## 9.1.8. Bell Reception


#### 9.1.8.1. Base Unit

(A) When Power is normal:

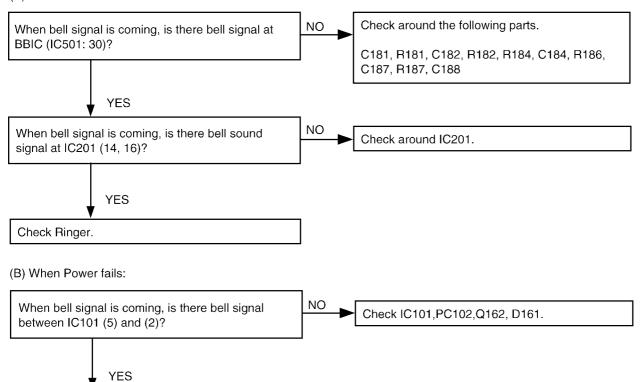

## 9.1.8.2. Cordless Handset

Check Ringer.

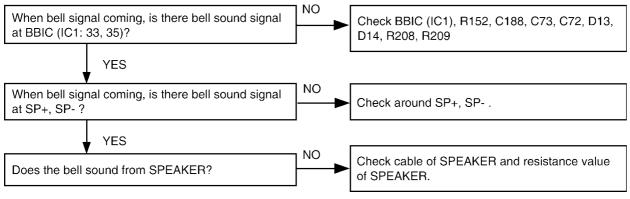


#### **Cross Reference:**

Telephone Line Interface (P.10)

Check Link (P.29)

How to Check the Cordless Handset Speaker or Receiver (P.62)

### 9.1.9. Check TAM Operation

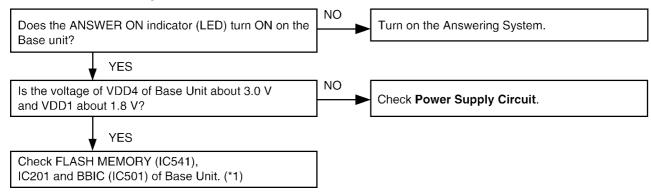


### **Cross Reference:**

**Power Supply Circuit (P.9)** 

Noto:

(\*1) When replacing FLASH MEMORY (IC541), TAM data needs to be written to it. Refer to **Base Unit** (P.59) of **Things to Do after Replacing IC**.


### 9.1.10. Check SP-phone Transmission

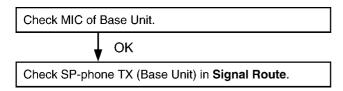

**Cross Reference:** 

Signal Route (P.15)


### 9.1.11. Check SP-phone Reception

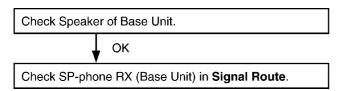

**Cross Reference:** 

Signal Route (P.15)


# 9.1.12. Check Corded Handset Transmission

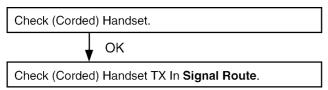

**Cross Reference:** 

Signal Route (P.15)

### 9.1.13. Check Corded Handset Reception

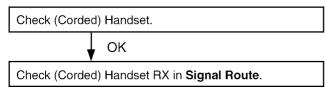

**Cross Reference:** 

Signal Route (P.15)

### 9.2. Troubleshooting by Symptom (Base Unit and Charger Unit)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on wether you have DECT tester (\*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
You cannot dial.	Check item (A)-(J).	Check item (A)-(J), (T).	
You cannot hear the caller's voice.	Check item (A)-(J), (R).	Check item (A)-(J), (R), (T).	
You cannot use cordless handset a little away from base unit even if the cordless handset is within range of the base unit.	-	Check item (K)-(Q), (T).	
The acoustic transmit level is high or low.	Check item (R).	Check item (R).	
The acoustic reception level is high or low.	Check item (R).	Check item (R).	
Base unit and cordless handset do not link each other.	Check item (A)-(H).	Check item (A)-(H), (K)-(Q), (T).	
TAM function does not work.	Check item ( <b>S</b> ).	Check item (S).	
The unit cannot charge.	Check item Charger (A).	Check item Charger (A).	

#### Note:

(\*2) Refer to Check Point (Base Unit) (P.38)

### 9.2.1. Check Point (Base Unit)

Please follow the items below when BBIC, EEPROM or FLASH is replaced.

#### Note:

After the measuring, suck up the solder of TP.

\*: Connections (P.52) is required beforehand.

The connections of simulator equipments are as shown in Adjustment Standard (Base Unit) (P.54).

Point	R312,C311, D301,F301 V ± 0.2 V. IC304,R384, R385,C385, D301,F301 ± 0.2 V. D311,IC303 0.2 V. C504,R387, IC501
Confirmation  (B) 3.75 V Supply Confirmation  (C) 2.5 V Supply Confirmation  (D) 3.0 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (F)* BBIC Confirmation  CONFIRM that the voltage between test point VDD2 and GND is 2.5 V to Confirmation  1. Confirm that the voltage between test point VDD4 and GND is 3 V to Confirmation  1. Confirm that the voltage between test point VDD4 and GND is 1.8 V to Confirmation  1. BBIC Confirmation (Execute the command "getchk").  2. Confirm the returned checksum value.	R312,C311, D301,F301 V ± 0.2 V. IC304,R384, R385,C385, D301,F301 ± 0.2 V. D311,IC303 0.2 V. C504,R387, IC501
(B) 3.75 V Supply Confirmation  (C) 2.5 V Supply Confirmation  (D) 3.0 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (F)* BBIC Confirmation  1. Confirm that the voltage between test point VDD4 and GND is 3.75 V Confirmation  1. Confirm that the voltage between test point VDD4 and GND is 3 V ± Confirmation  1. Confirm that the voltage between test point VDD4 and GND is 1.8 V Confirmation  1. BBIC Confirmation (Execute the command "getchk").  2. Confirm the returned checksum value.	D301,F301 V ± 0.2 V. IC304,R384, R385,C385, D301,F301 ± 0.2 V. D311,IC303 0.2 V. C504,R387, IC501
Confirmation  (C) 2.5 V Supply Confirmation  (D) 3.0 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (F)* BBIC Confirmation  CONFIRMATION  1. Confirm that the voltage between test point VDD4 and GND is 3 V ± 1. Confirm that the voltage between test point VDD4 and GND is 3 V ± 1. Confirm that the voltage between test point VDD4 and GND is 1.8 V confirmation  1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value.	V ± 0.2 V. IC304,R384, R385,C385, D301,F301 ± 0.2 V. D311,IC303 0.2 V. C504,R387, IC501
Confirmation  (C) 2.5 V Supply Confirmation  (D) 3.0 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (F)* BBIC Confirmation  CONFIRMATION  1. Confirm that the voltage between test point VDD4 and GND is 3 V ± 1. Confirm that the voltage between test point VDD4 and GND is 3 V ± 1. Confirm that the voltage between test point VDD4 and GND is 1.8 V confirmation  1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value.	R385,C385, D301,F301 ± 0.2 V. D311,IC303 0.2 V. C504,R387, IC501
(C) 2.5 V Supply Confirmation 1. Confirm that the voltage between test point VDD2 and GND is 2.5 V Confirmation (D) 3.0 V Supply Confirmation 1. Confirm that the voltage between test point VDD4 and GND is 3 V ± Confirmation (E) 1.8 V Supply Confirmation 1. Confirm that the voltage between test point VDD1 and GND is 1.8 V Confirmation 1. BBIC Confirmation (Execute the command "getchk").  2. Confirm the returned checksum value.	D301,F301 ± 0.2 V. D311,IC303 0.2 V. C504,R387, IC501
Confirmation  (D) 3.0 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (F)* BBIC Confirmation  Confirmation  1. Confirm that the voltage between test point VDD4 and GND is 3 V ± 1. Confirm that the voltage between test point VDD1 and GND is 1.8 V to 1. BBIC Confirmation  1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value.	± 0.2 V. D311,IC303  0.2 V. C504,R387, IC501
Confirmation  (D) 3.0 V Supply Confirmation  (E) 1.8 V Supply Confirmation  (F)* BBIC Confirmation  Confirmation  1. Confirm that the voltage between test point VDD4 and GND is 3 V ± 1. Confirm that the voltage between test point VDD1 and GND is 1.8 V to 1. BBIC Confirmation  1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value.	0.2 V. C504,R387, IC501
(D) 3.0 V Supply Confirmation 1. Confirm that the voltage between test point VDD4 and GND is 3 V ±  (E) 1.8 V Supply Confirmation 1. Confirm that the voltage between test point VDD1 and GND is 1.8 V  (F)* BBIC Confirmation - 1. BBIC Confirmation (Execute the command "getchk").  2. Confirm the returned checksum value.	IC501
Confirmation  (E) 1.8 V Supply VDD1 1. Confirm that the voltage between test point VDD1 and GND is 1.8 V Confirmation  (F)* BBIC Confirmation - 1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value.	IC501
(E) 1.8 V Supply Confirmation 1. Confirm that the voltage between test point VDD1 and GND is 1.8 V Supply Confirmation 1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value.	
Confirmation  (F)* BBIC Confirmation - 1. BBIC Confirmation (Execute the command "getchk").  2. Confirm the returned checksum value.	± 0.1 V. Q351,IC501
(F)* BBIC Confirmation - 1. BBIC Confirmation (Execute the command "getchk"). 2. Confirm the returned checksum value.	
Confirm the returned checksum value.	
	IC501
Connection of checkeum value and program number is shown below	
Connection of checksum value and program number is shown below.	
checksum value program number	
ex.) D88C DBJ1ZB	
(G)* EEPROM Confirmation - 1. EEPROM Confirmation (Execute the command "sendchar EPV").	IC561
2. Confirm the returned value.	10001
(Value for reference is written at "EEPROM C/SUM" in	
Software_Version_Table.xls)	
Note:	
"checksum" vary depending on the country version. You can find the	em in the
batch file, PNZZ- mentioned in The Setting Method of JIG (Base Unit	
(H)* BBIC Clock Adjustment CLK 1. Check X'tal Frequency. (10.368 MHz ± 100 Hz).	IC501,X511
GND_C Input Command "sendchar sfr", then you can confirm the current value	ue.
2. If the frequency is not 10.368 MHz ± 100 Hz, Adjust the frequence	
executing the command "sendchar sfr XX YY (where XX YY is the v	/alue)" so
that the reading of the frequency counter is 10.368000 MHz ± 20 Hz.	,

<sup>(\*1)</sup> A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.

	Items	Check	Procedure	Check or
		Point		Replace Parts
(I)*	Hookswitch Check with	-	Connect TIP/RING (Telephone Socket) to Tel-simulator which is connected	P101,D101,
	DC Characteristics		with 600 $\Omega$ .	Q111,Q112,
			2. Set line voltage to 48 V and line current to 40 mA at off-hook condition of	
			normal telephone.	R112,R123,
			3. Execute the command "hookoff"	R115,R117,
			4. Confirm that the line current is 40 mA ± 5 mA.	R118,D117
			Execute the command "hookon".     Confirm that the line current is less than + 0.8 mA.	
(1)	DTMF Generator Check		<ol> <li>Connect TIP/RING (Telephone Socket) to DTMF tester. (Load=600 Ω)</li> </ol>	IC501,R154,
( <b>J</b> )	DINF Generalor Check	-	2. Link cordless handset and push dial key.	R153,C151,
			Confirm DTMF character.	Q131
			4. Confirm that the high Group is -6 dBm ± 2 dBm.	QIST
			5. Confirm that the low Group is -8 dBm ± 2 dBm.	
( <b>K</b> )*	Transmitted Power	ANT2	Remove the Antenna before starting step from 1 to 7.	DA802,C859,
(11)	Confirmation	74112	Configure the DECT tester (CMD60) as follows;	C803,DA801,
	Committation		Setting>	C812,L802,
			Test mode: FP	IC801,IC501
			Traffic Carrier: 2	,
			Traffic Slot: 4	
			Mode: Loopback	
			• PMID: 00000	
			• RF LEVEL = -70 dBm.	
			Execute the command "testmode".	
			3. Execute the command "sendchar dmv 2 2".	
			4. Check that "Signalling Status" has been set to "Locked", then press "ACCEPT	
			RFPI".	
			Initiate connection from Dect tester ("set up connect")	
			6. Execute the command "ANT2".	
			7. Confirm that the NTP value at ANT is 19.0 dBm ~ 25.0 dBm.	
(L)*	Modulation Check	ANT2	Follow steps 1 to 6 of (K).	DA802,C859,
			7.Confirm that the B-Field Modulation is -370 ± 30/+370 ± 30 kHz/div using data	C803,DA801,
			type Fig31.	C812,L802,
				IC801,IC501
(M)*	Frequency Offset Check	ANT2	Follow steps 1 to 6 of (K).	DA802,C859,
			7.Confirm that the frequency offset is $\leq \pm 50$ kHz.	C803,DA801,
				C812,L802,
/N10.2-	F	ANITO	E-llowesters A to O of (III)	IC801,IC501
( <b>N</b> )*	Frequency Dirft	ANT2	Follow steps 1 to 6 of (K).	C803,DA801,
	Confirmation		7.Confirm that the frequency drift is < ± 35 kHz/ms.	C812,L802,
(C)+	Compitibility Describes	ANITO	Fallow stone 4 to C of (M)	IC801,IC501
<b>(O</b> )*	Sensitivity Receiver	ANT2	Follow steps 1 to 6 of <b>(K)</b> .	DA802,C859,
	Confirmation		7.Set DECT tester power to -88 dBm.	C803,DA801,
			8.Confirm that the BER is < 1000 ppm.	C826,R807, C822,IC501
/D\*	Timing Confirmation	ANT2	(Through Cordless handset)	·
( <b>P</b> )*	Timing Confirmation	ANIZ	(Through Cordless handset)	DA802,C859, C803,DA801,
			Follow steps 1 to 6 of <b>(K)</b> .  7.Confirm that the Timing accuracy is	C812,L802,
			• ± 5.0 ppm (When adjust the frequency of CLK in them <b>(H)</b> .	IC801,IC501
			• ± 15.0 ppm (When adjust the frequency of CLK in them (A).	10001,10001
(O)*	RSSI Level Confirmation	ANT2	Follow steps 1 to 6 of <b>(K)</b> .	DA802,C859,
(•4)	1.001 LOVEL OUTILITIALION	/ 11 4 1 4	7.Execute the command "readrssi".	C803,DA801,
			8. Confirm that the returned value is 22 ± A (hex).	C826,R807,
			5. 55 diat die retained raide to LE 171 (110x).	C822,IC501
				0022,10001

### KX-TG6461BXT/KX-TGA641BXT

	Items	Check	Procedure	Check or
		Point		Replace Parts
( <b>R</b> )	Audio Check	-	(Through Cordless handset)	P101,D101,
			Link with cordless handset.	Q111,Q112,
			<ol><li>Input -45 dBm (600Ω)/1KHz to MIC of cordless handset.</li></ol>	R110,R112,
			Measure the Level at Line I/F and distortion level.	R123,R115,
			3. Confirm that the level is -4 dBm $\pm$ 2 dBm and that the distortion level is < 5 %	R117,R118,
			at TEL Line (600 $\Omega$ Load).	D117Q131,
			<ol> <li>Input -20 dBm (600Ω)/1KHz to Line I/F.</li> </ol>	C151,R153,
			Measure the level at Receiver of cordless handset and distortion level	R154,C152,
			(*Set Receive volume to second position from minimum).	C154,C155,
			5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5 %	R131,C142,
			at Receiver (150 $\Omega$ Load).	R146,IC501
		-	(Through SP-PHONE)	In addition to
			Press Answer key ON.	(through Cord-
			2. Input -45 dBm (600 $\Omega$ )/1KHz to the terminal for SP_Phone MIC on the Base	less handset)
			unit.	IC201,L203,
			3. Measure and check the level at line I/F is -3 dBm ± 2dBm and that the	L204,L201,
			distortion level is < 5% at TEL Line (600 $\Omega$ ).	L201,SP,
			4. Input -20 dBm (600Ω)/1KHz to Line I/F.	Mic,R233,
			5. Measure and check the level at the terminal for SP_Phone receiver of the	
			Base unit is -13 dBm ± 2dBm and that distortion level is <5% (Set Receivr	
			volume set to 5th position from minimum, On the measurement connection.)	C235,R236
			Refer to Adjustment Standard (Base Unit) (P.54).	
		-	(Through Corded-Handset)	In addition to
			Set the Hook Switch to OFF-HOOK.	(through cord-
			2. Input -45 dBm (600 $\Omega$ )/1KHz to the terminal for Corded-handset MIC on the	less handset)
			Base unit.	IC201,L221-
			3. Measure and check the level at line I/F is -14 dBm ± 2dBm and that the	L224
			distortion level is < 5% at TEL Line( $600\Omega$ )	R213,R214
			4. Input -20 dBm (600Ω)/1KHz to Line I/F.	C213,C214
			5. Measure and check the level at terminal for Corded-Handset receiver on Base	C224,C227
			unit is -26.5 dBm ± 2dBm and that distortion level is <5% (Set Receiver	R222,R224
			volume to second position from minimum, and load is $150\Omega$ instead of	Corded-handset
			Receiver.)	
(2)	<b></b>		Refer to Adjustment Standard (Base Unit) (P.54).	100041054
( <b>S</b> )*	TAM Operation	-	TAM Confirmation (Execute the command "sendchar_VPI")	IC201,IC541
( <b>-</b> )	Confirmation		2. Confirm the returned Value (Value is "DAS7EA 03").	Q541
( <b>T</b> )*	Power RAMP	-	Follow steps 1 to 6 of (K).	
	Confirmation		7.Confirm that Power RAMP is matching.	

# 9.2.2. Check Point (Charger Unit)

	Items	Check	Procedure	Check or
		Point		Replace Parts
( <b>A</b> )	Charging Check	-	1. Connect Charge Contact 12 $\Omega$ /2 W resistor between charge+ and charge	R1,F1
			2. Measure and confirm voltage across the resistor is 3.1 V $\pm$ 0.3 V.	

### Note:

After the measuring, suck up the solder of TP.

The connection of adjustment equipment is as shown in Adjustment Standard (Charger Unit) (P.55).

### 9.3. Troubleshooting by Symptom (Cordless Handset)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (\*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
Battery strength is not indicated correctly by Battery icon.	Check item (A)-(D), (E)-(G).	Check item (A)-(D), (E)-(G).	
You cannot hear the caller's voice.	Check item (A)-(C), (H).	Check item (A)-(C), (H)-(M), (O).	
You cannot use cordless handset a little away from base unit even if the cordless handset is within range of the base unit.	-	Check item (I), (M).	
Does not link between base unit and cordless handset.	Check item (A)-(C), (H).	Check item (A)-(C), (I)-(M).	
The Audio level is high or low.	Check item ( <b>0</b> ).	Check item ( <b>O</b> ).	
The SP-Phone level is high or low.	Check item (P).	Check item (P).	

### Note:

- (\*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.
- (\*2) Refer to Check Point (Cordless Handset) (P.42)

### 9.3.1. Check Point (Cordless Handset)

Please follow the items below when BBIC or EEPROM is replaced.

#### Note:

After the measuring, suck up the solder of TP.

\*: Connections (P.56) is required beforehand.

The connections of adjustment equipments are as shown in Adjustment Standard (Cordless Handset) (P.58).

	Items	Check	Procedure	Check or
		Point		Replace Parts
( <b>A</b> )*	1.8 V Supply Adjustment	VDD1	1. Confirm that the voltage between test point VDD1 and GND is 1.8 V $\pm$ 0.02 V.	IC1, Q2, C48,
			Execute the command "VDD", then check the current value.	D1, C1, C44,
			3. Adjust the 1.8V voltage of VDD1 executing command "VDD XX"(XX is the	
			value).	C40, C45, F1
( <b>B</b> )*	BBIC Confirmation	-	BBIC Confirmation (Execute the command "getchk").	IC1, X1, RA61,
			Confirm the returned checksum value.	R64, R66
			Connection of checksum value and program number is shown below.	
			checksum value program number	
			ex.) 88AE DBF2BA	
(C)*	EEP-ROM Confirmation		EEPROM Confirmation (Execute the command "sendchar EPV").	IC1, IC3,
(0)	LLF-NOW Commination	-	2. Confirm the returned value.	R40~R42,
			(Value for reference is written at "EEPROM C/SUM" in	C172
			Software Version Table.xls)	0172
			Note:	
			"checksum" vary depending on the country version. You can find them in the	
			batch file, PNZZ- mentioned in The Setting Method of JIG (Cordless Handset)	
			(P.56).	
(D)	Charge Control Check &	-	1. Apply 3.5 V between CHG(+) and CHG(-) with DC power supply and set cur-	IC1, Q4 Q9,
(- /	Charge Current Monitor		rent limit to 250 mA.	D7, R6, R7,
	Check		Confirm the indication of "charging" on LCD.	F1, C1, R2,
			Confirm that the current limit LED of DC power supply is ON/OFF.	R30, R31, R8,
			Confirm it after waiting over 1 minute at least.	R45
			3. Decrease current limit of DC power supply to 100 mA.	
			4. Confirm that the current limit LED of DC power supply is stable. (Current limiter	
			is ON.)	
			(If charge control cannot be confirmed by this procedure, please use battery to cord-	
			less handset power supply and try again.)	
( <b>E</b> )*	Charge Detection (OFF)	-	1. Stop supplying 3.5 V to CHG (+) and CHG (-).	IC1, Q4 Q9,
` ´	Check		2. Confirm the indication of "charging" has been cleared.	D7, R6, R7,
				F1, C1, R2,
				R30, R31, R8,
				R45

	Items	Check	Procedure	Check or
		Point		Replace Parts
(F)*	Battery Monitor Check		1. Apply 2.25 V between BATT+ and BATT- 2. Execute the command sendchar PAD sendchar LED 0 sendchar CRX 0 1 sendchar AD1 It assumes that the return value is XX. a) 6c ≤ XX ≤ 71: No need to adjust b) XX: 6A ~ 6B: Need to adjust XX: 72 ~ 74: Need to adjust Write AD value of 2.25 V to EEPROM. ex) read data: XX = 6A, write data: YY = 6A read data: XX = 73, write data: YY = 73 EEPROM = 0004(Low Voltage) write "YY" Execute the command "wreeprom 00 04 01 YY". EEPROM = 0005(No Voltage) write "YY - 1D" Execute the command "xwreeprom 00 05 01 ZZ". EEPROM = 000A(Low Voltage BL) write "YY - 16" Execute the command "wreeprom 00 0A 01 WW".  Note: ZZ = YY - C No Voltage writing data limit is '00'. c) XX: 00 ~ 69: Reject	IC1, F1, C1, R12, R45
			C) XX: 00 ~ 69: Reject  XX: 75 ~ FF: Reject	
( <b>G</b> )	Battery Low Confirma-	-	1. Apply 2.40 V between BATT+ and BATT	IC1, F1, C1,
	tion		2. Confirm that there is no flashing of Battery Icon.	R12, R45
			<ol> <li>Apply 2.25 V ± 0.08 V between BATT+ and BATT</li> <li>Confirm that there is flashing of Battery Icon.</li> </ol>	
( <b>H</b> )*	BBIC Clock Adjustment	CLK	Apply 2.6 V between BATT+ and BATT- with DC power.     Input Command "sendchar sfr", then you can confirm the current value.	IC1, X1, C47
			<ol> <li>Check X'tal Frequency. (10.368 MHz ± 100 Hz).</li> <li>If the frequency is not 10.368 MHz ± 100 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 10.368000 MHz ± 20 Hz.</li> <li>Note:         Clear the registered information for Base Unit before measurement, because the Frequency will not possibly get stable due to the registered information. Pressing the button of "3" "7" "9" "#" clears the registration.     </li> <li>Register to it on Base Unit after measurement.</li> </ol>	
(I)*	Transmitted Power Confirmation	-	Remove the Antenna before starting step from 1 to 4.  1. Configure the DECT tester (CMD60) as follows;	IC1, C802~C806,
			<setting> <ul> <li>Test mode: PP</li> <li>RFPI: 0102030405</li> <li>Traffic Carrier: 5</li> <li>Traffic Slot: 4</li> <li>Mode: Loopback</li> <li>RF LEVEL = -70 dBm</li> <li>PACKET: PP32Z</li> </ul> 2. Execute the command "sendchar TST 01 02 03 04 05". <ul> <li>Initiate connection from DECT tester.</li> <li>Confirm that the NTP value at ANT is 19 dBm ~ 25 dBm.</li> </ul></setting>	C808~C814, C819~C820, C822, C825~C827, C834, C859~C864, L801~L804, DA801, R801~R808
( <b>J</b> )*	Modulation Check and Adjustment	-	Follow steps 1 to 3 of <b>(K)</b> .  4.Confirm that the B-Field Modulation is - 370 ± 30/ +370 ± 30 kHz/div & Modulated width ≧ 690 kHz using data type Fig 31.	IC1, C802~C806, C808~C814, C819~C820, C822, C825~C827, C834, C859~C864, L801~L804, DA801, R801~R808

### KX-TG6461BXT/KX-TGA641BXT

	Items	Check	Procedure	Check or
		Point		Replace Parts
( <b>K</b> )*	Frequency Offset Confirmation	-	Follow steps 1 to 3 of (I).  4.Confirm that the frequency Offset is < ± 50 kHz.	IC1, C802~C806, C808~C814, C819~C820,
				C822, C825~C827, C834, C859~C864, L801~L804, DA801,
/L \*	Fraguency Drift Confir		Eallow stops 1 to 3 of (I)	R801~R808
(L)*	Frequency Drift Confirmation	-	Follow steps 1 to 3 of (I).  4.Confirm that the frequency Drift is < ± 35 kHz/ms.	IC1, C802~C806, C808~C814, C819~C820, C822, C825~C827, C834, C859~C864, L801~L804, DA801, R801~R808
( <b>M</b> )*	Sensitivity Receiver	-	Follow steps 1 to 3 of (I).	IC1,
	Confirmation		4.Set DECT tester power to -88 dBm. 5.Confirm that the BER is < 1000 ppm.	C802~C806, C808~C814, C819~C820, C822,
				C825~C827, C834, C859~C864, L801~L804,
				DA801, R801~R808
( <b>N</b> )*	Power RAMP Confirma-	-	Follow steps 1 to 3 of (I).	IC1,
	tion		4.Confirm that Power RAMP is matching.	C802~C806, C808~C814, C819~C820, C822, C825~C827, C834, C859~C864, L801~L804, DA801, R801~R808
( <b>O</b> )	Audio Check and Confir-	-	Link to BASE which is connected to Line Simulator.	IC1, C12, D19,
	mation		2. Set line voltage to 48 V and line current to 40 mA.  3. Input 45 dBm (6000)/1KHz to MIC and measure Line output level	D20, C96, C97, R215,
			<ol> <li>Input -45 dBm (600Ω)/1KHz to MIC and measure Line output level.</li> <li>Confirm that the level is -4 dBm ± 2 dBm and that the distortion level is &lt; 5% at</li> </ol>	
			TEL Line (600 $\Omega$ Load).	C11, C13,
			<ol> <li>Input -20 dBm (600Ω)/1KHz to Line I/F and measure Receiving level at REV+ and REV</li> </ol>	R28, D3, D4, MIC, L9, RA2,
(B)	SD phone Audie Check		6. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver. (vol = 2)	R73, R74
( <b>P</b> )	SP phone Audio Check and Confirmation	-	Link to Base which is connected to Line Simulator.     Set line voltage to 48 V and line current to 40 mA.	IC1, C12, C73, D13, D14,
			<ol> <li>Set the cordless handset off-hook using SP-Phone key.</li> <li>Input -25 dBm (600Ω)/1KHz to Line I/F and measure Receiving level at SP+ and SP</li> </ol>	R152, R73, R74, RA2, MIC, C11,
			<ol> <li>Confirm that the level is -9 dBm ± 2 dBm and that the distortion level is &lt; 5%. (vol = 3)</li> </ol>	C13, RA4, R27, R28, R208, R209, C96, C97, R215, C72
( <b>Q</b> )	Charge Pump 3.0V Sup- ply Confirmation	CP3.0V	1. Confirm that the voltage between testpoint CP3.0V and GND is 3.0V -0.1/ +0.3V.	
( <b>R</b> )	Charge Pump 4.0V Supply Confirmation	CP4.0V	Confirm that the voltage between testpoint CP4.0V and GND is 4.0V -0.2V.	C50, C51

### 9.3.2. Troubleshooting for Speakerphone

When the customer's telephone line corresponds to the following conditions, and the transmission signal of SP-Phone is interrupted, performing the next set up to a cordless handset will improve it to some extent.

#### **Conditions**

- 1. When customer's line has less line loss.
  - ex.) The customer is using optical fiber, ISDN terminal adaptor, or PBX.
  - In this case, receiving signal is strong and it may affect transmission signal.
- 2. When the other party is talking from noisy place.
  - ex.) The other party is using cellular phone. The background noise is very loud.
  - In this case, the noise from the other party (i.e. surrounding noise) may affect transmission signal.

### **Setting Method**

• Change the cordless handset address of EEPROM (0129) from 00 to 01 by **Engineering Mode**.

# 10 Disassembly and Assembly Instructions


# 10.1. Disassembly Instructions

### 10.1.1. Base Unit

1.1. Base Unit


Remove the 5 screws to remove the cabinet cover.

Cabinet Cover

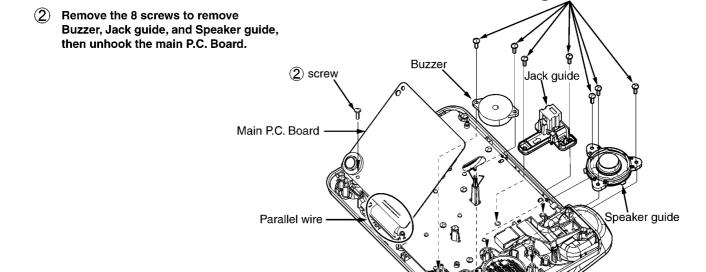


27 screws

3 Unhook the hook and remove the 8 screws to remove the operational P.C. board.

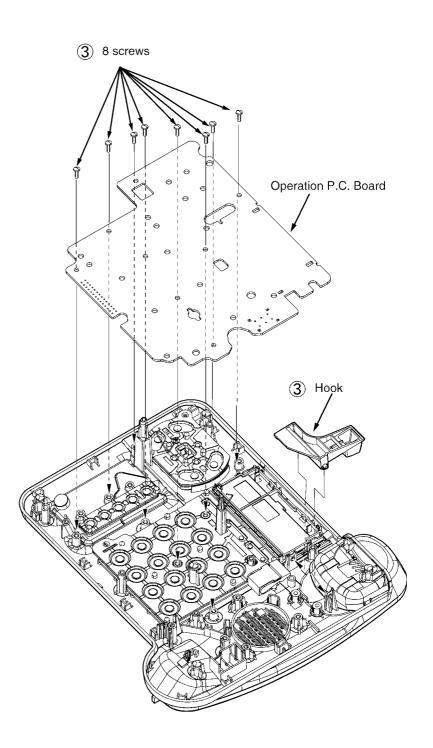


### 10.1.2. Cordless Handset

1 Remove the 2 screws.

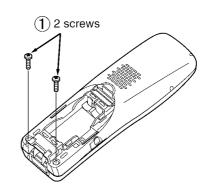

2 Insert a JIG (PQDJ10006Y) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.

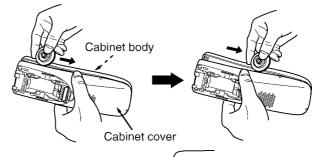

③ Likewise, open the other side of the cabinet.




4 Remove the cabinet cover by pushing it upward.



(5) Remove the solders and tape.




(6) Remove the 2 screws to remove the 2 charge terminals.

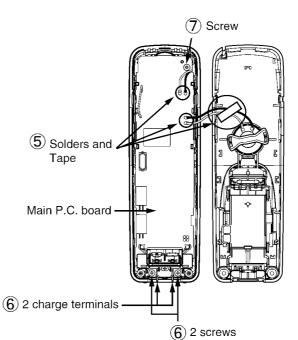

(7) Remove the screw to remove the main P. C. board.

# 10.1.3. Charger Unit


(1) Remove the screw to remove the cabinet cover.

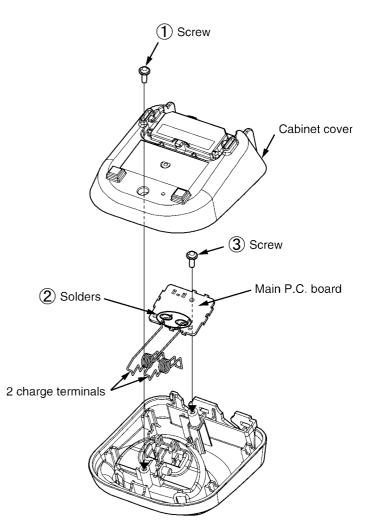


- 2 Remove the solders to remove the 2 charge terminals.
- (3) Remove the screw to remove the main P.C. board.

# 10.2. Assembly Instructions

# 10.2.1. How to Replace the Base unit LCD

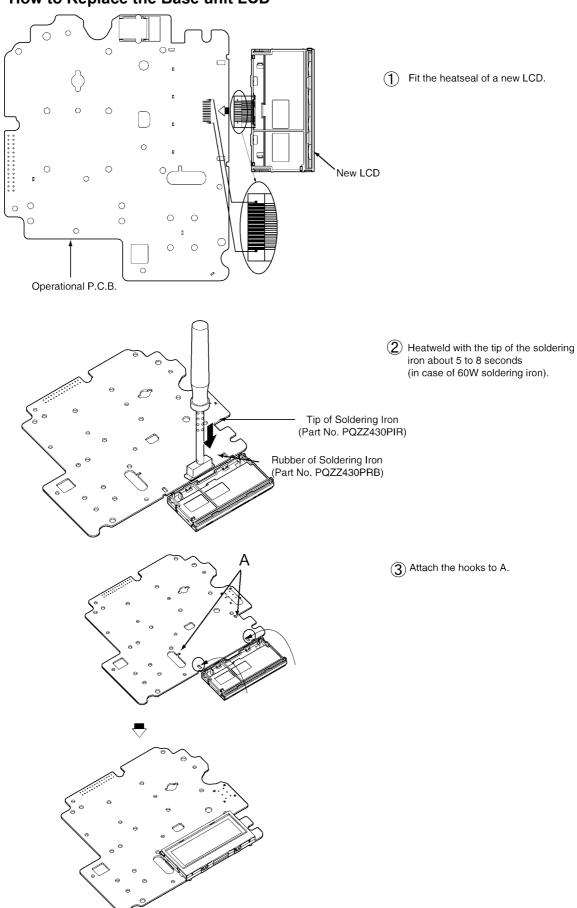

### 10.2.2. How to Replace the Cordless Handset LCD

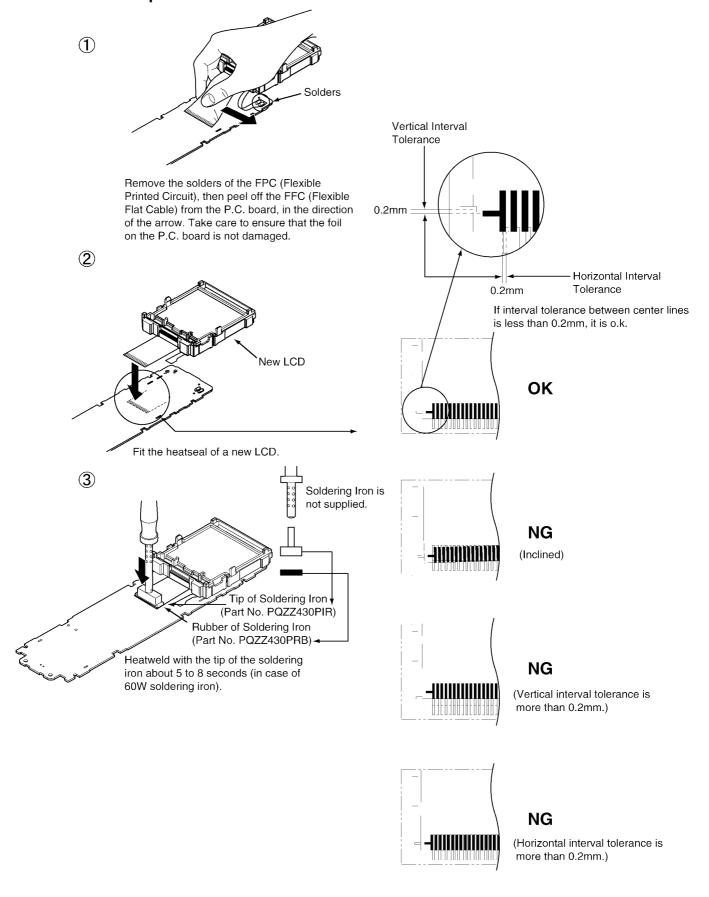

# 11 Measurements and Adjustments

This chapter explains the measuring equipment, the JIG connection, and the PC setting method necessary for the measurement in **Troubleshooting Guide** (P.26)

### 11.1. Equipment Required

- Digital multi-meter (DMM): it must be able to measure voltage and current.
- · Oscilloscope.
- Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision; ±4 ppm) Hewlett Packard, 53131A is recommended.
- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
   This equipment may be useful in order to precisely adjust like a mass production.

### 11.2. The Setting Method of JIG (Base Unit)


This section explains the PC setting to use command required in Check Point (Base Unit)(P.38).

#### <Preparation>

- Serial JIG cable: PQZZ1CD300E
- PC which runs in DOS mode
- Batch file CD-ROM for setting: PNZZTG6461BX

### 11.2.1. Connections

- ① Connect the AC adaptor to DC-JACK (base unit).
- 2 Connect the JIG Cable GND (black) to GND.
- ③ Connect the JIG Cable RX (red) to URX and TX (yellow) to UTX.

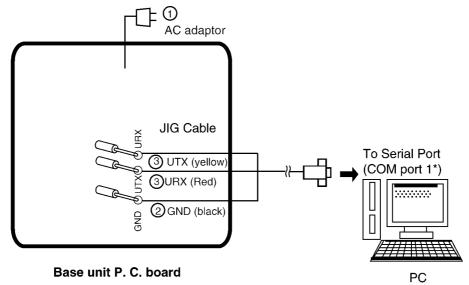

### Note:

\*: COM port names may vary depending on what your PC calls it.

#### 11.2.2. How to install Batch file into P.C.

- 1. Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG\*\*\*\* folder to your PC (example: D drive).
- 2. Open an MS-DOS mode window.

### <Example for Windows>

On your computer, click [Start], select  ${\bf Programs}$ 

(All Programs for Windows XP/Windows Server 2003), then click

**MS-DOS Prompt**. (for Windows 95/Windows 98) Or

Accessories-MS-DOS Prompt. (for Windows Me)

Command Prompt. (for Windows NT 4.0)

Or

**Accessories-Command Prompt.** 

(for Windows 2000/Windows XP/Windows Server 2003)

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PNZZTG\*\*\*\*", then press the Enter key.
- **5.** Type "SET\_COM=X", then press the Enter key
- (X: COM port number used for the serial connection on your PC).
- **6.** Type "**READID**", then press the **Enter** key.
  - •If any error messages appear, change the port number or check the cable connection.
  - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

#### <Example: >

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*
- D: ¥PNZZTG\*\*\*\* >SET\_COM=X
- D: ¥PNZZTG\*\*\*\*>READID
- 00 52 4F A8 A8
- D: ¥PNZZTG\*\*\*\*>DOSKEY
- D: ¥PNZZTG\*\*\*\*>\_

#### <Example: error happens>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*
- D: ¥PNZZTG\*\*\*\* >SET\_COM=X
- D: ¥PNZZTG\*\*\*\*>READID CreateFile error

ERROR 10: Can't open serial port

D: ¥PNZZTG \*\*\*\*>\_

#### Note:

• "\*\*\*\*" varies depending on the country or models.

#### **11.2.3.** Commands


See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address
		"00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E
		98" is written.
setfreq	Adjust Frequency of RFIC	Type "setfreq nn".
hookoff	Off-hook mode on Base	Type "hookoff".
hookon	On-hook mode on Base	Type "hookon".
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45"
		is data to be written.

### 11.3. Adjustment Standard (Base Unit)

When connecting the simulator equipments for checking, please refer to below.

### 11.3.1. Bottom View

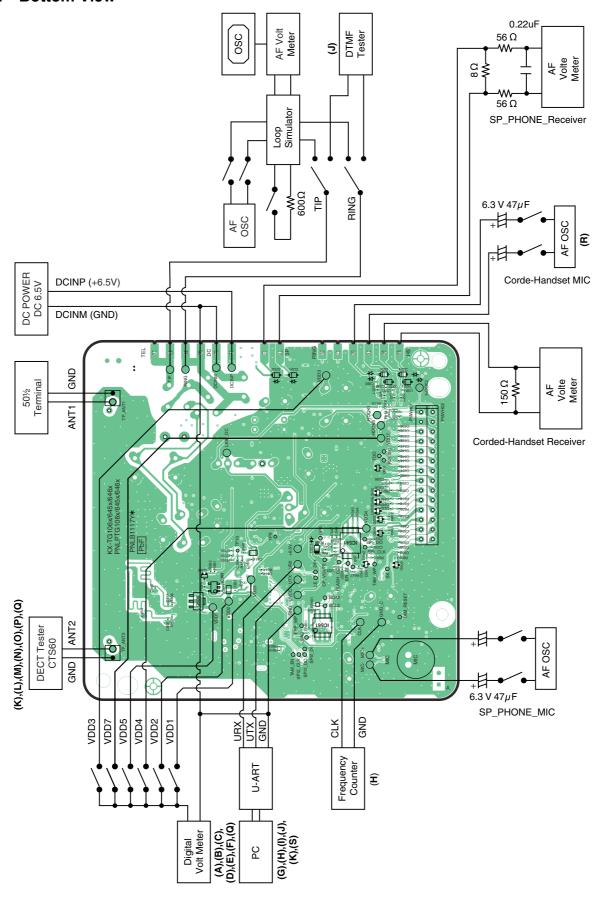


Note:

(A) - (S) is referred to Check Point (Base Unit) (P.38)

# 11.4. Adjustment Standard (Charger Unit)

When connecting the simulator equipment for checking, please refer to below.

### 11.4.1. Bottom View

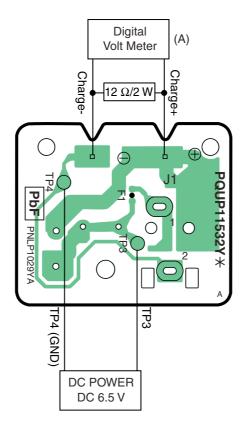

Note:

(A) is referred to Check Point (Charger Unit) (P.41)

### 11.5. The Setting Method of JIG (Cordless Handset)

This section explains the PC setting to use command required in Check Point (Cordless Handset)(P.42).


### <Preparation>

Serial JIG cable: PQZZ1CD300EPC which runs in DOS mode

• Batch file CD-ROM for setting: PNZZTG6461BX

### 11.5.1. Connections

- ①Connect the DC Power or Battery to BATT+ and BATT-.
- ②Connect the JIG cable GND (black) to GND.
- 3 Connect the JIG cable UTX (yellow) to UTX and URX (red) to URX.

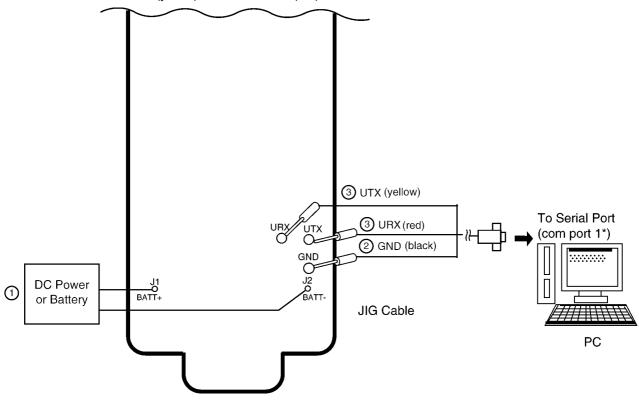

Cordless Handset P. C. board

### Note:

\*: COM port names may vary depending on what your PC calls it.

#### 11.5.2. How to install Batch file into P.C.

- **1.** Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG\*\*\*\*\* folder to your PC (example: D drive).
- 2. Open an MS-DOS mode window.

drive, then press the Enter key.

#### <Example for Windows>

On your computer, click [Start], select Programs (All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Or

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

- **3.** At the DOS prompt, type "**D**:" (for example) to select the (for Windows 2000/Windows XP/Windows Server 2003)
- 4. Type "CD ¥PNZZTG\*\*\*\*\*", then press the Enter key.
- **5.** Type "SET RTX\_COM=X", then press the Enter key (X: COM port number used for the serial connection on your PC).
- **6.** Type "READID", then press the Enter key.
  - •If any error messages appear, change the port number or check the cable connection.
  - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

#### <Example:>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*\*
- D: ¥PNZZTG\*\*\*\*\* >SET RTX\_COM=X
- D: ¥PNZZTG\*\*\*\*\*>READID
- 00 52 4F A8 A8
- D: ¥PNZZTG\*\*\*\*\*>DOSKEY
- D: ¥PNZZTG\*\*\*\*\*> \_

#### <Example: error happens>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*\*
- D: ¥PNZZTG\*\*\*\*\* >SET RTX\_COM=X
- D: ¥PNZZTG\*\*\*\*>READID CreateFile error

ERROR 10: Can't open serial port

D: ¥PNZZTG\*\*\*\*\*> \_

#### Note:

• "\*\*\*\*" varies depending on the country or models.

#### 11.5.3. Commands


See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of FLASH	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
setfreq	Adjust Frequency of RFIC	Type "setfreq nn".
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of FLASH	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

### 11.6. Adjustment Standard (Cordless Handset)

When connecting the simulator equipments for checking, please refer to below.

### 11.6.1. Component View

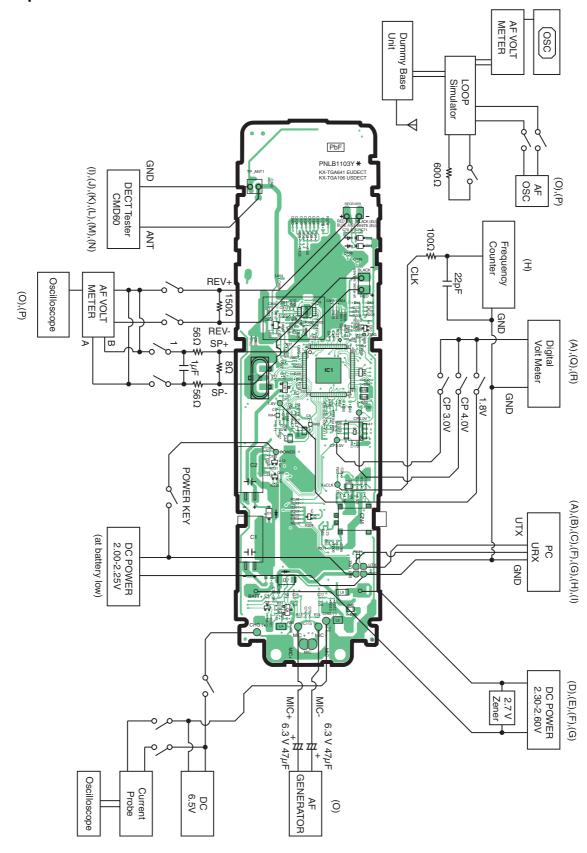

Note:

(A) - (R) is referred to Check Point (Cordless Handset) (P.42)

### 11.7. Things to Do after Replacing IC or X'tal

If repairing or replacing BBIC (FLASH type), EEPROM and X'tal, it is necessary to download the required data such as Programming data or adjustment data, etc in memory.

The set doesn't operate if it is not executed.

### 11.7.1. How to download the data

### 11.7.1.1. Base Unit

First, operate the PC setting according to The Setting Method of JIG (Base Unit)(P.52).

Then download the appropriate data according to the following procedures.

	Items	How to download/Required adjustment
BBIC (IC501)	Programming data is stored in memory.	1) Make sure to connect the JIG cable, then disconnect the DC
		Power in order to download the data.
		2) Execute the command "flw480 *******.hex".
		3) Connect the DC Power.
		4) Press the PC Enter key once.
		5) After a few minutes, "Successful upgrade" is displayed on the
		PC indicating downloading has finished.
		6) Detach the JIG cable, then disconnect the DC Power.
		7) Connect the DC Power.
		8) Connect the JIG cable again, and execute the command
		"getchk", then confirm the checksum value is correct.
		If the downloading fails, start again from step 1).
		Default batch file: Execute the command "default.bat".
		10) Country version batch file: Execute the command
		"TG6461XXrevYY.bat". (*1)
		11) Clock adjustment: Refer to Check Point (H). (*2)
EEPROM (IC561)	Adjusted parameter data is stored in memory.	1) Change the address "0000" of EEPROM to "55" to download
	(country version batch file, default batch file,	
	etc.)	2) Default batch file: Execute the command "default.bat".
		3) Country version batch file: Execute the command
		"TG6461XXrevYY.bat". (*1)
EL A OLL (10 E 44)	N	4) Clock adjustment: Refer to Check Point (H). (*2)
FLASH (IC541)	Voice prompt data is stored in memory.	1) Wait more than 15 seconds after connecting the JIG Cables.
	(vary depending on country version)	2) Execute the command "VPDL2009 -57600 ZZ.bin"(*1).
		3) Wait until "VP file transfer complete" is displayed on the P.C.
		(writing time: aprox. About 1 min) 4) Detach the JIG cable to disconnect DC Power.
		Then reconnect the DC Power and confirm whether the down-
		load is successfully completed.
V'tal (V511)	System sleek	
X'tal (X511)	System clock	Clock adjustment data is in EEPROM, adjust the data again after replacing it.
		1) Refer to Check Point (H). (*2)
		1) Note: to Check Pullit (II). ( 2)

### Note:

(\*2) Refer to Check Point (Base Unit) (P.38)

<sup>(\*1)</sup> XX: country code YY: revision number, ZZ: voice prompt

<sup>&</sup>quot;XX", "YY" and "ZZ" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG (Base Unit)** (P.52).

### 11.7.1.2. Cordless Handset

First, operate the PC setting according to The Setting Method of JIG (Cordless Handset)(P.56).

Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment		
BBIC (FLASH type)	Programming data is stored in memory.	1) Make sure to connect the JIG cable, then disconnect the DC		
(IC1)		Power in order to download the data.		
		2) Execute the command "flw480 *******.hex".		
		3) Connect the DC Power.		
		4) Press and hold the cordless handset Power key.		
		5) While holding down the cordless handset Power key, press		
		the PC Enter key once.		
		6) After a few minutes, "Successful upgrade" is displayed on the PC indicating downloading has finished.		
		7) Detach the JIG cable, then press the cordless handset		
		Power key to turn it on.		
		8) Connect the JIG cable again, and execute the command		
		"getchk", then confirm the checksum value is correct.		
		<ul> <li>If the downloading fails, start again from step 1).</li> </ul>		
		Default batch file: Execute the command "default.bat".		
		10) Default batch file (remaining): Execute the command		
		"TGA641DEFrevYY.bat". (*3).		
		11) Country version batch file: Execute the command		
		"TGA641XXrevYY.bat". (*3).		
		12) Clock adjustment: Refer to Check Point (H). (*4).		
		13) 1.8 V setting and battery low detection: Refer to Check		
=======================================		Point (A), (F) and (G). (*4).		
EEPROM (IC3)	Adjusted parameter data is stored in memory.	1) Default batch file: Execute the command "default.bat".		
	L,	2) Default batch file (remaining): Execute the command		
	etc.)	"TGA641DEFrevYY.bat". (*3)		
		3) Country version batch file: Execute the command "TGA641XXrevYY.bat". (*3)		
		4) Clock adjustment: Refer to Check Point (J). (*4)		
		5) 1.8 V setting and battery low detection: Refer to Check Point		
		(A), (F) and (G). (*4)		
X'tal (X1)	System clock	Clock adjustment data is in EEPROM, adjust the data again		
		after replacing it.		
		1) Refer to Check Point (H). (*4)		

### Note:

(\*3) XX: country code YY: revision number

"XX" and "YY" varies depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG (Cordless Handset)** (P.56).

(\*4) Refer to Check Point (Cordless Handset) (P.42)

# 11.8. RF Specification

### 11.8.1. Base Unit

Item	Value	Refer to *
TX Power	19.0 dBm ~ 25.0 dBm	Check Point (Base Unit) (K)
Modulation	$-370 \pm 30/+370 \pm 30$ kHz/div & Modulated width $\geq$ 690 kHz	Check Point (Base Unit) (L)
Frequency Offset	-50 kHz ~ +50 kHz	Check Point (Base Unit) (M)
Frequency Drift	< ± 35 kHz / ms	Check Point (Base Unit) (N)
RX Sensitivity	< 1000 ppm	Check Point (Base Unit) (O)
Timing Accuracy	< ± 5.0 ppm / < ± 15.0 ppm	Check Point (Base Unit) (P)
Power RAMP	Power RAMP is matching	Check Point (Base Unit) (T)

<sup>\*:</sup> Refer to Check Point (Base Unit) (P.38)


### 11.8.2. Cordless Handset

Item	Value	Refer to **
TX Power	19 dBm ~ 25 dBm	Check Point (Cordless Handset) (I)
Modulation	$-370\pm30/+370\pm30 \text{ kHz/div } \& \text{ Mod width } \ge 690 \text{ kHz}$	dulated Check Point (Cordless Handset) (J)
Frequency Offset	-50 kHz ~ +50 kHz	Check Point (Cordless Handset) (K)
Frequency Drift	< ± 35 kHz / ms	Check Point (Cordless Handset) (L)
RX Sensitivity	< 1000 ppm	Check Point (Cordless Handset) (M)
Power RAMP	Power RAMP is matching	Check Point (Cordless Handset) (N)

<sup>\*\*:</sup> Refer to Check Point (Cordless Handset) (P.42)

# 11.9. How to Check the Cordless Handset Speaker or Receiver

- 1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
- 2. Put the probes at the speaker terminals as shown below.

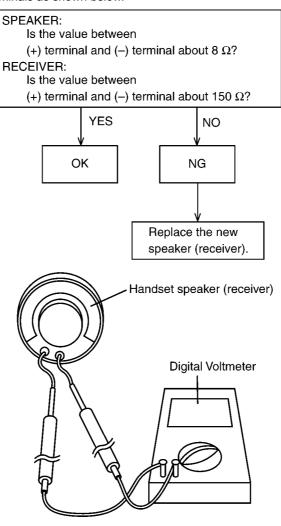

# 11.10. Frequency Table (MHz)

Channel No	BASE UNIT		CORDLESS HANDSET	
	Transmit Frequency	Receive Frequency	Transmit Frequency	Receive Frequency
1	1897.344	1897.344	1897.344	1897.344
2	1895.616	1895.616	1895.616	1895.616
3	1893.888	1893.888	1893.888	1893.888
4	1892.160	1892.160	1892.160	1892.160
5	1890.432	1890.432	1890.432	1890.432
6	1888.704	1888.704	1888.704	1888.704
7	1886.976	1886.976	1886.976	1886.976
8	1885.248	1885.248	1885.248	1885.248
9	1883.520	1883.520	1883.520	1883.520
10	1881.792	1881.792	1881.792	1881.792

Note:

Channel No. 10: In the Test Mode on Base Unit and Cordless Handset.

### 12 Miscellaneous

### 12.1. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

### 12.1.1. Preparation

- PbF (: Pb free) Solder
- · Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

**Note:** We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

• Flux

Recommended Flux: Specific Gravity  $\rightarrow$  0.82. Type  $\rightarrow$  RMA (lower residue, non-cleaning type)


Note: See About Lead Free Solder (Pbf: Pb free) (P.4).

### 12.1.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

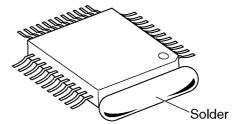

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

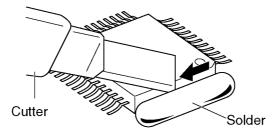

3. While the solder melts, remove it together with the IC pins.

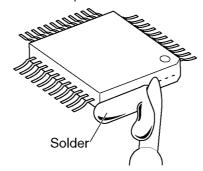

When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.


### 12.1.3. How to Install the IC

1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.




\*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.

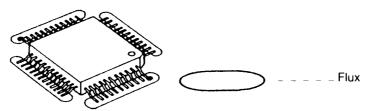


3. Solder the pins, sliding the soldering iron in the direction of the arrow.

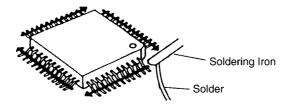

### 12.1.4. How to Remove a Solder Bridge

- 1. Lightly resolder the bridged portion.
- 2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.

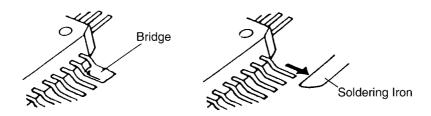

# 12.2. How to Replace the Shield Case

### 12.2.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of 700°F ± 20°F (370°C ± 10°C)

#### Note:


We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

### 12.2.2. How to Remove the Shield Case


#### Note:

If you don't have special tools (ex. Hot air disordering tool), conduct the following operations.


1. Cut the case along perforation.

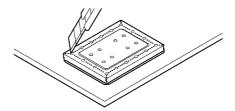


2. Remove the cut part.

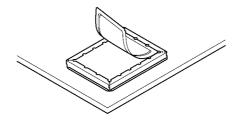

3. Cut the four corners along perforation.

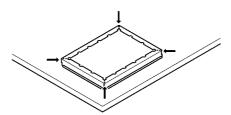


4. Remove the reminds by melting solder.

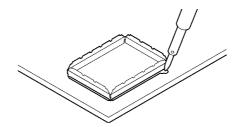


### 12.2.3. How to Install the Shield Case

#### Note:

- If you don't have special tools (ex. Hot air disordering tool), conduct the following operations.
- Shield case's No. : PNMC1013Z
  - 1. Put the shield case.

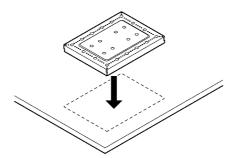

2. Solder the surroundings.

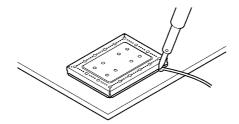

### 12.3. How to Replace the LLP (Leadless Leadframe Package) IC

### 12.3.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of 700 °F  $\pm$  20 °F (370 °C  $\pm$  10 °C)

#### Note

We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

Hot Air Desoldering Tool


Temperature: 608 °F ± 68 °F (320 °C ± 20 °C)

### 12.3.2. Caution

- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

### 12.3.3. How to Remove the IC


1. Heat the IC with a hot air desoldering tool through the P.C.Board.

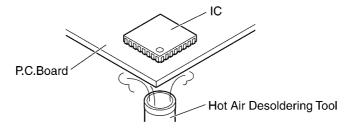


2. Pick up the IC with tweezers, etc. when the solder is melted completely.

#### Note:

• Be careful not to touch the peripheral parts with tweezers, etc. They are unstable.

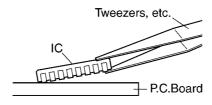


When it is hard to melt the solder completely, heat it with a hot air desoldering tool through the IC besides through the P.C.Board.

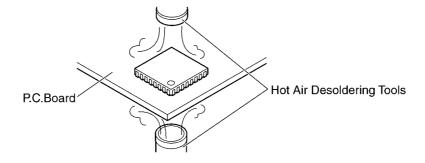


3. After removing the IC, clean the P.C.Board of residual solder.

### 12.3.4. How to Install the IC


1. Place the solder a little on the land where the radiation GND pad on IC bottom is to be attached.

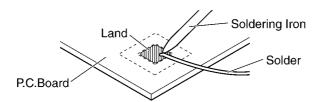

- 2. Place the solder a little on the land where IC pins are to be attached, then place the IC.
  - When placing the IC, the positioning should be done very carefully.

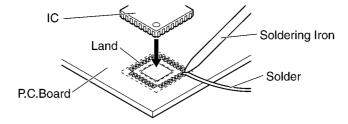


- 3. Heat the IC with a hot air desoldering tool through the P.C.Board until the solder on IC bottom is melted. **Note:** 
  - Be sure to place it precisely, controlling the air volume of the hot air desoldering tool.

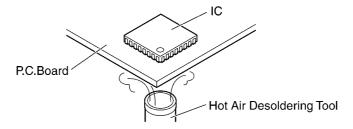

4. After soldering, confirm there are no short and open circuits with visual inspection.


### 12.3.5. How to Remove a Solder Bridge

When a Solder Bridge is found after soldering the bottom of the IC, remove it with a soldering iron.

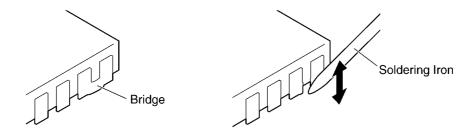


# 12.4. Terminal Guide of the ICs, Transistors and Diodes

### 12.4.1. Base Unit

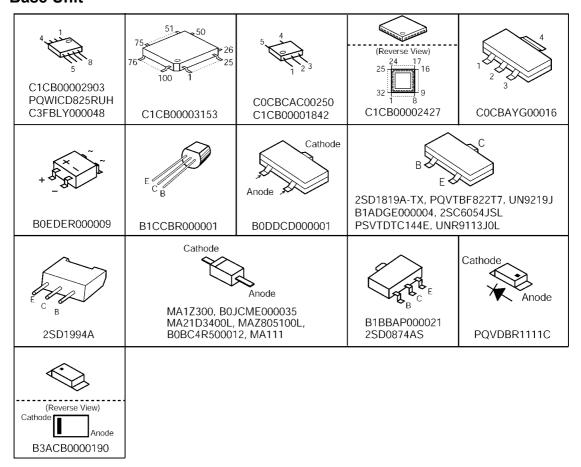

### 12.4.2. Cordless Handset

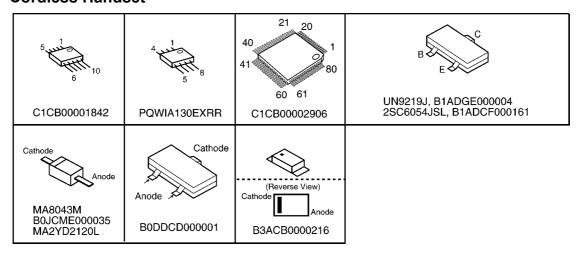

KX-TG6461BXT/KX-TGA641BXT

Note:

# 13 Schematic Diagram

### 13.1. For Schematic Diagram

### 13.1.1. Base Unit (Schematic Diagram (Base Unit\_Main))

#### Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by  $\triangle$  mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

### 13.1.2. Cordless Handset (Schematic Diagram (Cordless Handset))

#### Notes:

- 1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
- 2. The schematic diagrams may be modified at any time with the development of new technology.

### 13.1.3. Charger Unit (Schematic Diagram (Charger Unit))

#### Notes:


1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by  $\triangle$  mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. This schematic diagram may be modified at any time with the development of new technology.

# 13.2. Schematic Diagram (Base Unit\_Main)

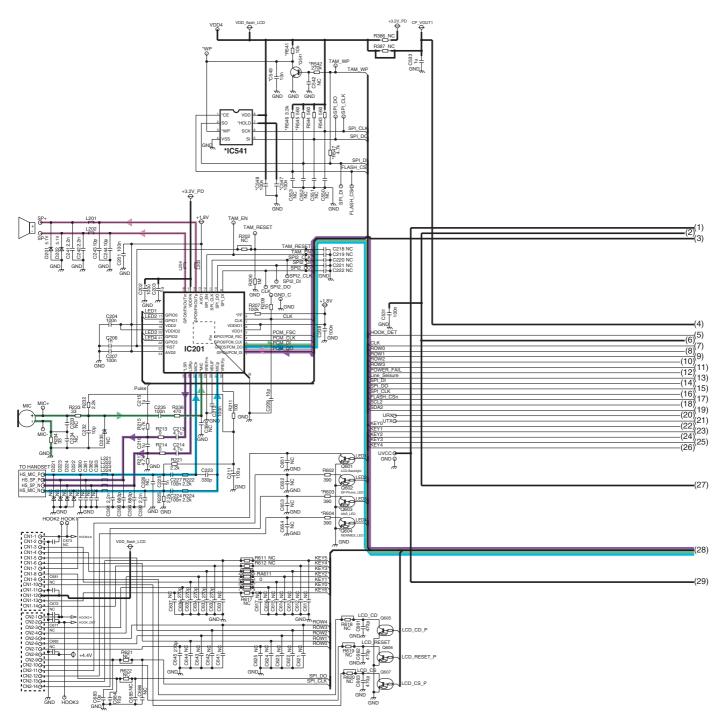


NC: No Components


## KX-TG6461BXT/KX-TGA641BXT CDL T x (to T el line) = CDL Rx (from T el line) SP\_Phone T x (to T el line) SP\_Phone Rx (from T el line) (Corded) Handset T x (to T el line) (Corded) Handset Rx (from T el line) = Bell ====Bell (Power fail) - CLIP £0.≹ £08 (1) (3)(2) GND GND (4) (5) (6) (7) (8) (9) (10) (13) (14) (15) (16) (17) (18) (17) (18) (21) (20) (23) (23) (24) (25) (24) \*IC501 GND C311 330u R312 R311 (27) IC304 80 38 (28)+2.5V \*IC302 SCL2 IC303 <u>†</u>₽₽ <u></u>205 GND TO


NC: No Components KX-TG6461BX SCHEMATIC DIAGRAM (Base Unit\_Main)

## 13.3. Schematic Diagram (Base Unit\_RF Part)

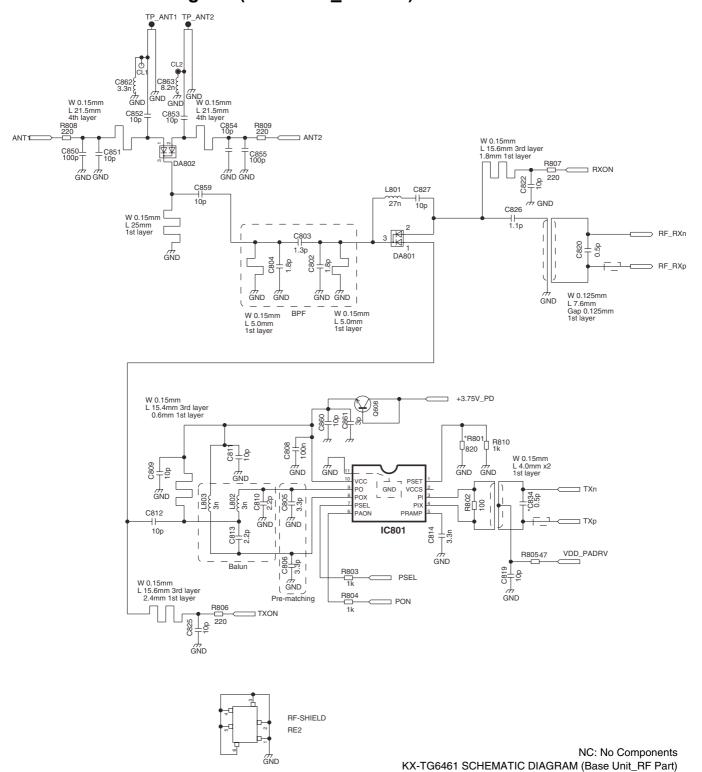


## 13.4. Schematic Diagram (Base Unit\_Operation)

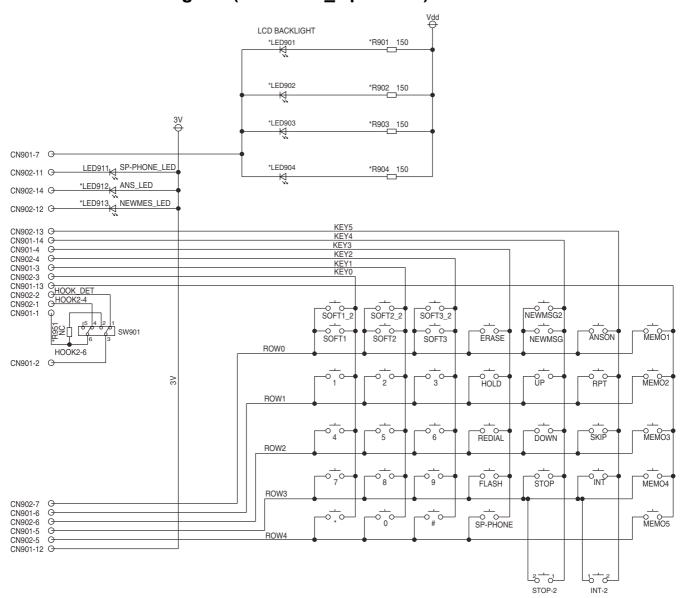

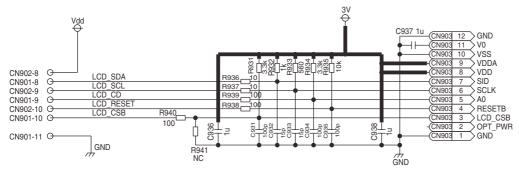


NC: No Components KX-TG6461 SCHEMATIC DIAGRAM (Base Unit\_Operation)

## 13.5. Schematic Diagram (Cordless Handset)

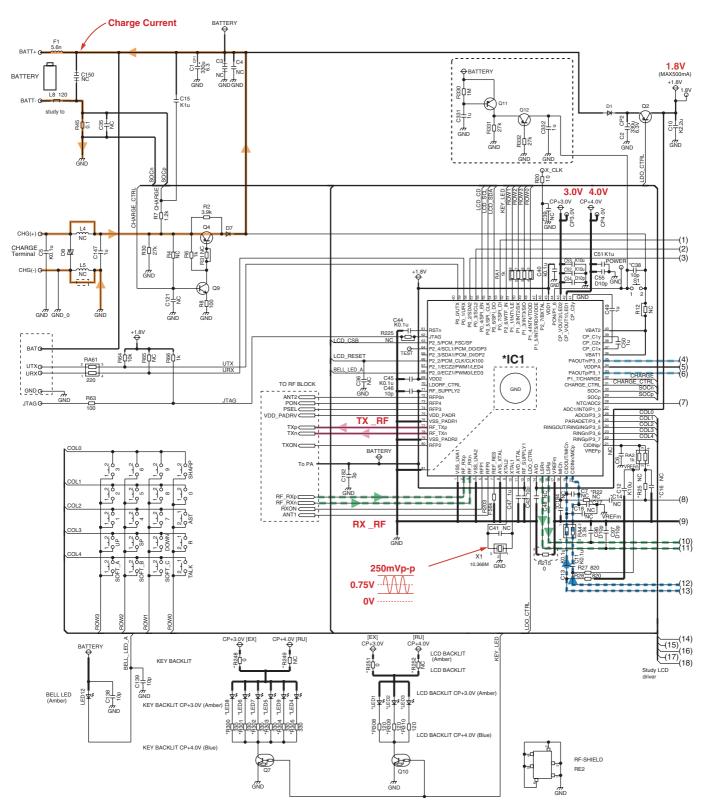


NC: No Components

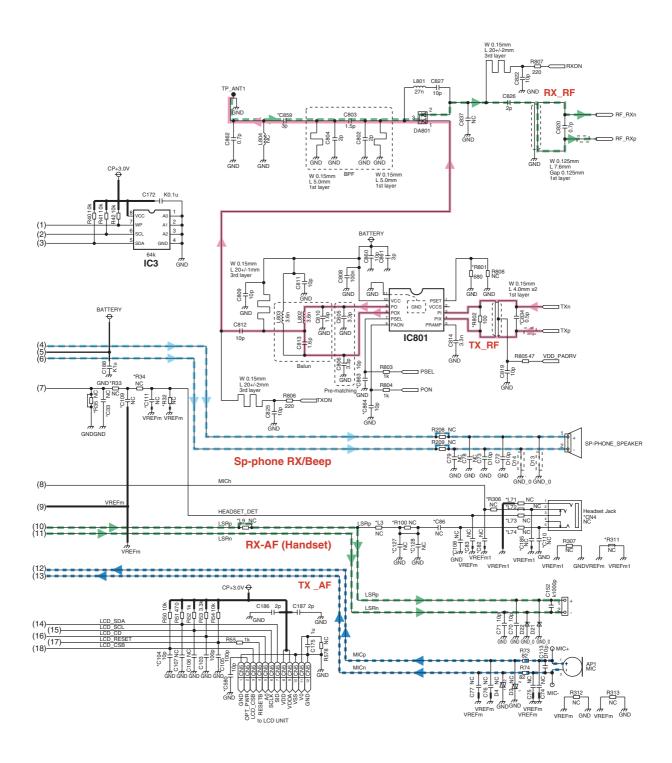

NC: No Components KX-TGA641 SCHEMATIC DIAGRAM (Handset\_Main)

## 13.6. Schematic Diagram (Charger Unit)

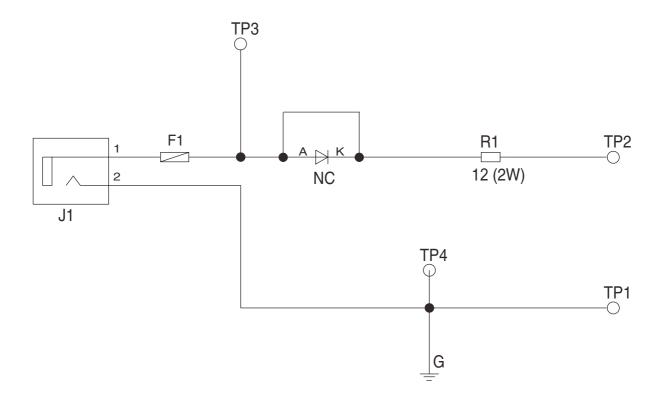


SCHEMATIC DIAGRAM (Charger Unit)

## **14 Printed Circuit Board**


## 14.1. Circuit Board (Base Unit\_Main)

## 14.1.1. Component View

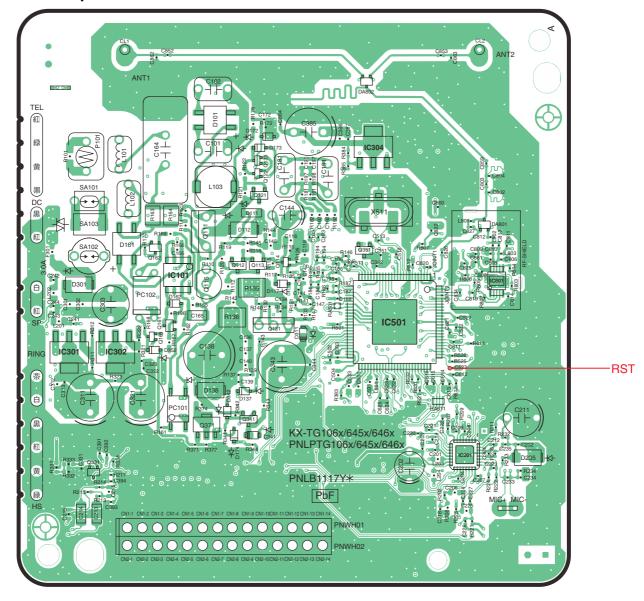

KX-TG6461 CIRCUIT BOARD (Base Unit\_Main (Component View))


### 14.1.2. Bottom View

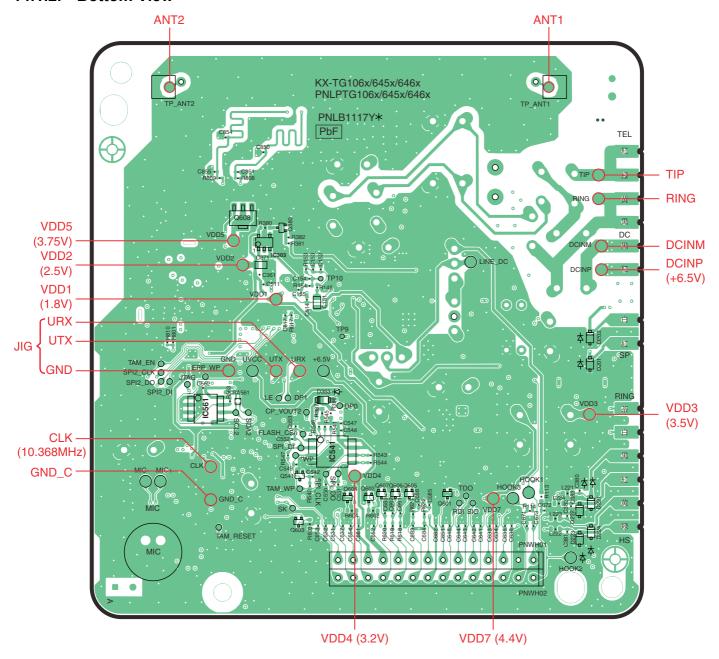

KX-TG6461 CIRCUIT BOARD (Base Unit\_Main (Bottom View))


## 14.2. Circuit Board (Base Unit\_Operation)

## 14.2.1. Component View

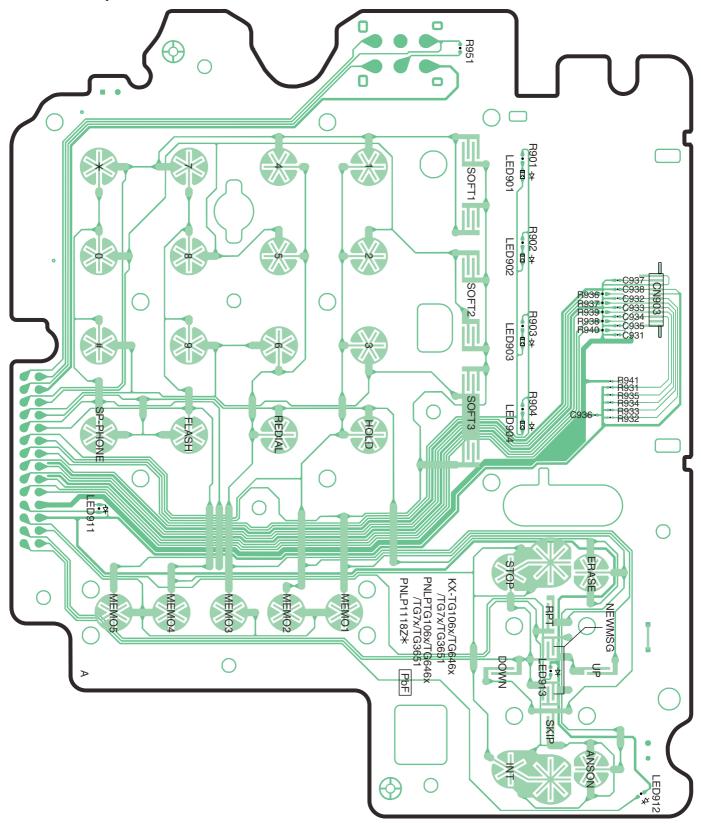

KX-TG6461 CIRCUIT BOARD (Base Unit\_Operation (Component View))


## 14.2.2. Bottom View

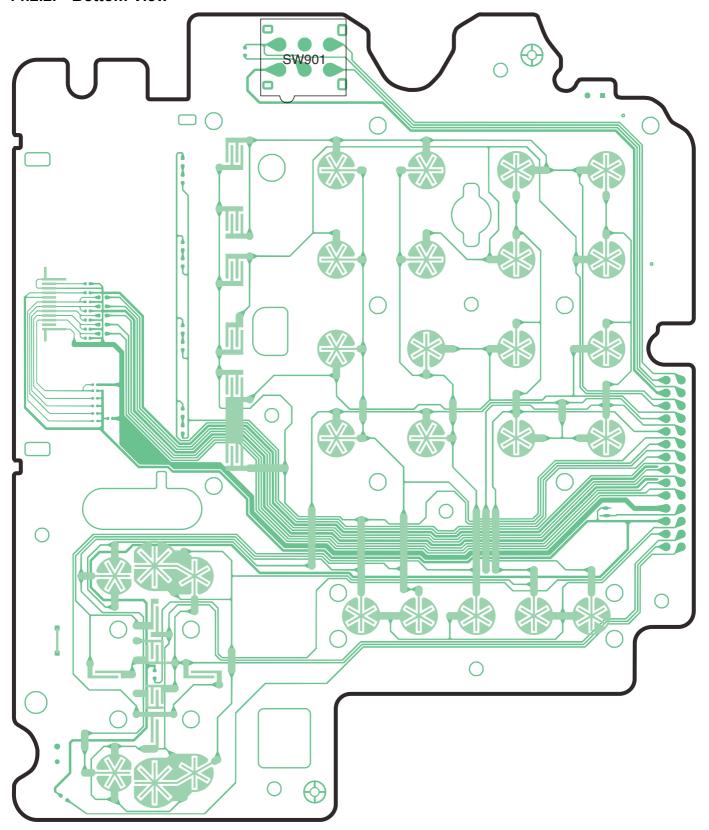

KX-TG6461 CIRCUIT BOARD (Base Unit\_Operation (Bottom View))


## 14.3. Circuit Board (Cordless Handset)

## 14.3.1. Component View

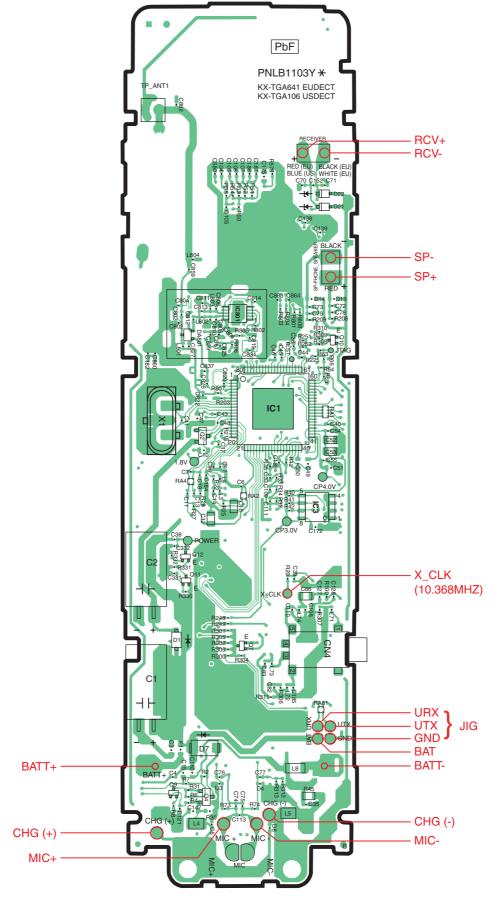

KX-TGA641 CIRCUIT BOARD (Handset\_Main (Component View))


### 14.3.2. Bottom View

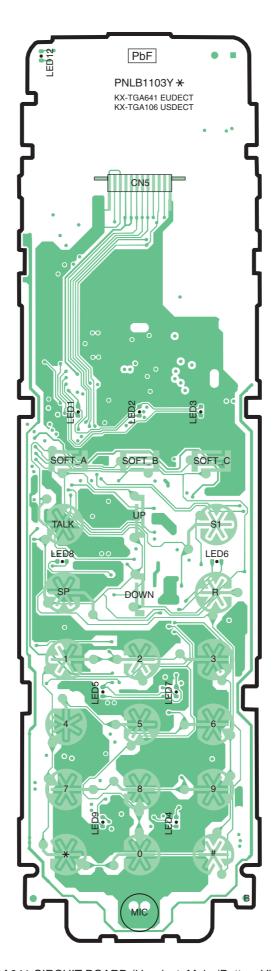

KX-TGA641 CIRCUIT BOARD (Handset\_Main (Bottom View))


## 14.4. Circuit Board (Charger Unit)

## 14.4.1. Component View

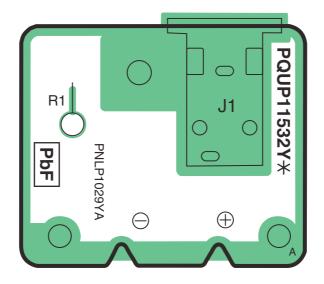

CIRCUIT BOARD (Charger unit (Component View))


### 14.4.2. Bottom View

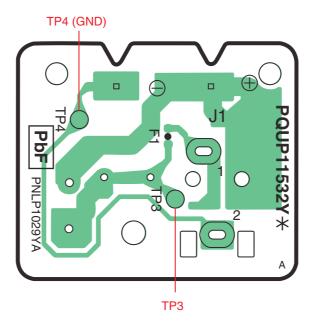

CIRCUIT BOARD (Charger unit (Bottom View))


# 15 Exploded View and Replacement Parts List

## 15.1. Cabinet and Electrical Parts (Base Unit)

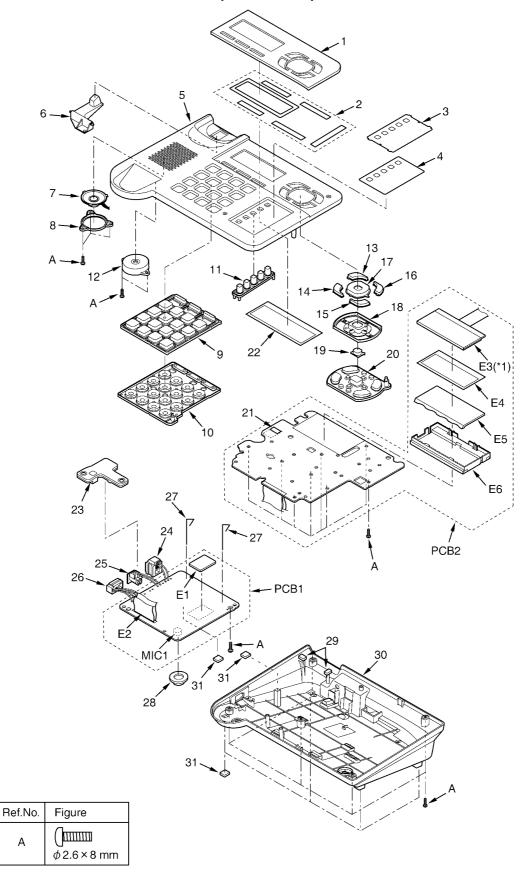

Note: (\*1) This cable is fixed by soldering. Refer to **How to Replace the Base unit LCD** (P.50).


## 15.2. Cabinet and Electrical Parts (Cordless Handset)

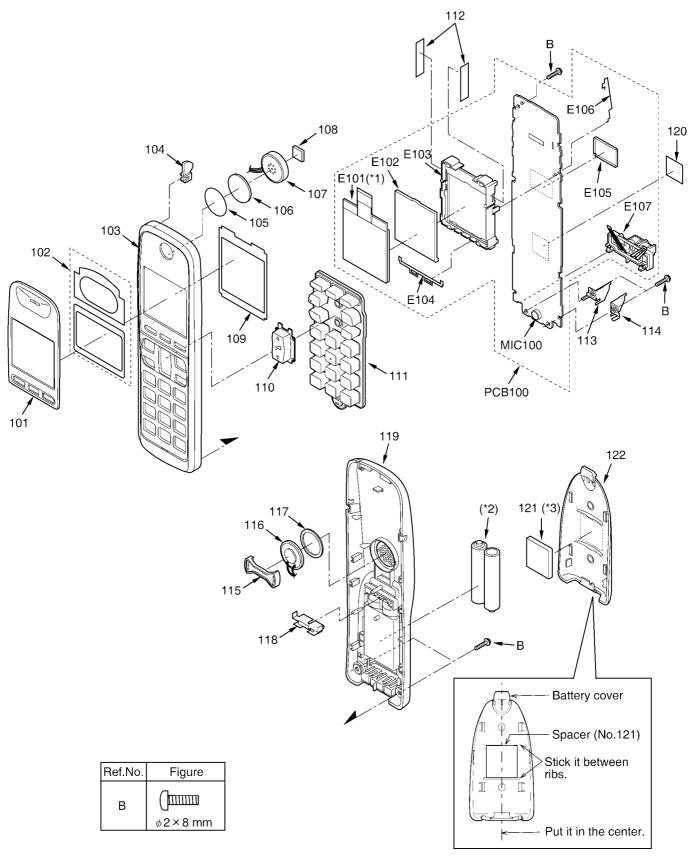

### Note:

- (\*1) This cable is fixed by soldering. Refer to How to Replace the Cordless Handset LCD (P.51).
- (\*2) The rechargeable Ni-MH battery HHR-4MPT is available through sales route of Panasonic.
- (\*3) Attach the spacer (No. 121) to the exact location described above.

# 15.3. Cabinet and Electrical Parts (Charger Unit)

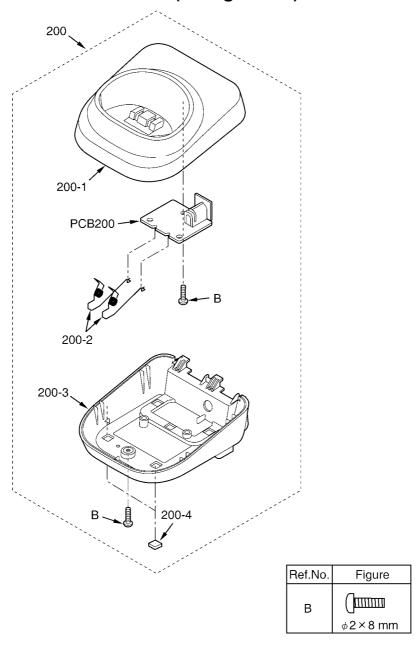



# 15.4. Accessories







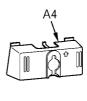

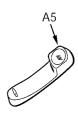

### 15.5. Replacement Parts List

1. RTL (Retention Time Limited)

#### Note

The "RTL" marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time.

This period of time depends on the type of item, and the local laws governing parts and product retention. At the end of this period, the item will no longer be available.

#### 2. Important safety notice

Components identified by the  $\triangle$  mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

- 3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.
- ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.
- 5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms  $(\Omega)$  k=1000 $\Omega$ , M=1000k $\Omega$  All capacitors are in MICRO FARADS ( $\mu$ F) p= $\mu\mu$ F

\*Type & Wattage of Resistor

#### Type

	ERX:Metal Film ERG:Metal Oxide	PQ4R:Chip ERS:Fusible Resistor
ERJ:Chip	ER0:Metal Film	ERF:Cement Resistor

### Wattage

10,16:1/8W   14,25:1/4W   12:1/2W   1:1W   2:2W   3:3V	10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W
--------------------------------------------------------	------------	------------	---------	------	------	------

\*Type & Voltage Of Capacitor Type

ECFD:Semi-Conductor	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic
	ECQE,ECQV,ECQG:Polyester
ECUV,PQCUV,ECUE:Chip	ECEA,ECST,EEE:Electlytic
ECQMS:Mica	ECQP:Polypropylene

#### Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others			
1H:50V		0F:3.15V	0J	:6.3V	1V	:35V
2A:100V		1A:10V	1A	:10V	50,1	H:50V
2E:250V		1V:35V	1C	:16V	1J	:16V
2H:500V		0J:6.3V	1E,2	:5:25V	2A	:100V

### 15.5.1. Base Unit

### 15.5.1.1. Cabinet and Electrical Parts

Safety		Part No.	Part Name & Description	Remarks
	No.			
	1	PNGP1055Y1	PANEL, LCD	PMMA-HB
	2	PNYE1015Z	TAPE, DOUBLE SIDED	
	3	PNGV1007Z	TRANSPARENT PLATE , TEL	PC-V2
			CARD	
	4	PNGD1014Z	CARD, TEL	
	5	PNKM1088Z1	CABINET BODY	ABS-HB
	6	PNBH1009Z1	BUTTON, HOOK	ABS-HB
	7	L0AA04A00028	SPEAKER	
	8	PQHR11082Z	GUIDE, SPEAKER	POM-HB
	9	PNBX1053Y1	BUTTON, DIAL	ABS-HB
	10	PNJK1053Z	KEYBOARD SWITCH, DIAL	
	11	PNJK1055Z	KEYBOARD SWITCH, 5KEY	

Safety	Ref.	Part No.	Part Name & Description	Remarks
	12	L0DDYD000010	BUZZER	
	13	PNBC1005W1	BUTTON, ERASE	ABS-HB
	14	PNBC1006W1	BUTTON, STOP	ABS-HB
	15	PNBC1007V1	BUTTON, LOCATOR	ABS-HB
	16	PNBC1004W1	BUTTON, ANSWER ON	ABS-HB
	17	PNBC1002Z2	BUTTON, NAVIGATOR KEY	ABS-HB
	18	PNHR1001Z	GUIDE, BUTTON	PS-HB
	19	PNBC1001Z2	BUTTON, MESSAGE	AS-HB
	20	PNJK1054Z	KEYBOARD SWITCH, TAM	
	21	PNHX1200Z	PLASTIC PARTS, SHEET	
	22	PNYE1014Z	SPACER, CUSHION LCD	
	23	PNHR1130Z	GUIDE, JACK	ABS-HB
	24	PQJJ1T039T	JACK, MODULAR	
	25	K2ECYZ000001	JACK, DC	
	26	PQJJ1T030S	JACK, HANDSET	
	27	PNLA1004Z	ANTENNA	
	28	PQMG10025W	RUBBER PARTS, MIC	
	29	PNHS1131Z	CUSHION, CABINET	
	30	PNKF1063Y1	CABINET COVER	PS-HB
	31	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	

### 15.5.1.2. Main P.C.Board Parts

#### Note

- (\*1) When replacing IC501, IC541, IC561 or X511, make the adjustment using PNZZTG6461BX. Refer to **How to download the data** (P.59) of **Things to Do after Replacing IC or X'tal.**
- (\*2) When removing E1, use special tools (ex. Hot air disordering tool).
- (\*3) Backside of this IC has a ground plate.
- (\*4) Supplied IC is flat package type.

Safety		Part No.	Part Name & Description	Remarks
	No.			
	PCB1	PNWP16461BXH	MAIN P.C.BOARD ASS'Y (RTL)	
			(ICs)	
	IC101	C1CB00002903	IC	S
	IC201	C1CB00002427	IC (*3)	
	IC301	C0CBAYG00016	IC	S
	IC303	C0CBCAC00250	IC	
	IC304	C0CBAYG00016	IC	S
	IC501	C1CB00003153	IC (BBIC(FLASH)) (*1)(*3)(*4)	
	IC541	C3FBLY000048	IC (*1)	
	IC561	PQWICD825RUH	IC (EEPROM) (*1)	
	IC801	C1CB00001842	IC (*3)	
			(TRANSISTORS)	
	Q111	B1CCBR000001	TRANSISTOR (SI)	
	Q112	PQVTBF822T7	TRANSISTOR (SI)	
	Q113	PQVTBF822T7	TRANSISTOR (SI)	
	Q114	PSVTDTC144E	TRANSISTOR (SI)	S
	Q121	B1ADGE000004	TRANSISTOR (SI)	
	Q122	PSVTDTC144E	TRANSISTOR (SI)	s
	Q131	2SD1994A	TRANSISTOR (SI)	
	Q162	2SD1819A-TX	TRANSISTOR (SI)	S
	Q168	UNR9113J0L	TRANSISTOR (SI)	
	Q331	2SD1819A-TX	TRANSISTOR (SI)	S
	Q341	B1ADGE000004	TRANSISTOR (SI)	
	Q351	B1ADGE000004	TRANSISTOR (SI)	
	Q371	B1BBAP000021	TRANSISTOR (SI)	
	Q541	2SC6054JSL	TRANSISTOR (SI)	
	Q601	UN9219J	TRANSISTOR (SI)	S
	Q602	UN9219J	TRANSISTOR (SI)	S
	Q603	UN9219J	TRANSISTOR (SI)	S
	Q604	UN9219J	TRANSISTOR (SI)	s
	Q605	PSVTDTC144E	TRANSISTOR (SI)	s
	Q606	PSVTDTC144E	TRANSISTOR(SI)	s
	Q607	PSVTDTC144E	TRANSISTOR (SI)	s

Safety	Ref.	Part No.	Part Name & Description	Remarks
	Q608	2SD0874AS	TRANSISTOR(SI)	
			(DIODES)	
	D101	B0EDER000009	DIODE(SI)	
	D301		DIODE(SI)	
	D112	MA1Z300	DIODE(SI)	S
	D117	MA111	DIODE(SI)	S
	D137	MA111 B0BC4R500012	DIODE(SI) DIODE(SI)	S
	D136		DIODE(SI)	
	D173	MA111	DIODE(SI)	s
	D174	MA111	DIODE(SI)	S
	D201	MAZ805100L	DIODE(SI)	
	D202	MAZ805100L	DIODE(SI)	
	D311	MA21D3400L	DIODE(SI)	
	D352	MA111	DIODE(SI)	S
	D353	MA21D3400L	DIODE(SI)	
	DA801	B0DDCD000001	DIODE(SI)	
	DA802	B0DDCD00001	DIODE(SI)	
	7101	DOI ONE 3 3 0 12	(COILS)	_
	L101	PQLQXF330K	COIL	S
	L102	PQLQXF330K G1A102BA0002	COIL	S
	L201	PQLQR1WT	COIL	s
	L202	PQLQR1WT	COIL	S
	L203	PQLQR1RS241	COIL	s
	L204	PQLQR1RS241	COIL	s
	L221	PQLQR2KA20T	COIL	s
	L222	PQLQR2KA20T	COIL	s
	L223	PQLQR2KA20T	COIL	s
	L224	PQLQR2KA20T	COIL	S
	L801	G1C27NJ00010	COIL	
	L802	G1C3N0ZA0063	COIL	
	L803	G1C3N0ZA0063	COIL	
	C862	G1C3N3Z00007	COIL	
	C863	PQLQR4C8N2J	COIL (RESISTOR ARRAYS)	S
	RA501	D1H410220001	RESISTOR ARRAY	
	RA561	D1H410320002	RESISTOR ARRAY	
			(VARISTOR)	
	SA101	J0LF00000026	VARISTOR (SURGE	
			ABSORBER)	
			(IC FILTER)	
	R511	J0JCC0000275	IC FILTER	
	R511	J0JCC0000275	(PHOTO ELECTRIC	
	R511 PC102	J0JCC0000275		
			(PHOTO ELECTRIC TRANSDUCER)	
			(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC	
	PC102 R101	B3PAA0000531 ERJ6GEY0R00	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0	
	PC102 R101 R110	B3PAA0000531 ERJ6GEY0R00 ERJ2GE0R00	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0	
	PC102 R101 R110 R112	B3PAA0000531  ERJ6GEY0R00  ERJ2GE0R00  PQ4R10XJ392	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k	S
	PC102 R101 R110 R112 R113	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k	S
	PC102 R101 R110 R112 R113 R114	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k	s
	PC102 R101 R110 R112 R113 R114 R115	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k	S
	PC102 R101 R110 R112 R113 R114 R115 R116	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ474	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ474 ERJ2GEJ222	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k	S
	PC102 R101 R110 R112 R113 R114 R115 R116	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ474 ERJ2GEJ222 ERJ3GEYJ104	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ474 ERJ2GEJ222 ERJ3GEYJ104 ERJ3GEYJ103	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ474 ERJ2GEJ222 ERJ3GEYJ104	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ474 ERJ2GEJ222 ERJ3GEYJ104 ERJ3GEYJ103 ERJ3GEYJ104 ERJ3GEYJ103	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 10k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ3GEYJ564 ERJ3GEYJ564 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 10k 100k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ3GEYJ474 ERJ2GEJ222 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ2GEOR00 ERJ2GEOR00 ERJ2GEJ223	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 10k 100k 0 22k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135	ERJ6GEYOROO ERJ2GEOROO PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ564 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ2GEJ222 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ821 ERJ2GEJ104 ERJ2GEJ104 ERJ12YJ120	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 10k 10c 0 22k 820 100k 12	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137	ERJ6GEYOROO ERJ2GEOROO PQ4R10XJ392 ERJ3GEYJ473 ERJ3GEYJ564 ERJ3GEYJ564 ERJ3GEYJ104 ERJ3GEYJ104 ERJ3GEYJ104 ERJ2GEOROO ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ203	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 0 22k 820 100k 12	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137 R140	B3PAA0000531  ERJ6GEY0R00  ERJ2GE0R00  PQ4R10XJ392  ERJ3GEYJ474  ERJ2GEJ103  ERJ3GEYJ564  ERJ3GEYJ104  ERJ3GEYJ104  ERJ2GE0R00  ERJ2GEJ223  ERJ3GEYJ104  ERJ2GEJ223  ERJ3GEYJ104  ERJ2GEJ223  ERJ3GEYJ104  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ104	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 100k 100k 12 100k 12	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137 R140 R141	B3PAA0000531  ERJ6GEY0R00  ERJ2GE0R00  PQ4R10XJ392  ERJ3GEYJ473  ERJ3GEYJ564  ERJ3GEYJ564  ERJ3GEYJ104  ERJ3GEYJ104  ERJ2GE0R00  ERJ2GEJ223  ERJ3GEYJ104  ERJ2GEJ223  ERJ3GEYJ104  ERJ2GEJ223  ERJ3GEYJ821  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ104  ERJ2GEJ153  ERJ3GEYJ822	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 100k 100k 10c 122k 820 100k 12 100k 15k 8.2k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137 R140 R141 R142	B3PAA0000531  ERJ6GEY0R00  ERJ2GE0R00  PQ4R10XJ392  ERJ3GEYJ473  ERJ3GEYJ564  ERJ3GEYJ564  ERJ3GEYJ104  ERJ3GEYJ104  ERJ3GEYJ104  ERJ2GE0R00  ERJ2GEJ223  ERJ3GEYJ104  ERJ2GEJ223  ERJ3GEYJ104  ERJ2GEJ104	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 100k 100k 10c 122k 820 100k 12 100k 15k 8.2k 0	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137 R140 R141 R142 R143	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ473 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ564 ERJ3GEYJ104 ERJ3GEYJ104 ERJ2GEJ222 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ561 ERJ2GEJ104 ERJ2GEJ153 ERJ3GEYJ822 ERJ3GEYJ822	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 100k 12 100k 12 100k 15k 8.2k 0 270k	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137 R140 R141 R142 R143 R144	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ103 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ564 ERJ3GEYJ104 ERJ2GEJ222 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ104 ERJ2GEJ153 ERJ3GEYJ822 ERJ3GEYJ822	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 100k 10b 12 100k 12 100k 15k 8.2k 0 270k 560	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137 R140 R141 R142 R143 R144 R145	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ103 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ474 ERJ2GEJ222 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ104 ERJ3GEYJ822	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 100k 12 100k 12 100k 15k 8.2k 0 270k 560 82	S
	PC102 R101 R110 R112 R113 R114 R115 R116 R117 R121 R122 R123 R125 R131 R133 R134 R135 R137 R140 R141 R142 R143 R144	ERJ6GEY0R00 ERJ2GE0R00 PQ4R10XJ392 ERJ3GEYJ103 ERJ2GEJ103 ERJ3GEYJ564 ERJ3GEYJ564 ERJ3GEYJ104 ERJ2GEJ222 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ223 ERJ3GEYJ104 ERJ2GEJ104 ERJ2GEJ153 ERJ3GEYJ822 ERJ3GEYJ822	(PHOTO ELECTRIC TRANSDUCER) PHOTO ELECTRIC TRANSDUCER (RESISTORS) 0 0 3.9k 47k 10k 560k 470k 2.2k 100k 100k 100k 100k 10b 12 100k 12 100k 15k 8.2k 0 270k 560	S

Safety		Part No.	Part Name & Description	Remarks
	No. R154	ERJ2GEJ101	100	
	R163	ERJ14YJ392	3.9k	
	R165	ERJ1413392 ERJ3GEYJ183	18k	
	R166		-	
		ERJ3GEYJ183 ERJ3GEYJ332	18k	
	R167		3.3k	
	R168	ERJ2GEJ122	1.2k	
	R169	ERJ3GEYJ104	100k	
	R172	ERJ3GEYJ823	82k	
	R178	ERJ3GEYJ565	5.6M	
	R181	ERJ3GEYJ184	180k	
	R182	ERJ3GEYJ105	1M	
	R184	ERJ2GEJ823	82k	
	R185	ERJ2GEJ102	1k	
	R186	ERJ2GEJ102	1k	
	R187	ERJ2GEJ104	100k	
	R191	ERJ3GEYJ184	180k	
	R192	ERJ3GEYJ105	1M	
			82k	
	R194	ERJ2GEJ823	<del></del>	
	R195	ERJ2GEJ102	1k	
	R196	ERJ3GEY0R00	0	
	R197	ERJ3GEYJ475	4.7M	
	R198	ERJ3GEYJ475	4.7M	
	R206	ERJ3GEYJ105	1M	
	R207	ERJ2GEJ104	100k	
	R209	ERJ2GEJ100	10	
	R211	ERJ2GEJ101	100	
	R213	ERJ2GE0R00	0	
	R214	ERJ2GE0R00	0	
	R215	ERJ2GEJ472X	4.7k	
	R217	ERJ2GEJ472X	4.7k	
	R221	ERJ2GEJ222	2.2k	
	R222	ERJ2GEJ222	2.2k	
	R224	ERJ2GEJ222	2.2k	
	R225	ERJ2GEJ222	2.2k	
	R232	ERJ2GEJ222	2.2k	
	R233	ERJ2GEJ330	33	
	R234	ERJ2GEJ330	33	
	R236	ERJ2GEJ471	470	
	R311	ERJ2RKF1000	100	
	R312	ERJ2RKF1800	180	
	R323	ERJ2GE0R00	0	
		ERJ3GEYJ822	8.2k	
	R331 R332	ERJ3GEYJ152	1.5k	
	R333	ERJ3GEYJ392	3.9k	
	R334	ERJ2GEJ472X	4.7k	
	R341	ERJ2GEJ682	6.8k	
	R342	ERJ2GEJ103	10k	
	R343	ERJ3GEYJ180	18	
	R371	ERJ2GEJ222	2.2k	
	R372	ERJ2GEJ103	10k	
	R374	PQ4R10XJ151	150	S
	R384	ERJ2RKF1000	100	
	R385	ERJ2RKF2000	200	
	R501	ERJ2RRF2000 ERJ2GEJ333	33k	
	R512	D0GA563ZA006	56k	
	R525	ERJ2GEJ101	100	
	R526	ERJ2GEJ102	1k	
	R527	ERJ2GEJ103	10k	
	R531	ERJ2GEJ102	1k	
	R532	ERJ2GEJ102	1k	
	R541	ERJ2GEJ103	10k	
	R542	ERJ2GEJ274	270k	
	R543	ERJ2GEJ561	560	
	R544	ERJ2GEJ561	560	
	R545	ERJ2GEJ561	560	
		-		
	R546	ERJ2GEJ332	3.3k	
	R563	ERJ2GEJ104	100k	
	R602	ERJ3GEYJ391	390	
	R603	ERJ3GEYJ391	390	
	R604	ERJ3GEYJ391	390	
	R801	ERJ2GEJ821	820	
	R802	ERJ2GEJ101	100	
	R803	ERJ2GEJ102	1k	
ı	<u> </u>	1	ı	

### KX-TG6461BXT/KX-TGA641BXT

0-6-1	D- 6	Down No.	Don't Name & Bassariation	D
Safety	Ref. No.	Part No.	Part Name & Description	Kemarks
	R804	ERJ2GEJ102	1k	
	R805	ERJ2GEJ470	47	
	R806	ERJ2GEJ221	220	
	R807	ERJ2GEJ221	220	
	R808	ERJ2GEJ221	220	
	R809	ERJ2GEJ221	220	
	R810	ERJ2GEJ102	1k	
	L501	ERJ2GE0R00	0	
			(CAPACITORS)	
	C101	F1B2H681A070	680p	
	C102	F1B2H681A070	680p	
	C138	ECEA0JKA331	330	
	C139	ECUE1C103KBQ	0.01	
	C141	ECUE1E472KBQ	0.0047	
	C142	ECUV1H104KBV	0.1	
	C144	F2A1H2200013	22	
	C146	ECUE1H100DCQ	10p	
	C147	ECUE1H102KBQ	0.001	
	C151	PQCUV1C105KB	1	
	C152	ECJ0EB0J224K	0.22	S
	C154	ECJ0EB0J224K	0.22	S
	C155	ECUE1H100DCQ	10p	
	C164	F0C2E1050005	1	
	C165	F1K1H475A199	4.7	S
	C166	ECUV1C563KBV	0.056	
	C172	ECUE1A104KBQ	0.1	
	C181	F1B2H681A070	680p	
	C182	ECUV1H102KBV	0.001	
	C184	ECUE1H821KBQ	820p	
	C185	ECUE1H100DCQ	10p	
	C186	ECUE1H100DCQ	10p	
	C187	ECUE1C333KBQ	0.033	
	C188	ECUE1A823KBQ	0.082	
	C191	F1B2H681A070	680p	
	C192	ECUV1H102KBV	0.001	
	C194	ECUE1H821KBQ	820p	
	C195	ECUE1H100DCQ	10p	
	C196	ECUV1C103KBV	0.01	
	C197	ECUV1C103KBV	0.01	
	C201	ECUE1A104KBQ	0.1	
	C202	ECEA0JKA101	100	
	C203	ECUE0J105KBQ	1	
	C204	ECUE1A104KBQ	0.1	
	C206	ECUV1H102KBV	0.001	
	C207	ECUE1A104KBQ	0.1	
	C208	ECUE1A104KBQ	0.1	
-	C209	ECUE1H100DCQ	10p	
	C211	ECEA1CK101	100	S
	C212	ECUE1A104KBQ	0.1	
	C213	F1K1C4750023	4.7	1
	C214	F1K1C4750023	4.7	
	C215	ECUVIA105KBV	1	
-	C216 C223	ECUV1A105KBV	1 330n	
-	C223	ECUE1H331KBQ ECUE1A104KBQ	330p 0.1	
	C224	ECUETATU4KBQ ECUV1H102KBV	0.001	
				1
	C227 C232	ECUE1A104KBQ ECUE1H100DCQ	0.1	
	C232		10p 0.1	1
	C235	ECUE1A104KBQ ECUE1H222KBQ	0.0022	
-	C241	ECUE1H222KBQ ECUE1H222KBQ	0.0022	
	C242	ECUE1H100DCQ	10p	
	C243	ECUE1H100DCQ	10p	
	C301	PQCUV1C105KB	1	
	C301	PQCUV1C105KB	1	
-	C302	ECEA1CK101	100	s
	C311	ECEATORIOI ECEAOJKA331	330	-
	C331	ECUV1H104KBV	0.1	
	C343	ECEA0JKA331	330	
	C343	ECUE1H100DCQ	10p	
	C351	ECUV1A105KBV	1	
	C352	ECUE1A104KBQ	0.1	
-	C361	ECUV1A105KBV	1	
L	2201		<del>-</del>	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C371	F1J1A106A024	10	
	C385	ECEA0JKA331	330	
	C391	ECUE1H222KBQ	0.0022	
	C392	ECUE1H222KBQ	0.0022	
	C393	ECUE1H681KBQ	680p	
	C394	ECUE1H681KBQ	680p	
	C501	ECUV1A105KBV	1	
	C502 C504	ECUE1A104KBQ ECUV1A105KBV	0.1	
	C511	ECUE1H100DCQ	10p	
	C512	ECUE0J105KBO	1	
	C514	ECUE1H100DCQ	10p	
	C521	ECUE1H100DCQ	10p	
	C522	ECUE1A104KBQ	0.1	
	C523	ECUE1A104KBQ	0.1	
	C531	ECUV1H104KBV	0.1	
	C533	ECUV1A105KBV	1	
	C547	ECUE1A104KBQ	0.1	
	C548	ECUE1A104KBQ	0.1	
	C549	ECUE1C103KBQ	0.01	
	C562	ECUE1A104KBQ	0.1	
	C632	ECUE1H271KBQ	270p	
	C633	ECUE1H271KBQ	270p	
	C634	ECUE1H271KBQ	270p	
	C635	ECUE1H271KBQ ECUE1H271KBQ	270p 270p	
	C645	ECUE1H271KBQ	270p	
	C661	F1G1H471A541	470p	s
	C662	F1G1H471A541	470p	s
	C663	F1G1H471A541	470p	S
	C683	ECUE1H100DCQ	10p	
	C684	ECUE1H100DCQ	10p	
	C802	F1G1H1R8A480	1.8p	
	C803	F1G1H1R3A480	1.3p	
	C804	F1G1H1R8A480	1.8p	
	C805	F1G1H3R3A480	3.3p	
	C806	F1G1H3R3A480	3.3p	
	C808	ECUE1A104KBQ	0.1	S
	C809	F1G1H100A420 F1G1H2R2A480	10p 2.2p	
	C811	F1G1H100A420	10p	
	C812	F1G1H100A420	10p	
	C813	F1G1H2R2A480	2.2p	
	C814	ECUE1H332KBQ	0.0033	S
	C819	F1G1H100A420	10p	
	C820	F1G1HR50A480	0.5p	
	C822	F1G1H100A420	10p	
	C825	F1G1H100A420	10p	
	C826	F1G1H1R1A480	1.1p	
	C827	F1G1H100A420	10p	
	C834	F1G1HR50A480	0.5p	
	C850	F1G1H101A557	100p	
	C851	F1G1H100A420	10p	
	C852	F1G1H100A420	10p	
-	C853	F1G1H100A420 F1G1H100A420	10p 10p	
-	C855	F1G1H100A420	100p	
	C859	F1G1H100A420	10p	
	C860	F1G1H100A420	10p	
	C861	F1G1H3R0A480	3p	
	C864	F1G1H100A420	10p	
			(OTHERS)	
	E1	PNMC1013Z	CASE, MAGNETIC SHIELD (*2)	
	E2	PNWHL14SH04B	LEAD WIRE, PARALLEL WIRE	
	F301	K5H302Y00003	FUSE	
	X511	ној103500027	CRYSTAL OSCILLATOR (*1)	
	MIC1	L0CBAY000016	MICROPHONE	

## 15.5.1.3. Operational P.C.Board parts

#### Note:

(\*1) When replacing the cordless handset LCD, See **How to** Replace the Base unit LCD(P.50).

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
	PCB2	PNWP2G1061MH		
			ASS'Y (RTL)	
			(LEDS)	
	LED901	B3ACB0000190		
	LED902	B3ACB0000190		
	LED903	B3ACB0000190		
	LED904	B3ACB0000190		
	LED911	PQVDBR1111C	LED	S
	LED912	PQVDBR1111C	LED	S
	LED913	PQVDBR1111C	LED	S
			(CAPACITORS)	
	C931	ECUE1H101JCQ	<u>-</u>	
	C932	ECUE1H150JCQ	•	
	C933	ECUE1H150JCQ	15p	
	C934	ECUE1H101JCQ	100p	
	C935	ECUE1H101JCQ	100p	
	C936	ECUE0J105KBQ	1	
	C937	ECUE0J105KBQ	1	
	C938	ECUE0J105KBQ	1	
			(RESISTORS)	
	R901	ERJ3GEYJ151	150	
	R902	ERJ3GEYJ151	150	
	R903	ERJ3GEYJ151	150	
	R904	ERJ3GEYJ151	150	
	R931	ERJ2GEJ332	3.3k	
	R932	ERJ2GEJ102	1k	
	R933	ERJ2GEJ561	560	
	R934	ERJ2GEJ332	3.3k	
	R935	ERJ2GEJ103	10k	
	R936	ERJ3GEYJ100	10	
	R937	ERJ3GEYJ100	10	
	R938	ERJ3GEYJ101	100	
	R939	ERJ3GEYJ101	100	
	R940	ERJ3GEYJ101	100	
			(OTHERS)	
	E3	L5DYAYY00004	LIQUID CRYSTAL DISPLAY (*1)	
	E4	PNHX1156Z	COVER, LCD	
	E5	PNHR1129Z	TRANSPARENT PLATE, LCD	PMMA-HB
	E6	PNHR1128Z	GUIDE, LCD	ABS-HB
	SW901	K0L1LB000021	SPECIAL SWITCH	

### 15.5.2. Cordless Handset

### 15.5.2.1. Cabinet and Electrical Parts

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
	101	PNGP1048Z1	PANEL, LCD	PMMA-HB
	102	PNYE1008Z	TAPE, DOUBLESIDED	
	103	PNKM1080Y4	CABINET BODY	PS-HB
	104	PNHR1105Z	OPTIC CONDUCTIVE PARTS, LED LENS	PS-HB
	105	PNHS1072Z	SPACER, RECEIVER NET	
	106	PQHS10467Z	COVER, SPEAKER NET	
	107	L0AD02A00028	RECEIVER	
	108	PQHG10729Z	RUBBER PARTS, RECEIVER	
	109	PNYE1009Z	SPACER, CUSHION LCD	
	110	PNBC1265Z1	BUTTON, VOLUME KEY	ABS-HB
	111	PNJK1050T	KEYBOARD SWITCH	
	112	PNHX1165Z	COVER, LCD SHEET	
	113	PNJT1027Z	CHARGE TERMINAL (L)	
	114	PNJT1026Z	CHARGE TERMINAL (R)	
	115	PQHR11315Z	GUIDE, SPEAKER HOLDER	ABS-HB
	116	L0AA02A00095	SPEAKER	
	117	PQHS10784Y	SPACER, SPEAKER NET	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	118	PNJC1014Z	BATTERY TERMINAL	
	119	PNKF1057Z1	CABINET COVER	ABS-HB
	120	PNHX1219Z	PET SHEET	
	121	PNHS1079Z	SPACER, BATTERY	
	122	PNKK1027Z1	LID, BATTERY	ABS-HB

### 15.5.2.2. Main P.C.Board Parts

#### Note:

- (\*1) Reconfirm the model No. written on the cordless handset's name plate when replacing PCB100. Because the model No. of the optional cordless handset may differ from the included cordless handset.
- (\*2) When replacing IC1, IC3 or X1, make the adjustment using PNZZTG6461BX. Refer to **Cordless Handset** (P.60) of **Things to Do after Replacing IC or X'tal.**
- (\*3) When removing E105, use special tools (ex. Hot air disordering tool).
- (\*4) When replacing the cordless handset LCD, See **How to** Replace the Cordless Handset LCD(P.51).
- (\*5) Backside of this IC has a ground plate.
- (\*6) Supplied IC is flat package type.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB100	PNWPGA641BXR	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(ICs)	
	IC1	C1CB00002906	IC (BBIC (FLASH)) (*2) (*5) (*6)	
	IC3	PQWIA130EXRR	IC (EEPROM) (*2)	
	IC801	C1CB00001842	IC (*5)	
			(TRANSISTORS)	
	Q2	B1ADGE000004	TRANSISTOR (SI)	
	Q4	B1ADGE000004	TRANSISTOR (SI)	
	Q7	UN9219J	TRANSISTOR (SI)	S
	Q9	2SC6054JSL	TRANSISTOR (SI)	
	Q10	UN9219J	TRANSISTOR (SI)	S
	Q11	B1ADCF000161	TRANSISTOR (SI)	
	Q12	B1ADCF000161	TRANSISTOR (SI)	
			(DIODES)	
	D1	MA2YD2120L	DIODE(SI)	
	D7	B0JCME000035	DIODE(SI)	
	D21	MA8043M	DIODE(SI)	S
	D22	MA8043M	DIODE(SI)	S
	DA801	B0DDCD000001	DIODE(SI)	
			(LEDS)	
	LED1	B3ACB0000216	LED	
	LED2	B3ACB0000216	LED	
	LED3	B3ACB0000216	LED	
	LED4	B3ACB0000216	LED	
	LED5	B3ACB0000216	LED	
	LED6	B3ACB0000216	LED	
	LED7	B3ACB0000216	LED	
	LED8	B3ACB0000216	LED	
	LED9	B3ACB0000216	LED	
	LED12	B3ACB0000216	LED	
			(COILS)	
	L801	G1C27NJ00010	COIL	
	L802	G1C3N6ZA0063	COIL	
	L803	G1C3N6ZA0063	COIL	
	F1	PQLQR2M5N6K	COIL	S
			(RESISTOR ARRAYS)	
	RA1	D1H810240004	RESISTOR ARRAY	S
	RA2	D1H410220001	RESISTOR ARRAY	
	RA4	D1H433220001	RESISTOR ARRAY	
	RA61	D1H422120001	RESISTOR ARRAY	
			(VARISTORS)	
	D8	D4ED1270A014	VARISTOR	
	D13	D4ZZ00000024	VARISTOR	
	D14	D4ZZ00000024	VARISTOR	

### KX-TG6461BXT/KX-TGA641BXT

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.		(IC FILTER)	
	L8	J0JHC0000045	IC FILTER	
			(RESISTORS)	
	R2	ERJ2GEJ392	3.9k	
	R6	ERJ2GEJ102	1k	
	R7	ERJ2GEJ122	1.2k	
	R8	ERJ2GEJ101	100	
	R20	ERJ2GEJ100	10	
	R27	ERJ2GEJ821	820	
	R28	ERJ2GEJ821 ERJ3GEYJ273	820 27k	
	R30 R40	ERJ2GEJ103	10k	
	R41	ERJ2GEJ103	10k	
	R42	ERJ2GEJ103	10k	
	R45	ERJ6RSJR10V	0.1	
	R50	ERJ2GEJ103	10k	
	R51	ERJ2GEJ471	470	
	R52	ERJ2GEJ102	1k	
	R53	ERJ2GEJ332	3.3k	
	R54	ERJ2GEJ103	10k	
	R55	ERJ2GEJ102	1k	
	R63	ERJ2GEJ101	100	
	R64	ERJ2GEJ103	10k	
-	R66	ERJ2GEJ102	1k	
	R73 R74	ERJ2GEJ820 ERJ2GEJ820	82 82	
-	R74 R203	DOGA563ZA006	56k	
	R215	ERJ2GE0R00	0	
	R248	ERJ2GE0R00	0	
	R251	ERJ2GE0R00	0	
	R300	ERJ2GEJ331	330	
	R301	ERJ2GEJ331	330	
	R302	ERJ2GEJ331	330	
	R303	ERJ2GEJ331	330	
	R304	ERJ2GEJ331	330	
	R305	ERJ2GEJ331	330	
	R308	ERJ2GEJ121	120	
	R309	ERJ2GEJ121	120	
	R310 R330	ERJ2GEJ121 ERJ2GEJ105X	120 1M	
	R331	ERJ2GEJ273X	27k	
	R332	ERJ2GEJ273X	27k	
	R801	ERJ2GEJ681	680	
	R802	ERJ2GEJ101	100	
	R803	ERJ2GEJ102	1k	
	R804	ERJ2GEJ102	1k	
	R805	ERJ2GEJ470	47	
	R806	ERJ2GEJ221	220	
	R807	ERJ2GEJ221	220	
	<u></u>	#03.0 F001 55.5F	(CAPACITORS)	
	C1	F2A0J3310067	330	
-	C2 C5	F2A0J3310067 ECUE1A104KBQ	0.1	
-	C10	ECUETATU4KBQ ECUV1A225KB	2.2	
-	C10	ECUE1A104KBQ	0.1	
	C12	PQCUV0J106KB	10	
	C13	ECUE1A104KBQ	0.1	
	C15	ECUV1A105KBV	1	
	C38	ECUE1H100DCQ	10p	
	C40	ECUE1A104KBQ	0.1	
	C43	ECUE1H100DCQ	10p	
	C44	ECUE1A104KBQ	0.1	
	C45	ECUE1A104KBQ	0.1	
	C46	ECUE1H100DCQ	10p	
<u> </u>	C47	ECUVIA105KBV	1	
<u> </u>	C49	ECUV1A105KBV	1	
	C50 C51	ECUV1A105KBV ECUV1A105KBV	1	
<b> </b>	C52	PQCUV0J106KB	10	
-	C53	PQCUV0J106KB	10	
<b> </b>	C54	ECUE1H100DCQ	10p	
	C55	ECUE1H100DCQ	10p	
	C70	ECUE1H100DCQ	10p	
L			1	

Safety	Ref.	Part No.	Part Name & Description	Remarks
	C71	ECUE1H100DCQ	10p	
	C72	ECUE1H100DCQ	10p	
	C73	ECUE1H100DCQ	10p	
	C96	ECUE1H100DCQ	10p	
	C97	ECUE1H100DCQ	10p	
	C103	ECUE1H101JCQ	100p	
	C104	ECUE1H100DCQ	10p	
	C105	ECUE1H101JCQ	100p	
	C113	ECUE1H100DCQ	10p	
	C138	ECUE1H100DCQ	10p	
	C139	ECUE1H100DCQ	10p	
	C147	ECUV1C105KBV	1	
	C152	ECUE1H102KBQ	0.001	
	C172	ECUV1C104KBV	0.1	
	C175	ECUV1C105KBV	1	
	C182	F1G1H3R0A480	3p	
	C186	F1G1H2R0A480	2p	
	C187	F1G1H2R0A480	2p	
	C188	ECUE0J105KBQ	1	
	C331	ECUE0J105KBQ	1	
	C332	ECUE0J105KBQ	1	
	C580	ECUE1H100DCQ	10p	
	C802	F1G1H2R0A480	2p	
	C803	F1G1H1R5A480	1.5p	
	C804	F1G1H2R0A480	2p	
	C805	F1G1H3R3A480	3.3p	
	C806	F1G1H3R3A480	3.3p	
	C808	ECUE1A104KBQ	0.1	
	C809	ECUE1H100DCQ	10p	
	C810	F1G1H1R6A480	1.6p	
	C811	ECUE1H100DCQ	10p	
	C812	ECUE1H100DCQ	10p	
	C813	F1G1H1R6A480	1.6p	
	C814	ECUE1H332KBQ	0.0033	
	C819	ECUE1H100DCQ	10p	
	C820	F1G1HR70A480	0.7p	
	C822	ECUE1H100DCQ	10p	
	C825	ECUE1H100DCQ	10p	
	C826	F1G1H2R0A480	2p	
	C827	ECUE1H100DCQ	10p	
	C834	F1G1HR50A480	0.5p	
	C859	F1G1H3R0A480	3p	
	C860	ECUE1H100DCQ	10p	
	C861	F1G1H3R0A480	3p	
	C862	F1G1HR70A480	0.7p	
	C863	ECUE1H100DCQ	10p	
	C864	ECUE1H100DCQ	10p	
			(OTHERS)	
	MIC100	L0CBAY000032	MICROPHONE	
	E101	L5DYBYY00001	LIQUID CRYSTAL DISPLAY (*4)	
	E102	PNHR1114Z	TRANSPARENT PLATE, LCD	PMMA-HB
	E103	PNHR1113Z	GUIDE, LCD	ABS-HB
	E104	PNHX1136Z	COVER, LCD	
	E105	PNMC1013Z	CASE, MAGNETIC SHIELD (*3)	
	E106	PNLA1020Z	ANTENNA	
	E107	PNVE1002Z	BATTERY TERMINAL	ABS-HB
	X1	ној103500034	CRYSTAL OSCILLATOR (*2)	
		•		•

## 15.5.3. Charger Unit

### 15.5.3.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1008ZT	CHARGER UNIT ASS'Y without NAME PLATE (RTL)	
	200-1	PNKM1077Z1	CABINET BODY	PS-HB
	200-2	PNJT1010Z	CHARGE TERMINAL	
	200-3	PNKF1012Z1	CABINET COVER	PS-HB
	200-4	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	

### 15.5.3.2. Main P.C.Board Parts

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
	PCB200	PNWPTGA641CH	MAIN P.C.BOARD ASS'Y (RTL)	
			(JACK)	
	J1	K2ECYB000001	JACK	s
			(RESISTOR)	
	R1	ERG2SJ120	12	
			(FUSE)	
	F1	K5H302Y00003	FUSE	

### 15.5.4. Accessories

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
⚠	A1	PQLV219BXZ	AC ADAPTOR	
	A2	PQJA212V	CORD, CURL	
	A3	PQJA10075Z	CORD, TELEPHONE	
	A4	PQKL10035Z1	STAND, WALLMOUNT	ABS-HB
	A5	PNLXP1005Z	HANDSET	ABS-HB

### 15.5.5. Screws

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	В	XTB2+8GFJ	TAPPING SCREW	

### 15.5.6. Fixtures and Tools

#### Note:

- (\*1) See Equipment Required (P.52), and The Setting Method of JIG (Cordless Handset) (P.56).
- (\*2) When replacing the base unit and cordless handset LCD, See  $\bf Assembly\ Instructions\ (P.50)\ .$

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
		PQZZ1CD300E	JIG CABLE (*1)	
		PNZZTG6461BX	BATCH FILE CD-ROM (*1)	
		PQZZ430PIR	TIP OF SOLDERING IRON (*2)	
		PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)	

T.I KXTG6461BXT KXTGA641BXT