Service Manual

Telephone Equipment

Caller ID Compatible





KX-TG7100BXS/BXT (BASE UNIT)

KX-TG7100BXS KX-TG7100BXT KX-TGA710CXS KX-TGA710CXT

Digital Cordless Phone
Silver Version
Titanium Black Version
(for Middle Near East and Africa)

MARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by \triangle in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these cirtical parts should be replaced with manufactuer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

- IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary sllightly from the actual product.

Note for TABLE OF CONTENTS:

Because TABLE OF CONTENTS 5, 6 and 7 are the extract from the Operating Instructions of this model, it is subject to change without notice. You can download and refer to the original Operating Instructions on TSN Server for further information.

TABLE OF CONTENTS

		PAGE
1	Safety Precaution	4
	1.1. For Service Technicians	4
2	Warning	
	2.1. Battery Caution	
	2.2. About Lead Free Solder (Pbf: Pb free)	4
	Specifications	
4	Techmnical Descriptions	7
	4.1. Block Diagram (Base Unit)	7
	4.2. Circuit Operation (Base Unit)	8
	4.3. Block Diagram (Handset)	11
	4.4. Circuit Operation (Handset)	
	4.5. Signal Route	
5	Location of Controls and Components	14
	5.1. Controls	14
6	Installation Instructions	
	6.1. Connections	
	6.2. Battery	15
7	Operation Instructions	
	7.1. Base Unit Settings	16
	7.2. Handset Settings	17
	7.3. Registering a Handset to the Base Unit	
	7.4. For Service Hint	19
8	Service Mode	
	8.1. Engineering Mode	20
9	Troubleshooting Guide	24
	9.1. Troubleshooting Flowchart	24
	9.2. Troubleshooting by Symptom (Base Unit)	
	9.3. Troubleshooting by Symptom (Handset)	
	9.4. How to Replace the Flat Package IC	
10	Disassembly and Assembly Instructions	
	10.1. Disassembly Instructions	41
	10.2. How to Replace the Handset LCD	
11	Measurements and Adjustments	
	11.1. The Setting Method of JIG (Base Unit)	
	11.2. Adjustment Standard (Base Unit)	
	11.3. The Setting Method of JIG (Handset)	
	11.4. Adjustment Standard (Handset)	
	11.5. Things to Do after Replacing IC	
	11.6. RF Specification	
	11.7. How to Check the Handset Speaker of	
	Receiver	
	11.8. Frequency Table (MHz)	
12	Schematic Diagram	
	12.1. For Schematic Diagram	
	12.2. Schematic Diagram (Base Unit)	
	12.3. Schematic Diagram (Handset)	
13	Printed Circuit Board	
	13.1. Circuit Board (Base Unit_MAIN)	
	13.2. Circuit Board (Handset)	61
14	Appendix Information of Schematic Diagram	
	14.1. CPU Data (Base Unit)	
	14.2. CPU Data (Handset)	
	14.3. Terminal Guide of the ICs, Transistors and	50
	Diodes	67
15	Exploded View and Replacement Parts List	
	15.1. Cabinet and Electric Parts (Base Unit)	
	15.2. Cabinet and Electric Parts (Handset)	
	15.3. Accessories and Packing Materials	
		. 0

	PAGE
15.4. Replacement Part List	71

1 Safety Precaution

1.1. For Service Technicians

ICs and LSIs are vulnerable to static electricity.

When repairing, the following precautions will help prevent recurring malfunctions.

- 1. Cover the plastic parts boxes with aluminum foil and ground them.
- 2. Ground the soldering irons.
- 3. Use a conductive mat on the worktable.
- 4. Do not touch IC or LSI pins with bare fingers.

2 Warning

2.1. Battery Caution

- 1. Danger of explosion if battery is incorrectly replaced.
- 2. Replace only with the same or equivalent type recommended by the manufacturer.
- 3. Dispose of used batteries according to the manufacture's Instructions.

2.2. About Lead Free Solder (Pbf: Pb free)

Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Aq), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.


Caution

- PbF solder has a melting point that is 50 °F ~ 70 °F (30 °C ~ 40 °C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 °F ± 20 °F (370 °C ± 10 °C).
- Exercise care while using higher temperature soldering irons.:
- Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

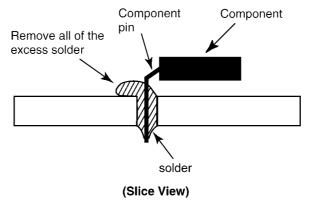


2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu) or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials. The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

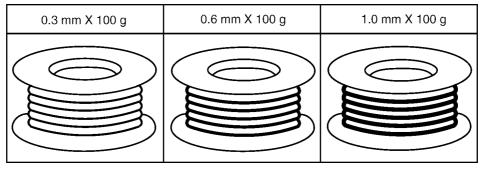

2.2.2. How to Recognize that Pb Free Solder is Used

(Example: Handset P.C.B.)

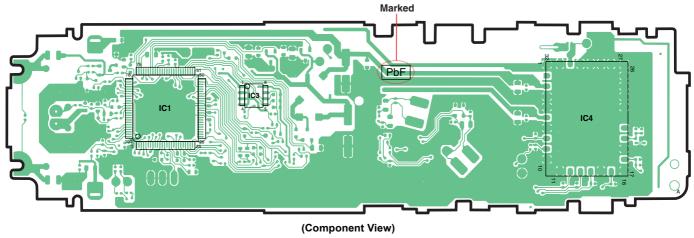

Note:

The location of the "PbF" mark is subject to change without notice.

3 Specifications

■ Standard:

DECT (Digital Enhanced Cordless Telecommunications), GAP (Generic Access Profile)

■ Number of channels:

120 Duplex Channels

■ Frequency range: 1.88 GHz to 1.9 GHz

■ Duplex procedure:

TDMA (Time Division Multiple Access)

■ Channel spacing:

1,728 kHz

■ Bit rate: 1,152 kbit/s

■ Modulation:

GFSK (Gaussian Frequency Shift Keying)

■ RF transmission power:

Approx. 250 mW

Note:

• Specifications are subject to change.

Note for Service:

- Operation range: Up to 300 m outdoors, Up to 50 m indoors
- Analog telephone connection: Telephone Line

■ Power source (AC Adaptor):

220–240 V, 50/60 Hz Base unit: PQLV207BXZ ■ Power consumption

Base unit:

Standby: Approx. 1.9 W Maximum: Approx. 6.8 W ■ Operating conditions:

5 °C-40 °C, 20 %-80 % relative air humidity (dry)


■ Dimensions:

Base unit: Approx. 60mm x 173mm x 105mm **Handset:** Approx. 155mm x 48mm x 34mm

■ Mass (weight):
Base unit: Approx. 220 g
Handset: Approx. 140 g

4 Techmnical Descriptions

4.1. Block Diagram (Base Unit)

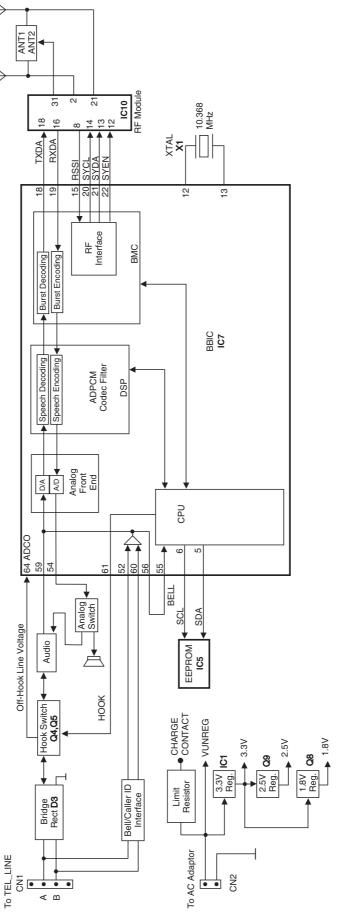

KX-TG7100 BLOCK DIAGRAM (BASE UNIT)

4.2. Circuit Operation (Base Unit)

4.2.1. **Outline**

Base Unit consists of the following ICs as shown in Block Diagram (Base Unit) (P.7).

- DECT BBIC (Base Band IC): IC7
 - Handling all the audio, signal and data processing needed in a DECT base unit
 - Controlling the DECT specific physical layer and radio section (Burst Module Controller section)
 - ADPCM code filter for speech encoding and speech decoding (DSP section)
 - Echo-cancellation and Echo-suppression (DSP section)
 - Any tones (tone, sidetone, ringing tone, etc.) generation (DSP section)
 - DTMF receiver (DSP section)
 - Clock Generation for RF Module
 - ADC, DAC, timer, and power control circuitry
 - All interfaces (ex: RF module, EEPROM, LED, Analog Front End, etc.)
- RF Module: IC10
 - PLL Oscillator
 - Detector
 - Compress/Expander
 - First Mixer
 - Amplifier for transmission and reception
- EEPROM: IC5
 - Temporary operating parameters (for RF, etc.)
- Additionally,
 - Power Supply Circuit (+3.3 V, +2.5 V, +1.8 V output)
 - Crystal Circuit (10.368 MHz)
 - Charge Circuit
 - Telephone Line Interface Circuit

4.2.2. Power Supply Circuit

The power is supplied to the DECT BBIC, RF Module, EEPROM and Charge Contact from AC Adaptor (+6.5 V) as shown in Fig.101. The power supply is as follows;

• DECT BBIC (IC7):

CN2 (+6.5 V) \rightarrow IC1 \rightarrow Q9 \rightarrow IC7 CN2 (+6.5 V) \rightarrow IC1 \rightarrow Q8 \rightarrow IC7

• RF Module (IC10):

CN2 (+6.5 V) \rightarrow IC1 \rightarrow Q9 \rightarrow IC10 (PLL)


CN2 (+6.5 V) \rightarrow IC1 \rightarrow Q10 \rightarrow IC10 (Power AMP)

• EEPROM (IC5):

CN2 (+6.5 V) \rightarrow IC1 \rightarrow Q9 \rightarrow IC5

· Charge Contact (TP16):

CN2 (+6.5 V) \rightarrow R55, R56 \rightarrow TP16

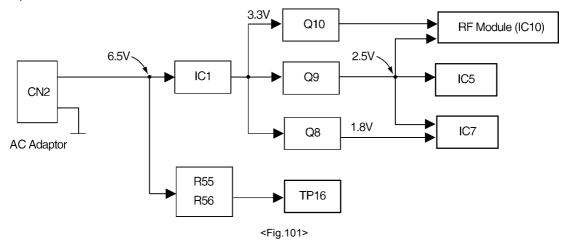

4.2.3. Telephone Line Interface

<Function>

- · Bell signal detection
- · Clip signal detection
- · ON/OFF hook circuit

Bell & Clip (: Calling Line Identification Presentation: Caller ID) signal detection:

In the standby mode, Q3 is open to cut the DC loop current and decrease the ring load.

When ring voltage appears at the L1T (A) and L1R (B) leads (when the telephone rings), the AC ring voltage is transferred as follows:

- A \rightarrow C4 \rightarrow R6 \rightarrow R33 \rightarrow IC7 Pin 60 (CID INp)
- B \rightarrow C3 \rightarrow R4 \rightarrow R35 \rightarrow IC7 Pin 52 (CID INn)

ON/OFF hook circuit:

In the standby mode, Q3 is open, and connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an **on-hook condition**.

When IC7 detects a ring signal or press the TALK Key onto the handset, Q4 turns on and then Q3 turns on, thus providing an **off-hook condition** (DC current flows through the circuit) and the following signal flow makes the loop current.

• A \rightarrow D3 \rightarrow Q3 \rightarrow Q5 \rightarrow R21 \rightarrow R22 \rightarrow D3 \rightarrow B [OFF HOOK]

KX-TG7100BXS/KX-TG7100BXT/KX-TGA710CXS/KX-TGA710CXT

4.2.4. Transmitter/Receiver

· Audio Circuits and DTMF tone signal circuits.

Base Unit and Handset mainly consist of RF Module and DECT BBIC.

Base Unit and Handset transmit/receive voice signal and data signal through the antenna on carrier frequency.

Signal Path:

*Refer to Signal Route (P.13).

4.2.4.1. Transmitter Block

The voice signal input from the TEL LINE interface goes to RF Module (IC10) through DECT BBIC (IC7) as shown in **Block Diagram (Base Unit)** (P.7)

The voice signal passes through the analog part of IC7 where it is amplified and converted to a digital audio stream signal. The burst switch controller processes this stream performing encryption and scrambling, adding the various other fields to produce the GAP (**G**eneric **A**ccess **P**rofile) standard DECT frame, assigning to a time slot and channel etc.

In IC10, the carrier frequency is changing, and frequency modulated RF signal is generated and amplified, and radiated from antenna. Handset detects the voice signal or data signal in the circuit same as the following explanation of Receiver Block.

4.2.4.2. Receiver Block


The signal of 1900 MHz band (1881.792 MHz ~ 1897.344 MHz) which is input from antenna is input to IC10 as shown in **Block Diagram (Base Unit)** (P.7).

In IC10, the signal of 1900 MHz band is downconverted to 864 kHz signal and demodulated, and goes to IC7 as GAP (**G**eneric **A**ccess **P**rofile) standard DECT frames. It passes through the decoding section burst switch controller where it separates out the frame information and performs de-encryption and de-scrambling as required. It then goes to the DSP section where it is turned back into analog audio. This is amplified by the analog front end, and goes to the TEL LINE Interface.

4.2.4.3. Pulse Dialing Section

During pulse dialing the hookswitch (Q3,Q4) is used to generate the pulses using the HOOK control signal, which is set high during pulses. To force the line impedance low during the "pause" intervals between dial pulses, the PULSE_DIAL signal turns on Q2

4.3. Block Diagram (Handset)

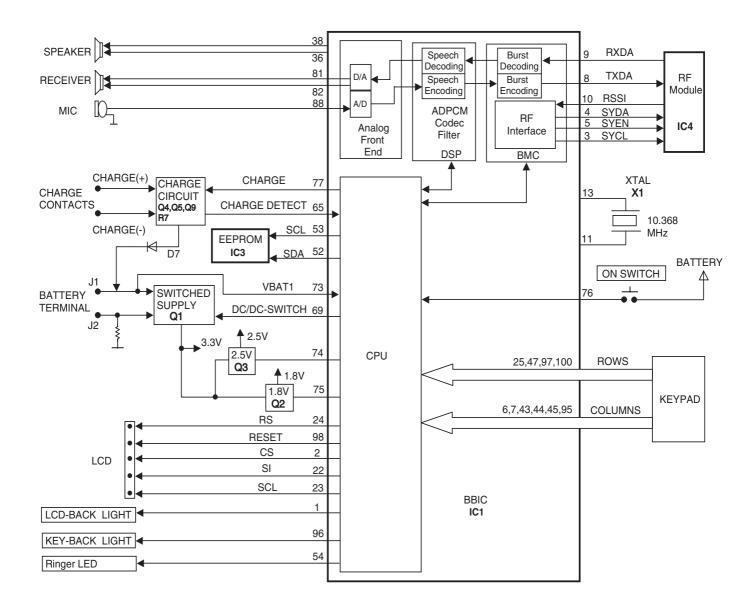

KX-TGA710 BLOCK DIAGRAM (HANDSET)

4.4. Circuit Operation (Handset)

4.4.1. **Outline**

Handset consists of the following ICs as shown in Block Diagram (Handset) (P.11).

- DECT BBIC (Base Band IC): IC1
 - All data signals (forming/analyzing ACK or CMD signal)
 - All interfaces (ex: Key, Detector Circuit, Charge, DC/DC Converter, EEPROM, LCD)
- RF Module: IC4
 - PLL Oscillator
 - Detector
 - Compress/Expander
 - Amplifier for transmission and reception
- EEPROM: IC3
 - Temporary operating parameters (for RF, etc.)

4.4.2. Power Supply Circuit/Reset Circuit

Circuit Operation:

When power on the Handset, the voltage is as follows;

BATTERY(2.2 V ~ 2.6 V: J1) \rightarrow F1, L1, D1 \rightarrow Q2 (1.8 V), Q3 (2.5 V), Q1 (3.3 V)

The Reset signal generates IC1 (66 pin) and 1.8 V.

4.4.3. Charge Circuit

Circuit Operation:

When charging the handset on the Base Unit, the charge current is as follows;

 $DC+(6.5 \text{ V}) \rightarrow R55, R56 \rightarrow CHARGE+(Base) \rightarrow CHARGE+(Handset) \rightarrow L4 \rightarrow Q4 \rightarrow D7 \rightarrow F1 \rightarrow BATTERY+...$ Battery...

 $\mathsf{BATTERY} \to \mathsf{R45} \to \mathsf{GND} \to \mathsf{L5} \to \mathsf{CHARGE}\text{-}(\mathsf{Handset}) \to \mathsf{CHARGE}\text{-}(\mathsf{Base}) \to \mathsf{GND} \to \mathsf{DC}\text{-}(\mathsf{GND})$

In this way, the BBIC on Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q5 of Handset.

Refer to Fig.101 in Power Supply Circuit (P.9).

4.4.4. Battery Low/Power Down Detector

Circuit Operation:

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

· Battery Low

Battery voltage: V(Batt) ≤ 2.25 V ± 50 mV

The BBIC detects this level and " starts flashing.

Power Down


Battery voltage: $V(Batt) \le 2.0 \text{ V} \pm 50 \text{ mV}$

The BBIC detects this level and power down.

4.4.5. Speakerphone

The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm.


4.5. Signal Route

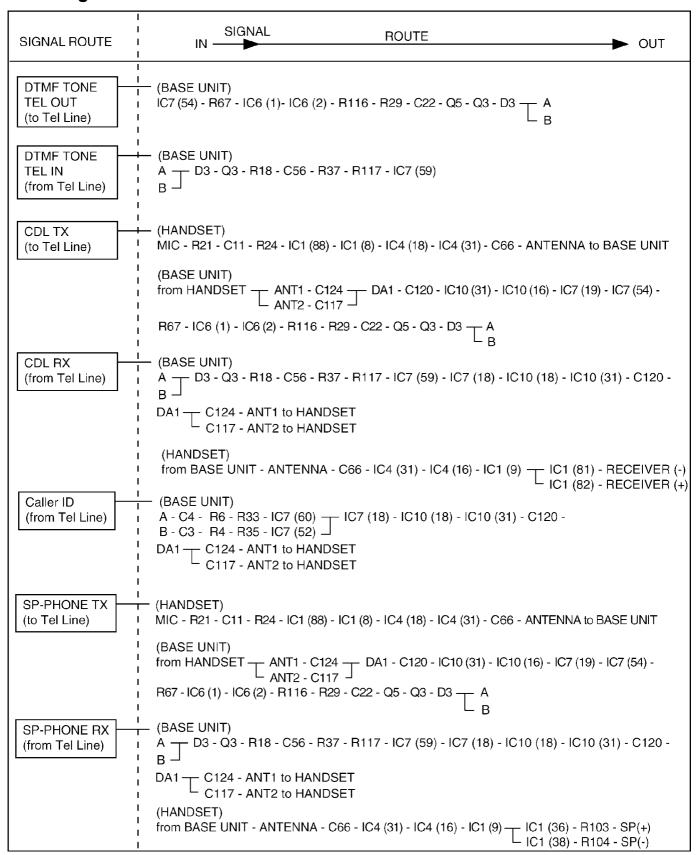

5 Location of Controls and Components


5.1. Controls

5.1.1. Base Unit

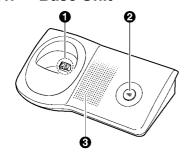

- 1 Charge contact
- 2 [1))] (Page)
- Ringer

5.1.2. Handset

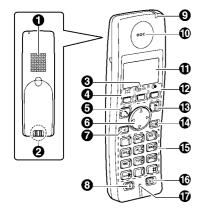


- Speaker
- Charge contact
- **③** [■/OK] (Menu/OK)
- 4 [III] (Phonebook)
- **⊙** [**↑**] (Talk)
- Navigator key ([▲]/[▼]/[►]/[◄])
- **⑦** [♣] (Speakerphone)
- (R) (Flash)
- Charge indicator/Ringer indicator
- Receiver
- Display
- ② 【 】 (Redial/Pause)
- (B (★①) (Off/Power)
- ② 【C/
 図】(Clear/Mute)
- (5) Dial keypad
- (INT) (Intercom)
- Microphone

6 Installation Instructions

6.1. Connections

When connecting the AC adaptor to the base unit, a short beep will be heard. If it is not heard, check the connections.

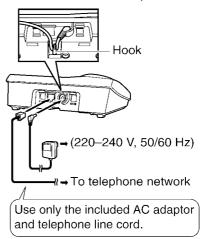

Note:


- Never install telephone wiring during a lightning storm.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.
- The unit will not work during a power failure. We recommend connecting a standard telephone to the same telephone line or to the same telephone jack using a T-adaptor.

Location

- For maximum distance and noise-free operation, place your base unit:
 - away from electrical appliances such as TVs, radios, personal computers or other phones.
 - in a convenient, high and central location.

If you subscribe to a DSL service

- Please attach a noise filter (contact your DSL service provider) to the telephone line between the base unit and the telephone line jack in the event of the following:
 - Noise is heard during conversations.
 - Caller ID features do not function properly.

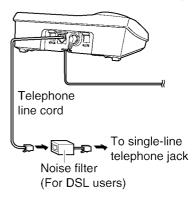


6.2. Battery

6.2.1. Battery Installation/Replacement Important:

- Use only the included rechargeable batteries HHR-55AAAB or HHR-4EPT.
- When replacing batteries, we recommend using the Panasonic rechargeable batteries HHR-4EPT.
- 1 Press the notch on the handset cover firmly and slide it in the direction of the arrow.
 - When replacing batteries, remove the old batteries positive (+) terminal first.



 2 Insert the batteries negative (○) terminal first. Close the handset cover.



Notice:

When inserting the batteries:

- Wipe the battery ends (⊕, ⊖) with a dry cloth.
- Install the batteries without touching the battery ends (⊕,
 ⊕) or the unit contacts.
 - I fully charged the batteries, but the operating time seems to be short:
- Wipe the battery ends (⊕, ⊝) and the unit contacts with a dry cloth.

6.2.2. Battery Charge

Place the handset on the base unit for about 7 hours before initial use.

When charging, the battery icon is shown as follows.



When the batteries are fully charged, **fine** remains on the display.

 The charge indicator lights up when the handset is placed on the base unit.



Note:

- · It is normal for the handset to feel warm during charging.
- If you want to use the unit immediately, charge the batteries for at least 15 minutes.
- Clean the charge contacts of the handset, base unit with a soft, dry cloth, otherwise the batteries may not charge properly. Clean if the unit is exposed to grease, dust or high humidity.

6.2.3. Battery Strength

Battery icon	Battery strength
(EEE)	High
	Medium
	Low When flashing: Needs to be charged.

6.2.4. Panasonic Ni-MH Battery Performance (included batteries)

Operation	Operating time		
In continuous use	17 hours max.		
In continuous standby mode	180 hours max.		

Note:

- It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use).
- Actual battery performance depends on a combination of how often the handset is in use and how often it is not in use (standby).
- Battery operating time may be shortened over time depending on usage conditions and ambient temperature.
- Even after the handset is fully charged, the handset can be left on the base unit without any ill effect on the batteries.
- The battery strength may not be displayed correctly after you replace the batteries. In this case, place the handset on the base unit and charge for at least 7 hours.

7 Operation Instructions

7.1. Base Unit Settings

- Use the handset to customise the base unit.
- When customising the base unit, the current item or setting is indicated by > .

To customise the base unit:

- 1 [国/OK]
- 2 Press [▲] or [▼] to select "Base Unit Setup". → [▶]
- **3** Press [A] or [V] to select the desired item in the base unit settings menu. $\rightarrow [V]$
- 4 Press (▲) or (▼) to select the desired item in the sub-menu. → (►)
- 5 Press (▲) or (▼) to select the desired setting then press (►) or follow the instruction in the "Feature" column of the chart.
 - To exit the operation, press [★①].

Base unit settings Sub-menu menu		Feature (default setting)	Remarks (Selectable options)	
Ringer Volume	_	Base unit ringer volume (Medium)	Off/Low/Midium/High*4	
Call Options	Dial Mode	("Tone")	Tone/Pulse	
	Recall/Flash	Change the recall time ("600 msec.").*1	80/90/100/110/160/200/250/300/ 400/600/700/900 msec	
	Area Code	_	Up to 4 area codes	
	Call Restrict	_	Off/On (Up to 6 Numbers)	
Other Options	Base Unit PIN	Change base unit PIN ("0000").*2 - Enter the current 4-digit base unit PIN.*3 → Enter the new 4-digit base unit PIN. → [■/OK]	"0000" - "9999" (4 digits)	
	Repeater Mode	("off")	On/Off	

^{*1} Change the recall time, if necessary, depending on the requirements of your service provider/telephone company or PBX.

^{*2} If you forget your PIN, see For Service Hint (P.19).

^{*3} If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you.

^{*4} The items are not shown on the display.

7.2. Handset Settings

• When customising the handset, the current item or setting is indicated by >.

To customise the handset:

- 1 [国/OK]
- 2 Press [▲] or [▼] to select "Handset Setup". → [▶]
- **3** Press [A] or [V] to select the desired item in the handset settings menu. $\rightarrow [V]$
- 4 Press (▲) or (▼) to select the desired item in the sub-menu. → (►)
- 5 Press (▲) or (▼) to select the desired setting then press (►) or follow the instruction in the "Feature" column of the chart.
 - To exit the operation, press [★①].

Handset settings Sub-menu menu		Feature (default setting)	Remarks (Selectable options)	
Set Date & Time	_	Date and time	_	
Ringer Setup	Ringer Volume	Handset ringer volume (Maximum)*1	Off/Volume 1 to 6 ^{*6}	
	Ext. Ringtone (External ringtone)	Ringtones for outside calls ("Ringtone 1") ^{*2}	10 (5 tone + 5 melody)	
	Int. Ringtone (Intercom ringtone)	Ringtones for intercom calls ("Ringtone 3")*3	10 (5 tone + 5 melody)	
Display Setup	Standby Display	Standby mode display ("Off")*4	Off/Handset Number	
	Select Language	Display language ("English")	14 languages selectable	
	Contrast	Display contrast (Level 3)	Contrast 1 to 6*6	
Registration Register H.set (Register handset)		See "Registering a Handset to the Base Unit"	_	
Other Options	Keytones	Keytones on/off ("on")	On/Off	
	Auto Talk	Auto talk on/off ("Off")*5	On/Off	

^{*1} When the ringer is turned off, the handset will ring:

- at the minimum level for intercom calls
- at the maximum level for paging
- *2 If you select one of the melody ringtones, the ringtone will continue to sound for several seconds if the caller hangs up before you answer. You may hear a dial tone or no one on the line when you answer a call.

The preset melodies in this product are used with permission of © 2004 M-ZoNE Co., Ltd.

- *3 The preset melodies in this product are used with permission of © 2004 M-ZoNE Co.,
- *4 If "Off" is selected, only current date and time are displayed.
 - If "Handset Number" is selected and the current handset number is 2, "[2]" is displayed.
- *5 Auto talk feature allows you to answer calls simply by lifting the handset off the base unit or charger. You do not need to press [].
- *6 The items are not shown on the display.

Cross Reference:

Registering a Handset to the Base Unit (P.18)

7.3. Registering a Handset to the Base Unit

The included handset and base unit are preregistered. If for some reason the handset is not registered to the base unit (for example, Ψ flashes even when the handset is near the base unit), register the handset manually.

To register an additional handset to the base unit (easy registration)

After purchasing an additional handset, register it to the base unit. Ensure that the additional handset is switched on. If it is not on, press and hold [50] for few seconds to turn the handset on.

- 1 Lift the additional handset and press [> 0] to put the handset in standby mode.
- 2 Press and hold (•)) on the base unit for about 3 seconds, until the registration tone sounds.
- 3 Place the additional handset on the base unit. The registration tone continues to sound. With the handset still on the base unit, wait until a confirmation tone sounds and ♥ stops flashing.

Note:

- If an error tone sounds, or if Ψ is still flashing, register the handset manually.
- If all registered handsets start ringing in step 2, press [•••)] to stop. Start again from step 1.
- Charge the batteries of your additional handset for about 7 hours before initial use.
- This registration method cannot be used for handsets that have already been registered to the base unit. Register
 the handset manually.

To register a handset to the base unit (manual registration)

You can register a handset to the base unit manually using the following method.

- 1 $[\blacksquare/OK] \rightarrow \text{"Handset Setup"} \rightarrow [\triangleright]$
- 2 "Registration" → [►]
- **3** "Register H.set" \rightarrow [\triangleright]
- 4 Press and hold [**) on the base unit for about 3 seconds, until the registration tone sounds.
 - If all registered handsets start ringing, press (•)) to stop, then repeat this step.
 - After pressing [•w)], the rest of this procedure must be completed within 1 minute.
- 5 Wait until "Enter Base PIN" is displayed, then enter the base unit PIN (default: "0000"), then press [// OK].
 - If you forget your PIN, see For Service Hint.
 - When the handset has been registered successfully, ▼ will stop flashing. If keytones are turned on, a confirmation tone will be heard.

Cross Reference:

For Service Hint (P.19)

7.3.1. Cancelling a handset

A maximum of 6 handsets can be registered to the base unit. A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This will allow the base unit to "forget" the handset.

- 1 $[\blacksquare/OK] \rightarrow \text{"Base Unit Setup"} \rightarrow [\triangleright]$
- 2 Enter "335".
- **3** "Cancel Handset" \rightarrow [\triangleright]
 - The numbers of all handsets registered to the base unit are displayed.
- 4 Select the handset(s) you want to cancel, by pressing the desired handset number. → [≡/OK]
 - The selected handset number(s) will flash.
 - To cancel a selected handset number, press the number again. The number will stop flashing.
- 5 "Yes" \rightarrow [\triangleright] \rightarrow [\nearrow 0]

7.4. For Service Hint

Items	Contents			
Battery	You could use other rechargeable batteries sold in a market, but the unit is not guaranteed to work properly.			
PIN Code	 If you forget the PIN, change the PIN using the following method. 1 [■/OK] 2 Press [▲] or [▼] to select "Base Unit Setup". → [►] 3 "Other Options" → [►] 4 "Base Unit PIN" → [►] 5 Press [★][7][0][0][0]. 6 Enter the new 4-digit base unit PIN. → [►] → [★①] 			


8 Service Mode

8.1. Engineering Mode

8.1.1. Base Unit

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

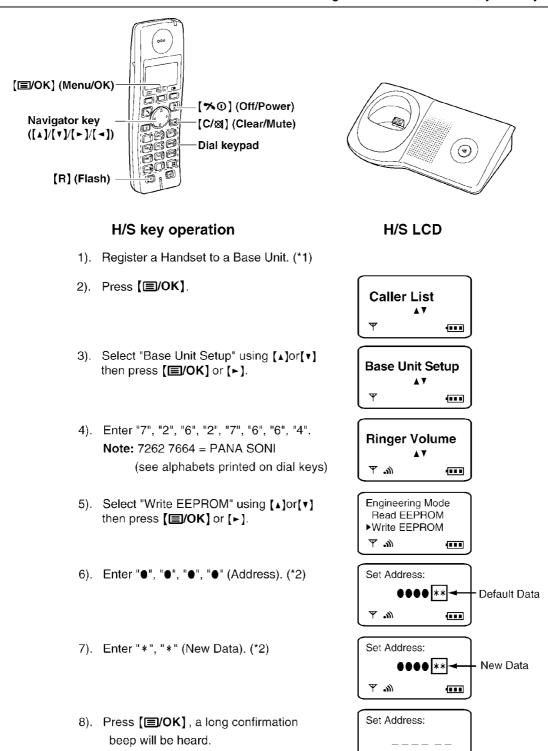

9). Press [🆘 🛈] (off) to return to standby mode.

After that, turn the base unit power off and then power on.

e)))

•

Frequently Used Items (Base Unit) ex.)

Items (*3)	Address	Default Data	New Data		Remarks
C-ID (FSK) sensitivity	04 3E	00	01 (6dB up)	02 (12dB up)	When hex changes from "00" to "01" or "02",
					gain increases by 6dB or 12dB.
C-ID (DTMF) sensitivity	04 4C	50	60 (6dB up)	70 (12dB up)	When hex changes from "50" to "60" or "70",
					gain increases by 6dB or 12dB.
Frequency	00 01	75	-	-	Use these items in a READ-ONLY mode to
ID	00 10~00 14	Given value	-	-	confirm the contents. Careless rewriting may
					cause serious damage to the computer system.
Bell length	01 F6	64 (10sec) (*4)	1E (3sec)	14 (2sec)	This is time until bell stops ringing.
					(Unit: 100ms)
PULSE Dial speed	03 48	28 (40msec)	14 (20msec)	-	This is pulse make time. (Unit:1ms)
(10PPS -> 20PPS)		(*4)			
	03 49	3C (60msec)	1E (30msec)	-	This is pulse break time. (Unit:1ms)
		(*4)			
	01 E4	57 (870msec)	2C (440msec)	-	This is inter-digit time in pulse mode.
		(*4)			(Unit:10ms)

Note:

- (*1) Refer to Registering a Handset to the Base Unit (P.18).
- (*2) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[R] + 0
1	1	В	[R] + 1
	•	С	[R] + 2
		D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5

(*3)

Items	Description
C-ID (FSK) sensitivity	FSKGain_shiftgain
C-ID (DTMF) sensitivity	Foutgains:HPFilter Foutgains
Frequency	Setting value of FREQ_TRIM_REG
ID	ID
Bell length	Time until it stops bell.
PULSE Dial speed (10PPS -> 20PPS)	Pulse MakeTime and BreakTime. bMakeTime:Pulse MakeTime Unit: 1ms bBreakTime:Pulse Break Time Unit: 1ms
	Inter-digit time in Pulse mode. Unit:10ms


(*4)

Bell length	64(hex) = 100(dec) → 100 × 100msec = 10000msec (10sec)
PULSE Dial speed	$28(\text{hex}) = 40(\text{dec}) \rightarrow 40 \times 1\text{msec} = 40\text{msec}$
(10PPS -> 20PPS)	$3C(hex) = 60(dec) \rightarrow 60 \times 1msec = 60msec$
	$57(\text{hex}) = 87(\text{dec}) \rightarrow 87 \times 10\text{msec} = 870\text{msec}$

8.1.2. Handset

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

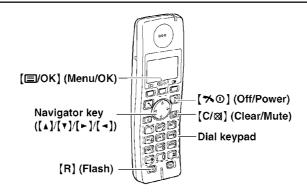

H/S key operation

1). Press [**I**/**O**K].

2). Select "Handset Setup" using [▲]or[▼] then press [■/OK]or [►].

- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".

 Note: 7262 7664 = PANA SONI

 (see alphabets printed on dial keys)
- 4). Select "Write EEPROM" using [♠]or[▼] then press (■/OK) or (►).
- 5). Enter "●", "●", "●", "●" (Address). (*1)
- 6). Enter "*", "*" (New Data). (*1)
- 7). Press [/OK], a long confirmation beep will be heard.

 
H/S LCD

 














8). Press [①] (off) to return to standby mode.

After that, remove and reinsert the batteries. Press the Power button for about 1 second if the power is not turned on.

Frequently Used Items (Handset)

ex.

Items (*2)	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Sending level	00 06	Adjusted value	Given value	6F	00	(*3)
Receiving level	00 07	Adjusted value	Given value	00	3F	(*4)
Battery Low	00 04	25	-	-	-	
Frequency	00 01	75	-	-	-	(*5)
ID	00 10~00 14	Given value	-	-	-	

Note:

(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[R] + 0
1	1	В	[R] + 1
·		С	[R] + 2
		D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5

(*2)

Items	Description
Sending level	Analog Front End MIC Setting for Handset Mode
Receiving level	Analog Front End LSR Setting for Handset Mode
Battery Low	ADC value for battery low detection
Frequency	Setting value of FREQ_TRIM_REG
ID	International Portable Part Equipment Identities

(*3) When adding "01" (hex) to default value, sending level increases by 0.25 dB. ex.)

Item	Default Data	New	Data
	3A	3E	36
Sending level	-8.5dBm	-7.5dBm	-9.5dBm

(*4) When reducing "01" (hex) from default value, receiving level increases by 0.25 dB. ex.)


Item	Default Data	New Data		
	14	18	10	
Receiving level	-21dBm	-22dBm	-20dBm	

(*5) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the handset.

9 Troubleshooting Guide

9.1. Troubleshooting Flowchart

Flow Chart

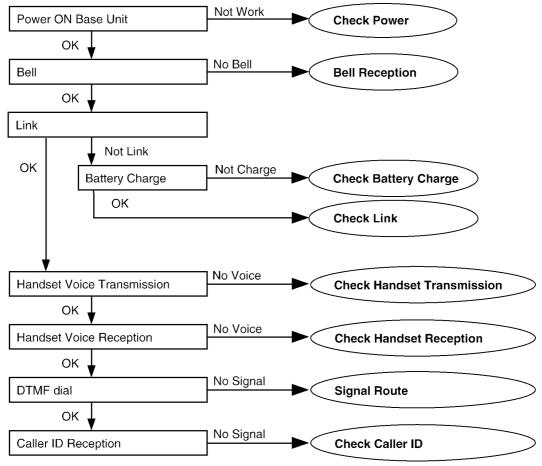

Cross Reference:

Check Power (P.25)

Bell Reception (P.32)

Check Battery Charge (P.26)

Check Link (P.27)

Check Handset Transmission (P.31)

Check Handset Reception (P.31)


Signal Route (P.13)

Check Caller ID (P.31)


9.1.1. Check Power

9.1.1.1. Base Unit

Is the AC Adaptor inserted into AC outlet? (*1)

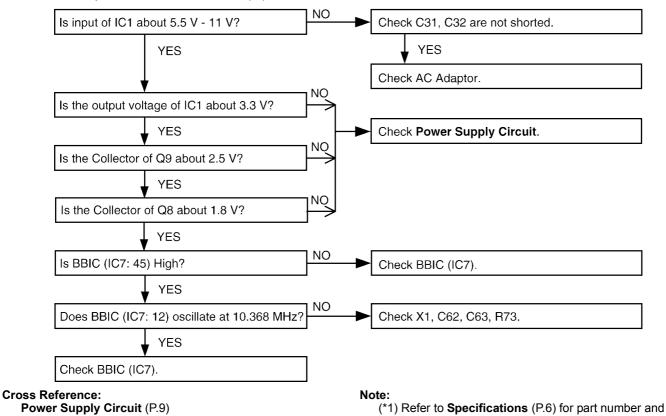

9.1.1.2. Handset

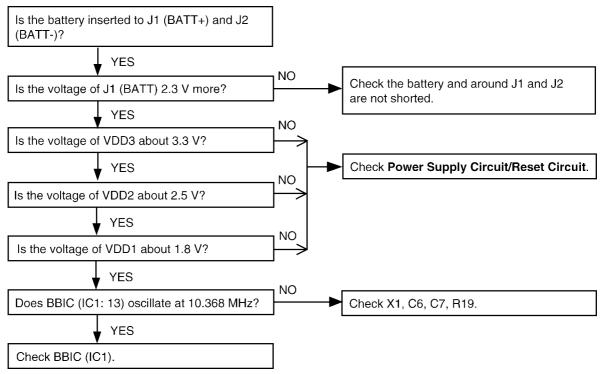


supply voltage of AC Adaptor.

Cross Reference:

Power Supply Circuit/Reset Circuit (P.12)

9.1.2. Check Battery Charge


9.1.2.1. Base Unit

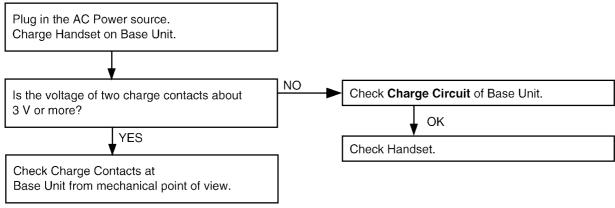

Cross Reference:

Charge Circuit (P.12)

 9.1.2.2. Handset




Cross Reference:

Check Power (P.25)

Charge Circuit (P.12)

9.1.3. Check Link

9.1.3.1. Base Unit

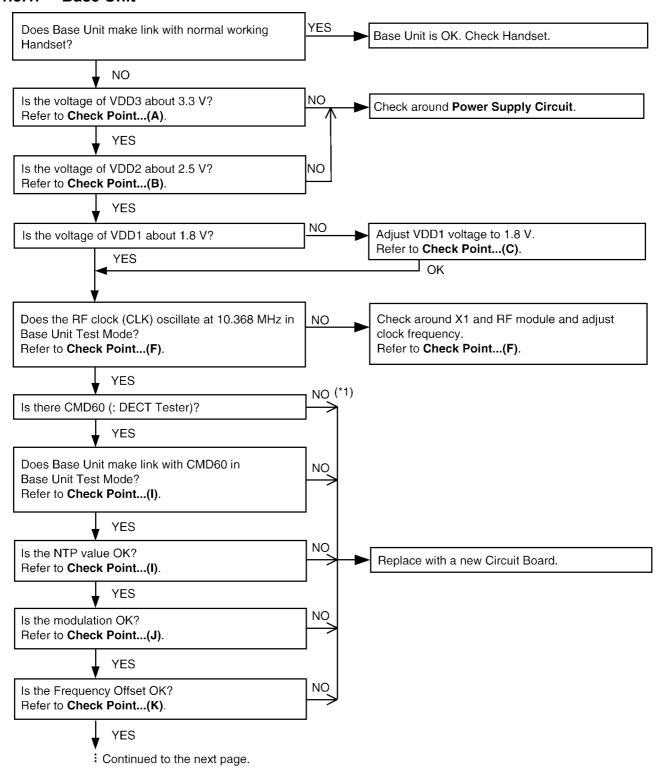


Note:

(*1) Refer to Troubleshooting by Symptom (Base Unit) (P.33)

Cross Reference:

Check Point (Base Unit) (P.33)

Power Supply Circuit (P.9)

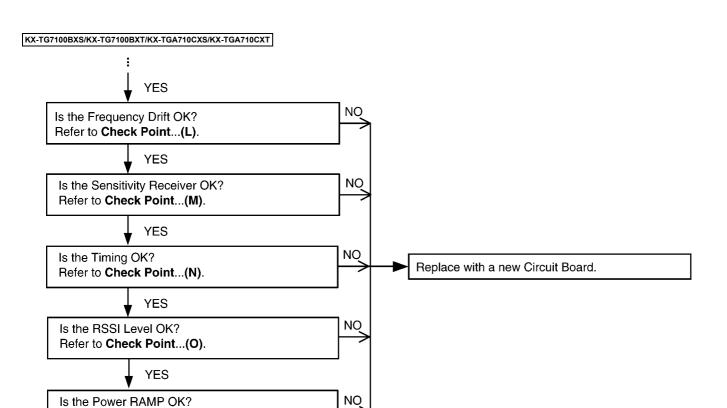


Cross Reference:

Check Point (Base Unit) (P.33)

Refer to Check Point...(P).

9.1.3.2. Handset

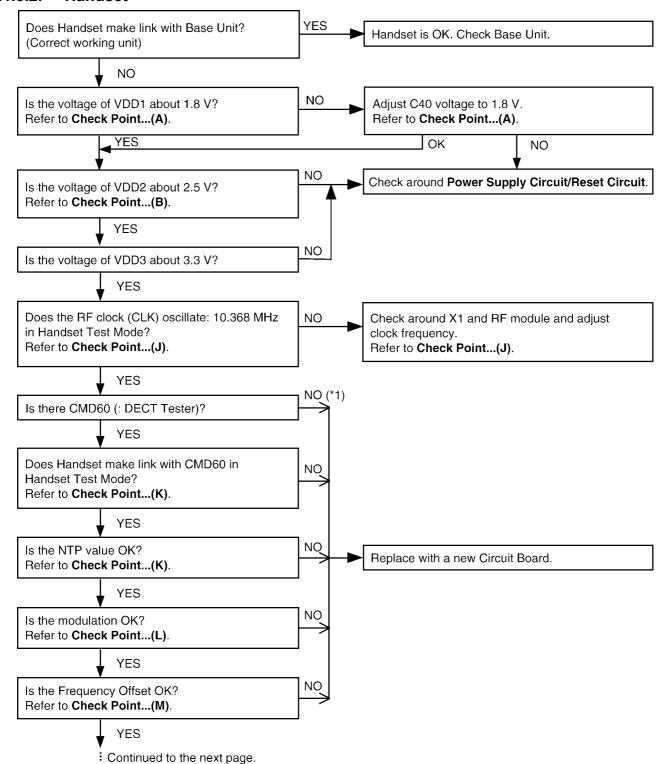


Note:

(*1) Refer to Troubleshooting by Symptom (Handset) (P.36)

Cross Reference:

Check Point (Handset) (P.36)


Power Supply Circuit/Reset Circuit (P.12)

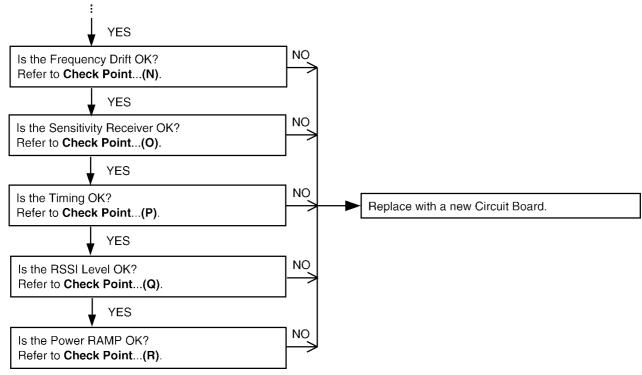

Cross Reference:

Check Point (Handset) (P.36)

 9.1.4. Check Handset Transmission



Cross Reference:

Signal Route (P.13)

9.1.5. Check Handset Reception

Check Handset Speaker in **How to check the Handset** Speaker of Receiver.



Check CDL RX (HANDSET) in Signal Route.

Cross Reference:

How to Check the Handset Speaker of Receiver (P.52). Signal Route (P.13)

9.1.6. Check Caller ID


Check Caller ID in Signal Route.

Cross Reference:


Signal Route (P.13)

9.1.7. Bell Reception

9.1.7.1. Base Unit

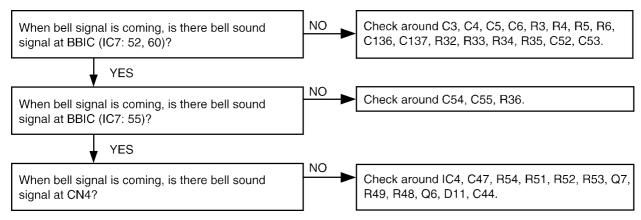

9.1.7.2. Handset

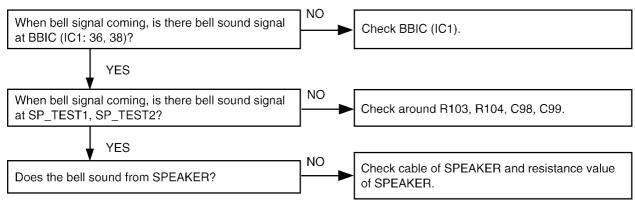

Cross Reference:

Telephone Line Interface (P.9)

Check Link (P.27)

How to Check the Handset Speaker of Receiver (P.52)

9.2. Troubleshooting by Symptom (Base Unit)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
You cannot dial.	Check item (A)-(H).	Check item (A)-(H), (I)-(P).	
You cannot hear the caller's voice.	Check item (A)-(F).	Check item (A)-(F), (I)-(P), (Q).	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (I)-(P).	
The acoustic transmit level is high or low.	Check item (Q).	Check item (Q).	
The acoustic reception level is high or low.	Check item (Q).	Check item (Q).	
Base unit and handset do not link each other.	Check item (A)-(H).	Check item (A)-(P).	
The unit cannot charge.	Check item (R).	Check item (R).	

Note:

(*2) Refer to Check Point (Base Unit) (P.33)

9.2.1. Check Point (Base Unit)

Please follow the items below when BBIC or EEPROM is replaced.

Note:

After the measuring, suck up the solder of TP.

*: **PC Setting** (P.44) is required beforehand.

The connections of simulator equipments are as shown in Adjustment Standard (Base Unit) (P.46).

	Items	Check	Procedure	Check or
		Point		Replace Parts
(A)	3.3 V Supply Confirma-	VDD3	1. Confirm that the voltage between test point VDD3 and GND is $3.3 \text{ V} \pm 0.2 \text{ V}$.	IC1, C31, C32,
	tion			R38, R39, C36,
				C37
(B)	2.5 V Supply Confirma-	VDD2	1. Confirm that the voltage between test point VDD2 and GND is 2.5 V \pm 0.2 V.	Q9, C70, C71
	tion			
(C)*	1.8 V Supply Confirma-	VDD1	1. Confirm that the voltage between test point VDD1 and GND is 1.8 V \pm 0.1 V.	Q8, R72, D12,
	tion			C68
(D)*	BBIC Confirmation	-	BBIC Confirmation (Execute the command "getchk").	IC7, R37, C62,
			Confirm the returned checksum value.	C63, X1, C72,
			Connection of checksum value and program number is shown below.	R75~R81, R62,
			checksum value program number	R63
			ex.) 9B43 D611ZC	
(E)*	EEPROM Confirmation		1. EEP-ROM Confirmation (Execute the command "ChkTG7100XXrevYY.bat").	IC5, C51, R62,
(=)	LLF KOW Commination	-	XX: country code	R63, Q14, C50,
			YY: revision number	R57~R61
			Confirm the returned checksum value.	107 101
			The checksum is displayed in the last output line.	
			Note:	
			"XX", "YY", and "checksum" vary depending on the country version. You can find	
			them in the batch file, PQZZ- mentioned in JIG and PC (P.44).	
(F)*	BBIC Clock Adjustment	CLK	1. Input Command "rdeeprom 00 01 01", then you can confirm the current value.	IC10, C111,
(- /			2. Adjust the frequency of CLK executing the command "setfreq xx (where xx is	
			the value)" so that the reading of the frequency counter is 10.368000 MHz ±	
			10 Hz.	
L				

^(*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.

KX-TG7100BXS/KX-TG7100BXT/KX-TGA710CXS/KX-TGA710CXT

	Items	Check	Procedure	Check or
(G)*	Hookswitch Check with	Point	Connect CN1 (Telephone Socket) to Tel-simulator which is connected with	Replace Parts
(0)	DC Characteristics		600Ω .	R15, Q4, R16,
			2. Set line voltage to 48 V and line current to 40mA at off-hook condition of nor-	R17, IC7, D3
			mal telephone.	
			3. Execute the command "hookoff"	
			 Confirm that the line current is 40 mA ± 5 mA. Execute the command "hookon". 	
			6. Confirm that the line current is less than + 0.8 mA.	
(H)*	DTMF Generator Check	_	1. Connect CN1 (Telephone Socket) to DTMF tester. (Road=600 Ω)	IC7, R67, IC6,
, ,			2. Link Handset and push dial key.	R116, C141,
			3. Confirm DTMF character.	R29, C22, C23,
			4. Confirm that the high Group is -6 dBm ± 2 dBm.	R18~R24,
			5. Confirm that the low Group is -8 dBm ± 2 dBm.	C14~C17, Q5, D4
(I)*	Transmitted Power Con-		Remove the Antenna before starting step from 1 to 7.	IC7, IC10, L7,
(•)	firmation		Configure the DECT tester (CMD60) as follows;	L3, L4, L6,
			<setting></setting>	C117, C118,
			Short A_1 and GND.	C119, C120,
			• Test mode: FP	C124, C125,
			Traffic Carrier: 5 Traffic Slot: 4	R106, R109,
			Node: Loopback	DA1, C102, R102, R103,
			• PMID: 00000	Q10, C110,
			• RF LEVEL = -70dBm.	C112, R111,
			2. Execute the command "testmode".	C126, C127,
			3. Execute the command "sendchar dmv 2 2".	R112
			4. Check that "Signalling Status" has been set to "Locked", then press "ACCEPT	
			RFPI". 5. Initiate connection from Dect tester ("set up connect")	
			6. Execute the command "ANT1".	
			7. Confirm that the NTP value at ANT is 20 dBm ~ 25 dBm.	
(J)	Modulation Check and	-	Follow steps 1 to 6 of (I).	IC7, IC10, L7,
	Adjustment		7.Confirm that the B-Field Modulation is -350 \sim -400/+320 \sim +370 kHz/div using	
			data type Fig31.	C117, C118,
			8.Adjust the B-Field Modulation if required. (Execute the command "readmod" and "wrtmod xx", where xx is the value.)	C119, C120, C124, C125,
			and withhou xx, where xx is the value.)	R106, R109,
				DA1, C102,
				R102, R103,
				Q10, C110,
				C112, R111,
				C126, C127,
(K)	Frequency Offset Check		Follow steps 1 to 6 of (I).	R112 IC7, IC10, L7,
(14)	. roquency onset oneck	=	7.Confirm that the frequency offset is < ± 45 kHz.	L3, L4, L6,
			, , ,	C117, C118,
				C119, C120,
				C124, C125,
				R106, R109,
				DA1, C102, R102, R103,
				Q10, C110,
				C112, R111,
				C126, C127,
				R112
(L)	Frequency Dirft Confir-	-	Follow steps 1 to 6 of (I).	IC7, IC10, L7,
	mation		7.Confirm that the frequency drift is $< \pm 30 \text{ kHz/ms}$.	L3, L4, L6,
				C117, C118,
				C119, C120, C124, C125,
				R106, R109,
				DA1, C102,
				R102, R103,
				Q10, C110,
				C112, R111,
				C126, C127,
				R112

Point Poi		Items	Check	Procedure	Check or
Confirmation Conf		items		1 locedule	
Confirmation R. Confirm that the BER is < 1000 ppm. C117, C118, C119, C120, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, R10	(M)	Sensitivity Deceiver	-		
8. Confirm that the BER is < 1000 ppm. C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R106, R109, DA1, C102, R102, R103, C10, C110, C112, R111, C186, C127, R122	(IVI)		-		
C119, C126, C124, C125, R106, R109, DA1, C102, R102, R103, R109, R102, R103, R10, C110, C112, R111, C112, C112, C127, R112, R111,		Commination			
C124, C125, R106, R109, DA1, C102, R102, R103, G10, C110, C112, R111, C126, C127, R112				o.Commin that the BER is < 1000 ppm.	
R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C112, C112, C112, C112, C112, C112, C112, C112, C114, L16, C119, C120, C112, C1125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C119, C120, C112, R112, R1					
DA1, C102, R103, G10, C110, C112, R111, C128, C127, R102 (N) Timing Confirmation Follow steps 1 to 6 of (f).					
R102, R103, O10, C110, C112, R111, C126, C127, R112					
Company Comp					
C112, R111, C128, C127, R112					
C126, C127, R112					
R112					C112, R111,
Follow steps 1 to 6 of (f). 7. Confirm that the Timing accuracy is < ± 2.0 ppm. 1. 3, 1.4, 1.6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R102, R102, R102, R102, C124, C125, R106, R109, DA1, C102, R102, R					C126, C127,
7. Confirm that the Timing accuracy is < ± 2.0 ppm. 1. 1.4, 1.6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C1112, R111, C126, C127, R112 (O)* RSSI Level Confirmation - Follow steps 1 to 6 of (f). 7. Execute the command "readrssi". 8. Confirm that the returned value is 22 ± A (hex). (C17, C10, L7, 1.3, 1.4, 1.6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Tour steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that the level is < 5 of 5 of 8 of 8 of 8 of 8 of 8 of 8 of					R112
7. Confirm that the Timing accuracy is < ± 2.0 ppm. 1. 1.4, 1.6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C1112, R111, C126, C127, R112 (O)* RSSI Level Confirmation - Follow steps 1 to 6 of (f). 7. Execute the command "readrssi". 8. Confirm that the returned value is 22 ± A (hex). (C17, C10, L7, 1.3, 1.4, 1.6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Tour steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that Power RAMP is matching. (P) Power RAMP Confirmation - Follow steps 1 to 6 of (f). 7. Confirm that the level is < 5 of 5 of 8 of 8 of 8 of 8 of 8 of 8 of	(N)	Timing Confirmation	-	Follow steps 1 to 6 of (I).	IC7, IC10, L7,
C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 C7, C16, C172, R112 C7, C16, C172, R112, C172, C173, R124, L6, C174, C175, R103, Q10, C110, C112, R111, C126, C127, R112 C7, C10, L74, L14, L6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R12 C7, C101, C112, R111, C126, C127, R103, Q10, C110, C112, R111, C126, C127, R112, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112, C120, C124, C125, R106, R109, DA1, C102, R102, R103, R104,	` ′				
C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 Pollow steps 1 to 6 of (f).				3 , , , , . , , .	
C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 O)* RSSI Level Confirmation - Follow steps 1 to 6 of (t). C7, IC10, L7, R112, L3, L4, L6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R102, R103, Q10, C110, C112, R111, C126, C127, R12 P Power RAMP Confirmation - Follow steps 1 to 6 of (t). Follow steps 1 to 6 of (t). C101, C102, R102, R102, R103, Q10, C110, C112, R111, C126, C127, R12 P Power RAMP Confirmation - Follow steps 1 to 6 of (t). C101, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R12 P Power RAMP Confirmation - Follow steps 1 to 6 of (t). C101, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R12 P Power RAMP Confirmation - Follow steps 1 to 6 of (t). C101, C102, R102, R103, Q10, C110, C112, R111, C126, C127, C112, C127, C112, C127, C112, C127,					
R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112					
DA1, C102, R102, R103, Q10, C110, C112, R110, C126, C127, R112					
R102, R103, Q10, C110, C112, R111, C126, C127, R112 Follow steps 1 to 6 of (I).					
Color Col					
C112, R111, C126, C127, R112					, ,
C126, C127, R112 C7, IC10, L7, L3, L4, L6, C117, C118, C119, C120, C124, C125, R100					
CO RSSI Level Confirmation - Follow steps 1 to 6 of (I). 7. Execute the command "readrssi". 1.3, 1.4, 1.6, 1.19, C.120, C.124, C.125, R.106, R.109, DA1, C.102, R.102, R.102, R.103, Q.10, C.110, C.112, R.111, C.126, C.127, R.112 (P) Power RAMP Confirmation - Follow steps 1 to 6 of (I). 7. Confirm that Power RAMP is matching. Io. 7, Io. 10, 1.7, L.3, 1.4, 1.6, C.117, C.118, C.119, C.120, C.124, C.125, R.106, R.109, DA1, C.102, R.102, R.102, R.103, Q.10, C.110, C.112, R.111, C.126, C.127, R.112 (Q)* Audio Check - 1. Link with Handset. Io. 7, Io. 10, C.122, R.103, Q.10, C.110, C.112, R.111, C.126, C.127, R.112 (Q)* Audio Check - 1. Link with Handset. Io. 7, Io. 10, C.122, R.103, Q.10, C.110, C.112, R.111, C.126, C.127, R.112 (Q)* Audio Check - 1. Link with Handset. Io. 7, Io. 10, Q.112, R.113, Q.114, Io. 10, Q.114, R.15, R.15, R.15, G.188,					
Follow steps 1 to 6 of (I): 7. Execute the command "readrssi". 8. Confirm that the returned value is 22 ± A (hex). 107, 107, 118, 14, 16, 119, 120, 1214, 125, 14, 16, 119, 1212, 1214, 1212, 1214, 1212, 1214, 1212, 1214, 1212, 1214, 1212, 1214, 1212, 1214, 1212, 1214, 1212, 1214, 1212, 1214,					
T.Execute the command "readrssi". 1.3, 1.4, 1.6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, O10, C110, C112, R111, C126, C127, R112 P					
8. Confirm that the returned value is 22 ± A (hex).	(O)*	RSSI Level Confirmation	-	Follow steps 1 to 6 of (I).	IC7, IC10, L7,
C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 (P) Power RAMP Confirmation - Follow steps 1 to 6 of (I).				7.Execute the command "readrssi".	L3, L4, L6,
C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 (P) Power RAMP Confirmation - Follow steps 1 to 6 of (I).				8. Confirm that the returned value is 22 ± A (hex).	C117, C118,
C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 Power RAMP Confirmation				, ,	
R106, R109, DA1, C102, R102, R102, R102, R102, R102, R102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 Power RAMP Confirmation					
DA1, C102, R103, Q10, C110, C112, R111, C126, C127, R112					
R102, R103, Q10, C110, C112, R111, C126, C127, R112					
Content Con					
C112, R111, C126, C127, R112					
C126, C127, R112					
Power RAMP Confirmation Follow steps 1 to 6 of (I). 7. Confirm that Power RAMP is matching. IC7, IC10, L7, L3, L4, L6, C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R101, C112, R101, C112, R101, C112, R111, C126, C127, R112 IC7, CN1, SA1, L1, L2, D3, Q3, Measure the Level at Line I/F and distortion level. IC7, CN1, SA1, L1, L2, D3, Q3, Q4, R14, R15, 3. Confirm that the level is ~8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). S. Confirm that the level is ~21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). R55, R56, C48, R65, R66, C48, R65, C48, R65, C48, R65, R66, C48, R66, R66, R66, R67, R67					
Power RAMP Confirmation					
T. Confirm that Power RAMP is matching. 7. Confirm that Power RAMP is matching. 7. Confirm that Power RAMP is matching. 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset. 3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. 4. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -2.1 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check 7. Confirm that Power RAMP is matching. L3, L4, L6, C117, C118, C119, C120, R102, R103, Q10, C110, C112, R111, C126, C127, R112 IC7, CN1, SA1, L1, L2, D3, Q3, Q4, R14, R15, R16, R17 R16, R17 R17 R16, R17 R16, R17 R17 R17 R19 CAPPER AND POWER AND	L				
C117, C118, C119, C120, C124, C125, R106, R109, DA1, C102, R102, R102, R103, Q10, C110, C112, R111, C126, C127, R111, C126, C127, R112 (Q)* Audio Check - 1. Link with Handset.	(P)		-		
C119, C120, C124, C125, R106, R109, DA1, C102, R102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 Audio Check - 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset. 3. Confirm that the level at Line I/F and distortion level. 3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. 4. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,		tion		7.Confirm that Power RAMP is matching.	
C124, C125, R106, R109, DA1, C102, R102, R103, Q10, C110, C112, R111, C126, C127, R112 Audio Check - 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset. Measure the Level at Line I/F and distortion level. 3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,					
R106, R109, DA1, C102, R103, Q10, C110, C112, R111, C126, C127, R112 Q)*					
DA1, C102, R103, Q10, C110, C112, R111, C126, C127, R112 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset. 4. Input -45dBm/1kHz to MIC of Handset. 5. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. 6. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,					C124, C125,
R102, R103, Q10, C110, C112, R111, C126, C127, R112 Audio Check - 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset. 3. Confirm that the level at Line I/F and distortion level. 3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,					R106, R109,
R102, R103, Q10, C110, C112, R111, C126, C127, R112 Audio Check - 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset. 3. Confirm that the level at Line I/F and distortion level. 3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,					DA1, C102,
Q10, C110, C112, R111, C126, C127, R112					
C112, R111, C126, C127, R112 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset. 4. Measure the Level at Line I/F and distortion level. 3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. 4. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,					
C126, C127, R112 Audio Check - 1. Link with Handset. 2. Input -45dBm/1kHz to MIC of Handset.					
R112					
 Audio Check Link with Handset. Input -45dBm/1kHz to MIC of Handset. Measure the Level at Line I/F and distortion level. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). Charging Check Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48, 					
2. Input -45dBm/1kHz to MIC of Handset. Measure the Level at Line I/F and distortion level. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,	(O*	Audia Chaala		1 Link with Handoot	
Measure the Level at Line I/F and distortion level. 3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check Measure the Level at Line I/F and distortion level is < 5% at Receiver of Handset and distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load).	(U)"	Audio Check	-		
3. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,					
at TEL Line (600 Ω Load). 4. Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,					
 4. Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48, 					R16, R17
Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,				at TEL Line (600 Ω Load).	
Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48,				4. Input -20 dBm/1 kHz to Line I/F.	
 (*Receive volume set to second position from minimum). 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge R55, R56, C48, 					
 5. Confirm that the level is -21 dBm ± 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge- R55, R56, C48, 					
at Receiver (Volume Middle, 150 Ω Load). (R) Charging Check - 1. Connect Charge Contact 12 Ω /2 W resistor between charge+ and charge R55, R56, C48,				• • • • • • • • • • • • • • • • • • • •	
(R) Charging Check - 1. Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge- R55, R56, C48,					
	(D)	Charging Chaol			DEE DEC CAO
2. Measure and confirm voltage across the resistor is 3.10 V ± 0.2 V. C49	(K)	Charging Check	-		
				z. weasure and confirm voltage across the resistor is 3.10 V ± 0.2 V.	C49

9.3. Troubleshooting by Symptom (Handset)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
Battery strength is not indicated correctly by Battery icon.	Check item (A)-(D), (G)-(H).	Check item (A)-(D), (H)-(I).	
You cannot hear the caller's voice.	Check item (A)-(D), (J).	Check item (A)-(D), (J)-(M), (N), (I	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (K), (O).	
Does not link between base unit and handset.	Check item (A)-(D), (J).	Check item (A)-(D), (J)-(Q).	
The Audio level is high or low.	Check item (S).	Check item (S).	
The SP-Phone level is high or low.	Check item (T).	Check item (T).	

Note:

(*2) Refer to Check Point (Handset) (P.36)

9.3.1. Check Point (Handset)

Please follow the items below when BBIC or EEPROM is replaced.

Note:

After the measuring, suck up the solder of TP.

*: PC Setting (P.47) is required beforehand.

The connections of adjustment equipments are as shown in Adjustment Standard (Handset) (P.49).

	Items	Check Point	Procedure	Check or Replace Parts
(A)*	1.8V Supply Adjustment	VDD1	 Confirm that the voltage between test point VDD1 and GND is 1.8V ± 0.02V. Execute the command "bandgap", then check the current value. Adjust the 1.8V voltage of VDD1 executing command "bandgap XX"(XX is the value). 	IC1, Q2, C10
(B)	DC/DC Supply Confirmation	VDD3	1. Confirm that the voltage between test point VDD3 and GND is $3.3V \pm 0.3V$ (Backlight is ON).	IC1, F1, C1, C2, C3, R1, Q1, D1, L1
(C)	2.5V Supply Confirma- tion	VDD2	1. Confirm that the voltage between test point VDD2 and GND is $2.5V \pm 0.1V$.	IC1, Q3, C4, C5
(D)*	BBIC Confirmation	-	BBIC Confirmation (Execute the command "getchk"). Confirm the returned checksum value. Connection of checksum value and program number is shown below. checksum value program number ex.)	IC1, X1, C6, C7, R19
(E)*	EEP-ROM Confirmation	-	EEP-ROM Confirmation (Execute the command "ChkTGA710XXrevYY"). XX: country code YY: revision number Confirm the returned checksum value. Note: "XX", "YY", and "checksum" vary depending on the country version. You can find them in the batch file, PQZZ- mentioned in JIG and PC (P.47).	IC1, IC3, R40, R41, R42, Q10, Q11, R43, R44, C37
(F)	Charge Control Check & Charge Current Monitor Check	-	 Apply 3.5V between J3(+) and J4(-) with DC power supply and set current limit to 250mA. Confirm that the current limit LED of DC power supply is ON/OFF. Decrease current limit of DC power supply to 100mA. Confirm that the current limit LED of DC power supply is stable. (Current limiter is ON.) (If charge control cannot be confirmed by this procedure, please use battery to hand-set power supply and try again.) 	Q9, D6, D7, D8, L4, L5, R5, R6, R7, R8, F1

^(*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.

	Items	Check Point	Procedure	Check or Replace Parts
(G)*	Charge Detection (OFF) Check	-	Stop supplying 3.5V to J3 CHARGE(+) and J4 CHARGE(-). Execute the command "Backloff" then "charge". Confirm that the returned value is 00 (hex).	IC1, Q4, Q5, Q9, D6, D7, D8, L4, L5, R5, R6, R7, R8, F1
(H)*	Battery Monitor Check	-	1. Apply 2.25V between BATT and GND. 2. Execute the command "readbatt". It assumes that the return value is XX. a) 1E ≦ XX ≦ 2C: No need to adjust b) XX: 18 ~ 1D: Need to adjust XX: 2D ~ 32: Need to adjust Write AD value of 2.25V to EEPROM. ex) read data: XX = 1D, write data: YY = 1D read data: XX = 2D, write data: YY = 2D EEPROM = 0004(Low Voltage) write "YY" Execute the command "wreeprom 00 04 01 YY". EEPROM = 0005(No Voltage) write "YY - 1D" Execute the command "wreeprom 00 05 01 ZZ". EEPROM = 000A(Low Voltage BL) write "YY - 16" Execute the command "wreeprom 00 0A 01 WW". Note: ZZ = YY - 1D, WW = YY - 16 No Voltage writing data limit is '00'. c) XX: 00 ~ 17: Reject XX: 33 ~ FF: Reject	IC1, F1, C1 C3, R12
(I)	Battery Low Confirma- tion	-	Apply 2.40V between BATTERY(+) and BATTERY(-). Confirm that there is no flashing of Battery Icon. Apply 2.25V ± 0.08V between BATTERY(+) and BATTERY(-). Confirm that there is flashing of Battery Icon.	IC1, F1, C1 C3, R12
(J)*	BBIC Clock Adjustment	CLK	1. Apply 2.6V between BATTERY(+) and BATTERY(-) with DC power. 2. Execute the command "conttx". 3. Input Command "rdeeprom 00 01 01", then you can confirm the current value. 4. Adjust the frequency of CLK executing the command "setfreq xx (where xx is the value)" so that the reading of the frequency counter is 10.368000MHz ± 10Hz. Note: CLK is displayed only for a few seconds when executing the command "conttx" after battery is inserted.	
(K)*	Transmitted Power Confirmation	-	Remove the Antenna before starting step from 1 to 4. 1. Configure the DECT tester (CMD60) as follows;	IC1, IC4, C66, C58, R51, C57, C50, C52, C53, R52, C60, C61
(L)*	Modulation Check and Adjustment	-	Follow steps 1 to 3 of (K) above. 4.Confirm that the B-Field Modulation is -350 ~ -400/+320 ~ +370kHz/div using data type Fig 31. 5.Adjust the B-Field Modulation if required. (Execute the command "Readmod" and "wrtmod xx", where xx is the value.)	C57, C50,
(M)	Frequency Offset Confirmation	-	Follow steps 1 to 3 of (K) above. 4.Confirm that the frequency Offset is < ± 45kHz.	IC1, IC4, C66, C58, R51, C57, C50, C52, C53, R52, C60, C61
(N)	Frequency Drift Confirmation	-	Follow steps 1 to 3 of (K) . 4.Confirm that the frequency Drift is < ± 30kHz/ms.	IC1, IC4, C66, C58, R51, C57, C50, C52, C53, R52, C60, C61

	Items	Check	Procedure	Check or
		Point		Replace Parts
(O)	Sensitivity Receiver	-	Follow steps 1 to 3 of (K) .	IC1, IC4, C66,
	Confirmation		4.Set DECT tester power to -88dBm.	C58, R51,
			5.Confirm that the BER is < 1000ppm.	C57, C50,
				C52, C53,
				R52, C60,
				C61
(P)	Timing Confirmation	-	Follow steps 1 to 3 of (K) .	IC1, IC4, C66,
			4.Confirm that the Timing accuracy is < ± 2.0ppm.	C58, R51,
				C57, C50,
				C52, C53,
				R52, C60,
				C61
(Q)*	RSSI Level Confirmation	-	Follow steps 1 to 3 of (K).	IC1, IC4, C66,
			4.Set DECT tester power to -81dBm.	C58, R51,
			5.Execute the command "readrssi".	C57, C50,
			6. Confirm that the returned value is 1C \pm 8 (hex).	C52, C53,
			7.Set DECT tester power to -63dBm.	R52, C60,
			8.Execute the command "readrssi".	C61
			9.Confirm that the returned value is 25 ± 8 (hex).	
(R)	Power RAMP Confirma-	-	Follow steps 1 to 3 of (K) .	IC1, IC4, C66,
	tion		4.Confirm that Power RAMP is matching.	C58, R51,
				C57, C50,
				C52, C53,
				R52, C60,
				C61
(S)	Audio Check and Confir-	-	Link to BASE which is connected to Line Simulator.	IC1, R21, R22,
	mation		2. Set line voltage to 48V and line current to 40mA.	R23, R24,
			3. Input -45dBm/1KHz to MIC and measure Line output level.	R25, C11,
			4. Confirm that the level is -8.5dBm ± 2dBm and that the distortion level is < 5% at	
			TEL Line (600Ω Load).	D4, D5
			5. Input -20dBm/1KHz to Line I/F and measure Receiving level at REV1 and	
			REV2.	
			 Confirm that the level is -21dBm ± 2dBm and that the distortion level is < 5% at Receiver. (vol = 2) 	
(T)	SP phone Audio Check		Link to Base which is connected to Line Simulator.	IC1, R21, R22,
(-)	and Confirmation		Set line voltage to 48V and line current to 40mA.	R23, R24,
			Set the handset off-hook using SP-Phone key.	R25, C11,
			4. Input -25dBm/1KHz to Line I/F and measure Receiving level at SP_TEST1 and	
			SP TEST2.	C98, C99,
			5. Confirm that the level is -14dBm ± 2dBm and that the distortion level is < 5%.	
			(vol = 3)	
			[(/	

9.3.2. Troubleshooting for Speakerphone

When the customer's telephone line corresponds to the following conditions, and the transmission signal of SP-Phone is interrupted, performing the next set up to a cordless handset will improve it to some extent.

Conditions

- 1. When customer's line has less line loss.
 - ex.) The customer is using optical fiber, ISDN terminal adaptor, or PBX.
 - In this case, receiving signal is strong and it may affect transmission signal.
- 2. When the other party is talking from noisy place.
 - ex.) The other party is using cellular phone. The background noise is very loud.
 - In this case, the noise from the other party (i.e. surrounding noise) may affect transmission signal.

Setting Method

• Change the address of EEPROM (0144) from 00 to 01.

9.4. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

9.4.1. Preparation

- PbF (: Pb free) Solder
- · Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

Note: We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

• Flux

Recommended Flux: Specific Gravity \rightarrow 0.82. Type \rightarrow RMA (lower residue, non-cleaning type)


Note: See About Lead Free Solder (Pbf: Pb free) (P.4)

9.4.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

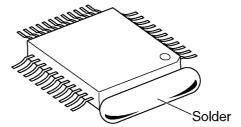

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

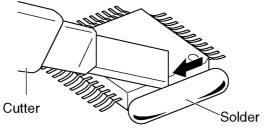

3. While the solder melts, remove it together with the IC pins.

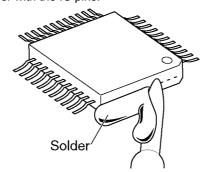

When you attach a new IC to the board, remove all solder left on the land with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.

 
9.4.3. How to Install the IC

1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.




*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.




 3. Solder the pins, sliding the soldering iron in the direction of the arrow.



9.4.4. How to Remove a Solder Bridge

 - 1. Lightly resolder the bridged portion.
- 2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.




10 Disassembly and Assembly Instructions


10.1. Disassembly Instructions

10.1.1. Base Unit

(1) Remove the 4 screws to remove the Cabinet Cover.

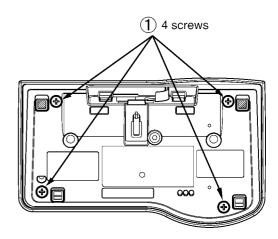


(2) Remove the Solders to remove the Main P.C. Board.

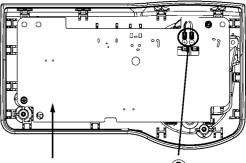


Remove the Main P.C. Board. 2 Solders


10.1.2. Handset

 (1) Remove the 2 screws.




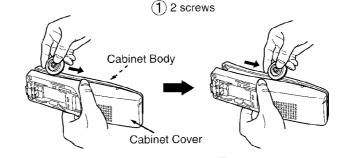


- ③ Likewise, open the other side of the Cabinet.
- 4 Remove the Cabinet Cover by pushing it upward.

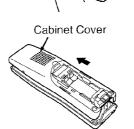

- (5) Remove the Tape and the Solders.
- 6 Remove the 2 screws to remove the 2 Charge Terminals.
- (7) Remove the screw to remove the Main P. C. Board.

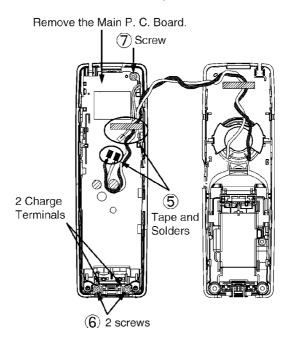

10.2. How to Replace the Handset LCD

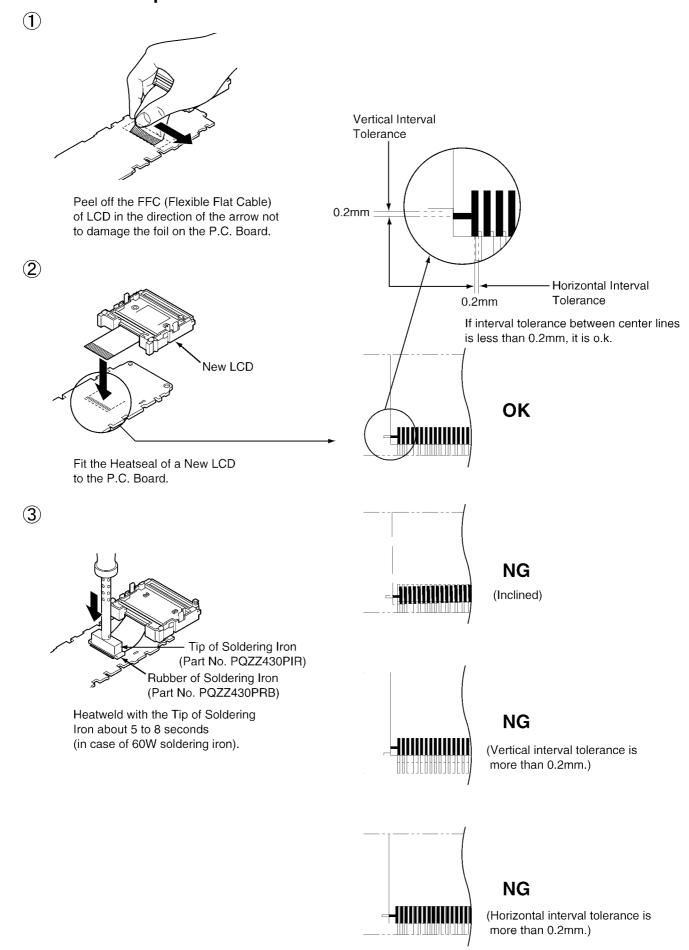

11 Measurements and Adjustments

11.1. The Setting Method of JIG (Base Unit)

11.1.1. Preparation

11.1.1.1. Equipment Required

- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: it must be precise to be able to measure 1 Hz (precision; ±4 ppm). Hewlett Packard, 53131A is recommended.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

11.1.1.2. JIG and PC

- EEPROM serial JIG JIG Cable: PQZZ1CD300E*
- PC which runs in DOS mode
- Batch file CD-ROM for setting: PQZZTG7100BX

Note:


*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

11.1.2. PC Setting

11.1.2.1. Connections

- ①Connect the AC adaptor to CN2 (base unit).
- ②Connect the JIG Cable GND (black).
- 3 Connect the JIG Cable RX (red) and TX (yellow).

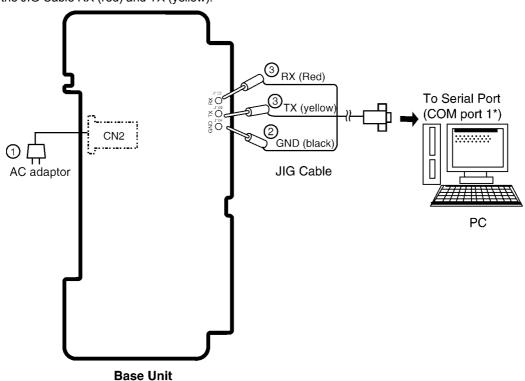

Note:

*: COM port names may vary depending on what your PC calls it.

11.1.2.2. PC Setting

- 1. Insert the Batch file CD-ROM into CD-ROM drive and copy PQZZTG**** folder to your PC (example: D drive).
- 2. Open a window of MS-DOS mode.

<Example for Windows>

On your computer, click [Start], select Programs (All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Or

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

(for Windows 2000/Windows XP/Windows Server 2003)

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PQZZTG****", then press the Enter key.
- **5.** Type "SET_COM=X", then press the Enter key
- (X: COM port number used for the serial connection on your PC).
- **6.** Type "READID", then press the Enter key.
 - •If any error messages appear, change the port number or check the cable connection.
 - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

<Example: correct setting>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG****
- D: ¥PQZZTG**** >SET_COM=X D: ¥PQZZTG****>READID
- 00 52 4F A8 A8
- D: ¥PQZZTG****>DOSKEY
- D: ¥PQZZTG****>_

<Example: incorrect setting>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG****
- D: ¥PQZZTG**** >SET_COM=X
- D: \(\frac{\text{YPQZZTG****}}{\text{READID}}\)
 CreateFile error

ERROR 10: Can't open serial port

D: ¥PQZZTG ****>_

Note:


- "****" varies depending on the country.
- See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address
		"00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E
		98" is written.
setfreq	Adjust Frequency of RFIC	Type "setfreq nn".
hookoff	Off-hook mode on Base	Type "hookoff".
hookon	On-hook mode on Base	Type "hookon".
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45"
		is data to be written.

11.2. Adjustment Standard (Base Unit)

When connecting the Simulator Equipments for checking, please refer to below.

11.2.1. Flow Solder Side View

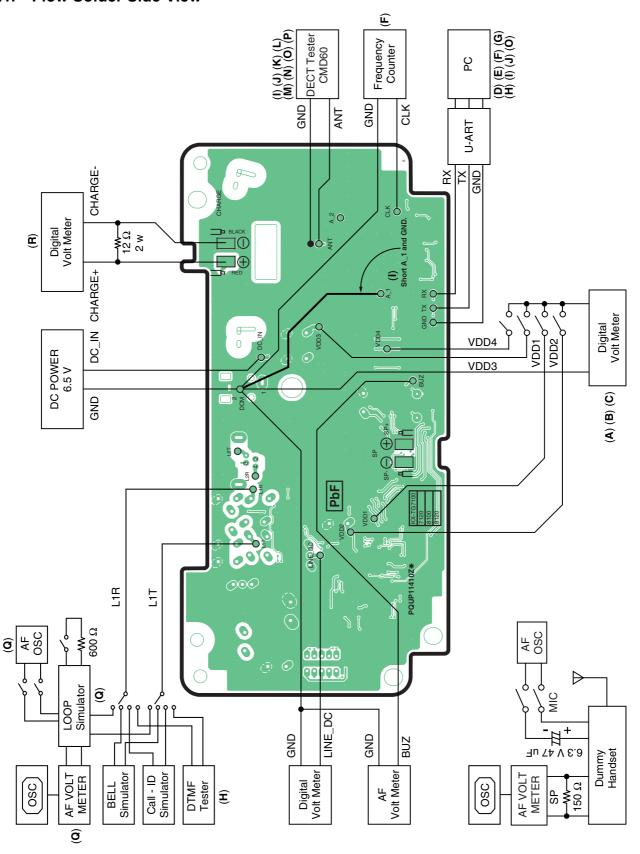

Note:

(A) - (R) is referred to Check Point (Base Unit) (P.33)

11.3. The Setting Method of JIG (Handset)

11.3.1. Preparation

11.3.1.1. Equipment Required

- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: it must be precise to be able to measure 1 Hz (precision; ±4 ppm). Hewlett Packard, 53131A is recommended.
- DC power: it must be able to output at least 1 A current under 2.4 V for Handset.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

11.3.1.2. JIG and PC

• EEPROM serial JIG JIG Cable: PQZZ1CD300E*

· PC which runs in DOS mode.

• Batch file CD-ROM for setting: PQZZTG7100BX

Note:


*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

11.3.2. PC Setting

11.3.2.1. Connections

- ①Connect the DC Power or Battery to J1 and J2 (Handset).
- ②Connect the JIG cable GND (black).
- 3 Connect the JIG cable UTX (yellow) and URX (red).

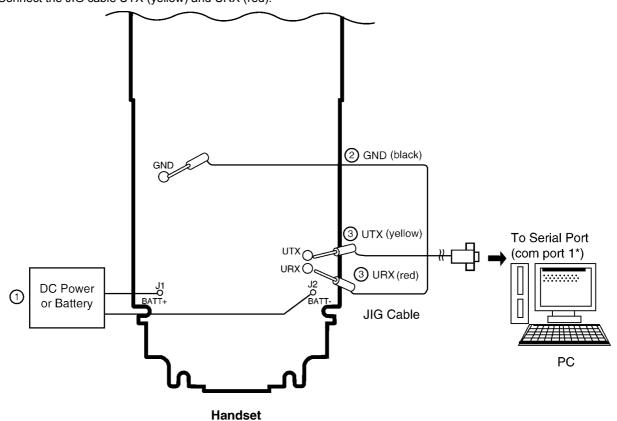

Note:

*: Com port names may vary depending on what your PC calls it.

11.3.2.2. PC Setting

- **1.** Insert the Batch file CD-ROM into CD-ROM drive and copy PQZZTG***** folder to your PC (example: D drive).
- 2. Open a window of MS-DOS mode.

<Example for Windows>

On your computer, click [Start], select Programs

(All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Or

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

(for Windows 2000/Windows XP/Windows Server 2003)

<Example: correct setting>

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PQZZTG*****, then press the Enter key.
- **5.** Type "SET RTX_COM=X", then press the Enter key (X: COM port number used for the serial connection on your PC).
- **6.** Type "READID", then press the Enter key.
 - •If any error messages appear, change the port number or check the cable connection.
 - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG*****
- D: ¥PQZZTG***** >SET RTX_COM=X
- D: ¥PQZZTG*****>READID
- 00 52 4F A8 A8
- D: ¥PQZZTG*****>DOSKEY
- D: ¥PQZZTG*****> _

<Example: incorrect setting>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG*****
- D: ¥PQZZTG***** >SET RTX COM=X
- D: ¥PQZZTG*****>READID CreateFile error

ERROR 10: Can't open serial port

D: ¥PQZZTG*****> _

Note:


- "****" varies depending on the country.
- See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
setfreq	Adjust Frequency of RFIC	Type "setfreq nn".
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

11.4. Adjustment Standard (Handset)

When connecting the Simulator Equipments for checking, please refer to below.

11.4.1. Component View

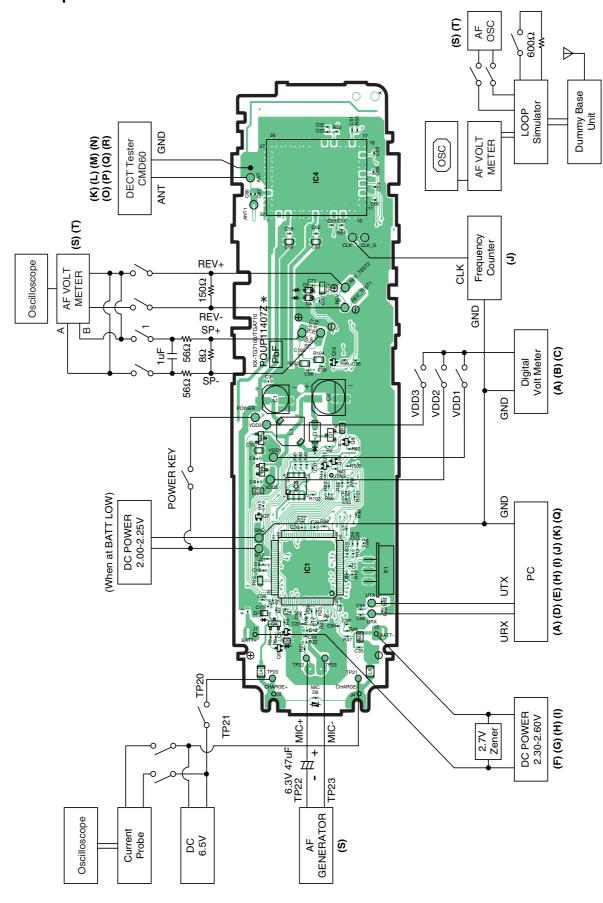

Note:

(A) - (T) is referred to Check Point (Handset) (P.36)

11.5. Things to Do after Replacing IC

Cautions:

Since this page is common to each country, it may not apply to some models in your country. The contents below are the minimum adjustments required for operation.

11.5.1. Base Unit

Before doing the following adjustment, be sure to do PC Setting (P.44) in The Setting Method of JIG (Base Unit).

	IC	Necessary Adjustment		
BBIC (IC7)	Programs for Voice processing, interface for RF and EEPROM	 Default batch file: Execute the command "default.bat". Country version batch file: Execute the command "TG7100XXrevYY.bat". (*1) Clock adjustment: Refer to Check Point (F). (*2) 		
EEPROM (IC5)	Adjustment parameter data (country version batch file, default batch file, etc.)	Change the address "0000" of EEPROM to "00". Default batch file: Execute the command "default.bat". Country version batch file: Execute the command "TG7100XXrevYY.bat". (*1) Clock adjustment: Refer to Check Point (F). (*2)		

Note:

(*1) XX: country code, YY: revision number

"XX" and "YY" vary depending on the country version. You can find them in the batch file, PQZZ- mentioned in **JIG and PC** (P.44).

(*2) Refer to Check Point (Base Unit) (P.33)

11.5.2. Handset

Before doing the following adjustment, be sure to do PC Setting (P.45) in The Setting Method of JIG (Handset).

] 13 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	It batch file: Execute the command "default.bat".
"TGA7 3. Countr "TGA7 4. Clock	It batch file (remaining); Execute the command 710 DEFrevYY.bat". (*3) ry version batch file: Execute the command 710XXrevYY". (*3) adjustment: Refer to Check Point (J). (*4) setting and battery low detection: Refer to Check
EEPROM Adjustment parameter data (IC3) (country version batch file, default batch file, etc.) 1. Chang 2. Defaul 3. Defaul "TGA7 4. Countr "TGA7 5. Clock so	ge the address "0015" of EEPROM to "00". It batch file: Execute the command "default.bat". It batch file (remaining); Execute the command 710 DEFrevYY.bat". (*3) ry version batch file: Execute the command 710XXrevYY". (*3) adjustment: Refer to Check Point (J). (*4) setting and battery low detection: Refer to Check

Note:

(*3) XX: country code, YY: revision number

"XX" and "YY" vary depending on the country version. You can find them in the batch file, PQZZ- mentioned in **JIG and PC** (P44).

(*4) Refer to Check Point (Handset) (P.36)

11.6. RF Specification

11.6.1. Base Unit

Item	Value	Refer to *
TX Power	20 dBm ~ 25 dBm	Check Point (Base Unit) (I)
Modulation	-350 ~ -400/+320 ~ +370 kHz/div	Check Point (Base Unit) (J)
Frequency Offset	-45 kHz ~ +45 kHz	Check Point (Base Unit) (K)
Frequency Drift	< ± 30 kHz / ms	Check Point (Base Unit) (L)
RX Sensitivity	< 1000 ppm	Check Point (Base Unit) (M)
Timing Accuracy	< ± 2.0 ppm	Check Point (Base Unit) (N)
RSSI Level	22 hex ± A hex	Check Point (Base Unit) (O)
Power RAMP	Power RAMP is matching	Check Point (Base Unit) (P)

^{*:} Refer to Check Point (Base Unit) (P.33)


11.6.2. Handset

Item	Value	Refer to **
TX Power	19 dBm ~ 25 dBm	Check Point (Handset) (K)
Modulation	-350 ~ -400/+320 ~ +370 kHz/div	Check Point (Handset) (L)
Frequency Offset	-45 kHz ~ +45 kHz	Check Point (Handset) (M)
Frequency Drift	< ± 30 kHz / ms	Check Point (Handset) (N)
RX Sensitivity	< 1000 ppm	Check Point (Handset) (O)
Timing Accuracy	< ± 2.0 ppm	Check Point (Handset) (P)
RSSI Level	1C hex ± 8 hex (at -81dBm)	Check Point (Handset) (Q)
	25 hex ± 8 hex (at -63dBm)	
Power RAMP	Power RAMP is matching	Check Point (Handset) (R)

^{**:} Refer to Check Point (Handset) (P.36)

11.7. How to Check the Handset Speaker of Receiver

- 1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
- 2. Put the probes at the speaker terminals as shown below.

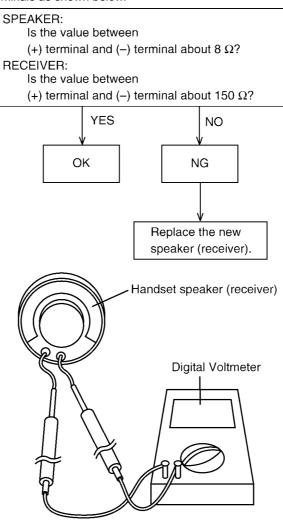

11.8. Frequency Table (MHz)

	E	BASE UNIT		HANDSET
Channel No	Transmit Frequency	Receive Frequency	Transmit Frequency	Receive Frequency
1	1897.344	1897.344	1897.344	1897.344
2	1895.616	1895.616	1895.616	1895.616
3	1893.888	1893.888	1893.888	1893.888
4	1892.160	1892.160	1892.160	1892.160
5	1890.432	1890.432	1890.432	1890.432
6	1888.704	1888.704	1888.704	1888.704
7	1886.976	1886.976	1886.976	1886.976
8	1885.248	1885.248	1885.248	1885.248
9	1883.520	1883.520	1883.520	1883.520
10	1881.792	1881.792	1881.792	1881.792

Note:

Channel No. 10: In the Test Mode on Base Unit and Handset.

12 Schematic Diagram

12.1. For Schematic Diagram

12.1.1. Base Unit (Schematic Diagram (Base Unit))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.


2. The schematic diagram may be modified at any time with the development of new technology.

12.1.2. Handset (Schematic Diagram (Handset))


Notes

- 1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
- 2. The schematic diagram may be modified at any time with the development of new technology.

12.2. Schematic Diagram (Base Unit)

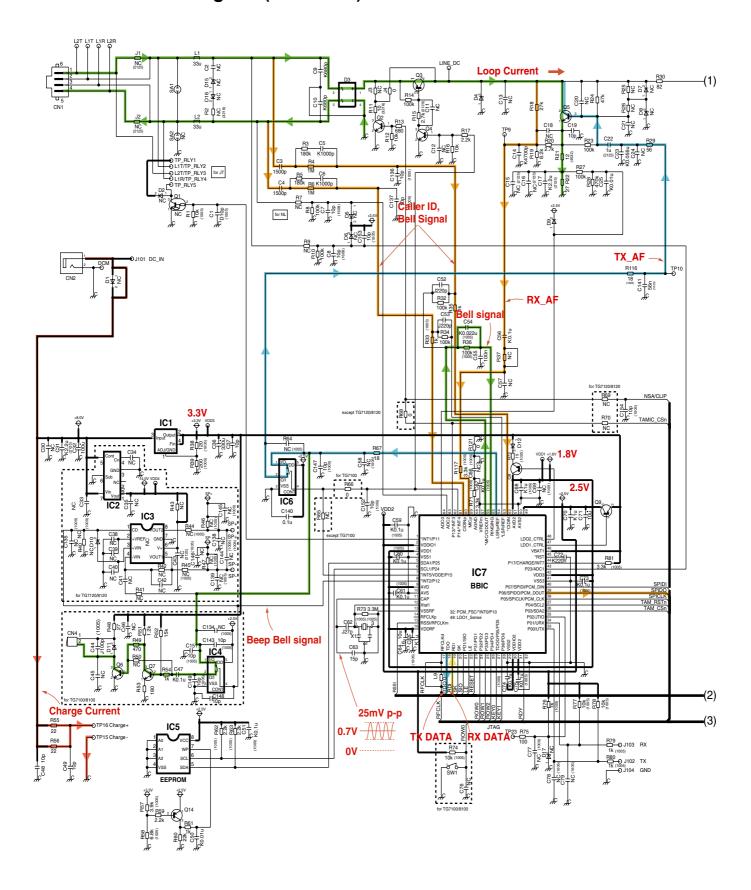


NC: No Components

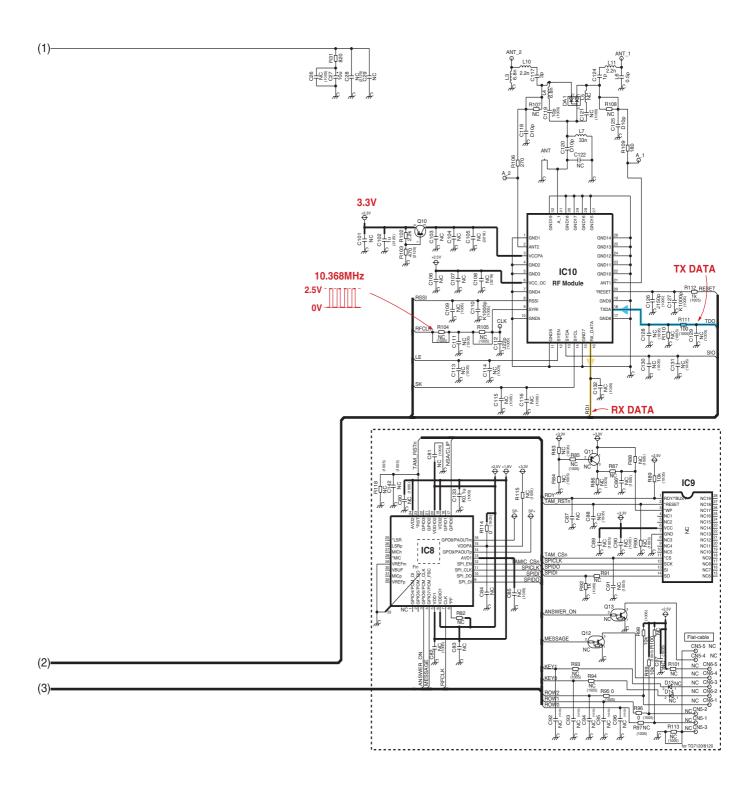


NC: No Components KX-TG7100BX SCHEMATIC DIAGRAM (Base Unit)

12.3. Schematic Diagram (Handset)

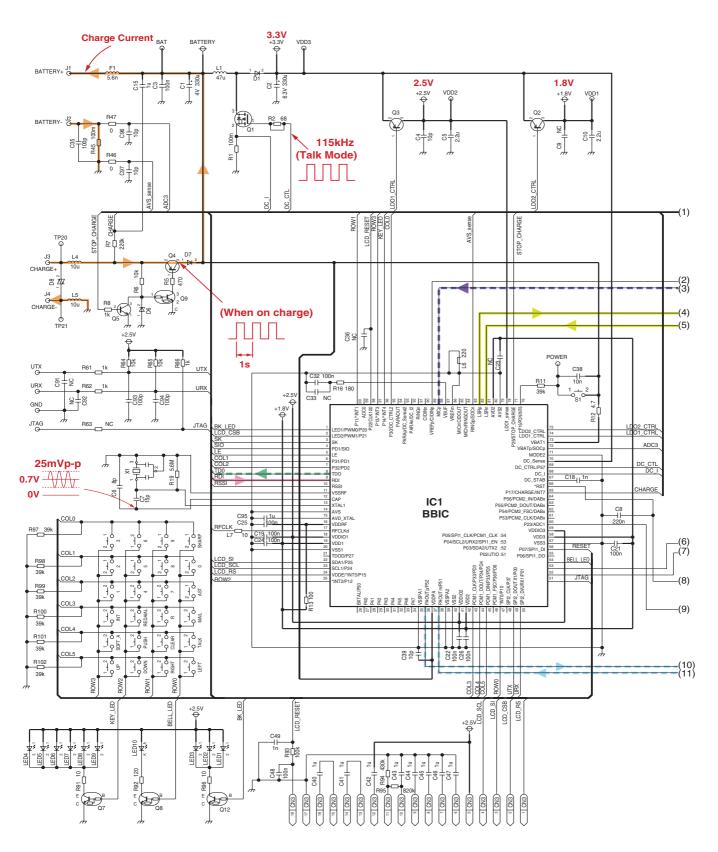

NC: No Components

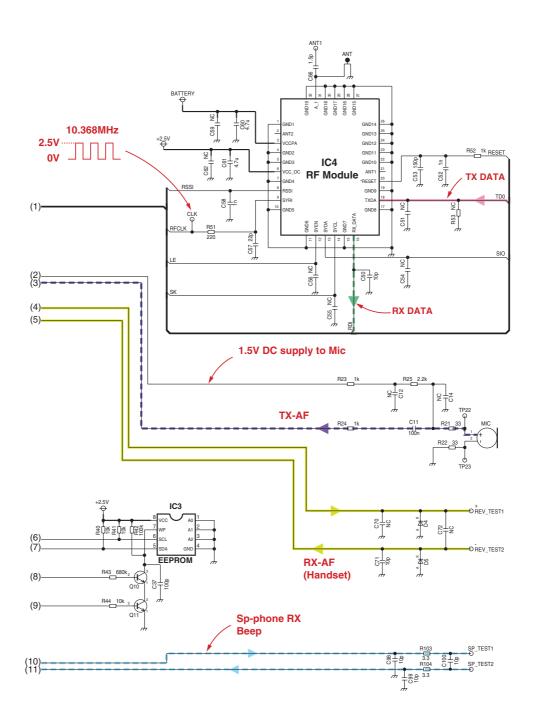


NC: No Components KX-TGA710 SCHEMATIC DIAGRAM (Handset) KX-TG7100BXS/KX-TG7100BXT/KX-TGA710CXS/KX-TGA710CXT

Memo


13 Printed Circuit Board

13.1. Circuit Board (Base Unit)

13.1.1. Component View

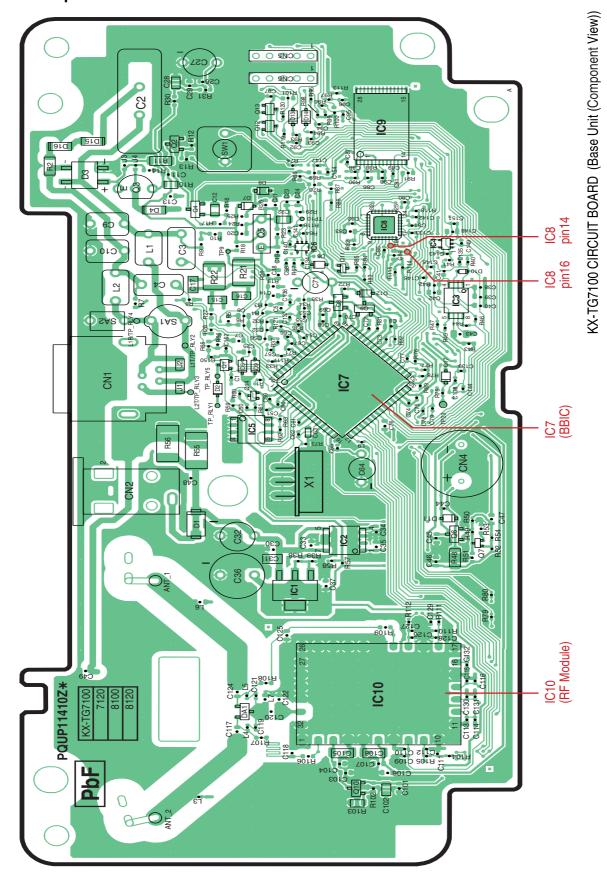


13.1.2. Flow Solder Side View

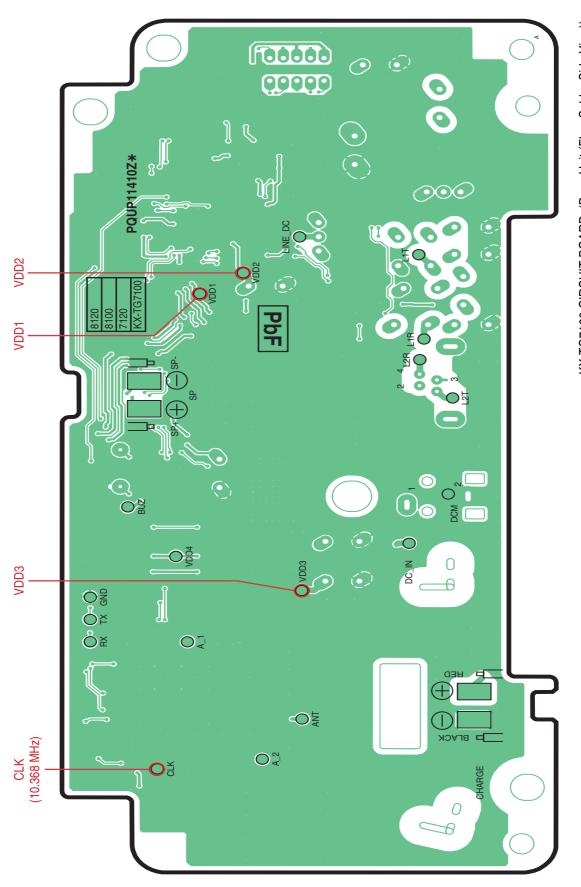


KX-TG7100 CIRCUIT BOARD (Base Unit (Flow Solder Side View))

13.2. Circuit Board (Handset)

13.2.1. Component View

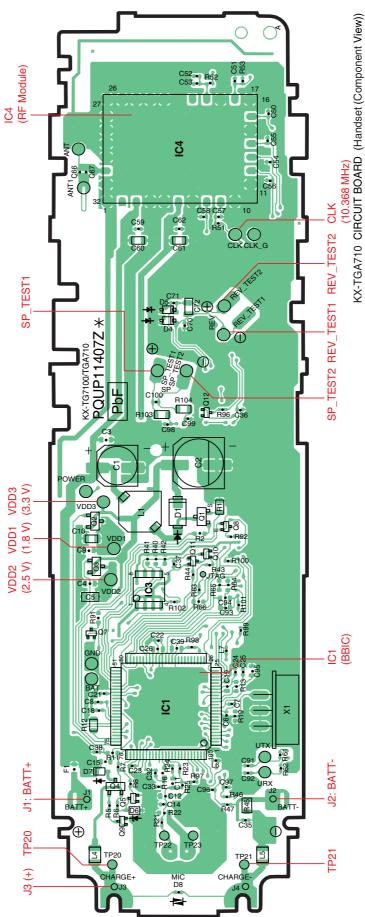

13.2.2. Flow Solder Side View

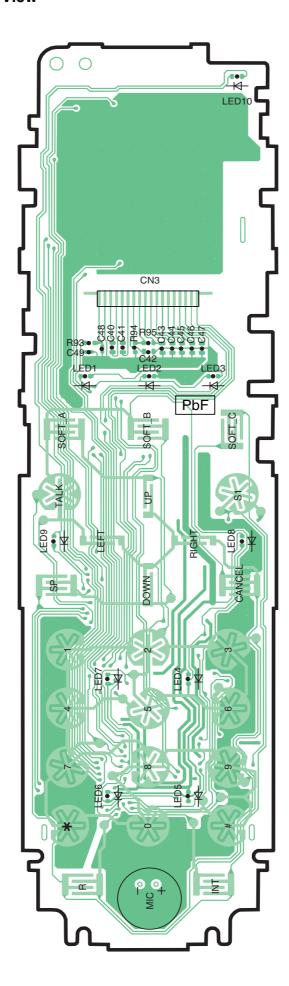

KX-TGA710 CIRCUIT BOARD (Handset (Flow Solder Side View))

14 Appendix Information of Schematic Diagram

14.1. CPU Data (Base Unit)

14.1.1. IC7 (BBIC)

Pin No.	Description	I/O	Connection	at Normal mode	at Reset mode
1	*INT1n/ P11	D,O	RLY	0	I-PU
-	VDDIO1	-	-	-	-
	VDD1		_	-	-
	VSS1	-	-	-	-
	SDA1/P25	D,I/O	SDA	I/O	
	SCL1/P24	D,O	SCL	0	<u>'</u>
7	*INT5/VDDE/P15	D,I	NC NC	Ī	I-PU
8	*INT2/P12	D,O	P1[2]	O-H	I-PU
-	AVD	- -	-	O-II -	-
10	AVS	-	-	-	<u> </u>
-	CAP	A,I	- CAP	-	- T
	Xtal1		Xtall	ı I	<u> </u>
	VSSRF	A,I -	- Aldii	•	-
	RFCLKp		- NC	-	- Hi-Z
		A,O		0	
	RSSI / RFCLKm	A,I	RSSI	l	Hi-Z
	VDDRF	-	-	-	-
	RFCLKd	D,O	RFCLKd	0	O-L
	TDO	A,O	TDO	0	-
	RDI	D,I	RDI	I	<u> </u>
	SK	D,I/O	SK	-	O-L
	PD1 / SIO	D,I/O	SIO	-	I-PD
	LE	D,I/O	LE	0	O-H
	P31 / PD1	D,I/O	RESET	0	I-PD
24	P32 / PD2	D,I/O	ROW0	I	I-PD
25	P33 / PD3	D,I/O	ROW1	I	I-PD
	P34 / PD4	D,I/O	ROW2	I	I-PD
27	TDOD/ P35 / PD5	D,I/O	NC	0	I-PD
28	P36 / PD6	D,O	NC	0	I-PD
29	VSS2	-	-	-	-
30	VDDIO2	-	-	-	-
31	VDD2	-	-	-	-
32	PCM_FSC / INT0 / P10	D,I/O	RDY	I	I-PU
33	P00 / UTX	D,I/O	UTX	0	I-PU
34	P01 / URX	D,I/O	URX	I	I-PU
35	P02 / JTIO	D,I/O	JTIO	0	I-PU
	P03 / SDA2	D, I/O	TAM_CSn	0	I-PU
	P04 / SCL2	D,O	TAM_RSTn	0	I-PU
	P05 / SPICLK/PCM_CLK	D,I/O	SPICLK	0	I-PU
	P06/ SPIDO/ PCM_DOUT	D,I/O	SPIDO	0	I-PU
40	P07 /SPIDI/ PCM_DIN	D,I/O	SPIDI	0	I-PU
	VSS3	-	-	-	-
	VDD3	-	-	-	-
	P23 / ADC1		ADC1		
	P17 / CHARGE / INT7	<u> </u>	CHARGE	<u>'</u>	I-PD
45	*RST	'	RSTn	1	I-PU
	VBAT1	A,I	VBAT1	i I	I
	LDO1_CTRL	D,O	LDO1_CTRL	0	O-H
	LDO1_CTRL	D,O	LDO2_CTRL	0	O-H
	LDO1_Sense	D,I	LDO1_Sense	1	0-11 O-L
	AVS2	- -	- LDO1_Selise	-	- -
	AVD2	<u>-</u>	-	-	-
52	*CIDIN		- CIDINn	-	- I
52	*LSR / REF	A,I	REF	0	0
		A,O			
	LSRp / REF	A,O	LSRp	0	0
	RINGING	A,I	RINGING	I	<u> </u>
56	*MIC / CIDOUT	A,I	CIDOUT	0	0
	VREFm	-	-	-	-
	AGND	A,O	AGND	0	0
59	MICp	A,I	MICp	I	I

KX-TG7100BXS/KX-TG7100BXT/KX-TGA710CXS/KX-TGA710CXT

Pin No.	Description	I/O	Connection	at Normal mode	at Reset mode
60	CIDINp	A,I	CIDINp		I
61	P14 / *INT4	D,O	HOOK	0	I
62	PULSE_CTRL	D,O	Q2_ON	-	Q2_OFF
63	ADC2	A,I	ADC2		
64	ADC0	A,I	ADC0	I	I

14.2. CPU Data (Handset)

14.2.1. IC1 (BBIC)


Pin No		I/O	Connection	at Normal	at Reset mode
	LED1/PWM0/P2[0]	D,O	LCD_BK	0	I-PU
2	LED2/PWM1/P2[1]	D,O	LCD_CSB	0	I-PU
3	SK	D,O	SK	0	O-L
4	SIO	D,I/O	SIO	I/O	I-PD
5	LE	D,I/O	LE	0	O-L
6	P3[1]/PD1	D,O	COL1	I/O	I-PD
	P3[2]/PD2	D,O	COL2	I/O	I-PD
8	TDO	A,O	TDO	0	O-L
9	RDI	D,I	RDI	1	
10	RSSI/RFCLKm	A,I	RSSI	1	i i
11	VSSRF	S	VSSRF	S	-
12	CAP	A,I	CAP	ı	
13	Xtal1	A,I	Xtal1	'	
14	AVS	S	AVS	S	-
15	AVD_XTAL	A,I	AVD_XTAL	I	l
	VDDRF	S	VDDRF	S	-
	RFCLKd	D,O	RFCLK	0	O-L
	VDDIO	S	VDDIO	S	-
19	VDD	S	VDD	S	-
20	VSS	S	VSS	S	-
21	TDOD/P2[7]	D,O	NC	0	I-PU
22	SDA1/P2[5]	D,IO	LCD_SI	0	I
23	SCL1/P2[4]	D,IO	LCD_SCL	0	I
	INT5n/P1[5]	D,IO	LCD_RS	0	O-H
	INT2n/P1[2]	D,IO	ROW2	1	I-PU
	BXTAL/P5[0]	D,IO	NC	0	I-PD
	P4[0]	D,IO	NC NC	0	I-PD
28	P4[1]	D,IO	NC NC	0	I-PD
29	P4[2]	D,IO D,IO	NC NC	0	I-PD
		D,IO	NC NC		I-PD
30	P4[3]			0	
	P4[4]	D,IO	NC	0	I-PD
	P4[5]	D,IO	NC	0	I-PD
33	P4[6]	D,IO	NC	0	I-PD
	P4[7]	D,IO	NC	0	I-PD
	VSSPA	S	VSSPA	S	-
	PAOUTp/P5[2]	A,O	PAOUTp	0	O-L
	VDDPA	S	VDDPA	S	-
38	PAOUTp/P5[1]	A,O	PAOUTp	0	O-L
39	VSSPA	S	VSSPA	S	-
40	VSS	-	VSS	S	-
41	VDDIO	-	VDDIO	S	-
42	VDD	-	VDD	-	_
43	PCM1_CLK/P3[3]/PD3	D,O	COL3	I/O	I
44	PCM1_DOUT/P3[4]/PD4	D,O	COL4	1/0	
45	PCM1_DIN/P3[5]/PD5	D,O	COL4	1/0	'
	PCM1_FSC/P3[6]/PD6	D,O	NC NC	0	
47	INT0n/P1[0]	D,U	ROW0	I	I-PU
48	SPI2_CLK/P3[7]	D,O	NC LITY	0	I-PD
49	SPI2_DO/P0[0]/TRAX	D,O	UTX	0	I-PU
50	SPI2_DI/P0[1]/URX	D,O	URX	1	I-PU
	P0[2]/JTIO	D,O	JTAG	I/O	I-PU
	P0[3]/SDA2/UTX2	D,IO	EEP_SDA	I/O	I-PU
53	P0[4]/SCL2/URX/ SPI1_EN	D,O	EEP_SCL	0	I-PU
54	P0[5]/SPI1_CLK	D,O	BELL_LED	0	I-PU
	P0[6]/SPI1_DO	D,O	NC NC	0	I-PU
56	P0[7]/SPI1_DI	D,O	RF_RESET	0	I-PU
57	VSS	S	VSS	S	-
58	VDD	S	VDD	S	-
59	VDDIO	S	VDDIO	S	-
	P2[3]/ADC1	D,O	EEP_WP	0	-
61	P5[3]/PCM1_CLK	D,O D,O	NC	0	I-PU
01	L 2[3]/LCINI I CFK	ט,ט	INC	ı	I I-PU

KX-TG7100BXS/KX-TG7100BXT/KX-TGA710CXS/KX-TGA710CXT


Pin No	Description	I/O	Connection	at Normal	at Reset mode
62	P5[4]/PCM1_FSC	D,O	NC	0	I-PU
	P5[5]/PCM1_DOUT	D,O	NC	0	I-PU
64	P5[6]/PCM1_DIN	D,O	NC	0	I-PU
65	P1[7]/CHARGE/INT7n	D,I	CHARGE	I	I-PD
66	RSTn	D,I/O	RSTn	0	I-PU
67	DC_stab	S	DC_stab	S	-
68	DC_I	A,I	DC_I	1	
69	DC_CTRL	A,O	DC_CTRL	0	O-PD
70	DC_Sence	A,I	DC_Sence	1	
71	MODE2	A,I	MODE2	I	
72	VBATp/SOCp	A,I	ADC3	I	
73	VBAT1	A,I	VBAT1	1	
74	LDO1_CTRL	A,O	LDO1_CTRL	0	
75	LDO2_CTRL	A,O	LDO2_CTRL	0	
	P1[6]/PON/INT6n	D,I	POWER_KEY	1	I-PD
77	P2[6]/STOP_CHARGE	A,O	stop_charge	0	0
78	LDO1_Sence	A,I	LDO1_Sence	1	
79	AVS2	S	AVS2	S	-
80	AVD2	S	AVD2	S	-
81	LSRn	A,O	LSRn	0	0
82	LSRp	A,O	LSRp	0	0

14.3. Terminal Guide of the ICs, Transistors and Diodes

14.3.1. Base Unit

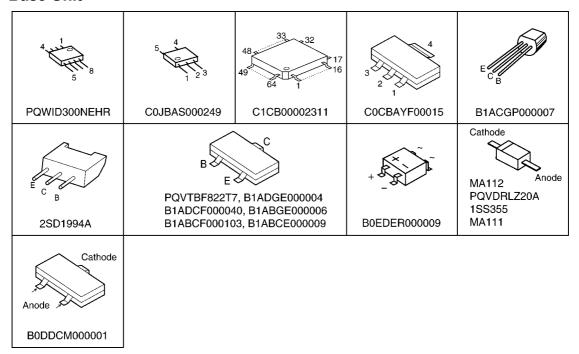

14.3.2. Handset

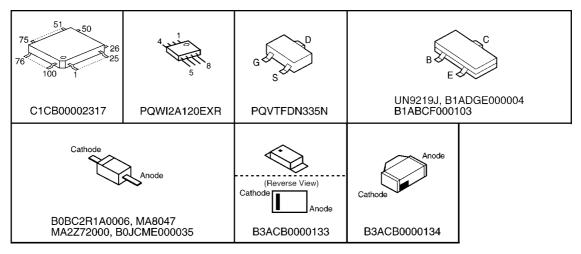


Α


В

15 Exploded View and Replacement Parts List

15.1. Cabinet and Electric Parts (Base Unit)

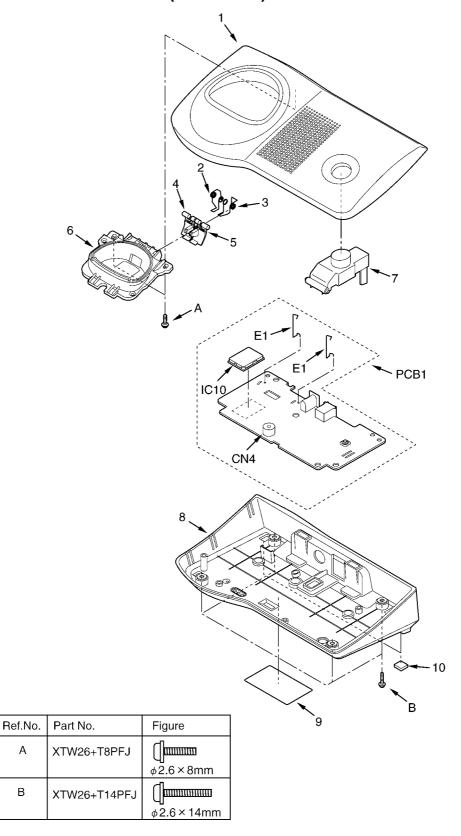


15.2. Cabinet and Electric Parts (Handset)

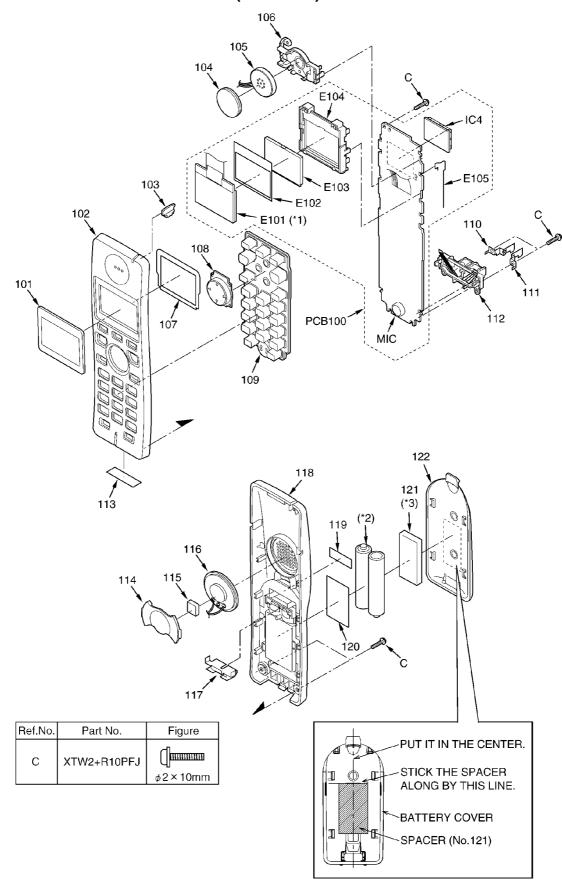

Note:

- (*1) This cable is fixed by welding. Refer to **How to Replace the Handset LCD** (P.43).
- (*2) The rechargeable Ni-MH battery HHR-4EPT (Capacity: up to 750mAh) is available through sales route of Panasonic.
- (*3) Attach the spacer (No. 121) to the exact location described above.

15.3. Accessories and Packing Materials

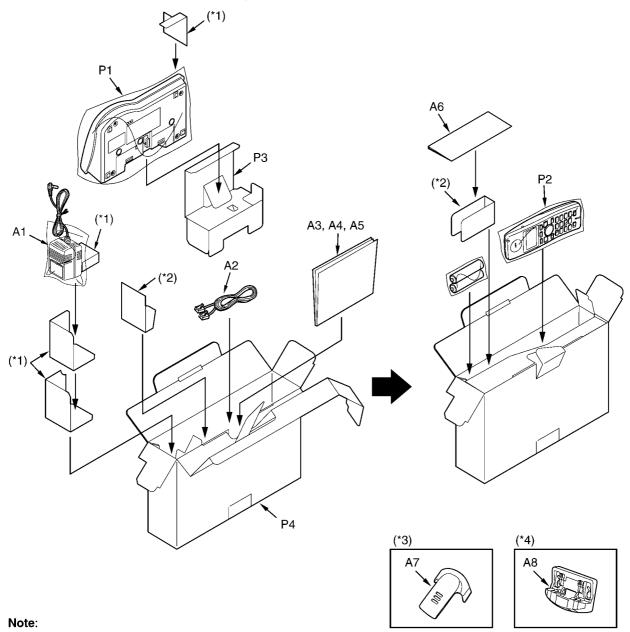

- (*1) These pads are pieces of Ref No. P3 (CUSHION).
- (*2) These pads are pieces of Ref No. P4 (GIFT BOX).
- (*3) for Service

Model No. for A7 (BELT CLIP) through sales route of Panasonic is KX-TCA718EXB/EXH.

(*4) for Service

Model No. for A8 (WALL MOUNT) through sales route of Panasonic is KX-TCA717EXH...

15.4. Replacement Part List

1. RTL (Retention Time Limited)

Note:

The marking (RTL) indicates that the Retention Time is limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

2. Important safety notice

Components identified by the \triangle mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

- 3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.
- 4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.
- 5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) K=1000 Ω , M=1000k Ω All capacitors are in MICRO FARADS (μ F)P= $\mu\mu$ F

*Type & Wattage of Resistor

Type

Wattage

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W

^{*}Type & Voltage Of Capacitor Type

	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic ECQE,ECQV,ECQG:Polyester
•	ECEA,ECST,EEE:Electlytic ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type		Oth	ers	
1H:50V		0F:3.15V	0J	:6.3V	1V	:35V
2A:100V		1A:10V	1A	:10V	50,1I	H:50V
2E:250V		1V:35V	1C	:16V	1J	:16V
2H:500V		0J:6.3V	1E,25	5:25V	2A	:100V

15.4.1. Base Unit

15.4.1.1. Cabinet and Electrical Parts

Ref.	Part No.	Part Name & Description	Remarks
1	PQKM10719Z1	CABINET BODY (for KX-TG7100BXS)	PS-HB
1	PQKM10719Z2	CABINET BODY (for KX-TG7100BXT)	PS-HB
2	PQJT10241Z	CHARGE TERMINAL (L)	
3	PQJT10242Y	CHARGE TERMINAL (R)	
4	PQKE10454Z1	HOLDER, CHARGE TERMINAL (L)	POM-HB
5	PQKE10455Z1	HOLDER, CHARGE TERMINAL (R)	POM-HB
6	PQKE10452Z1	CASE, CHARGE TERMINAL (for KX-TG7100BXS)	PS-HB

Ref. No.	Part No.	Part Name & Description	Remarks
6	PQKE10452Z2	CASE, CHARGE TERMINAL (for KX-TG7100BXT)	PS-HB
7	PQBC10468Z1	BUTTON, LOCATOR	ABS-HB
8	PQKF10708Z1	CABINET COVER (for KX- TG7100BXS)	PS-HB
8	PQKF10708Z2	CABINET COVER (for KX- TG7100BXT)	PS-HB
9	PQGT18790Z	NAME PLATE (for KX-TG7100BXS)	
9	PQGT18790X	NAME PLATE (for KX-TG7100BXT)	
10	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	

15.4.1.2. Main P.C.Board Parts

Note

(*1) When replacing IC5 and IC7, data need to be written to them with PQZZTG7100BX. Refer to **Base Unit** (P.50) of **Things to Do after Replacing IC**.

Ref.	Part No.	Part Name & Description	Remarks
PCB1	PQWPG7100BXH	MAIN P.C.BOARD ASS'Y (RTL)	
		(ICs)	
IC1	C0CBAYF00015	IC	
IC4	C0JBAS000249	IC	
IC5	PQWID300NEHR	IC (EEPROM) (*1)	
IC6	C0JBAS000249	IC	
IC7	C1CB00002311	IC (BBIC) (*1)	S
		(TRANSISTORS)	
Q2	B1ABCE000009	TRANSISTOR (SI)	
Q3	B1ACGP000007	TRANSISTOR(SI)	
Q4	PQVTBF822T7	TRANSISTOR (SI)	
Q5	2SD1994A	TRANSISTOR (SI)	
Q6	B1ABGE000006	TRANSISTOR (SI)	
Q7	B1ABCF000103	TRANSISTOR (SI)	
Q8	B1ADGE000004	TRANSISTOR (SI)	
Q9	B1ADGE000004	TRANSISTOR (SI)	
Q10	B1ADGE000004	TRANSISTOR (SI)	
Q14	B1ADCF000040	TRANSISTOR (SI)	
		(DIODES)	
D3	B0EDER000009	DIODE(SI)	
D4	PQVDRLZ20A	DIODE(SI)	S
D9	188355	DIODE(SI)	S
D11	MA111	DIODE(SI)	S
D12	MA112	DIODE(SI)	S
DA1	B0DDCM000001	DIODE(SI)	
		(COILS)	
L1	PQLQXF330K	COIL	S
L2	PQLQXF330K	COIL	S
L3	MQLRF6N8JFB	COIL	
L4	MQLRF6N8JFB	COIL	
L7	PQLQR2M33NKT	COIL	S
L10	ELJRF2N2ZFB	COIL	S
L11	ELJRF2N2ZFB	COIL	S
CDTI	WOT D100D00E3	(JACKS)	
CN1	K2LB102B0053	JACK	S
CN2	K2ECYB000001	JACK (WARTEROR)	S
SA1	TOT BOOODOO	(VARISTOR)	
DAI	J0LF00000026	VARISTOR (SURGE ABSORBER) (RESISTORS)	
R1	ED.T2CE.T102	10K	
R3	ERJ2GEJ103 ERJ3GEYJ184	180K	1
R4	ERJ3GEYJ105	180K	1
R5	ERJ3GEYJ184	180K	+
R6		1M	1
R8	ERJ3GEYJ105 ERJ3GEYJ104	100K	+
R10	ERJ3GEYJ104	100K	+
R11	PQ4R18XJ100	10	s
R12	ERJ3GEYJ103	10K	-
R13	ERJ3GEYJ681	680	+
R14	ERJ3GEYJ104	100K	+
	PQ4R10XJ272	2.7K	s
RIS	- A-WIOVO7 / 7	2.72	15
R15	ER.T3GEV.T103	10K	
R15 R16 R17	ERJ3GEYJ103 ERJ3GEYJ222	10K 2.2K	

KX-TG7100BXS/KX-TG7100BXT/KX-TGA710CXS/KX-TGA710CXT

R19	Ref.	Part No.	Part Name & Description	Remarks
R21 ERJ12YJ120 12 R22 RRJ12WJ770 27 R23 RRJ12WJ770 100K R24 RRJ3GEYJ104 100K R24 RRJ3GEYJ104 100K R27 ERJ3GEYJ104 100K R28 RRJ3GEYJ104 100K R29 RRJ3GEYJ820 82 R30 ERJ3GEYJ820 82 R31 RRJ3GEYJ821 820 R32 RRJ3GEYJ104 100K R33 ERJ3GEYJ104 100K R33 ERJ3GEYJ102 1K R34 ERJ3GEYJ102 1K R35 ERJ3GEYJ102 1K R36 ERJ3GEYJ102 1C R37 ERJ3GEYJ102 1C R38 ERJ3GEYJ102 1C R39 ERJ3GEYJ102 1C R39 ERJ3GEYJ102 1C R39 ERJ3GEYJ102 1C R39 ERJ3GEYJ104 100K R38 ERJ2RKF1200 120 R39 ERJ3GEYJ104 100K R38 ERJ2RKF1200 120 R39 ERJ3GEYJ104 100K R38 ERJ2RKF1200 120 R39 ERJ3GEYJ102 1C R51 ERJ3GEYJ102 1C R52 ERJ3GEYJ102 1C R52 ERJ3GEYJ102 1C R53 ERJ3GEYJ102 1C R54 ERJ3GEYJ102 1C R55 ERJJWJ220 22 R56 ERJJWJ220 22 R56 ERJJWJ220 22 R56 ERJJWJ220 22 R57 ERJ3GEJ302 1C R60 ERJ3GEYJ202 1C R61 ERJ3GEYJ202 1C R61 ERJ3GEYJ00 1C R61 ERJ3GEYN00 0 R67 ERJ2GEJ103 1C R62 ERJ3GEYN00 0 R71 ERJ3GEJ332 3.3K R74 ERJ3GEJ333 1.3K R74 ERJ3GEJ333 1.3K R75 ERJ3GEJ333 1.3K R77 ERJ3GEJ303 10K R77 ERJ3GEJ303 10K R77 ERJ3GEJ303 10K R77 ERJ3GEJ103 10K R77 ERJ3GEJ103 10K R79 ERJ3GEJ000 0 R71 ERJ3GEJ332 3.3K R81 ERJ3GEJ332 3.3K R81 ERJ3GEJ332 3.3K R81 ERJ3GEJ332 3.3K R81 ERJ3GEJ3GEJ000 0 R98 ERJ3GEJ000 0 R98 ERJ3GEJ000 0 R99 ERJ3GEJ000 0 R90 ERJ3GEJ000 0 R91 ERJ3GEJ000 0 R91 ERJ3GEJ000 0 R91 ERJ3GEJ000 0 R91 ERJ3GEJ000 0 R94 ERJ3GEJ000 0 R95 ERJ3GEJ000 0 R96 ERJ3GEJ000 0 R97 ERJ3GEJ000 0		ERJ3GEYJ822	8.2K	
R21 ERJ12YJ120 12 R22 RRJ12WJ770 27 R23 RRJ3GEYJ104 100K R24 ERJ3GEYJ104 100K R26 RRJ3GEYJ104 100K R27 ERJ3GEYJ104 100K R28 RRJ3GEYJ104 100K R29 ERJ3GEYJ104 100K R29 ERJ3GEYJ104 100K R29 ERJ3GEYJ104 100K R30 ERJ3GEYJ102 1E R31 ERJ3GEYJ102 1K R31 ERJ3GEYJ102 1K R33 ERJ3GEYJ102 1K R33 ERJ3GEYJ102 1K R34 ERJ3GEYJ102 1K R35 ERJ3GEYJ102 1C R38 ERJ3GEYJ102 1C R38 ERJ2RF1200 120 R39 ERJ3GEYJ102 1C R39 ERJ3GEYJ102 1C R39 ERJ3GEYJ102 1C R51 ERJ3GEYJ102 1C R51 ERJ3GEYJ102 1C R51 ERJ3GEYJ102 1C R52 ERJ3GEYJ103 1C R53 ERJ3GEYJ102 1C R54 ERJ3GEYJ102 1C R55 ERJ3GEYJ102 1C R55 ERJ3GEYJ102 1C R56 ERJ3GEYJ102 1C R57 ERJ3GEYJ102 1C R57 ERJ3GEJ102 1C R60 ERJ3GEJ102 1C R61 ERJ3GEJ102 1C R62 ERJ3GEJ102 1C R63 ERJ3GEJ102 1C R64 ERJ3GEJ102 1C R67 ERJ3GEJ102 1C R67 ERJ3GEJ102 1C R67 ERJ3GEJ102 1C R68 ERJ3GEJ102 1C R69 ERJ3GEJ102 1C R60 ERJ3GEJ102 1C R61 ERJ3GEJ102 1C R62 ERJ3GEJ102 1C R63 ERJ3GEYORO 0 R67 ERJ3GEJ103 1C R77 ERJ3GEJ103 1C R77 ERJ3GEJ103 1C R77 ERJ3GEJ103 1C R78 ERJ3GEJ103 1C R79 ERJ3GEJ103 1C R71 ERJ3GEJ103 1C R71 ERJ3GEJ103 1C R71 ERJ3GEJ103 1C R71 ERJ3GEJ103 1C R72 ERJ3GEJ103 1C R73 ERJ3GEJ103 1C R74 ERJ3GEJ103 1C R75 ERJ3GEJ000 0 R71 ERJ3GEJ103 1C R77 ERJ3GEJ103 1C R79 ERJ3GEJ103 1C R79 ERJ3GEJ000 0 R71 ERJ3GEJ000 0 R				
R22 ERJ12YJ270 27 R23 RRJ3GRYJ104 100K R24 RRJ3GRYJ104 100K R27 ERJ3GRYJ104 100K R28 ERJ3GRYJ104 100K R28 ERJ3GRYJ104 100K R29 RRJ2GRJ560X 56 R30 RRJ3GRYJ820 82 R31 ERJ3GRYJ102 1K R31 ERJ3GRYJ102 1K R33 ERJ2GRYJ102 1K R34 ERJ3GRYJ102 1K R35 ERJ3GRYJ102 1K R36 ERJ3GRYJ102 1K R37 ERJ3GRYJ104 100K R37 ERJ3GRYJ102 1K R38 ERJ3GRYJ102 1K R38 ERJ3GRYJ102 1C R39 ERJ3GRYJ102 1C R49 ERJ3GRYJ102 1C R51 ERJ3GRYJ112 1.2K R52 ERJ2GRJ513 15K R53 ERJ3GRYJ112 1.2K R52 ERJ2GRJ153 15K R53 ERJ3GRYJ102 1K R54 ERJ2GRJ102 1K R55 ERJ1WJ220 22 R56 ERJ1WJ220 22 R56 ERJ1WJ220 22 R57 ERJ2GRJ53 15K R59 ERJ3GRYJ22 2.2K R60 ERJ2GRJ223 22K R61 ERJ2GRJ021 1K R62 ERJ3GRY000 0 R67 ERJ2GRJ00 1 R R62 ERJ3GRY000 0 R67 ERJ2GRJ00 1 R R63 ERJ2GRJ02 1 R R64 ERJ3GRY000 0 R71 ERJ2GRJ32 2.2K R65 ERJ3GRY000 0 R71 ERJ2GRJ33 3.3K R72 ERJ2GRJ33 1.0K R75 ERJ2GRJ33 1.0K R75 ERJ2GRJ33 1.0K R77 ERJ2GRJ33 1.0K R77 ERJ2GRJ33 1.0K R78 ERJ2GRJ03 1.0K R79 ERJ2GRJ103 1.0K R71 ERJ2GRJ103 1.0K R71 ERJ2GRJ103 1.0K R72 ERJ2GRJ103 1.0K R73 ERJ2GRJ103 1.0K R74 ERJ2GRJ103 1.0K R75 ERJ2GRJ000 0 R76 ERJ2GRJ000 0 R771 ERJ2GRJ000 0 R771 ERJ2GRJ000 0 R78 ERJ2GRJ000 0 R79 ERJ2GRJ000 0 R71				
R23				
R24 ERJ3GEYJ473 47K R27 RRJ3GEYJ104 100K R28 RRJ3GEYJ474 470K R29 ERJ2GEJ560X 56 R30 ERJ3GEYJ620 82 R31 RRJ3GEYJ104 100K R33 RRJ3GEYJ102 1K R34 RRJ3GEYJ102 1K R35 RRJ3GEYJ102 1K R36 ERJ3GEYJ102 1K R36 ERJ3GEYJ102 1K R37 RRJ3GEYJ102 1K R37 RRJ3GEYJ102 1K R38 RRJ2RFJ200 120 R39 ERJ2RFJ200 120 R39 ERJ2RFJ200 120 R39 ERJ3GEYJ104 100K R31 RRJ3GEYJ104 100K R38 RRJ2RFJ200 120 R39 ERJ2RFJ201 120 R39 ERJ2RFJ201 120 R39 ERJ2RFJ201 100 R40 ERJ3GEYJ121 1.2K R51 ERJ3GEYJ112 1.2K R52 ERJ3GEYJ122 1.2K R52 ERJ3GEYJ181 180 R54 ERJ3GEYJ181 180 R55 ERJ1WYJ220 22 R57 ERJ3GEYJ181 180 R58 ERJ2GEJ593 3.9K R58 ERJ2GEJ593 3.9K R58 ERJ2GEJ593 22K R60 ERJ2GEJ223 22K R60 ERJ2GEJ223 22K R61 ERJ2GEJ102 1K R62 ERJ2GEJ02 1K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ02 1K R66 ERJ3GEY000 0 R67 ERJ2GEJ100 1K R68 ERJ3GEY000 0 R67 ERJ2GEJ100 1K R68 ERJ3GEY000 0 R67 ERJ2GEJ101 100 R71 ERJ2GEJ33 3.3K R72 ERJ2GEJ103 10K R73 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R76 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R71 ERJ2GEJ103 10K R72 ERJ2GEJ000 0 R73 ERJ2GEJ000 0 R74 ERJ2GEJ000 0 R75 ERJ2GEJ000 0 R76 ERJ2GEJ000 0 R77 ERJ2GEJ000 0 R77 ERJ2GEJ000 0 R78 ERJ2GEJ000 0 R79 ERJ2GEJ000 0 R70 ERJ2GEJ000 0 R70 E				
R27				
R28				
R29 ERJ2GEJ560X 56 R30 ERJ3GEYJ820 82 R31 ERJ3GEYJ811 820 R32 ERJ3GEYJ104 100K R33 ERJ2GEJ102 1K R34 ERJ3GEYJ102 1K R35 ERJ3GEYJ102 1K R36 ERJ2GEJ104 100K R37 ERJ3GEYJ102 1K R37 ERJ3GEYJ102 1K R38 ERJ2GEJ104 100K R39 ERJ2RKF2000 120 R39 ERJ2RKF2000 120 R39 ERJ2RKF2000 120 R39 ERJ2RKF2010 17 R48 ERJ3GEYJ270 17 R51 ERJ3GEYJ210 17 R51 ERJ3GEYJ210 17 R51 ERJ3GEYJ181 180 R52 ERJ2GEJ153 15K R53 ERJ3GEYJ181 180 R54 ERJ2GEJ102 1K R55 ERJ1WYJ220 12 R56 ERJ1WYJ220 12 R57 ERJ2GEJ323 1.9K R58 ERJ2GEJ682 6.8K R59 ERJ3GEYJ222 1.2K R61 ERJ3GEYJ222 1.2K R61 ERJ2GEJ102 1K R62 ERJ2GEJ222 1.2K R63 ERJ2GEJ222 1.2K R64 ERJ2GEJ103 1K R65 ERJ3GEYGR00 0 R67 ERJ2GEJ332 3.3K R72 ERJ2GEJ332 3.3K R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R76 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ104 10G R79 ERJ2GEJ104 10G R79 ERJ2GEJ104 10G R79 ERJ2GEJ104 10G				
R30 ERJ3GEYJ820 82 R31 ERJ3GEYJ104 100K R33 ERJ2GEJ102 1K R34 ERJ3GEYJ104 100K R35 ERJ3GEYJ104 100K R36 ERJ2GEJ102 1K R36 ERJ2GEJ104 100K R38 ERJ2GEJ104 100K R38 ERJ2RFJ2000 120 R39 ERJ2RFJ2000 200 R49 ERJ2GEJ101 1.0 R51 ERJ3GEYJ127 27 R51 ERJ3GEYJ121 1.2 R52 ERJ2GEJ15 1.5 R53 ERJ3GEYJ181 180 R54 ERJ2GEJ102 1K R55 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R57 ERJ2GEJ392 3.9K R55 ERJ3GEYJ181 180 R54 ERJ2GEJ102 1K R55 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R57 ERJ2GEJ23 3.9K R58 ERJ2GEZ22 2.2K R60 ERJ2GEJ22 2.2K R60 ERJ2GEJ22 2.2K R61 ERJ2GEJ102 1K R62 ERJ2GEJ22 2.2K R63 ERJ2GEJ23 3.3K R64 ERJ3GEYJ10 18 R68 ERJ3GEYJ00 0 R71 ERJ2GEJ33 3.3K R74 ERJ2GEJ33 1.0K R77 ERJ2GEJ10 1K R77 ERJ2GEJ10 1K R77 ERJ2GEJ10 1K R78 ERJ2GEJ10 1K R79 ERJ2GEJ10 1K R68 ERJ3GEYOROO 0 R71 ERJ2GEJ10 1K R79 ERJ2GEJ10 1K R70 ERJ2GEJ10 1K R71 ERJ2GEJ10 1K R71 ERJ2GEJ10 1K R72 ERJ3GEYNON 0 R73 ERJ2GEJ10 1K R74 ERJ2GEJ10 1K R75 ERJ2GEJ10 1K R77 ERJ2GEJ10 1K R78 ERJ2GEJ10 1K R79				
R31 ERJ3GEYJ821 820 R32 ERJ3GEYJ104 100K R33 ERJ2GEJ102 1K R34 ERJ3GEYJ104 100K R35 ERJ3GEYJ104 100K R35 ERJ2GEJ102 1K R36 ERJ2GEJ102 1K R37 ERJ3GEYJ100 120 R39 ERJ2RKF1200 120 R39 ERJ2RKF1200 120 R39 ERJ2RKF1200 17 R49 ERJ3GEYJ121 1.2K R51 ERJ3GEYJ122 1.2K R52 ERJ3GEYJ122 1.2K R52 ERJ3GEYJ121 1.8C R53 ERJ3GEYJ121 1.8C R54 ERJ3GEYJ122 1.2K R55 ERJJWYJ220 22 R57 ERJ2GEJ102 1K R55 ERJWYJ220 22 R56 ERJWYYZ20 22 R57 ERJ2GEJ392 3.9K R58 ERJ2GEJ392 3.9K R58 ERJ3GEYJ222 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ223 12K R61 ERJ2GEJ102 1K R62 ERJ2GEJ02 1K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYORO 0 R71 ERJ2GEJ332 3.3K R68 ERJ3GEYORO 0 R71 ERJ2GEJ103 10K R73 ERJ2GEJ103 10K R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R71 ERJ2GEJ103 10K R71 ERJ2GEJ103 10K R72 ERJ2GEJ103 10K R73 ERJ2GEJ103 10K R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ000 0 R78 ERJ2GEJ000 0 R78 ERJ2GEJ000 0 R78 ERJ2GEJ000 0 R78 ERJ2GEJ000 0 R79 ERJ2GED000 0 R79 ERJ2GED000 0 R79 ERJ2GED000 0 R79 ERJ2GED000 0 R79				
R32 ERJ3GEYJ104 100K R33 ERJ2GEJ102 1K R34 ERJ3GEYJ102 1K R35 ERJ3GEYJ102 1K R36 ERJ3GEYJ102 1K R36 ERJ2GEJ104 100K R37 ERJ2GEJ104 100K R38 ERJ2CKF1200 120 R48 ERJ3GEYJ270 27 R49 ERJ2GEJ471 470 R51 ERJ3GEYJ12 1.2K R52 ERJ2GEJ153 15K R53 ERJ3GEYJ181 180 R54 ERJ2GEJ153 15K R55 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R57 ERJ2GEJ682 6.8K R59 ERJ3GEYJ222 2.2K R60 ERJ2GEJ692 1K R62 ERJ3GEJ222 2.2K R63 ERJ2GEJ02 1K R62 ERJ2GEJ102 1K R62 ERJ2GEJ102 1K R62 ERJ2GEJ102 1K R62 ERJ2GEJ103 10K R63 ERJ2GEJ23 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ150 15 R73 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R75 ERJ2GEJ101 10C R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R71 ERJ2GEJ103 10K R71 ERJ2GEJ103 10K R71 ERJ2GEJ103 10K R72 ERJ2GEJ103 10K R73 ERJ2GEJ103 10K R74 ERJ2GEJ103 10K R75 ERJ2GEJ00 10C R76 ERJ2GEJ00 10C R776 ERJ2GEJ00 10C R777 ERJ2GEJ00 10C R778 ERJ2GEJ00 10C				
R33 ERJ2GEJ102 1K R34 ERJ3GEYJ104 100K R36 ERJ3GEYJ102 1K R36 ERJ2GEJ104 100K R38 ERJ2RFJ2000 120 R39 ERJ2RFJ2000 200 R48 ERJ3GEYJ12 27 R49 ERJ2GEJ471 470 R51 ERJ3GEYJ122 1.2K R52 ERJ2GEJ51 15K R53 ERJ3GEYJ181 180 R54 ERJ3GEYJ181 180 R54 ERJ3GEYJ20 22 R57 ERJ2GEJ392 3.9K R56 ERJWYJ220 22 R57 ERJ2GEJ392 3.9K R58 ERJ3GEYJ212 1.2K R59 ERJ3GEYJ22 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ223 22K R61 ERJ2GEJ102 1K R62 ERJ2GEJ223 2.2K R63 ERJ2GEJ223 2.2K R66 ERJ2GEJ392 1.9K R67 ERJ2GEJ392 3.9K R67 ERJ2GEJ393 3.9K R68 ERJ3GEY000 0 R71 ERJ2GEJ102 1K R67 ERJ2GEJ103 1N R68 ERJ3GEY0R00 0 R71 ERJ2GEJ100 18 R68 ERJ3GEYOR00 10 R71 ERJ2GEJ101 100 R71 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R76 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ104 100 R71 ERJ2GEJ104 100 R71 ERJ2GEJ304 10K R79 ERJ2GEJ004 10C R71 ERJ2GEJ304 10C R71 ERJ				
R34 ERJ3GEYJ104 100K R35 ERJ3GEYJ102 1K R36 ERJ2GEJ104 100K R38 ERJ2RKF1200 120 R39 ERJ2KF2000 200 R48 ERJ8GEYJ270 27 R49 ERJ2GEJ14 470 R51 ERJ3GEYJ122 1.2K R52 ERJ3GEYJ122 1.2K R52 ERJ3GEYJ122 1.2K R53 ERJ3GEYJ122 1.2K R54 ERJ3GEYJ122 1.2K R55 ERJ3GEYJ102 1K R55 ERJ3GEYJ102 1K R55 ERJ1WYJ220 22 R57 ERJ2GEJ392 3.9K R58 ERJ2GEJ092 1.K R59 ERJ3GEYJ222 2.2K R61 ERJ2GEJ102 1K R62 ERJ2GEJ22 2.2K R61 ERJ2GEJ22 2.2K R61 ERJ2GEJ22 2.2K R66 ERJ3GEYGOU 0 R67 ERJ2GEJ392 3.3K R72 ERJ2GEJ392 3.3K R72 ERJ2GEJ393 3.3K R72 ERJ2GEJ101 100 R71 ERJ2GEJ102 1K R73 ERJ2GEJ101 100 R74 ERJ2GEJ101 100 R75 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ101 100 R77 ERJ2GEJ102 1K R78 ERJ2GEJ101 100 R78 ERJ2GEJ101 100 R79 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R78 ERJ2GEJ101 10C R76 ERJ2GEJ101 10C R77 ERJ2GEJ102 1K R77 ERJ2GEJ101 1C R78 ERJ2GEJ101 1C R78 ERJ2GEJ102 1K R79 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R79 ERJ2GEJ104 1C R79 ERJ2GEJ104 1C R79 ERJ2GEJ107				
R35 ERJ3GEYJ102 1K R36 ERJ2CED104 100K R38 ERJ2RKF1200 120 R48 ERJ3GEYJ270 27 R49 ERJ2GEJ471 470 R51 ERJ3GEYJ122 1.2K R52 ERJ2GEJ153 15K R53 ERJ2RKF2200 22 R54 ERJ2GEJ102 1K R55 ERJWYUZ20 22 R56 ERJWYUZ20 22 R57 ERJ2GEJ392 3.9K R58 ERJ2GEJ392 3.9K R58 ERJ2GEJ222 2.2K R60 ERJ2GEJ222 2.2K R61 ERJ3GEYJ222 2.2K R62 ERJ2GEJ03 1K R62 ERJ2GEJ03 1K R63 ERJ2GEJ23 2.2K R64 ERJ2GEJ03 1K R65 ERJ3GEYJ222 1.2K R66 ERJ3GEYJ222 2.2K R66 ERJ3GEYJ222 1.2K R67 ERJ2GEJ392 3.9K R68 ERJ2GEJ392 3.9K R69 ERJ2GEJ233 3.9K R60 ERJ2GEJ233 3.9K R61 ERJ2GEJ322 1.2K R62 ERJ2GEJ23 1.0K R63 ERJ2GEJ322 1.2K R64 ERJ2GEJ03 1.K R65 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79				
R36 ERJ2GEJ104 100K R38 ERJ2RKF1200 120 R39 ERJ2RKF2000 200 R48 ERBGGSYJ70 27 R49 ERJ3GEYJ122 1.2K R51 ERJ3GEYJ121 1.2K R52 ERJ2GEJ153 15K R53 ERJ3GEYJ181 180 R54 ERJ3GEYJ181 180 R55 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R57 ERJ2GEJ392 3.9K R58 ERJ2GEJ682 6.8K R59 ERJ2GEJ232 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ102 1K R62 ERJ2GEJ102 1K R63 ERJ2GEJ00 10				
R38				
R39				
R48				
R49 ERJ2GEJ471 470 R51 ERJ3GEYJ122 1.2K R52 ERJ3GEYJ181 180 R54 ERJ3GEYJ120 1K R55 ERJJWYJ220 22 R56 ERJWYJ220 22 R576 ERJWYJ220 22 R578 ERJ2GEJ682 6.8K R59 ERJ2GEJ682 6.8K R59 ERJ3GEYJ222 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ223 22K R61 ERJ2GEJ223 2.2K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R63 ERJ2GEJ322 2.2K R64 ERJ3GEY000 0 R67 ERJ2GEJ332 3.3K R68 ERJ3GEY0800 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ335 3.3M R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R76 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R81 ERJ2GEJ332 3.3K R89 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R81 ERJ2GEJ332 3.3K R89 ERJ2GEJ103 10K R81 ERJ2GEJ332 3.3K R89 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R81 ERJ2GEJ303 10K R81 ERJ2GEJ103 10K R81 ERJ2GEJ303 10K R81 ERJ2GEJ304				
R51 ER33GEYJ122 1.2K R52 ERJ2GEJ153 15K R53 ERJ3GEYJ181 180 R54 ERJ2GEJ102 1K R55 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R57 ER22GEJ392 3.9K R58 ERJ2GEJ392 3.9K R58 ERJ2GEJ223 22K R60 ERJ2GEJ223 22K R61 ER22GEJ222 2.2K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R64 ERJ2GEJ222 2.2K R65 ERJ3GEY0R00 0 R67 ER22GEJ392 3.3K R68 ERJ3GEY0R00 0 R71 ER22GEJ332 3.3K R72 ERJ2GEJ101 15 R73 ER22GEJ332 3.3K R74 ERJ2GEJ103 10K R75 ER22GEJ103 10K R76 ERJ2GEJ102 1K R77 ER22GEJ103 10K R77 ER22GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ER22GEJ335 3.3M R78 ERJ2GEJ101 100 R78 ERJ2GEJ101 100 R79 ERJ2GEJ101 10K R80 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R79 ERJ2GEJ101 10K R89 ERJ2GEJ101 10K R89 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R89 ERJ2GEJ103 10K R79 ERJ2GEJ101 10K R80 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R89 ERJ2GEJ103 10K R99 ERJ2GEJ101 10K R95 ERJ2GEJ101 10K R96 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R979 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R104 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R105 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R111 ERJ2GEJ101 100 R112 ERJ2GEJ032 3.3K R121 ERJ3GEYOR00 0 R14 ERJ3GEYOR00 0 R15 ERJ2GED000 0 R16 ERJ2GED000 0 R17 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 R17 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 R18 ERJ2GEJ000 0 R18 ERJ2GEJ0000 0 R18 ERJ2GEJ0000 0 R19 ERJ2GEJ0000 0 R19 ERJ2GEJ0000 0 R10000000000000000000000000000000				
R52				
R53 ERJ3GEYJ181 180 R54 ERJ2GEJ102 1K R55 ERJ1WYJ220 22 R57 ERJ2GEJ392 3.9K R58 ERJ2GEJ682 6.8K R59 ERJ3GEYJ222 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ223 22K R61 ERJ2GEJ223 2.2K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYJ222 2.2K R66 ERJ3GEYJ202 1K R62 ERJ2GEJ223 3.3K R68 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ101 100 R74 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R93 ERJ2GEJ103 10K R94 ERJ2GEJ103 10K R95 ERJ2GEOROO 0 R96 ERJ2GEJ103 10K R979 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ00 1 K R99 ERJ2GEJ00 0 R106 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 SP8 ERJ2GEOROO 0 R116 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 100 R112 ERJ2GEJ101 100 R112 ERJ2GEJ103 18 R111 ERJ2GEJ101 100 R112 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 100 R111 ERJ2GEJ103 18 R111 ERJ2GEJ103 18 R111 ERJ2GEJ103 18 R111 ERJ2GEJ101 100 R112 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 100 R111 ERJ2GEJ100 18 R111 ERJ2GEJ101 100 R112 ERJ2GEJ100 0 R116 ERJ2GEJ100 0 R116 ERJ2GEJ100 0 R116 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ100 0 R112 ERJ3GEYOROO 0 R116 ERJ3GEYJ270 0 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 170 R109 ERJ3GEYJ271 270 R109 ERJ2GEJ0000 0 R100 ERJ3GEYJ271 270 R100 ERJ3GEYJ271 270 R100				
R54 ERJ2GEJ102 1K R55 ERJ1WYJ220 22 R56 ERJ1WYJ220 22 R57 ERJ2GEJ392 3.9K R58 ERJ2GEJ682 6.8K R59 ERJ3GEYJ222 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ102 1K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYOR00 0 R67 ERJ2GEJ100 18 R68 ERJ3GEYOR00 0 R71 ERJ2GEJ180 18 R68 ERJ3GEYOR00 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ335 3.3M R74 ERJ2GEJ335 10K R75 ERJ2GEJ101 100 R76 ERJ2GEJ101 100 R76 ERJ2GEJ101 100 R77 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R99 ERJ2GEJ101 10C R96 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R93 ERJ2GEJ103 10K R94 ERJ2GEJ103 10K R95 ERJ2GEJ103 10K R96 ERJ2GEJ103 10K R979 ERJ2GEJ103 10K R99 ERJ2GEJ104 100 R98 ERJ2GEJ104 100 R98 ERJ2GEJ105 100 R98 ERJ2GEJ105 100 R98 ERJ2GEJ106 R98				
R55				
R56 ERJ1WYJ220 22 R57 ERJ2GEJ392 3.9K R58 ERJ2GEGES2 6.8K R59 ERJ3GEYJ222 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ102 1K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYOR00 0 R67 ERJ2GEJ332 3.3K R72 ERJ2GEJ335 3.3M R74 ERJ2GEJ103 10K R75 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ102 1K R79 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ332 3.3K R89 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R91 ERJ2GEJ32 2.2K R81 ERJ2GEJ32 2.2K R89 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R91 ERJ2GEJ32 2.2K R89 ERJ2GEJ103 10K R91 ERJ2GEJ32 3.3K R89 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R93 ERJ2GEJ104 1K R95 ERJ2GEJ104 1K R95 ERJ2GEJ105 1K R95 ERJ2GEJ106 1K R96 ERJ2GEJ107 1K R97 ERJ2GEJ108 1K R99 ERJ2GEJ109 1K R104 ERJ3GEYJ2C2 1K R103 PQ4R10XJ471 470 S R104 ERJ3GEYJ2C1 1C R104 ERJ3GEYJ2C1 1K R111 ERJ2GEJ301 1R R111 ERJ2GEJ302 1R R111 ERJ2GEJ302 1R R111 ERJ2GEJ302 1R R111 ERJ2GEJ303 3.3K R111 ERJ2GEJ304 1R R111 ERJ2GEJ30	R54	ERJ2GEJ102		
R57 ERJ2GEJ392 3.9K R58 ERJ2GEJ662 6.8K R59 ERJ3GEYJ222 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ223 1K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYDZ22 2.2K R66 ERJ3GEYDZ00 0 R67 ERJ2GEJ180 18 R68 ERJ3GEYDR00 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ150 15 R73 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R76 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R80 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R92 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R99 ERJ2GEJ102 1K R91 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R92 ERJ2GEJ104 10N R92 ERJ2GEJ105 10K R91 ERJ2GEJ107 10K R92 ERJ2GEJ109 1K R95 ERJ2GEJ100 1 1K R95 ERJ2GEJ100 1 1K R96 ERJ2GEJ100 1 1K R97 ERJ2GEJ100 1 1K R99 ERJ2GEJ103 10K R99 ERJ2GEJ00 0 R98 ERJ2GEJ103 10K R99 ERJ2GEJ000 0 R98 ERJ2GEJ000 0 R				
R58 ERJ2GEJ682 6.8K R59 ERJ3GEYJ222 2.2K R60 ERZ2GEJ223 22K R61 ERJ2GEJ102 1K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYOROO 0 R67 ERZGEJ180 18 R68 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ335 3.3M R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R80 ERJ2GEJ103 10K R80 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R93 ERJ2GEJ103 10K R94 ERJ2GEJ103 10K R95 ERJ2GEJ103 10K R97 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R93 ERJ2GEJ103 10K R94 ERJ2GEJ103 10K R95 ERJ2GEJ103 10K R97 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R101 ERJ2GEJ103 10K R102 ERJ3GEYJ122 1K R103 PQ4R10XJ471 470 S R104 ERJ3GEYJ121 270 R109 ERJ3GEYJ121 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEJ101 100 R115 ERJ2GEJ103 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYJR00 0 J4 ERJ3GEYJR00 0 J4 ERJ3GEYOROO 0 CAPACITORS) C1 ECUE1H10ODCQ 10P C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P	R56			
R59 ERJ3GEYJ222 2.2K R60 ERJ2GEJ223 22K R61 ERJ2GEJ222 1.2K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYOROO 0 R67 ERJ2GEJ180 18 R68 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ335 15 R73 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R79 ERJ2GEJ10 1K R80 ERJ2GEJ10 1K R80 ERJ2GEJ10 1K R81 ERJ2GEJ10 1K R81 ERJ2GEJ10 1K R81 ERJ2GEJ10 1K R81 ERJ2GEJ10 1 N R92 ERJ2GEJ10 1 N R92 ERJ2GEJ10 1 N R93 ERJ2GEJ10 1 N R94 ERJ2GEJ10 1 N R95 ERJ2GEJ10 1 N R96 ERJ2GEJ10 1 N R97 ERJ2GEJ10 1 N R97 ERJ2GEJ10 1 N R98 ERJ2GEJ10 1 N R99 ERJ2GEJ10 1 N R99 ERJ2GEJ10 1 N R99 ERJ2GEJ10 1 N R104 ERJ2GEJ10 1 N R104 ERJ2GEJ10 1 N R105 ERJ2GEJ10 1 N R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R110 ERJ3GEYJ271 270 R110 ERJ3GEYJ271 270 R111 ERJ2GEJ10 1 N R112 ERJ2GEJ10 1 N R114 ERJ2GEJ10 1 N R115 ERJ2GEJ10 1 N R116 ERJ2GEJ10 1 R R117 ERJ2GEJ10 1 R R117 ERJ2GEJ10 1 R R118 ERJ2GEJ10 1 R R119 ERJ2GEJ10 1 R R111 ERJ2GEJ10 1 R R111 ERJ2GEJ10 1 R R112 ERJ3GEYJR00 0 UA4 ERJ3GEYJR00 0 UA5 ERJ3GEYJR00 0 UA5 ERJ3GEYJR00 0 UA6 ERJ3GEYJR00 0 UA7 ERJ3GEYOROO 0 UA7 ERJ2GEOROO 0 UA7 ERJ2GEOROO 0 UA7 ERJ2GEOROO 0 UA7 ERJ2GEOROO 0 UA7 ERJ2GEN UA7 UA	R57	ERJ2GEJ392	3.9K	
R60 ERJ2GEJ223 22K R61 ERJ2GEJ102 1K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEY0R00 0 R67 ERJ2GEJ180 18 R68 ERJ3GEY0R00 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ150 15 R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R77 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ102 1K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R92 ERJ2GEJ10 10K R95 ERJ2GEJ10 10 R96 ERJ2GEJ10 10K R979 ERJ2GEJ10 10K R91 ERJ2GEJ10 10K R91 ERJ2GEJ10 10K R92 ERJ2GEJ10 10K R93 ERJ2GEJ10 10K R94 ERJ2GEJ10 10K R95 ERJ2GEJ10 10K R96 ERJ2GEJ10 10K R979 ERJ2GEJ10 10K R979 ERJ2GEJ10 10K R98 ERJ2GEJ10 10K R99 ERJ2GEJ10 10K R99 ERJ2GEJ10 10K R99 ERJ2GEJ10 10K R104 ERJ3GEYJ221 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R106 ERJ3GEYJ271 270 R107 ERJ2GEJ10 100 R112 ERJ2GEJ10 100 R114 ERJ2GEJ10 100 R115 ERJ2GEJ10 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYJ81 180 R111 ERJ2GEJ10 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYJR00 0 J4 ERJ3GEYJR00 0 J4 ERJ3GEYJR00 0 J4 ERJ3GEYJR00 0 J4 ERJ3GEYORO0 0 J4 ERJ3GEYORO0 0 L9 ERJ3GEYORO0 0 L9 ERJ2GEORO0 0 CCAPACITORS) C1 ECUE1H10ODCQ 10P C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001	R58	ERJ2GEJ682	6.8K	
R61 ERJ2GEJ102 1K R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYOR00 0 R67 ERJ2GEJ180 18 R68 ERJ3GEYOR00 0 R71 ERJ2GEJ180 15 R73 ERJ2GEJ150 15 R73 ERJ2GEJ150 15 R74 ERJ2GEJ103 10K R75 ERJ2GEJ103 10K R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ103 10K R80 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R80 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R82 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R81 ERJ2GEJ103 10K R82 ERJ2GEJ103 10K R83 ERJ2GEJ104 1K R80 ERJ2GEJ105 1K R81 ERJ2GEJ105 1K R81 ERJ2GEJ106 1K R81 ERJ2GEJ107 1C R81 ERJ2GEJ108 1C R82 ERJ2GEJ109 1C R83 ERJ2GEJ109 1C R84 ERJ2GEJ109 1C R85 ERJ2GEOR00 0 R86 ERJ2GEOR00 0 R876 ERJ2GEOR00 0 R870 ERJ3GEYJ222 2.2K R103 PQ4R10X/471 470 S R106 ERJ3GEYJ221 270 R109 ERJ3GEYJ211 100 R111 ERJ2GEJ101 100 R112 ERJ3GEJ101 100 R114 ERJ2GEJ101 100 R115 ERJZGEJ102 1K R114 ERJ2GEJ100 1 R115 ERJZGEJ101 100 R116 ERJZGEJ101 100 R116 ERJZGEJ101 100 R117 ERJZGEJ101 100 R116 ERJZGEJ100 0 L9 ERJJGEYJ200 0 L9 ERJJGEYJ200 0 L9 ERJJGEYJ200 0 L9 ERJJGEJ100 0 L9 ERJJGEYJ00 0 L9 ERJJGEJ100 0 L9 ERJJGEJ000 0 L9 ERJJGEJ0000 0 L9 ERJGEJ0000 0 L9 ERJJGEJ0000 0 L9 ERJJGE	R59	ERJ3GEYJ222	2.2K	
R62 ERJ2GEJ222 2.2K R63 ERJ2GEJ222 2.2K R66 ERJ3GEYOROO 0 R67 ERJ2GEJ180 18 R68 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ103 10K R75 ERJ2GEJ101 100 R76 ERJ2GEJ101 100 R77 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R79 ERJ2GEJ100 10K R79 ERJ2GEJ100 10K R79 ERJ2GEJ100 1 S R81 ERJ2GEJ100 S R92 ERJ2GEDI00 O R94 ERJ2GEDI00 O R96 ERJ2GEDI00 IOK R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ101 100 R111 ERJ2GEJ101 100 R112 ERJ2GEJ101 100 R114 ERJ2GEDI00 O R16 ERJ3GEYJ271 270 R109 ERJ3GEYJ28 IR R111 ERJ2GEJ100 IR R111 ERJ2GEJ101 IOO R112 ERJ3GEJ100 O R116 ERJ3GEJ100 O R116 ERJ3GEYJ271 270 R109 ERJ3GEJ100 IR R111 ERJ2GEJ100 IR R111 ERJ2GEJ100 IR R111 ERJ2GEJ100 IR R112 ERJ3GEJ000 O LP ERJ3GEYJ270 O CAPACITORS) C1 ECUELH100DCQ IOP S C3 F1B2H152A048 ISOOP C4 F1B2H152A048 ISOOP	R60	ERJ2GEJ223	22K	
R63 ERJ2GEJ222 2.2K R66 ERJ3GEYOROO 0 R67 ERJ2GEJ180 18 R68 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ150 15 R74 ERJ2GEJ103 10K R75 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R93 ERJ2GEJ104 1X R95 ERJ2GEJ107 1X R95 ERJ2GEJ107 1X R97 ERJ2GEJ108 10K R98 ERJ2GEJ108 10K R99 ERJ2GEJ109 1X R99 ERJ2GEJ109 1X R99 ERJ2GEJ109 1X R101 ERJ2GEJ109 1X R102 ERJ2GEJ109 1X R104 ERJ2GEJ109 1X R105 ERJ2GEJ109 1X R106 ERJ2GEJ109 1X R107 ERJ2GEJ109 1X R108 ERJ2GEJ109 1X R109 ERJ3GEYJ221 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ101 100 R112 ERJ2GEJ100 1 R114 ERJ2GEJ100 1 R115 ERJ2GEJ100 1 R116 ERJ2GEJ180 18 R117 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 CCAPACITORS) C1 ECUEIH100DCQ 10P C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P	R61	ERJ2GEJ102	1K	
R66 ERJ3GEY0R00 0 R67 ERJ2GEJ180 18 R68 ERJ3GEY0R00 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ103 10K R74 ERJ2GEJ101 100 R75 ERJ2GEJ102 1K R76 ERJ2GEJ103 10K R77 ERJ2GEJ103 10K R78 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R89 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R95 ERJ2GEJ102 1K R96 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R102 ERJ3GEYJ103 10K R103 PQ4R10XJ471 470 S R104 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R R112 ERJ3GEYJ180 18 <tr< td=""><td>R62</td><td>ERJ2GEJ222</td><td>2.2K</td><td></td></tr<>	R62	ERJ2GEJ222	2.2K	
R67 ERJ2GEJ180 18 R68 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ335 3.3M R74 ERJ2GEJ103 10K R75 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ102 1K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R99 ERJ2GEJ100 10K R99 ERJ2GEJ101 100 R96 ERJ2GEJ102 1K R97 ERJ2GEJ102 1K R97 ERJ2GEJ103 10K R99 ERJ2GEJ100 1C R99 ERJ2GEJ101 10C R101 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ101 100 R114 ERJ2GEJ102 1K R114 ERJ2GEOROO 0 R16 ERJ3GEYJ27 3.3K R114 ERJ2GEJ100 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 L9 ERJ3GEYOROO 0 L9 ERJ3GEYOROO 0 L9 ERJ3GEYOROO 0 L9 ERJ3GEYOROO 0 CCAPACITORS) C1 ECUEIH100DCQ 10P C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001	R63	ERJ2GEJ222	2.2K	
R68 ERJ3GEYOROO 0 R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ335 3.3M R74 ERJ2GEJ103 10K R75 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ102 1K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ103 10K R92 ERJ2GEJ102 1K R95 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R92 ERJ2GEJ104 1C R89 ERJ2GEJ105 1C R89 ERJ2GEJ107 1C R89 ERJ2GEJ107 1C R89 ERJ2GEJ108 10C R99 ERJ2GEJ109 1C R99 ERJ2GEJ109 1C R99 ERJ2GEJ109 1C R99 ERJ2GEJ109 1C R100 ERJ3GEYJ222 2.2K R101 PQ4R10XJ471 470 R100 ERJ3GEYJ271 270 R100 ERJ3GEYJ271 270 R100 ERJ3GEYJ271 100 R111 ERJ2GEJ101 100 R112 ERJ2GEJ101 100 R112 ERJ3GEYJ271 100 R114 ERJ2GEJ101 100 R115 ERJ3GEYJ271 180 R116 ERJ2GEJ100 1 R116 ERJ2GEJ100 1 R117 ERJ2GEJ100 1 R116 ERJ2GEJ100 0 CAPACITORS) C1 ECUE1H100DCQ 10P C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001	R66	ERJ3GEY0R00	0	
R71 ERJ2GEJ332 3.3K R72 ERJ2GEJ150 15 R73 ERJ2GEJ335 3.3M R74 ERJ2GEJ103 10K R75 ERJ2GEJ101 100 R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R81 ERJ2GEJ102 1K R89 ERJ2GEJ102 1K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R91 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R95 ERJ2GEJ104 1K R95 ERJ2GEJ105 1K R96 ERJ2GEJ107 1K R97 ERJ2GEJ108 10K R99 ERJ2GEJ108 10K R99 ERJ2GEJ109 10K R99 ERJ2GEJ109 10K R100 ERJ3GEYJ222 2.2K R101 PQ4R10XJ471 470 R100 ERJ3GEYJ221 270 R100 ERJ3GEYJ271 270 R100 ERJ3GEYJ101 100 R111 ERJ2GEJ101 100 R111 ERJ2GEJ101 100 R112 ERJ3GEJ102 1K R114 ERJ2GEJ102 1K R114 ERJ2GEJ102 1K R114 ERJ2GEJ102 1K R114 ERJ2GEJ101 100 R115 ERJ3GEYJ271 270 R106 ERJ3GEYJ271 270 R107 ERJ3GEYJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 CAPACITORS) C1 ECUE1H100DCQ 10P C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001	R67	ERJ2GEJ180	18	
R72	R68	ERJ3GEY0R00	0	
R73	R71	ERJ2GEJ332	3.3K	
R74	R72	ERJ2GEJ150	15	
R75	R73	ERJ2GEJ335	3.3M	
R76 ERJ2GEJ102 1K R77 ERJ2GEJ103 10K R78 ERJ2GEJ103 10K R79 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ332 3.3K R89 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R95 ERJ2GEJ00 0 R96 ERJ2GEJ00 0 R976 ERJ2GEJ00 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ10 10K R99 ERJ2GEJ10 10K R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEJ102 1K R115 ERJ2GEJ103 10 R116 ERJ3GEYJ271 270 R117 ERJ2GEJ100 100 R112 ERJ3GEYJ271 270 R119 ERJ3GEYJ181 880 R111 ERJ2GEJ100 0 R116 ERJ2GEJ10 100 R112 ERJ2GEJ100 18 R117 ERJ2GEJ100 18 R117 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 L9 ERJ2GEOROO 0 CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P	R74	ERJ2GEJ103	10K	
R76				
R77 ERJ2GEJ103 10K R78 ERJ2GEJ102 1K R80 ERJ2GEJ102 1K R81 ERJ2GEJ332 3.3K R89 ERJ2GEJ103 10K R92 ERJ2GEJ103 10K R95 ERJ2GEJ00 0 R96 ERJ2GEOROO 0 R976 ERJ2GEOROO 0 R98 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ211 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEJ102 1K R115 ERJ2GEJ102 1K R116 ERJ3GEYJ271 270 R117 ERJ2GEJ101 100 R112 ERJ2GEJ101 100 R112 ERJ2GEJ100 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ180 18 R11 ERJ2GEJ180 18 R117 ERJ3GEYOROO 0 GAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P	R76			
R78				
R79		ERJ2GEJ103		
R80 ERJ2GEJ102 1K R81 ERJ2GEJ332 3.3K R89 ERJ2GEJ103 10K R92 ERJ2GEJ102 1K R95 ERJ2GEOR00 0 R96 ERJ2GEOR00 0 R98 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEJ102 1K R117 ERJ2GEJ302 1K R114 ERJ2GEOR00 0 R16 ERJ3GEYJ2 3.3K R117 ERJ2GEJ3 3.3K R121 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 L9 ERJ3GEYOR00 0 C0 CAPACITORS) C1 ECUE1H10DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R81				
R89			==-	
R92 ERJ2GEJ102 1K R95 ERJ2GEOR00 0 R96 ERJ2GEOR00 0 R98 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEJ100 10 R116 ERJ2GEJ300 0 R116 ERJ3GEYJ80 18 R171 ERJ2GEJ100 18 R171 ERJ2GEJ100 18 R171 ERJ2GEJ100 0 R116 ERJ2GEJ100 0 C1 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 C5 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R95				
R96 ERJ2GEOROO 0 R98 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEJ102 1K R114 ERJ2GEJ180 18 R117 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 L9 ERJ3GEYOROO 0 CCAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R98 ERJ2GEJ103 10K R99 ERJ2GEJ103 10K R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEJ102 1K R114 ERJ2GEJ180 18 R117 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 L9 ERJ2GEOR00 0 CCAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R99 ERJ2GEJ103 10K R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEOR00 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 L9 ERJ2GEOR00 0 CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R102 ERJ3GEYJ222 2.2K R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEOR00 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 L9 ERJ2GEOR00 0 CCAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R103 PQ4R10XJ471 470 S R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEOR00 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEY0R00 0 J4 ERJ3GEY0R00 0 L9 ERJ2GEOR00 0 CCAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R106 ERJ3GEYJ271 270 R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEOR00 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 L9 ERJ2GEOR00 0 CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R109 ERJ3GEYJ181 180 R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEOROO 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 L9 ERJ2GEOROO 0 CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001		17		5
R111 ERJ2GEJ101 100 R112 ERJ2GEJ102 1K R114 ERJ2GEOR00 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 L9 ERJ2GEOR00 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R112 ERJ2GEJ102 1K R114 ERJ2GEOR00 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOR00 0 J4 ERJ3GEYOR00 0 L9 ERJ2GEOR00 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R114 ERJ2GEOROO 0 R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 L9 ERJ2GEOROO 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R116 ERJ2GEJ180 18 R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 L9 ERJ2GEOROO 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R117 ERJ2GEJ332 3.3K R121 ERJ3GEYOROO 0 J4 ERJ3GEYOROO 0 L9 ERJ2GEOROO 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
R121 ERJ3GEY0R00 0 J4 ERJ3GEY0R00 0 L9 ERJ2GEOR00 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
J4 ERJ3GEY0R00 0 L9 ERJ2GEOR00 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001				
L9 ERJ2GE0R00 0 (CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001			0	
(CAPACITORS) C1 ECUE1H100DCQ 10P S C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001	J4	ERJ3GEY0R00	0	
C1	L 9	ERJ2GE0R00	0	
C3 F1B2H152A048 1500P C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001			(CAPACITORS)	
C4 F1B2H152A048 1500P C5 ECUV1H102KBV 0.001	C1	ECUE1H100DCQ	10P	S
C5 ECUV1H102KBV 0.001	C3	F1B2H152A048	1500P	
	C4	F1B2H152A048	1500P	
C6 ECUV1H102KBV 0.001	C5	ECUV1H102KBV	0.001	
	C6	ECUV1H102KBV	0.001	
C7 ECUV1H100DCV 10P	C7	ECUV1H100DCV	10P	
C8 ECUV1H100DCV 10P	C8	ECUV1H100DCV	10P	

Ref. No.	Part No.	Part Name & Description	Remarks
C9	ECKD2H681KB	680P	s
C10	ECKD2H681KB	680P	S
C14	ECUV1H472KBV	0.0047	۵
C14 C17	PQCUV1A225KB	2.2	
C17	ECUV1H100DCV	10P	
C22	PQCUV1A105KB	1	
C23	ECUV1C563KBV	0.056	
C25	ECUV1C563KBV	0.01	
		10	
C27	ECEA1HKA100	· ·	
C31	PQCUV1A225KB	2.2	
C32	ECA1CM101	100P	_
C36	ECEA0JSJ331	330	S
C37	ECUV1H100DCV	10P	
C44	ECUE1H101JCQ	100P	S
C47	ECUV1C104KBV	0.1	
C48	ECUV1H100DCV	10P	
C49	ECUV1H100DCV	10P	
C50	ECJ0EB1C103K	0.01	
C51	F1G1A1040003	0.1	
C52	ECUV1H221JCV	220P	
C53	ECUV1H221JCV	220P	
C54	ECUE1C223KBQ	0.022	S
C55	ECJ0EB1A104K	0.1	
C56	ECUV1C104KBV	0.1	L
C59	F1G1A1040003	0.1	
C60	F1G1A1040003	0.1	
C61	F1G1A1040003	0.1	
C62	ECJ0EC1H270J	27P	
C63	ECUV1H150JCV	15P	
C64	ECEA1CKS100	10	
C65	ECJ0EB0J105K	1	
C67	F1G1A1040003	0.1	
C68	ECJ0EB0J105K	1	
C70	ECUV1A105KBV	1	
C71	ECEA1CKS100	10	
C72	F1G1A2240008	0.22	
C73	F1G1A1040003	0.1	
C74	F1G1A1040003	0.1	
C75	F1G1A1040003	0.1	
C102	PQCUV1A105KB	1	
C110	ECUE1H102KBQ	0.001	S
C112	ECJ0EC1H220J	22P	
C117	ECUV1H030CCV	3P	
C118	ECUV1H100DCV	10P	
C119	ECUE1H100DCQ	10P	S
C120	ECUV1H100DCV	10P	
C124	ECUV1H010CCV	1P	+
C125	ECUV1H100DCV	10P	+
C126	F1G1H151A541	150P	s
C127	ECUE1H102KBQ	0.001	S
C133	F1G1A1040003	0.1	+
C136	ECUE1H100DCQ	10P	s
C137	ECUE1H100DCQ	10P	S
C140	ECUETHTOODCQ ECJ0EB1A104K	0.1	15
C140 C141	ECJ0EB1A104K ECJ0EB1A563K	0.056	1
C141	ECUE1H100DCQ	10P	Q
	-		s
C147 C148	ECUE1H100DCQ ECUV1H100DCV	10P 10P	2
			c
C149	ECUE1H100DCQ	10P	S
C151	ECUE1H100DCQ	10P	S
C152	ECUE1H100DCQ	10P	S
C153	ECUE1H100DCQ	10P	S
C154	ECUE1H100DCQ	10P	S
L6	ECUV1H0R5CCV	0.5P	
TP 1	DOGA101057	(OTHERS)	1
E1	PQSA10187Z	ANTENNA	
IC10	PQLP10263Z	RF UNIT	
CN4	LODACA000024	BUZZER	
SW1	EVQQJJ05Q	SPECIAL SWITCH	
X1	H0D103500003	CRYSTAL OSCILLATOR	

15.4.2. Handset

15.4.2.1. Cabinet and Electrical Parts

Ref. No.	Part No.	Part Name & Description	Remarks
101	PQGP10302Z1	PANEL, LCD (for KX-TGA710CXS)	PC-HB
101	PQGP10302Z2	PANEL, LCD (for KX-TGA710CXT)	PC-HB
102	PQKM10709Y2	CABINET BODY (for KX-TGA710CXS)	
102	PQKM10709Y4	CABINET BODY (for KX-TGA710CXT)	
103	PQHR11204Z	OPTIC CONDUCTIVE PARTS/LED LENDS	PS-HB
104	PQHS10467Z	COVER, SP NET	
105	L0AD02A00028	SPEAKER	
106	PQHR11197Z	GUIDE, SPEAKER	ABS-HB
107	PQHS10722Y	SPACER, LCD CUSHION	
108	PQBC10458Y2	PUSH BUTTON, NAVIGATOR KEY	ABS-HB
109	PQSX10315Z	KEYBOARD SWITCH	
110	PQJT10240Z	CHARGE TERMINAL (R)	
111	PQJT10239Z	CHARGE TERMINAL (L)	
112	PQWE10045Z	BATTERY TERMINAL	ABS-HB
113	PQGT18867Z	NAME PLATE (for KX-TGA710CXS)	
113	PQGT18867X	NAME PLATE (for KX-TGA710CXT)	
114	PQHR11198Z	GUIDE, SPEAKER	ABS-HB
115	PQHG10729Z	RUBBER PARTS, SPEAKER	
116	L0AD02A00026	SPEAKER	
117	PQJC10056Y	BATTERY TERMINAL	
118	PQKF10713Z1	CABINET COVER (for KX-TGA710CXS)	
118	PQKF10713Z2	CABINET COVER (for KX-TGA710CXT)	ABS-HB
119	PQQT23182Z	LABEL, ATTENTION	
120	PQHX11451Z	PLASTIC PARTS, BATTERY COVER SHEET	
121	PQHS10561Y	SPACER, BATTERY COVER	
122	PQKK10595X3	LID, BATTERY COVER (for KX-TGA710CXS)	ABS-HB
122	PQKK10595X4	LID, BATTERY COVER (for KX-TGA710CXT)	ABS-HB

15.4.2.2. Main P.C.Board Parts

Note: (*1) When replacing IC1 and IC3, data need to be written to it with PQZZTG7100BX. Refer to Handset (P.50) of Things to Do after Replacing IC.

(*2) When replacing the Handset LCD, See How to Replace the Handset LCD (P.43).

Ref. No.	Part No.	Part Name & Description	Remarks
PCB100	PQWPG7100BXR	MAIN P.C.BOARD ASS'Y (RTL)	
		(ICs)	
IC1	C1CB00002317	IC (BBIC) (*1)	
IC3	PQWI2A120EXR	IC (EEPROM) (*1)	
		(TRANSISTORS)	
Q1	PQVTFDN335N	TRANSISTOR (SI)	S
Q2	B1ADGE000004	TRANSISTOR (SI)	
Q3	B1ADGE000004	TRANSISTOR (SI)	
Q4	B1ADGE000004	TRANSISTOR (SI)	
Q5	B1ABCF000103	TRANSISTOR (SI)	
Q7	UN9219J	TRANSISTOR (SI)	S
Q8	UN9219J	TRANSISTOR (SI)	S
Q9	UN9219J	TRANSISTOR (SI)	S
Q10	B1ABCF000103	TRANSISTOR (SI)	
Q11	B1ABCF000103	TRANSISTOR (SI)	
Q12	UN9219J	TRANSISTOR(SI)	S
		(DIODES)	
D1	B0JCME000035	DIODE(SI)	
D4	MA8047	DIODE(SI)	S
D5	MA8047	DIODE(SI)	S
D6	B0BC2R1A0006	DIODE(SI)	
D7	MA2Z72000	DIODE(SI)	

Ref.	Part No.	Part Name & Description	Remarks
LED1	B3ACB0000133	LED	
LED2	B3ACB0000133	LED	
LED3	B3ACB0000133	LED	
LED4	B3ACB0000133	LED	
LED5	B3ACB0000133	LED	
LED6	B3ACB0000133	LED	
LED7	B3ACB0000133	LED	
LED8	B3ACB0000133	LED	
LED9	B3ACB0000133	LED	S
LED10	B3ACB0000134	LED	
- 1	G1 G4 F 0 W 0 0 0 0 F	(COILS)	
L1 L4	G1C470M00025	COIL	
L5	G1C100MA0072 G1C100MA0072	COIL	
F1	PQLQR2M5N6K	COIL	s
FI	PQHQMZMJNOK	(LCR FILTER)	-
L6	J0JCC0000287	LCR FILTER	
10	00000000287	(RESISTORS)	
R1	ERJ6RSJR10V	0.1	
R2	ERJ3GEYJ680	68	
R5	ERJ2GEJ471	470	1
R6	ERJ2GEJ103	10K	-
R7	ERJ2GEJ224	220K	+
R8	ERJ2GEJ224 ERJ2GEJ102	1K	1
R11	ERJ2GEJ102 ERJ3GEYJ393	39K	-
R12	PQ4R10XJ4R7	4.7	s
R13	ERJ3GEYJ101	100	15
R16	ERJ3GEYJ181	180	
R19	ERJ3GEYJ565	5.6M	
R21	ERJ2GEJ330	33	
R22	ERJ3GEYJ330	33	
R23	ERJ2GEJ102	1K	
R24	ERJ2GEJ102	1K	
R25	ERJ2GEJ222	2.2K	
R40	ERJ3GEYJ103	10K	
R41	ERJ3GEYJ103	10K	
R42	ERJ3GEYJ104	100K	
R43	ERJ2GEJ684	680K	
R44	ERJ2GEJ103	10K	
R45	ERJ6RSFR10V	0.1	
R46	ERJ2GE0R00	0	
R47	ERJ2GE0R00	0	
R51	ERJ2GEJ221	220	
R52	ERJ2GEJ102	1K	
R61	ERJ2GEJ102	1K	
R62	ERJ2GEJ102	1K	
R64	ERJ3GEYJ103	10K	
R65	ERJ3GEYJ103	10K	
R66	ERJ3GEYJ102	1K	
R91	ERJ3GEYJ100	10	
R92	ERJ2GEJ121	120	
R93	ERJ3GEYJ104	100K	
R94	ERJ3EKF4303	430K	
R95	ERJ3EKF8203	820K	
R96	ERJ2GEJ100	10	
R97	ERJ2GEJ393X	39K	
R98	ERJ2GEJ393X	39K	
R99	ERJ2GEJ393X	39K	<u> </u>
R100	ERJ2GEJ393X	39K	<u> </u>
R101	ERJ2GEJ393X	39K	
R102	ERJ2GEJ393X	39K	1
R103	ERJ6GEYJ3R3	3.3	1
R104	ERJ6GEYJ3R3	3.3	1
L7	ERJ2GEJ100	(GARAGEMORG)	<u> </u>
G1	EEE003 221570	(CAPACITORS)	1
C1	EEE0GA331WP	330	-
C2	EEE0JA331P	330	1
C3	ECUV1C104KBV	0.1	1
C4	ECUV1H100DCV	10P	
C5	PQCUV1A225KB	2.2	S
C6	ECJ0EC1H080D	8P	1
C7	ECJ0EC1H150J	15P	1
C8	F1G1A2240008	0.22	<u> </u>

KX-TG7100BXS/KX-TG7100BXT/KX-TGA710CXS/KX-TGA710CXT

Ref. No.	Part No.	Part Name & Description	Remarks
C10	PQCUV1A225KB	2.2	S
C11	ECUV1C104KBV	0.1	
C15	ECUV1A105KBV	1	
C18	ECJ0EB1H102K	0.001	
C19	ECUV1C104KBV	0.1	
C21	ECJ0EB1A104K	0.1	
C22	ECJ0EB1A104K	0.1	
C24	ECJ0EB1A104K	0.1	
C25	ECJ0EB1A104K	0.1	
C26	ECUV1C104KBV	0.1	
C32	ECJ0EB1A104K	0.1	
C35	ECJ0EC1H101J	100P	
C37	ECJ0EC1H101J	100P	
C38	ECJ0EB1C103K	0.01	
C39	ECUV1H100DCV	10P	
C40	ECUV1A105KBV	1	
C41	ECUV1A105KBV	1	
C42	ECUV1A105KBV	1	
C43	ECUV1C104KBV	0.1	
C44	ECUV1C104KBV	0.1	
C45	ECUV1C104KBV	0.1	
C46	ECUV1C104KBV	0.1	
C47	ECUV1C104KBV	0.1	
C48	ECJ0EB1A104K	0.1	
C49	ECJ0EB1H102K	0.001	
C50	ECJ0EC1H100D	10P	
C52	ECJ0EB1H102K	0.001	
C53	F1G1H151A541	150P	S
C57	ECJ0EC1H220J	22P	_
C58	ECJ0EB1H102K	0.001	
C60	F1J0J4750005	4.7	
C61	F1J0J4750005	4.7	
C66	ECJ0EC1H1R5C	1.5P	
C71	ECJ0EC1H100D	10P	
C93	ECUV1H101JCV	100P	
C94	ECUV1H101JCV ECUV1H101JCV	100P	
C94	ECUVIA1015CV ECUVIA105KBV	1	
C96	ECJ0EC1H100D	10P	
C97	ECJ0EC1H100D	10P	
C98	ECJ0EC1H100D	10P	
C99	ECJ0EC1H100D	10P	
C100	ECJ0EC1H100D	10P	
VT G	T.O.GD.3.DC.3.3.T.	(OTHERS)	
MIC	LOCBABOO0052	MICROPHONE	
E101	L5DCAYY00005	LIQUID CRYSTAL DISPLAY (*2)	
E102	PQHX11378Z	COVER, LCD COVER SHEET	
E103	PQHR11195Z	TRANSPARENT PLATE, LCD PLATE	
E104	PQHR11205Z	GUIDE, LCD	
E105	PQSA10197Z	ANTENNA	
IC4	PQLP10263Z	RF UNIT	
D8	D4ED1270A014	VARISTOR (SURGE ABSORBER)	
X1	H0D103500005	CRYSTAL OSCILLATOR	

15.4.3. Accessories and Packing Materials

Note:

(*1) You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

Ref. No.	Part No.	Part Name & Description	Remarks
A1	PQLV207BXZ	AC ADAPTOR	⚠
A2	PQJA10075Z	CORD, TELEPHONE	
A3	PQQX15322Z	INSTRUCTION BOOK (for English) (*1)	
Α4	PQQW15239Z	QUICK GUIDE (for Persian)	
A5	PQQW15240Z	QUICK GUIDE (for Arabic)	
A6	PQQW15437Z	LEAFLET, BATTERY	
A7	PQKE10456Z1	HANGER, BELT CLIP (for KX- TG7100BXS, for Service)	PC+ABS- HB
A7	PQKE10456Z2	HANGER, BELT CLIP (for KX- TG7100BXT, for Service)	PC+ABS- HB
A8	PQKL10074Z1	STAND, WALL MOUNT (for Service)	ABS-HB

Ref. No.	Part No.	Part Name & Description Remarks
P1	PQPP10116Z	PROTECTION COVER (for Base Unit)
P2	PQPP10084Z	PROTECTION COVER (for Hand-set)
P3	PQPD10734Z	CUSHION
P4	PQPK15231Z	GIFT BOX

15.4.4. Fixtures and Tools

Note:

- (*1) See The Setting Method of JIG (Base Unit) (P.44), and The Setting Method of JIG (Handset) (P.47).
- (*2) When replacing the Handset LCD, See **How to Replace the Handset LCD** (P.43).

Part No.	Part Name & Description	Remarks
PQZZ1CD300E	JIG CABLE (*1)	
PQZZTG7100BX	BATCH FILE CD-ROM (*1)	
PQZZ430PIR	TIP OF SOLDERING IRON (*2)	
PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)	

A.I/I KXTG7100BXS KXTG7100BXT KXTGA710CXS KXTGA710CXT