Service Manual

Caller ID Compatible



KX-TGA800BXS/BXT (handset)



KX-TG8021BXS/BXT (Base Unit)



Configuration for each model

Model No	Base Unit	Handset	Charger Unit	Expandable
KX-TG8021	1 (TG8021)	1 (TGA800)		Up to 6
KX-TGA800*		1 (TGA800)	1	

^{*} KX-TGA800 is also an optional accessory, which contains a handset and a charger.

Telephone Equipment
Model No. KX-TG8021BXS
KX-TG8021BXT
KX-TGA800BXS
KX-TGA800BXT

Digital Cordless Answering System

S: Silver Version

T: Titanium Black Version (for Middle Near East and Africa)

MARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by \triangle in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

- IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary sllightly from the actual product.

Note for TABLE OF CONTENTS:

Because sections 5, 6 and 7 of this manual are extract from the operating instructions for this model, they are subject to change without notice. You can download and refer to the original operating instructions on TSN Server for further information.

TABLE OF CONTENTS

		PAGE
1	Safety Precautions	4
	1.1. For Service Technicians	
2	Warning	
	2.1. Battery Caution	
	2.2. About Lead Free Solder (Pbf: Pb free)	
	2.3. Discarding of P.C. Board	
	Specifications	
4	Technical Descriptions	7
	4.1. Block Diagram (Base Unit)	
	4.2. Circuit Operation (Base Unit)	8
	4.3. Block Diagram (Handset)	11
	4.4. Circuit Operation (Handset)	
	4.5. Circuit Operation (Charger Unit)	13
_	4.6. Signal Route	
Э	Location of Controls and Components 5.1. Controls	
6	Installation Instructions	
U	6.1. Connections	
	6.2. Battery	
7	Operating Instructions	
-	7.1. Programmable Settings	19
	7.2. Registering a Handset to a Base Unit	
	7.3. Copying Phonebook Entries	
	7.4. Dialling Mode	21
	7.5. Error Messages	
	7.6. Troubleshooting	23
	7.7. For Service Hint	
8	Service Mode	
	8.1. Engineering Mode	
	8.2. Copying Phonebook Items when Repairing	
	8.3. How to Clear User Setting	32
9	Troubleshooting Guide	33
	9.1. Troubleshooting Flowchart	
	9.2. Troubleshooting by Symptom (Base Unit and Charger Unit)) 45
4 N	9.3. Troubleshooting by Symptom (Handset) Disassembly and Assembly Instructions	49 5 2
10	10.1. Disassembly Instructions	53 53
	10.2. How to Replace the Handset LCD	
11	Measurements and Adjustments	
	11.1. The Setting Method of JIG (Base Unit)	
	11.2. Adjustment Standard (Base Unit)	
	11.3. Adjustment Standard (Charger Unit)	
	11.4. The Setting Method of JIG (Handset)	
	11.5. Adjustment Standard (Handset)	64
	11.6. Things to Do after Replacing IC or X'tal	
	11.7. RF Specification	
	11.8. How to Check the Handset Speaker o	
	Receiver	
	11.9. Frequency Table (MHz)	
12	Miscellaneous	
	12.1. CPU Data (Base Unit)	
	12.2. CPU Data (Handset)	
	12.3. How to Replace the Flat Package IC	
	12.4. Terminal Guide of the ICs, Transistors and Diodes	
12	Schematic Diagram	
13		76 76

	PAGE
13.2. Schematic Diagram (Base Unit_Main)	78
13.3. Schematic Diagram (Base Unit_Operation)	80
13.4. Schematic Diagram (Handset)	82
13.5. Schematic Diagram (Charger Unit)	84
14 Printed Circuit Board	85
14.1. Circuit Board (Base Unit_Main)	85
14.2. Circuit Board (Base Unit_Operation)	87
14.3. Circuit Board (Handset)	89
14.4. Circuit Board (Charger Unit)	91
15 Exploded View and Replacement Parts List	92
15.1. Cabinet and Electrical Parts (Base Unit)	92
15.2. Cabinet and Electrical Parts (Handset)	93
15.3. Cabinet and Electrical Parts (Charger Unit)	94
15.4. Accessories and Packing Materials	95
15.5. Replacement Part List	97

1 Safety Precautions

1.1. For Service Technicians

- Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work.
 - 1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
 - 2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
 - 3. FASTON terminals shall be plugged straight in and unplugged straight out.
- · ICs and LSIs are vulnerable to static electricity.

When repairing, the following precautions will help prevent recurring malfunctions.

- 1. Cover plastic parts boxes with aluminum foil.
- 2. Ground the soldering irons.
- 3. Use a conductive mat on worktable.
- 4. Do not grasp IC or LSI pins with bare fingers.

2 Warning

2.1. Battery Caution

- 1. Danger of explosion if battery is incorrectly replaced.
- 2. Replace only with the same or equivalent type recommended by the manufacturer.
- 3. Dispose of used batteries according to the manufacture's Instructions.

2.2. About Lead Free Solder (Pbf: Pb free)

Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.


Caution

- PbF solder has a melting point that is 50 °F ~ 70 °F (30 °C ~ 40 °C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 °F ± 20 °F (370 °C ± 10 °C).
- · Exercise care while using higher temperature soldering irons.:
- Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

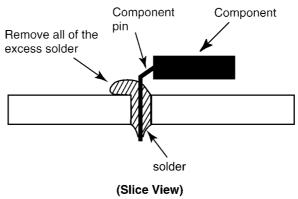

2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu) or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials. The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

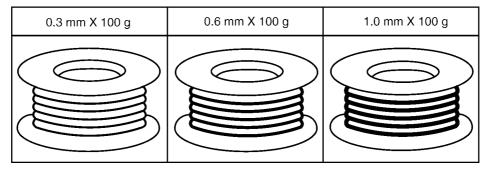

2.3. Discarding of P.C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

Specifications

■ Standard:

DECT (Digital Enhanced Cordless

Telecommunications),

GAP (Generic Access Profile)

■ Number of channels:

120 Duplex Channels ■ Frequency range:

1.88 GHz to 1.90 GHz

■ Duplex procedure:

TDMA (Time Division Multiple Access)

■ Channel spacing:

1,728 kHz

■ Bit rate:

1,152 kbit/s

■ Modulation:

GFSK (Gaussian Frequency Shift Keying)

■ RF transmission power:

Approx. 10mW (average power per channel)

■ Voice coding: ADPCM 32 kbit/s ■ Power source (AC Adaptor):

220-240 V AC, 50/60 Hz Base unit: PQLV207BXU Charger: PQLV209BXU ■ Power consumption

Base unit:

Standby: Approx. 2.3 W Maximum: Approx. 6.1 W

Charger:

Standby: Approx. 1.1 W Maximum: Approx. 5.2 W ■ Operating conditions:

5 $^{\circ}$ C-40 $^{\circ}$ C, 20 $^{\circ}$ -80 $^{\circ}$ relative air humidity

(dry)

■ Dimensions:

Base unit: Approx. 44 mm x 143 mm x 107 mm Handset: Approx. 155 mm x 48 mm x 34 mm Charger: Approx. 51 mm x 75 mm x 88 mm

■ Mass (weight):

Base unit: Approx. 170 g Handset: Approx. 130 g Charger: Approx. 60 g

Note:


• Design and specifications are subject to change without notice.

Note for Service:

- Operation range: Up to 300 m outdoors, Up to 50 m indoors, depending on the condition.
- · Analog telephone connection: Telephone Line

4 Technical Descriptions

4.1. Block Diagram (Base Unit)

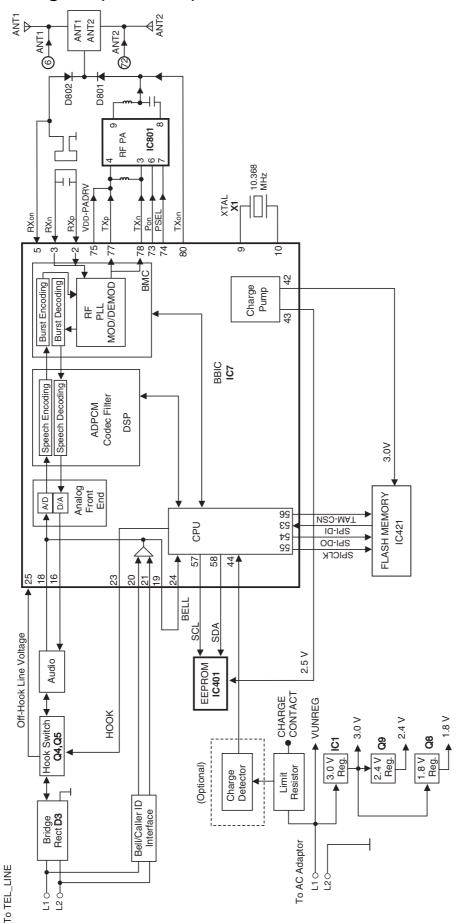

KX-TG8021 BLOCK DIAGRAM (BASE UNIT)

4.2. Circuit Operation (Base Unit)

4.2.1. **Outline**

Base Unit consists of the following ICs as shown in Block Diagram (Base Unit) (P.7).

- DECT BBIC (Base Band IC): IC7
 - Handling all the audio, signal and data processing needed in a DECT base unit
 - Controlling the DECT specific physical layer and radio section (Burst Module Controller section)
 - ADPCM code filter for speech encoding and speech decoding (DSP section)
 - Echo-cancellation and Echo-suppression (DSP section)
 - Any tones (tone, sidetone, ringing tone, etc.) generation (DSP section)
 - DTMF receiver (DSP section)
 - Clock Generation for RF Module
 - ADC, DAC, timer, and power control circuitry
 - PLL Oscillator
 - Detector
 - Compress/Expander
 - First Mixer
 - All interfaces (ex: RF Power Amp, EEPROM, LED, Analog Front End, etc.)
- RF Power Amp.: IC801
 - Amplifier for transmission and reception
- EEPROM: IC401
 - Temporary operating parameters (for RF, etc.)
- FLASH MEMORY: IC421
 - Voice Prompt (TAM) D/L Area
 - ICM/OGM Recording Area
- · Additionally,
 - Power Supply Circuit (+3.0 V, +2.4 V, +1.8 V output)
 - Crystal Circuit (10.368 MHz)
 - Charge Circuit
 - Telephone Line Interface Circuit

4.2.2. Power Supply Circuit

The power is supplied to the DECT BBIC, RF Module, EEPROM and Charge Contact from AC Adaptor (+6.5 V) as shown in Fig.101. The power supply is as follows;

• DECT BBIC (IC7):

DC Jack (+6.5 V) \rightarrow IC1 \rightarrow Q9 \rightarrow IC7

DC Jack (+6.5 V) \rightarrow IC1 \rightarrow Q8 \rightarrow IC7

• RF Power Amp. (IC801):

DC Jack (+6.5 V) \rightarrow IC1 \rightarrow IC801 (Power AMP)

• EEPROM (IC401):


DC Jack (+6.5 V) \rightarrow IC1 \rightarrow IC7 \rightarrow IC401

• FLASH MEMORY (IC421):

DC Jack (+6.5 V) \rightarrow IC1 \rightarrow IC7 \rightarrow IC421

• Charge Contact (TP16):

DC Jack (+6.5 V) \rightarrow R57 \rightarrow D22 \rightarrow R56 \rightarrow R55 \rightarrow TP16

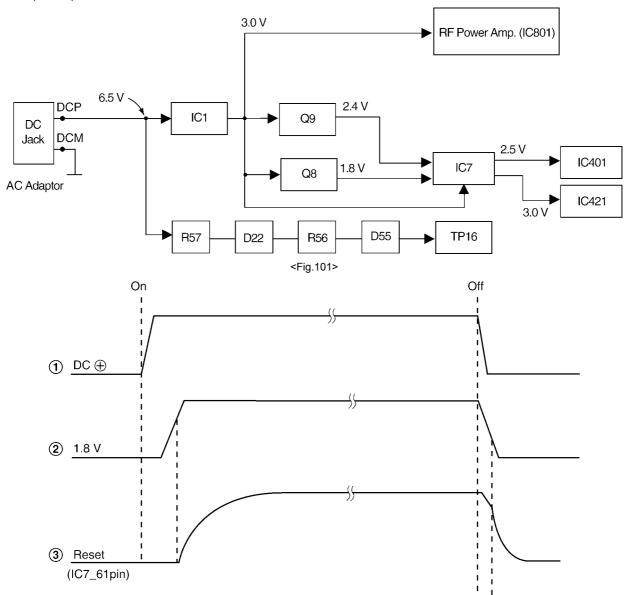

4.2.3. Telephone Line Interface

<Function>

- · Bell signal detection
- · Clip signal detection
- · ON/OFF hook circuit

Bell & Clip (: Calling Line Identification Presentation: Caller ID) signal detection:

In the standby mode, Q3 is open to cut the DC loop current and decrease the ring load.

When ring voltage appears at the L1T (A) and L1R (B) leads (when the telephone rings), the AC ring voltage is transferred as follows;

- B \rightarrow L2 \rightarrow C4 \rightarrow R6 \rightarrow R33 \rightarrow IC7 Pin 21 (CID INp)
- A \rightarrow L1 \rightarrow C3 \rightarrow R4 \rightarrow R35 \rightarrow IC7 Pin 20 (CID INn)

ON/OFF hook circuit:

In the standby mode, Q3 is open, and connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an **on-hook condition**.

When IC7 detects a ring signal or press the TALK Key onto the handset, Q4 turns on and then Q3 turns on, thus providing an **off-hook condition** (DC current flows through the circuit) and the following signal flow makes the loop current.

• B \rightarrow L2 \rightarrow D3 \rightarrow Q3 \rightarrow Q5 \rightarrow R21 \rightarrow R22 \rightarrow D3 \rightarrow L1 \rightarrow A [OFF HOOK]

4.2.4. Transmitter/Receiver

· Audio Circuits and DTMF tone signal circuits.

Base Unit and Handset mainly consist of RF Module and DECT BBIC.

Base Unit and Handset transmit/receive voice signal and data signal through the antenna on carrier frequency.

Signal Path:

*Refer to Signal Route (P.14).

4.2.4.1. Transmitter Block

The voice signal input from the TEL LINE interface goes to RF Power Amp. (IC801) through DECT BBIC (IC7) as shown in **Block Diagram (Base Unit)** (P.7)

The voice signal passes through the analog part of IC7 where it is amplified and converted to a digital audio stream signal. The burst switch controller processes this stream performing encryption and scrambling, adding the various other fields to produce the GAP (Generic Access Profile) standard DECT frame, assigning to a time slot and channel etc.

In IC7, the carrier frequency is changing, and frequency modulated RF signal is generated. In IC801,RF signal is amplified, and radiated from antenna. Handset detects the voice signal or data signal in the circuit same as the following explanation of Receiver Block.

4.2.4.2. Receiver Block


The signal of 1900 MHz band (1881.792 MHz ~ 1897.344 MHz) which is input from antenna is input to IC7 as shown in **Block Diagram (Base Unit)** (P.7).

In IC7, the signal of 1900 MHz band is downconverted to 864 kHz signal and demodulated, as GAP (**G**eneric **A**ccess **P**rofile) standard DECT frames. It passes through the decoding section burst switch controller where it separates out the frame information and performs de-encryption and de-scrambling as required. It then goes to the DSP section where it is turned back into analog audio. This is amplified by the analog front end, and goes to the TEL LINE Interface.

4.2.4.3. Pulse Dialling

During pulse dialling the hookswitch (Q3, Q4) is used to generate the pulses using the HOOK control signal, which is set high during pulses. To force the line impedance low during the "pause" intervals between dial pulses, the PULSE_DIAL signal turns on Q2.

4.3. Block Diagram (Handset)

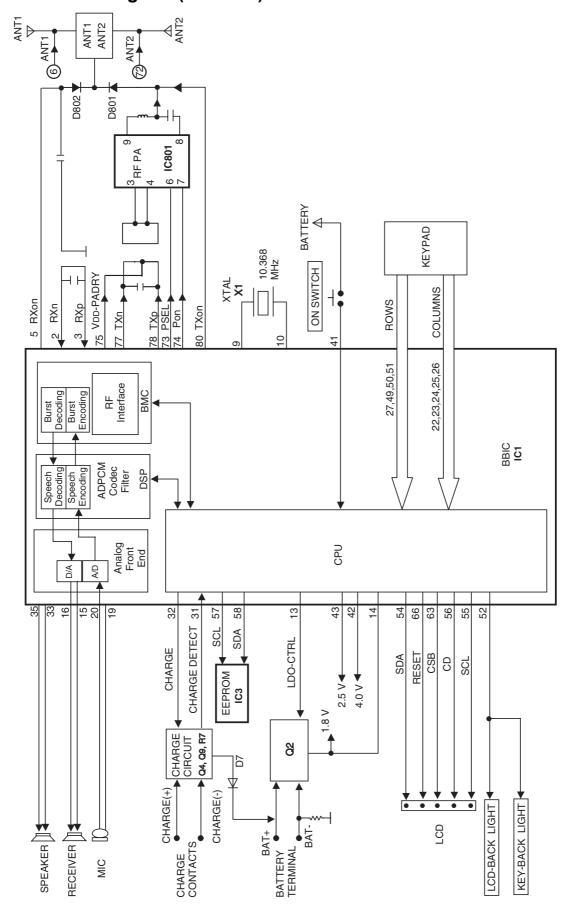

4.4. Circuit Operation (Handset)

4.4.1. Outline

Handset consists of the following ICs as shown in Block Diagram (Handset) (P.11).

- DECT BBIC (Base Band IC): IC1
 - All data signals (forming/analyzing ACK or CMD signal)
 - All interfaces (ex: Key, Detector Circuit, Charge, DC/DC Converter, EEPROM, LCD, RF Power Amp.)
 - PLL Oscillator
 - Detector
 - Compress/Expander
 - Reception
- RF Power Amp: IC801
 - Amplifier for transmission
- EEPROM: IC3
 - Temporary operating parameters (for RF, etc.)


4.4.2. Power Supply Circuit/Reset Circuit

Circuit Operation:

When power on the Handset, the voltage is as follows;

BATTERY(2.2 V ~ 2.6 V: BATT+) \rightarrow F1 \rightarrow Q2 (1.8 V), IC1-43pin (2.5V)

The Reset signal generates IC1 (61 pin) and 1.8 V.

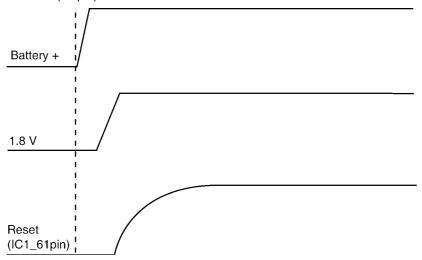

4.4.3. Charge Circuit

Circuit Operation:

When charging the handset on the Base Unit, the charge current is as follows;

 $DC+(6.5 \text{ V}) \rightarrow R57 \rightarrow D22 \rightarrow R56 \rightarrow R55 \rightarrow CHARGE+(Base) \rightarrow CHARGE+(Handset) \rightarrow L4 \rightarrow Q4 \rightarrow D7 \rightarrow F1 \rightarrow BAT-TERY+... \ Battery...$

 $\mathsf{BATTERY} \to \mathsf{R45} \to \mathsf{GND} \to \mathsf{L5} \to \mathsf{CHARGE}\text{-}(\mathsf{Handset}) \to \mathsf{CHARGE}\text{-}(\mathsf{Base}) \to \mathsf{GND} \to \mathsf{DC}\text{-}(\mathsf{GND})$

In this way, the BBIC on Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q9 of Handset.

Refer to Fig.101 in Power Supply Circuit (P.9).

4.4.4. Battery Low/Power Down Detector

Circuit Operation:

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

· Battery Low

Battery voltage: V(Batt) ≤ 2.25 V ± 50 mV

The BBIC detects this level and " starts flashing.

Power Down

Battery voltage: V(Batt) ≤ 2.0 V ± 50 mV

The BBIC detects this level and power down.

 
4.4.5. Speakerphone

The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm.

4.5. Circuit Operation (Charger Unit)

4.5.1. Power Supply Circuit

The power supply is as shown.



AC Adaptor

4.6. Signal Route


```
SIGNAL
                                                  ROUTE
SIGNAL ROUTE I
                     IN -
                                                                                     OUT
DTMF TONE
                 (BASE UNIT)
                 IC7 (16) - R116 - R29 - C22 - Q5 - Q3 - D3 _ L1 - A
TEL OUT
(to Tel Line)
                 (BASE UNIT)
DTMF TONE
                 A - L1 __ D3 - Q3 - R20 - C56 - R117 - IC7 (18)
TEL IN
(from Tel Line)
CDL TX
                 (HANDSET)
                (to Tel Line)
                (BASE UNIT)
                                                                            - C832 - IC7 (3)
                from HANDSET ANT1 - C117 - DA1 - C123 - C803 - D802 - C826 -
                                                                            - C833 - IC7 (2)
                               ANT2 - C124 →
                   - IC7 (16) - R116 - R29 - C22 - Q5 - Q3 - D3 ┬ L1 - A
              ∸ (BASE UNIT)
CDL RX
               A - L1 — D3 - Q3 - Q5 - R20 - C56 - R117 - IC7 (18) — IC7 (77) - IC801 (4) —
(from Tel Line)

→ IC801 (9) -
                                                                − IC7 (78) - IC801 (3) ⅃
                B - L2 🗕
                L802 - L804 - C812 - D801 - C801 - C803 - C123 - DA1 — C117 - ANT1 to HANDSET
              (HANDSET)
              I from BASE UNIT ANT1 - C117 DA1 - C803 - D802 - C826 C832 - IC1 (3) ANT2 - C124 C833 - IC1 (2)
                IC (16) - L15 - RECEIVER (+) IC (15) - L14 - RECEIVER (-)

→ (BASE UNIT)

Caller ID
              (from Tel Line)
                D801 - C801 - C803 - C123 - DA1 ___ C117 - ANT1 to HANDSET


─ (HANDSET)
SP-PHONE TX
                MIC (+) - R320 - C11 - RA4 - IC1 (20) TIC1(77) - IC801 (4) IC801 (9) - L802 - L804 - C812 - C13 - RA4 - IC1 (19) TIC1(78) - IC801 (3) IC801(9) - L802 - L804 - C812 -
(to Tel Line)
                                       T C117 - ANT1 to BASE
                D801 - C803 - DA1
              (BASE UNIT)
                from HANDSET ANT1 - C117 DA1 - C123 - C803 - C801 - D802 - C826 C832 - IC7 (3)
ANT2 - C124 C833 - IC7 (2)
                                                                                 C833 - IC7 (2)
                 — IC7 (16) - R116 - R29 - C22 - Q5 - Q3 - D3 — L1 - A
                                                      L2 - B
SP-PHONE RX
               (BASE UNIT)
                (to Tel Line)
                L802 - L804 - C812 - D801 - C801 - C803 - C123 - DA1 — C117 - ANT1 to HANDSET
                (HANDSET)
                from BASE UNIT ANT1 - C117 — DA1 - C803 - D802 - C826 — C832 - IC1 (3) ANT2 - C124 — C124 — C833 - IC1 (2)
                IC (33) - SP (+)
IC (35) - SP (-)
```

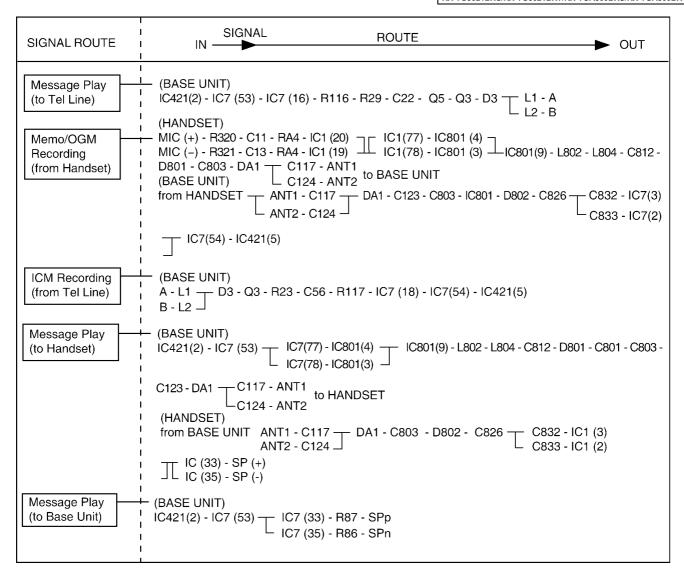

Location of Controls and Components

5.1. **Controls**

5.1.1. **Base Unit**

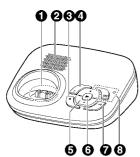


- 1 Charge contacts
- Speaker

- ② [X] (Erase)
 ③ [A] (Volume up)
 [▼] (Volume down) [I◄◄] (Repeat) [►►I] (Skip)
- **③** [▶] (Play) Message indicator
- **7** [••••] (Locator)
- (Answer on) Answer on indicator

5.1.2. Handset

Handset

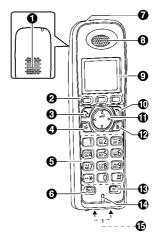

- Speaker
- Soft keys
- **②** [**↑**] (Talk)
- **②** [♣] (Speakerphone)
- 6 Dial keypad
- **⑥** [R/⊕]
 - R: Recall/Flash
 - ⊕: Alarm shortcut key
- Charge indicator Ringer indicator
- Receiver
- O Display
- **①** [★①] (Off/Power)
- Navigator key ([▲]/[▼]/[◄]/[►]) ∠ (Volume: [▲]/[▼])
- ② 【C/
 図】(Clear/Mute)
- (INT) (Intercom)
- Microphone
- Charge contacts


6 Installation Instructions

6.1. Connections

Connect the AC adaptor cord (1) by pressing the plug firmly (2). Connect the telephone line cord until it clicks into the base unit and telephone line jack (3).


Base unit

- Use only the supplied Panasonic AC adaptor PQLV207BXU.
- Use only the supplied telephone line cord.
 Using another telephone line cord may not allow the unit to work properly.

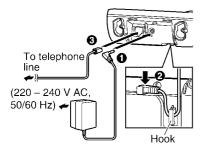

Charger

 • Use only the supplied Panasonic AC adaptor PQLV209BXU.



Note:

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.


During a power failure

The unit will not work during a power failure. We recommend connecting a corded-type telephone (without AC adaptor) to the same telephone line or to the same telephone line jack using a T-adaptor.

If you subscribe to a DSL/ADSL service

Please attach a DSL/ADSL filter (contact your DSL/ADSL provider) to the telephone line between the base unit and the telephone line jack in the event of the following:
-noise is heard during conversations.

-Caller ID features do not function properly.

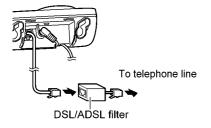


6.2. Battery


6.2.1. Battery Installation and Replacement

Important:

 - Use the supplied rechargeable batteries (Part No.HHR-55AAAB).
- When installing the batteries:
 - Wipe the battery ends (⊕, ⊝) with a dry cloth.
 - Avoid touching the battery ends (\bigoplus, \bigcirc) or the unit contacts.
 - Confirm correct polarities (⊕, ⊝).
- When replacing the batteries:
 - USE ONLY rechargeable Ni-MH batteries AAA (R03) size.
 - Do NOT use Alkaline/Manganese/Ni-Cd batteries.
 - We recommend using the Panasonic rechargeable batteries HHR-4MPT.
- 1 Firmly press the notch on the handset cover and slide it in the direction of the arrow.



2 Insert the batteries negative (⊕) end first. Close the handset cover.

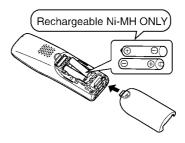

Important:

 If the handset does not automatically turn on after installing/replacing batteries, press [⅍ℚ] for about 1 second, or place the handset on the base unit or charger.

Note:

• When replacing batteries, remove the old batteries.



See For Service Hint (P.25)

6.2.2. Battery Charge

Place the handset on the base unit or charger for about 7 hours before initial use.

While charging, "Charging" is displayed and the charge indicator on the handset lights up. When the batteries are fully charged, "Charge Completed" displays. The charge indicator stays lit even after the batteries are fully charged.





Note:

- It is normal for the handset to feel warm during charging.
- If you want to use the unit immediately, charge the batteries for at least 15 minutes.
- Clean the charge contacts of the handset, base unit, and charger with a soft, dry cloth. Clean if the unit is exposed to grease, dust, or high humidity.

Note for service:

The battery strength may not be indicated correctly if the battery is disconnected and connected again, even after it is fully charged. In that case, by recharging the battery as mentioned above, you will get a correct indication of the battery strength.

6.2.3. Battery Level

Battery icon	Battery level
(III)	High
	Medium
	Low When flashing: Needs charging.

6.2.4. Panasonic Ni-MH Battery Performance (supplied batteries)

Operation	Operating time
In continuous use	14 hours max.
Not in use	240 hours (10 days) max.
(standby)	

Note:

- It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/ discharge (use).
- Actual battery performance depends on a combination of how often the handset is in use and how often it is not in use (standby).
- Even after the handset is fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries.
- The battery level may not be displayed correctly after you replace the batteries. In this case, place the handset on the base unit or charger and let it charge for at least 7 hours.

7 Operating Instructions

7.1. Programmable Settings

You can customise the unit by programming the following features using the handset.

Programming by scrolling through the display menus

- 1 (middle soft key)
- 2 Select the desired top-menu by pressing [\blacktriangledown], [\blacktriangle], or [\blacktriangleright]. \longrightarrow OK
- 3 Press [V] or [A] to select the desired item in sub-menu 1. \longrightarrow **OK**
 - In some cases, you may need to select from sub-menu 2. → OK
- 4 Press (▼) or (▲) to select the desired setting. → **OK**
 - This step may vary depending on the feature being programmed.
 - To exit the operation, press [★①].

Note:

- For other top-menus, please refer to each chapter.
- In the following table, <> indicates the default settings.
- The current item or setting is highlighted on the display.

Top-menu	Sub-menu 1	Sub-menu 2	Remarks (Selectable options)
Handset Setup	Time Settings	Set Date & Time *1*2*3	_
		Memo Alarm	Alarm1 to 3(Off/Once/Daily)
		Time Adjustment *2*3 <manual></manual>	Caller ID [Auto]/Manual
	Ringer Setup	Ringer Volume <maximum></maximum>	Off/Volume 1 to 6 *12
		Ringtone *4 *5 <ringtone 1=""></ringtone>	15 (5 tone + 10 melody)
		Night Mode ■ Start/End <23:00/06:00>	_
		■ On/Off <off></off>	On/Off
		■ Ring Delay <60 sec.>	30/60/90/120 sec and No Ringing
		■ Select Category	Category 1 to 9
	Display Setup	Wallpaper <pre><wallpaper 1=""></wallpaper></pre>	Off/Wallpaper 1 to 3
		Display Colour <colour 1=""></colour>	Colour 1 to 5
		Standby Display *6 <off></off>	Off/Handset Number/Base Number
		LCD Dimming '7 <on></on>	On/Off
		Select Language <english></english>	3 languages selectable
		Contrast 3>	Contrast 1 to 6
	Registration	Register H.set	See "Registering a Handset to the Base Unit".
	Select Base <auto></auto>	_	Auto/Base 1 to 4 *13
	Keytones *8 <on></on>	_	On/Off
	Auto Talk '9 <off></off>	_	On/Off
Base Unit Setup*3	Ringer Volume ^{*10} < Medium>	_	Off/low/Medium /High *12
	Dial Mode <tone></tone>	_	Tone/Pulse
	Recall/Flash '11 <600 msec.>	_	80/90/100/110/160/200/250/300/400/600/700/900 msec *12
	Area Code		Up to 1 number (5 digits)
	Base Unit PIN <0000>	_	"0000"-"9999" (4 diigts)
	Repeater Mode *1 <off></off>	_	On/Off

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

- *1 The item will not be reset when pressing 1, 5, 9 and \times key of the handset. Refer to **How to Clear User Setting** (P.32).
- *2 The item will not be reset when pressing (3), (5), (7) and (#) keys. Refer to **How to Clear User Setting** (P.32).
- *3 If you program these settings using one of the handsets, you do not need to program the same item using another handset.
- *4 If you select one of the melody ringer tones, the ringer tone continues to play for several seconds even if the caller has already hung up. You may either hear a dial tone or no one on the line when you answer the call.
- *5 The preset melodies in this product are used with permission of @ 2007 Copyrights Vision Inc.
- *6 "off": Displays the current date and time only.
 - "Handset Number": Displays the handset number such as "[1]".
 - "Base Number": Displays the base unit number such as "-1-".
- *7 This feature allows the handset to switch itself to dimmed backlight mode after being placed on the base unit or charger.
 - "On": Backlight is dimmed.
 - "Off": Backlight turns off after 10 seconds of charging.
- *8 Turn this feature off if you prefer not to hear key tones while you are dialling or pressing any keys, including confirmation tones and error tones.
- *9 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature.
- *10 KX-TG8021
- *11 The recall/flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary.
- *12 The items are not shown on the display.
- *13 Here, only the case that a handset is registered to a maximum of 4 Base units is mentioned.

Cross Reference:

Registering a Handset to a Base Unit (P.20)

7.1.1. Answering System Settings

Answering system setting	Default setting	Remarks (selectable options)
Answering system on/off	Answer On	Answer On/Answer Off
Remote access code	_	000~999/Off (⋈)
Number of rings	4 Rings	Auto/2 to 7 Rings
Caller's recording time	3 Minutes	1 Minute/3 Minutes/Greeting Only
Call screening	On	On/Off

7.2. Registering a Handset to a Base Unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example, Υ flashes even when the handset is near the base unit), re-register the handset.

1 Handset:

 \blacksquare (middle soft key) \rightarrow \blacksquare \rightarrow **OK**

- 2 [▼]/[▲]: "Registration" → OK 2 times
- 3 [V]/[A]: Select a base unit number. \rightarrow **OK**
 - This number is used by the handset as a reference only.

4 Base unit:

Proceed with the operation for your model.

■ KX-TG8011/KX-TG8012

Press and hold (•)) for about 5 seconds. (No registration tone)

■ KX-TG8021

Press and hold [•)) for about 5 seconds, until the registration tone sounds.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

5 Handset:

Wait until "Enter Base PIN" is displayed. → Enter the base unit PIN (default: "0000"). → OK

- If you forget your PIN, see For Service Hint.
- When the handset has been registered successfully, \(\bar{Y} \) stops flashing.

Note:

• When you purchase an additional handset, refer to the additional handset's installation manual for registration.

Cross Reference:

For Service Hint (P.25)

7.2.1. Deregistering a Handset

A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This allows the handset to end its wireless connection with the system.

- 1 \blacksquare (middle soft key) \rightarrow \blacksquare \rightarrow \bigcirc K
- 2 [3][3][5]
- 3 [▼]/[▲]: "Deregistration" → OK
 - The numbers of all handsets registered to the base unit are displayed.
- 4 Select the handset(s) you want to cancel by pressing the desired handset number. \rightarrow **OK**
 - The selected handset number(s) flashes.
 - To cancel a selected handset number, press the number again. The number stops flashing.
- 5 [▼]/[▲]: "Yes" → **⊙**K
 - A confirmation tone sounds as each handset number disappears.
 - The handset does not beep when cancelling its own registration.
- 6 [%0]

7.3. Copying Phonebook Entries

You can copy phonebook entries to the phonebook of another compatible Panasonic handset.

Note:

Category settings for phonebook entries are not copied.

7.3.1. Copying All Entries

- 1 \bowtie (left soft key) \rightarrow \equiv
- 2 [V]/[A]: "Copy All" \rightarrow OK
- 3 Enter the handset number you wish to send the phonebook entry to.
 - When all entries have been copied, "Completed" is displayed.
- 4 [%0]

7.4. Dialling Mode

If you cannot make calls, change this setting according to your telephone line service. The default setting is "Tone".

- 1 \blacksquare (middle soft key) $\rightarrow \blacksquare$ \rightarrow OK
- 2 [v]/[A]: "Dial Mode" \rightarrow OK
- 3 $[\mathbf{v}] / [\mathbf{A}]$: Select the desired setting. $\rightarrow \mathbf{OK} \rightarrow [\mathbf{7} \mathbf{0}]$

[&]quot;Tone": For tone dial service.

[&]quot;Pulse": For rotary/pulse dial service.

7.5. Error Messages

If the unit detects a problem, one of the following messages is shown on the display.

Display message	Cause/solution
Answer Sys. Full ^{*1}	Erase unnecessary messages.
Check Tel Line	The supplied telephone line cord has not been connected yet or not connected properly. Check the connections.
Error*1	Recording was too short. Try again.
Failed	Phonebook copy failed. Confirm the other handset (the receiver) is in standby mode and try again.
Incomplete	The receiver's phonebook memory is full. Erase the unnecessary phonebook entries from the other handset (the receiver) and try again.
Memory Full	 The phonebook memory is full. Erase unnecessary entries. Message memory is full. Erase unnecessary messages.*1 The maximum number of base units (4) is already registered to the handset. Cancel unused base unit registrations from the handset.
No link to base. Reconnect AC adaptor.	 The handset has lost communication with the base unit. Move closer to the base unit and try again. Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again. The handset's registration may have been cancelled. Re-register the handset.
Use rechargeable battery.	A wrong type of batteries such as Alkaline or Manganese was inserted. Use only the rechargeable Ni-MH batteries.
You must first subscribe to Caller ID.	You must subscribe to a Caller ID service. Once you receive caller information after subscribing to a Caller ID service, this message will not be displayed.

^{*1} KX-TG8021

7.6. Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the base unit's AC adaptor and turn off the handset, then reconnect the base unit's AC adaptor and turn on the handset.

General use

Problem	Cause/solution
The unit does not work.	 Make sure the batteries are installed correctly. Fully charge the batteries. Check the connections. Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again. The handset has not been registered to the base unit. Register the handset.
The handset display is blank or goes dark when on a call.	 The handset is in screen saver mode. Activate the handset display again by: pressing [◄] or [►] when on a call. pressing [★①] at all other times. "LCD Dimming" is set to "Off" while on charge. Change the setting. The handset is not turned on. Turn the power on.
The handset phonebook entries I copied are not displayed correctly.	 Undisplayable characters are replaced with spaces for entries copied from/to additional handsets other than KX-TGA800BX.
I cannot hear a dial tone.	 The base unit's AC adaptor or telephone line cord is not connected. Check the connections. If you are using a splitter to connect the unit, remove the splitter and connect the unit to the wall jack directly. If the unit operates properly, check the splitter. Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider/telephone company.
I do not know how to erase (Missed call) from the display.	 There are unviewed missed calls remaining. View them and erase → in the following way. 1

Programmable settings

Problem	Cause/solution
I have changed the display language to a language I cannot read.	Change the display language.
While programming, the handset starts to ring.	 A call is being received. Answer the call and start again after hanging up.
I cannot register a handset to a base unit.	 The maximum number of base units (4) is already registered to the handset. Cancel unused base unit registrations from the handset. The maximum number of handsets (6) is already registered to the base unit. Cancel unused handset registrations from the base unit. You entered the wrong PIN. If you forget your PIN, see For Service Hint. Place the handset and the base unit away from other electrical appliances.

Battery recharge

Problem	Cause / solution	
The handset beeps and/or	 Battery charge is low. Fully charge the batteries. 	
flashes.		
I fully charged the batteries,	 Clean the charge contacts and charge again. 	
but s till flashes.	• It is time to replace the batteries.	
I fully charged the batteries,	ullet Clean the battery ends $(ullet, igoriangle)$ and the	
but the operating time seems	charge contacts with a dry cloth, and charge again.	
to be shorter.		

Making/answering calls, intercom

Problem	Cause/solution
♥ is flashing.	 The handset is not registered to the base unit. Register it. The handset is too far from the base unit. Move closer. The base unit's AC adaptor is not connected. Check the connections. You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference.
Noise is heard, sound cuts in and out.	 You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. Move closer to the base unit. If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details.
The handset does not ring.	The ringer volume is turned off. Adjust ringer volume.Night mode is turned on. Turn it off.
The base unit does not ring.*1	The ringer volume is turned off. Adjust ringer volume.
I cannot make a call.	 The dialling mode may be set incorrectly. Change the setting. The handset is too far from the base unit. Move closer and try again. Another unit is in use. Wait and try again later. Answering system is being used.*1 Wait and try again later. The key lock feature is turned on. Turn it off.

*1 KX-TG8021

Caller ID

Problem	Cause / solution
Caller information is not displayed.	 You must subscribe to a Caller ID service. Contact your service provider/telephone company for details. If your unit is connected to any additional telephone equipment, remove and plug the unit directly into the wall jack. If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details. Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.
Caller information is slow to display. Time on the unit has shifted.	 Depending on your service provider/telephone company, the unit may display the caller's information at 2nd ring or later. Move closer to the base unit. Incorrect time information from incoming Caller ID
Time on the unit has shinted.	changes the time. Set the time adjustment to off.

Answering system (KX-TG8021)

Problem	Cause/solution
The unit does not record new messages.	 The answering system is turned off. Turn it on. The message memory is full. Erase unnecessary messages. The recording time is set to "Greeting Only". Change the setting. If you subscribe to the voice mail service, messages are recorded by your service provider/telephone company not your telephone. Change the unit's number of rings setting or contact your service provider/telephone company.
My own greeting message cannot be properly heard.	Record your own greeting message again.
I cannot operate the answering system.	 Someone is using the unit. Wait for the other user to finish. A caller is leaving a message. Wait for the caller to finish. The handset is too far from the base unit. Move closer.
I cannot operate the answering system remotely.	 You are entering the wrong remote access code. If you have forgotten your remote access code, enter the remote access code setting to check your current code. Press each key firmly. The answering system is turned off. Turn it on. You are using a rotary/pulse telephone. Try again using a touch-tone phone.
While recording a greeting message or listening to messages, the unit rings and recording stops.	A call is being received. Answer the call and try again later.

Liquid damage

Problem	Cause / solution
Liquid or other form of moisture has entered the handset/base unit.	Disconnect the AC adaptor and telephone line cord from the base unit. Remove the batteries from the handset and leave to dry for at least 3 days. After the handset/base unit are completely dry, reconnect the AC adaptor and telephone line cord. Insert the batteries and charge fully before use. If the unit does not work properly, contact your nearest Panasonic service centre.

Caution:

 To avoid permanent damage, do not use a microwave oven to speed up the drying process.

7.7. For Service Hint

Items	Contents
Battery	You could use other rechargeable batteries sold in a market, but the unit is not guaranteed to work properly.
	The battery strength may not be indicated correctly if the battery is disconnected and connected again, even after it is fully charged. In that case, by recharging the battery as mentioned in Battery Charge , you will get a correct indication of the battery strength.
PIN Code	 Change the PIN using the following method. 1

Cross Reference:

Battery Charge (P.18)


8 Service Mode

8.1. Engineering Mode

8.1.1. Base Unit

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

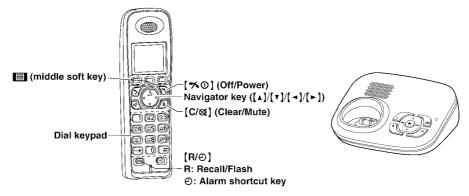

H/S key operation

H/S LCD

- 1). Register a Handset to a Base Unit. (*1)
- Base Unit Setup
- 2). Press (middle soft key).
- 3). Select "Base Unit Setup" using [♠][▼][◄] or [►] then press **OX** .
- 4). Enter "7", "2", "6", "2", "7", "6", "6", "4".

 Note: 7262 7664 = PANA SONI

 (see letters printed on dial keys.)



Set Address:

**

ro ok ■

- 5). Select "Write EEPROM" using [▲]or[▼] then press **OK** .
- 6). Enter "●", "●", "●", "●" (Address). (*2)
- 7). Enter "*", "*" (New Data). (*2)
- 8). Press [m] (middle soft key), a long confirmation beep will be heard.
- Set Address:

 New Data

 Set Address:

 Address:

4000

Default Data

9). Press [* •] (off) to return to standby mode.

After that, turn the base unit power off and then power on.

26

Frequently Used Items (Base Unit) ex.)

Items	Address	Default Data	New	Data	Remarks
C-ID (FSK) sensitivity	04 D6	00	01 (6 dB up)	02 (12 dB up)	When hex changes from "00" to "01" or "02", gain increases by 6 dB or 12 dB.
C-ID (DTMF) sensitivity	04 E4	50	60 (6 dB up)	70 (12 dB up)	When hex changes from "50" to "60" or "70", gain increases by 6 dB or 12 dB.
Frequency	00 02/00 01	03/50	-	-	Use these items in a READ-ONLY mode to
ID	00 10~00 14	Given value	-	-	confirm the contents. Careless rewriting may cause serious damage to the computer system.
Bell length	01 F5	32 (5 sec) (*3)	1E (3 sec)	14 (2 sec)	This is time until bell stops ringing. (Unit: 100 ms)
PULSE Dial speed (10PPS -> 20PPS)	03 B2	28 (40 msec) (*3)	19 (20 msec)	-	This is pulse make time. (Unit: 1 ms)
	03 B3	3C (60 msec) (*3)	19 (30 msec)	-	This is pulse break time. (Unit: 1 ms)
	01 E4	57 (870 msec) (*3)	2C (440 msec)	-	This is inter-digit time in pulse mode. (Unit: 10 ms)

Note:

- (*1) Refer to Registering a Handset to a Base Unit (P.20)
- (*2) When you enter the address or New Data, please refer to the table below.

Desired Number (hex)	Input Keys	Desired Number (hex)	Input Keys
0	0	A	[R] + 0
1	1	В	[R] + 1
		С	[R] + 2
		D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5


(*3)

Bell length	32(hex) = 50(dec) → 50 × 100 msec = 5000 msec (5 sec)
PULSE Dial speed	28 (hex) = 45 (dec) → (45 - 5) × 1 msec = 40 msec → 28 (40 msec)
(10PPS -> 20PPS)	3C (hex) = 55 (dec) \rightarrow (55 + 5) \times 1 msec = 60 msec \rightarrow 3C (60 msec)
	57 (hex) = 87 (dec) → 87 × 10 msec = 870 msec

8.1.2. Handset

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

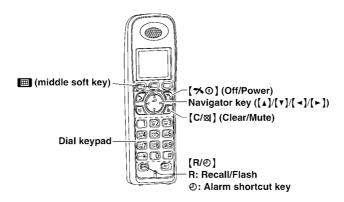

H/S key operation

H/S LCD

1). Press (middle soft key) .

- 00 Handset Setup r⊃ OK
- 2). Select "Handset Setup" using [▲][▼][◄] or [►] then press OK .
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4". Note: 7262 7664 = PANA SONI (see letters printed on dial keys.)
- 4). Select "Write EEPROM" using [▲]or[▼] then press OK .
- 5). Enter "●", "●", "●", "●" (Address). (*1)
- 6). Enter "*", "*" (New Data). (*1)
- 7). Press ok , a long confirmation

about 1 second if the power is not turned on.

** r⊃ OK beep will be heard. Set Address: **₽** 8). Press [> ①] (off) to return to standby mode. After that, remove and reinsert the batteries. Press the Power button for

Frequently Used Items (Handset)

ex.

Items	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Sending level	00 06	Adjusted value	Given value	7F	00	(*2)
Receiving level	00 07	Adjust value	Given value	00	3F	(*3)
Battery Low	00 04	70	-	-	-	
Frequency	00 02/00 01	02/C0	-	-	-	(*4)
ID	00 10~00 14	Given value	-	-	-	

Note:

(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[R] + 0
1	1	В	[R] + 1
		С	[R] + 2
	•	D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5

(*2) When adding "01" (hex) to default value, sending level increases by 0.25 dB. ex.)

Item	Default Data	New Data	
	34	3E	36
Sending level	-8.5 dBm	-7.5 dBm	-9.5 dBm

(*3) When reducing "01" (hex) from default value, receiving level increases by 0.25 dB. ex.)


Item	Default Data	New Data	
	17	18	10
Receiving level	-22 dBm	-23 dBm	-21 dBm

(*4) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the handset.


8.2. Copying Phonebook Items when Repairing

You can copy the handset phonebook to another (compatible Panasonic) handset. This will help to save the original phonebook data which the customer has registered.

Available models: KX-TG8011/8012/8021 Refer to the following procedures.

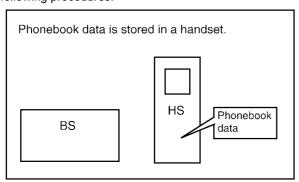


Case 1: A base unit has a defect.
(Replacing a base unit PCB etc...)

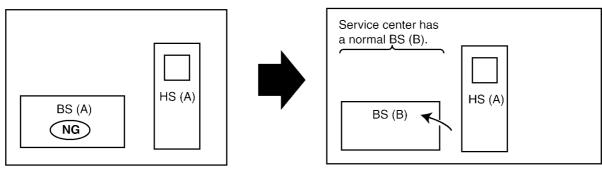

 Register HS (A) to BS (B).
 HS (A) is normal, therefore no need to copy the phonebook data.

Case 2: A base unit has a defect.

(Replacing both a base unit and a handset)

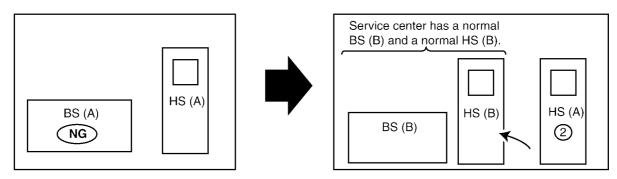


- 1. Register HS (A) to BS (B) as a handset no. 2.
- 2. Copy the phonebook data from HS (A) to HS (B).
- 3. Cancel the HS 2 (HS (A)).

Note:


- BS=Base Unit , HS=Handset
- If the max number of handsets are already registered to the base unit, a new handset cannot be registered.
- To register the handset, refer to Registering a Handset to a Base Unit (P.20)
- To cancel the handset, refer to **Deregistering a Handset** (P.21)
- To copy the handset phonebook, refer to Copying Phonebook Entries (P.21)

Case 3: A handset has a defect.
(Radio transmission is functioning.)

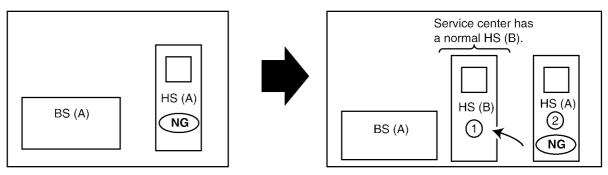

- 1. Cancel HS (A).
- 2. Register HS (B) as a handset no. 1.
- 3. Register HS (A) as a handset no. 2.
- 4. Copy the phonebook data from HS (A) to HS (B).
- 5. Cancel HS 2 (HS (A)).

Case 4: A handset has a defect.
(Radio transmission is functioning.)

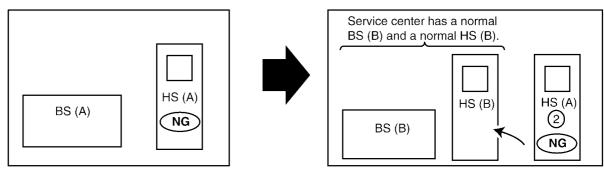

- 1. Register HS (A) as a handset no. 2.
- 2. Copy the phonebook data from HS (A) to HS (B).
- 3. Cancel HS 2 (HS (A)).

Note:

- BS=Base Unit , HS=Handset
- If the max number of handsets are already registered to the base unit, a new handset cannot be registered.
- To register the handset, refer to **Registering a Handset to a Base Unit** (P.20)
- To cancel the handset, refer to **Deregistering a Handset** (P.21)
- To copy the handset phonebook, refer to Copying Phonebook Entries (P.21)

8.3. **How to Clear User Setting**


Units are reset to the Factory settings by this operation (Erase recorded Voice messages*, stored Phone numbers, Caller list

Note:

- Some menus are not reset. Refer to Operating Instructions (P.19).
- The reset menus differ depending on the following operations.
- This operation should not be performed for a usual repair.
- * KX-TG8021 only

8.3.1. Resetting both base unit and handset

Both the base unit and the registered handset which you did the following steps ① to ④ are reset. Other registered handsets will not be reset.

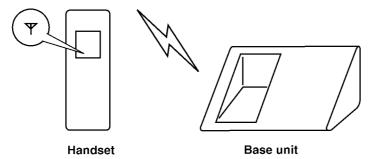


- (1) Connect the AC adaptor to the base unit and install the charged batteries into the handset.
- (2) Confirm the handset is registered to the base unit (♥ lights). If the handset is not registered to the base unit (▼ is flashing), register it. (*1)
- (3) Lift the handset and press [> 0] to put the handset in standby mode.
- ④ Press 1, 5, 9 and ★ key of the handset simultaneously until a confirmation tone is heard.
- (5) Disconnect the AC adaptor, then remove the battery.

Note:

(*1) Refer to Registering a Handset to a Base Unit (P.20).

8.3.2. Resetting only handset

 The only handset is reset by doing the following steps ① to ④.



- 1 Install the charged batteries into the handset.
- (2) Lift the handset and press [> 0] to put the handset in standby mode.
- 3 Press 3, 5, 7 and # key of the handset simultaneously until a confirmation tone is heard. (*2)
- 4 Remove the battery.


Note: (*2)

- The handset registration to the base unit is cancelled.
- If the handset needs to be registered to the base unit, refer to Registering a Handset to a Base Unit (P.20).
- If users do not bring the base unit with them, the registration procedure has to be done by users themselves.

9 Troubleshooting Guide

9.1. Troubleshooting Flowchart

Flow Chart

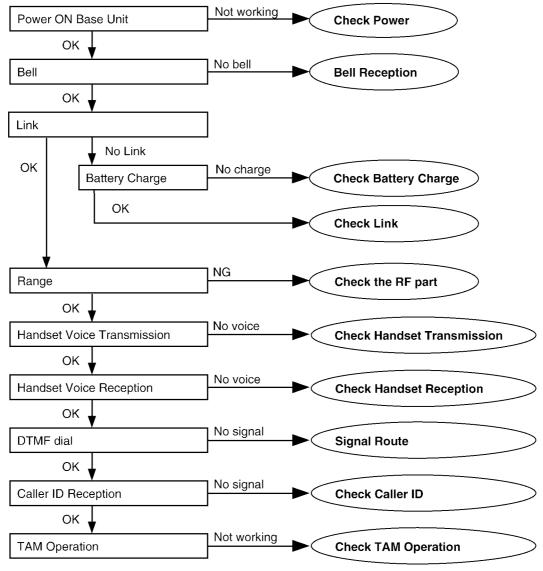

Cross Reference:

Check Power (P.34)

Bell Reception (P.44)

Check Battery Charge (P.35)

Check Link (P.36)

Check the RF part (P.40)

Check Handset Transmission (P.43)

Check Handset Reception (P.43)

Signal Route (P.14)


Check Caller ID (P.43)

Check TAM Operation (P.44)


9.1.1. Check Power

9.1.1.1. Base Unit

Is the AC Adaptor inserted into AC outlet? (*1)

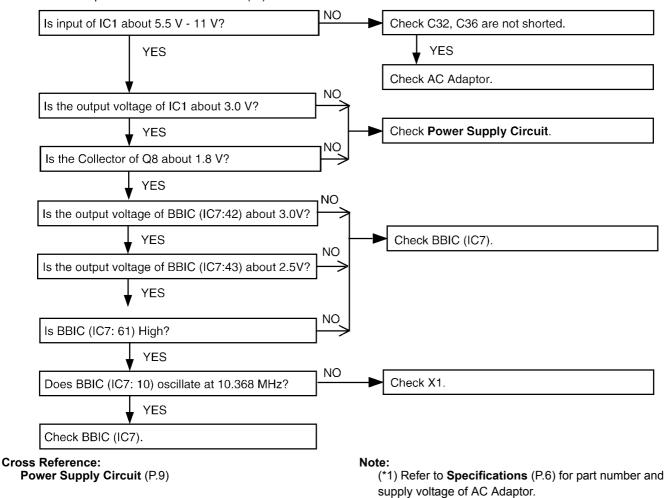

9.1.1.2. Handset

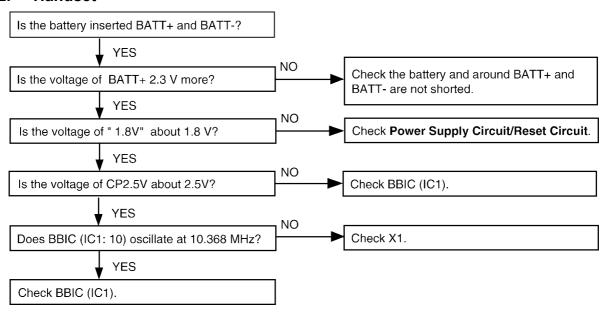


Cross Reference:

Power Supply Circuit/Reset Circuit (P.12)

9.1.2. Check Battery Charge


9.1.2.1. Base Unit

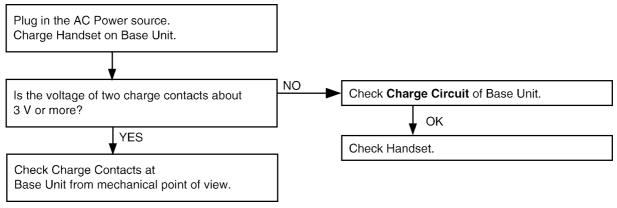

Cross Reference:

Charge Circuit (P.12)

 9.1.2.2. Handset




Cross Reference:

Check Power (P.34)

Charge Circuit (P.12)

9.1.2.3. Charger Unit

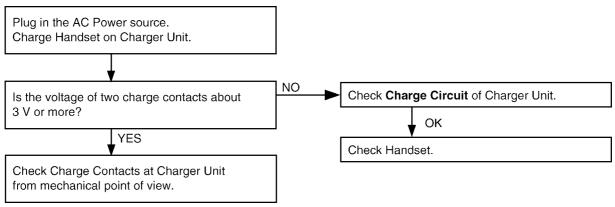


Cross Reference:

Charge Circuit (P.12)

9.1.3. Check Link

9.1.3.1. Base Unit

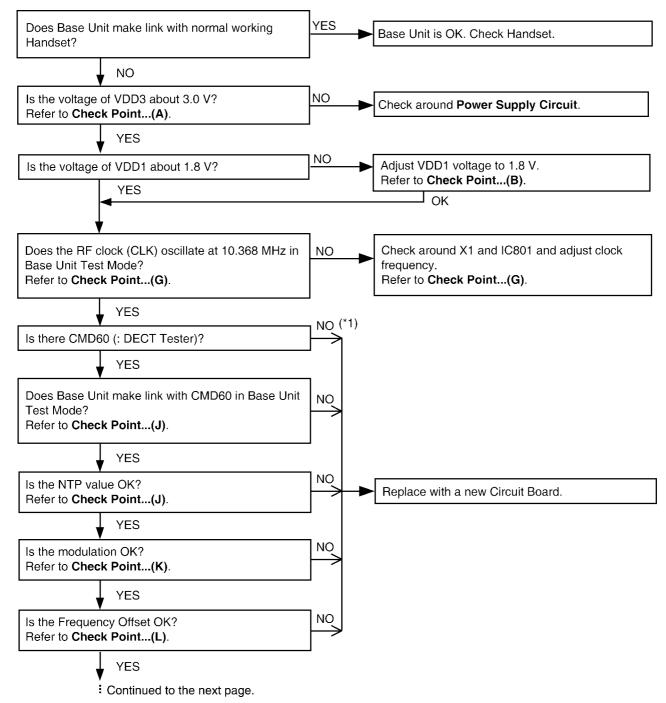


Note:

(*1) Refer to Troubleshooting by Symptom (Base Unit and Charger Unit) (P.45)

Cross Reference:

Check Point (Base Unit) (P.45)


Power Supply Circuit (P.9)

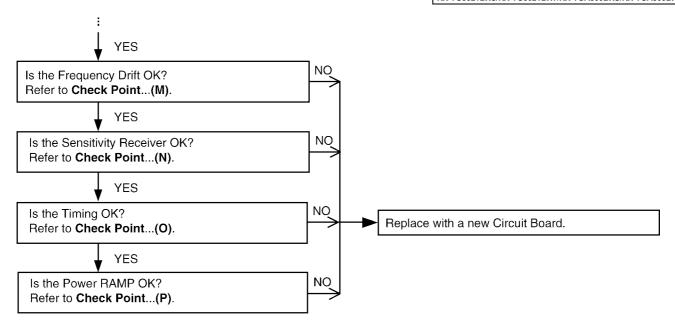

Cross Reference:

Check Point (Base Unit) (P.45)

9.1.3.2. Handset

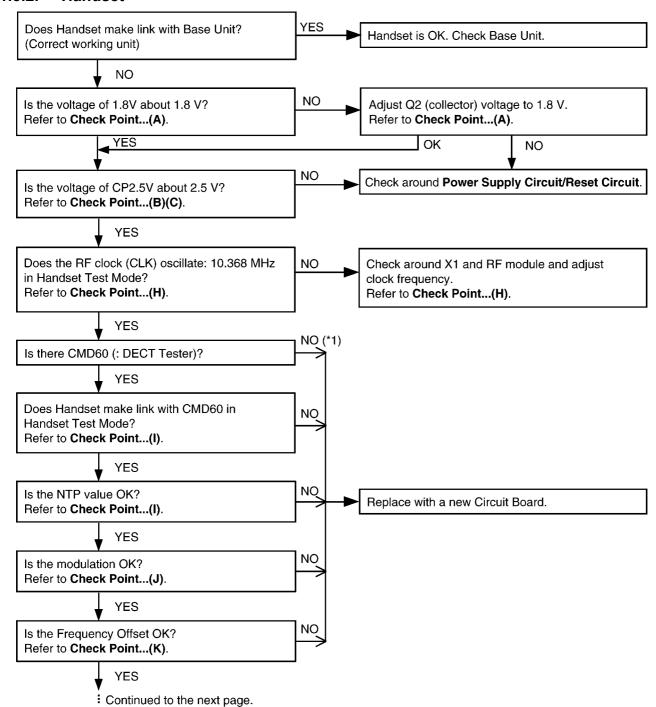


Note:

(*1) Refer to Troubleshooting by Symptom (Handset) (P.49)

Cross Reference:

Check Point (Handset) (P.49)

Power Supply Circuit/Reset Circuit (P.12)

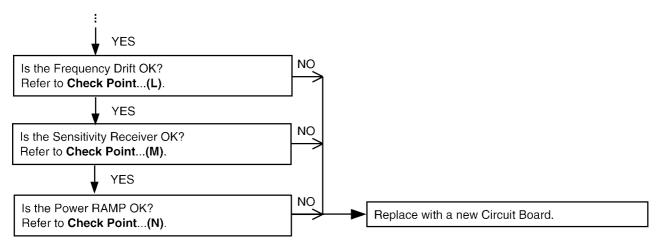

Cross Reference:

Check Point (Handset) (P.49)


9.1.4. Check the RF part

9.1.4.1. Finding out the Defective part

- 1. Prepare Regular HS (Handset) and Regular BU (Base unit).
- 2. a. Re-register regular HS (Normal mode) to Base Unit (to be checked). If this operation fails in some ways, the Base Unit is defective.
 - b. Re-register Handset (to be checked) to regular BU (Normal mode).
 - If this operation fails in some ways, the Handset is defective.

After All the Checkings or Repairing

1. Re-register the checked Handset to the checked Base Unit, and Regular HS to Regular BU.

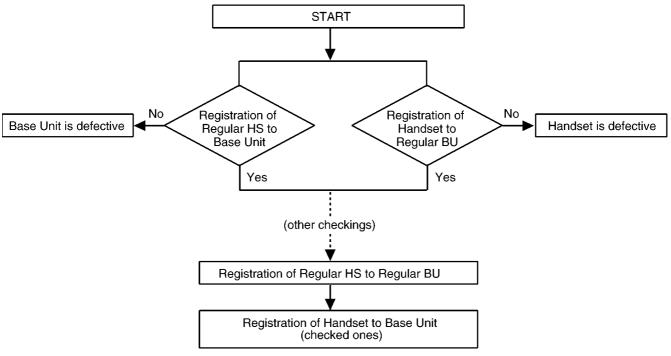


Note:

If you need to register a handset, refer to Registering a Handset to a Base Unit (P.20)

9.1.4.2. RF Check Flowchart

Each item (1 \sim 3) of RF Check Flowchart corresponds to **Check Table for RF part** (P.42). Please refer to the each item.

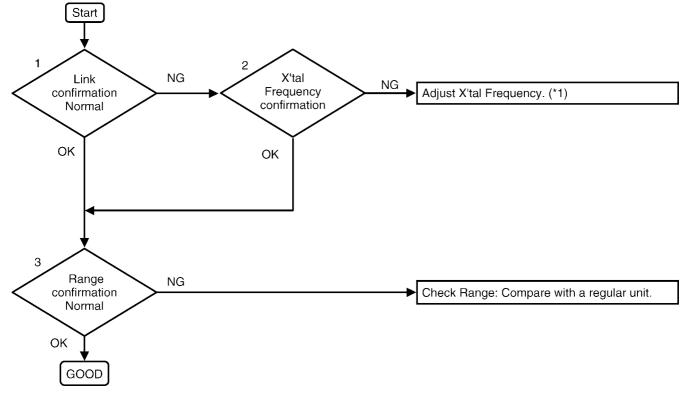

Note:

(*1) Base unit - refer to (G) of **Check Point (Base Unit)** (P.45) Handset - refer to (H) of **Check Point (Handset)** (P.49)


9.1.4.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	HS (Handset) Check
1	Link Confirmation Normal	 Register Regular HS to BU (to be checked). 	Register HS (to be checked) to Regular BU.
	HS, BU Mode: [Normal mode]	Press [Talk] key of the Regular HS to establish link.	Press [Talk] key of the HS to establish link.
2	X'tal Frequency confirmation	1. Check X'tal Frequency. (*1) (10.368 MHz ± 100 Hz)	Check X'tal Frequency. (*2) (10.368 MHz ±100Hz)
3	Range Confirmation Normal	Register Regular HS to BU (to be checked).	Register HS (to be checked) to Regular BU.
	HS, BU Mode: [Normal mode]	 Press [Talk] key of the Regular HS to establish link. Compare the range of the BU (being checked) with that of the Regular BU. 	Press [Talk] key of the HS to establish link. Compare the range of the HS (being checked) with that of the Regular HS.

Note:

- (*1) Refer to Adjustment Standard (Base Unit) (P.60)
- (*2) Refer to Adjustment Standard (Handset) (P.64)

 
9.1.5. Check Handset Transmission



Cross Reference:

Signal Route (P.14)

 9.1.6. Check Handset Reception



Check CDL RX (HANDSET) in Signal Route.

Cross Reference:

How to Check the Handset Speaker or Receiver (P.68). Signal Route (P.14)

9.1.7. Check Caller ID


Check Caller ID in Signal Route.

Cross Reference:


Signal Route (P.14)

9.1.8. Bell Reception

9.1.8.1. Base Unit

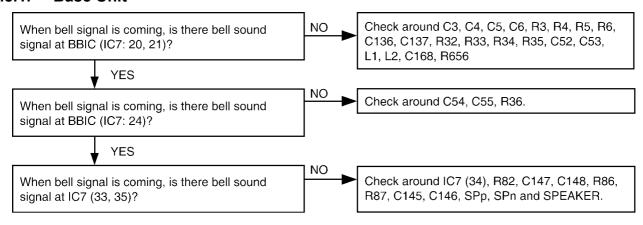

9.1.8.2. Handset

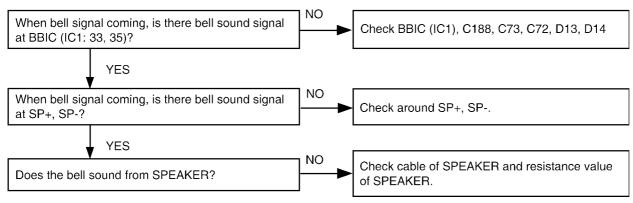


Cross Reference:

Telephone Line Interface (P.10)

Check Link (P.36)

How to Check the Handset Speaker or Receiver (P.68)

9.1.9. Check TAM Operation

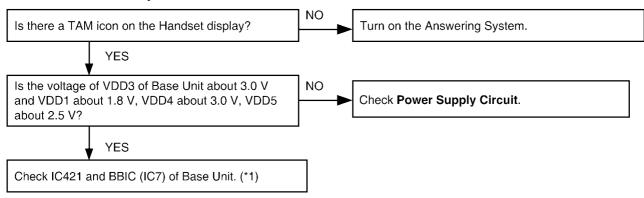

Cross Reference:

Power Supply Circuit (P.9)

Note:

(*1) When replacing FLASH MEMORY (IC421), TAM data need to be written to it. Refer to **Base Unit** of **Things to Do after Replacing IC or X'tal** (P.65)

9.2. Troubleshooting by Symptom (Base Unit and Charger Unit)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
You cannot dial.	Check item (A)-(I).	Check item (A)-(I), (J)-(P).	
You cannot hear the caller's voice.	Check item (A)-(G).	Check item (A)-(G), (J)-(P), (Q).	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (J)-(P).	
The acoustic transmit level is high or low.	Check item (Q).	Check item (Q).	
The acoustic reception level is high or low.	Check item (Q).	Check item (Q).	
Base unit and handset do not link each other.	Check item (A)-(I).	Check item (A)-(P).	
The unit cannot charge.	Check item (R).	Check item (R).	

Note:

- (*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.
- (*2) Refer to Check Point (Base Unit) (P.45)

9.2.1. Check Point (Base Unit)

Please follow the items below when BBIC or EEPROM or FLASH is replaced.

Note:

After the measuring, suck up the solder of TP.

*: **PC Setting** (P.58) is required beforehand.

The connections of simulator equipments are as shown in Adjustment Standard (Base Unit) (P.60).

	Items	Check	Procedure	Check or
		Point		Replace Parts
(A)	3.0 V Supply Confirma-	VDD3	1. Confirm that the voltage between test point VDD3 and GND is 3.0 V \pm 0.2 V.	IC1, C31, C32,
	tion			R38, R39, C36,
				F1, C37, D1
(B)	1.8 V Supply Confirma-	VDD1	1. Confirm that the voltage between test point VDD1 and GND is 1.8 V \pm 0.1 V.	Q8, C75, C614,
	tion			C61, C64, C68,
				IC7
(C)	Charge Pump	VDD5	1. Confirm that the voltage between test point VDD5 and GND is 2.5 V -0.1/+0.3	IC7, C625
	2.5V Supply Confirma-		V.	
	tion			
(D)	Charge Pump	VDD4	1. Confirm that the voltage between test point VDD4 and GND is $3.0~V \pm 0.2~V$.	IC7, C422
	3.0V Supply Confirma-			
	tion			
(E)*	BBIC Confirmation	-	BBIC Confirmation (Execute the command "getchk").	IC7, X1, R77,
			2. Confirm the returned checksum value.	R79, R80
			Connection of checksum value and program number is shown below.	
			checksum value program number	
			ex.) 286E DAS1ZA	
(F)*	EEPROM Confirmation	-	EEP-ROM Confirmation (Execute the command "ChkTG7320XXrevYY.bat").	IC7, RA402,
			XX: country code	C51, R657,
			YY: revision number	IC401
			Confirm the returned checksum value.	
			The checksum is displayed in the last output line.	
			Note:	
			"XX", "YY", and "checksum" vary depending on the country version. You can find	
			them in the batch file, PQZZ- mentioned in JIG and PC (P.58).	

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

	Items	Check Point	Procedure	Check or Replace Parts
(G)*	,	CLK VDD4	 Input Command "sendchar WWD ff 48 IC 8006" Confirm that the voltage between testpoint VDD4 and GND is less than 1.0 V. Input Command "sendchar sfr", then you can confirm the current value. Check X'tal Frequency. (10.368 MHz ± 100 Hz). If the frequency is not 10.368MHz ± 100Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 10.368000 MHz ± 5 Hz. 	X1, IC7, R430, R425, C305
(H)*	Hookswitch Check with DC Characteristics	-	 Connect Telephone Socket to Tel-simulator which is connected with 600 Ω. Set line voltage to 48 V and line current to 40mA at off-hook condition of normal telephone. Execute the command "hookoff" Confirm that the line current is 50 mA ± 5 mA. Execute the command "hookon". Confirm that the line current is less than + 0.8 mA. 	L1, L2, Q3, R14, R15, Q4, R16, R17, D3, R18~R24, C15~C17, D21, Q5, R27, IC7
		-	 Connect Telephone Socket to DTMF tester. (Load=600 Ω) Link Handset and push dial key. Confirm DTMF character. Confirm that the high Group is -7.0 dBm ~ ±2 dBm. Confirm that the low Group is -9.0 dBm ~ ±2 dBm. 	IC7, R116, C141, R29, C22, C23, C14, D21
(J)*	Transmitted Power Confirmation	ANTI_TP	Remove the Antenna before starting step from 1 to 7. 1. Configure the DECT tester (CMD60) as follows;	IC7, L7, C117, C118, C124, C125, R106, R109,DA1, R802~R807, C837, C826, C822, C820, C832, C833, C123, C74, Q9, C617~C621, C65, IC801, D801, D802, C801~C804, C808~C814, L802~L804, C819, C834, C825
(K)*	Modulation Check and Adjustment	- ANTI_TP	Follow steps 1 to 6 of (J). 7.Confirm that the B-Field Modulation is -370 ± 30/ +370± 30 kHz/div & Modulated width ≥ 690 kHz using data type Fig31. 8.Adjust the B-Field Modulation if required. (Execute the command "readmod" and "wrtmod xx", where xx is the value.)	IC7, L7, C117, C118, C124, C125, R106, R109,DA1, R802~R807, C837, C826, C822, C820, C832, C833, C123, C74, Q9, C617~C621, C65, IC801, D801, D802, C801~C804, C808~C814, L802~L804, C819, C834, C825
(L)*	Frequency Offset Check	- ANTI_TP	Follow steps 1 to 6 of (J). 7.Confirm that the frequency offset is < ± 10 kHz.	C7, L7, C117, C118, C124, C125, R106, R109,DA1, R802~R807, C837, C826, C822, C820, C832, C833, C123, C74, Q9, C617~C621, C65, IC801, D801, D802, C801~C804, C808~C814, L802~L804, C819, C834, C825

	Items	Check	Procedure	Check or
		Point		Replace Parts
(M)*	Frequency Drift Confir- mation	- ANTL TO	Follow steps 1 to 6 of (J).	IC7, L7, C117,
	mation	ANTI_TP	7.Confirm that the frequency drift is < ± 20 kHz/ms.	C118, C124, C125, R106,
				R109,DA1,
				R802~R807,
				C837, C826,
				C822, C820,
				C832, C833, C123, C74, Q9,
				C617~C621,
				C65, IC801,
				D801, D802,
				C801~C804,
				C808~C814, L802~L804,
				C819, C834,
				C825
(N)*	Sensitivity Receiver		Follow steps 1 to 6 of (J).	IC7, L7, C117,
	Confirmation	ANTI_TP	7.Set DECT tester power to -90 dBm.	C118, C124,
			8.Confirm that the BER is < 1000 ppm.	C125, R106, R109,DA1,
				R802~R807,
				C837, C826,
				C822, C820,
				C832, C833,
				C123, C74, Q9, C617~C621,
				C65, IC801,
				D801, D802,
				C801~C804,
				C808~C814,
				L802~L804, C819, C834,
				C825
(O)*	Timing Confirmation	-	Follow steps 1 to 6 of (J).	IC7, L7, C117,
		ANTI_TP	7.Confirm that the Timing accuracy is	C118, C124,
			• ± 5.0 ppm (When adjust the frequency of CLK in item (G)). • ± 15 ppm (When do not adjust the frequency of CLK in item (A)).	C125, R106, R109,DA1,
			13 ppin (when do not adjust the frequency of CER in term (A)).	R802~R807,
				C837, C826,
				C822, C820,
				C832, C833,
				C123, C74, Q9, C617~C621,
				C65, IC801,
				D801, D802,
				C801~C804,
				C808~C814,
				L802~L804, C819, C834,
				C825
(P)*	Power RAMP Confirma-	-	Follow steps 1 to 6 of (J).	IC7, L7, C117,
	tion		7.Confirm that Power RAMP is matching.	C118, C124,
				C125, R106, R109,DA1,
				R802~R807,
				C837, C826,
				C822, C820,
				C832, C833,
				C123, C74, Q9,
				C617~C621, C65, IC801,
				D801, D802,
				C801~C804,
				C808~C814,
				L802~L804,
				C819, C834, C825
				C020

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

	Items	Check Point	Procedure	Check or Replace Parts
(Q)	Audio Check	Point -	 Link with Handset. Input -45 dBm/1kHz to MIC of Handset. Measure the Level at Line I/F and distortion level. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5% at TEL Line (600 Ω Load). Input -20 dBm/1 kHz to Line I/F. Measure the level at Receiver of Handset and distortion level (*Receive volume set to second position from minimum). 	Replace Parts IC7, SA1, L1, L2, D3, Q3, Q4, R14, R15, R16, R17
			5. Confirm that the level is -22 dBm \pm 2 dBm and that the distortion level is < 5% at Receiver (Volume Middle, 150 Ω Load).	
(R)	Charging Check	-	 Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge Measure and confirm voltage across the resistor is 2.75 V ± 0.3 V. 	R55, R56, R57, D22, D23, C623
(S)*	TAM Operation Confirmation	-	TAM Confirmation (Execute the command "sendchar VPI"). Confirm the returned Value (Value is "DAS7EA 03").	IC7, IC421, R424~R429, C421, C422, Q421

9.2.2. Check Point (Charger Unit)

	Items	Check	Procedure	Check or
		Point		Replace Parts
(A)	Charging Check	-	 Connect Charge Contact 10 Ω/2 W resistor between charge+ and charge 	R1
			2. Measure and confirm voltage across the resistor is 2.75 V \pm 0.3 V.	D1, F1

Note:

After the measuring, suck up the solder of TP.

The connection of adjustment equipment is as shown in Adjustment Standard (Charger Unit) (P.61).

9.3. Troubleshooting by Symptom (Handset)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
Battery strength is not indicated correctly by Battery icon.	Check item (A)-(B), (E)-(F).	Check item (A)-(B), (F)-(G).	
You cannot hear the caller's voice.	Check item (A)-(B), (H).	Check item (A)-(B), (H)-(K), (L).	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (I), (M).	
Does not link between base unit and handset.	Check item (A)-(B), (H).	Check item (A)-(B), (H)-(M).	
The Audio level is high or low.	Check item (O).	Check item (0).	
The SP-Phone level is high or low.	Check item (P).	Check item (P).	

Note:

(*2) Refer to Check Point (Handset) (P.49)

9.3.1. Check Point (Handset)

Please follow the items below when BBIC or EEPROM is replaced.

Note:

After the measuring, suck up the solder of TP.

*: **PC Setting** (P.62) is required beforehand.

The connections of adjustment equipments are as shown in Adjustment Standard (Handset) (P.64).

	Items	Check	Procedure	Check or
	items	Point	1 loccuuit	Replace Parts
(A)*	1.8 V Supply Adjustment	1.8V	1. Confirm that the voltage between test point 1.8 V and GND is 1.8 V \pm 0.02 V.	IC1, Q2, C48,
(2.1)	1.6 v Supply / lajasament	1.01	Execute the command "VDD", then check the current value.	D1, C1, C44,
			3. Adjust the 1.8V voltage of 1.8V executing command "VDD XX"(XX is the	, , ,
			value).	C45, F1, C2
(B)*	BBIC Confirmation	CP2.5V	BBIC Confirmation (Execute the command "getchk").	IC1, X1, RA61,
(-)			Confirm the returned checksum value.	R64, R66
			Connection of checksum value and program number is shown below.	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
			checksum value program number	
			ex.) 41C3 DB52BA	
			,	
(C)*	EEP-ROM Confirmation	CP2.5V	EEP-ROM Confirmation (Execute the command "ChkTGA800XXrevYY.bat").	IC1, IC3,
			XX: country code	R40~R42,
			YY: revision number	C172
			2. Confirm the returned checksum value.	
			Note:	
			"XX", "YY", and "checksum" vary depending on the country version. You can find	
(5)			them in the batch file, PQZZ- mentioned in JIG and PC (P.62).	104 04 00
(D)	Charge Control Check &	-	1. Apply 3.5 V between CHG(+) and CHG(-) with DC power supply and set cur-	IC1, Q4 Q9,
	Charge Current Monitor		rent limit to 250 mA.	D7, D8, L4, L5,
	Check		Confirm the indication of "charging" on LCD.	R6, R7, F1,
			Confirm that the current limit LED of DC power supply is ON/OFF. Confirm it office weiting ever 1 minute at least.	C1, R2, R30, R8, C147, R45
			Confirm it after waiting over 1 minute at least. 3. Decrease current limit of DC power supply to 100 mA.	Ro, C147, R45
			S. Decrease current limit of DC power supply to 100 mA. Confirm that the current limit LED of DC power supply is stable. (Current limiter	
			is ON.)	
			(If charge control cannot be confirmed by this procedure, please use battery to hand-	
			set power supply and try again.)	
(E)*	Charge Detection (OFF)	-	1. Stop supplying 3.5 V to CHG (+) and CHG (-).	IC1, Q4 Q9,
1	Check		2. Confirm the indication of "charging" has been cleared.	D7, D8, L4, L5,
				R6, R7, F1,
				C1, R2, R30,
				R8, C147, R45

^(*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

	Items	Check Point	Procedure	Check or Replace Parts
(F)*	Battery Monitor Check	-	 Apply 2.25 V between BATT+ and BATT Execute the command sendchar PAD sendchar LED 0 sendchar AD1 It assumes that the return value is XX. a) 6D ≤ xx ≤ 72: No need to adjust b) xx: 6B ~ 6C: Need to adjust xx: 73 ~ 75: Need to adjust write AD value of 2.25 V to EEPROM. ex) read data: xx=6B, write data: yy=6B read data: XX = 73, write data: YY = 73 EEPROM = 0004(Low Voltage) write "YY" Execute the command "wreeprom 00 04 01 YY". EEPROM = 0005(No Voltage) write "YY-C" Execute the command "xwreeprom 00 05 01 ZZ". Note: ZZ = YY - C No Voltage writing data limit is '00'. c) xx:00 ~ 6A: reject xx:76 ~ FF: reject 	IC1, F1, C1, R45
(G)	Battery Low Confirma- tion	-	Apply 2.40 V between BATT+ and BATT Confirm that there is no flashing of Battery Icon. Apply 2.25 V ± 0.08 V between BATT+ and BATT Confirm that there is flashing of Battery Icon.	IC1, F1, C1, R45
(H)*	BBIC Clock Adjustment	X_CLK	1. Apply 2.6 V between BATT+ and BATT- with DC power. 2. Input Command "sendchar sfr", then you can confirm the current value. 3. Check X'tal Frequency. (10.368 MHz ± 100 Hz). 4. If the frequency is not 10.368 MHz ± 100 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 10.368000 MHz ± 5 Hz. Note: Clear the registered information for Base Unit before measurement, because The Frequency will not possibly get stable due to the registered information. Pressing the button of "3" "7" "9" "#" clears the registration. Register to it on Base Unit after measurement.	IC1, X1, C47
(1)*	Transmitted Power Confirmation	-	Remove the Antenna before starting step from 1 to 4. 1. Configure the DECT tester (CMD60) as follows;	IC1, R801~R806, C808~C814, C819, C825, C834, IC801, L802~L804, D801, R807, L801, C820, C822, C826, C827, C832, C833, C837, D802, DA1, C117, C124, C186, C187, C802~C804, R107, R108
(J)*	Modulation Check and Adjustment	-	Follow steps 1 to 3 of (I). 4.Confirm that the B-Field Modulation is -320 ~ -400/ +320 ~ +400 kHz/div & Modulated width ≥ 670kHz/div using data type Fig 31.	IC1, R801~R806, C808~C814, C819, C825, C834, IC801, L802~L804, D801, R807, L801, C820, C822, C826, C827, C832, C833, C837, D802, DA1, C117, C124, C186, C187, C802~C804, R107, R108

	Items	Check	Procedure	Check or
	items	Point	riocedule	Replace Parts
(K)*	Frequency Offset Confir-	-	Follow steps 1 to 3 of (I).	IC1,
(11)	mation		4.Confirm that the frequency Offset is < ± 20 kHz.	R801~R806,
	mation		4. Sommin that the nequency shoot is 12.20 km2.	C808~C814,
				C819, C825,
				C834, IC801,
				L802~L804,
				D801, R807,
				L801, C820,
				C822, C826,
				C827, C832,
				C833, C837,
				D802, DA1,
				C117, C124,
				C186, C187,
				C802~C804,
				R107, R108
(L)*	Frequency Drift Confir-	-	Follow steps 1 to 3 of (I).	IC1,
' '	mation		4.Confirm that the frequency Drift is < ± 30 KHz/msec.	R801~R806,
				C808~C814,
				C819, C825,
				C834, IC801,
				L802~L804,
				D801, R807,
				L801, C820,
				C822, C826,
				C827, C832,
				C833, C837,
				D802, DA1,
				C117, C124,
				C186, C187,
				C802~C804,
/B = \ ±	0 ''' '' D '			R107, R108
(M)*	Sensitivity Receiver	-	Follow steps 1 to 3 of (I).	IC1,
	Confirmation		4.Set DECT tester power to -88 dBm.	R801~R806,
			5.Confirm that the BER is < 1000 ppm.	C808~C814,
				C819, C825, C834, IC801,
				L802~L804,
				D801, R807,
				L801, C820,
				C822, C826,
				C827, C832,
				C833, C837,
				D802, DA1,
				C117, C124,
				C186, C187,
				C802~C804,
				R107, R108
(N)*	Power RAMP Confirma-	-	Follow steps 1 to 3 of (I).	IC1,
	tion		4.Confirm that Power RAMP is matching.	R801~R806,
				C808~C814,
				C819, C825,
				C834, IC801,
				L802~L804,
				D801, R807,
				L801, C820,
				C822, C826,
				C827, C832,
				C833, C837,
				D802, DA1,
				C117, C124,
				C186, C187,
				C802~C804,
				R107, R108

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

	Items	Check	Procedure	Check or
		Point		Replace Parts
(O)	Audio Check and Confir-	-	Link to BASE which is connected to Line Simulator.	IC1, R23, C12,
	mation		Set line voltage to 48 V and line current to 40 mA.	D21, D22,
			Input -45 dBm/1KHz to MIC and measure Line output level.	C96, C97,
			4. Confirm that the level is -8.5 dBm ± 2 dBm and that the distortion level is < 5%	R27, RA4,
			at TEL Line (600 Ω Load).	C11, C13,
			5. Input -20 dBm/1KHz to Line I/F and measure Receiving level at REV+ and	R28, D3, D4,
			REV	R320, R321,
			6. Confirm that the level is -22 dBm \pm 2 dBm and that the distortion level is < 5%	MIC
			at Receiver. (vol = 2)	
(P)	SP phone Audio Check	-	Link to Base which is connected to Line Simulator.	IC1, R23, C12,
	and Confirmation		Set line voltage to 48 V and line current to 40 mA.	C73, D13,
			Set the handset off-hook using SP-Phone key.	D14, R152,
			4. Input -25 dBm/1KHz to Line I/F and measure Receiving level at SP+ and SP	C80, R320,
			5. Confirm that the level is -14 dBm \pm 2 dBm and that the distortion level is < 5%.	R321, MIC,
			(vol = 3)	C11, C13,
				RA4, R27,
				R28, C72,
				D3, D4
(Q)	Charge Pump 2.5V Sup-	CP2.5V	1. Confirm that the voltage between testpoint CP2.5V and GND is 2.5V -0.1/	C52, C53, C49
	ply Confirmation		+0.3V.	

9.3.2. Troubleshooting for Speakerphone

When the customer's telephone line corresponds to the following conditions, and the transmission signal of SP-Phone is interrupted, performing the next set up to a cordless handset will improve it to some extent.

Conditions

- 1. When customer's line has less line loss.
 - ex.) The customer is using optical fiber, ISDN terminal adaptor, or PBX. In this case, receiving signal is strong and it may affect transmission signal.
- 2. When the other party is talking from noisy place.
 - ex.) The other party is using cellular phone. The background noise is very loud. In this case, the noise from the other party (i.e. surrounding noise) may affect transmission signal.


Setting Method

• Change the handset address of EEPROM (0129) from 00 to 01 by Engineering Mode.


10 Disassembly and Assembly Instructions


10.1. Disassembly Instructions

10.1.1. Base Unit

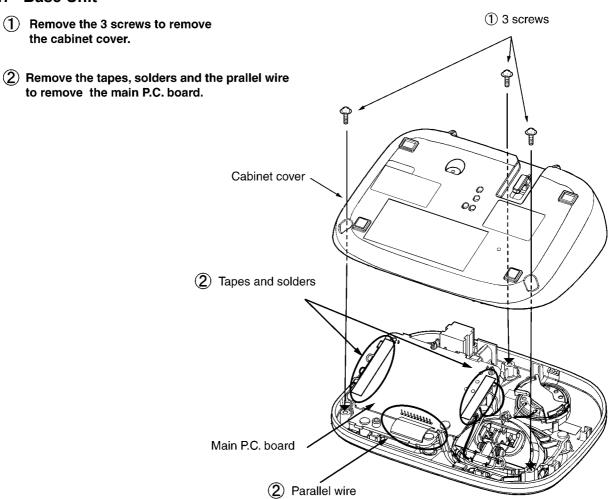

(3) Remove the screw.

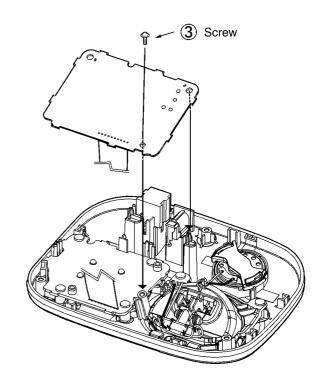


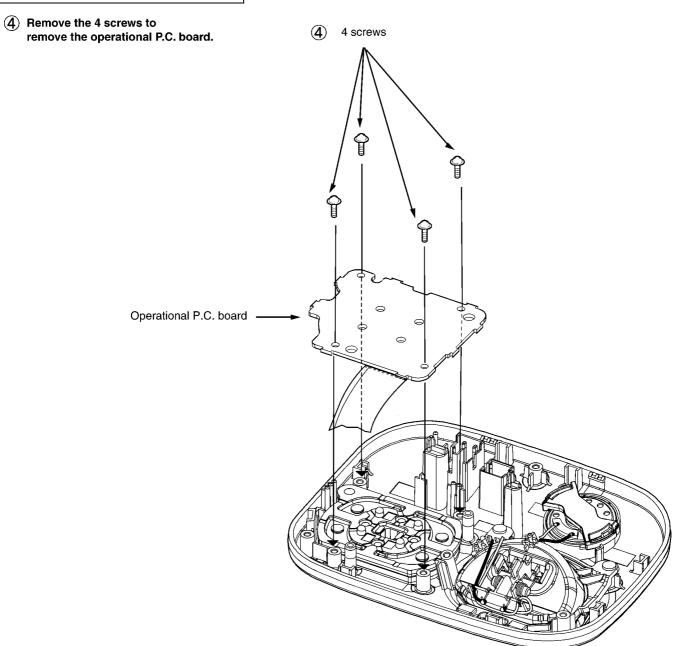



10.1.2. Handset

(1) Remove the 2 screws.

   ② Insert a JIG (PQDJ10006Y) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.









6 Remove the 2 screws to remove the 2 charge terminals.


(7) Remove the screw to remove the main P. C. board.

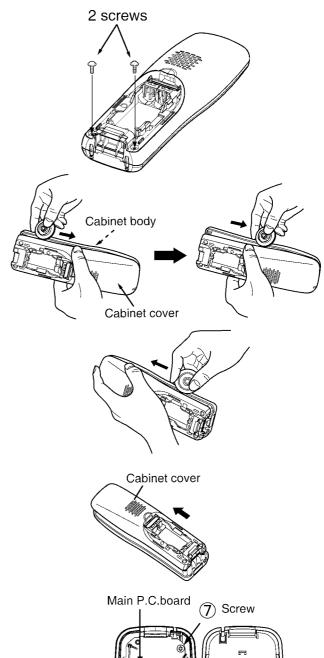

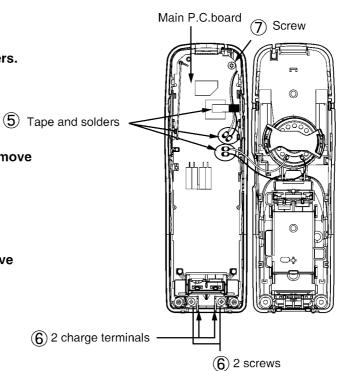

10.1.3. Charger Unit


(1) Remove the screw to remove the cabinet cover.

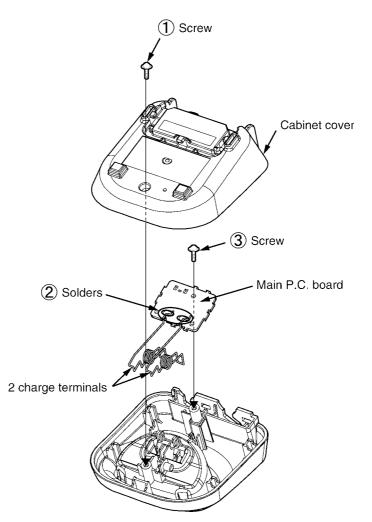


- 2 Remove the solders to remove the 2 charge terminals.
- (3) Remove the screw to remove the main P.C. board.

10.2. How to Replace the Handset LCD

1 Attach LCD to P.C.B.
*When attaching the LCD holder,
don't pull the FPC (Flexible Print Circuit).

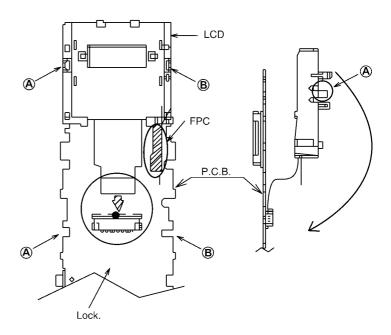

 2 Locate the Flat Cable inside as shown.



3 Solder the narrow Cable to the P.C.B.
*When soldering, don't give the load to the FPC.

Solder (2 points)

Peel off the double side tape before soldering.

Match the each hole on the Cable and on the P.C.B.

11 Measurements and Adjustments

11.1. The Setting Method of JIG (Base Unit)

11.1.1. Preparation

11.1.1.1. Equipment Required

- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision; ±4 ppm). Hewlett Packard, 53131A is recommended.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

11.1.1.2. JIG and PC

Serial JIG

JIG Cable: PQZZ1CD300E*

- PC which runs in DOS mode
- Batch file CD-ROM for setting: PNZZTG8021BX

Note:


*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

11.1.2. PC Setting

11.1.2.1. Connections

- ① Connect the AC adaptor to DC-JACK (base unit).
- 2 Connect the JIG Cable GND (black) to GND.
- (3) Connect the JIG Cable RX (red) to URX and TX (yellow) to UTX.

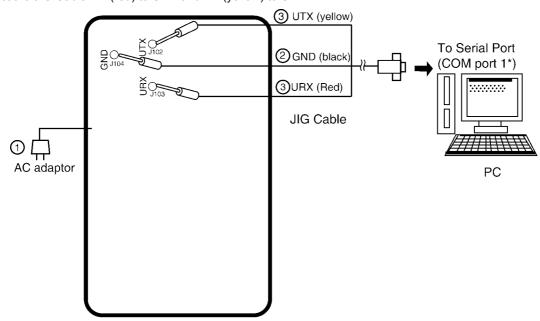

Base unit P. C. board

Note:

*: COM port names may vary depending on what your PC calls it.

11.1.2.2. Batch file Setting

- 1. Insert the Batch file CD-ROM into CD-ROM drive and copy PQZZTG**** folder to your PC (example: D drive).
- 2. Open an MS-DOS mode window.

<Example for Windows>

On your computer, click [Start], select Programs (All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Or

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

(for Windows 2000/Windows XP/Windows Server 2003)

<Example: correct setting>

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PQZZTG****", then press the Enter key.
- **5.** Type "SET_COM=X", then press the Enter key
- (X: COM port number used for the serial connection on your PC).
- **6.** Type "READID", then press the Enter key.
 - •If any error messages appear, change the port number or check the cable connection.
 - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG****
- D: ¥PQZZTG**** >SET_COM=X
- D: ¥PQZZTG****>READID
- 00 52 4F A8 A8
- D: ¥PQZZTG****>DOSKEY
- D: ¥PQZZTG****>_

<Example: incorrect setting>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG****
- D: ¥PQZZTG**** >SET_COM=X
- D: ¥PQZZTG****>READID CreateFile error

ERROR 10: Can't open serial port

D: ¥PQZZTG ****>_

Note:

• "****" varies depending on the country.

11.1.2.3. Commands


See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
hookoff	Off-hook mode on Base	Type "hookoff".
hookon	On-hook mode on Base	Type "hookon".
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

11.2. Adjustment Standard (Base Unit)

When connecting the simulator equipments for checking, please refer to below.

11.2.1. Bottom View

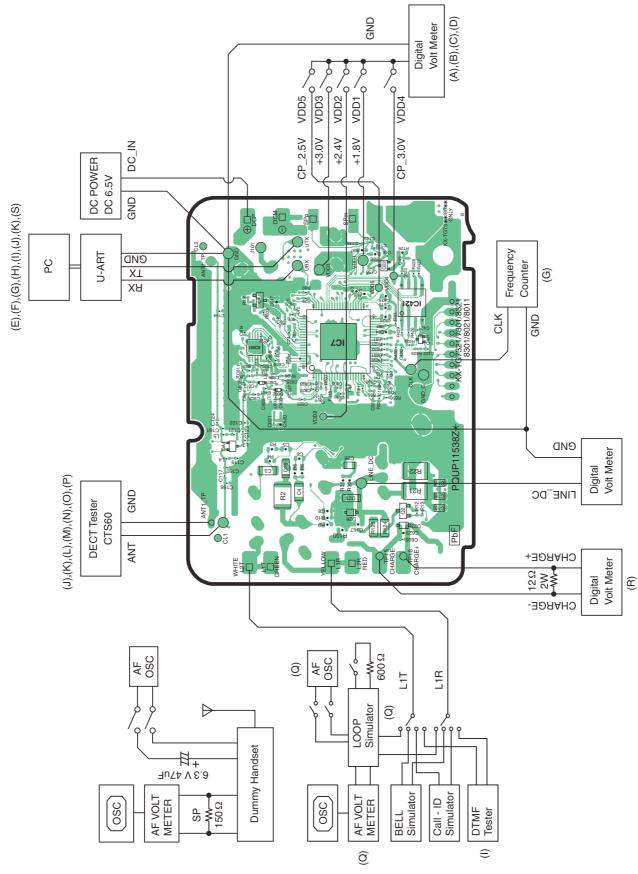


Note:

(A) - (S) is referred to Check Point (Base Unit) (P.45)

11.3. Adjustment Standard (Charger Unit)

When connecting the simulator equipment for checking, please refer to below.

11.3.1. Bottom View

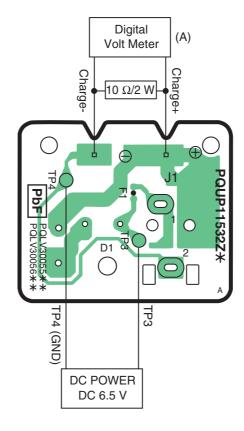

Note:

(A) is referred to Check Point (Charger Unit) (P.48)

11.4. The Setting Method of JIG (Handset)

11.4.1. Preparation

11.4.1.1. Equipment Required

- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision; ±4 ppm). Hewlett Packard, 53131A is recommended.
- DC power: it must be able to output at least 1 A current under 2.4 V for Handset.
- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope

11.4.1.2. JIG and PC

• Serial JIG

JIG Cable: PQZZ1CD300E*

- PC which runs in DOS mode.
- Batch file CD-ROM for setting: PNZZTG8021BX

Note:


*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

11.4.2. PC Setting

11.4.2.1. Connections

- ①Connect the DC Power or Battery to BATT+ and BATT-.
- ②Connect the JIG cable GND (black) to GND.
- 3 Connect the JIG cable UTX (yellow) to UTX and URX (red) to URX.

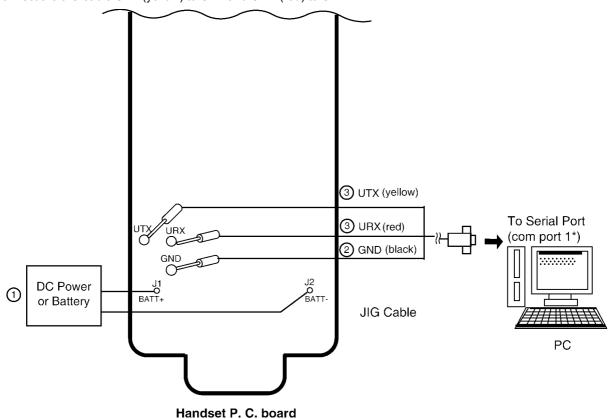

Note:

*: Com port names may vary depending on what your PC calls it.

11.4.2.2. Batch file Setting

- **1.** Insert the Batch file CD-ROM into CD-ROM drive and copy PQZZTG***** folder to your PC (example: D drive).
- 2. Open an MS-DOS mode window.

<Example for Windows>

On your computer, click [Start], select Programs

(All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Or

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

Accessories-Command Prompt.

(for Windows 2000/Windows XP/Windows Server 2003)

<Example: correct setting>

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD \(\text{PQZZTG*****}\), then press the **Enter** key.
- 5. Type "SET RTX_COM=X", then press the Enter key
- (X: COM port number used for the serial connection on your PC).
- **6.** Type "**READID**", then press the **Enter** key.
 - •If any error messages appear, change the port number or check the cable connection.
 - •If any value appear, go to next step.
- 7. Type "DOSKEY", then press the Enter key.

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG*****
- D: ¥PQZZTG***** >SET RTX_COM=X
- D: ¥PQZZTG*****>READID
- 00 52 4F A8 A8
- D: ¥PQZZTG*****>DOSKEY
- D: ¥PQZZTG*****> _

<Example: incorrect setting>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PQZZTG*****
- D: ¥PQZZTG***** >SET RTX COM=X
- D: ¥PQZZTG*****>READID CreateFile error

ERROR 10: Can't open serial port

D: ¥PQZZTG*****> _

Note:

• "*****" varies depending on the country.

11.4.2.3. Commands


See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

11.5. Adjustment Standard (Handset)

When connecting the simulator equipments for checking, please refer to below.

11.5.1. Component View

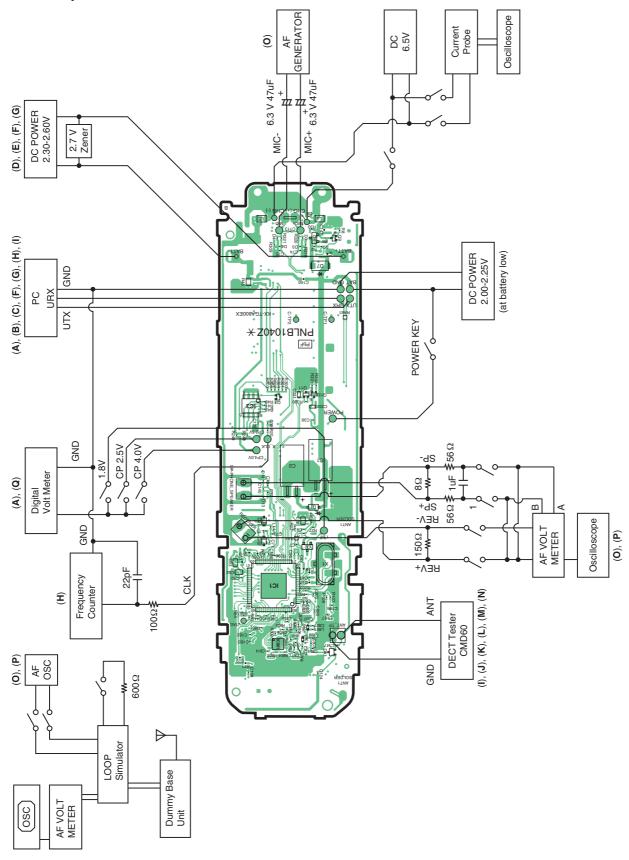

Note:

(A) - (Q) is referred to Check Point (Handset) (P.49)

11.6. Things to Do after Replacing IC or X'tal

Cautions:

Some of the content on this page may not apply to models from some countries.

11.6.1. Base Unit

Before making the following adjustment, ensure you have carried out PC Setting (P.58) in The Setting Method of JIG (Base Unit).

	Items	Necessary Adjustment	
BBIC (FLASH type) (IC7)	Programs for Voice processing, interface for RF and EEPROM	1. Make sure to connect the JIG cable, then detach the DC Power. 2. Execute the command "flw480 *******.hex". 3. Connect the DC Power. 4. Press the PC Enter key once. 5. After a few minutes, "Successful upgrade" is displayed on the PC indicating downloading has finished. 6. Detach the JIG cable, then disconnect the DC Power. 7. Connect the DC Power. 8. Connect the JIG cable again, and execute the command "getchk", then confirm the checksum value is correct. • If the downloading fails, start again from step 1. 9. Default batch file: Execute the command "default.bat". 10. Country version batch file: Execute the command "TG7320XXrevYY.bat". (*1) 11. Clock adjustment: Refer to Check Point (G). (*2)	
EEPROM (IC401) FLASH (IC421)	Adjustment parameter data (country version batch file, default batch file, etc.) Voice prompt data (vary depending on country version)	1. Change the address "0000" of EEPROM to "55". 2. Default batch file: Execute the command "default.bat". 3. Country version batch file: Execute the command "TG7320XXrevYY.bat". (*1) 4. Clock adjustment: Refer to Check Point (F). (*2) 1. Wait more than 15 seconds after connecting the JIG Cables. 2. Execute the command "TG732x832x_CBR57600_01.bat" 3. Press the PC Enter key once.	
X'tal (X1)	System clock	4. Execute the command "VPDL2008_01 -8M ZZ.bin"(*1) (writing time: aprox. About 1 min (57600bps).) 1. Refer to Check Point (F). (*2)	

Note:

(*1) XX: country code, YY: revision number, ZZ: Voice Prompt

(*2) Refer to Check Point (Base Unit) (P.45)

[&]quot;XX", "YY" and "ZZ" vary depending on the country version. You can find them in the batch file, PQZZ- mentioned in **JIG and PC** (P.58).

11.6.2. Handset

Before making the following adjustment, ensure you have carried out PC Setting (P.62) in The Setting Method of JIG (Hand-

	Items	Necessary Adjustment	
BBIC (FLASH type) (IC1)	Programs for Voice processing, interface for RF and EEPROM	 Make sure to connect the JIG cable, then detach the DC Power. Execute the command "flw480 ********.hex". Connect the DC Power. Press and hold the handset Power key. While holding down the handset Power key, press the PC Enter key once. After a few minutes, "Successful upgrade" is displayed on the PC indicating downloading has finished. Detach the JIG cable, then press the handset Power key to turn it on. Connect the JIG cable again, and execute the command "getchk", then confirm the checksum value is correct. If the downloading fails, start again from step 1. Default batch file: Execute the command "default.bat". Default batch file (remaining): Execute the Command "TGA800DEFrevYY.bat". (*3). Country version batch file: Execute the command "TGA800XXrevYY.bat". (*3). Clock adjustment: Refer to Check Point (H). (*4). 1.8 V setting and battery low detection: Refer to Check Point (A), (F) and (G). (*4). 	
EEPROM (IC3)	Adjustment parameter data (country version batch file, default batch file, etc.)	1. Default batch file: Execute the command "default.bat". 2. Default batch file (remaining): Execute the Command "TGA800DEFrevYY.bat". (*3) 3. Country version batch file: Execute the command "TGA800XXrevYY.bat". (*3) 4. Clock adjustment: Refer to Check Point (J). (*4) 5. 1.8 V setting and battery low detection: Refer to Check Point (A), (F) and (G). (*4)	
X'tal (X1)	System clock	1. Refer to Check Point (H). (*4)	

Note:

- (*3) XX: country code, YY: revision number "XX" and "YY" vary depending on the country version. You can find them in the batch file, PQZZ- mentioned in **JIG and PC** (P.62).
- (*4) Refer to Check Point (Handset) (P.49)

11.7. RF Specification

11.7.1. Base Unit

Item	Value	Refer to *
TX Power	19 dBm ~ 25 dBm	Check Point (Base Unit) (J)
Modulation	$-370\pm30/+370\pm30$ kHz/div & Modulated width \geq 690 kHz	Check Point (Base Unit) (K)
Frequency Offset	-50 kHz ~ +50 kHz	Check Point (Base Unit) (L)
Frequency Drift	<±35 kHz/ms	Check Point (Base Unit) (M)
RX Sensitivity	• •	Check Point (Base Unit) (N)
Timing Accuracy	< ± 5.0 ppm/<±15.0ppm	Check Point (Base Unit) (O)
Power RAMP	Power RAMP is matching	Check Point (Base Unit) (P)

^{*:} Refer to Check Point (Base Unit) (P.45)


11.7.2. Handset

Item	Value	Refer to **
TX Power	19 dBm ~ 24 dBm	Check Point (Handset) (I)
Modulation	-320 ~ -400kHz/div /+320 ~ +400 kHz/div & Modulated width ≥ 670 kHz	Check Point (Handset) (J)
Frequency Offset	Offset <± 20 KHz	Check Point (Handset) (K)
Frequency Drift	Drift <± 30KHz/ms	Check Point (Handset) (L)
RX Sensitivity	< 1000 ppm	Check Point (Handset) (M)
Power RAMP	Power RAMP is matching	Check Point (Handset) (N)

^{**:} Refer to Check Point (Handset) (P.49)

11.8. How to Check the Handset Speaker or Receiver

- 1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
- 2. Put the probes at the speaker terminals as shown below.

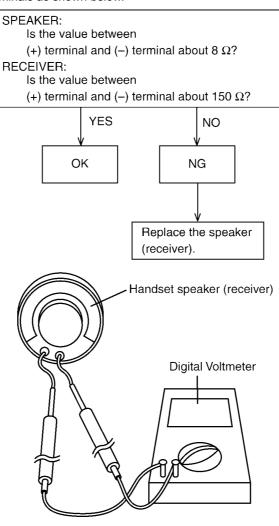

11.9. Frequency Table (MHz)

	BASE UNIT		HANDSET		
Channel No	Transmit Frequency	Receive Frequency	Transmit Frequency	Receive Frequency	
1	1897.344	1897.344	1897.344	1897.344	
2	1895.616	1895.616	1895.616	1895.616	
3	1893.888	1893.888	1893.888	1893.888	
1	1892.160	1892.160	1892.160	1892.160	
5	1890.432	1890.432	1890.432	1890.432	
3	1888.704	1888.704	1888.704	1888.704	
7	1886.976	1886.976	1886.976	1886.976	
3	1885.248	1885.248	1885.248	1885.248	
)	1883.520	1883.520	1883.520	1883.520	
10	1881.792	1881.792	1881.792	1881.792	

Note:

Channel No. 10: In the Test Mode on Base Unit and Handset.

12 Miscellaneous

12.1. CPU Data (Base Unit)

12.1.1. IC7 (BBIC)

Pin No.	Description	I/O	Connection	at Normal mode	at Reset mode
1	VSS_LNA1	-	GND	-	-
2	RF_RXp	A.I	RF_RXp	A.I	A.I
3	RF_RXn	A.I	RF_RXn	A.I	A.I
4	VSS_LNA2	-	GND	-	-
5	RFP1	D.O	RXON	O_0/1	Hi-Z
6	RFP0	D.O	ANT1	O_0/1	Hi-Z
7	REF_RES	A.O	REF_RES	A.O	A.O
	AVS_XTAL	-	GND	_	-
9	XTAL2	A.I	XTAL2	A.I	A.I
10	XTAL1	A.I	XTAL1	A.I	A.I
11	AVD_XTAL	-	AVD_XTAL	-	-
	RF_SUPPLY1	-	RF_SUPPLY1	-	-
13	LDO_CTRL	A.O	LDO_CTRL	A.O	0-1
14	AVD	-	AVD	_	-
15	LSRn	A.O	LSRn	A.O	A.O
16	LSRp	A.O	LSRp	A.O	A.O
17	VREFm	-	VREFm	_	-
	MICh	A.I	MICh	A.I	A.I
	CIDOUT/MICn	A.O	CIDOUT	A.O	A.I
	CIDINn/MICp	A.I	CIDINn	A.I	A.I
	CIDINp/VREFp	A.I	CIDINp	A.I	A.I
	PULSE_CTRL	D.O	N.C.	O_0	A.I
	RINGn/P3_6	D.O	HOOK	O_0/1	A.I
24	RINGOUT/RINGING/	A.O	RINGOUT	A.O	A.I
	P3_5				
	PARADET/P3_4	A.I	PARADET	A.I	A.I
	ADC0/P3_3	A.I	ADC0	A.I	A.I
27	ADC1/INT0/P1_0	A.I	ADC1	A.I	I-PU
28	NTC/ADC2	-	GND	-	A.I
29	SOCp	-	GND	-	A.I
30	SOCn	-	GND	-	A.I
31	CHARGE_CTRL	A.O	N.C.	A.O	O-0
32	P1_7/CHARGE	A.I	CHARGE	A.I	I-PD
33	PAOUTp/P3_1	A.O	PAOUTp	A.O	O-0
34	VDDPA	-	VDDPA	-	-
	PAOUTn/P3_0	A.O	PAOUTn	A.O	O-0
36	VBAT1	-	VBAT1	-	-
37	CP_C1x	A.I/O	N.C.	A.I/O	A.I
38	CP_C2x	A.I/O	CP_C2x	A.I/O	A.I
39	CP_C1y	A.I/O	N.C.	A.I/O	A.I
40	VBAT2	-	VBAT2	-	-
41	CP_C2y	A.I/O	CP_C2y	A.I/O	A.I
42	CP_VOUT1/LED1	A.O	CP_VOUT1	A.O	A.I
43	CP_VOUT2/LED2	A.O	CP_VOUT2	A.O	A.I
44	PON/P1_6	D.I	PullUp	I_1	I-PD
45	VDD1	-	+1.8V	-	-
	P2_7/BXTAL	D.O	TAM_WP	O_0/1	I-PU
47	P1_5/INT5/RDI/VDDE	D.I	ROW2	I_0/1	0-1
48	P1_4/INT4/TDOD	D.I	ROW1	I_0/1	I-PD
49	P1_3/INT3/SIO	D.I	ROW0	I_0/1	I-PD
	P1_2/INT2/SK	D.O	KEY1	O_0/1	I-PU
	P1_1/INT1/LE	D.O	KEY0	O_0/1	I-PU
52	P2_6/WTF_IN	D.O	KEY2	O_0/1	I-PU
53	P0_7/SPI_DI	D.I	SPI_DI	I_0/1	I-PU
54	P0_6/SPI_DO	D.O	SPI_DO	O_0/1	I-PU
55	P0_5/SPI_CLK	D.O	SPI_CLK	O_0/1	I-PU
56	P0_4/SPI_EN	D.O	TAM_CSn	O_0/1	I-PU
57	P0_3/SCL2	D.O	SCL2	O_0/1	I-PU
58	P0_2/SDA2	D.I/O	SDA2	I/O_0/1	I-PU
	· · · · · · · · · · · · · · · · · · ·				

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

Pin No.	Description	I/O	Connection	at Normal mode	at Reset mode
59	P0_1/URX	D.I	URX	I_0/1	I-PU
60	P0_0/UTX	D.O	UTX	O_0/1	I-PU
61	RSTn	D.O	RSTn	O_0/1	I-PU
62	JTAG	D.I/O	JTAG	I/O_0/1	I-PU
63	P2_5/PCM_FSC/SF	D.O	EEP_WP	O_0/1	I-PU
64	P2_4/SCL1/PCM_DO/ DP3	D.O	N.C.	O_0	I-PU
65	P2_3/SDA1/PCM_DI/DP2	D.O	N.C.	O_0	I-PU
66	P2_2/PCM_CLK/CLK100	D.O	N.C.	O_0	I-PU
67	P2_1/ECZ2/PWM1/LED4	D.O	LED2	A.I	A.I
68	P2_0/ECZ1/PWM0/LED3	D.O	LED1	A.I	A.I
69	VDD2	-	+1.8V	-	-
70	LDORF_CTRL	A.I	LDORF_CTRL	A.I	A.I
71	RF_SUPPLY2	-	RF_SUPPLY2	-	-
72	RF0n	D.O	ANT2	O_0/1	Hi-Z
73	RFP4	D.O	PON	O_0/1	Hi-Z
74	RFP3	D.O	PSEL	O_0/1	Hi-Z
75	VDD_PADR	A.O	VDD_PADRV	A.O	A.O
76	VSS_PADR1	-	GND	-	-
77	RF_TXp	A.O	TXp	A.O	A.O
78	RF_TXn	A.O	TXn	A.O	A.O
79	VSS_PADR2	-	GND	-	-
80	RFP2	-	TXON	-	Hi-Z
81	GND	-	GND	-	-

12.2. CPU Data (Handset)

12.2.1. IC1 (BBIC)

Pin No.	Description	I/O	Connection	at Normal mode	at Reset mode
	VSS_LNA1	-	GND	-	-
	RF_RXp	A.I	RF_RXp	A.I	A.I
3	RF_RXn	A.I	RF_RXn	A.I	A.I
4	VSS_LNA2	-	GND	-	-
5	RFP1	D.O	RXON	O_0/1	Hi-Z
6	RFP0	D.O	ANT1	O_0/1	Hi-Z
	REF_RES	A.O	REF_RES	A.O	A.O
	AVS_XTAL	-	GND	-	-
9	XTAL2	A.I	XTAL2	A.I	A.I
10	XTAL1	A.I	XTAL1	A.I	A.I
11	AVD_XTAL	A.1	AVD_XTAL	-	-
	RF_SUPPLY1	-	RF_SUPPLY1	-	<u>-</u>
13	LDO_CTRL	A.O	LDO_CTRL	A.O	O-1
14	AVD	A.O	+1.8V	A.O -	-
	LSRn		LSRn		
15		A.O		A.O	A.O
	LSRp	A.O	LSRp	A.O	A.O
17	VREFm	-	GND	-	-
	MICh	A.I	MICh	A.I	A.I
	CIDOUT/MICn	A.I	MICn	A.I	A.I
	CIDINn/MICp	A.I	MICp	A.I	A.I
	CIDINp/VREFp	A.O	VREFp	A.O	A.I
	RINGp/P3_7	D.O	COL4	O_0/1	A.I
23	RINGn/P3_6	D.O	COL3	O_0/1	A.I
24	RINGOUT/RINGING/	D.O	COL2	O_0/1	A.I
	P3_5				
	PARADET/P3_4	D.O	COL1	O_0/1	A.I
26	ADC0/P3_3	D.O	COL0	O_0/1	A.I
27	ADC1/INT0/P1_0	D.I	ROW0	I_0/1	I-PU
28	NTC/ADC2	A.I	GND	I_0	A.I
29	SOCp	A.I	SOCp	A.I	A.I
30	SOCn	A.I	SOCn	A.I	A.I
31	CHARGE_CTRL	A.O	CHARGE_CTRL	A.O	O-0
32	P1_7/CHARGE	A.I	CHARGE	A.I	I-PD
	PAOUTp/P3_1	A.O	PAOUTp	A.O	O-0
34	VDDPA	-	VDDPA	-	
	PAOUTn/P3_0	A.O	PAOUTn	A.O	O-0
36	VBAT1	-	VBAT1	-	-
37	CP_C1x	A.I/O	CP_C1x	A.I/O	A.I
38	CP_C2x	A.I/O	CP_C2x	A.I/O	A.I
	CP_C1y	A.I/O	CP_C1y	A.I/O	A.I
40	VBAT2	-	VBAT2	-	-
41	CP_C2y	A.I/O	CP_C2y	A.I/O	A.I
42	CP VOUT1/LED1	A.I/O	CP_VOUT1	A.0	A.I
43	CP VOUT2/LED2	A.O	CP_VOUT2	A.O	A.I
44	PON/P1_6	A.I	PON	A.I	I-PD
45	VDD1	A.I	+1.8V	A.I -	-
	P2_7/BXTAL	D.O	COL5	O_0/1	I-PU
47	P1_5/INT5/RDI/VDDE	D.O	N.C.	O_0/1	0-1
	P1_4/INT4/TDOD	D.O	N.C.	O_0	I-PD
	P1_4/INT4/TDOD P1_3/INT3/SIO	D.O D.I	ROW3	U_0 I_0/1	I-PD
			ROW3 ROW2		I-PU
	P1_2/INT2/SK	D.I		I_0/1	
	P1_1/INT1/LE	D.I	ROW1	I_0/1	I-PU
52	P2_6/WTF_IN	D.O	KEY_LED	O_0/1	I-PU
53	P0_7/SPI_DI	D.O	EEPROM_WP	O_0/1	I-PU
54	P0_6/SPI_DO	D.O	LCD_SDA	O_0/1	I-PU
	P0_5/SPI_CLK	D.O	LCD_SCL	O_0/1	I-PU
56	P0_4/SPI_EN	D.O	LCD_CD	O_0/1	I-PU
57	P0_3/SCL2	D.O	SCL	O_0/1	I-PU
58	P0_2/SDA2	D.I/O	SDA	I/O_0/1	I-PU
59	P0_1/URX	D.I	URX	I_0/1	I-PU
60	P0_0/UTX	D.O	UTX	O_0/1	I-PU
61	RSTn	D.O	RSTn	O_0/1	I-PU

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

Pin No.	Description	I/O	Connection	at Normal mode	at Reset mode
62	JTAG	D.I/O	JTAG	I/O_0/1	I-PU
	P2_5/PCM_FSC/SF	D.O	LCD_CSB	O_0/1	I-PU
64	P2_4/SCL1/PCM_DO/ DP3	D.O	N.C.	O_0	I-PU
	P2_3/SDA1/PCM_DI/DP2	D.O	LCD_BACKLIT(NC)	O_0	I-PU
66	P2_2/PCM_CLK/CLK100	D.O	LCD_RESET	O_0/1	I-PU
67	P2_1/ECZ2/PWM1/LED4	D.I	N.C.	0_0	A.I
68	P2_0/ECZ1/PWM0/LED3	D.O	BELL_LED_A	A.I	A.I
69	VDD2	-	+1.8V	-	-
70	LDORF_CTRL	A.I	N.C.	A.I	A.I
71	RF_SUPPLY2	-	RF_SUPPLY2	-	-
72	RF0n	D.O	ANT2	O_0/1	Hi-Z
73	RFP4	D.O	PON	O_0/1	Hi-Z
74	RFP3	D.O	PSEL	O_0/1	Hi-Z
75	VDD_PADR	A.O	VDD_PADRV	A.O	A.O
76	VSS_PADR1	-	GND	-	-
77	RF_TXp	A.O	TXp	A.O	A.O
78	RF_TXn	A.O	TXn	A.O	A.O
79	VSS_PADR2	-	GND	-	-
80	RFP2	D.O	TXON	O_0/1	Hi-Z
81	GND	-	GND	-	-

12.3. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

12.3.1. Preparation

- PbF (: Pb free) Solder
- · Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

Note: We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

• Flux

Recommended Flux: Specific Gravity \rightarrow 0.82. Type \rightarrow RMA (lower residue, non-cleaning type)


Note: See About Lead Free Solder (Pbf: Pb free) (P.4)

12.3.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

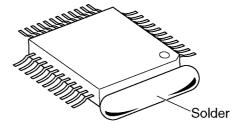

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

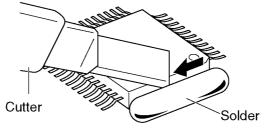


3. While the solder melts, remove it together with the IC pins.

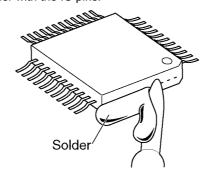


When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.

12.3.3. How to Install the IC

 
1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.



 - *Check the accuracy of the IC setting with the corresponding soldering foil.
 - 2. Apply flux to all pins of the FLAT PACKAGE IC.




 3. Solder the pins, sliding the soldering iron in the direction of the arrow.




12.3.4. How to Remove a Solder Bridge

 - 1. Lightly resolder the bridged portion.
- 2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.




12.4. Terminal Guide of the ICs, Transistors and Diodes


12.4.1. Base Unit

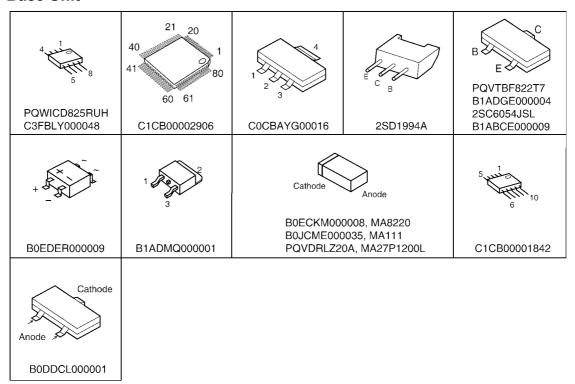

12.4.2. Handset

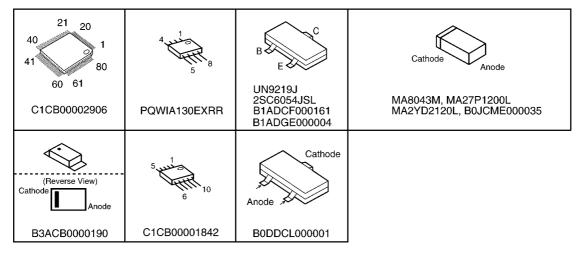

12.4.3. Charger Unit

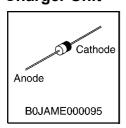

13 Schematic Diagram

13.1. For Schematic Diagram

13.1.1. Base Unit (Schematic Diagram (Base Unit_Main))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

13.1.2. Handset (Schematic Diagram (Handset))

Notes:

- 1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
- 2. The schematic diagram may be modified at any time with the development of new technology.

13.1.3. Charger Unit (Schematic Diagram (Charger Unit))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.


Important Safety Notice:

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.


2. The schematic diagram may be modified at any time with the development of new technology.

Memo

13.2. Schematic Diagram (Base Unit_Main)

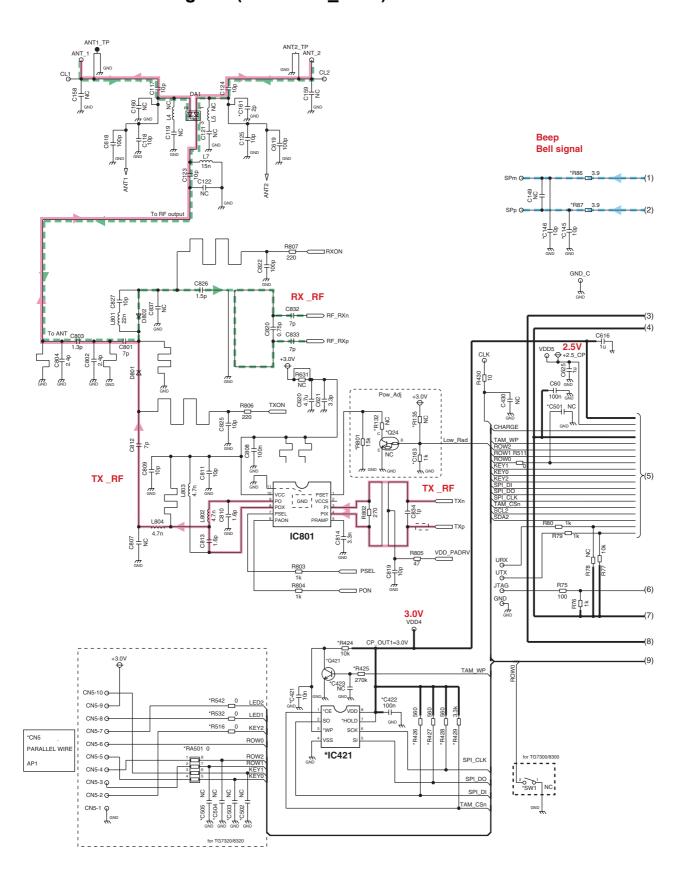


NC: No Components

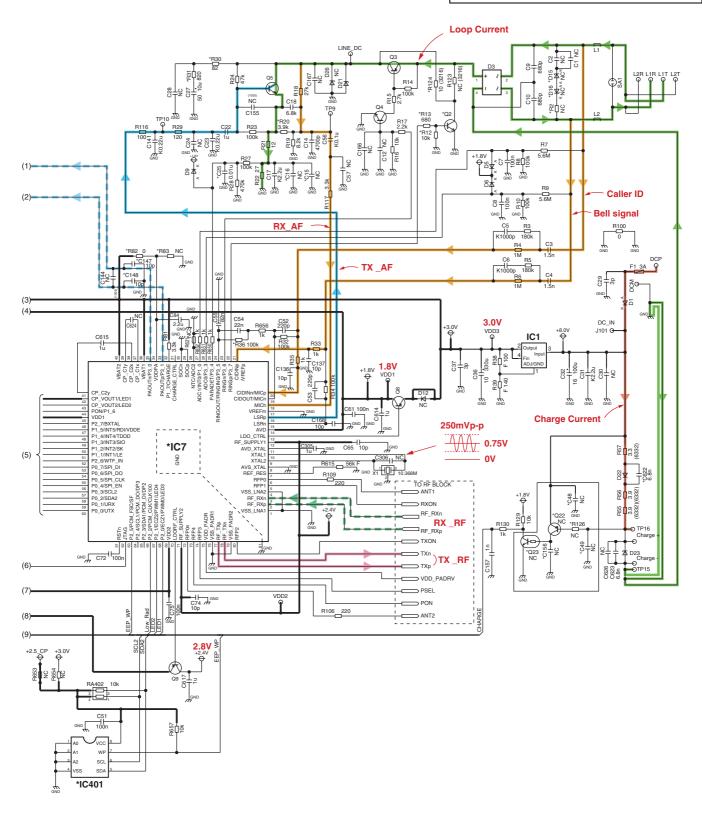


NC: No Components KX-TG8021BX SCHEMATIC DIAGRAM (Base Unit)

13.3. Schematic Diagram (Base Unit_Operation)

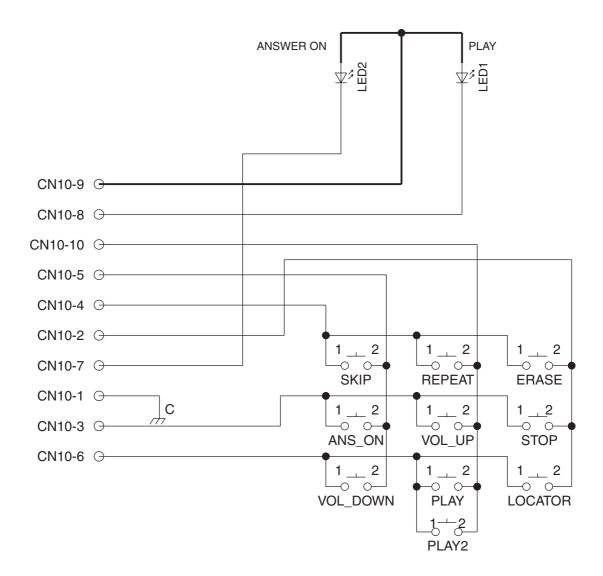



Memo

13.4. Schematic Diagram (Handset)

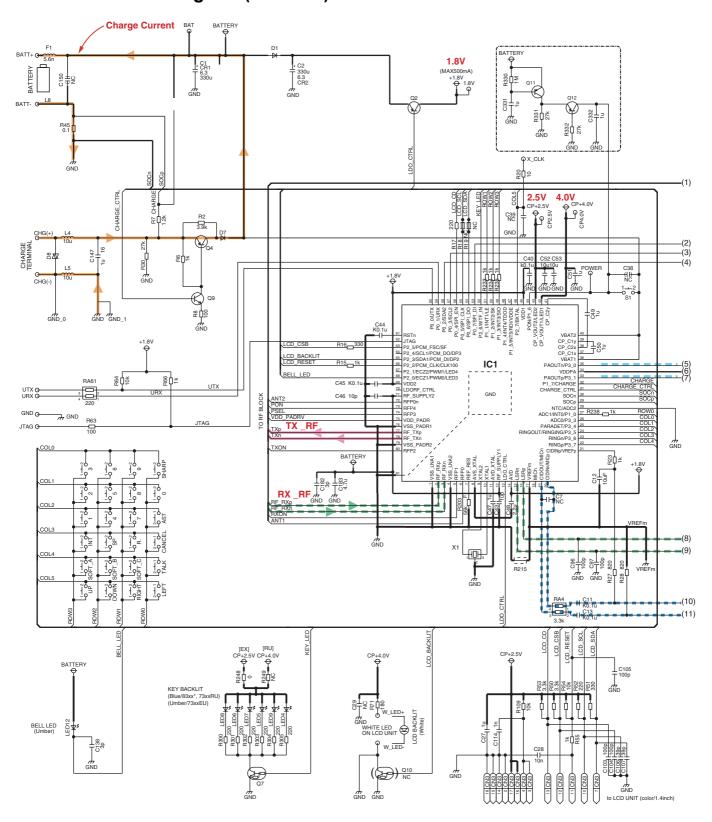


NC: No Components

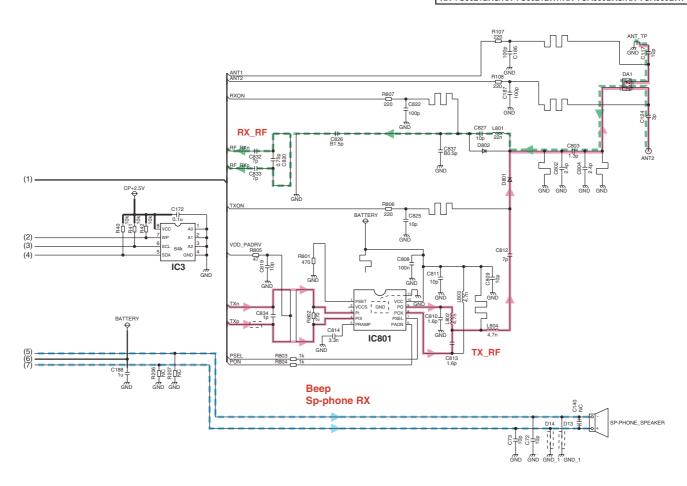

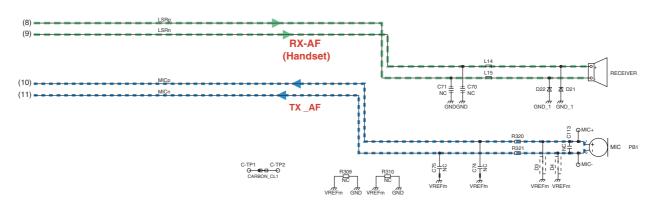

NC: No Components KX-TGA800 SCHEMATIC DIAGRAM (Handset_Main)

13.5. Schematic Diagram (Charger Unit)

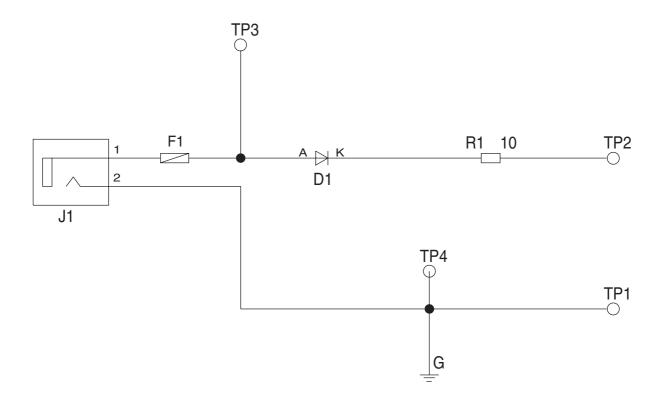


SCHEMATIC DIAGRAM (Charger Unit)

14 Printed Circuit Board


14.1. Circuit Board (Base Unit_Main)

14.1.1. Component View

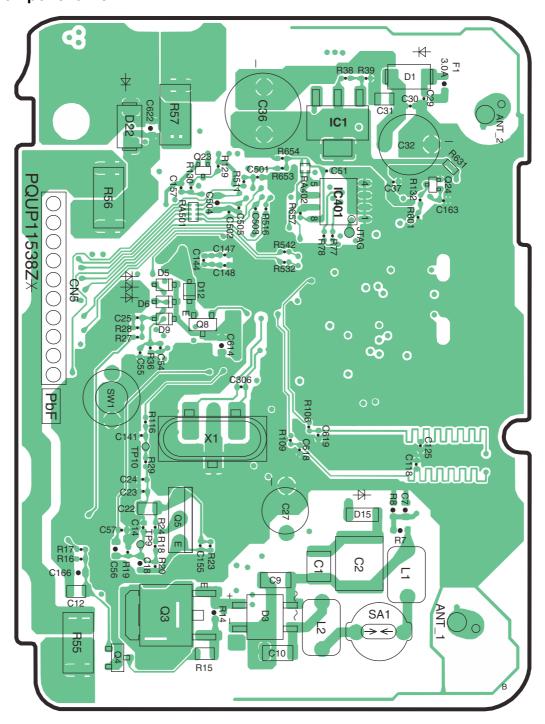

KX-TG8021 CIRCUIT BOARD (Base Unit (Component View))


14.1.2. Bottom View

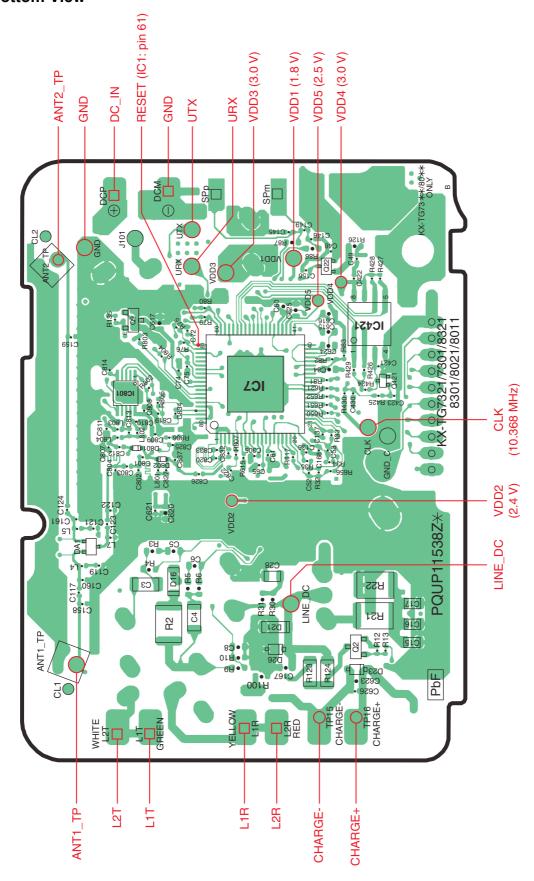

KX-TG8021 CIRCUIT BOARD (Base Unit (Bottom View))


14.2. Circuit Board (Base Unit_Operation)

14.2.1. Component View

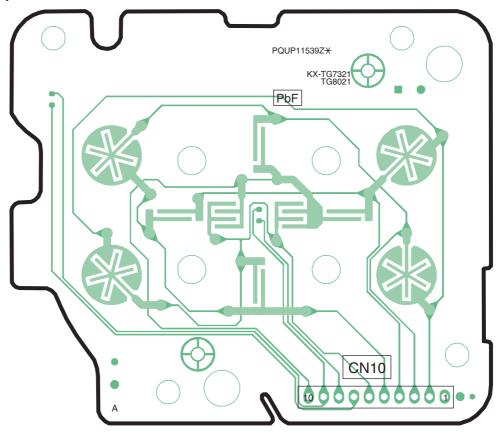

KX-TG8021 CIRCUIT BOARD (Base Unit_Operation (Component View))


14.2.2. Bottom View

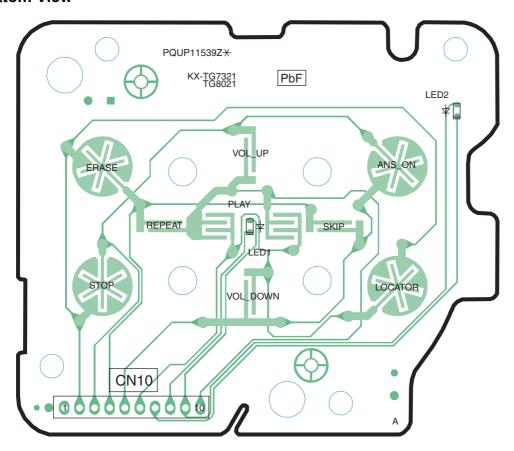

KX-TG8021 CIRCUIT BOARD (Base Unit_Operation (Bottom View))


14.3. Circuit Board (Handset)

14.3.1. Component View

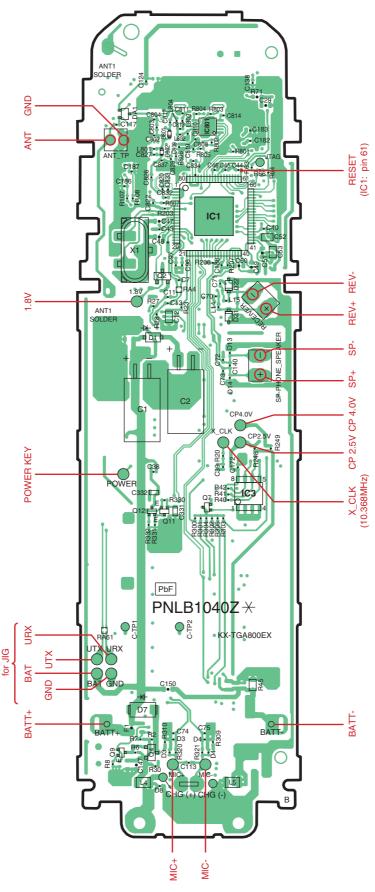

KX-TGA800 CIRCUIT BOARD (Handset_Main (Component View))


14.3.2. Bottom View

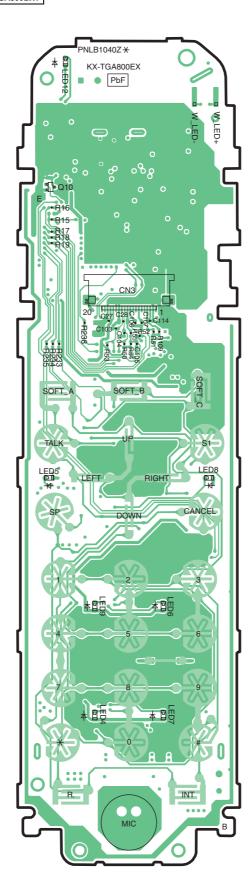

KX-TGA800 CIRCUIT BOARD (Handset_Main (Bottom View))


14.4. Circuit Board (Charger Unit)

14.4.1. Component View

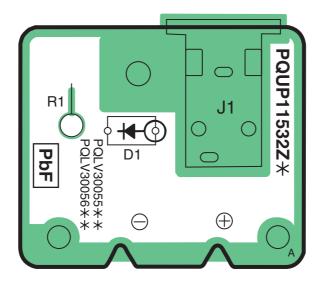

CIRCUIT BOARD (Charger unit (Component View))


14.4.2. Bottom View

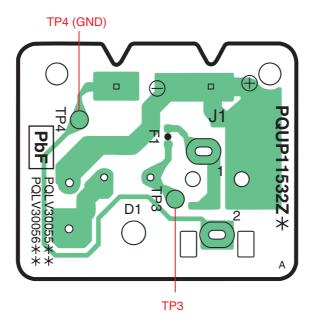


CIRCUIT BOARD (Charger unit (Bottom View))

15 Exploded View and Replacement Parts List

15.1. Cabinet and Electrical Parts (Base Unit)

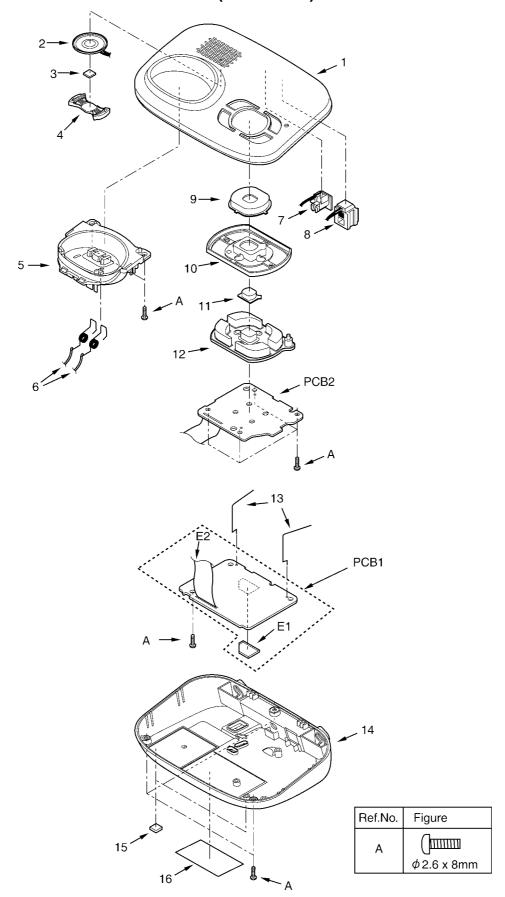


15.2. Cabinet and Electrical Parts (Handset)

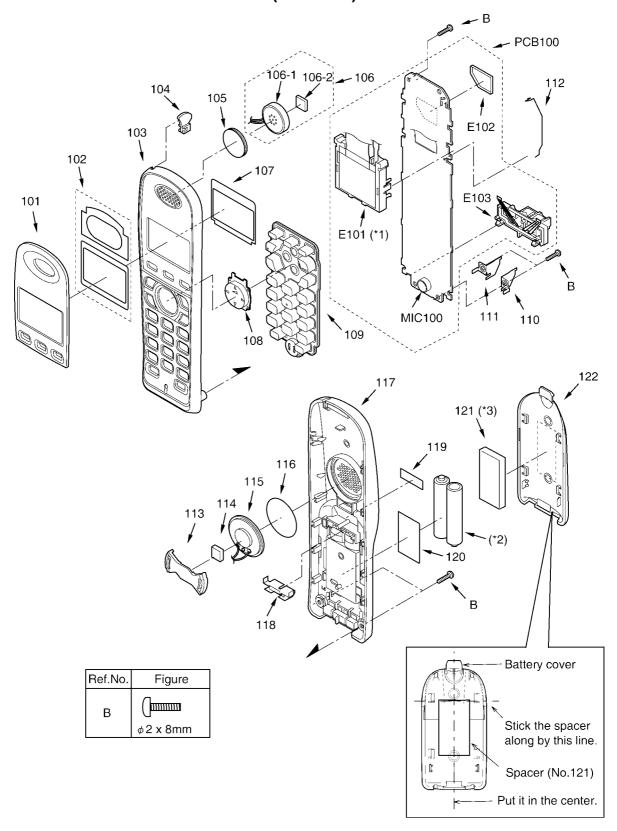

Note:


- (*1) This cable is fixed by welding. Refer to How to Replace the Handset LCD (P.57).
- (*2) The rechargeable Ni-MH battery HHR-4MPT is available through sales route of Panasonic.
- (*3) Attach the spacer (No. 121) to the exact location described above.

15.3. Cabinet and Electrical Parts (Charger Unit)

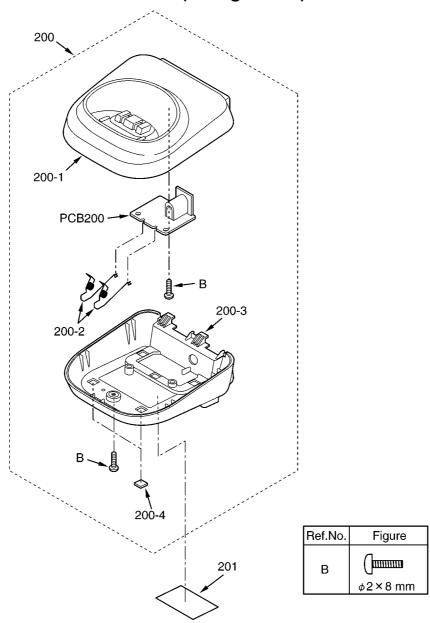

15.4. Accessories and Packing Materials


15.4.1. KX-TG8021BXS/BXT

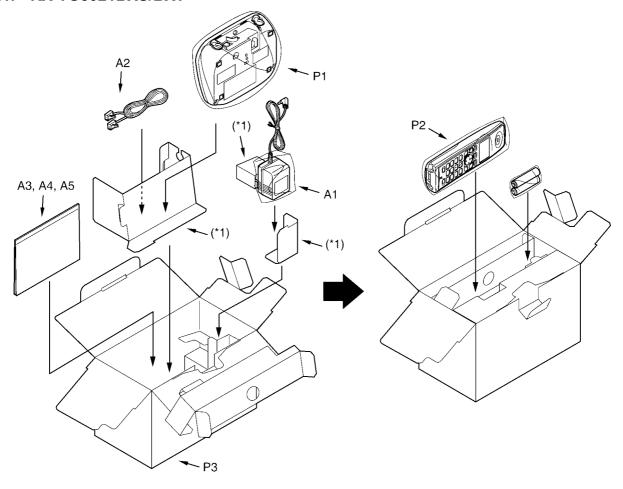

Note:

(*1) These pads are pieces of Ref No. P3 (GIFT BOX).

15.4.2. KX-TGA800BXS/BXT

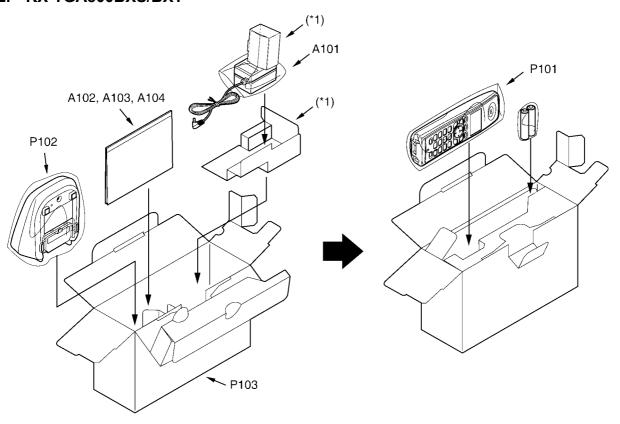

Note:

(*1) These pads are pieces of Ref No. P103 (GIFT BOX).

15.5. Replacement Part List

1. RTL (Retention Time Limited)

Note:

The "RTL" marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time. This period of time depends on the type of item, and the local laws governing parts and product retention. At the end of this period, the item will no longer be available.

2. Important safety notice

Components identified by the \triangle mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

- 3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.
- 4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.
- 5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) k=1000 Ω , M=1000 k Ω All capacitors are in MICRO FARADS (μF)p= $\mu \mu F$

*Type & Wattage of Resistor

Type

	ERX:Metal Film ERG:Metal Oxide ER0:Metal Film	PQ4R:Chip ERS:Fusible Resistor ERF:Cement Resistor
Wattage	_	

10,16:1/8W | 14,25:1/4W | 12:1/2W | 1:1W | 2:2W | 3:3W

*Type & Voltage Of Capacitor Type

ECFD:Semi-Conductor	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic
	ECQE,ECQV,ECQG:Polyester
ECUV,PQCUV,ECUE:Chip	ECEA,ECST,EEE:Electlytic
ECQMS:Mica	ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others		
1H:50V 2A:100V 2E:250V 2H:500V	05:50V 1:100V 2:200V	0F:3.15V 1A:10V 1V:35V 0J:6.3V	0J :6.3V 1A :10V 1C :16V 1E,25:25V	1V :35V 50,1H:50V 1J :16V 2A :100V	

15.5.1. Base Unit

15.5.1.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	1	PNKM1002Y5	CABINET BODY (for KX- TG8021BXS)	PS-HB
	1	PNKM1002Y8	CABINET BODY (for KX- TG8021BXT)	PS-HB
	2	L0AD02A00026	SPEAKER	
	3	PQHG10729Z	RUBBER PARTS, CUSHION	
	4	PQHR11313Z	GUIDE, SPEAKER	ABS-HB
	5	PNKE1001Y3	CHARGE CASE (for KX- TG8021BXS)	PS-HB
	5	PNKE1001Y2	CHARGE CASE (for KX- TG8021BXT)	PS-HB
	6	PNJT1003Z	CHARGE TERMINAL	
	7	K2ECYZ000001	JACK, DC	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	8	PQJJ1T039Y	JACK, MODULAR	
	9	PNBC1002Y3	BUTTON, NAVIGATOR	ABS-HB
	10	PNHR1001Z	GUIDE, BUTTON	PS-HB
	11	PNBC1001Z3	BUTTON, MESSAGE	AS-HB
	12	PNJK1002Z	RUBBER SWITCH	
	13	PNLA1002Z	ANTENNA	
	14	PNKF1002Z6	CABINET COVER(for KX- TG8021BXS)	PS-HB
	14	PNKF1002Z1	CABINET COVER (for KX- TG8021BXT)	PS-HB
	15	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	
	16	PNGT1796V	NAME PLATE (KX- TG8021BXS)	
	16	PNGT1796W	NAME PLATE (KX- TG8021BXT)	

15.5.1.2. Main P.C.Board Parts

Note:

- (*1) When replacing IC7, IC401 or X1, make the adjustment using PNZZTG8021BX. Refer to **Base Unit** (P.65) of **Things to Do after Replacing IC or X'tal.**
- (*2) When you removing E1, use special tools (ex. Hot air disordering tool).
- (*3) Backside of this IC has a ground plate.
- (*4) Supplied IC is Flat Package Type.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB1	PNWP17321BXH	MAIN P.C.BOARD ASS'Y (RTL)	
			(ICs)	
	IC1	COCBAYG00016	IC	
	IC7	C1CB00002906		s
			(*1) (*3) (*4)	
	IC401	~	IC (EEPROM) (*1)	
	IC421	C3FBLY000048		
	IC801	C1CB00001842		
			(TRANSISTORS)	
	Q2	B1ABCE000009	TRANSISTOR (SI)	
	Q3	B1ADMQ000001	TRANSISTOR (SI)	
	Q4	PQVTBF822T7	TRANSISTOR (SI)	
	Q5	2SD1994A	TRANSISTOR (SI)	
	Q8	B1ADGE000004	TRANSISTOR (SI)	
	Q9	B1ADGE000004	TRANSISTOR(SI)	
	Q421	2SC6054JSL	TRANSISTOR(SI)	
			(DIODES)	
	D1	B0JCME000035	DIODE(SI)	
	D3	B0EDER000009	DIODE(SI)	
	D5	MA111	DIODE(SI)	S
	D6	MA111	DIODE(SI)	S
	D9	MA111	DIODE(SI)	S
	D21	PQVDRLZ20A	DIODE(SI)	S
	D22	B0ECKM000008	DIODE(SI)	
	D23	MA8220	DIODE(SI)	s
	D801	MA27P1200L	DIODE(SI)	
	D802	MA27P1200L	DIODE(SI)	
	DA1	B0DDCL000001	DIODE(SI)	
			(COILS)	
	L1	PQLQXF330K	COIL	S
	L2	PQLQXF330K	COIL	s
	L7	PQLQR4C15NJ	COIL	
	L801	POLOR4C22NJ	COIL	s
	L802	G1C4N7Z00006	**	
	L803	G1C4N7Z00006		
	L804	G1C4N7Z00006		
			(COMPONENT PARTS)	
	RA402	D1H410320002	RESISTOR ARRAY	
	RA501	EXB28VR000X	RESISTOR ARRAY	
			(VARISTOR)	
	SA1	J0LF00000026	, , ,	
			ABSORBER)	
			(RESISTORS)	

KX-TG8021BXS/KX-TG8021BXT/KX-TGA800BXS/KX-TGA800BXT

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R3	ERJ3GEYJ184	180k	
	R4	ERJ3GEYJ105	1M	
	R5	ERJ3GEYJ184	180k	
	R6	ERJ3GEYJ105	1M	
	R7	ERJ3GEYJ565	5.6M	
	R8	ERJ3GEYJ104	100k	
	R9	ERJ3GEYJ565	5.6M	
	R10	ERJ3GEYJ104	100k	
	R12	ERJ2GEJ103	10k	
	R13	ERJ2GEJ681	680	
	R14	ERJ3GEYJ104	100k	
	R15	PQ4R10XJ272	2.7k	S
	R16 R17	ERJ2GEJ103 ERJ2GEJ222	10k 2.2k	
	R18	ERJ2GEJ272X	27k	
	R19	ERJ2GEJ273A ERJ2GEJ822	8.2k	
	R20	ERJ2GEJ392 ERJ12YJ120	3.9k 12	
	R21 R22	ERJ12YJ120 ERJ12YJ270	27	
	R23	ERJ12IJ270 ERJ2GEJ104	100k	
	_			
	R24 R27	ERJ2GEJ473 ERJ2GEJ104	47k 100k]
	R27	ERJ2GEJ104 ERJ2GEYJ474	470k	s
	R28	ERJ2GEJJ474 ERJ2GEJ121	120	2
		ERJ2GEJ121 ERJ3GEYJ820	82	
	R30 R31	ERJ3GEYJ820 ERJ3GEYJ821	820	
	R31	ERJ3GEYJ821 ERJ2GEJ104	100k]
	R32	ERJ2GEJ104 ERJ2GEJ102	1k	
	R34	ERJ2GEJ102	100k	
	R35	ERJ2GEJ102	1k	
	R36	ERJ2GEJ104	100k	
	R38	ERJ2RKF1000	100	
	R39	ERJ2RKF1400	140	
	R55	ERJ1TYJ3R9U	3.9	
	R56	ERJ1TYJ3R9U	3.9	
	R57	ERJ1TYJ3R3U	3.3	
	R75	ERJ2GEJ101	100	
	R76	ERJ2GEJ102	1k	
	R77	ERJ2GEJ103	10k	
	R79	ERJ2GEJ102	1k	
	R80	ERJ2GEJ102	1k	
	R81	ERJ2GEJ332	3.3k	
	R82	ERJ2GE0R00	0	
	R86	ERJ3GEYJ3R9	3.9	
	R87	ERJ3GEYJ3R9	3.9	
	R100	ERJ3GEY0R00	0	
	R106	ERJ2GEJ221	220	
	R109	ERJ2GEJ221	220	
	R116	ERJ2GEJ101	100	
	R117	ERJ2GEJ332	3.3k	
	R124	PQ4R18XJ100	10	S
	R129	ERJ2GEJ103	10k	
	R130	ERJ2GEJ102	1k	
	R424	ERJ2GEJ103	10k	
	R425	ERJ2GEJ274	270k	
	R426	ERJ2GEJ561	560	
	R427	ERJ2GEJ561	560	
	R428	ERJ2GEJ561	560	
	R429	ERJ2GEJ332	3.3k	
	R430	ERJ2GEJ100	10	
	R511	ERJ2GE0R00	0	
	R516	ERJ2GE0R00	0	
	R532	ERJ2GE0R00	0	
	R542	ERJ2GE0R00	0	
	R615	D0GA563ZA006	56k	
	R650	ERJ2GEJ102	1k	
	R651	ERJ2GEJ102	1k	
	R652	ERJ2GEJ102	1k	
	R656	ERJ2GEJ102	1k	
	R657	ERJ2GEJ103	10k	
	R801	ERJ2GEJ621X	15k	
	R802	ERJ2GEJ271 ERJ2GEJ102	270 1k	

Safety	No.	Part No.	Part Name & Description	Remarks
	R804	ERJ2GEJ102	1k	
	R805	ERJ2GEJ470	47	
	R806	ERJ2GEJ221	220	
	R807	ERJ2GEJ221	220	
	G 2	E1 22 11 E 2 3 0 0 0	(CAPACITORS)	
	C3	F1K2H152A008		
	C4	F1K2H152A008 ECUV1H102KBV		
	C5	ECUV1H102KBV		
	C6	ECUV1H102KBV		
	C7			
	C8	ECUV1C104KBV		
	C9	F1K2H681A008		
	C10	F1K2H681A008		
	C14	ECUE1E472KBQ		
	C17	PQCUV1A225KB		
	C18	ERJ3GEYJ682	6.8k	
	C22	PQCUV1A105KB		
	C23	ECJ0EB0J224K		S
	C25	ECUE1C103KBQ		
	C27	F2A1H100B132		
	C29	ECUE1H3R0CCQ	_	
	C31	PQCUV1A225KB		
	C32	F2A1C1010119		
	C36	F2A1A3310040		
	C37	ECUE1H3R0CCQ		
	C51	ECUE1A104KBQ		
	C52	ECUE1H221JCQ		
	C53	ECUE1H221JCQ	220p	
	C54	ECUE1C223KBQ	0.022	
	C55	ECUE1A823KBQ	0.082	
	C56	ECUV1C104KBV	0.1	
	C60	ECUV1H104KBV	0.1	
	C61	ECUE1A104KBQ	0.1	
	C65	ECUE1H100DCQ	10p	
	C72	ECUE1A104KBQ	0.1	
	C74	ECUE1H100DCQ	10p	
	C75	ECUE1A104KBQ	0.1	
	C84	ECUV1A225KB	2.2	
	C117	ECUE1H100CCQ	10p	
	C118	ECUE1H100DCQ	10p	
	C123	ECUE1H100CCQ	10p	
	C124	ECUE1H100CCQ	10p	
	C125	ECUE1H100DCQ	_	
	C136	ECUE1H100DCQ	10p	
	C137	ECUE1H100DCQ		
	C141	ECJ0EB0J224K	_	S
	C145	ECUE1H100DCQ		
	C145	ECUE1H100DCQ		
	C147	ECUE1H100DCQ	_	
	C147	ECUE1H100DCQ ECUE1H100DCQ		
	C148	ECUE1H100DCQ ECUE1H102KBQ		
	C163	ERJ2GEJ102	1k	
	C163	ECUE1H100DCQ		
	C305	ECUE0J105KBQ		
	C305	ECUE1C103KBQ		
	C421 C422	ECUE1C103KBQ ECUE1A104KBQ		
	C614	ECUV1A105KBV		
	C615	ECUV1A105KBV		
	C616	ECUV1A105KBV		
	C617	ECUV0J105KBV		
	C618	ECUE1H101JCQ		
	C619	ECUE1H101JCQ		
	C620	F1H0J4750002		
	C621	F1G1H3R3A480		
	C622	ECUV1H682KBV		
	C623	ECUV1H682KBV		
	C625	ECUV1A105KBV		
	C801	F1G1H7R0A480	_	
	C802	F1G1H2R4A480	2.4p	
	C803	F1G1H1R3A480	1.3p	
	C804	F1G1H2R4A480	2.4p	
	C808	ECUE1A104KBQ	0.1	
	C809	ECUE1H100DCQ	10p	
_				

Safety	Ref. No.	Part No.	Part Name & Description Re	emarks
	C810	F1G1H1R6A480	1.6p	
	C811	ECUE1H100DCQ	10p	
	C812	F1G1H7R0A480	7p	
	C813	F1G1H1R6A480	1.6p	
	C814	ECUE1H332KBQ	0.0033	
	C819	ECUE1H100DCQ	10p	
	C820	F1G1HR75A480	0.75p	
	C822	ECUE1H101JCQ	100p	
	C825	ECUE1H100DCQ	10p	
	C826	F1G1H1R5A480	1.5p	
	C827	ECUE1H100DCQ	10p	
	C832	F1G1H7R0A480	7p	
	C833	F1G1H7R0A480	7p	
	C834	F1G1H1R0A480	1p	
			(OTHERS)	
	E1	PNMC1003Z	MAGNETIC SHIELD, CASE (*2)	
	E2	WBX10SH-3.5G	LEAD WIRE, PARALLEL WIRE	
	X1	ној103500027	CRYSTALOSCILLATOR (*1)	
	F1	K5H302Y00003	FUSE	

15.5.1.3. Operational P.C.Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB2	PNWP2G7321EH	OPERATIONAL P. C. BOARD ASS'Y (RTL)	
			(LEDS)	
	LED1	PQVDBR1111C	LED	S
	LED2	PQVDBR1111C	LED	S

15.5.2. Handset

15.5.2.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	101	PNGP1026Y2	PANEL, LCD (KX- TGA800BXS)	AS-HB
	101	PNGP1026Z1	PANEL, LCD (KX- TGA800BXT)	AS-HB
	102	PNHS1035Z	TAPE, DOUBLE SIDED	
	103	PNKM1044Z2	CABINET BODY (KX- TGA800BXS)	PS-HB
	103	PNKM1044Z1	CABINET BODY (KX- TGA800BXT)	PS-HB
	104	PNHR1005Z	OPTIC CONDUCTIVE PARTS, LED LENS	PS-HB
	105	PQHS10467Z	COVER, SPEAKER NET	
	106	PQWHTGA720ER	RECEIVER ASS'Y	
	106-1	L0AD02A00028	RECEIVER	
	106-2	PQHG10756Z	RUBBER PARTS, RECEIVER	
	107	PNHS1044Z	SPACER, LCD CUSHION	
	108	PNBC1003Y3	BUTTON, NAVIGATOR KEY	ABS-HB
	109	PNJK1029X	RUBBER SWITCH	
	110	PNJT1002Z	CHARGE TERMINAL (R)	
	111	PNJT1001Z	CHARGE TERMINAL (L)	
	112	PNLA1005Z	ANTENNA	
	113	PQHR11313Z	GUIDE, SPEAKER	ABS-HB
	114	PQHG10729Z	RUBBER PARTS, SPEAKER	
	115	L0AD02A00026	SPEAKER	
	116	PQHS10622Z	SPEAKER NET	
	117	PNKF1033Z2	CABINET COVER (KX- TGA800BXS)	ABS-HB
	117	PNKF1033Z1	CABINET COVER (KX- TGA800BXT)	ABS-HB
	118	PQJC10056X	BATTERY TERMINAL	
	119	PQQT23182Z	LABEL, ATTENTION	
	120	PNGT1795V	NAME PLATE (KX- TGA800BXS)	
	120	PNGT1795W	NAME PLATE (KX- TGA800BXT)	
	121	PQHS10561Y	SPACER, BATTERY COVER	

Safety	Ref. No.	Part No.	Part	Name	&	Descr	iption	Remarks
	122	PNKK1001Z6	LID, TGA80	BA (OBXS)		ERY	(KX-	ABS-HB
	122	PNKK1001Z2	LID, TGA80	BA (DBXT)		ERY	(KX-	ABS-HB

15.5.2.2. Main P.C.Board Parts

Note:

- (*1) Reconfirm the model No. written on the handset's name plate when replacing PCB100. Because the model No. of the optional handset may differ from the included handset.
- (*2) When replacing IC1, IC3 or X1, make the adjustment using PNZZTG8021BX. Refer to **Handset** (P.66) of **Things** to **Do after Replacing IC or X'tal.**
- (*3) When replacing the Handset LCD, See **How to Replace the Handset LCD** (P.57).
- (*4) When you removing E102, use special tools (ex. Hot air disordering tool).
- (*5) Backside of this IC has a ground plate.
- (*6) Supplied IC is Flat Package Type.

Safety	Ref. No.	Part No.	Part Name & Description	Remark
	PCB100	PNWPGA800BXR	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(ICs)	
	IC1	G1 GB00000000	IC (BBIC (FLASH)) (*2)	
	101	С1СВ00002300	(*5) (*6)	
	IC3	PQWIA130EXRR	IC (EEPROM) (*2)	
	IC801	C1CB00001842	IC (*5)	
			(TRANSISTORS)	
	Q2	B1ADGE000004	TRANSISTOR(SI)	
	Q4	B1ADGE000004	TRANSISTOR(SI)	
	Q7	UN9219J	TRANSISTOR(SI)	S
	Q9	2SC6054JSL	TRANSISTOR(SI)	
	Q11	B1ADCF000161	TRANSISTOR(SI)	
	Q12	B1ADCF000161	TRANSISTOR (SI)	S
			(DIODES)	
	D1	MA2YD2120L	DIODE(SI)	
	D7	B0JCME000035	DIODE(SI)	
	D21	MA8043M	DIODE(SI)	S
	D22	MA8043M	DIODE(SI)	S
	D801	MA27P1200L	DIODE(SI)	
	D802	MA27P1200L	DIODE(SI)	
	DA1	B0DDCL000001	DIODE(SI)	
	LED4	B3ACB0000190	DIODE(SI)	
	LED5	B3ACB0000190	DIODE(SI)	
	LED6	B3ACB0000190		
	LED7	B3ACB0000190	DIODE(SI)	
	LED8	B3ACB0000190		
	LED9	B3ACB0000190		
	LED12	B3ACB0000190		
			(COILS)	
	L4	G1C100MA0072		
	L5	G1C100MA0072	COIL	
	L801	PQLQR4C22NJ	COIL	s
	L802	G1C4N7Z00006	COIL	
	L803	G1C4N7Z00006		
	L804	G1C4N7Z00006		
	F1	PQLQR2M5N6K	COIL	s
			(COMPONENTS PARTS)	
	RA4	D1H433220001	RESISTOR ARRAY	
	RA61	D1H422120001	RESISTOR ARRAY	
			(VARISTORS)	
	D3	D4ZZ00000032	, ,	
	D4	D4ZZ00000032		
	D8	D4ED1270A014		
	D13	D4ZZ00000032		
	D13	D4ZZ00000032		
			(IC FILTERS)	
	L14	J0JCC0000287	IC FILTER	
	L15	J0JCC0000287		

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	CN3	K1MY20BA0112	(CONNECTOR)	
	CNS	RIMIZOBAUIIZ	(RESISTORS)	
	R2	ERJ2GEJ392	3.9k	
	R6	ERJ2GEJ102	1k	
	R7	ERJ2GEJ122	1.2k	
	R8	ERJ2GEJ101	100	
	R15	ERJ2GEJ102	1k	
	R16	ERJ2GEJ331	330	
	R17	ERJ2GEJ221	220	
	R20 R23	ERJ2GEJ100 ERJ2GEJ102	10 1k	
	R27	ERJ2GEJ821	820	
	R28	ERJ2GEJ821	820	
	R30	ERJ2GEJ273X	27k	
	R40	ERJ2GEJ103	10k	
	R41	ERJ2GEJ103	10k	
	R42	ERJ2GEJ103	10k	
	R45	ERJ6RSJR10V	0.1	
	R50	ERJ2GEJ332	3.3k	
	R51	ERJ2GEJ331	330	
	R52	ERJ2GEJ221 ERJ2GEJ332	220 3 3h	
	R53 R54	ERJ2GEJ332 ERJ2GEJ103	3.3k 10k	
	R55	ERJ2GEJ103 ERJ2GEJ102	1k	<u> </u>
	R63	ERJ2GEJ101	100	
	R64	ERJ2GEJ103	10k	
	R66	ERJ2GEJ102	1k	
	R71	ERJ3GEYJ181	180	
	R107	ERJ2GEJ221	220	
	R108	ERJ2GEJ221	220	
	R109	ERJ2GEJ103	10k	
	R203	D0GA563ZA006		
	R233 R234	ERJ2GEJ102 ERJ2GEJ102	1k 1k	
	R234	ERJ2GEJ102 ERJ2GEJ102	1k	
	R238	ERJ2GEJ102	1k	
	R248	ERJ2GE0R00	0	
	R300	ERJ2GEJ221	220	
	R301	ERJ2GEJ221	220	
	R302	ERJ2GEJ221	220	
	R303	ERJ2GEJ221	220	
	R304	ERJ2GEJ221	220	
	R305	ERJ2GEJ221	220	
	R320 R321	ERJ2GEJ330 ERJ2GEJ330	33	
	R321	ERJ2GEJ330 ERJ2GEJ105X	1M	
	R331	ERJ2GEJ273X	27k	
	R332	ERJ2GEJ273X	27k	
	R801	ERJ2GEJ471	470	
	R802	ERJ2GEJ101	100	
	R803	ERJ2GEJ102	1k	
	R804	ERJ2GEJ102	1k	
	R805	ERJ2GEJ470	47	
	R806	ERJ2GEJ221	220	
	R807	ERJ2GEJ221	(CAPACITORS)]
	C1	F2A0J3310067		
	C2	F2A003310067		
	C11	ECUE1A104KBQ		
	C12	PQCUV0J106KB		
	C13	ECUE1A104KBQ	0.1	
	C27	ECUE0J105KBQ	1	
	C28	ECUV1H103KBV		
	C40	ECUE1A104KBQ		
	C43	ECUE1H100DCQ	_	
	C44	ECUE1A104KBQ		
	C45 C46	ECUE1A104KBQ ECUE1H100DCQ		
	C47	ECUV1A105KBV	=	
	C48	ECUV1A225KB	2.2	
	1	1		
	C49	ECUV1A105KBV	1	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C51	ECUV1A105KBV	1	
	C52	PQCUV0J106KB	10	
	C53	PQCUV0J106KB	10	
	C72	ECUE1H100DCQ	10p	
	C73	ECUE1H100DCQ	10p	
	C96	ECUE1H101JCQ	100p	
	C97	ECUE1H101JCQ	100p	
	C103	ECUE1H101JCQ	100p	
	C104	ECUE1H101JCQ	100p	
	C105	ECUE1H101JCQ	100p	
	C106	ECUE1H390JCQ	39p	
	C107	ECUE1H390JCQ	_	
	C114	ECUE1H102KBQ	-	
	C117	ECUE1H100DCQ		
	C124	F1G1H3R0A480	_	
	C138	F1G1H3R0A480	_	
	C147	ECUV1C105KBV	_	
	C172	ECUE1A104KBO		
	C182	F1G1H3R0A480		
	C183	F1H0J4750002		
	C186	ECUE1H101JCQ		
	C187	ECUE1H101JCQ	_	
	C188	ECUE0J105KBQ	_	
	C331	ECUV1A105KBV		
	C331	ECUVIA105KBV		
	C802	F1G1H2R4A480	_	
	C803	F1G1H1R3A480	-	
	C804	F1G1H2R4A480	_	
	C808	ECUE1A104KBQ		
	C809	ECUE1H100DCQ	-	
	C810	F1G1H1R6A480	_	
	C811	ECUE1H100DCQ	_	
	C812	F1G1H7R0A480	_	
	C813	F1G1H1R6A480	_	
	C814	ECUE1H332KBQ		
	C819	ECUE1H100DCQ		
	C820	F1G1HR75A480	_	
	C822	ECUE1H101JCQ	_	
	C825	ECUE1H100DCQ	-	
	C826	F1G1H1R5A480	1.5p	
	C827	ECUE1H100DCQ	10p	
	C832	F1G1H7R0A480	7p	
	C833	F1G1H7R0A480	7p	
	C834	F1G1H1R0A480	1p	
	C837	F1G1HR50A480	0.5p	
			(OTHERS)	
	MIC100	L0CBAY000016	MICROPHONE	
	E101	PQLP10276Z	LIQUID CRYSTAL DISPLAY (*3)	
	E102	PNMC1003Z	MAGNETIC SHIELD, CASE (*4)	
	E103	PQWE10050Z	BATTERY TERMINAL	
	X1	Н0J103500031		
			/	

15.5.3. Charger Unit

15.5.3.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description Remarks
	200	PNLC1001YG	CHARGER UNIT ASS'Y without NAME PLATE (KX- TGA800BXS) (RTL)
	200	PNLC1001XT	CHARGER UNIT ASS'Y without NAME PLATE (KX- TGA800BXT) (RTL)
	200-1	PNKM1015Y6	CABINET BODY (KX-PS-HB TGA800BXS)
	200-1	PNKM1015Y7	CABINET BODY (KX-PS-HB TGA800BXT)
	200-2	PNJT1010Z	CHARGE TERMINAL
	200-3	PNKF1012Z8	CABINET COVER (KX-ABS-HB TGA800BXS)

Safety	Ref. No.	Part No.	Part Name & Description Re	emarks
	200-3	PNKF1012Z1	CABINET COVER (KX- AF TGA800BXT)	BS-HB
	200-4	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	
	201	PNGT1482Z	NAME PLATE (KX- TGA800BXS)	
	201	PNGT1360W	NAME PLATE (KX- TGA800BXT)	

15.5.3.2. Main P.C.Board Parts

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
	PCB200	PQWPTGA721CH		
			(RTL)	
			(DIODE)	
	D1	B0JAME000095	DIODE(SI)	
			(JACK)	
	J1	K2ECYB000001	JACK	
			(RESISTOR)	
	R1	ERG2SJ100E	10	
			(FUSE)	
	F1	K5H302Y00003	FUSE	

15.5.4. Accessories and Packing Materials Note:

(*1) You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

15.5.4.1. KX-TG8021BXS/BXT

Safety	Ref. No.	Part No.	Part Name & Description Remarks
⚠	A1	PQLV207BXU	AC ADAPTOR
	A2	PQJA10075Z	CORD, TELEPHONE
	A3	PNQX1396Z	INSTRUCTION BOOK (*1)
	A4	PNQW1298Z	LEAFLET, QUICK GUIDE (for Arabic)
	A5	PNQW1299Z	LEAFLET, QUICK GUIDE (for Persian)
	P1	PNPP1009Z	PROTECTION COVER (for Base Unit)
	P2	XZB08X25B02	PROTECTION COVER (for Handset)
	P3	PNPK1831Z	GIFT BOX

15.5.4.2. KX-TGA800BXS/BXT

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
⚠	A101	PQLV209BXU	AC ADAPTOR	
	A102	PNQX1403Z	INSTRUCTION BOOK (for English) (*1)	
	A103	PNQX1404Z	LEAFLET, QUICK GUIDE (for Arabic)	
	A104	PNQX1405Z	LEAFLET, QUICK GUIDE (for Persian)	
	P101	XZB08X25B02	PROTECTION COVER (for Handset)	
	P102	XZB13X19C03	PROTECTION COVER (for Charger Unit)	
	P103	PNPK1835Z	GIFT BOX	

15.5.5. Screws

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	В	XTB2+8GFJ	TAPPING SCREW	

15.5.6. Fixtures and Tools

Note:

(*1) See The Setting Method of JIG (Base Unit) (P.58), and The Setting Method of JIG (Handset) (P.62).

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
		PQZZ1CD300E	JIG CABLE (*1)	
		PNZZTG8021BX	BATCH FILE CD-ROM (*1)	