
Service Manual

Precision Facial Hair Trimmer Model No. **ER-GN25**

Asia Middle East

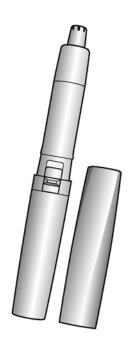

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by \triangle in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

3 Exploded View and Replacement Parts List ----- 3

PAGE	PAGI
1 Warning 2	
2 Specifications 2	

Panasonic

1 Warning

Caution:


- Pb free solder has a higher melting point that standard solder; Typically the melting point is 50 70°F (30 40°C) higher. Please use a soldering iron with temperature control and adjust it to 750 ± 20°F (400 ± 10°C). In case of using high temperature soldering iron, please be careful not to heat too long.
- Pb free solder will tend to splash when heated too high (about 1100°F / 600°C).

2 Specifications

Power source	DC 1.5V (one AAA (LR03) alkaline battery)		
Weight	37g (without battery)		
Supplied accessory	Cleaning brush		

3 Exploded View and Replacement Parts List

Model No.: ER-GN25 Exploded View

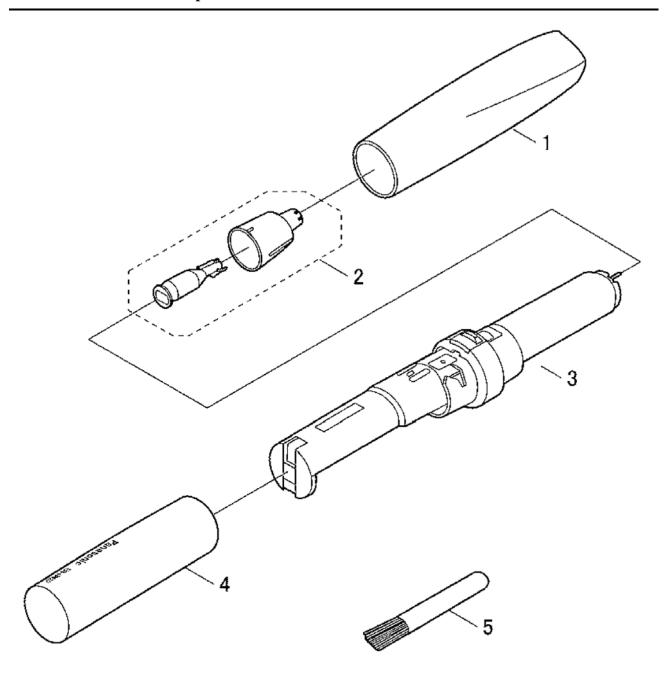

Model No.: ER-GN25 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	1	WERGN25P7157	PROTECTIVE CAP	1	
	2	WERGN25W1058	BLADE BLOCK	1	
	3	WERGN25P4008	BODY BLOCK	1	
	4	WERGN25P3128	BATTERY COVER	1	
	5	WER410B7217	CLEANING BRUSH	1	
	-	WERGN25P8008	INDIVIDUAL BOX	1	
	-	WERGN25P8108	OPERATING INSTRUCTIONS	1	