


Service Manual

Digital Camera

LUMIX

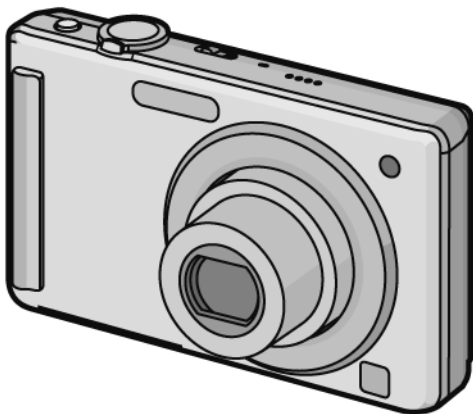

Model No. **DMC-FS25P**
DMC-FS25PC
DMC-FS25PU
DMC-FS25EB
DMC-FS25EE
DMC-FS25EF
DMC-FS25EG
DMC-FS25EP
DMC-FS25GC
DMC-FS25GD
DMC-FS25GK
DMC-FS25GT

Vol. 1

Colour

(S).....Silver Type (except PC/PU/EF/GD/GT)

(K).....Black Type (except PU)

(N).....Gold Type (except EB/EF/EG/EP/GD)

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic[®]

© Panasonic Corporation 2009. Unauthorized copying and distribution is a violation of law.

TABLE OF CONTENTS


	PAGE	PAGE
1 Safety Precaution	3	
1.1. General Guidelines	3	
1.2. Leakage Current Cold Check	3	
1.3. Leakage Current Hot Check (See Figure 1.)	3	
1.4. How to Discharge the Capacitor on Flash Top PCB	4	
2 Warning	5	
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices	5	
2.2. How to Recycle the Lithium Ion Battery (U.S. Only)	5	
2.3. Caution for AC Cord(For EB/GC)	6	
2.4. How to Replace the Lithium Battery	7	
3 Service Navigation	8	
3.1. Introduction	8	
3.2. General Description About Lead Free Solder (PbF)	8	
3.3. Important Notice 1:(Other than U.S.A. and Canadian Market)	8	
3.4. How to Define the Model Suffix (NTSC or PAL model)	9	
4 Specifications	13	
5 Location of Controls and Components	14	
6 Service Mode	16	
6.1. Error Code Memory Function	16	
7 Service Fixture & Tools	19	
7.1. Service Fixture and Tools	19	
7.2. When Replacing the Main PCB	20	
7.3. Service Position	20	
8 Disassembly and Assembly Instructions	21	
8.1. Disassembly Flow Chart	21	
8.2. PCB Location	21	
8.3. Disassembly Procedure	22	
8.4. Disassembly Procedure for the Lens	27	
8.5. Assembly Procedure for the Lens	29	
8.6. Removal of the CCD Unit	31	
8.7. Removal of the Focus Motor Unit	32	
8.8. The Applymt of Grease Method	32	
9 Measurements and Adjustments	33	
9.1. Matrix Chart for Replaced Part and Necessary Adjustment	33	
10 Maintenance	34	
10.1. Cleaning Lens and LCD Panel	34	

1 Safety Precautions

1.1. General Guidelines

1. IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by

 in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent X-RADIATION, shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

2. An Isolation Transformer should always be used during the servicing of AC Adaptor whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect AC Adaptor from being damaged by accidental shorting that may occur during servicing.
3. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
5. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1\text{ M}\Omega$ and $5.2\text{ M}\Omega$. When the exposed metal does not have a return path to the chassis, the reading must be infinity.

1.3. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5\text{ k}\Omega$, 10 W resistor, in parallel with a $0.15\text{ }\mu\text{F}$ capacitor, between each exposed metallic part on the set and a good earth ground, as shown in Figure 1.
3. Use an AC voltmeter, with $1\text{ k}\Omega/\text{V}$ or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 V RMS . A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed $1/2\text{ mA}$. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Hot-Check Circuit

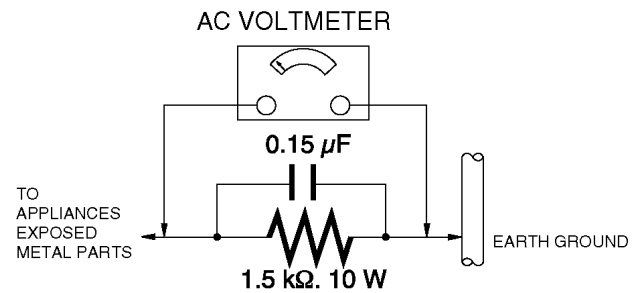


Figure. 1

1.4. How to Discharge the Capacitor on Flash Top PCB

CAUTION:

1. Be sure to discharge the capacitor on FLASH TOP PCB.
2. Be careful of the high voltage circuit on FLASH TOP PCB when servicing.

[Discharging Procedure]

1. Refer to the disassemble procedure and Remove the necessary parts/unit.
2. Put the insulation tube onto the lead part of Resistor (ERG5SJ102:1k Ω /5W).
(an equivalent type of resistor may be used.)
3. Put the resistor between both terminals of capacitor on FLASH TOP PCB for approx. 5 seconds.
4. After discharging confirm that the capacitor voltage is lower than 10V using a voltmeter.

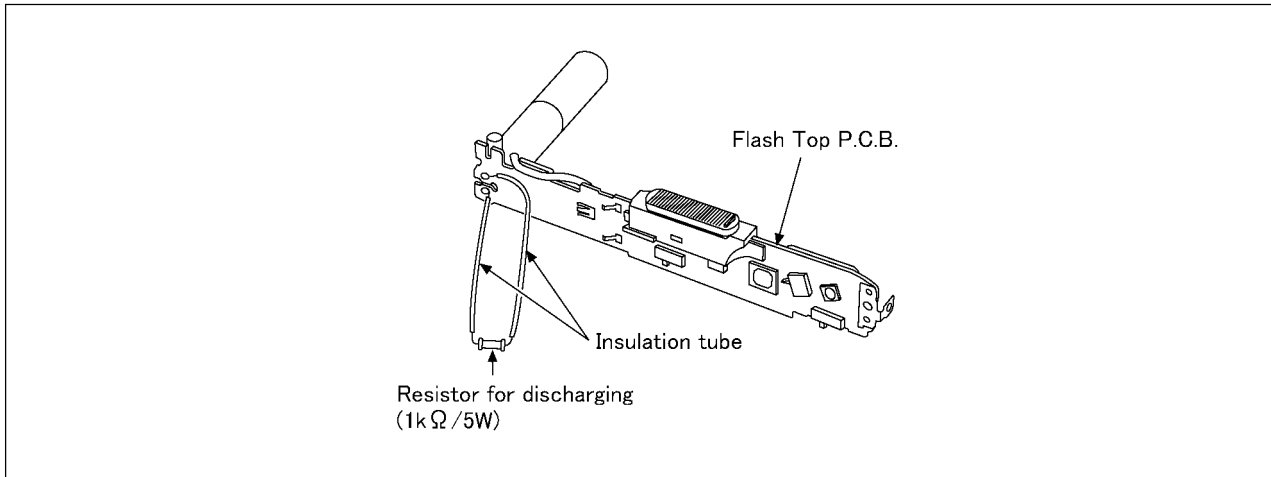


Fig. F1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices.

Examples of typical ES devices are CCD image sensor, IC (integrated circuits) and some field-effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an antistatic solder removal device. Some solder removal devices not classified as "antistatic (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION :

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. How to Recycle the Lithium Ion Battery (U.S. Only)

ENGLISH



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

FRANÇAIS



L'appareil que vous vous êtes procuré est alimenté par une batterie au lithium-ion recyclable. Pour des renseignements sur le recyclage de la batterie, veuillez composer le 1-800-8-BATTERY.

2.3. Caution for AC Cord (For EB/GC)

2.3.1. Information for Your Safety

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

WARNING

To reduce the risk of fire or shock hazard, do not expose this equipment to rain or moisture.

CAUTION

To reduce the risk of fire or shock hazard and annoying interference, use the recommended accessories only.

FOR YOUR SAFETY

DO NOT REMOVE THE OUTER COVER

To prevent electric shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

2.3.2. Caution for AC Mains Lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three-pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amperes and it is approved by ASTA or BSI to BS1362

Check for the ASTA mark or the BSI mark on the body of the fuse.



If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

If the fitted moulded plug is unsuitable for the socket outlet in your home then the fuse should be removed and the plug cut off and disposed of safely.

There is a danger of severe electrical shock if the cut off plug is inserted into any 13-ampere socket.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

2.3.2.1. Important

The wires in this mains lead are coloured in accordance with the following code:


Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.


The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol.

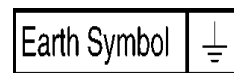

2.3.2.2. Before Use

Remove the Connector Cover as follows.

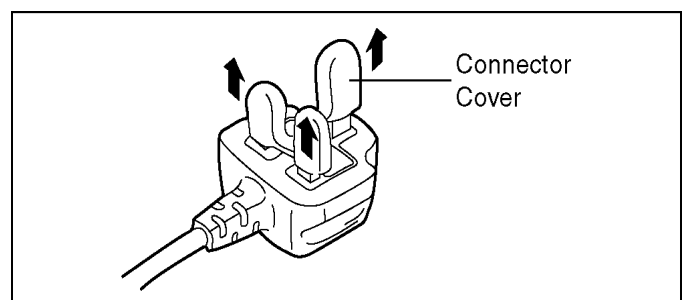

2.3.2.3. How to Replace the Fuse

1. Remove the Fuse Cover with a screwdriver.



2. Replace the fuse and attach the Fuse cover.




2.4. How to Replace the Lithium Battery

2.4.1. Replacement Procedure

1. Remove the MAIN PCB. (Refer to Disassembly Procedures.)
2. Unsolder the each soldering point of electric lead terminal for Lithium battery (Ref. No. "B9101" at foil side of MAIN PCB) and remove the Lithium battery together with electric lead terminal. Then replace it into new one.

NOTE:

The Type No. ML-421S/DN includes electric lead terminals.

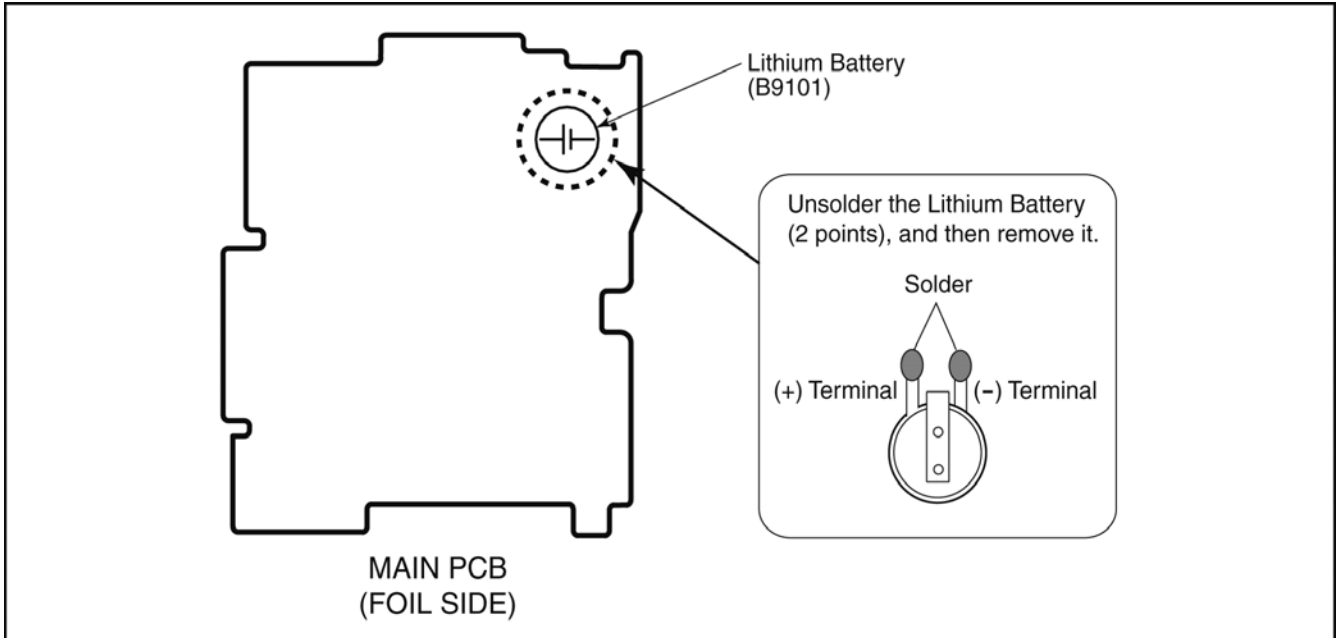

NOTE:

This Lithium battery is a critical component.

(Type No.: ML-421S/DN **Manufactured by Energy Company, Panasonic Corporation.**)

It must never be subjected to excessive heat or discharge.

It must therefore only be fitted in requirement designed specifically for its use.

Replacement batteries must be of same type and manufacture.

They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.

Do not attempt to re-charge the old battery or re-use it for any other purpose.

It should be disposed of in waste products destined for burial rather than incineration.

(For English)

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

(For German)

ACHTUNG

Explosionsgefahr bei falschem Anbringen der Batterie. Ersetzen Sie nur mit einem äquivalentem vom Hersteller empfohlenem Typ.

Behandeln Sie gebrauchte Batterien nach den Anweisungen des Herstellers.

(For French)

MISE EN GARDE

Une batterie de remplacement inappropriée peut exploser. Ne remplacez qu'avec une batterie identique ou d'un type recommandé par le fabricant. L'élimination des batteries usées doit être faite conformément aux instructions du fabricant.

NOTE:

Above caution is applicable for a battery pack which is for DMC-FS25 series, as well.

3 Service Navigation

3.1. Introduction

This service manual contains technical information, which allow service personnel's to understand and service this model. Please place orders using the parts list and not the drawing reference numbers. If the circuit is changed or modified, the information will be followed by service manual to be controlled with original service manual.

3.2. General Description About Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation. The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30°C (86°F) more than that of the normal solder.

Distinction of PCB Lead Free Solder being used

The letter of "PbF" is printed either foil side or components side on the PCB using the lead free solder.(See right figure)	PbF
---	-----

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used. (Definition: The letter of "PbF" is printed on the PCB using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the PCB cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30°C (662±86°F).

Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.
 - RFKZ03D01K----- (0.3mm 100g Reel)
 - RFKZ06D01K----- (0.6mm 100g Reel)
 - RFKZ10D01K----- (1.0mm 100g Reel)

Note

* Ingredient: tin (Sn) 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

3.3. Important Notice 1:(Other than U.S.A. and Canadian Market)

1. The service manual does not contain the following information, because of the impossibility of servicing at component level without concerned equipment/facilities.
 - a. Schematic diagram, Block Diagram and PCB layout of MAIN PCB.
 - b. Parts list for individual parts for MAIN PCB.When a part replacement is required for repairing MAIN PCB, replace as an assembled parts. (MAIN PCB)
2. The following category is/are recycle module part. please send it/them to Central Repair Center.
 - MAIN PCB (VEP56076A): Excluding replacement of Lithium Battery

3.4. How to Define the Model Suffix (NTSC or PAL model)








There are eight kinds of DMC-FS25, regardless of the colours.

- a) DMC-FS25 (Japan domestic model)
- b) DMC-FS25P/PC
- c) DMC-FS25EB/EF/EG/EP
- d) DMC-FS25EE
- e) DMC-FS25GT
- f) DMC-FS25GK
- g) DMC-FS25GD
- h) DMC-FS25PU/GC

What is the difference is that the "INITIAL SETTINGS" data which is stored in Flash ROM mounted on MAIN PCB.

3.4.1. Defining methods:

To define the model suffix to be serviced, refer to the nameplate which is putted on the bottom side of the Unit.

<p>a) DMC-FS25 (Japan domestic model) The nameplate for this model show the following Safety registration mark.</p> 
<p>b) DMC-FS25P/PC The nameplate for these models show the following Safety registration mark.</p> 
<p>c) DMC-FS25EB/EF/EG/EP The nameplate for these models show the following Safety registration mark.</p> 
<p>d) DMC-FS25EE The nameplate for this model show the following Safety registration mark.</p> 
<p>e) DMC-FS25GT The nameplate for this model show the following Safety registration mark.</p> 
<p>f) DMC-FS25GK The nameplate for this model show the following Safety registration mark.</p> 
<p>g) DMC-FS25GD The nameplate for this model show the following Safety registration mark.</p> 
<p>h) DMC-FS25PU/GC The nameplate for these models do not show any above Safety registration mark.</p>

NOTE:

After replacing the MAIN PCB, be sure to achieve adjustment.

The adjustment instruction is available at "software download" on the "Support Information from NWBG/VDBG-AVC" web-site in "TSN system", together with Maintenance software.

3.4.2. INITIAL SETTINGS:

After replacing the MAIN PCB, be sure to perform the initial settings after achieving the adjustment by ordering the following procedure in accordance with model suffix of the unit.

1. IMPORTANT NOTICE:

Before proceeding Initial settings, be sure to read the following CAUTIONS.

CAUTION 1:(INITIAL SETTINGS)

---AFTER REPLACING THE MAIN P.C.B. ---

*.The model suffix can be chosen **JUST ONE TIME**.

(Model suffix : "P/EG/EP/PU/GD/GC/GT/GK/EF/EB/EE/PC and NONE(JAPAN)")

*.Once one of the model suffix has been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

[NOTE:Only for "EG, EP, EF, EB and EE" models]

*.When one of the "EG, EP, EF, EB and EE" has been chosen, only "EG, EP, EF, EB and EE" are displayed from second times.

CAUTION 2:(Stored picture image data in the unit)

This unit employs "Built-in Memory" for picture image data recording.(Approx.50MB)
After proceeding "INITIAL SETTINGS", the picture image data stored in the unit is erased.

2. PROCEDURES:

• Precautions: Read the above "CAUTION 1" and "CAUTION 2", carefully.

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

2. Set the recording mode to the [NORMAL PICTURE] mode.

(Press the [MODE] button and select the [NORMAL PICTURE] by pressing the "[UP] and [DOWN] of Slide switch", then press the [MENU/SET] button.)

NOTE:

If the unit is other than [NORMAL PICTURE] mode, it does not display the initial settings menu.

• **Step 1. The temporary cancellation of "INITIAL SETTINGS":**

Set the [REC]/[PLAYBACK] selector switch to "[REC] (Camera mark)".

While keep pressing "[UP] of Slide switch" and [iA] button simultaneously, turn the Power on.

• **Step 2. The cancellation of "INITIAL SETTINGS":**

Set the [REC]/[PLAYBACK] selector switch to "[PLAYBACK]".

Press "[UP] of Slide switch" and [iA] button simultaneously, then turn the Power off.

• **Step 3. Turn the Power on:**

Set the [REC]/[PLAYBACK] selector switch to "[REC] (Camera mark)", and then turn the Power on.

• **Step 4. Display the INITIAL SETTING:**

NOTE:

If the unit is other than [NORMAL PICTURE] mode, it does not display the initial settings menu.


While keep pressing [MENU/SET] and "[RIGHT] of Slide switch" simultaneously, turn the Power off.

The "INITIAL SETTINGS" menu is displayed.

There are two kinds of "INITIAL SETTINGS" menu form as follows:

[CASE 1. After replacing MAIN P.C.B.]

When MAIN P.C.B. has just been replaced, all of the model suffix is displayed as follows. (Four pages in total)

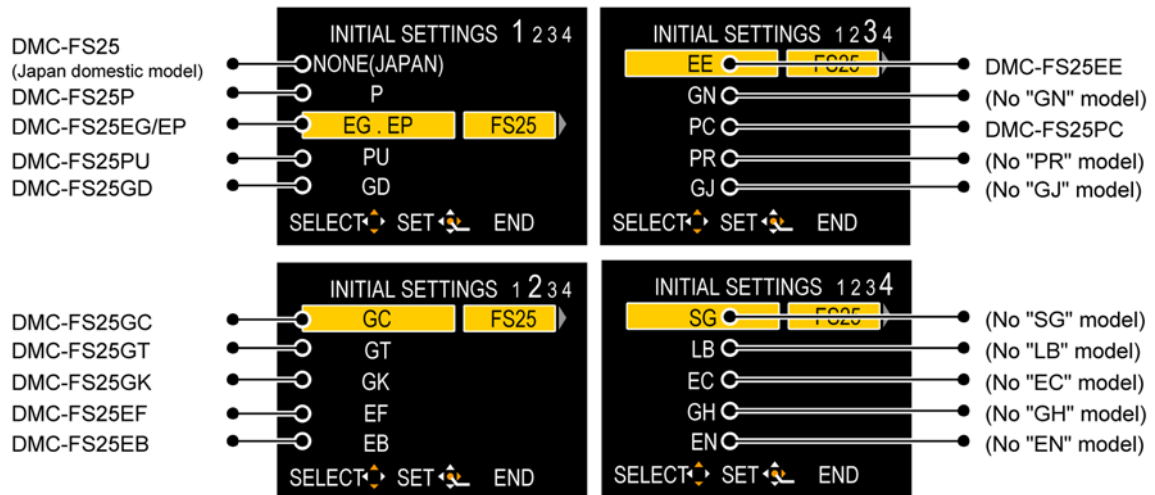

[CASE 2. Other than “After replacing MAIN P.C.B.”]



• **Step 5. Chose the model suffix in “INITIAL SETTINGS”:** (Refer to “CAUTION 1”)

[Caution: After replacing MAIN P.C.B.]

The model suffix can be chosen, **JUST ONE TIME**.

Once one of the model suffix have been chosen, the model suffix lists will not be displayed, thus, it can be changed.

Therefore, select the area carefully.


Select the area with pressing “[UP] / [DOWN] of Slide switch”.

• **Step 6. Set the model suffix in “INITIAL SETTINGS”:**

Press the “[RIGHT] of Slide switch”.

The only set area is displayed, and then press the “[RIGHT] of Slide switch” after confirmation.

(The unit is powered off automatically.)

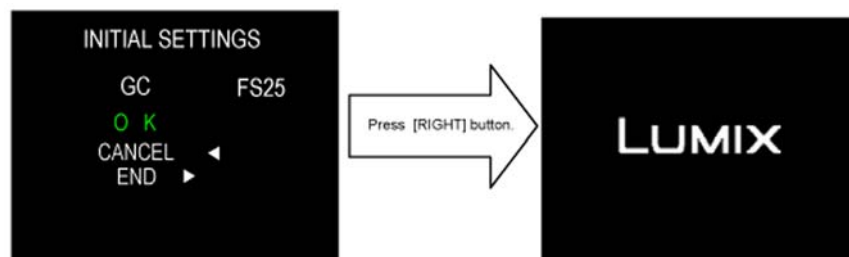

• **Step 7. CONFIRMATION:**

Confirm the display of “PLEASE SET THE CLOCK” in concerned language when the unit is turned on again.
When the unit is connected to PC with USB cable, it is detected as removable media.

1) As for your reference, major default setting condition is as shown in the following table.

• **Default setting (After “INITIAL SETTINGS”)**

	MODEL	VIDEO OUTPUT	LANGUAGE	DATE	REMARKS
a)	DMC-FS25 (Japan domestic model)	NTSC	Japanese	Year/Month/Date	
b)	DMC-FS25P	NTSC	English	Month/Date/Year	
c)	DMC-FS25EG	PAL	English	Date/Month/Year	
d)	DMC-FS25EP	PAL	English	Date/Month/Year	
e)	DMC-FS25PU	NTSC	English	Month/Date/Year	
f)	DMC-FS25GD	NTSC	Korean	Year/Month/Date	
g)	DMC-FS25GC	PAL	English	Date/Month/Year	
h)	DMC-FS25GT	NTSC	Chinese (traditional)	Year/Month/Date	
i)	DMC-FS25GK	PAL	Chinese (simplified)	Year/Month/Date	
j)	DMC-FS25EF	PAL	French	Date/Month/Year	
k)	DMC-FS25EB	PAL	English	Date/Month/Year	
l)	DMC-FS25EE	PAL	Russian	Date/Month/Year	
m)	DMC-FS25PC	NTSC	English	Month/Date/Year	

4 Specifications

Digital Camera: Information for your safety

Power Source:	DC 5.1 V
Power Consumption:	1.35 W (When recording) 0.6 W (When playing back)

Camera effective pixels: 12,100,000 pixels
Image sensor: 1/2.33" CCD, total pixel number 12,700,000 pixels, Primary color filter
Lens: Optical 5× zoom, f=5.2 mm to 26 mm (35 mm film camera equivalent: 29 mm to 145 mm)/F3.3 to F5.9
Digital zoom: Max. 4×
Extended optical zoom: Max. 9.8×
Focus: Normal/AF macro/Macro zoom/Face detection/AF Tracking/11-area-focusing/1-area-focusing
Focus range: Normal: 50 cm (1.64 feet) (Wide)/1 m (3.28 feet) (Tele) to ∞
 Macro/Intelligent auto: 5 cm (0.17 feet) (Wide)/1 m (3.28 feet) (Tele) to ∞
 Scene mode: There may be differences in the above settings.
Shutter system: Electronic shutter+Mechanical shutter
Motion picture recording: 848×480 pixels (30 frames/second, only when using a Card)/640×480 pixels (30 frames/second, only when using a Card)/320×240 pixels (30 frames/second)
Burst recording
Burst speed: 1.8 pictures/second (Normal), Approx. 1.7 pictures/second (Unlimited)
Number of recordable pictures: Max. 5 pictures (Standard), Max. 3 pictures (Fine), Depends on the remaining capacity of the built-in memory or the card (Unlimited).
 (Performance in Burst recording is only with SD Memory Card/SDHC Memory Card. MultiMediaCard performance will be less.)
Hi-speed burst
Burst speed: Approx. 5 pictures/second
 (3M (4:3), 2.5M (3:2) or 2M (16:9) is selected as the picture size.)
Number of recordable pictures: When using the built-in memory: Approx. 10 pictures (immediately after formatting)
 When using a Card: Max. 100 pictures (differs depending on the type of Card and the recording conditions)
ISO sensitivity: AUTO/80/100/200/400/800/1600
 [HIGH SENS.] mode: 1600 to 6400
Shutter speed: 8 seconds to 1/2000th of a second
 [STARRY SKY] mode: 15 seconds, 30 seconds, 60 seconds
White balance: Auto white balance/Daylight/Cloudy/Shade/Incandescent lights/White set
Exposure (AE): Program AE
 Exposure compensation (1/3 EV Step, -2 EV to +2 EV)
Metering mode: Multiple
LCD monitor: 3.0" TFT LCD
 (Approx. 230,000 dots) (field of view ratio about 100%)
Flash: Flash range: [ISO AUTO]
 Approx. 30 cm (0.99 feet) to 5.3 m (17.4 feet) (Wide)
 AUTO, AUTO/Red-eye reduction, Forced flash ON (Forced ON/Red-eye reduction), Forced flash OFF (Slow sync./Red-eye reduction)

Microphone: Monaural
Speaker: Monaural
Recording media: Built-in Memory (Approx. 50 MB)/SD Memory Card/SDHC Memory Card/MultiMediaCard (Still pictures only)

Picture size
Still picture: When the aspect ratio setting is [4:3] 4000×3000 pixels, 3264×2448 pixels, 2560×1920 pixels, 2048×1536 pixels, 1600×1200 pixels, 640×480 pixels
 When the aspect ratio setting is [3:2] 4000×2672 pixels, 3264×2176 pixels, 2560×1712 pixels, 2048×1360 pixels
 When the aspect ratio setting is [16:9] 4000×2248 pixels, 3264×1840 pixels, 2560×1440 pixels, 1920×1080 pixels
Motion pictures: 848×480 pixels (Only when using a Card)/640×480 pixels (Only when using a Card)/320×240 pixels
 Fine/Standard

Quality:
Recording file format
Still Picture: JPEG (based on "Design rule for Camera File system", based on "Exif 2.21" standard)/DPOF corresponding "QuickTime Motion JPEG" (motion pictures with audio)

Motion pictures:
Interface
Digital: "USB 2.0" (High Speed)

Analog video/ audio: NTSC, Audio line output (monaural)

Terminal
[AV OUT/DIGITAL]: Dedicated jack (8 pin)
Dimensions: Approx. 97.0 mm (W)×57.9 mm (H)×21.8 mm (D)
 [Approx. 3 13/16" (W)×2 1/4" (H)×7/8" (D)]
 (excluding the projecting parts)

Mass (weight): Approx. 126 g/4.44 oz (excluding card and battery)
 Approx. 148 g/5.22 oz (with card and battery)

Operating temperature: 0 °C to 40 °C (32 °F to 104 °F)
Operating humidity: 10% to 80%
Language select: [ENGLISH]/[ESPAÑOL] (DMC-FS25P)
 [ENGLISH]/[DEUTSCH]/[FRANÇAIS]/[ESPAÑOL]/[ITALIANO]/
 [繁體中文]/[日本語] (DMC-FS25PC)

Battery Charger
(Panasonic DE-A59B): Information for your safety

Input:	110 V to 240 V ~50/60 Hz, 0.2 A
Output:	CHARGE 4.2 V --- 0.65 A

Equipment mobility: Movable

Battery Pack
(lithium-ion)
(Panasonic DMW-BCF10PP): Information for your safety

Voltage/capacity (Minimum):	3.6 V/940 mAh
--	---------------


NOTE:(Only for "EB/EF/EG/EP" models)

- Data from the PC can not be written to the camera using the USB connection cable.
- Motion pictures can be recorded continuously for up to 15 minutes.
 The maximum continuous recording time (up to 15 minutes) is displayed on the screen.


5 Location of Controls and Components

Names of the Components


- 1 Flash
- 2 Lens
- 3 Self-timer indicator
AF assist lamp

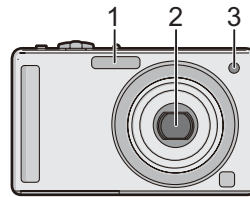


- 4 LCD monitor
- 5 Status indicator
- 6 [MENU/SET] button
- 7 [DISP.] button
- 8 [Q.MENU]/Delete button
- 9 [MODE] button
- 10 [REC]/[PLAYBACK] selector switch

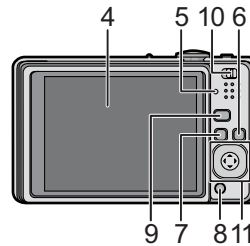


- 11 Slide switch
- (A): ▲/Exposure compensation/
Auto bracket
- (B): ▼/Macro mode/AF tracking
- (C): ◀/Self-timer
- (D): ▶/Flash setting

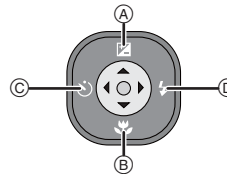


- 12 Camera ON/OFF switch
- 13 Zoom lever
- 14 Speaker
- 15 Microphone
- 16 Shutter button
- 17 Intelligent auto button

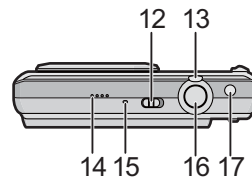

- 18 Hand strap eyelet
- Be sure to attach the hand strap when using the camera to ensure that you will not drop it.
- 19 Lens barrel
- 20 [AV OUT/DIGITAL] socket

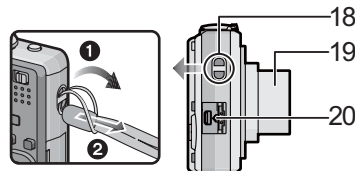



- 21 Tripod receptacle
- When you use a tripod, make sure the tripod is stable when the camera is attached to it.
- 22 Card/Battery door
- 23 Release lever
- 24 DC coupler cover
- When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC4; optional) and AC adaptor (DMW-AC5PP; optional) are used.

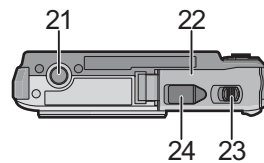

Selecting the [REC] Mode

When the [REC] mode is selected, the camera can be set to the Intelligent auto mode in which the optimal settings are established in line with the subject to be recorded and the recording conditions, or to the Scene mode which enables you to take pictures that match the scene being recorded.

- 1 Turn the camera on.**
 - [MENU/SET] button
 - [REC]/[PLAYBACK] selector switch
 - [MODE] button
- 2 Slide the [REC]/[PLAYBACK] selector switch to [📷].**
- 3 Press [MODE].**
- 4 Move ▲/▼ to select the mode.**
- 5 Press [MENU/SET].**

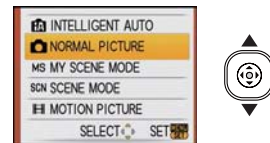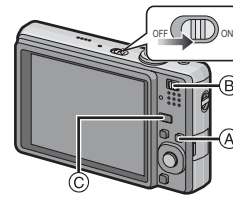

■ List of [REC] modes

IA Intelligent auto mode

The subjects are recorded using settings automatically selected by the camera.

📷 Normal picture mode

The subjects are recorded using your own settings.

MS My scene mode

Pictures are taken using previously registered recording scenes.

SCN Scene mode

This allows you to take pictures that match the scene being recorded.

MP Motion picture mode

This mode allows you to record motion pictures with audio.

Note

- When the mode has been switched from [PLAYBACK] mode to [REC] mode, the previously set [REC] mode will be set.

About the Battery

- This unit has a function that can distinguish useable batteries. Exclusive batteries are supported by this function. (Conventional batteries not supported by this function cannot be used.)

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.

6 Service Mode

6.1. Error Code Memory Function

1. General description

This unit is equipped with history of error code memory function, and can be memorized 16 error codes in sequence from the latest. When the error is occurred more than 16, the oldest error is overwritten in sequence.

The error code is not memorized when the power supply is shut down forcibly (i.e., when the unit is powered on by the battery, the battery is pulled out) The error code is memorized to FLASH ROM when the unit has just before powered off.

2. How to display

The error code can be displayed by ordering the following procedure:

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

NOTE:

*Since this unit has built-in memory, it can be performed without inserting SD memory card.

*It is not a matter of the setting condition of Recording mode (such as "normal picture/ iA / scene mode) to display the error code.

• Step 1. The temporary cancellation of "INITIAL SETTINGS":

Set the [REC]/[PLAYBACK] selector switch to "[REC] (Camera mark)".


While keep pressing "[UP] of Slide switch" and [iA] button simultaneously, turn the Power on.

• Step 2. Execute the error code display mode:

Press the "[LEFT] of Slide switch", [MENU/SET] button and [iA] button simultaneously.

The display is changed as shown below when the above buttons are pressed simultaneously.

Normal display → Error code display → Operation history display → Normal display →

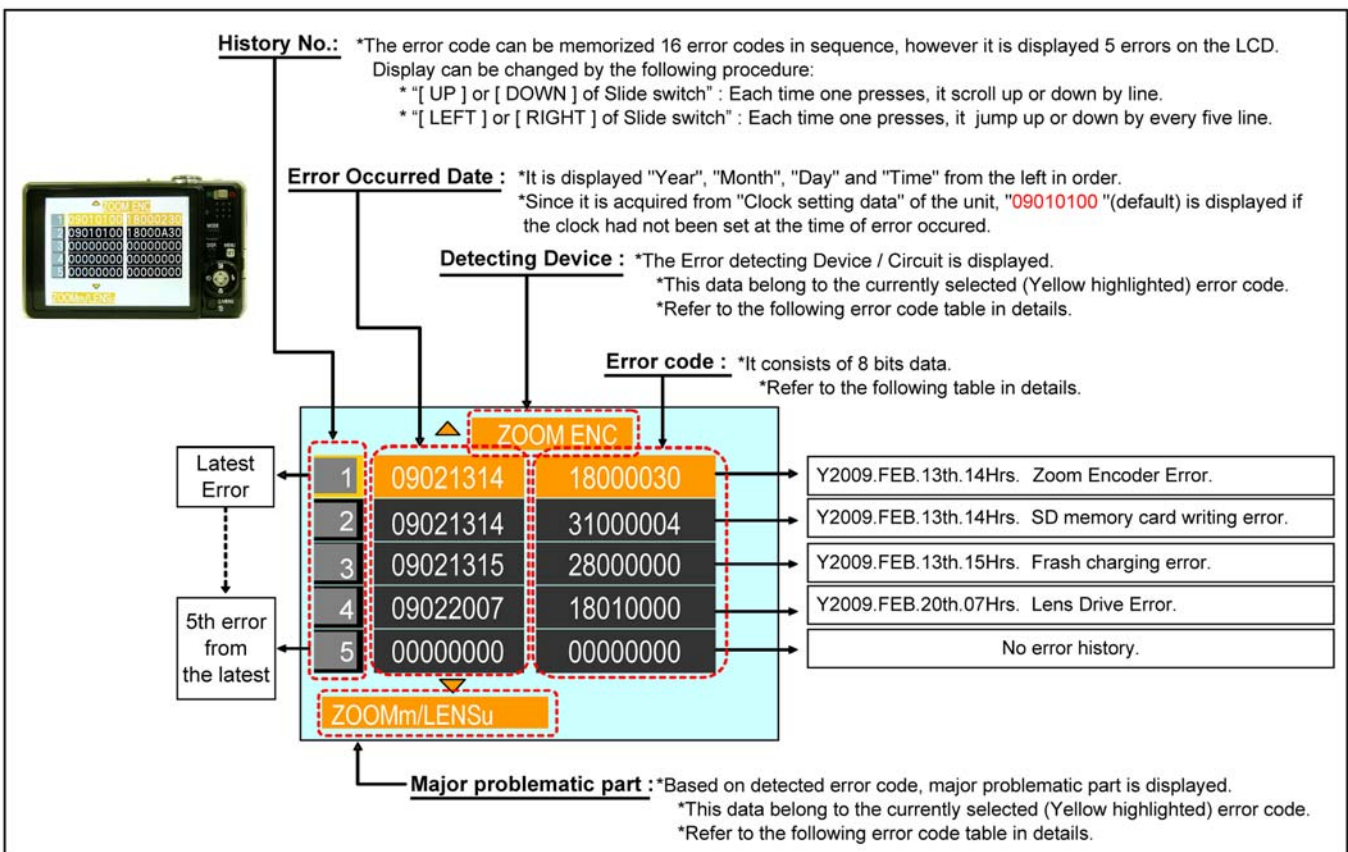

Example of Error Code Display

• 3. Error Code List

The error code consists of 8 bits data and it shows the following information.

Attribute	Main item	Sub item	Error code		Contents (Upper line)	Error Indication							
			High 4 bits	Low 4 bits	Problematic Part & Check point (Lower line)	Detecting device	Problematic Part/Circuit						
LENS	Lens drive	OIS	18*0	1000	PSD (X) error. Hall element (X axis) position detect error in OIS unit. OIS Unit	OIS X	LENSu NG						
				2000	PSD (Y) error. Hall element (Y axis) position detect error in OIS unit. OIS Unit	OIS Y							
			3000	GYRO (X) error. Gyro (IC7101: X axis) detect error on Main P.C.B.. IC7101 (Gyro element) or IC6001 (VENUS 4)	JYRO X	JYRO NG							
				4000	GYRO (Y) error. Gyro (IC7101: Y axis) detect error on Main P.C.B.. IC7101 (Gyro element) or IC6001 (VENUS 4)		JYRO Y						
			5000	MREF error (Reference voltage error). IC9101 (SYSTEM) or IC6001 (VENUS 4)	OIS REF	LENSsd/DSP NG							
				6000	Drive voltage (X) error. LENS Unit, LENS flex breaks, IC6001 (VENUS 4) AD value error, etc.		OISX REF						
			7000	Drive voltage (Y) error. LENS Unit, LENS flex breaks, IC6001 (VENUS 4) AD value error, etc.	OISY REF	LENSu/LENS FPC							
				Zoom (C.B.)	0710		Collapsible barrel Low detect error (Collapsible barrel encoder always detects Low.) Mechanical lock, FP9002-(3) signal line or IC6001 (VENUS 4)	ZOOM L	ZOOMMm/LENSu				
		0720	Collapsible barrel High detect error (Collapsible barrel encoder always detects High.) Mechanical lock, FP9002-(3) signal line or IC6001 (VENUS 4)			ZOOM H							
		0730	Zoom motor sensor error. Mechanical lock, FP9002-(35), (38) signal line or IC6001 (VENUS 4)		ZOOM ENC								
			0740			Zoom motor sensor error. (During monitor mode.) Mechanical lock, FP9002-(35), (38) signal line or IC6001 (VENUS 4)							
		0750	Zoom motor sensor error. (During monitor mode with slow speed.) Mechanical lock, FP9002-(35), (38) signal line or IC6001 (VENUS 4)		ZOOM ENC								
			Focus			0701	HP High detect error (Focus encoder always detects High, and not becomes Low) Mechanical lock, FP9002-(3) signal line or IC6001 (VENUS 4)	FOCUS L		LENS FPC/DSP			
		0702			HP Low detect error (Focus encoder always detects Low, and not becomes High) Mechanical lock, FP9002-(3) signal line or IC6001 (VENUS 4)	FOCUS H							
		Lens	18*1		0000	Power ON time out error. Lens drive system	LENS DRV	LENSu					
				18*2	0000	Power OFF time out error. Lens drive system							
	Adj. History	OIS	19*0	2000	OIS adj. Yaw direction amplitude error (small)	OIS ADJ	OIS ADJ						
				3000	OIS adj. Pitch direction amplitude error (small)								
				4000	OIS adj. Yaw direction amplitude error (large)								
				5000	OIS adj. Pitch direction amplitude error (large)								
				6000	OIS adj. MREF error								
				7000	OIS adj. time out error								
				8000	OIS adj. Yaw direction off set error								
				9000	OIS adj. Pitch direction off set error								
				A000	OIS adj. Yaw direction gain error								
				B000	OIS adj. Pitch direction gain error								
				C000	OIS adj. Yaw direction position sensor error								
				D000	OIS adj. Pitch direction position sensor error								
				E000	OIS adj. other error								
				HARD	VENUS A/D			Flash	28*0	0000	Flash charging error. IC6001-(AC17) signal line or Flash charging circuit	STRB CHG	STRB PCB/FPC
					FLASH ROM (EEPROM Area)			FLASH ROM (EEPROM Area)	2B*0	0001	EEPROM read error	FROM RE	FROM
										0003	IC6002 (FLASH ROM)	FROM RE	FROM
0004	EEPROM write error	FROM WR	FROM										
0002	IC6002 (FLASH ROM)	FROM WR	FROM										
0005	Firmware version up error Replace the firmware file in the SD memory card.	(No indication)	(No indication)										
SYSTEM	RTC	2C*0	0001		SDRAM error	(No indication)	(No indication)						
			0009		SDRAM Mounting defective	(No indication)	(No indication)						
SOFT	CPU	Reset	30*0		0001	NMI reset	NMI RST	MAIN PCB					
					0007	Non Mask-able Interrupt (30000001-30000007 are caused by factors)							
	Card	Card	31*0	0001	Card logic error	SD CARD	SD CARD/DSP						
				0002	SD memory card data line or IC6001 (VENUS 4)								
					SD memory card data line or IC6001 (VENUS 4)								
				0004	Write error SD memory card data line or IC6001 (VENUS 4)								
	CPU. ASIC	Stop	38*0	0001	Camera task finish process time out. Communication between Lens system and IC6001 (VENUS 4)	LENS COM	LENSu/DSP						
				0002	Camera task invalid code error. IC6001 (VENUS 4)								
				0100	File time out error in recording motion image IC6001 (VENUS 4)			DSP	DSP				
					0200					File data cue send error in recording motion image IC6001 (VENUS 4)			
				0300	Single or burst recording brake time out.								
				Memory area	3A*0			0008	USB work area partitioning failure USB dynamic memory securing failure when connecting	(No indication)	(No indication)		
	0000	FLASHROM processing early period of camera during movement.	INIT			(No indication)							
	Operation Zoom	Power on Zoom	3C*0	0000	Inperfect zoom lens processing Zoom lens	ZOOM	ZOOMMm/LENSu						
				0000	Software error (0-7bit : command, 8-15bit : status)	DSP	DSP						
				FFFF	Though record preprocessing is necessary, it is not called.								
0000				Though record preprocessing is necessary, it is not completed.	(No indication)			(No indication)					
35*2				0000	Though record preprocessing is necessary, it is not completed.	(No indication)	(No indication)						

Important notice about "Error Code List"

1) About "*" indication:

The third digit from the left is different as follows.

- In case of 0 (example: 18001000)

When the third digit from the left shows "0", this error occurred under the condition of INITIAL SETTINGS has been completed.

It means that this error is occurred basically at user side.

- In case of 8 (example: 18801000)

When the third digit from the left shows "8", this error occurred under the condition of INITIAL SETTINGS has been released.

(Example; Factory assembling-line before unit shipment, Service mode etc.)

It means that this error is occurred at service side.

2) About "?" indication: ("18*0 0?01" to "18*0 0?50"):

The third digit from the right shows one of the hexadecimal ("0" to "F") character.

• 4. How to exit from Error Code display mode:

Simply, turn the power off. (Since Error code display mode is executed under the condition of temporary cancellation of "INITIAL SETTINGS", it wake up with normal condition when turn off the power.)







NOTE:

The error code can not be initialized.

7 Service Fixture & Tools

7.1. Service Fixture and Tools

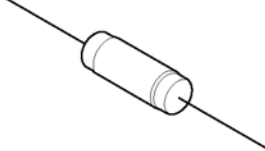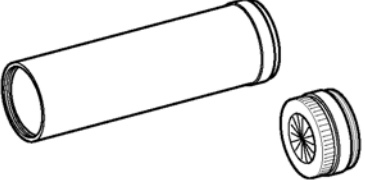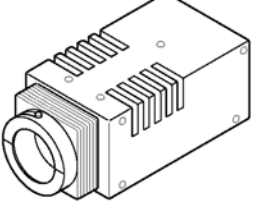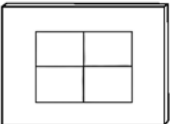The following Service Fixture and tools are used for checking and servicing this unit.

Resistor for Discharging ERG5SJ102	Infinity Lens (with Focus Chart) VFK1164TCM02	LIGHT BOX VFK1164TDVLB
 <p>An equivalent type of Resistor may be used.</p>	 <p>* RFKZ0422 can be used.</p>	 <p>※ with DC Cable</p>
TR Chart RFKZ0443	Lens Cleaning Kit (BK) VFK1900BK	Grease (for lens) RFKZ0472
	 <p>* Only supplied as 10 set/box.</p>	

7.2. When Replacing the Main PCB

After replacing the MAIN PCB, be sure to achieve adjustment.


The adjustment instruction is available at “software download” on the “Support Information from NWBG/VDBG-AVC” web-site in “TSN system”, together with Maintenance software.

7.3. Service Position

This Service Position is used for checking and replacing parts. Use the following Extension cables for servicing.

Table S1 Extension Cable List

No.	Parts No.	Connection	Form
1	RFKZ0416	FP9001 (MAIN) - CCD UNIT	41PIN 0.3 FFC
2	RFKZ0477	FP9002 (MAIN) - LENS UNIT	45PIN 0.3 FFC
3	RFKZ0418	PP9001 (MAIN) - PS8001 (FLASH TOP)	30PIN B to B

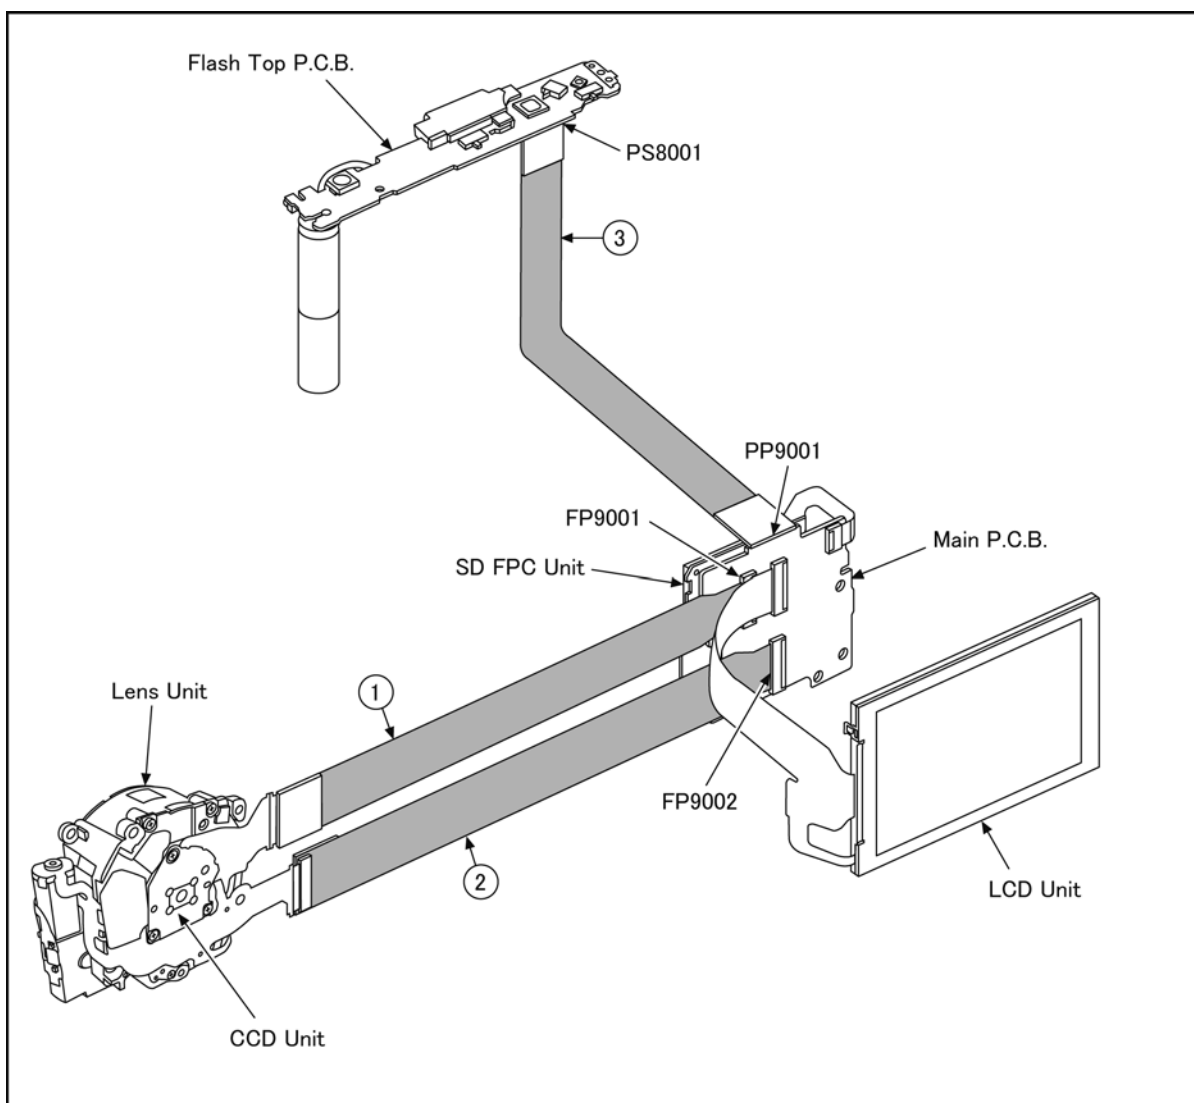

CAUTION-1. (When servicing FLASH TOP PCB)

1. Be sure to discharge the capacitor on FLASH TOP PCB.


Refer to “HOW TO DISCHARGE THE CAPACITOR ON FLASH TOP PCB”.

The capacitor voltage is not lowered soon even if the AC Cord is unplugged or the battery is removed.


2. Be careful of the high voltage circuit on FLASH TOP PCB.
3. DO NOT allow other parts to touch the high voltage circuit on FLASH TOP PCB.

8 Disassembly and Assembly Instructions

8.1. Disassembly Flow Chart

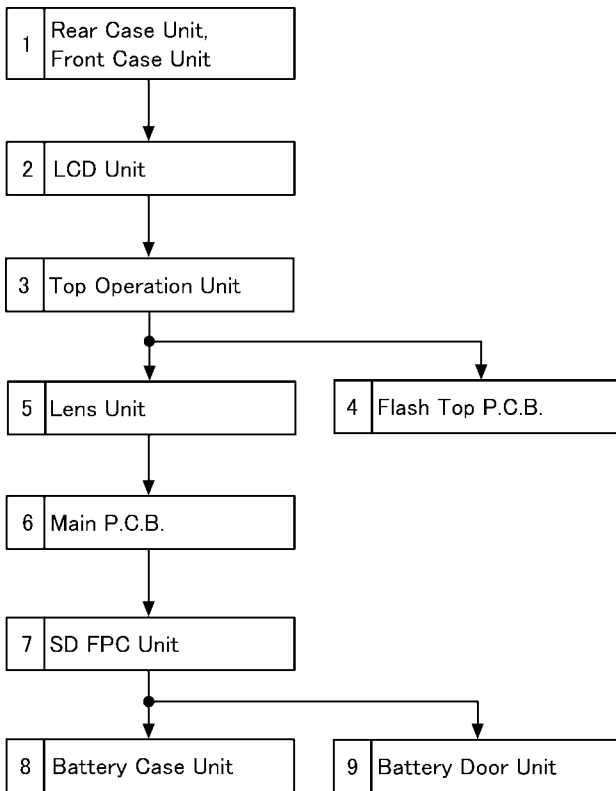


8.2. PCB Location

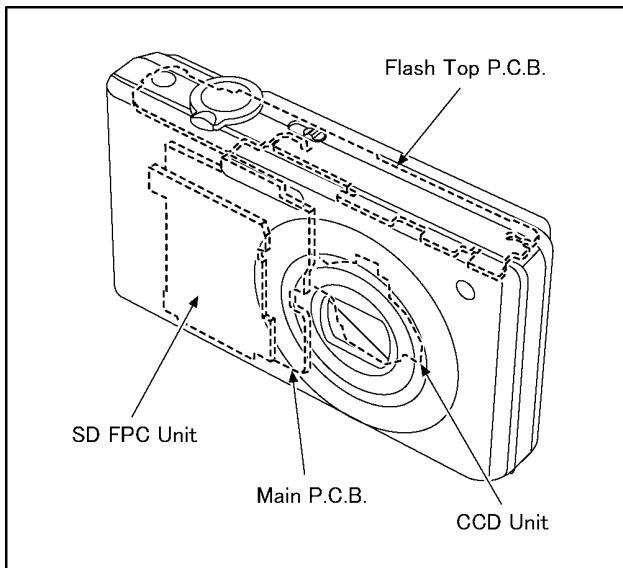


8.3. Disassembly Procedure

No.	Item	Fig	Removal			
1	Rear Case Unit Front Case Unit	(Fig.D1)	Card			
			Battery			
			1 Screw (A)			
			4 Screws (B)			
			2 Screws (C)			
			Side Ornament (L)			
			Jack Door			
		(Fig.D2)	Side Ornament (R)			
			4 Locking tabs			
			Rear Case Unit			
			Front Case Unit			
			2	LCD Unit	(Fig.D3)	1 Locking tab (A)
						2 Locking tabs (B)
3 Screws (D)						
Frame Plate						
Tripod Fixing Plate						
FP9103(Flex)						
LCD Unit						
3	Top Operation Unit	(Fig.D4)				PS8001(Connector)
						Top Operation Unit
4	Flash Top P.C.B.	(Fig.D5)				5 Locking tabs
			AF Panel Light			
			2 Screws (E)			
		(Fig.D6)	Top Ornament Unit			
			Speaker Unit			
			Mic Damper			
			Power Knob Base			
			Power Knob			
			Flash Top P.C.B.			
			(Fig.D7)	NOTE: (When installing)		
5	Lens Unit	(Fig.D8)	FP9001(Flex)			
			FP9002(Flex)			
			Lens Unit			
6	Main P.C.B.	(Fig.D9)	1 Screw (F)			
			FP9005(Flex)			
			1 Locking tab			
			Main P.C.B.			
7	SD FPC Unit	(Fig.D10)	1 Screw (G)			
			SD FPC Unit			
8	Battery Case Unit	(Fig.D11)	Earth Plate			
			1 Locking tab			
		(Fig.D12)	Battery Out Spring			
9	Battery Door Unit	(Fig.D13)	Battery Case Unit			
			Battery Door Shaft			
			Battery Door Spring			
			Battery Door Unit			

8.3.1. Removal of the Rear Case Unit and Front Case Unit

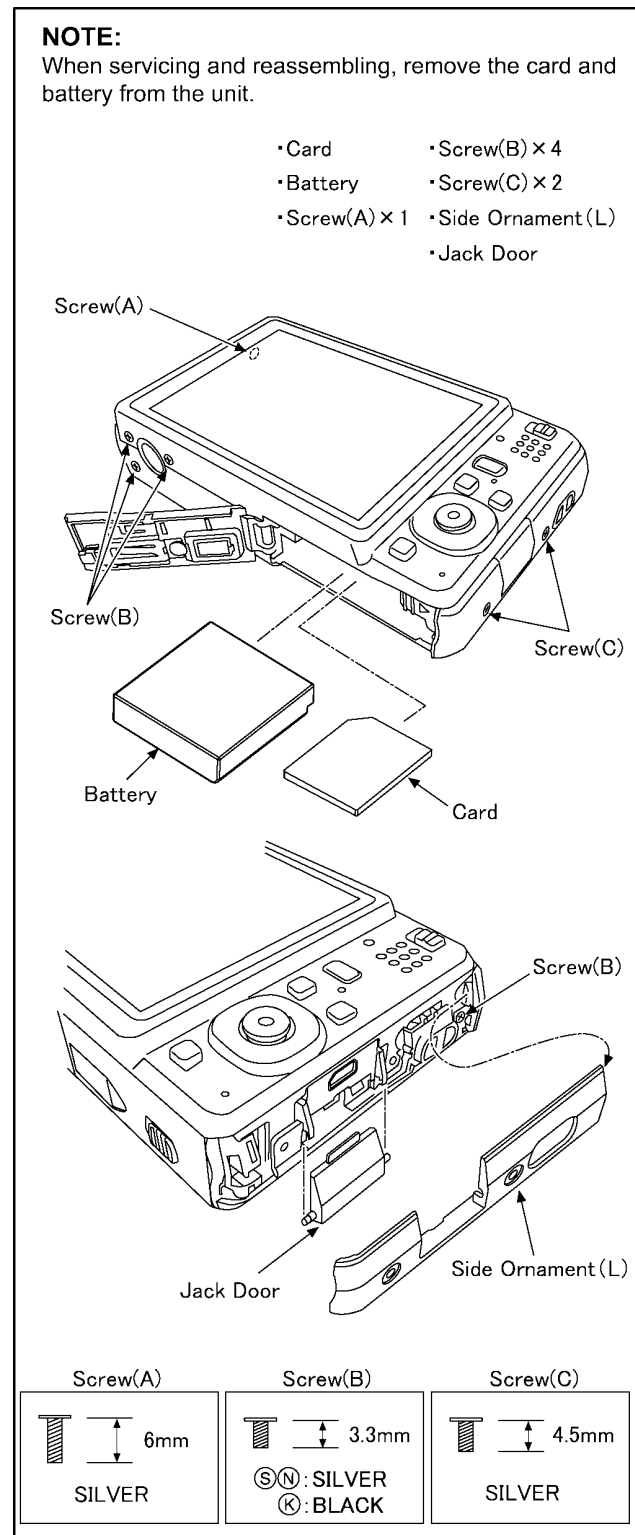


(Fig.D1)

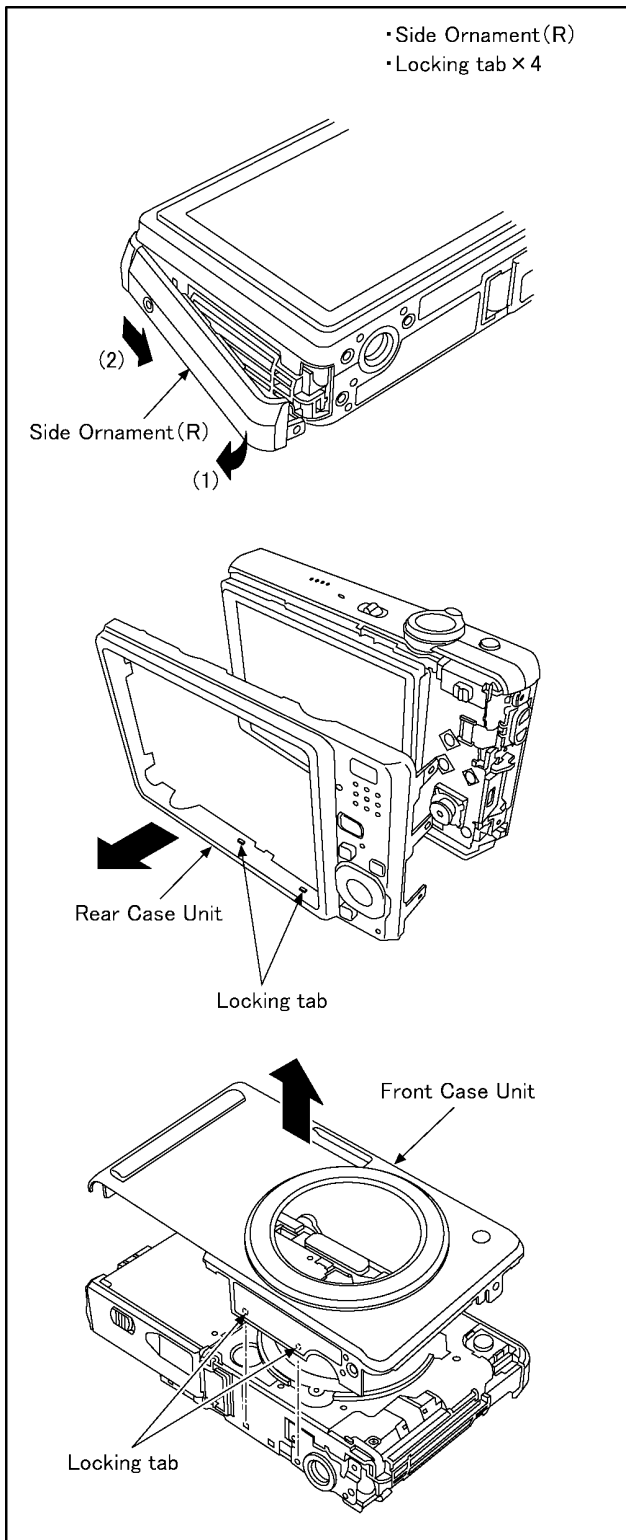

(Fig.D2)

8.3.2. Removal of the LCD Unit

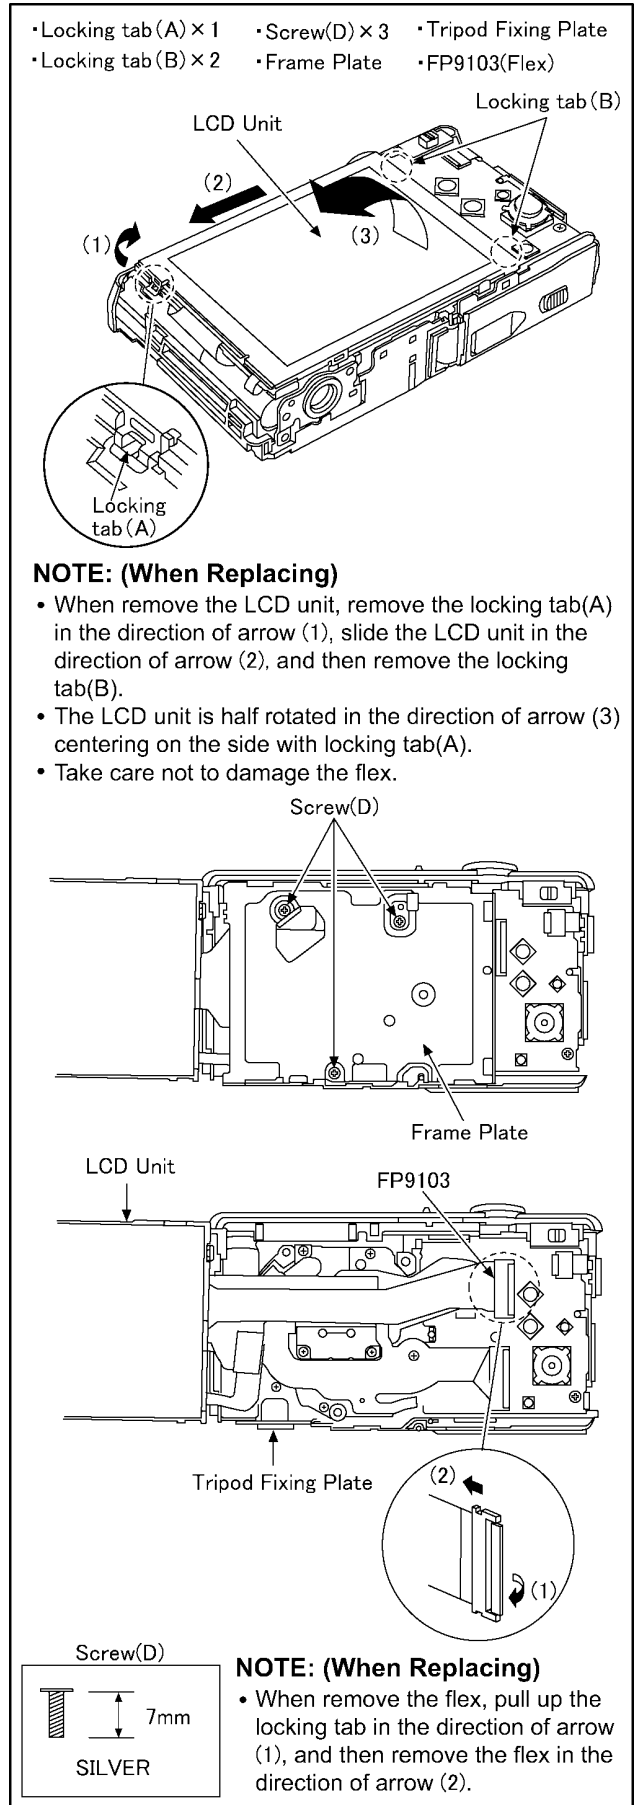


(Fig.D3)

8.3.3. Removal of the Top Operation Unit

IMPORTANT NOTICE:

Take care not apply any bending load to the charging capacitor. It brings about the possibility of PCB and/or component damage on the Flash Top P.C.B.

•PS8001(Connector)

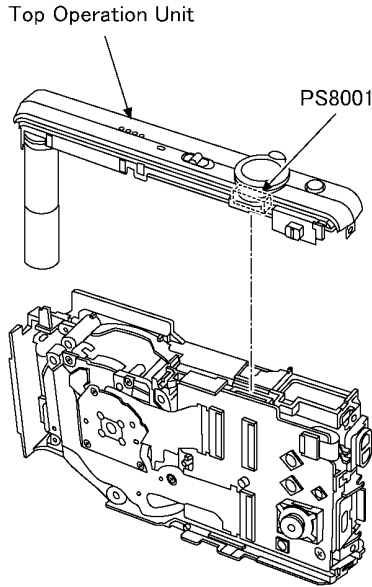


(Fig.D4)

IMPORTANT NOTICE:


Take care not apply any bending load to the charging capacitor. It brings about the possibility of PCB and/or component damage on the Flash Top P.C.B.

- Top Ornament Unit
- Speaker Unit
- Mic Damper
- POWER Knob Base
- POWER Knob

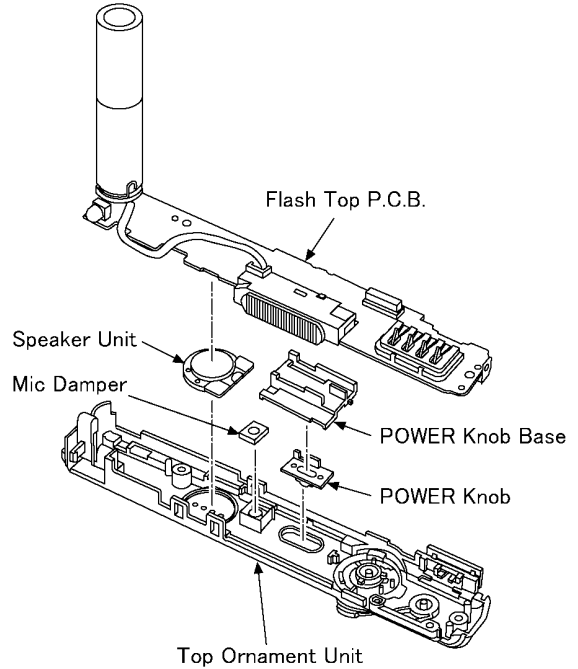


8.3.4. Removal of the Flash Top P.C.B.

- Locking tab × 5
- AF Panel Light
- Screw(E) × 2

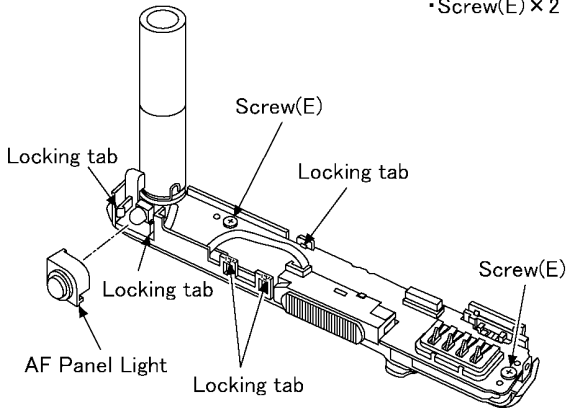

(Fig.D5)

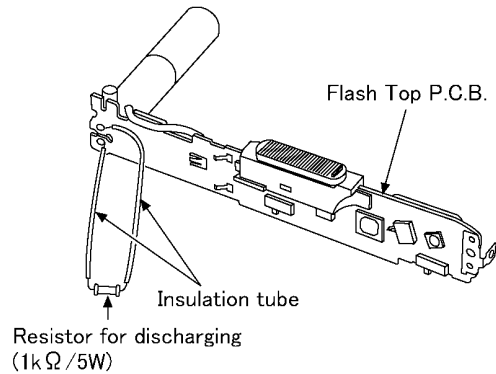

CAUTION


Be sure to discharge the capacitor on Flash Top P.C.B. before disassembling.

1. Remove the Flash Top P.C.B..
2. Put the insulation tube on the lead part of resistor (ERG5SJ102: 1kΩ/5W).
3. Put the resistor between both terminals of capacitor unit for approx. 5 seconds.

(Fig.D6)


NOTE: (When Installing)

- Align the convex of power switch and power knob.
- Align the convex of REC/PLAYBACK selector switch and REC/PLAYBACK selector knob.

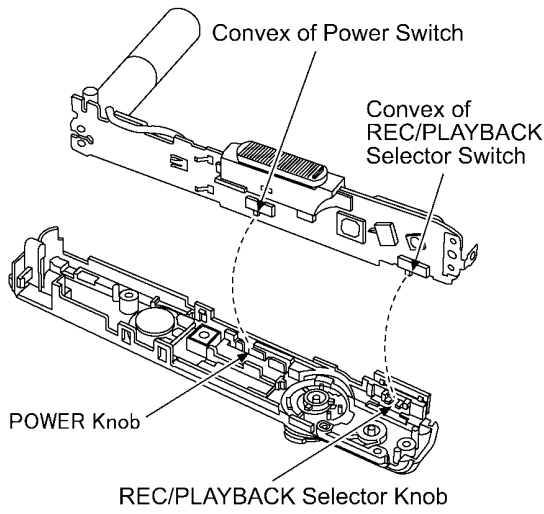


(Fig.D7)

8.3.5. Removal of the Lens Unit

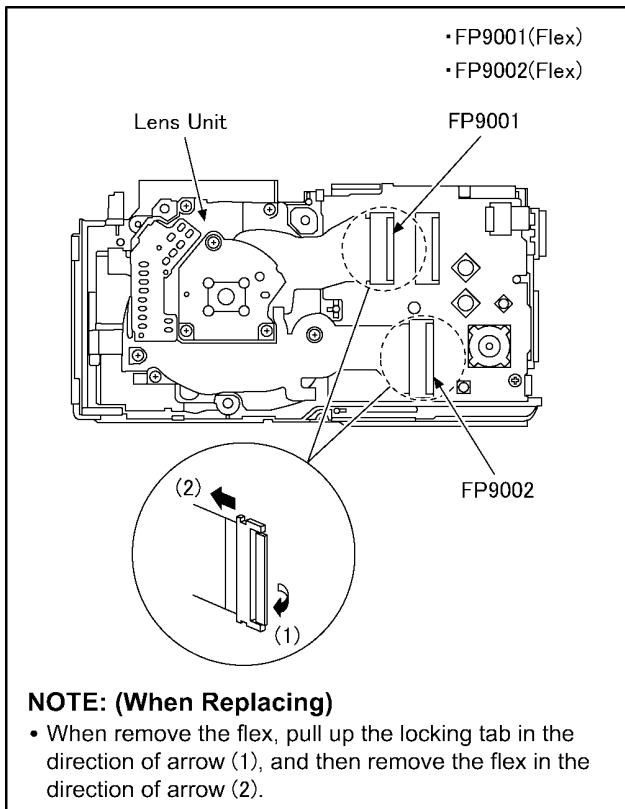


(Fig.D8)

8.3.6. Removal of the Main P.C.B.

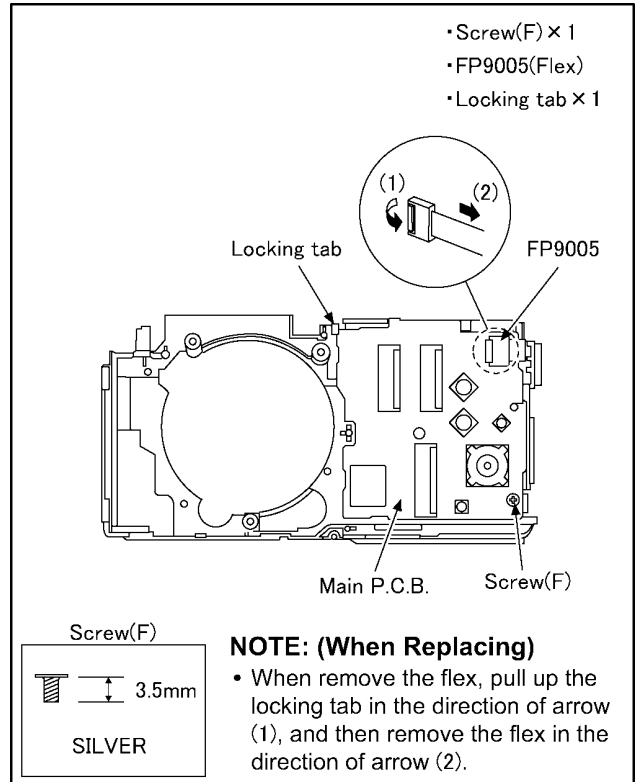


(Fig.D9)

8.3.7. Removal of the SD FPC Unit

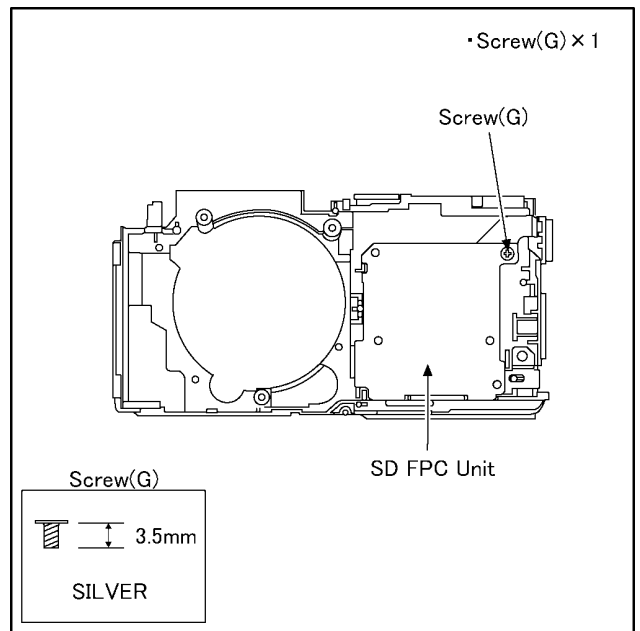


(Fig.D10)

8.3.8. Removal of the Battery Case Unit

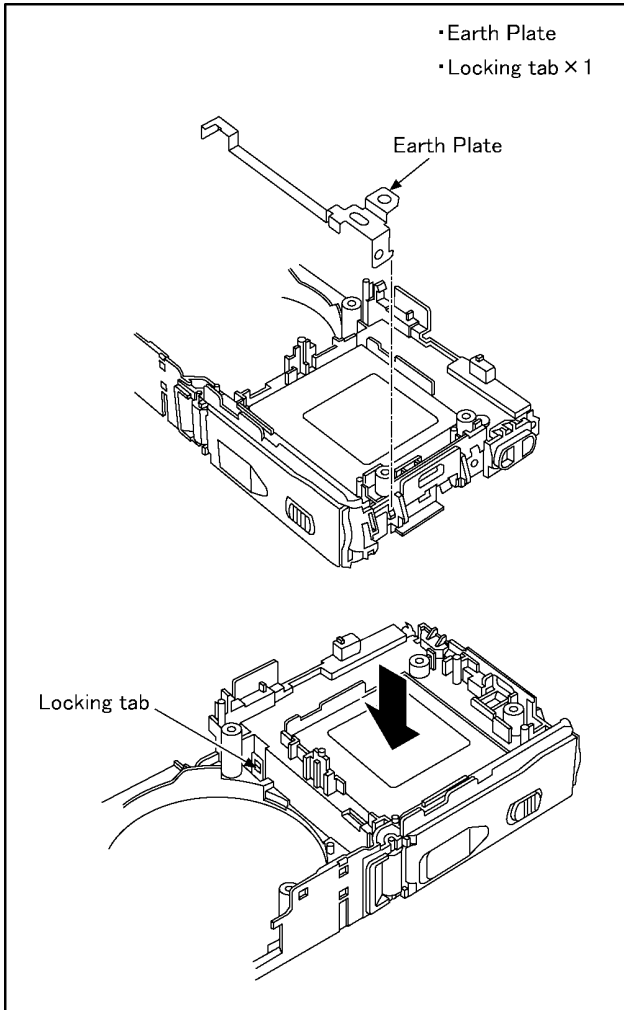


(Fig.D11)

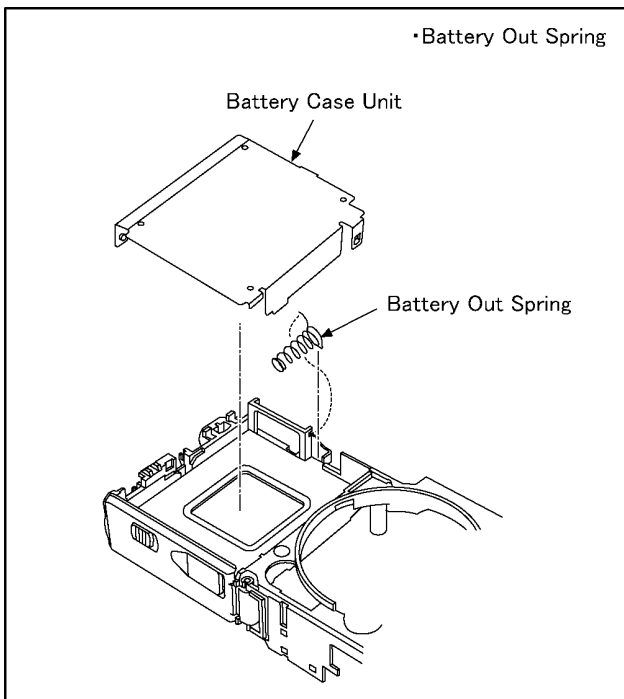

(Fig.D12)

8.3.9. Removal of the Battery Door Unit

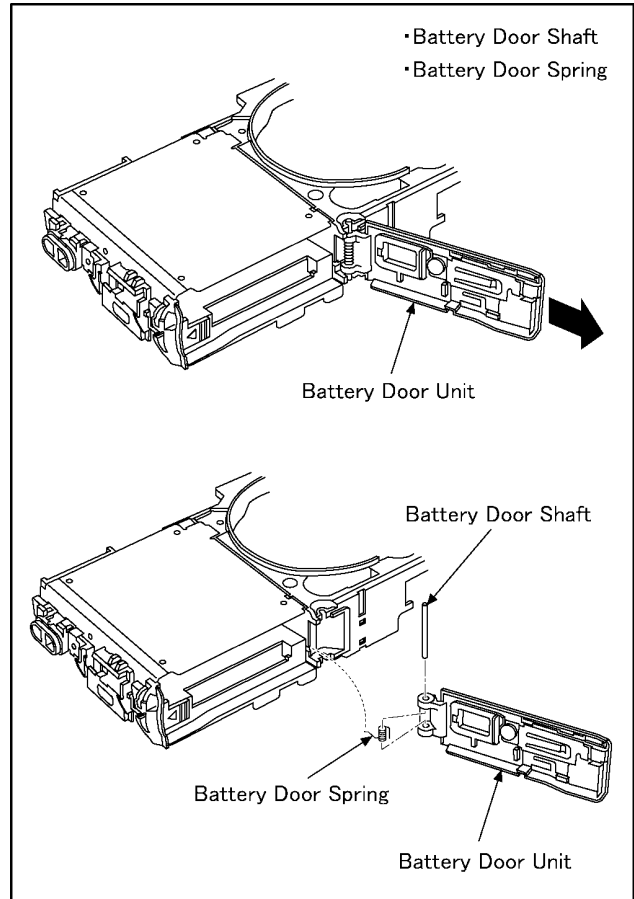

(Fig.D13)

NOTE: (When Assembling)

Be sure to confirm the following points when assembling.

- The Screw is tightened enough.
- Assembling conditions are fine. (No distortion, no illegal-space.)
- No dust and/or dirt on every Lens surfaces.
- LCD image is fine. (No dust and dirt on it, and no gradient images.)


8.4. Disassembly Procedure for the Lens

NOTE: When Disassembling and Assembling for the Lens

1. To minimize the possibility of the CCD being dirt, perform disassemble and/or assemble under the condition of the CCD is being mounted.
Disassembling procedures for the CCD unit, refer to item 8.6.
2. Take care that the dust and dirt are not entered into the lens.
In case of the dust is putted on the lens, blow off them by airbrush.
3. Do not touch the surface of lens.
4. Use lens cleaning KIT (BK)(VFK1900BK).
5. Apply the grease (RFKZ0472) to the point where is shown to "Grease apply" in the figure.
When the grease is applied, use a toothpick and apply thinly.
6. When repair the fixed frame, drive frame and direct frame, must be unit exchange.


8.4.1. Removal of the Zoom Motor Unit and Lens FPC P.C.B. Unit

1. Remove the 1 solder (A).
2. Remove the 1 solder (B).
3. Unscrew the 2 screws (A).
4. Unscrew the 1 screw (B).
5. Remove the 2 locks.
6. Remove the zoom motor unit to the indicated by arrow (1).
7. Remove the lens FPC P.C.B. unit to the indicated by arrow (2).

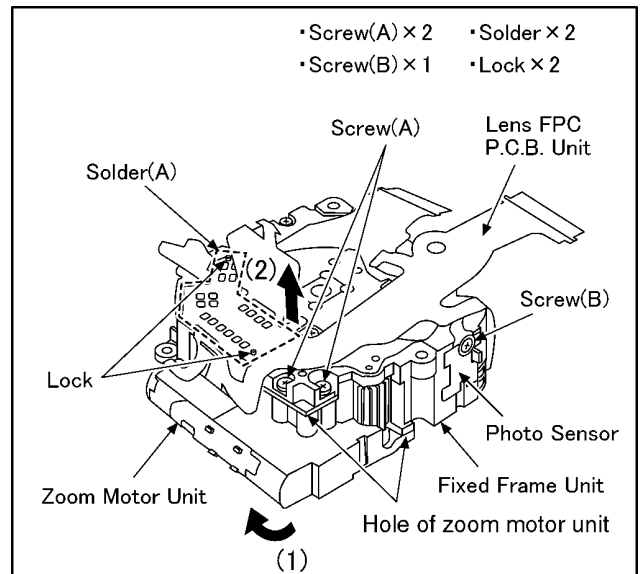


NOTE: (When Assembling)

- Align the convex of fixed frame unit and hole of zoom motor unit, and then install them.

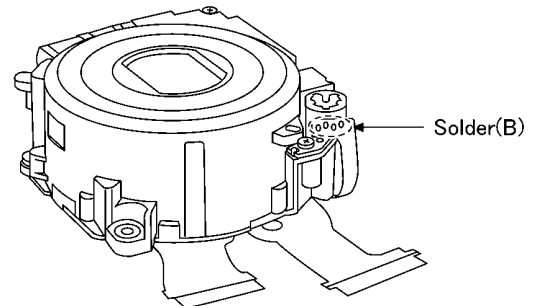


NOTE: (When Assembling)


- Take care not to damage the flex.

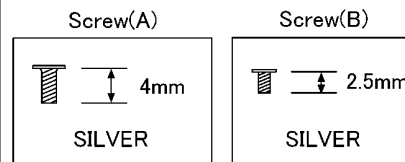


8.4.2. Removal of the Master Flange Unit

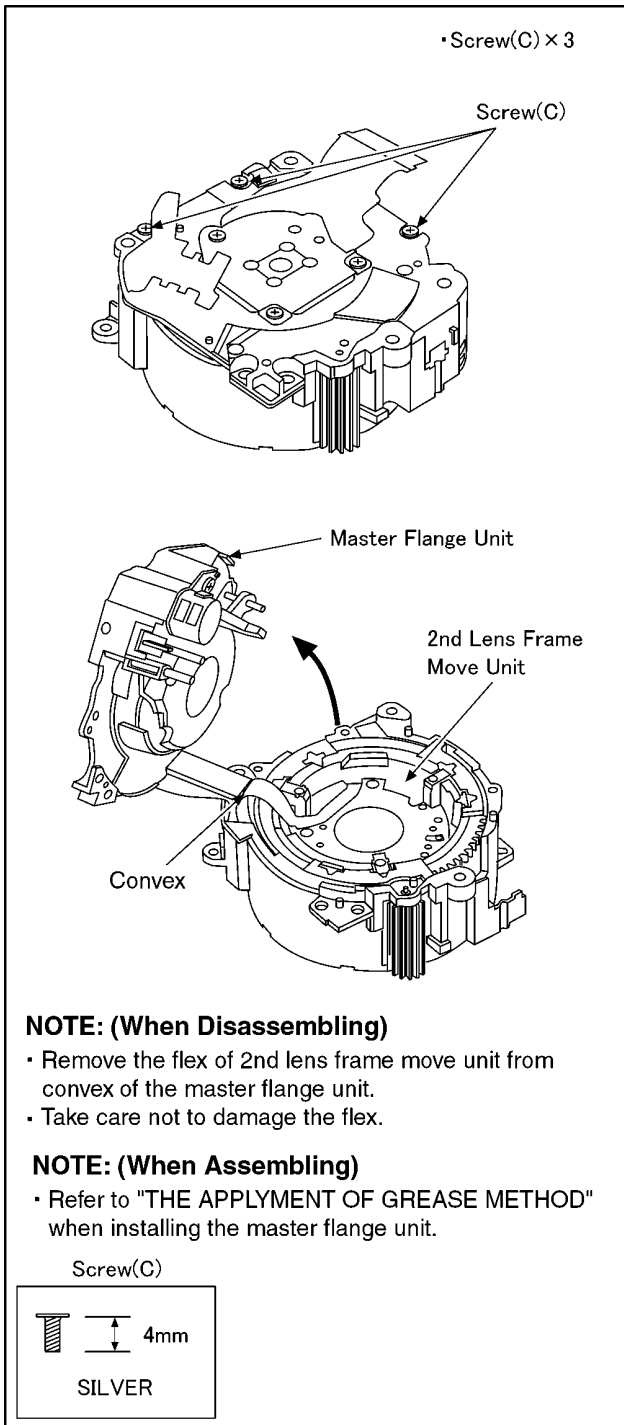

8.4.3. Removal of the 1st Lens Frame/2nd Lens Frame Move Unit

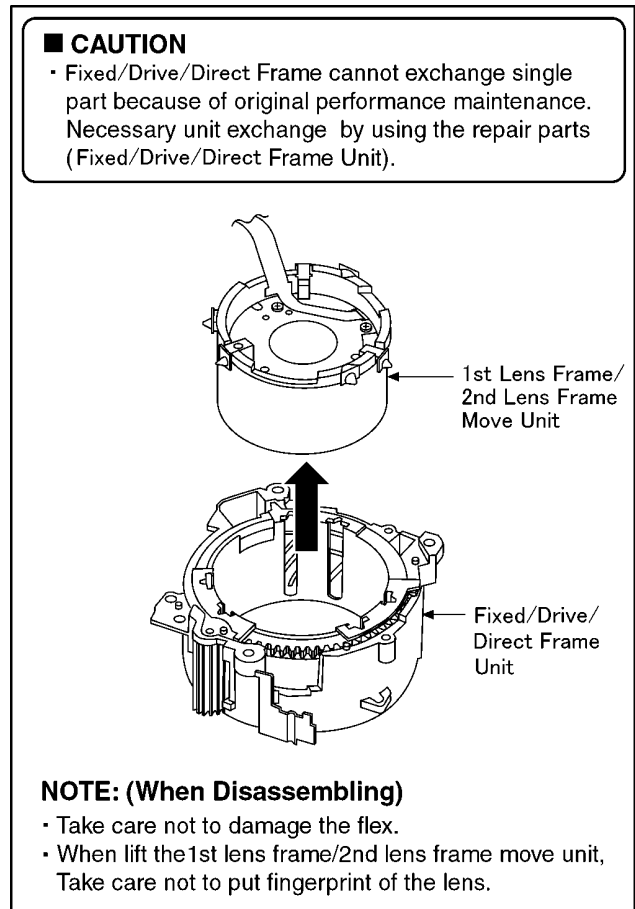


8.4.4. Removal of the 2nd Lens Frame Move Unit

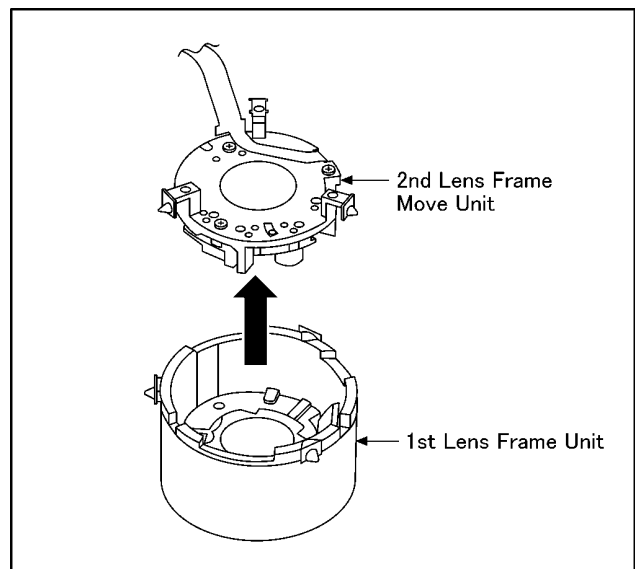


8.5. Assembly Procedure for the Lens

8.5.1. Phase alignment of the Direct Frame and Drive Frame Unit

- Insert the shading sheet to drive frame.
(When insert the shading sheet, so that the luster side facing to subject side)
- Align the Δ mark of direct frame and groove in the interior of Δ mark of drive frame, and then install the direct frame to drive frame.

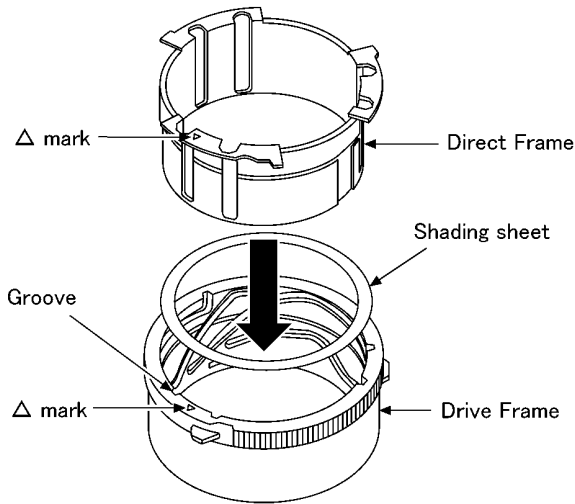


- Move the external U cut of direct frame to gear edge, and then align the phase of the groove (6 points).

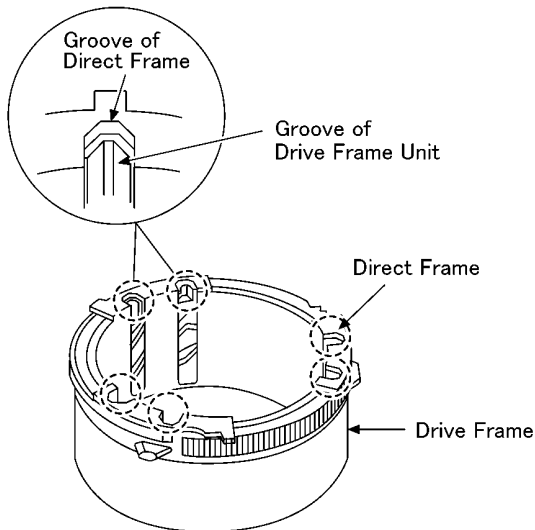

8.5.2. Phase alignment of the Drive/Direct Frame Unit and Fixed Frame Unit

- Align the Δ mark, and then install the drive/direct frame unit to fixed frame unit.

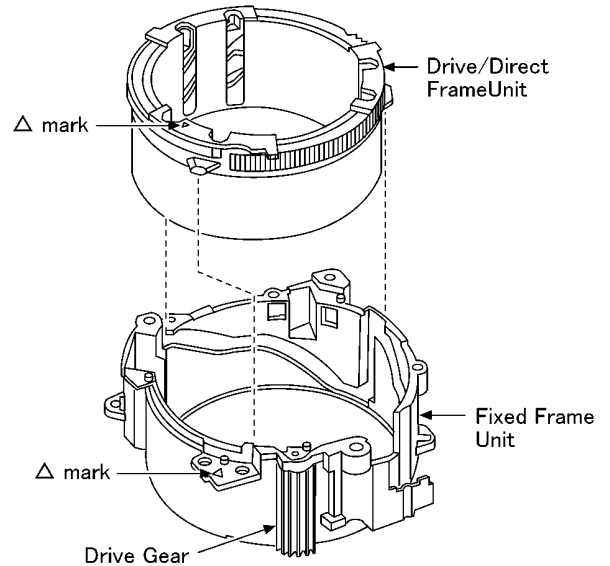


NOTE: (When Assembling)

- With aligning the phase of the drive/direct frame unit , confirm the gear of drive unit is engaged with the fixed frame unit firmly.

8.5.3. Assembly for the 1st Lens Frame Unit and Fixed/Drive/Direct Frame Unit

- Inserts the 1st lens frame unit to the fixed/drive/direct frame unit so that the barrier drive lever may become the position of the figure below.

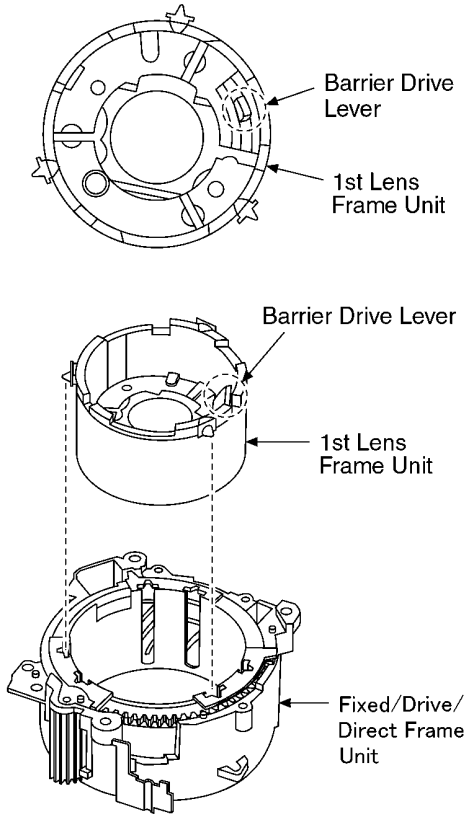


NOTE: (When Assembling)


Take care not to put fingerprint of the lens.

FRONT VIEW

- Install the 1st lens frame unit so that the "LEICA" character may become the position of the figure below.

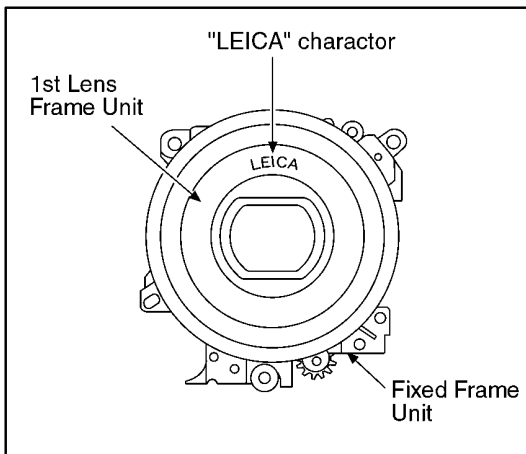

8.5.4. Assembly for the 2nd Lens Frame Move Unit and Fixed/Drive/Direct Frame/1st Lens Frame Unit

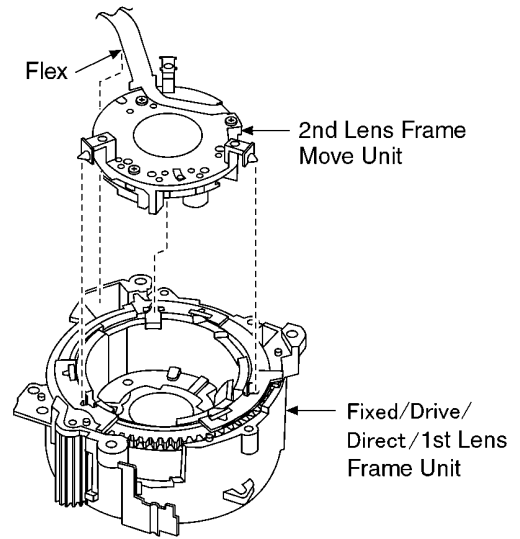

NOTE: (When Assembling)

Take care not to put fingerprint of the lens.

8.5.5. Assembly for the Master Flange Unit and Fixed/Drive/Direct Frame/1st Lens Frame/2nd Lens Frame Move Unit

• Screw(C) × 3

- Align the flex insert part of fixed frame unit and convex of the master flange unit, and then insert the master flange unit.

• Turn the Drive Gear in the direction of an arrow, and then confirm the lens shutter is closed.

Screw(C)
4mm
SILVER

NOTE: (When Assembling)

- Take care not to damage the flex.
- Refer to "THE APPLYMENT OF GREASE METHOD" when installing the master flange unit.

8.6. Removal of the CCD Unit

To prevent the CCD unit from catching the dust and dirt, do not remove the CCD unit except for replacing.

• Screw(D) × 3 • Optical Filter × 1
• CCD Cushion × 1

Screw(D)

Screw(D)
3mm
BLACK

CCD side (red is pale)
↑ ↓
Lens side (red is deep)

CCD Cushion
Optical Filter

NOTE: (When Assembling)

Definitions of mount side of Optical filter.


- *Set the optical filter under the condition of reflecting the fluorescent lamp can be seen by your eyes.
- *Although depth of the red color may be changed in accordance with seeing angle, compare the deepest red color in both sides to define each side.
Lens side: red color is deeper than the other side.
CCD side: red color is paler than the other side.

It can be easy to confirm the red color density on the blue paper.

- *The optical filter might stuck to CCD unit.

When replace the CCD unit, remove the optical filter, and then install it with CCD unit.

8.7. Removal of the Focus Motor Unit

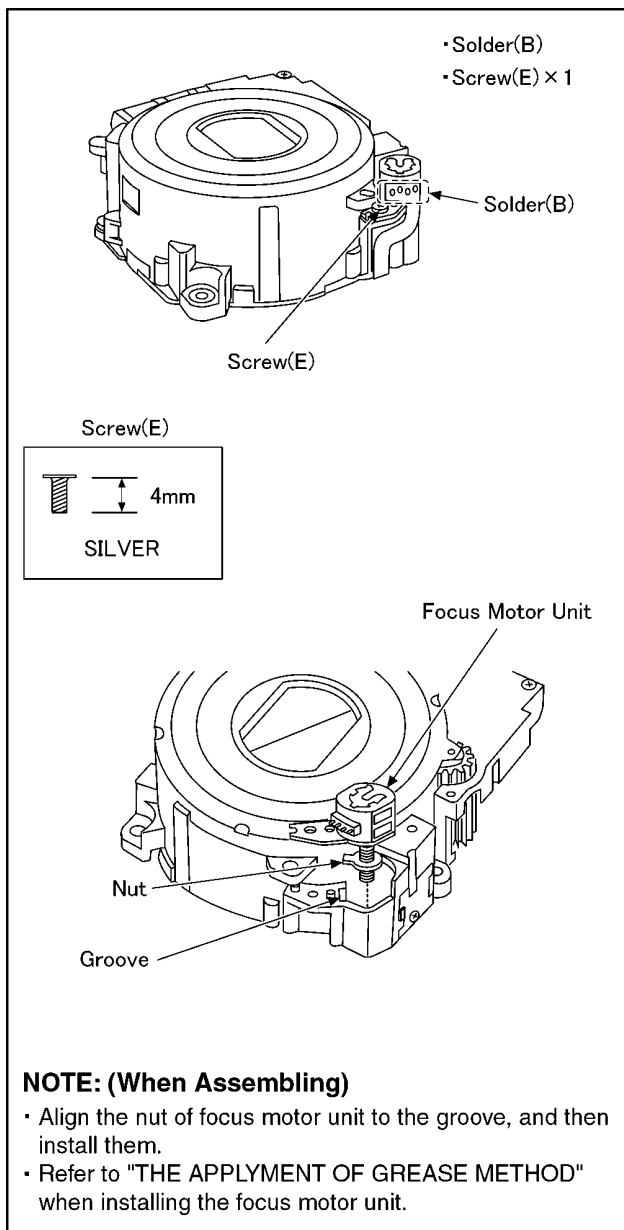


8.8. The Applyment of Grease Method

The grease apply point of lens unit are as follows.

Apply grease additionally in the specified position if necessary. When the grease is applied, use a toothpick and apply thinly.

- Guide pole L,S/Fasten groove of nut/Focus motor unit (Lead screw)
 - Grease: RFKZ0472
 - Amount of apply: 2 - 4 mg

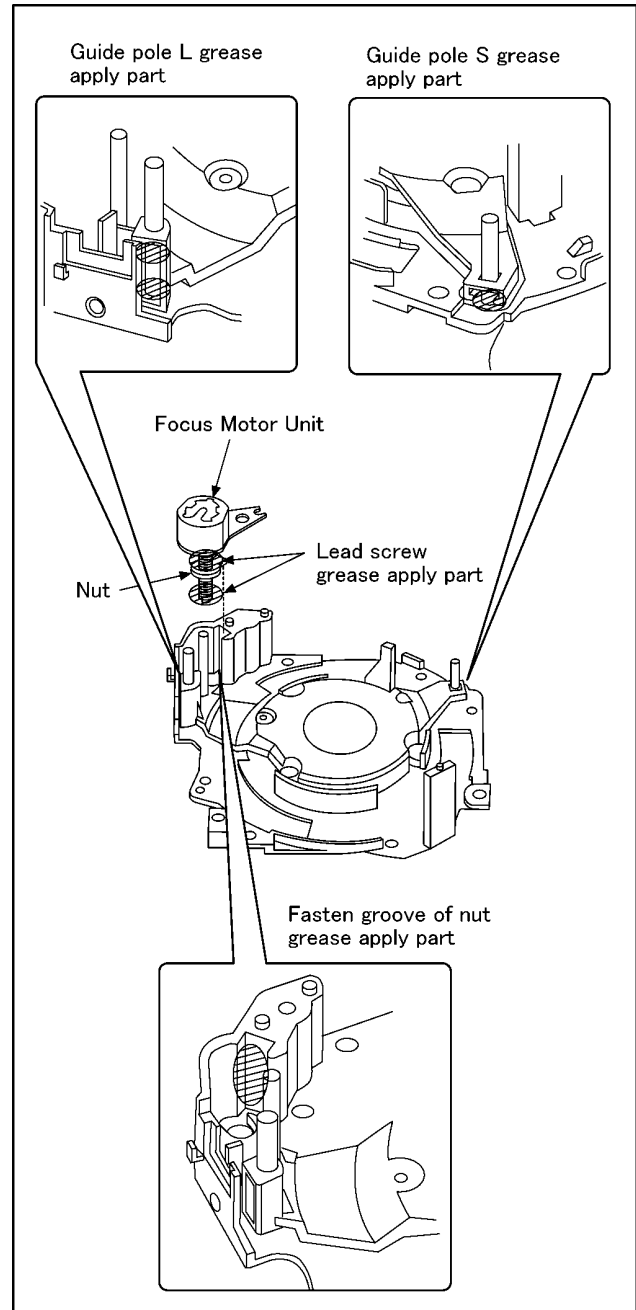

9 Measurements and Adjustments

9.1. Matrix Chart for Replaced Part and Necessary Adjustment

The relation between Replaced part and Necessary Adjustment is shown in the following table.

When concerned part is replaced, be sure to achieve the necessary adjustment(s).

As for Adjustment condition/procedure, consult the "Adjustment Manual" which is available in Adjustment software.

The Adjustment software is available at "TSN Website", therefore, access to "TSN Website" at "Support Information from NWBG/VDBG-AVC".

NOTE:


After adjustments have been terminated, make sure to achieve "INITIAL SETTINGS".

Adjustment Item		Replaced Part				
		Main P.C.B.	VENUS (IC6001)	Flash-ROM (IC6002)	Lens Part (Excluding CCD)	CCD Unit
Camera Section	OIS hall element adjustment (OIS)	○	○	○	○	-
	Back focus adjustment (BF)	○	○	○	○	○*1
	Shutter adjustment (SHT)	○	○	○	○	○
	ISO sensitivity adjustment (ISO)	○	○	○	○	○
	AWB adjustment High brightness coloration inspection (WBL)	○	○	○	○	○
	CCD white scratch compensation (WKI)	○	○	○	-	○*1
	CCD black scratch compensation (BKI)	○	○	○	-	○*1
	Venus zoom inspection (PZM)	○	○	○	-	-
	Monitor linearity inspection (MLN)	○	○	○	○	○
	Colour reproduction inspection, MIC inspection (COL)	○	○	○	○	○

*1: This adjustment is necessary, not only replacing CCD unit but also removing it from the lens unit.

NOTE:

*There is no LCD adjustment in this model.

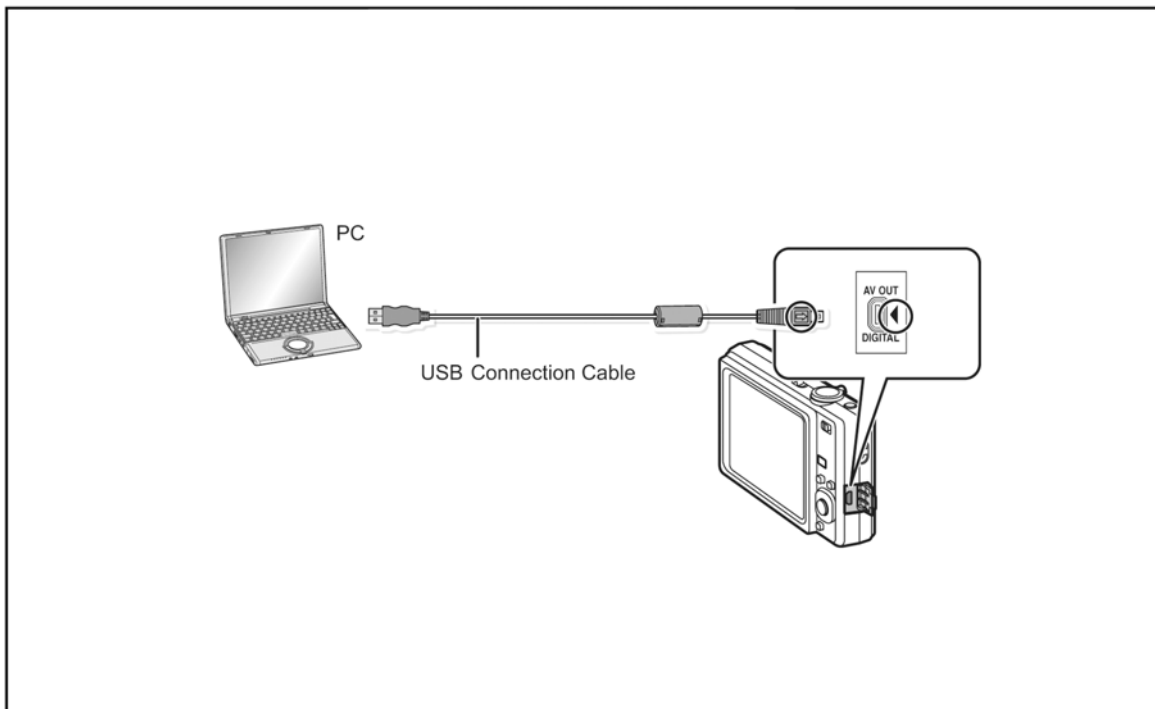

10 Maintenance

10.1. Cleaning Lens and LCD Panel

Do not touch the surface of lens and LCD Panel with your hand.

When cleaning the lens, use air-Blower to blow off the dust.

When cleaning the LCD Panel, dampen the lens cleaning paper with lens cleaner, and the gently wipe the their surface.

Note:

The Lens Cleaning KIT ; VFK1900BK (Only supplied as 10 set/Box) is available as Service Aid.

Service Manual

Diagrams and Replacement Parts List

Digital Camera

Model No.

DMC-FS25P	DMC-FS25EB
DMC-FS25PC	DMC-FS25EE
DMC-FS25PU	DMC-FS25GC
DMC-FS25EG	DMC-FS25GT
DMC-FS25EP	DMC-FS25GK
DMC-FS25EF	DMC-FS25GD

- Vol. 1
 Colour
 (S).....Silver Type (except PC/PU/EF/GD/GT)
 (K).....Black Type (except PU)
 (N).....Gold Type (except EB/EF/EG/EP/GD)

Table of contents

S1. About Indication of The Schematic Diagram..... S-1
 S1.1. Important Safety Notice..... S-1

S2. Voltage Chart S-2
 S2.1. Flash Top P.C.B..... S-2

S3. Block Diagram..... S-3
 S3.1. Overall Block Diagram S-3

S4. Schematic Diagram..... S-4
 S4.1. Interconnection Diagram S-4
 S4.2. Flash Top Schematic Diagram S-5
 S4.3. CCD Flex Schematic Diagram S-6
 S4.4. Lens Flex Schematic Diagram S-7

S5. Print Circuit Board..... S-8
 S5.1. Flash Top P.C.B..... S-8
 S5.2. CCD Flex P.C.B..... S-9
 S5.3. Lens Flex P.C.B..... S-10

S6. Replacement Parts List..... S-11


S7. Exploded View S-16
 S7.1. Frame and Casing Section..... S-16
 S7.2. Camera Lens Section..... S-17
 S7.3. Packing Parts and Accessories Section (1) S-18
 S7.4. Packing Parts and Accessories Section (2) S-19

S1. About Indication of The Schematic Diagram

S1.1. Important Safety Notice

COMPONENTS IDENTIFIED WITH THE MARK \triangle HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS USE ONLY THE SAME TYPE.

1. Although reference number of the parts is indicated on the P.C.B. drawing and/or schematic diagrams, it is NOT mounted on the P.C.B. when it is displayed with "\$" mark.
2. It is only the "Test Round" and no terminal (Pin) is available on the P.C.B. when the TP (Test Point) indicated as "●" mark.
3. The voltage being indicated on the schematic diagram is measured in "Standard-Playback" mode when there is no specify mode is mentioned.
4. Although the voltage and waveform available on here is measured with standard frame, it may be differ from actual measurement due to modification of circuit and so on.
5. The voltage being indicated here may be include observational-error (deviation) due to internal-resistance and/or reactance of equipment. Therefore, handle the value indicated on here as reference.
6. Use the parts number indicated on the Replacement Parts List .
7. Indication on Schematic diagrams:

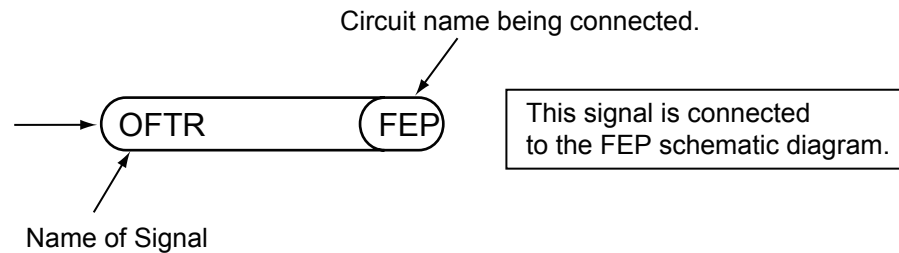

S2. Voltage Chart


Note) Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard.
Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

S2.1. Flash Top P.C.B.

REF No.	PIN No.	POWER ON
IC8001	1	5.8
IC8001	2	0
IC8001	3	0
IC8001	4	0
IC8001	5	5.8
Q8009	1	6.9
Q8009	2	6.9
Q8009	3	0
Q8009	4	0
Q8009	5	6.9
Q8009	6	6.9


S3. Block Diagram

S3.1. Overall Block Diagram

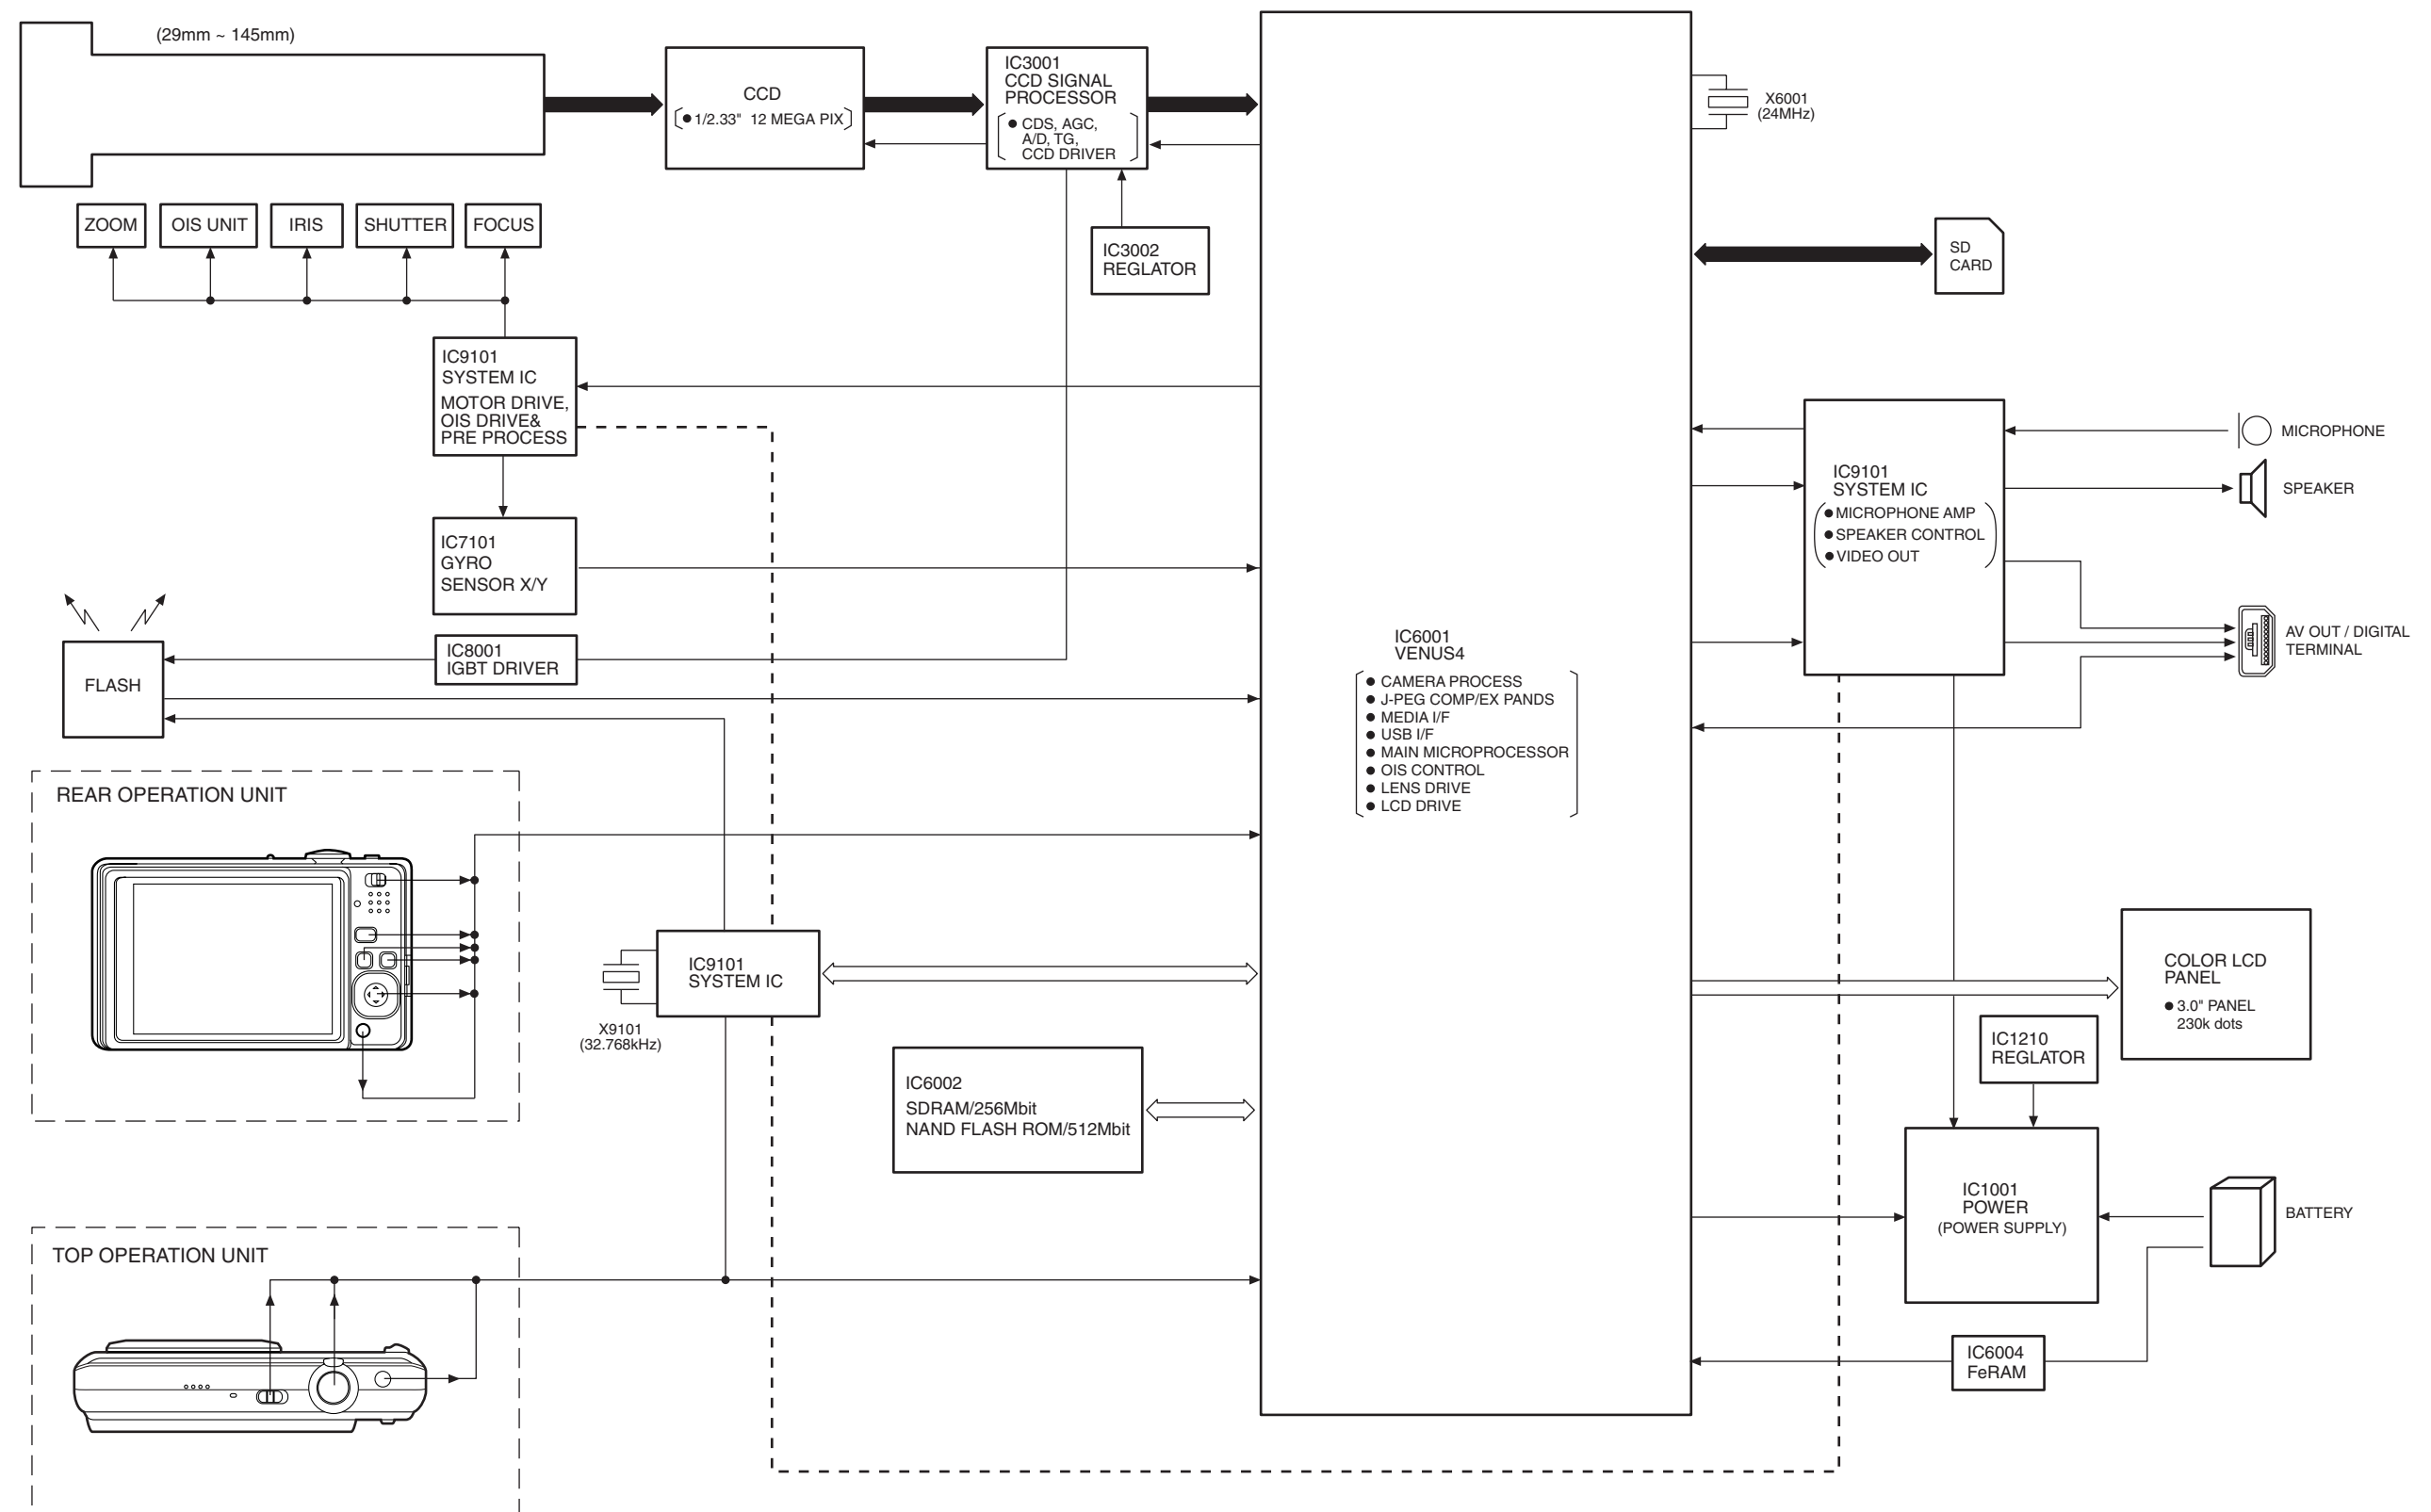


S4. Schematic Diagram

S4.1. Interconnection Diagram

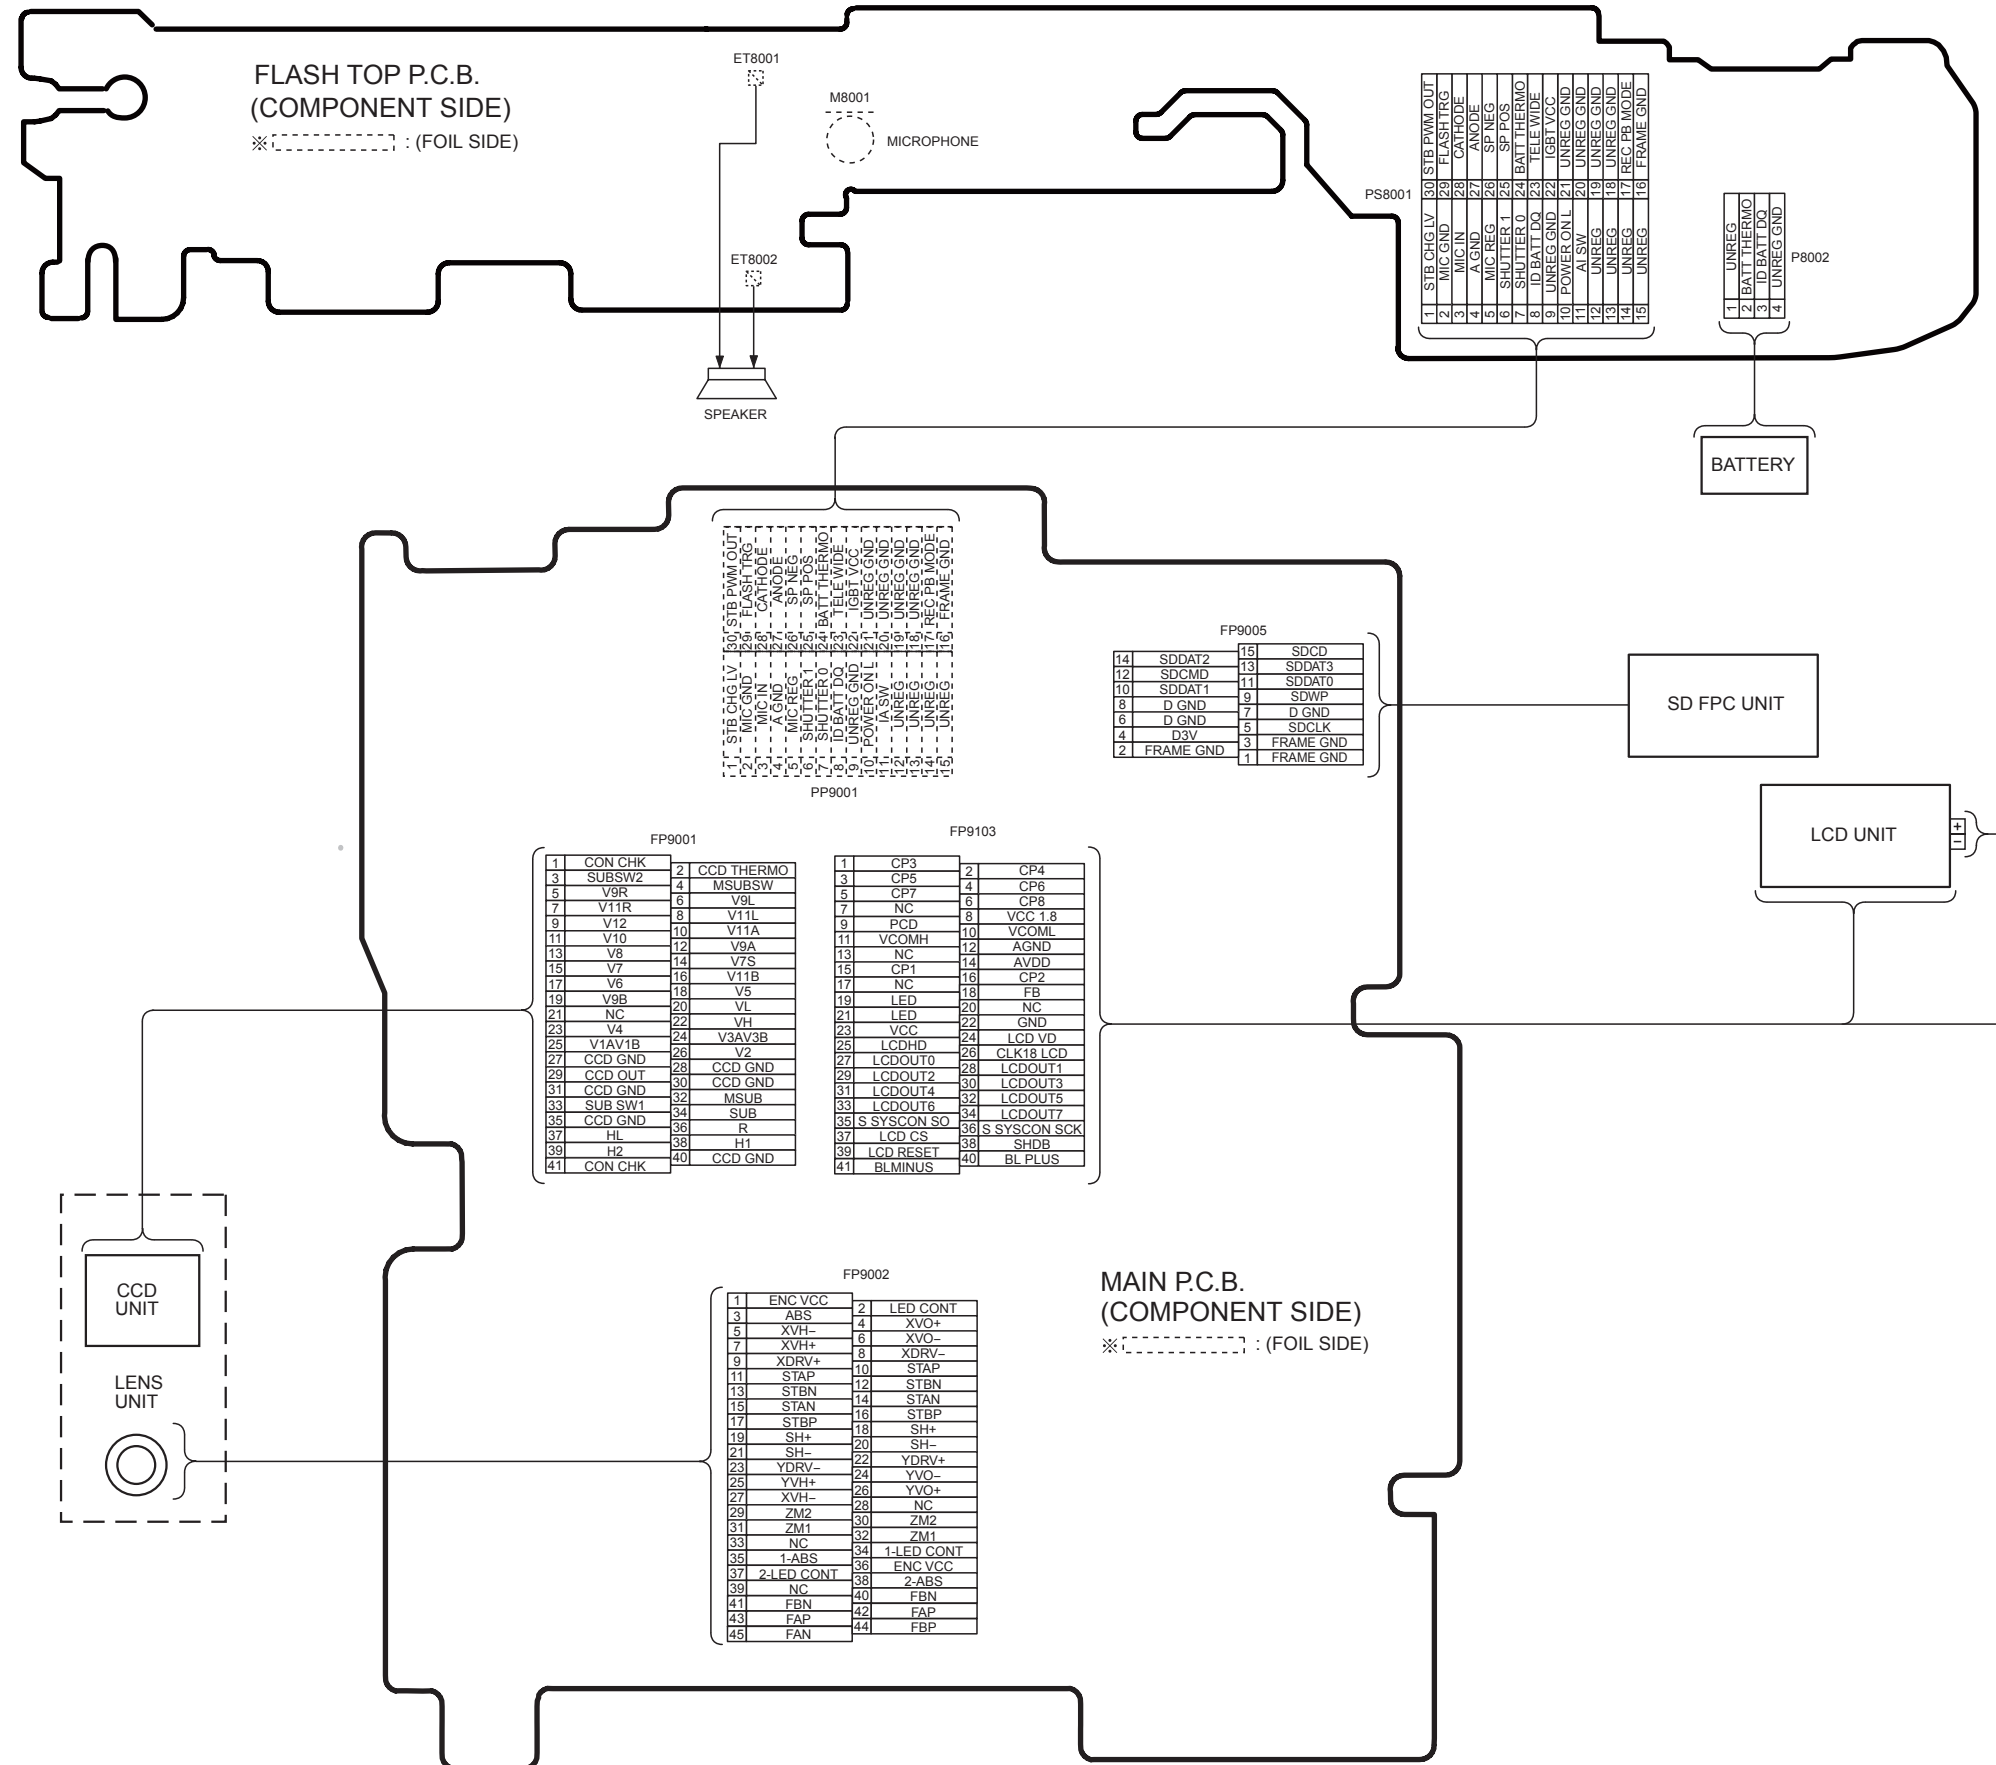

S4.2. Flash Top Schematic Diagram

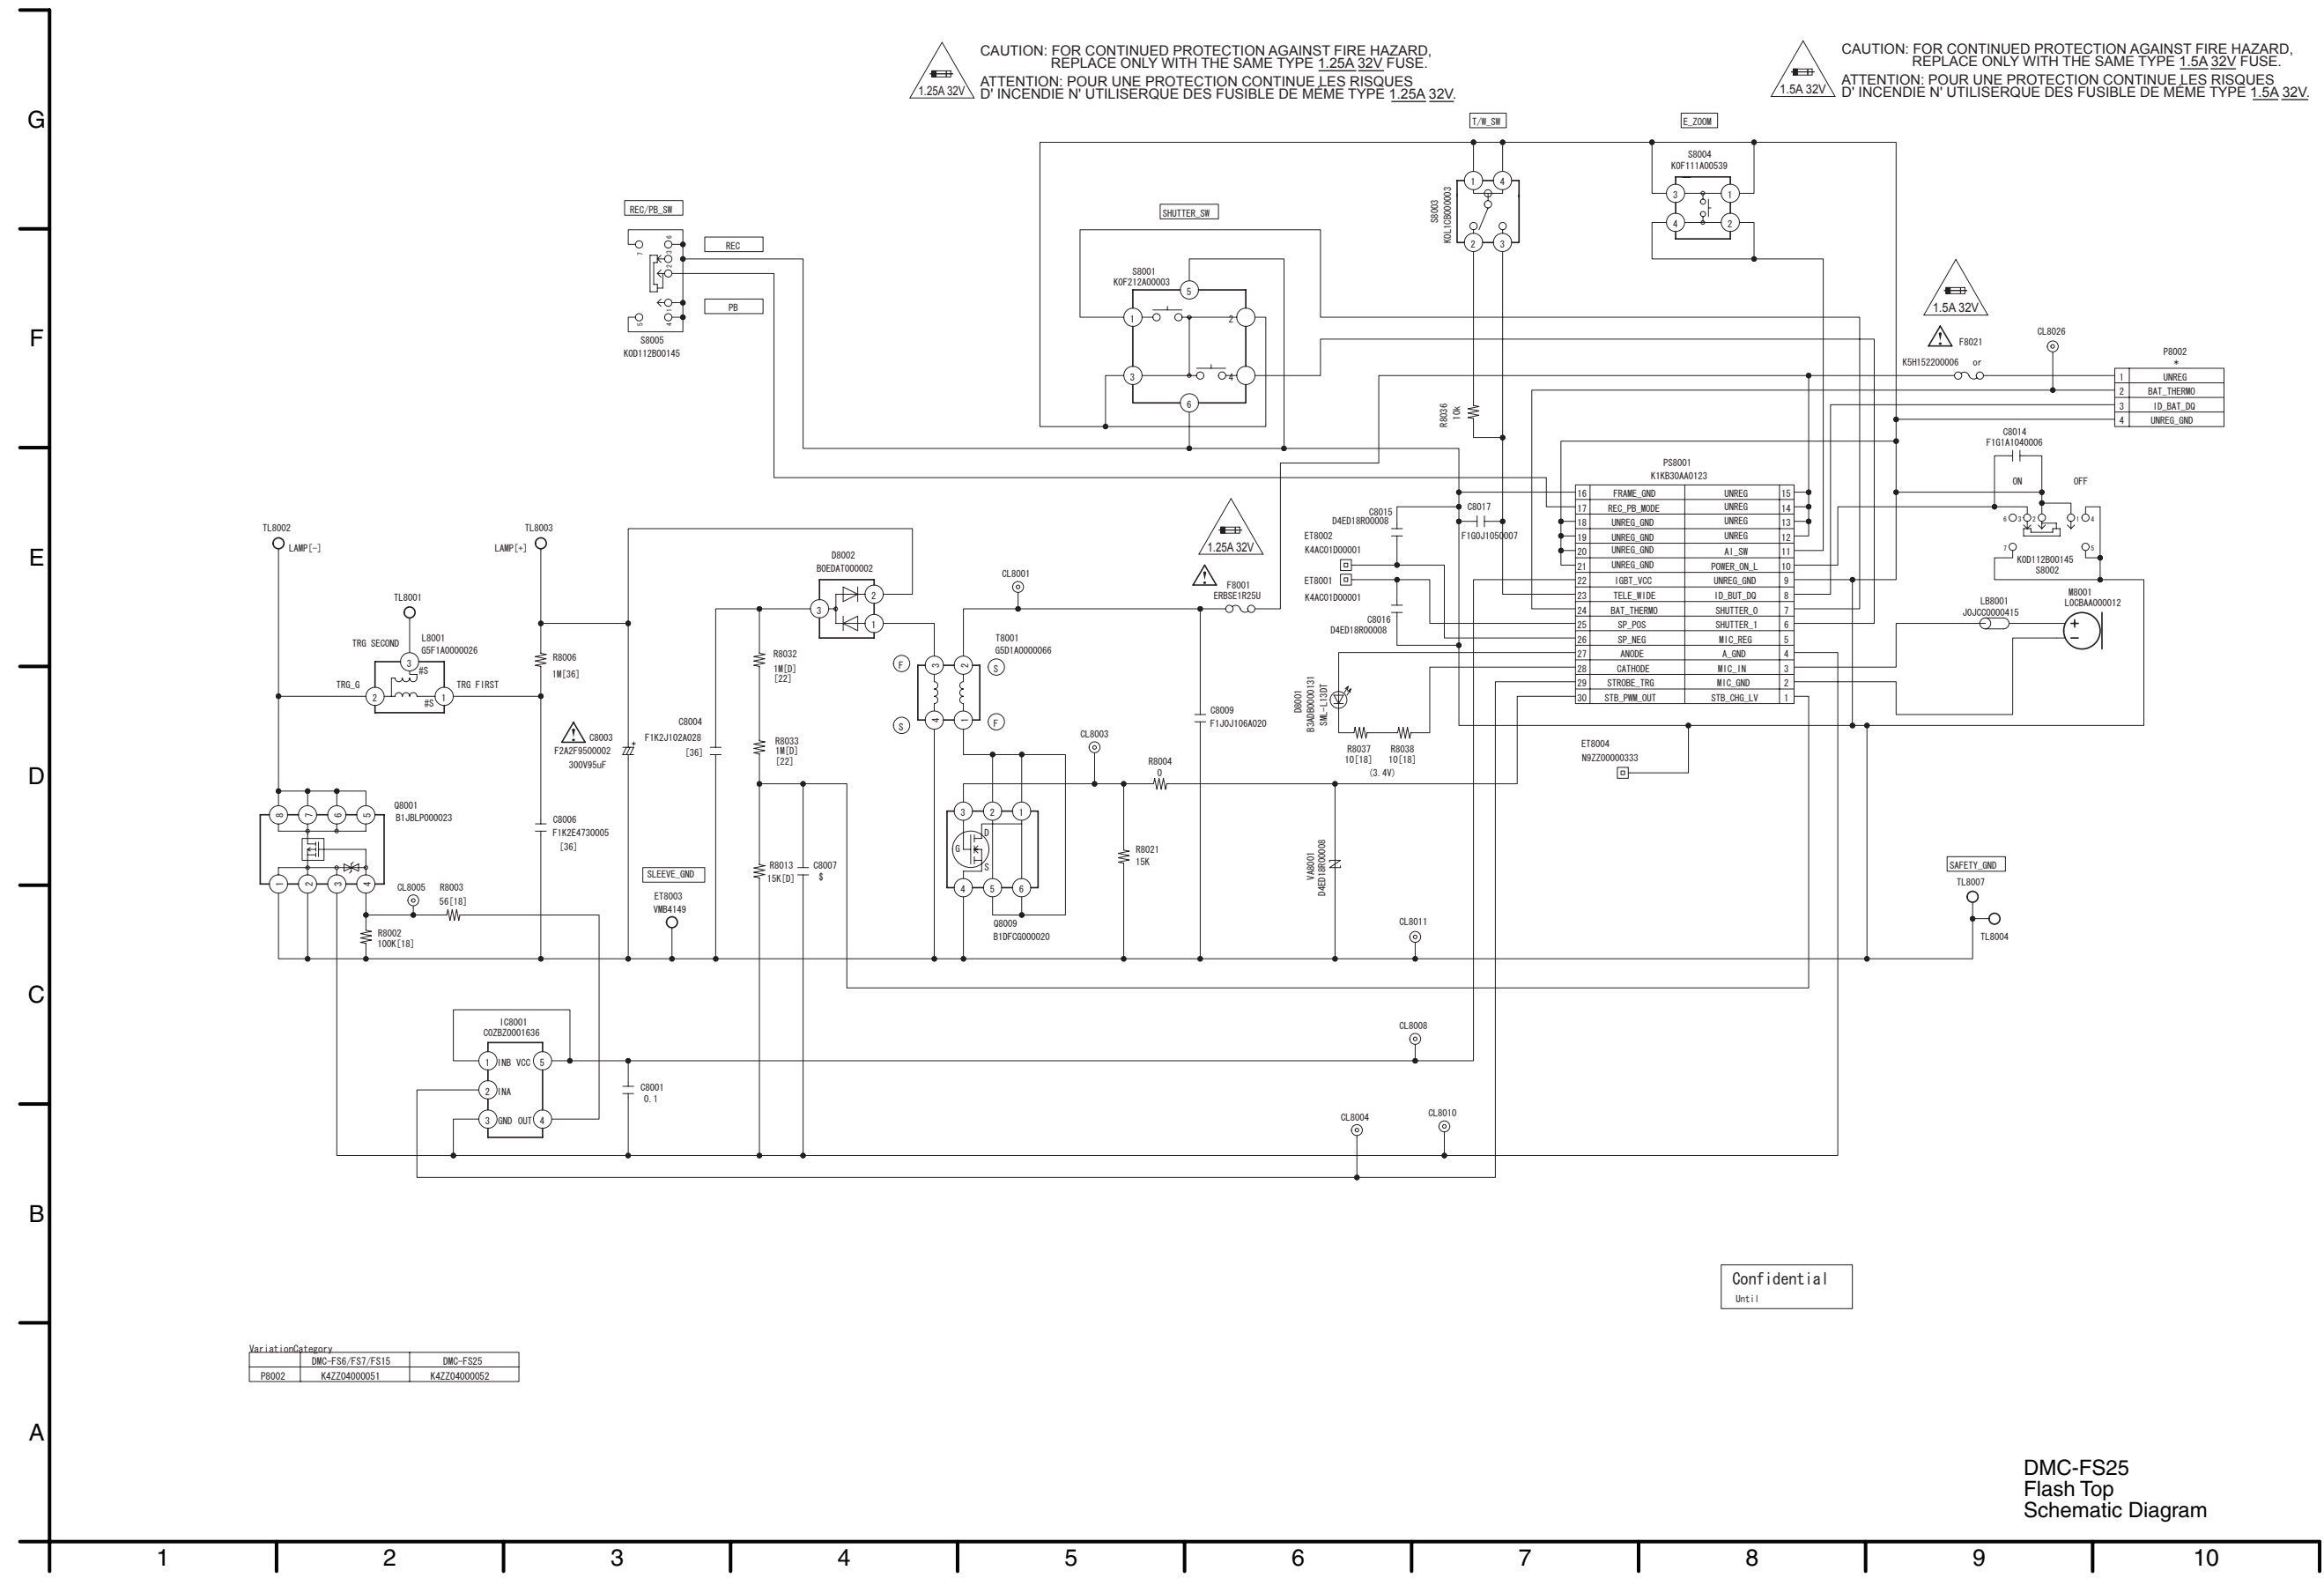


VariationCategory	DMC-FS6/FS7/FS15	DMC-FS25
P8002	K4Z704000051	K4Z704000052

Confidential
 Unt:1


DMC-FS25
 Flash Top
 Schematic Diagram

S4.3. CCD Flex Schematic Diagram

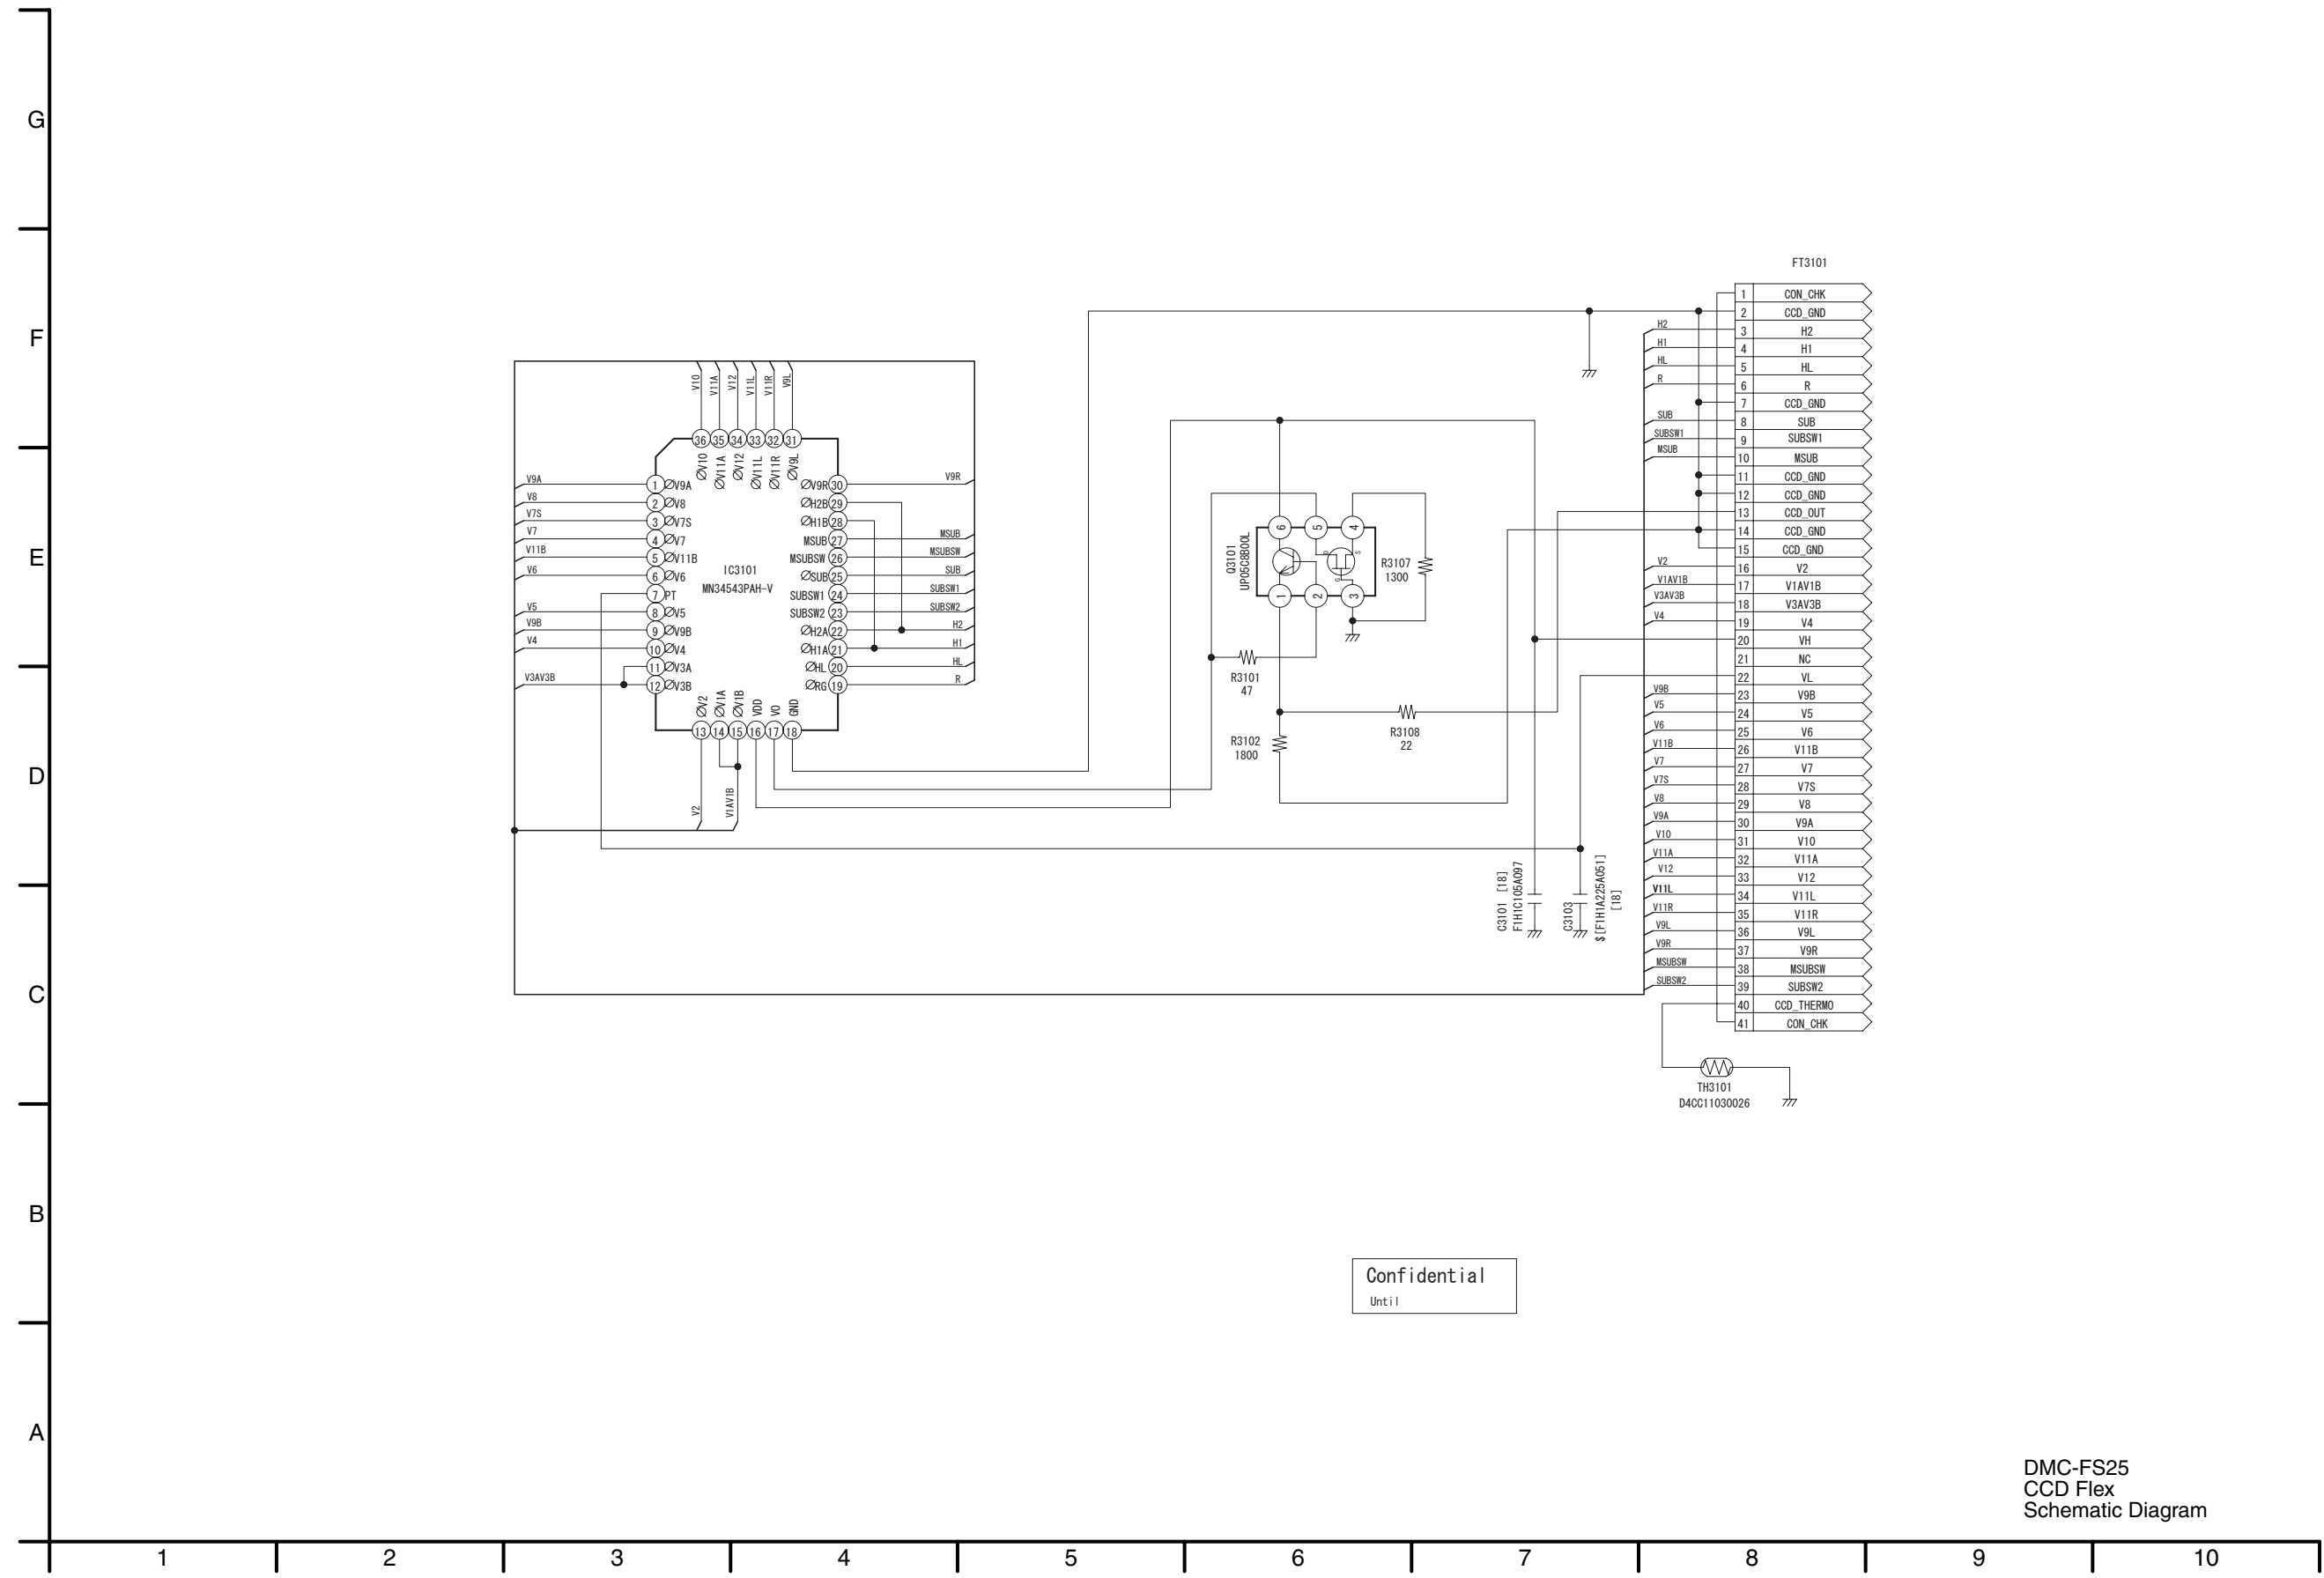


Confidential
Until

S4.4. Lens Flex Schematic Diagram

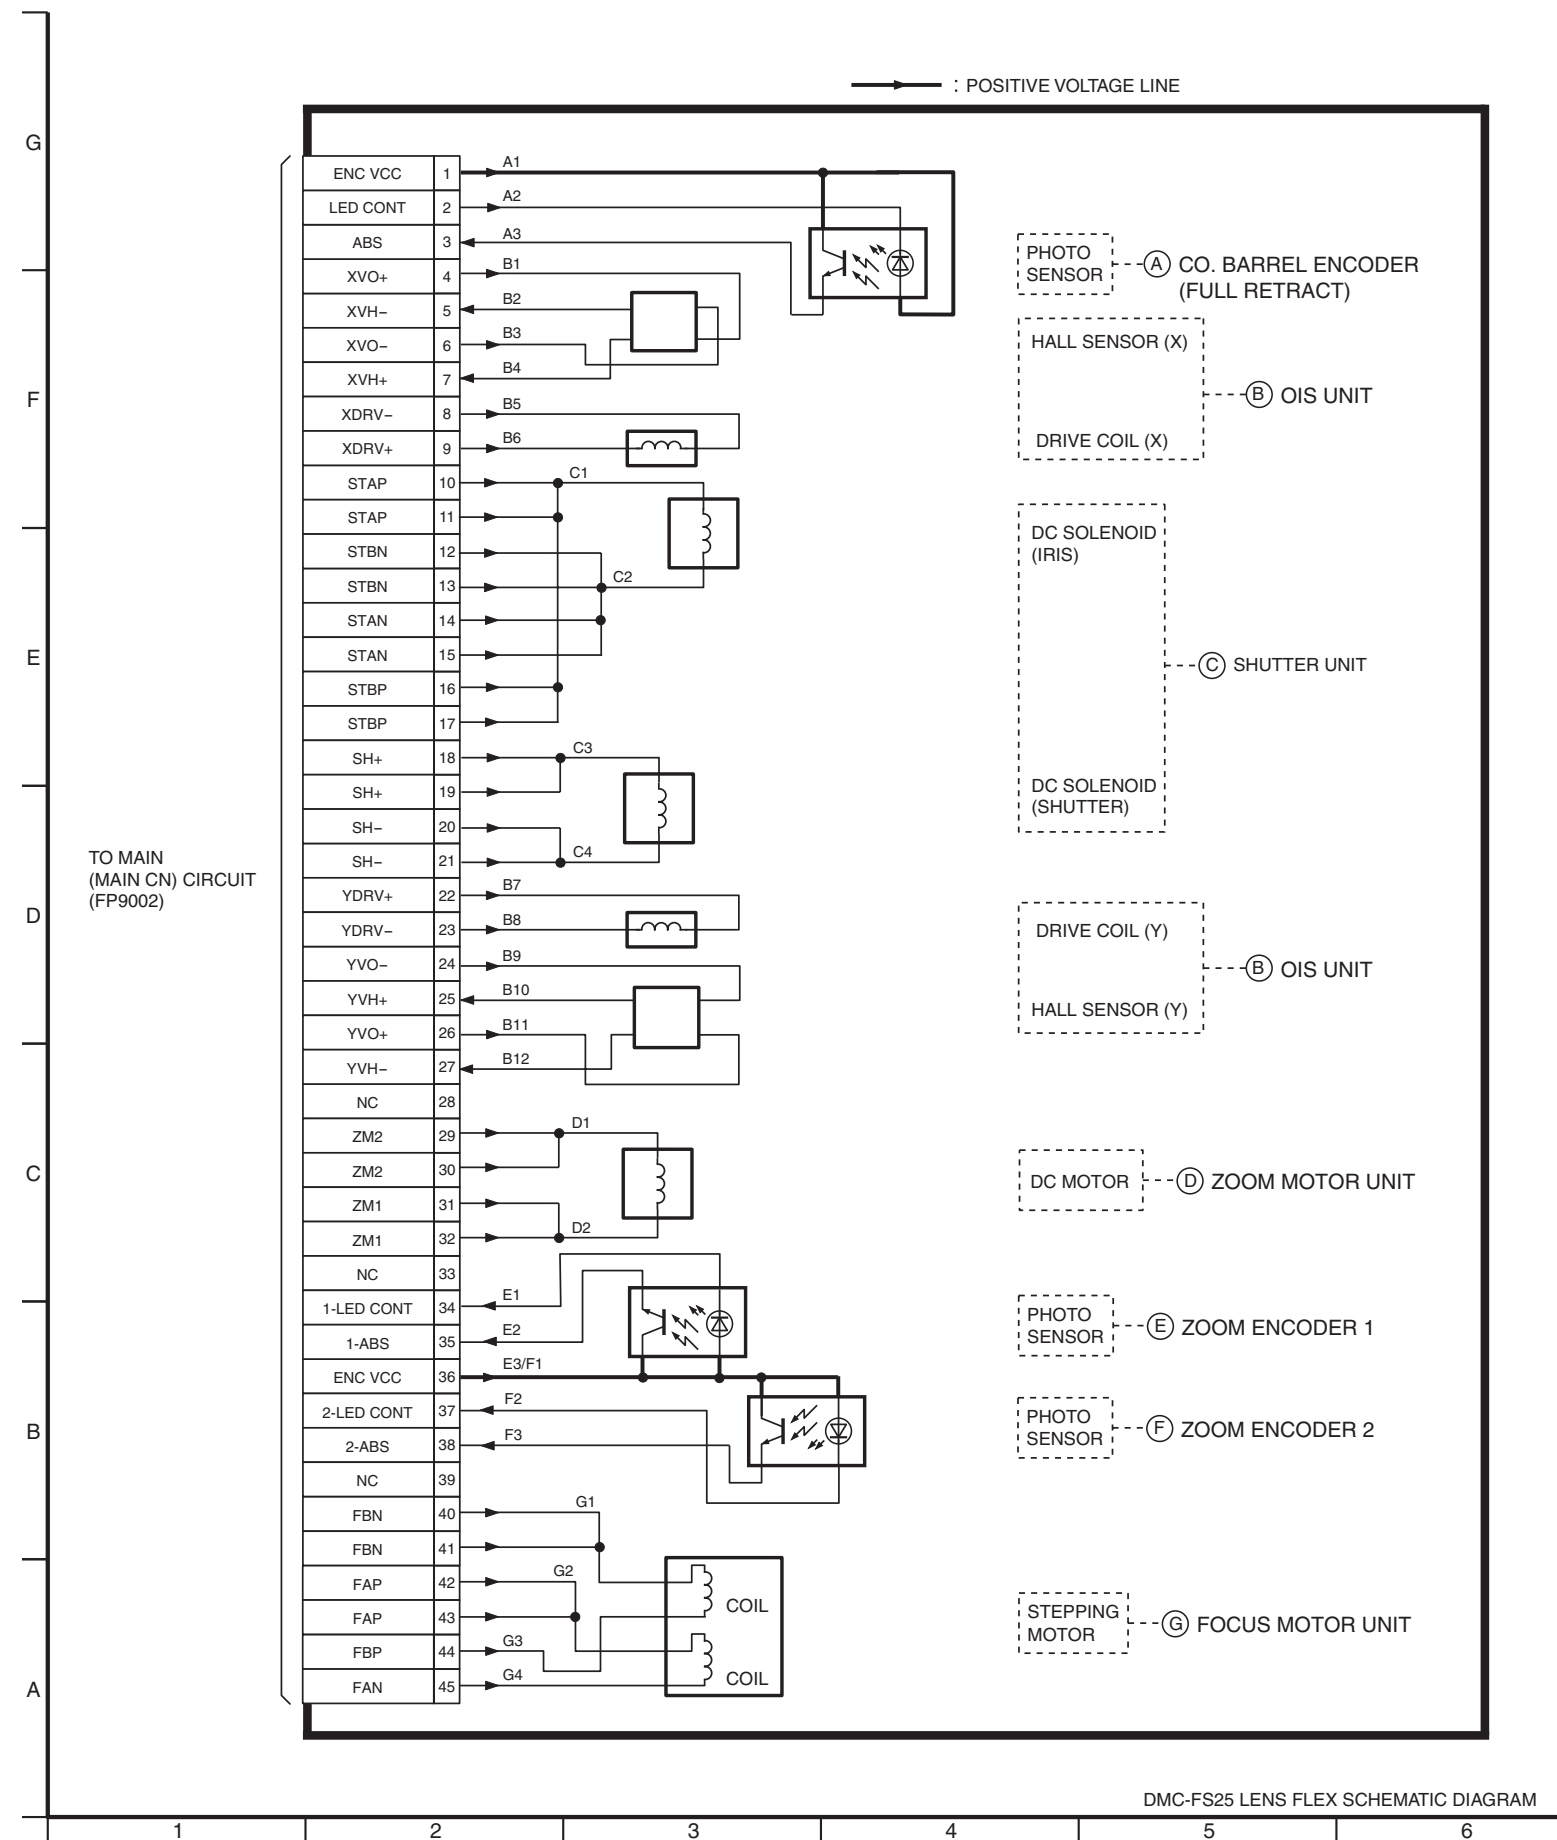


S5. Print Circuit Board

S5.1. Flash Top P.C.B.

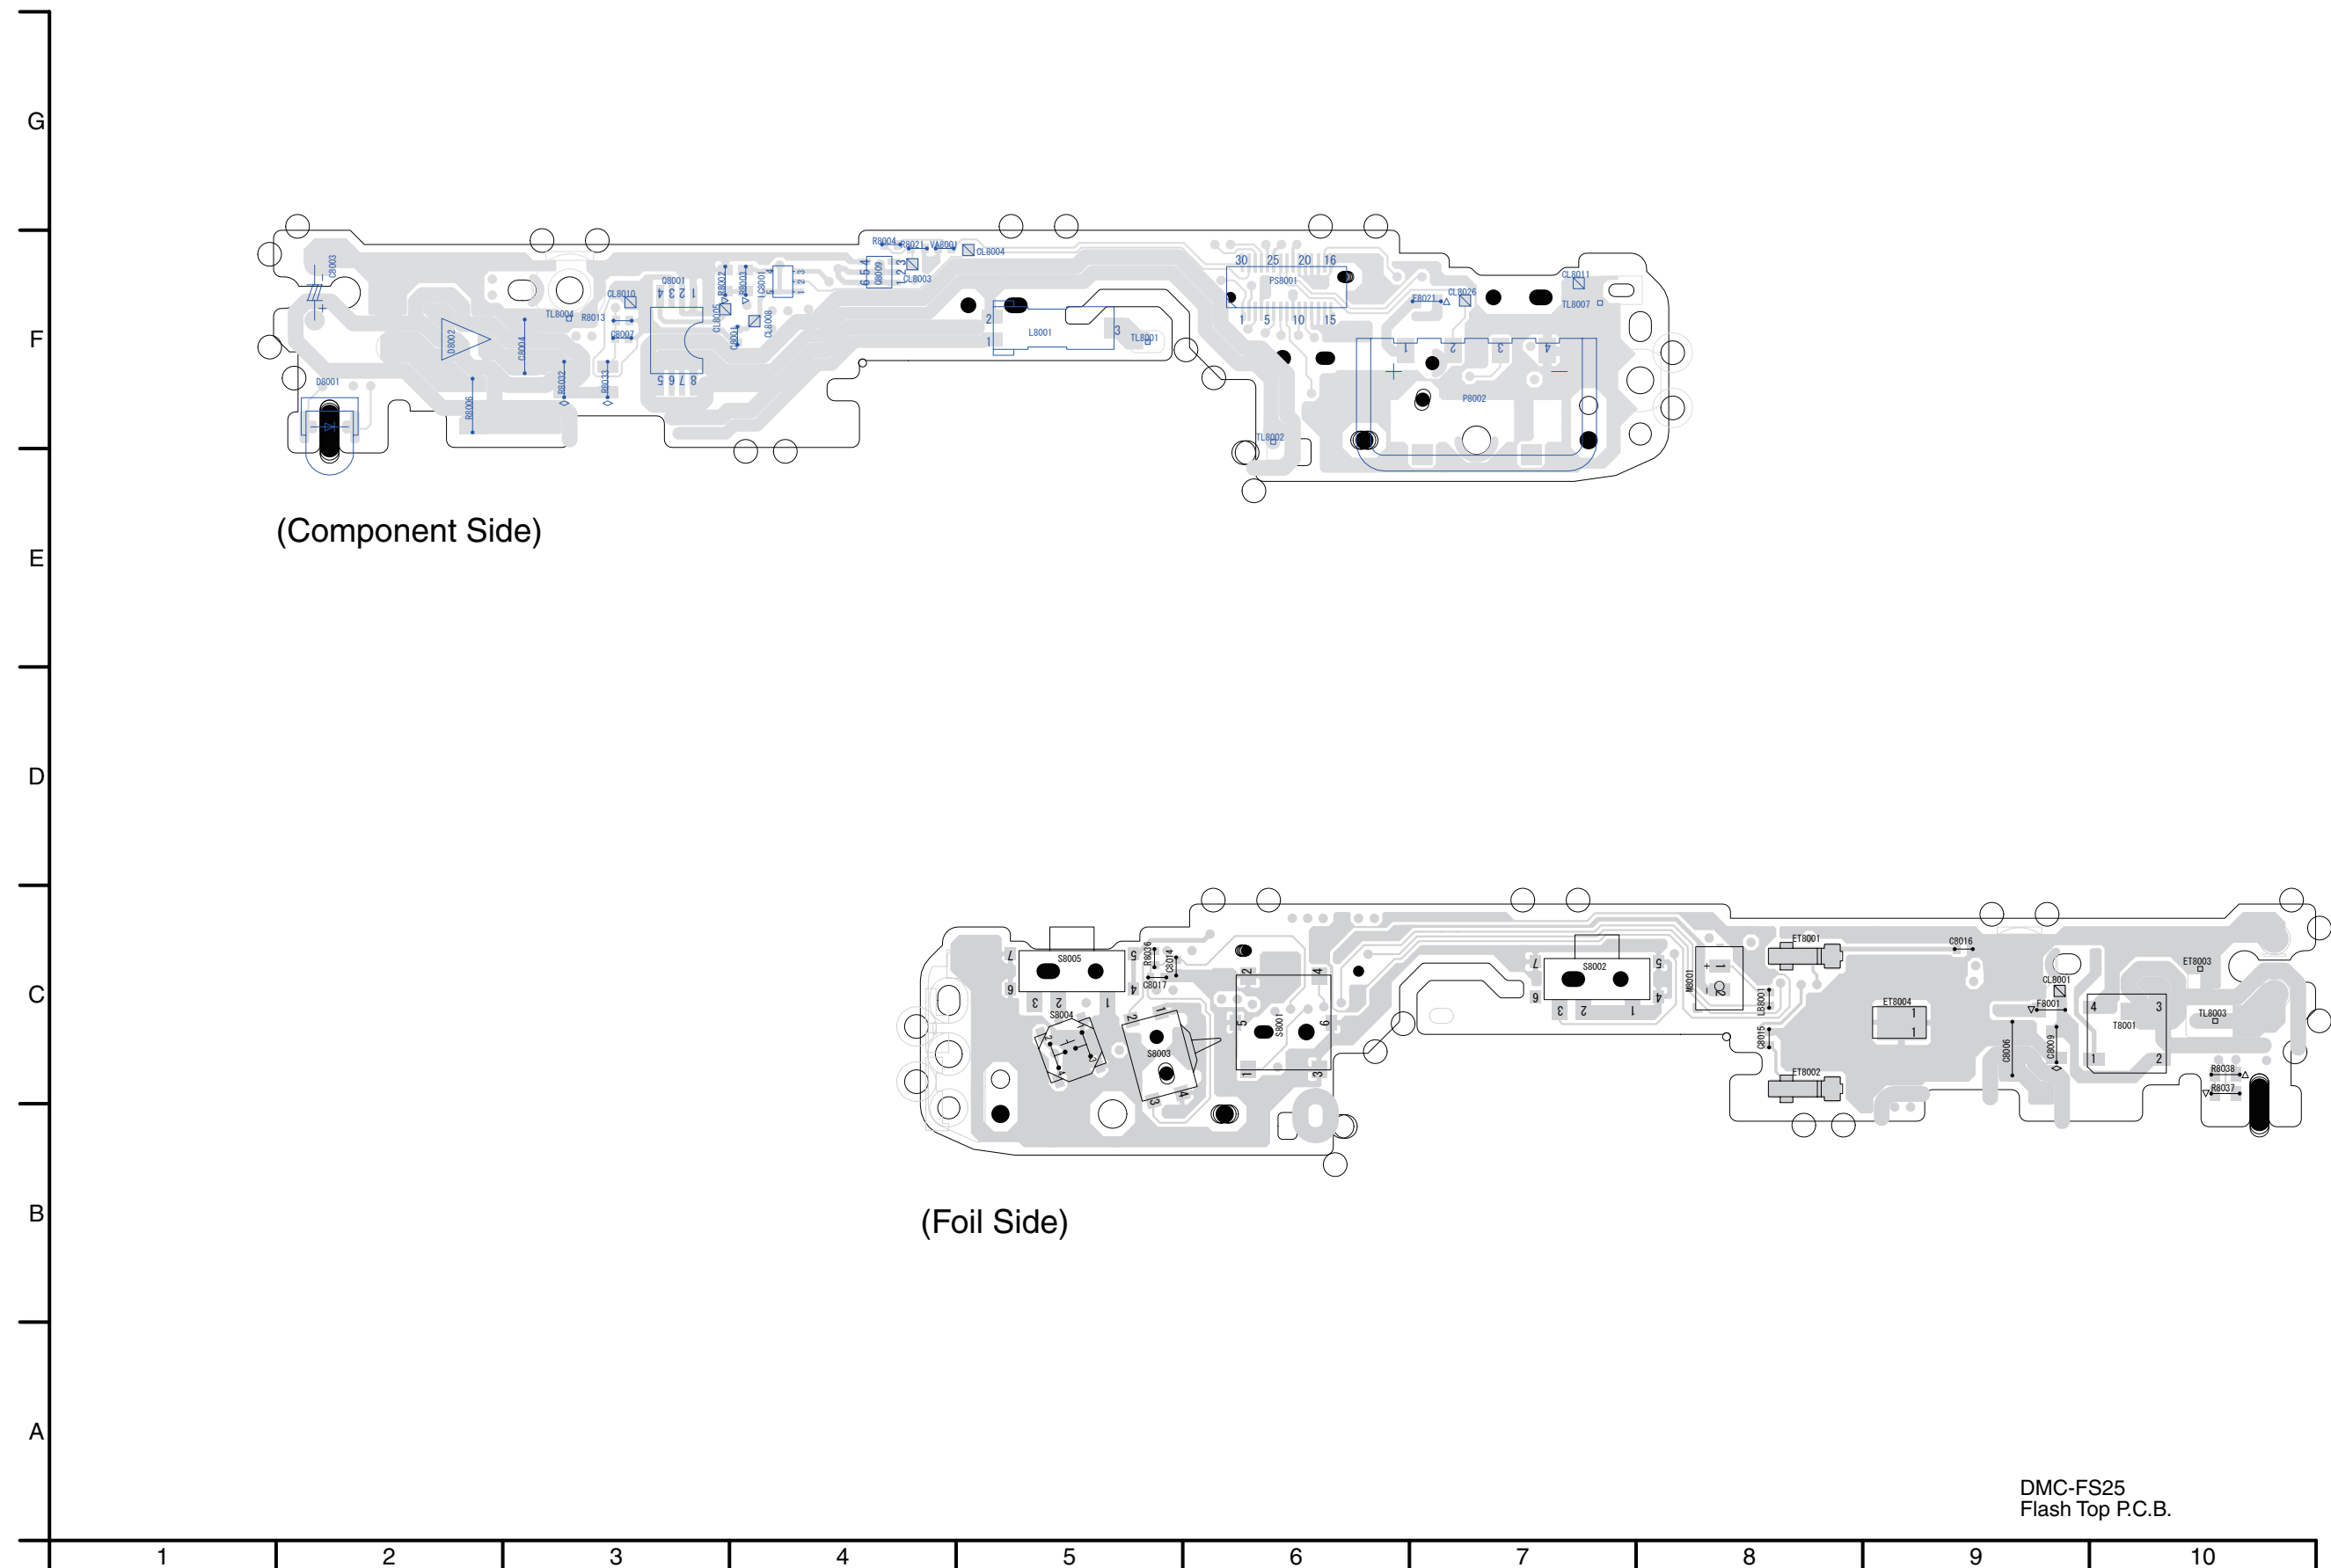


DMC-FS25
Flash Top P.C.B.

S5.2. CCD Flex P.C.B.

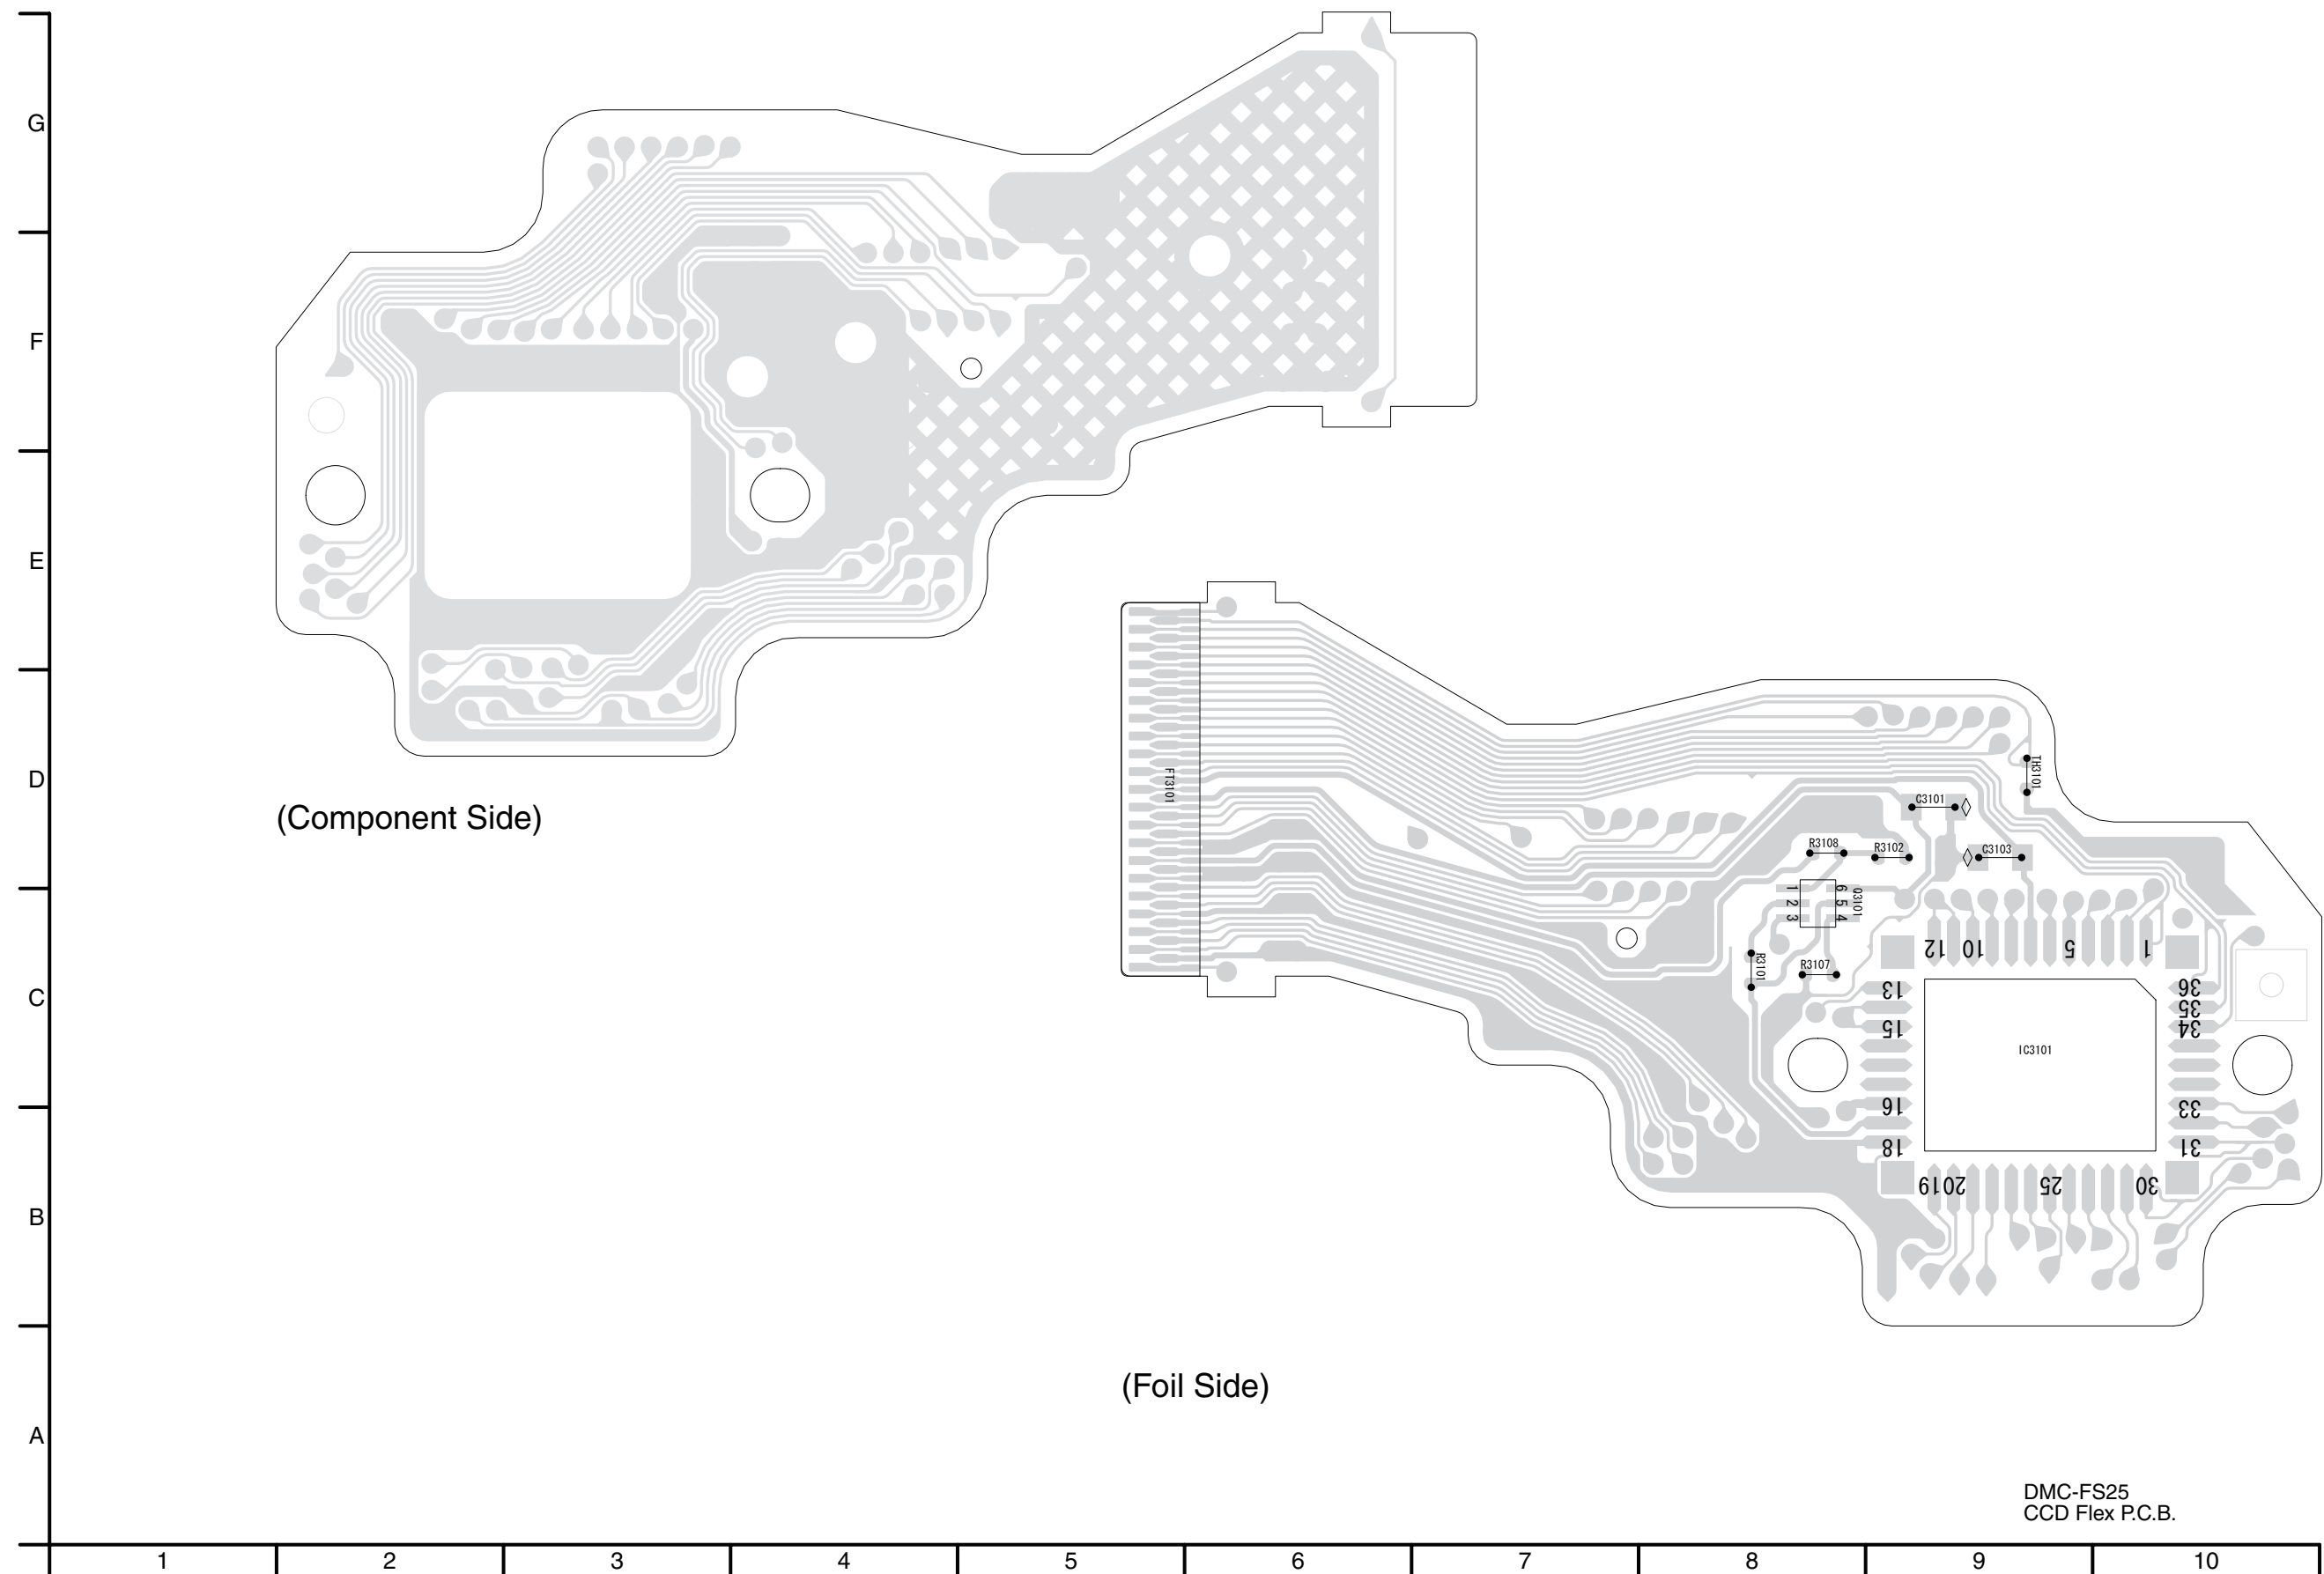


S5.3. Lens Flex P.C.B.

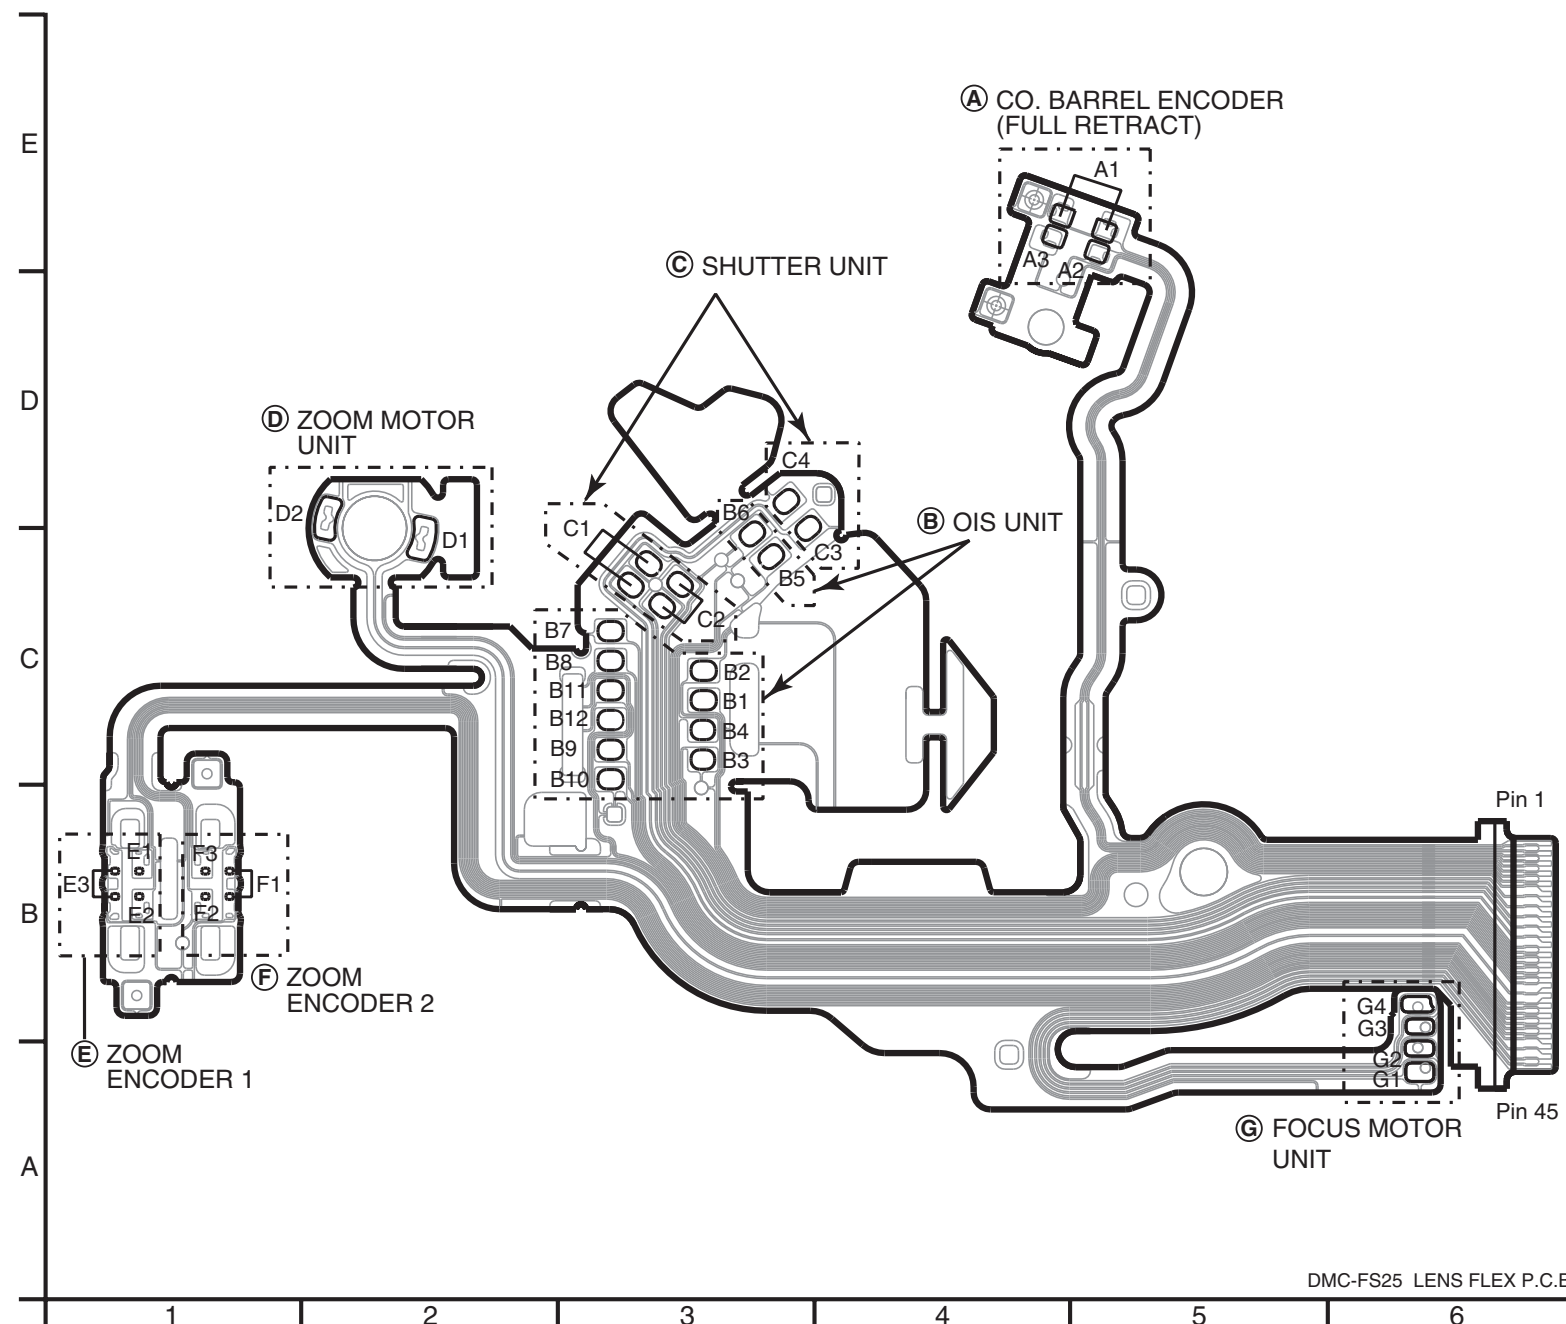

DMC-FS25 LENS FLEX P.C.B.

S6. Replacement Parts List

- Note:
1. * Be sure to make your orders of replacement parts according to this list.
 2. **IMPORTANT SAFETY NOTICE**
Components identified with the mark  have the special characteristics for safety.
When replacing any of these components, use only the same type.
 3. Unless otherwise specified,
All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICRO-FARADS (uf), P=uuF.
 4. The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.
 5. Supply of CD-ROM, in accordance with license protection, is allowable as replacement parts only for customers who accidentally damaged or lost their own.

E.S.D. standards for Electrostatically Sensitive Devices, refer to PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES section.

Definition of Parts supplier:

1. Parts marked with [ENERGY] in the remarks column are supplied from Panasonic Corporation Energy Company.
2. Parts marked with [SPC] in the remarks column are supplied from AVC-CSC-SPC. Others are supplied from PAVCSG.

DMC-FS25P/PC/PU/EG/EP/EF/EB/EE/GC/GT/GK/GD
VEP58076B / VEK0N44

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
		----- P.C.B. LIST -----		
	VEP58076A	MAIN P.C.B.	1	(RTL)E.S.D.
	VEP58076B	FLASH TOP P.C.B.	1	(RTL)E.S.D.
	VEK0N44	CCD UNIT	1	(SPC)E.S.D.
		--- INDIVIDUAL PARTS ---		
▲	C8003	F2A2F9500002	1	E.CAPACITOR
	ET8003	VMB4149	1	EARTH SPRING
		--- ELEC. COMPONENTS ---		
	##	VEP58076B		(RTL)E.S.D.
	C8001	F1G1A1040006	1	C.CAPACITOR CH 10V 0.1U
	C8004	F1K2J102A028	1	C.CAPACITOR 630V 1000P
	C8006	F1K2E4730005	1	C.CAPACITOR 250V 0.047U
	C8009	F1J0J106A020	1	C.CAPACITOR CH 6.3V 10U
	C8014	F1G1A1040006	1	C.CAPACITOR CH 10V 0.1U
	C8015	D4ED18R00008	1	VARISTOR
	C8016	D4ED18R00008	1	VARISTOR
	C8017	F1G0J1050007	1	C.CAPACITOR CH 6.3V 1U
	D8001	B3ADB0000131	1	DIODE
	D8002	B0EDAT000002	1	DIODE
	ET8001	K4AC01D00001	1	EARTH SPRING
	ET8002	K4AC01D00001	1	EARTH SPRING
	ET8004	N9ZZ00000333	1	EARTH SPRING
▲	F8001	ERBSE1R25U	1	FUSE 32V 1.25A
▲	F8021	K5H152200006	1	FUSE
	IC8001	C0ZBZ0001636	1	IC
	L8001	G5F1A0000026	1	CHIP INDUCTOR
	LB8001	J0JCC0000415	1	FILTER
	M8001	L0CBAA000012	1	MICROPHONE
	P8002	K4ZZ04000052	1	CONNECTOR 4P
	PS8001	K1KB30AA0123	1	CONNECTOR 30P
	Q8001	B1JBLP000023	1	TRANSISTOR
	Q8009	B1DFCG000020	1	TRANSISTOR
	R8002	ERJ3GEYJ104V	1	M.RESISTOR CH 1/10W 100K
	R8003	ERJ3GEYJ560V	1	M.RESISTOR CH 1/10W 56
	R8004	ERJ2GE0R00X	1	M.RESISTOR CH 1/16W 0
	R8006	ERJ8GEYJ105V	1	M.RESISTOR CH 1/8W 1M
	R8013	ERJ2RHD153X	1	M.RESISTOR CH 1/16W 15K
	R8021	ERJ2GEJ153X	1	M.RESISTOR CH 1/16W 15K
	R8032	ERJ6RED105V	1	M.RESISTOR CH 1/16W 1M
	R8033	ERJ6RED105V	1	M.RESISTOR CH 1/16W 1M
	R8036	ERJ2GEJ103X	1	M.RESISTOR CH 1/16W 10K
	R8037	ERJ3GEYJ100V	1	M.RESISTOR CH 1/10W 10
	R8038	ERJ3GEYJ100V	1	M.RESISTOR CH 1/10W 10
	S8001	K0F212A00003	1	SWITCH
	S8002	K0D112B00145	1	SWITCH
	S8003	K0L1CB000003	1	SWITCH
	S8004	K0F111A00539	1	SWITCH
	S8005	K0D112B00145	1	SWITCH
	T8001	G5D1A0000066	1	TRANSFORMER
	VA8001	D4ED18R00008	1	VARISTOR
	##	VEK0N44		(SPC)E.S.D.
	C3101	F1H1C105A097	1	C.CAPACITOR CH 16V 1U
	Q3101	UP05C8B00L	1	(SPC)E.S.D.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
R3101	ERJ2GEJ470	M.RESISTOR CH 1/16W 47	1	(SPC)
R3102	ERJ2GEJ182	M.RESISTOR CH 1/16W 1.8K	1	(SPC)
R3107	ERJ2GEJ132	M.RESISTOR CH 1/16W 1.3K	1	(SPC)
R3108	ERJ2GEJ220	M.RESISTOR CH 1/16W 22	1	(SPC)
TH3101	D4CC11030026	NTC THERMISTORS	1	(SPC)

DMC-FS25P/PC/PU/EG/EP/EF/EB/EE/GC/GT/GK/GD

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1	VEP56076A	MAIN P.C.B.	1	(RTL)E.S.D.	100	VXW1024	LENS UNIT(W/O CCD)	1	[SPC]
2	ML-421S/DN	BUTTON BATTERY	1	(B9101)[ENERGY]	101	VDL2316	OPTICAL FILTER	1	[SPC]
3	VEK0N16	SD FPC UNIT	1		102	VEK0N44	CCD UNIT	1	[SPC] E.S.D.
4	VGK3482	SIDE ORNAMENT L	1		103	VMX3650	CCD CUSHION	1	[SPC]
5	VGK3483	SIDE ORNAMENT R	1		104	VXP3105	1ST LENS FRAME UNIT	1	[SPC]
6	VKF4429	JACK DOOR	1		105	VXP3146	FIX/DRIVE/DIRECT FRAME UNIT	1	[SPC]
7	VYK3F18	FRONT CASE UNIT	1	(S)	109	L6DA8BEC0003	ZOOM MOTOR	1	[SPC]
7	VYK3F23	FRONT CASE UNIT	1	(K)	110	VXP3110	2ND LENS FRAME UNIT	1	[SPC]
7	VYK3F24	FRONT CASE UNIT	1	(N)	113	VXQ1699	MASTER FLANGE UNIT	1	[SPC]
8	VYK2W93	BATTERY DOOR UNIT	1	(S)	113-1	L6HA64NC0014	FOCUS MOTOR UNIT	1	[SPC]
8	VYK2W97	BATTERY DOOR UNIT	1	(K)	113-2	VMB4157	FOCUS SPRING	1	[SPC]
8	VYK2W98	BATTERY DOOR UNIT	1	(N)	113-3	VXP3101	3RD LENS FRAME UNIT	1	[SPC]
8-1	VMB4143	BATTERY DOOR SPRING	1		114	VEP50024A	LENS FPC UNIT	1	[SPC]
8-2	VMS7863	BATTERY DOOR SHAFT	1		114-1	B3NBA0000011	PHOTO SENSOR	1	[SPC]
9	VYK3F19	REAR CASE UNIT	1		114-2	B3NBA0000011	PHOTO SENSOR	1	[SPC]
9-1	VGL1288	REAR PANEL LIGHT	1		114-3	B3NBA0000011	PHOTO SENSOR	1	[SPC]
9-2	VGU0D62	CURSOR BUTTON	1						
10	VGQ0B64	PCB SPACER	1		B100	VHD1871	SCREW	1	[SPC]
13	VGQ9717	BATTERY LOCK KNOB	1		B101	VHD1871	SCREW	1	[SPC]
14	VMB4152	BATTERY LOCK SPRING	1		B102	VHD1871	SCREW	1	[SPC]
15	VMB4250	BATTERY OUT SPRING	1		B103	XQN14+CJ4FN	SCREW	1	[SPC]
16	VMP9215	FRAME	1		B104	XQN14+CJ4FN	SCREW	1	[SPC]
17	VMP9374	FRAME PLATE	1		B105	XQN14+CJ4FN	SCREW	1	[SPC]
18	VMP9240	TRIPOD	1		B106	XQN14+CJ4FN	SCREW	1	[SPC]
19	VMP9237	EARTH PLATE	1		B107	VHD2011	SCREW	1	[SPC]
20	VYK2W66	BATTERY CASE UNIT	1		B108	XQN14+CJ4FN	SCREW	1	[SPC]
21	F2A2F9500002	E.CAPACITOR	1	(C8003)	B109	XQN14+CJ4FN	SCREW	1	[SPC]
22	L0AA01A00032	SPEAKER UNIT	1						
23	VEK0N43	FLASH UNIT	1						
24	VEP58076B	FLASH TOP P.C.B.	1	(RTL)E.S.D.					
25	VGL1290	AF PANEL LIGHT	1						
26	VGQ0B86	POWER KNOB BASE	1						
27	VYK3H30	TOP ORNAMENT UNIT	1						
28	VGU0D77	REC/PLAYBACK SELECTOR KNOB	1						
29	VGU0D73	POWER KNOB	1						
30	VGU0D76	IA BUTTON	1						
31	VMB4149	EARTH SPRING	1	(ET8003)					
32	VMP9243	TOP PLATE L	1						
33	VMT1968	MIC DAMPER	1						
34	VYK3F22	LCD UNIT	1						
34-1	VYK3H25	LCD PANEL UNIT	1						
35	VMX3697	LCD CUSHION	1						
37	VGU0D63	SELECT BUTTON	1						
B1	VHD1998	SCREW	1						
B2	VHD1998	SCREW	1						
B3	VHD2081	SCREW	1	(S)(N)					
B3	VHD2082	SCREW	1	(K)					
B4	VHD2081	SCREW	1	(S)(N)					
B4	VHD2082	SCREW	1	(K)					
B5	VHD2081	SCREW	1	(S)(N)					
B5	VHD2082	SCREW	1	(K)					
B6	VHD2081	SCREW	1	(S)(N)					
B6	VHD2082	SCREW	1	(K)					
B7	VHD2083	SCREW	1						
B8	VHD2083	SCREW	1						
B9	VHD2084	SCREW	1						
B10	XQN16+BJ7FN	SCREW	1						
B11	XQN16+BJ7FN	SCREW	1						
B12	XQN16+BJ7FN	SCREW	1						
B13	VHD1803	SCREW	1						
B14	VHD1803	SCREW	1						

DMC-FS25P/PC/PU/EG/EP/EF/EB/EE/GC/GT/GK/GD


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
200	VPF1301	CAMERA BAG	1	P,PC,PU					
201	DE-A59BA/SX	BATTERY CHARGER	1	P,PC,PU					
202	----	BATTERY	1	P,PC,PU					
204	K1HA08AD0002	USB CABLE W/PLUG	1	P,PC,PU					
205	K1HA08CD0028	AV CABLE W/PLUG	1	P,PC,PU					
206	VFC4297-B	HAND STRAP	1	P,PC,PU					
207	VFF0445-S	CD-ROM	1	[SPC]P,PC,PU See"Notes"					
208	VGQ0D56	BATTERY PROTECTION CASE	1	P,PC,PU					
210	VPF1100	BAG, POLYETHYLENE	1	P,PC,PU					
214	VPK3725	PACKING CASE	1	PS					
214	VPK3729	PACKING CASE	1	PK,PCK					
214	VPK3733	PACKING CASE	1	PN,PCN					
214	VPK3734	PACKING CASE	1	PU					
215	VPN6796	CUSHION	1	P,PC,PU					
224	VFF0454-C	CD-ROM (INSTRUCTION BOOK)	1	PU					
225	VQT1W66	SIMPLIFIED O/I (SPANISH)	1	P					
225	VQT1W65	INSTRUCTION BOOK (ENGLISH)	1	P,PC					
225	VQT1W67	INSTRUCTION BOOK (CANADIAN FRENCH)	1	PC					
225	VQT1W68	SIMPLIFIED O/I (SPANISH/PORTUGUESE)	1	PU					
226	VQT1W13	O/I SOFTWARE (ENGLISH/CANADIAN FRENCH)	1	P,PC					
226	VQT1W14	O/I SOFTWARE (SPANISH/PORTUGUESE)	1	PU					
229	VQL1L48-6A	OPERATING LABEL	1	PC					

DMC-FS25P/PC/PU/EG/EP/EF/EB/EE/GC/GT/GK/GD


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
300	VPF1301	CAMERA BAG	1	EXCEPT P,PC,PU	326	VQT1W23	O/I SOFTWARE (CHINESE(SIMPLIFIED))	1	GK
△ 301	DE-A60AA/SX	BATTERY CHARGER	1	EB,EF,EG,EP	326	VQT1W22	O/I SOFTWARE (CHINESE(TRADITIONAL))	1	GT
△ 301	DE-A60BA/SX	BATTERY CHARGER	1	EE,GC,GD,GK					
△ 301	DE-A60CA/SX	BATTERY CHARGER	1	GT					
△ 302	----	BATTERY	1	EXCEPT P,PC,PU					
304	K1HA08AD0002	USB CABLE W/PLUG	1	EXCEPT P,PC,PU					
305	K1HA08CD0028	AV CABLE W/PLUG	1	EXCEPT P,PC,PU					
306	VFC4297-B	HAND STRAP	1	EXCEPT P,PC,PU					
307	VFF0445-S	CD-ROM	1	[SPC]EB,EE,EF,EG,EP, GC,GD,GT See*Notes*					
307	VFF0446-S	CD-ROM	1	[SPC]GK See*Notes*					
308	VGQ0D56	BATTERY PROTECTION CASE	1	EXCEPT P,PC,PU					
310	VPF1100	BAG, POLYETHYLENE	1	EXCEPT P,PC,PU					
314	VPK3726	PACKING CASE	1	EBS,EES,EGS,EPS,GCS					
314	VPK3727	PACKING CASE	1	GKS					
314	VPK3730	PACKING CASE	1	EBK,E EK,EFK,EGK,EPK,GCK, GDK,GTK					
314	VPK3731	PACKING CASE	1	GKK					
314	VPK3735	PACKING CASE	1	EEN,GCN,GTN					
314	VPK3736	PACKING CASE	1	GKN					
315	VPN6797	CUSHION	1	EXCEPT P,PC,PU					
318	VQL1G34-6A	OPERATING LABEL	1	GT					
△ 319	K2CT3CA00004	AC CORD W/PLUG	1	EB,GC					
△ 320	K2CQ2CA00006	AC CORD W/PLUG	1	EE,EF,EG,EP,GC					
△ 320	K2CR2CA00003	AC CORD W/PLUG	1	GD					
△ 322	K2CA2CA00020	AC CORD W/PLUG	1	GK					
△ 322	K2CA2CA00027	AC CORD W/PLUG	1	GT					
△ 324	VFF0454-C	CD-ROM (INSTRUCTION BOOK)	1	EG,EP					
△ 324	VFF0455-C	CD-ROM (INSTRUCTION BOOK)	1	GC					
△ 325	VQT1W77	INSTRUCTION BOOK (ENGLISH)	1	EB					
△ 325	VQT1W79	INSTRUCTION BOOK (UKRAINIAN)	1	EE					
△ 325	VQT1W76	INSTRUCTION BOOK (FRENCH)	1	EF					
△ 325	VQT1W70	SIMPLIFIED O/I (GERMAN/FRENCH)	1	EG					
△ 325	VQT1W71	SIMPLIFIED O/I (ITALIAN/DUTCH)	1	EG					
△ 325	VQT1W72	SIMPLIFIED O/I (SPANISH/PORTUGUESE)	1	EG					
△ 325	VQT1W73	SIMPLIFIED O/I (SWEDISH/DANISH)	1	EP					
△ 325	VQT1W74	SIMPLIFIED O/I (POLISH/CZECH)	1	EP					
△ 325	VQT1W75	SIMPLIFIED O/I (HUNGARIAN/FINNISH)	1	EP					
△ 325	VQT1W80	SIMPLIFIED O/I (ENGLISH/CHINESE(TRADITIONAL))	1	GC					
△ 325	VQT1W81	SIMPLIFIED O/I (ARABIC/PERSIAN)	1	GC					
△ 325	VQT1W86	INSTRUCTION BOOK (KOREAN)	1	GD					
△ 325	VQT1W84	INSTRUCTION BOOK (CHINESE(SIMPLIFIED))	1	GK					
△ 325	VQT1W83	INSTRUCTION BOOK (CHINESE(TRADITIONAL))	1	GT					
△ 325	VQT1W78	INSTRUCTION BOOK (RUSSIAN)	1	EE					
326	VQT1W18	O/I SOFTWARE (ENGLISH)	1	EB					
326	VQT1W19	O/I SOFTWARE (RUSSIAN/UKRAINIAN)	1	EE					
326	VQT1W17	O/I SOFTWARE (FRENCH)	1	EF					
326	VQT1W15	O/I SOFTWARE (GERMAN/FRENCH/ITALIAN/ DUTCH/SPANISH/PORTUGUESE)	1	EG					
326	VQT1W16	O/I SOFTWARE (FINNISH/SWEDISH/DANISH/ POLISH/CZECH/HUNGARIAN)	1	EP					
326	VQT1W20	O/I SOFTWARE (ENGLISH/CHINESE(TRADITIONAL)/ ARABIC/PERSIAN)	1	GC					
326	VQT1W25	O/I SOFTWARE (KOREAN)	1	GD					

S7. Exploded View


S7.1. Frame and Casing Section

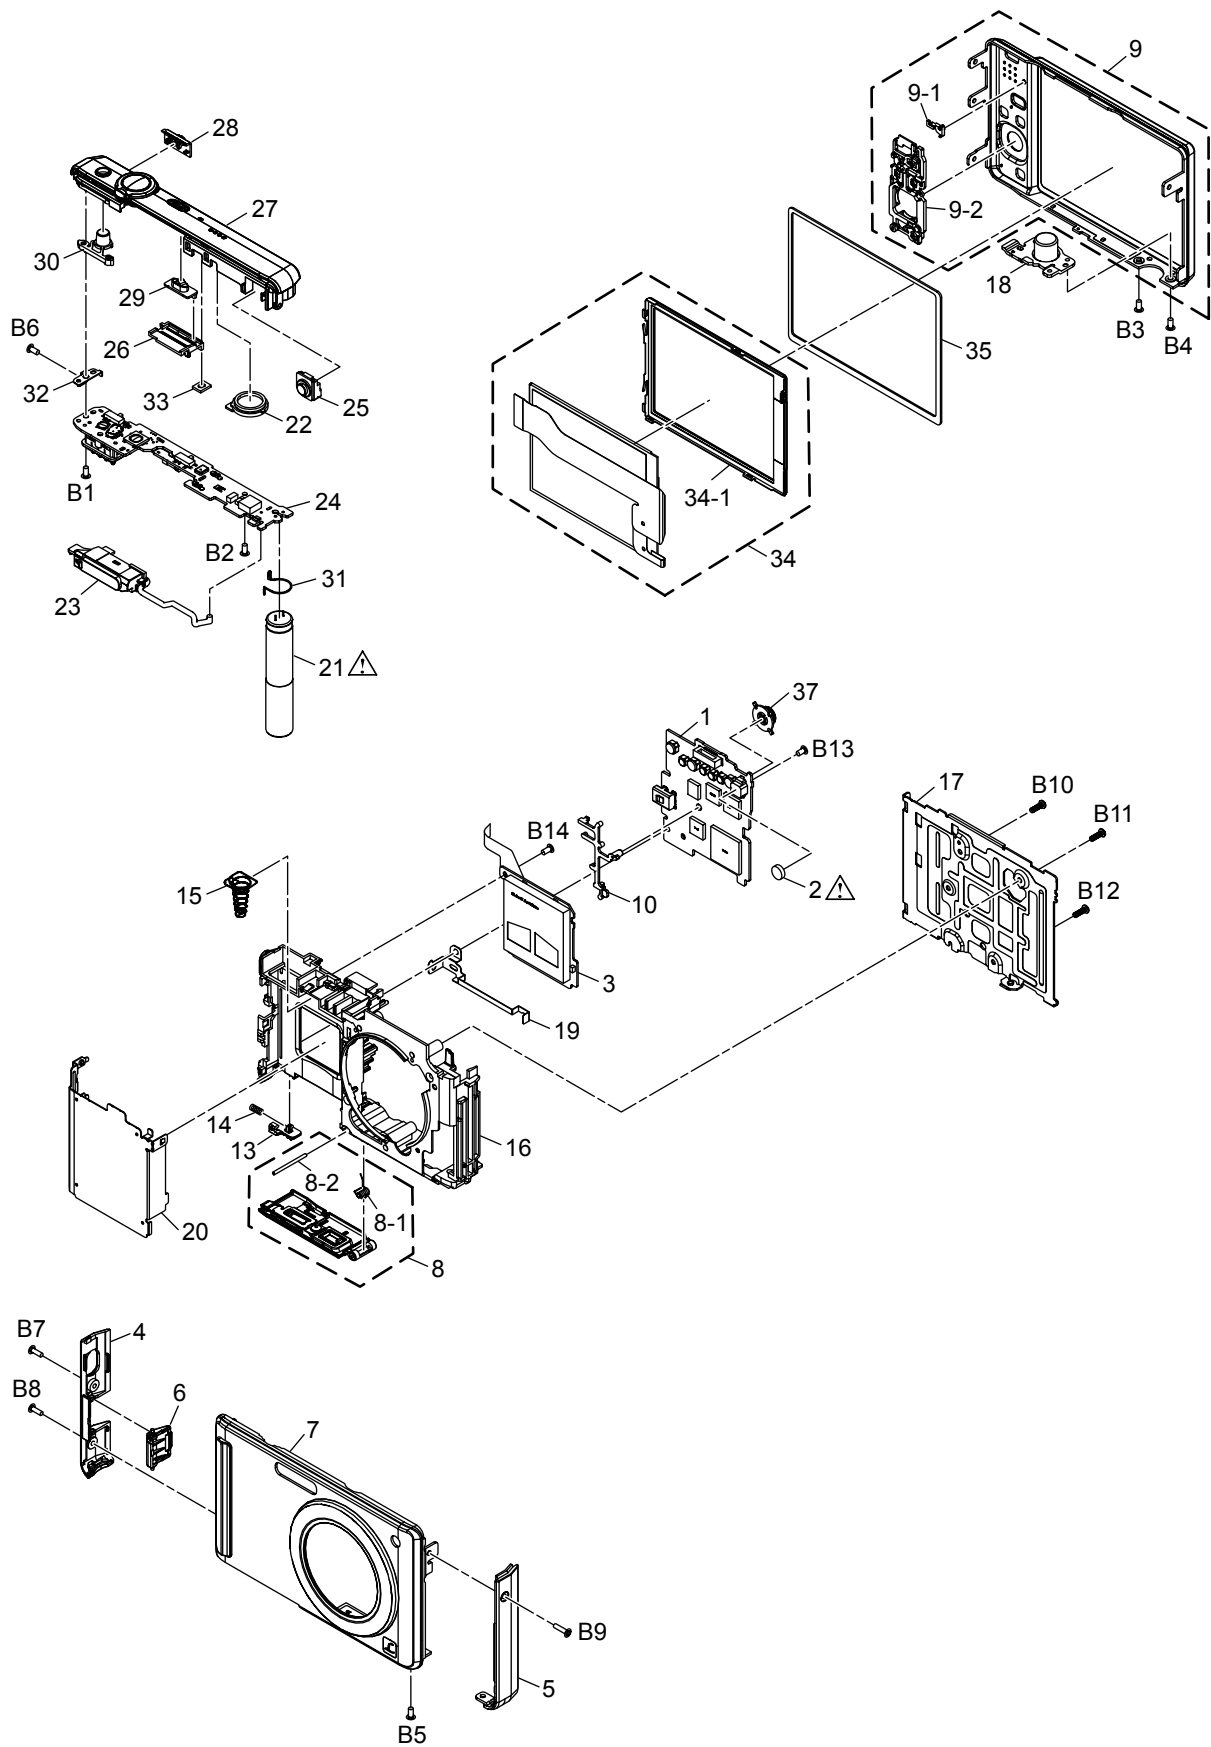

S7.2. Camera Lens Section

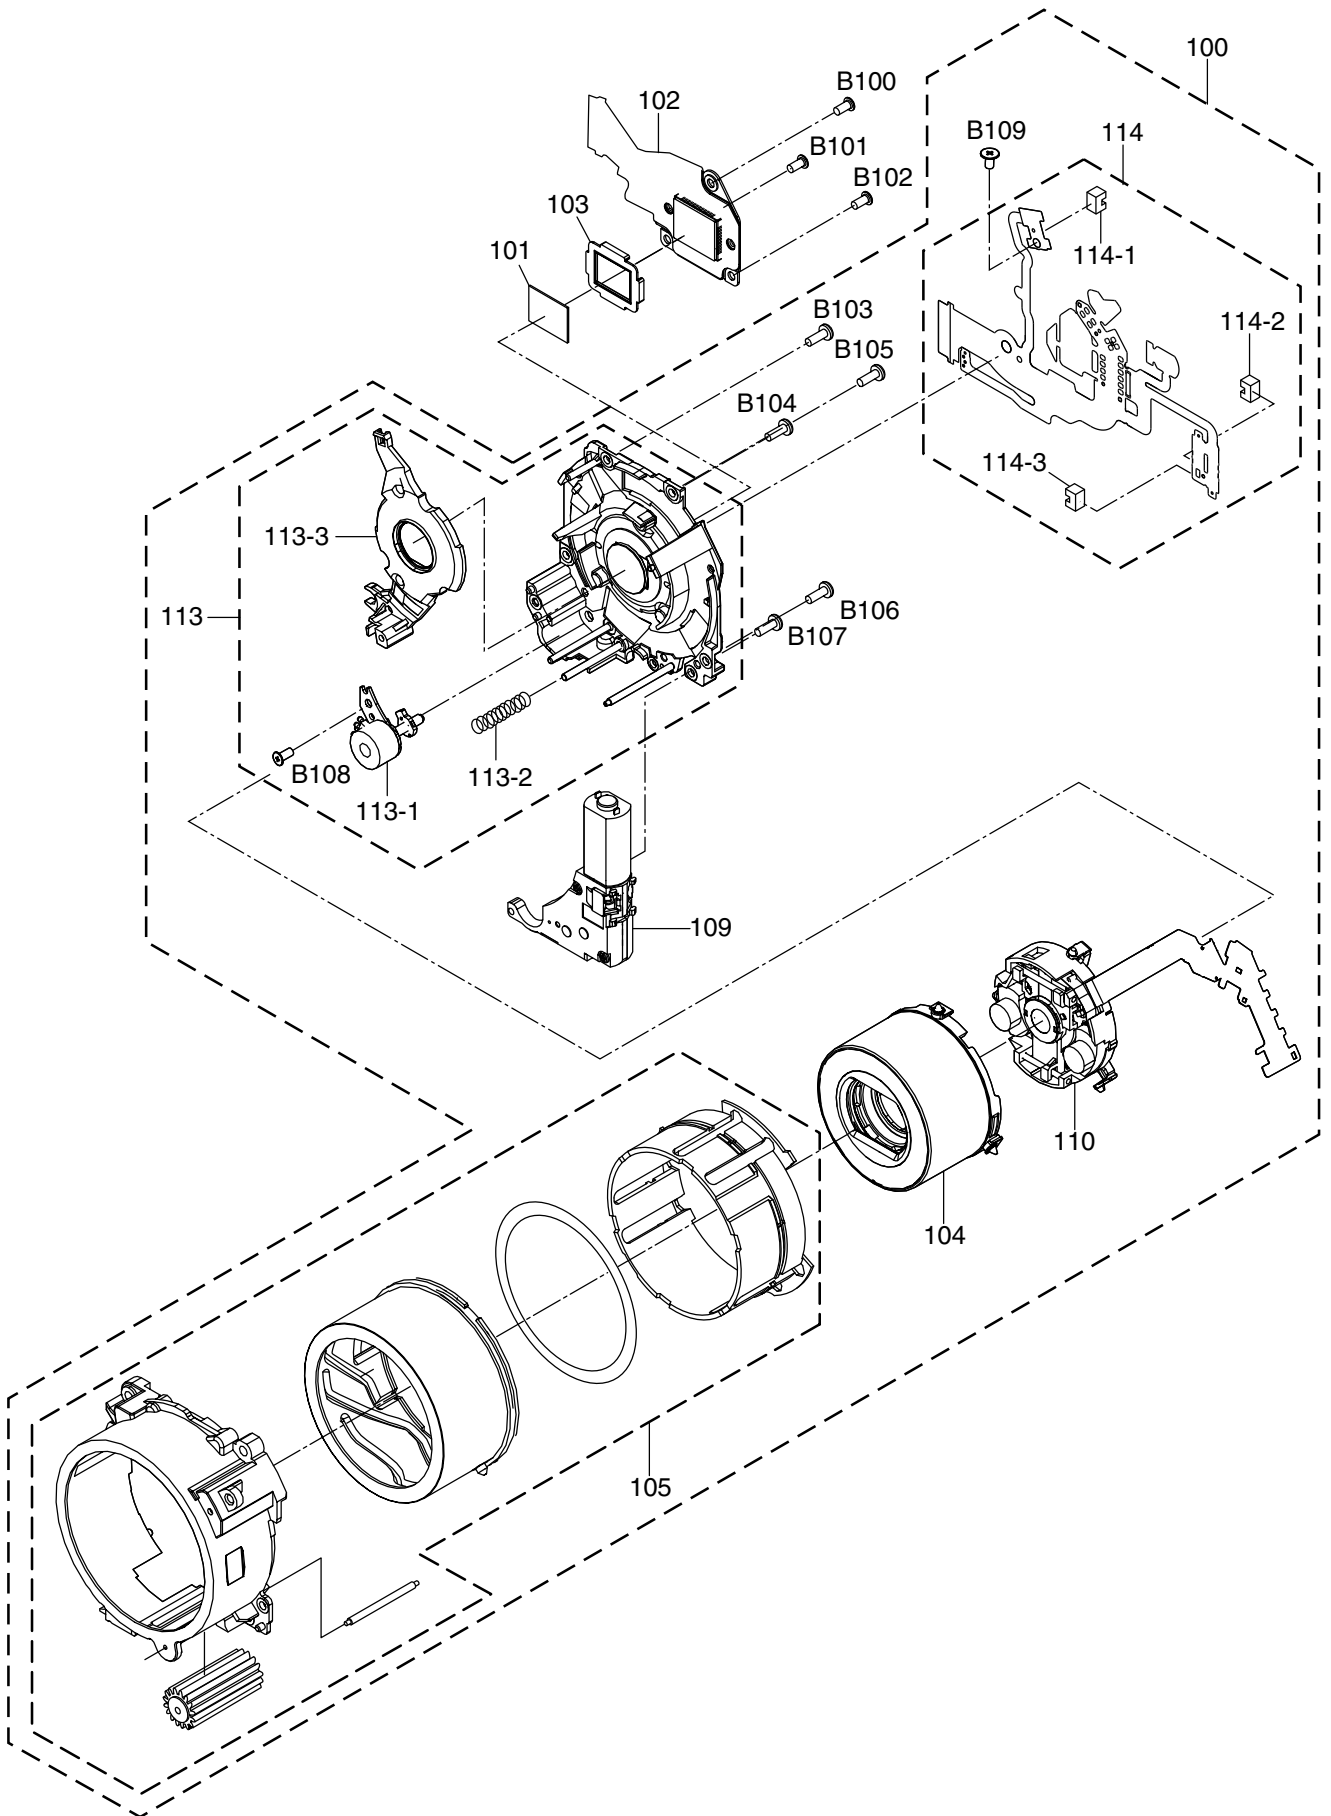

S7.3. Packing Parts and Accessories Section (1)

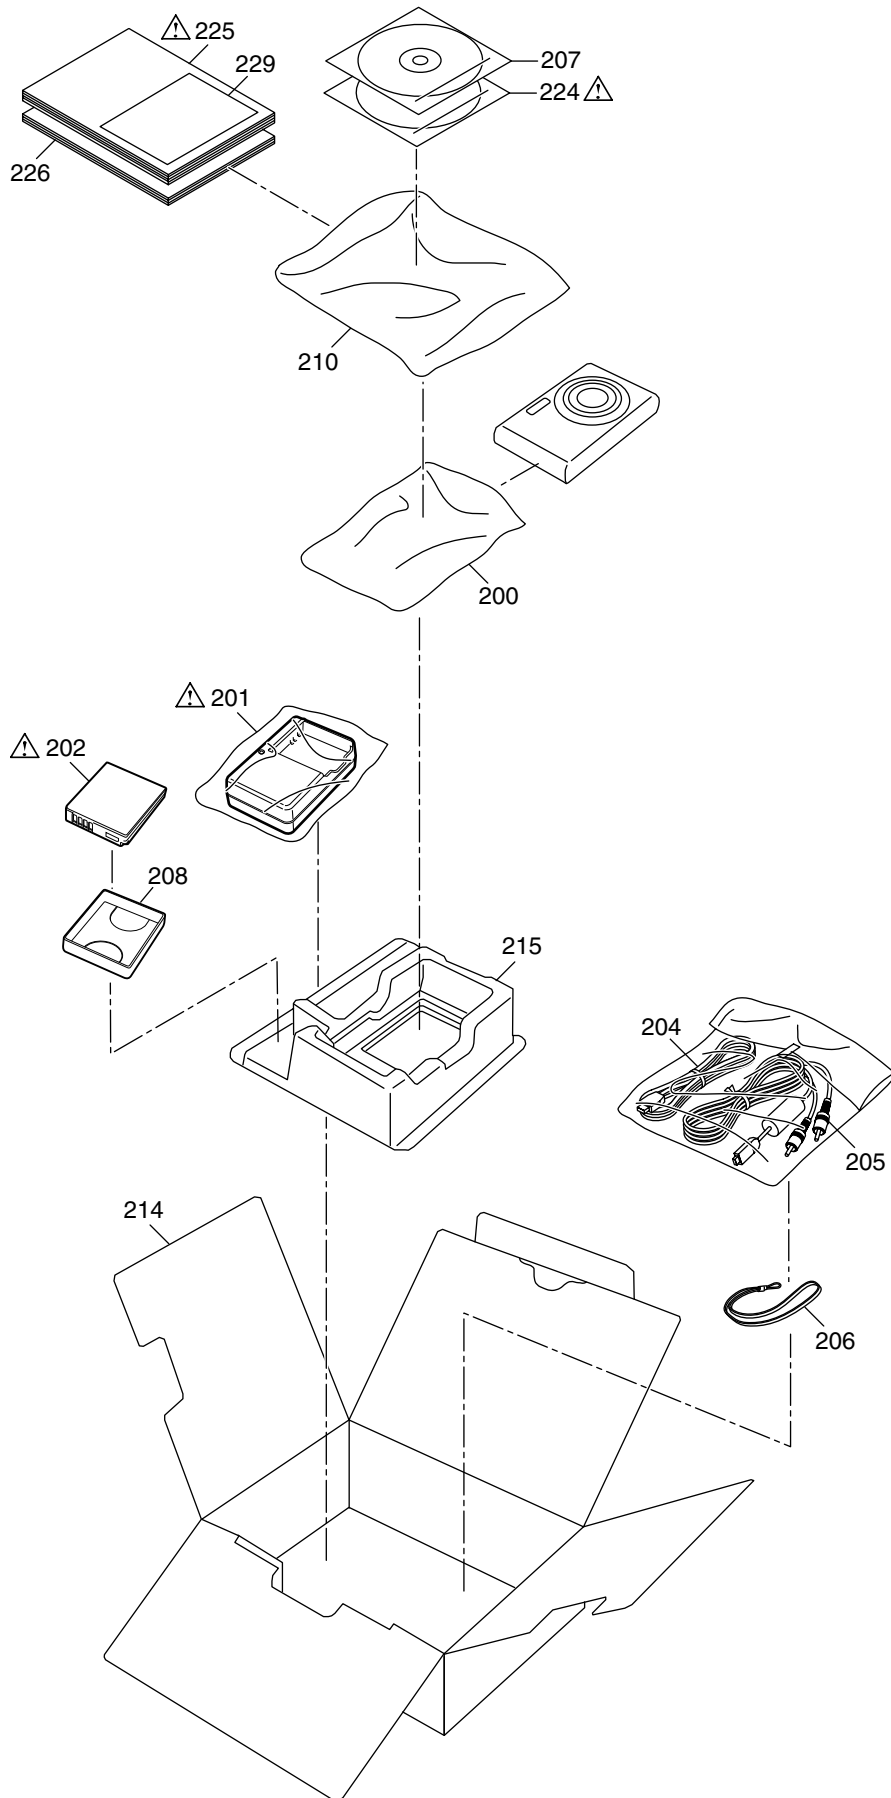

S7.4. Packing Parts and Accessories Section (2)

