


Service Manual

Microwave Oven

NN-GD579S

WTT (Taiwan)

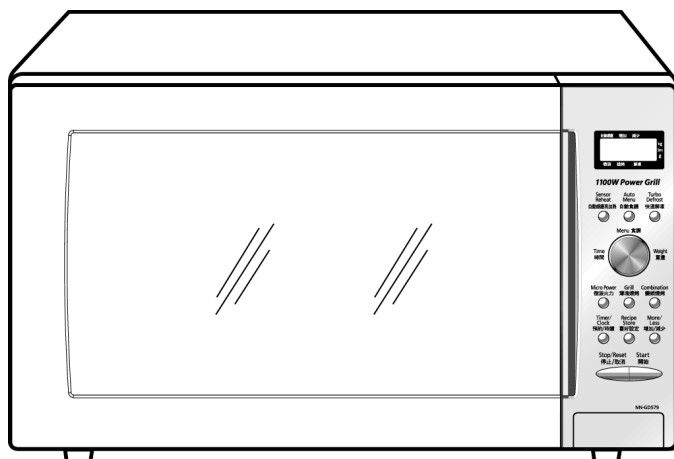


Specifications:

Model:		NN-GD579S
Specifications:		
Power Source:		110V AC Single Phase, 60Hz
Power Consumption:	Microwave	1450W
	Heater	1050W
Output:	Microwave	1000W
	Heater	1100W
Microwave Frequency:		2450MHz
Timer:		30 Min. / Stage (HIGH Power Level) ~ 3 Stage Maximum 90 Min. 00 Sec. / Stage (Other Power Level) ~ 3 Stage Maximum
Outside Dimensions:		510mm(W) x 392mm(D) x 304mm(H)
Oven Cavity Dimensions:		359mm(W) x 352mm(D) x 217mm(H)
Net Weight:		12.5 kg
PbF		This product with PbF
Specifications subject to change without notice.		

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
3. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
4. There are special components used in the microwave oven which are important for safety. These parts are marked with a  on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the original design.

This service manual covers products for following markets.

When troubleshooting or replacing parts, please refer to the country identifications shown below for your applicable product specification.

WTT For Taiwan

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

- Caution:**
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 30 - 40°C higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to $370 \pm 10^{\circ}\text{C}$.
 - Pb free solder will tend to splash when heated too high (about 600°C).

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

⚠ WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. Take cautionary measures when disassembling and troubleshooting the Inverter circuit. Improper handling can result in an electrical shock or burns, which might lead to injury or death.

IT HAS: 1. Very high voltage and high current circuits.


It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.

2. Aluminum heat sink that is energized with very high voltage and high heat energy.
3. Very high voltage which may remain in circuitry even when oven is off. High voltage charge may remain in the capacitors on the board.

DO NOT:

- * 1. Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage charge may remain in circuits.
- * 2. Do not touch aluminum heat sink because it is energized with very high voltage and is also very hot in high heat energy.
- * 3. Do not try to adjust or tamper with preset control on the Inverter board because it is very dangerous to adjust without proper test equipment.
- * 4. Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.

INVERTER POWER SUPPLY

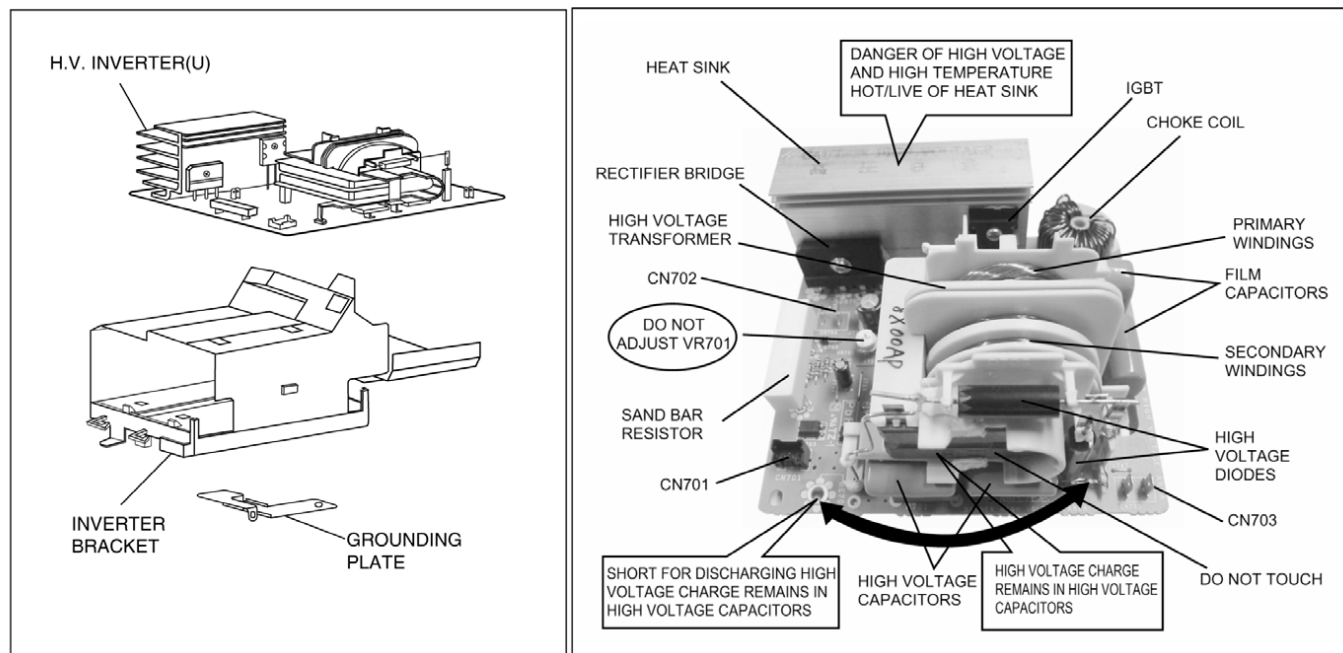


CONTENTS

	Page		Page
1 FEATURE CHART	5	7 COMPONENT TEST PROCEDURE	16
2 CONTROL PANEL	5	7.1. Primary, Secondary Latch Switch interlocks & Power Relay RY1	16
3 SCHEMATIC DIAGRAM	6	7.2. Short Switch	16
4 DESCRIPTION OF OPERATING SEQUENCE	7	7.3. Magnetron	16
4.1. Variable power cooking control	7	7.4. Inverter power supply (U)	17
4.2. Inverter power supply circuit	7	7.5. Temperature thermistor	17
4.3. Turbo defrost, Auto cook	7	8 MEASUREMENTS AND ADJUSTMENTS	18
4.4. Sensor cooking	7	8.1. Adjustment of primary latch switch, secondary latch switch and short switch.	18
4.5. Sensor reheat	8	8.2. Measurement of microwave output	18
4.6. Steam sensor and digital programmer circuit	8	9 TROUBLESHOOTING GUIDE	19
4.7. Grill cooking control	8	9.1. (Troubleshooting) Oven stops operation during cooking -	19
4.8. Combination Cooking	8	9.2. (Troubleshooting) Other problems	20
5 CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING -	9	9.3. Troubleshooting of inverter circuit (U) and magnetron ----	21
5.1. Check the grounding	9	9.4. Trouble related to Digital Programmer Circuit	22
5.2. Inverter warnings	9	9.5. SIMPLE WAY OF H.V. INVERTER/MAGNETRON TROUBLESHOOTING	23
5.3. Part replacement.	10	9.6. H.V.INVERTER BOARD MAIN PARTS LIST (F606Y8X00AP)	23
5.4. When the 20A fuse is blown due to the malfunction of the short switch:	10	9.7. How to check the semiconductors using an OHM meter -	24
5.5. Avoid inserting nails, wire etc. through any holes in the unit during operation.	10	10 EXPLODED VIEW AND PARTS LIST	25
5.6. Verification after repair	10	10.1. EXPLODED VIEW	25
5.7. Sharp edges	10	10.2. PARTS LIST	26
6 DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE -	11	10.3. ESCUTCHEON BASE ASSEMBLY	27
6.1. Magnetron	11	10.4. DOOR ASSEMBLY	28
6.2. Digital programmer circuit (D.P.C)	11	10.5. WIRING MATERIALS	29
6.3. Low voltage transformer and/or power relays (RY1, RY2)	12	10.6. PACKING AND ACCESSORIES	30
6.4. Fan motor	13	11 DIGITAL PROGRAMMER CIRCUIT	31
6.5. Door assembly	13	11.1. SCHEMATIC DIAGRAM	31
6.6. Turntable motor	14	11.2. PARTS LIST	33
6.7. Quartz heater	14		
6.8. Inverter power supply	15		

1 FEATURE CHART

FEATURE	MODEL	NN-GD579S
3 Stage Cooking		○
Microwave		○
Grill		○
Combination		○
Auto Weight Cook		○
Auto Weight Turbo Defrost		○
Sensor Cook		○
Sensor Reheat		○
Recipe Store		○
Timer		○
Clock		○
Child Safety Lock		○

2 CONTROL PANEL

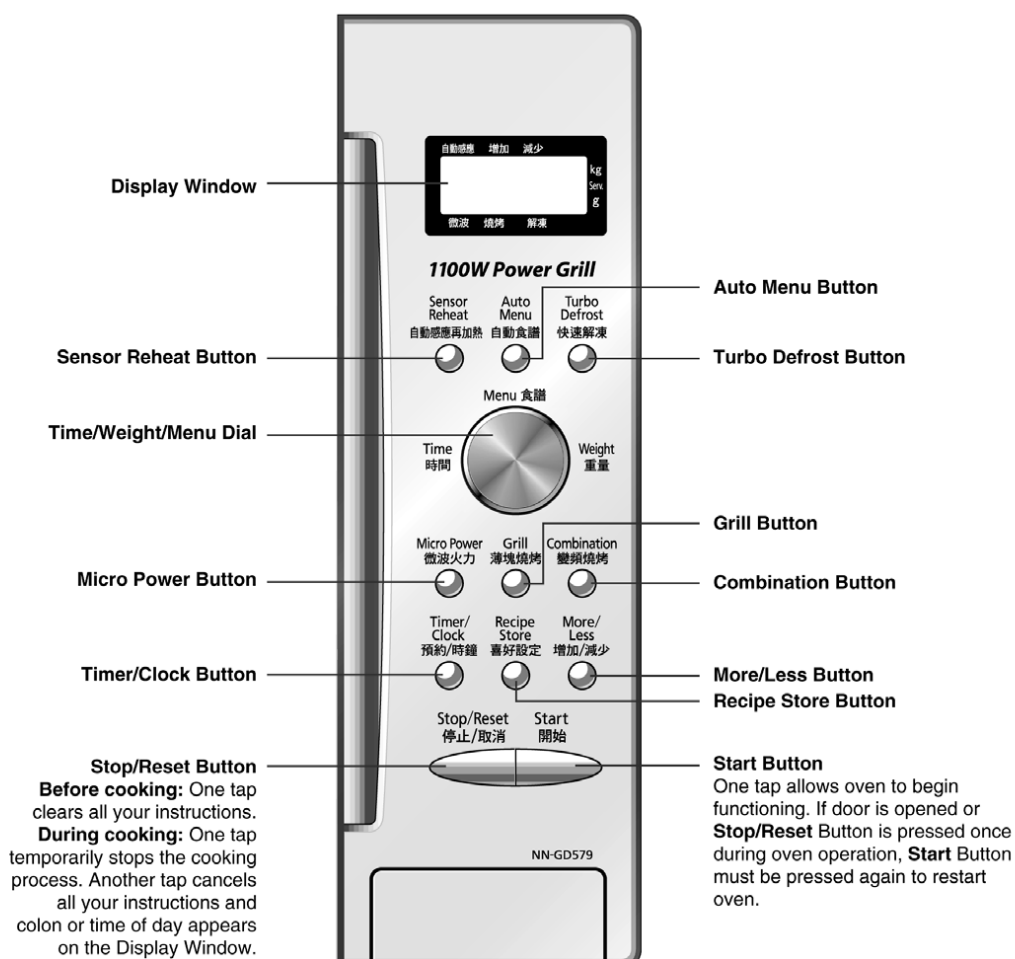


Beep Sound:

When a button is pressed correctly, a beep will be heard. If a button is pressed and no beep is heard, the unit did not or cannot accept the instruction. The oven will beep twice between programmed stages. At the end of any complete program, the oven will beep 5 times.

Note:

If no operation after cooking program setting, 6 minutes later, the oven will automatically cancel the cooking program. The display will return to clock or colon display.

3 SCHEMATIC DIAGRAM

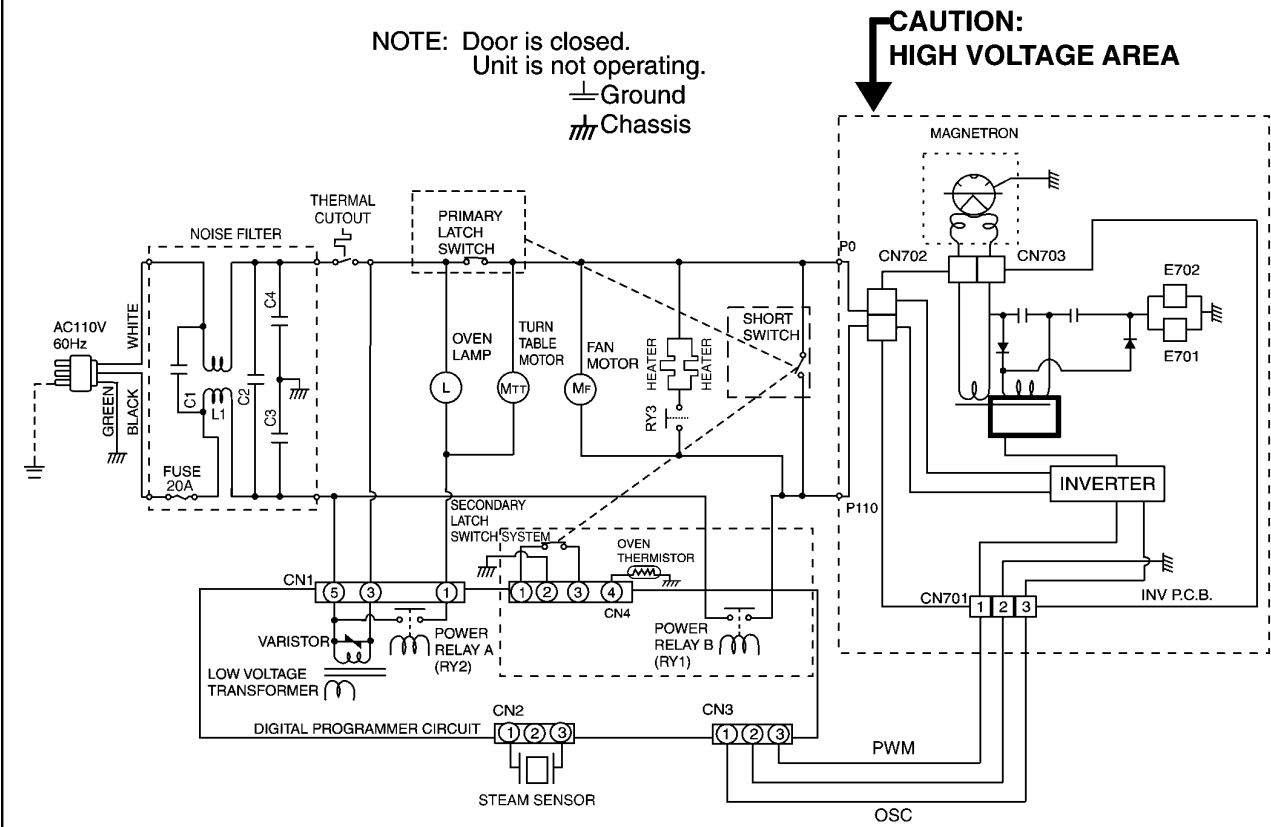


WIRING DIAGRAM

NOTE: * When replacing, check the lead wire color as shown.
*Colors shown by () indicate colors of lead wire connector housing.




WARNING:H.V.


PRIMARY LATCH SWITCH TOP

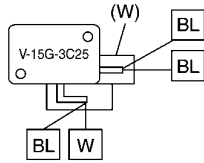


SHORT SWITCH MIDDLE

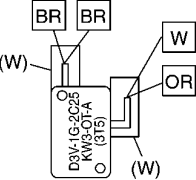


SECONDARY LATCH SWITCH BOTTOM

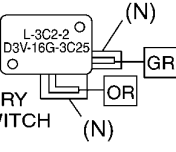



POWER RELAY B (RY1)

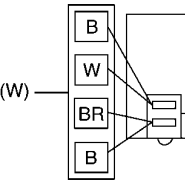

POWER RELAY (RY3)

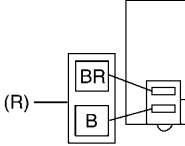

MAGNETRON

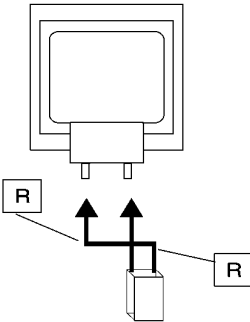

HIGH VOLTAGE INVERTER

SYMBOL	COLOR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK
N	NATURAL

(S-9H6)

4 DESCRIPTION OF OPERATING SEQUENCE

4.1. Variable power cooking control

High Voltage Inverter Power Supply (U) controls output power by the signal from Digital Programmer Circuit (DPC). Power relay always stay on, but PWM (Pulse Width Modulation) signal controls microwave output power.

NOTE:

The ON/OFF time ratio does not correspond with the percentage of microwave power since approximately 2 seconds are required for heating of magnetron filament.

Variable Power Cooking

POWER SETTING	OUTPUT POWER(%) APPROX.	MANUAL MICROWAVE DUTY	
		ON(Sec.)	OFF(Sec.)
HIGH	100%	22	0
MEDIUM-HIGH	70%	22	0
MEDIUM	55%	22	0
MEDIUM-LOW	30%	22	0
LOW	10%	9	13
DEFROST	30%	17	5

4.2. Inverter power supply circuit

The Inverter Power Supply circuit powered from the line voltage, 110V 60Hz AC input supplies 4,000V DC to the magnetron tube, and functions in place of the H.V. transformer, the H.V. capacitor and H.V. diode.

1. The AC input voltage 110V 60Hz is rectified to DC voltage immediately.
2. DC voltage will be supplied to the switching devices called IGBT. These devices are switched ON-OFF by the 20 to 40 kHz PWM (pulse width modulation) signal from the microcomputer in the DPC.
3. This drives the High voltage transformer to increase voltage up to 2,000V AC.
4. Then the half-wave doubler voltage rectifier circuit, consisting of the H.V. diodes and capacitors, generates the necessary 4,000V DC needed for the magnetron.
5. Output power of the magnetron tube is always monitored by the signal output from the current transformer built into the inverter circuit.
6. This signal is fed back to the microcomputer in the DPC to determine operating conditions and output necessary to control PWM signal to the Inverter Power Supply for control of the output power.

4.3. Turbo defrost, Auto cook

When the Auto Control feature is selected and the Start button is tapped:

1. The digital programmer circuit determines the power level and cooking time to complete cooking and indicates the operating state in the display window.
2. When cooking time in the display window has elapsed, the oven turns off automatically by a control signal from the digital programmer circuit.

Turbo Defrost

WEIGHT SELECTED	COOKING TIME
1.0KG	15min. 20sec.

4.4. Sensor cooking

Auto sensor cooking without setting a power level or selecting a time. All that is necessary is to select an Auto Sensor Program before starting to cook.


Understanding Auto Sensor Cooking

As the food cooks, a certain amount of steam is produced. If the food is covered, this steam builds up and eventually escapes from the container. In Auto Sensor Cooking, a carefully designed instrument, called the steam sensor element, senses this escape of steam. Then, based upon the Auto Sensor Program selected, the unit will automatically determine the correct power level and the proper length of time it will take to cook the food.

NOTE:

Auto Sensor Cooking is successful with the foods and recipes found in the Auto Sensor Cooking Guide. Because of the vast differences in food composition, items not mentioned in the Cooking Guide should be prepared in the microwave oven using power select and time features. Please consult Variable Power Microwave Cookbook for procedures.

AUTO SENSOR COOKING/REHEAT PROCESS

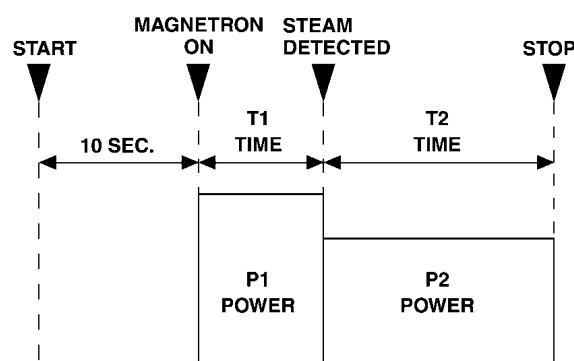

Explanation of the Auto Sensor Cooking process

1. During the first 10 second period there is no microwave activity. When calculating the T2 time by using the formula below make sure this 10 seconds is subtracted from the T1 time. In other words, T1 time starts at the end of the 10 second period.
2. **T1 time** The total amount of time it takes the microwave oven to switch to T2 time after the 10second period.
3. **T2 time** When the steam escapes from the cooking container placed in the oven, the steam sensor detects it and the microprocessor calculates the balance of cooking time. This T2 time is then shown in the display and begins counting down.

Balance of cooking time (T2 time)

The balance of cooking time which is called T2 time, can be calculated by the following formula.

T2 time (in sec.) = T1 time X K factor

NOTE:

Remember, the T1 time starts after the 10 second period. The coefficient K is programmed into the microprocessor memory and they are listed in the following tables along with the P1 and P2 powers.

NOTE:

When "More" or "Less" button is selected, the K factor varies resulting in T2 time to be increased or decreased.

Example of calculating the T2 time

Example 1: If the T1 time is measured to be 2 minutes and 40 seconds after the 10 second period, and the Auto program selected is Oatmeal:

$$\begin{aligned}
 T2 &= T1 \times K \\
 &= 2 \text{ min. and } 40 \text{ sec.} \times 0.1 \\
 &= 160 \text{ sec.} \times 0.1 \\
 &= 16 \text{ sec.}
 \end{aligned}$$

Category	P1 Power	P2 Power	K Factor Standard
STEAM FISH	MEDIUM-LOW	MEDIUM-LOW	0.1

4.5. Sensor reheat

Auto Sensor Reheat is a quick and easy way to reheat refrigerated and room temperature foods.

Simply press the reheat button. There is no need to select power level and cooking time.

NOTE:

The Auto Sensor Reheat process is same as Auto Sensor Cooking process.

Category	P1 Power	P2 Power	K Factor Standard
Sensor Reheat	HIGH	MEDIUM-HIGH	0.1

4.6. Steam sensor and digital programmer circuit

In order to determine if the steam sensor function of the digital programmer circuit is working, do the following test.

1. Place a water load (150 cc) in the oven.
2. Tap Sensor Reheat button.
3. Tap Start button.
4. Steam Sensor detects steam about 1.5 to 4 minutes after the Start button is tapped.
5. T1 time cooking automatically switches to remaining time for cooking (T2).
6. The remaining cooking time (T2) appears in display window. If the following cooking time appears, Steam Sensor function is normal.

T1 TIME	T2 TIME (Remainingcooking time)
1 Min. 30 Sec. ~ 4 Min.	27 Sec. ~ 1Min.12 Sec.

4.7. Grill cooking control

Grill cooking is accomplished by upper heaters only. One grill cooking cycle is 33 seconds.

1. During grill cooking, the digital programmer circuit controls power relay RY3's ON-OFF time. In all three grill cooking categories, power relay RY1 always stay ON, but RY3's ON-OFF time are shown in Figure.

GRILL CATEGORY	GRILL (RY3)		MICROWAVE (RY1)
	ON (sec.)	OFF (sec.)	
1	33	0	ON
2	24	9	ON
3	18	15	ON

4.8. Combination Cooking

Combination cooking is accomplished by microwave and grill cooking (upper heaters) being done alternately during one combination cooking cycle. One combination cooking cycle is 33 seconds.

1. During combination cooking, the digital programmer circuit controls power relay RY3 & RY1's duty ON-OFF time. In all three combination cooking categories, power relay RY3 & RY1's duty ON-OFF time are as shown in Figure.

COMBINATION CATEGORY	GRILL(RY3)		MICROWAVE(DUTY)	
	ON(sec.)	OFF(sec.)	ON(sec.)	OFF(sec.)
1	27	6	6	27
2	21	12	12	21
3	14	19	19	14

5 CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is a high voltage, high current device. It is free from danger in ordinary use, though extreme care should be taken during repair.

⚠ CAUTION

Servicemen should remove their watches & rings whenever working close to or replacing the magnetron.

5.1. Check the grounding

Do not operate on a two wire extension cord. The microwave oven is designed to be grounded when used. It is imperative, therefore, to ensure the appliance is properly grounded before beginning repair work.


5.2. Inverter warnings

⚠ WARNING HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

The High Voltage Inverter Power Supply generates very high voltage and current for the magnetron tube. Though it is free from danger in ordinary use, extreme care should be taken during repair.

The aluminum heat sink is also energized with high voltage (HOT), do not touch when the AC input terminals are energized. The power device Collector is directly connected to the aluminum heat sink.


The aluminum heat sink may be HOT due to heat energy, therefore, extreme care should be taken during servicing.

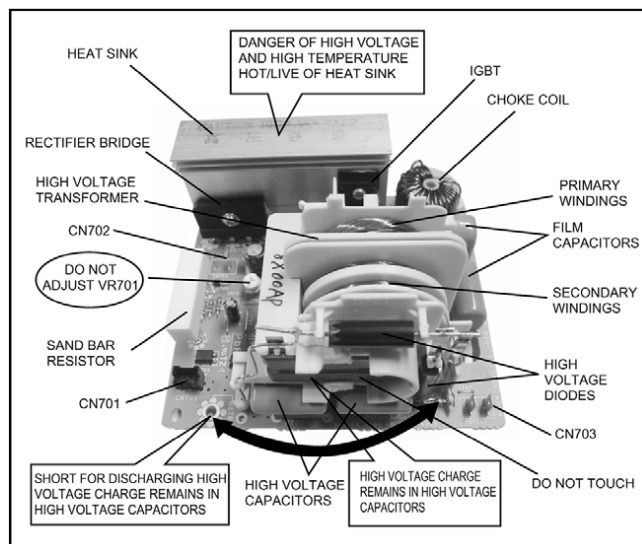

H.V. Inverter warning

⚠ WARNING FOR INVERTER POWER SUPPLY (U) GROUNDING

Check the High Voltage Inverter Power Supply circuit grounding. The high voltage inverter power supply circuit board must have a proper chassis ground. The inverter grounding plate must be connected to the chassis. If the inverter board is not grounded it will expose the user to very high voltages and cause extreme DANGER! Be sure that the inverter circuit is properly grounded via the inverter grounding plate.

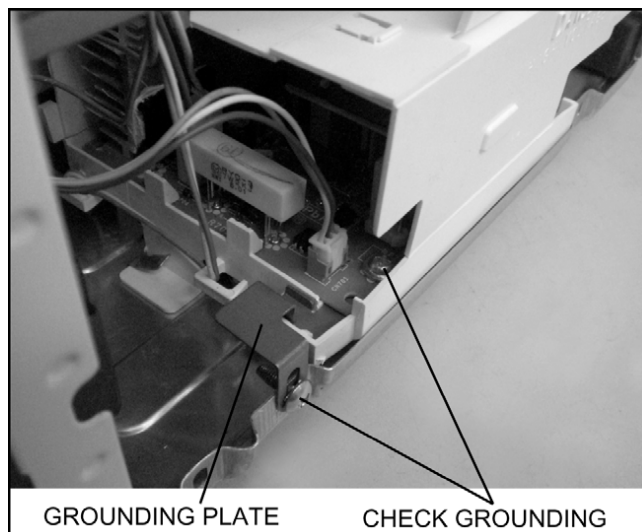


Grounding of the inverter circuit board

⚠ WARNING DISCHARGE THE HIGH VOLTAGE CAPACITORS

For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors of the Inverter Power Supply circuit board.

When replacing or checking parts, remove the power plug from the outlet and short the inverter output terminal of the magnetron filament terminals to the chassis ground with an insulated handle screwdriver to discharge. Please be sure to contact the chassis ground side first and then short to the output terminal.

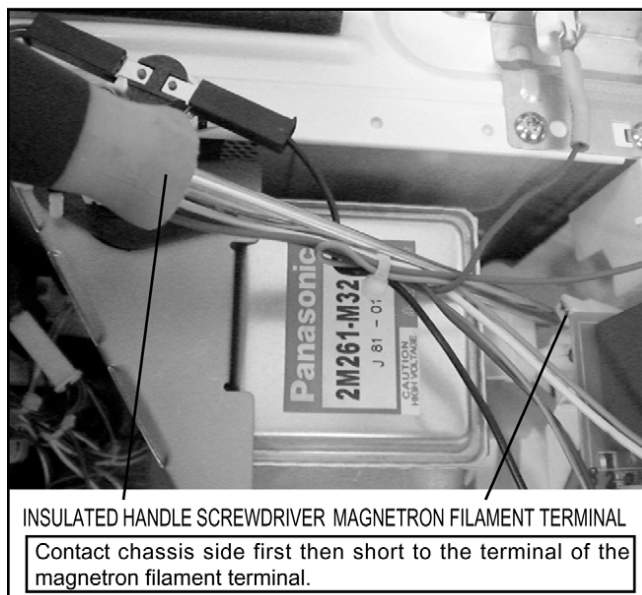

Discharging the high voltage capacitors

⚠ WARNING

There is high voltage present with high current capabilities in the circuits of the primary and secondary windings, choke coil and heat sink of the inverter. It is extremely dangerous to work on or near these circuits with the oven energized. DO NOT measure the voltage in the high voltage circuit including the filament voltage of the magnetron.

⚠ WARNING

Never touch any circuit wiring with your hand or with an insulated tool during operation.

5.3. Part replacement.

When troubleshooting any part or component is to be replaced, always ensure that the power cord is unplugged from the wall outlet.

5.4. When the 20A fuse is blown due to the malfunction of the short switch:

WARNING

When the 20A 110V fuse is blown due to the malfunction of the short switch, replace all of the components (primary latch switch, short switch and power relay RY1).

1. This is mandatory. Refer to "measurements and adjustments" for the location of these switches.
2. When replacing the fuse, confirm that it has the appropriate rating for these models.
3. When replacing faulty switches, be sure the mounting tabs are not bent, broken or deficient in their ability to hold the switches.

5.5. Avoid inserting nails, wire etc. through any holes in the unit during operation.

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any holes or gaps, because such objects may work as an antenna and cause microwave leakage.

5.6. Verification after repair

1. After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loosen or missing. Microwave energy might leak if screws are not properly tightened.
2. Make sure that all electrical connections are tight before inserting the plug into the wall outlet.
3. Check for microwave energy leakage.

CAUTION OF MICROWAVE RADIATION LEAKAGE

USE CAUTION NOT TO BECOME EXPOSED TO RADIATION FROM THE MICROWAVE MAGNETRON OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

IMPORTANT NOTICE

1. The following components have potentials above 2000V while the appliance is operated.
 - Magnetron
 - High voltage transformer (Located on inverter (U))
 - High voltage diodes (Located on inverter (U))
 - High voltage capacitors (Located on inverter (U))

Pay special attention to these areas.

2. When the appliance is operated with the door hinges or magnetron installed incorrectly, the microwave leakage can exceed more than 5mW/cm². After repair or exchange, it is very important to check if the magnetron and the door hinges are correctly installed.

5.7. Sharp edges


⚠ CAUTION

Please use caution when disassembling or reassembling internal parts. Some exposed edges may be sharp to the touch and can cause injury if not handled with care.

6 DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE

6.1. Magnetron

1. Discharge high voltage charge.
2. Remove 1 screw holding air guide A on the magnetron.

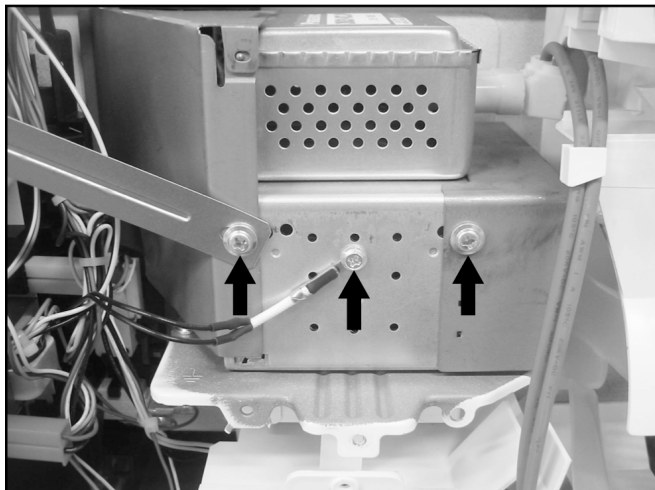

3. Remove 1 screw holding themistor.
4. Remove 1 screw holding air guide F on the magnetron.
5. Disconnect 2 high voltage lead wires from magnetron filament terminals.
6. Remove 4 screws holding the magnetron.

NOTE:

After replacement of the magnetron, tighten mounting screws properly in an x pattern, making sure there is no gap between the waveguide and the magnetron to prevent microwave leakage.

CAUTION


When replacing the magnetron, be sure the antenna gasket is in place.

6.2. Digital programmer circuit (D.P.C)


NOTE:

Be sure to ground any static electric charge built up on your body before handling the D.P.C.


1. Disconnect all connectors from D.P.C board DU.
2. Disconnect 1 grounding connector.

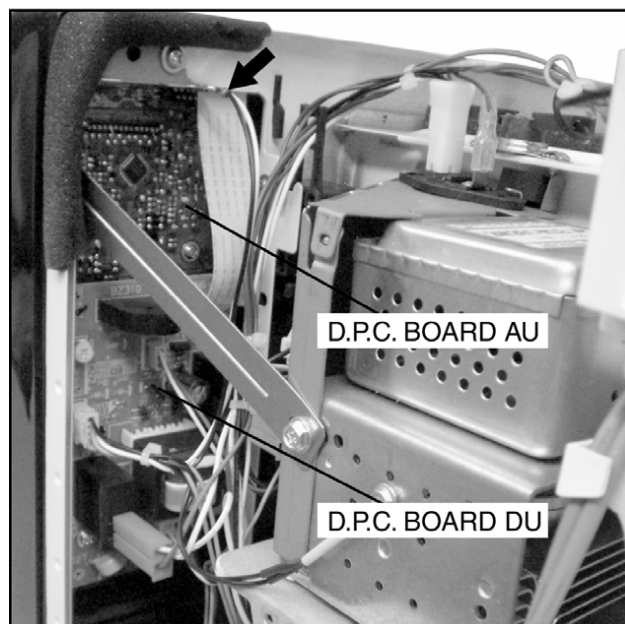


3. Disconnect connector CN701 from H.V. Inverter board.
4. Disconnect connector CN6 from D.P.C board DU by straight pulling it out slightly.
5. Remove 1 screw holding escutcheon base and slide the escutcheon base upward slightly.
6. Remove 2 screws holding D.P.C board DU on escutcheon base.

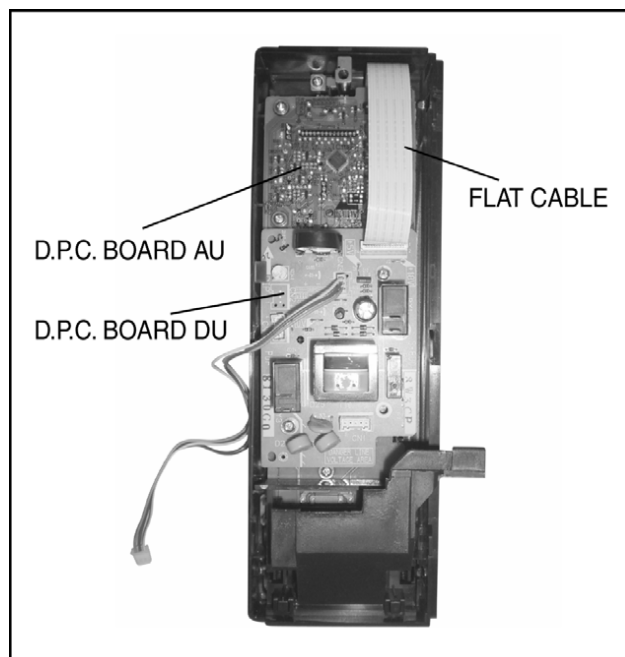

7. Remove 9 screws holding D.P.C board AU on escutcheon base.

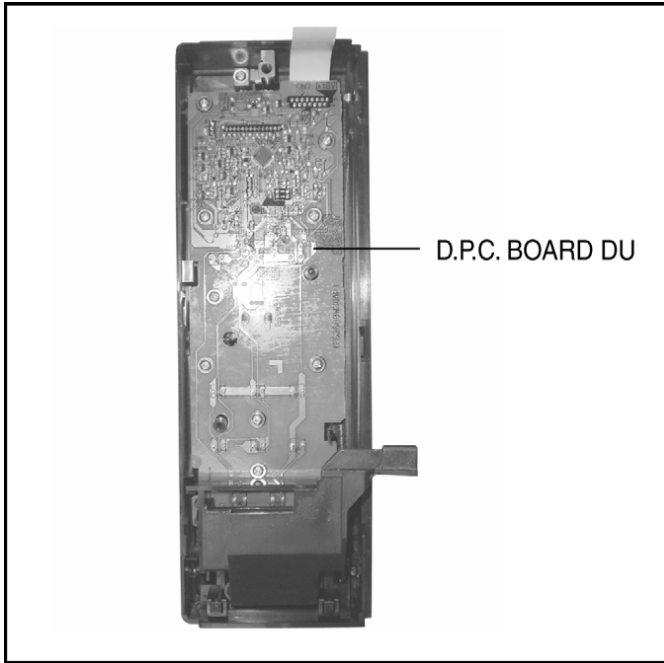

8. Remove 2 screws holding door opening bracket on escutcheon base.

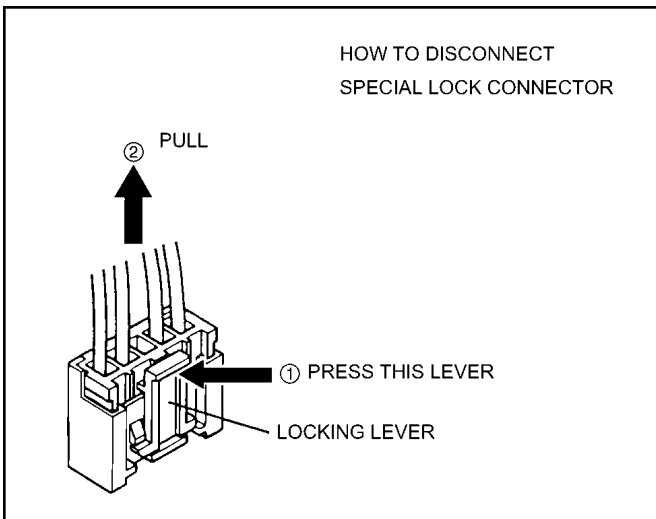

6.3. Low voltage transformer and/or power relays (RY1, RY2)

NOTE:

Be sure to ground any static electric charge built up on your body before handling the D.P.C.

1. Replace D.P.C. board.

(A) Using solder wick or a desoldering tool and 30W soldering iron carefully remove all solder from the terminal pins of the low voltage transformer and/or power relays.


NOTE:

Do not use a soldering iron or desoldering tool of more than 30 watts on D.P.C. contacts.


(B) With all the terminal pins cleaned and separated from D.P.C. contacts, remove the defective transformer/power relays, Replace components making sure all terminal pins are inserted completely resolder all terminal contacts carefully.

6.4. Fan motor

1. Disconnect 2 lead wires from fan motor terminals.
2. Remove 1 screw at location on oven attaching orifice assembly.
3. Remove orifice assembly from oven assembly.
4. Remove 2 screws holding fan motor to orifice.

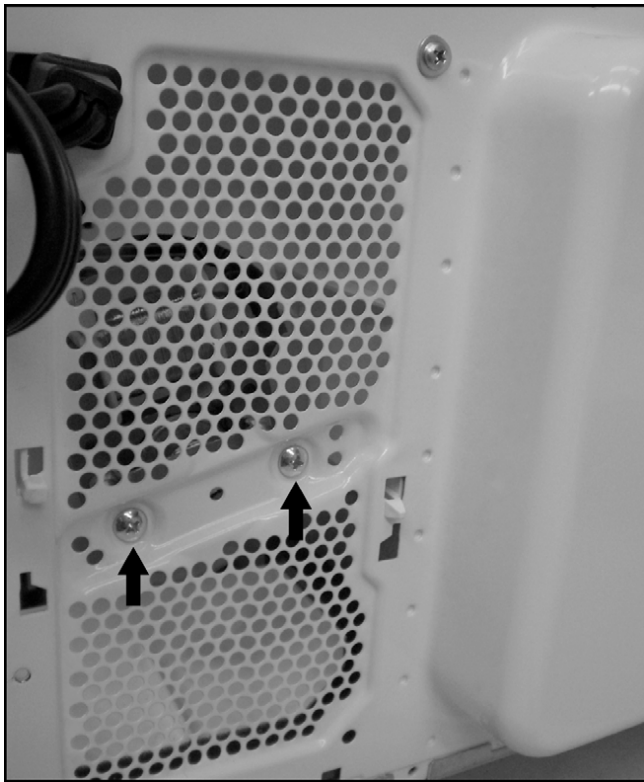

5. Remove fan blade from the fan motor shaft by pulling it straight out.

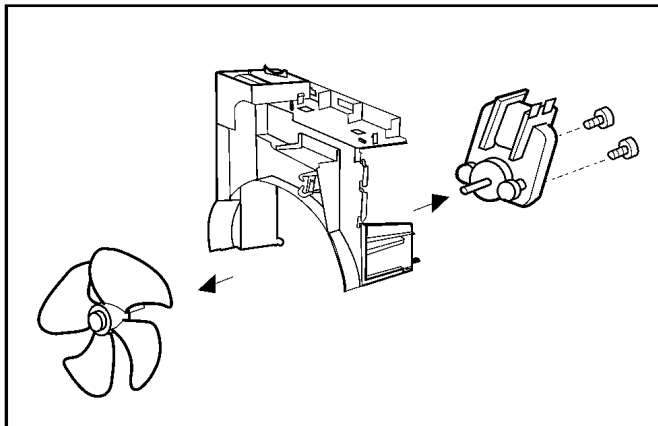

6.5. Door assembly

1. Remove door C from door E by carefully pulling outward, starting from upper right hand corner using a flat blade screwdriver.
2. Separate door E from tabs on door A and remove door A (U).
3. Open Door E at the opening angle of approximately 10°(Note: The door cannot be removed if the opening angle is greater than 10°).
4. Remove the door E from its hinges by pushing the door E upward and out.
5. Remove door key and door key spring.

To re-install components:



1. Place the door's lower hinge pin into the bottom hinge hole.
2. Use your left index finger to support the door's lower hinge pin while guiding the door's upper hinge pin into the top hinge hole.
3. Lower your finger to seat the door onto the hinges.
4. Replace other components.

NOTE:

Adjust so that the upper portion of the door will touch firmly to the oven cavity front plate, without pushing the door. If the door assembly is not mounted properly, microwave power may leak from the clearance between the door and oven.


NOTE:

Always perform the microwave leakage measurement test after installation and adjustment of door assembly.

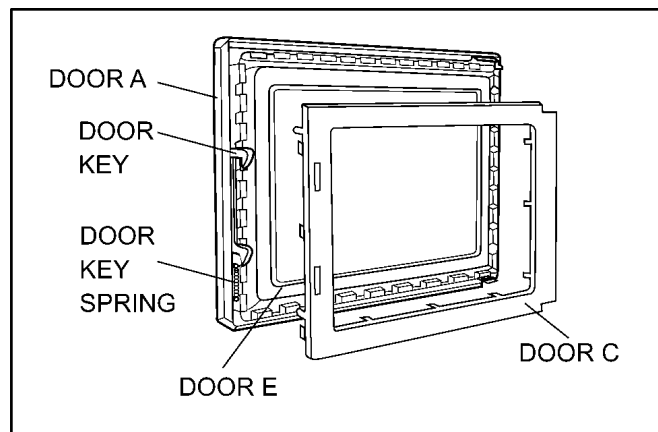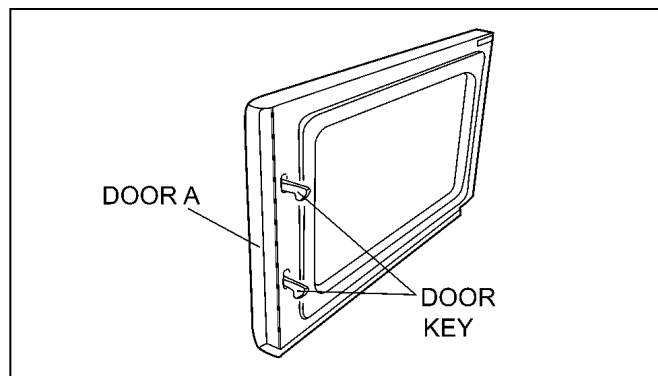

6.6. Turntable motor


1. Remove the motor cover by breaking off at the 8 spots indicated by arrows with a cutter or the like.

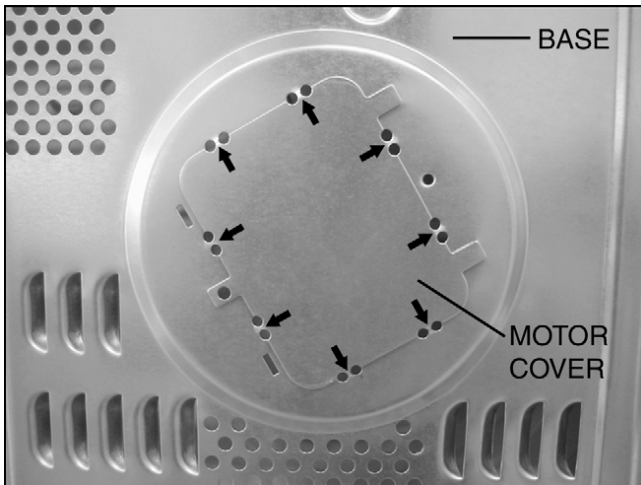

⚠ NOTE:

After removing the motor cover, be sure that cut portions are properly trimmed or bent to the inside so that no sharp edges will be exposed to outside.

2. Disconnect 2 lead wires connected to the turntable motor.
3. Remove the turntable motor by removing screw.

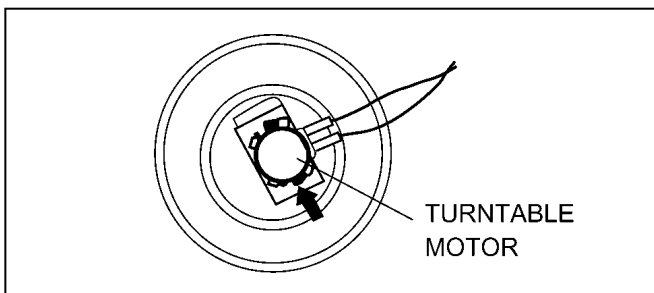


⚠ NOTE:


After reinstalling the new turntable motor and reconnecting the 2 lead wires, reinstall the motor cover by rotating it around 180, tucking the 2 tabs under the base in the 2 provided slots, then screw the single tab to the base using a 4mm × 6mm screw.

6.7. Quartz heater

1. Disconnect lead wires from heater terminals.
2. Remove 1 screw holding heater mounting plate.

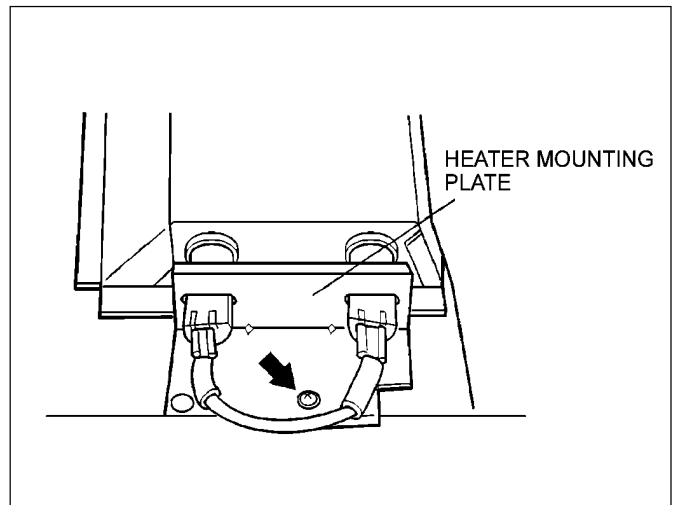

3. Remove the heater by pulling it out.

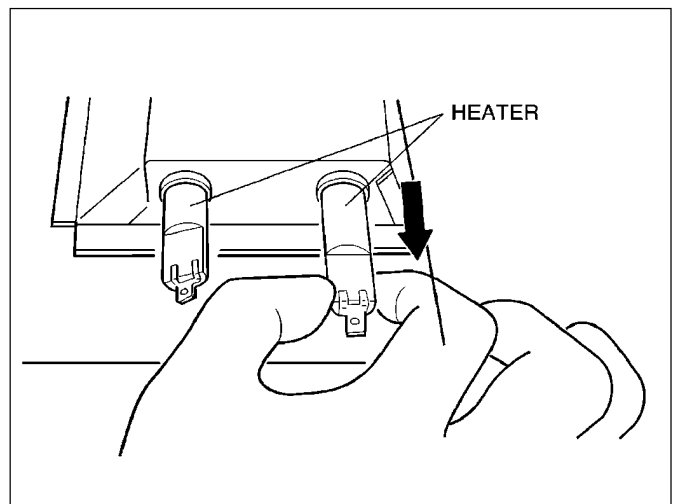


6.8. Inverter power supply


CAUTIONS

1. Always leave the grounding plate in place.
2. Always securely tighten the ground screw through the bottom of the chassis (base).
3. Securely connect 3 lead wire connectors.
4. Make sure the heat sink has enough space (gap) from the oven. Take special care not to dress any lead wire over the aluminum heat sink because it is hot.


1. Discharge high voltage charge.
2. Remove the H.V.lead wire from magnetron terminals.
3. Disconnect 2 connectors from CN701 & CN702 on H.V.Inverter(U).
4. Remove 1 screw holding grounding plate to the base.

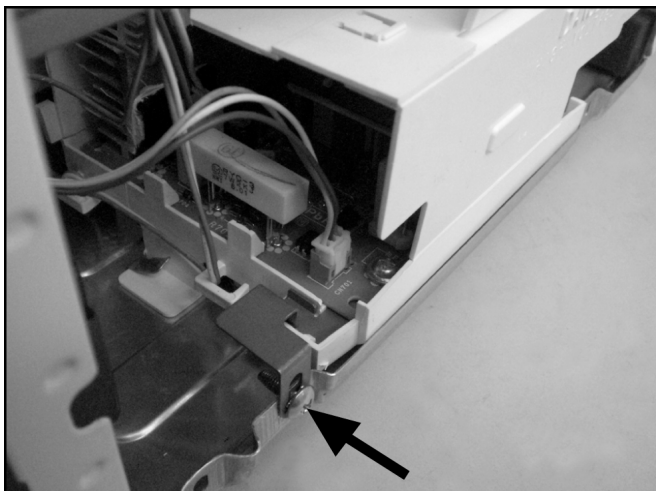


5. Bend back 1 locking metal tab on the base.

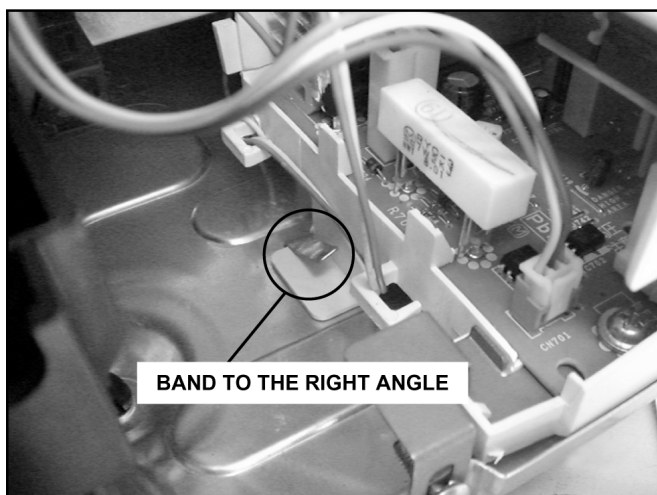


6. Slide 5 locking tabs of Inverter bracket at the bottom of the base in direction of arrows.

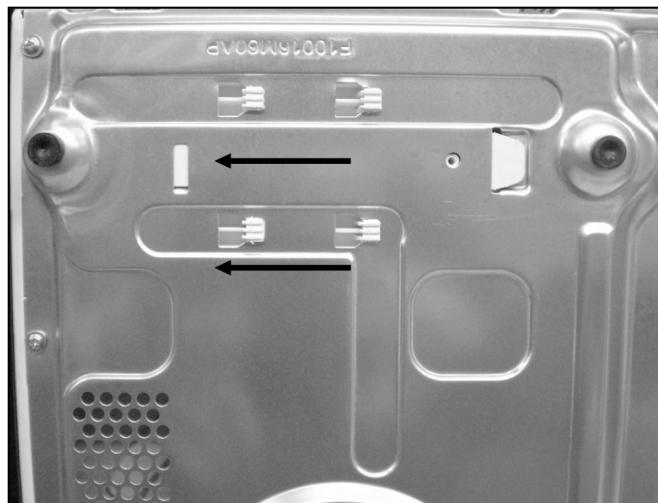

7. Remove 1 screw holding H.V.Inverter to Inverter bracket.

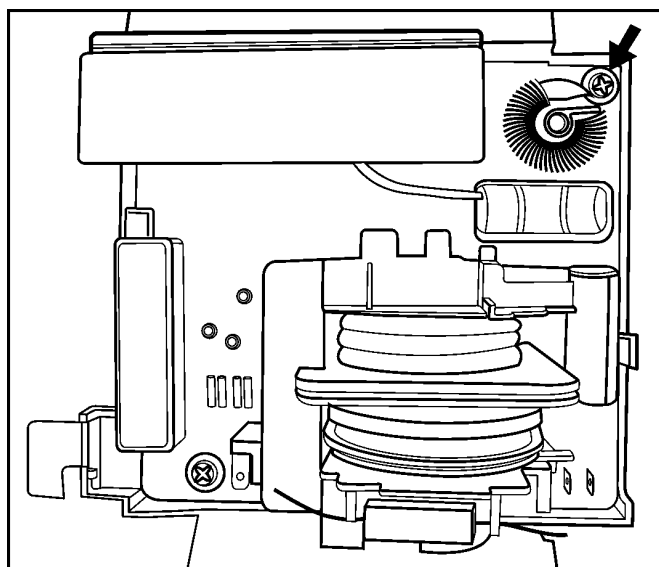

8. Remove 1 screw holding grounding plate to H.V. Inverter.

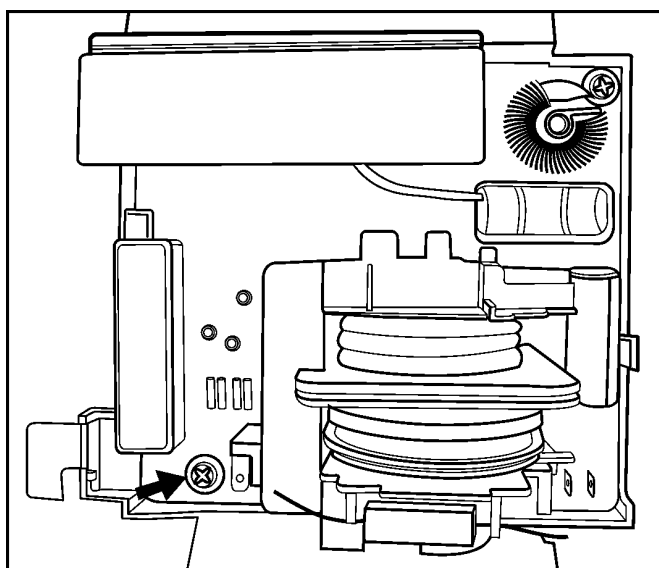

9. Separate H.V. Inverter from Inverter bracket by freeing 3 catch hooks on the Inverter bracket.

7 COMPONENT TEST PROCEDURE

⚠ WARNING

1. High voltage is present at the output terminals of the High Voltage Inverter (U) including aluminum heat sink during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components, or wiring, always unplug the power cord and discharge the high voltage capacitors (see page 9).

7.1. Primary, Secondary Latch Switch interlocks & Power Relay RY1

1. Unplug lead connectors to Power Relay RY1 and verify open circuit of the Power Relay RY1 1-2 terminals.
2. Unplug lead connectors to Primary Latch Switch and Secondary Latch Switch.
3. Test the continuity of switches at door opened and closed positions with ohm meter (low scale).

Normal continuity readings should be as follows.

	Door Closed	Door Opened
Primary Latch Switch	0Ω (Close)	∞Ω (Open)
Secondary Latch Switch	0Ω (Close)	∞Ω (Open)
Power Relay RY1	∞Ω (Open)	∞Ω (Open)

7.2. Short Switch

1. Unplug lead wires from Inverter Power Supply (U) primary terminals.
2. Connect test probes of ohm meter to the disconnected leads that were connected to Inverter Power Supply (U).
3. Test the continuity of short switch with door opened and closed positions using lowest scale of the ohm meter.


Normal continuity readings should be as follows.

Door Opened	Door Closed
0Ω (Close)	∞Ω (Open)

7.3. Magnetron


Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

1. Isolate magnetron from the circuit by disconnecting the leads.
2. A continuity check across magnetron filament terminals should indicate one ohm or less.
3. A continuity check between each filament terminal and magnetron case should read open.

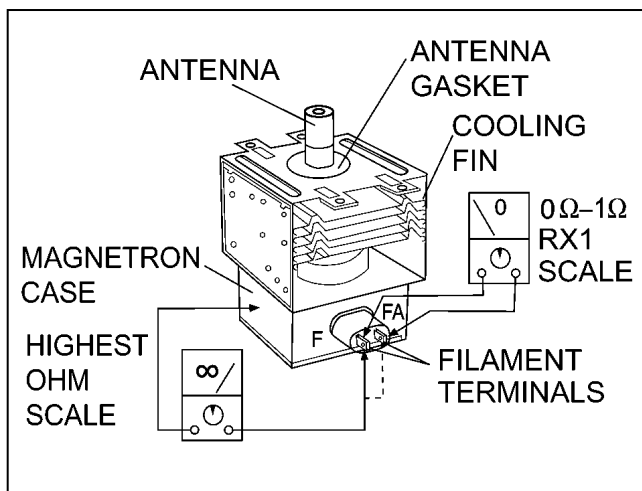

7.4. Inverter power supply (U)

DO NOT try to REPAIR H.V. Inverter power supply (U). Replace complete H.V. Inverter(U) Unit.

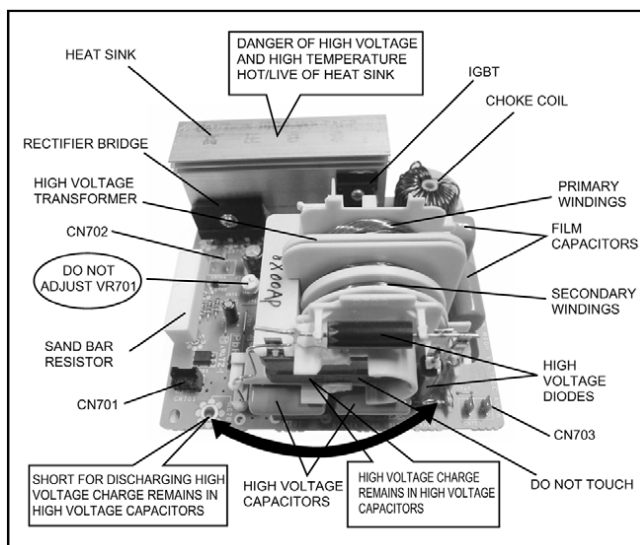

WARNING: HIGH VOLTAGE

Test if failure codes H95, H97 or H98 appear when performing the following procedure. It is recommended to use an AC line input current ammeter for testing.

Test 1

1. With the oven unit's AC power supply cord is unplugged from the wall outlet, unplug the 2 pin H.V. connector CN703 from the magnetron tube.
2. Place 1 liter of water load into oven cavity.
3. Plug in the oven's AC power supply cord into outlet.
4. Program DPC.
 - a. Press **Timer/Clock** button twice.
 - b. Press **Start** button once.
 - c. Press **Micro Power** button once.
5. Program oven at High power for 1 minute and press [Start] button.
 - a. After approximately 23 seconds, oven stops operating.
 - b. During oven operation, the input current is approximately 0.5 to 1A. If both a and b are OK, proceed to test 2.

	INPUT CURRENT	FAILURE CODE
Unplug CN703	0.5 to 1A	Oven stops in 23 seconds after started.

Test 2

Continued from Test 1

1. Unplug the oven's AC power supply cord from outlet.
2. Unplug 3 pin connector CN701. CN703 remains unplugged.
3. Plug in the oven's AC power supply cord into outlet.
4. Program DPC.
 - a. Press **Timer/Clock** button twice.
 - b. Press **Start** button once.
 - c. Press **Micro Power** button once.

5. Program oven at High power for 1 minute and press [Start] button.

- a. After approximately 3 seconds, oven stops operating.
- b. During oven operation, the input current is approximately 0.4A.

	INPUT CURRENT	FAILURE CODE
Unplug CN701	≈ 0.4A	Oven stops in 3 seconds after started.

If both a and b check OK, the Inverter Power Supply (U) can be determined to be OK.

7.5. Temperature thermistor

These sensor monitors the heat produced by the heater circuit and maintains the magnetron temperature which user had selected. Normal room temperature 10°C to 30°C, the reading across the temperature thermistor should be from 35KΩ to 110 KΩ.

If the resistance reading is out of the range stated here, the thermistor is defective and must be replaced.

It is also possible to display thermistor level by taking the following steps.

1. Program the DPC into TEST MODE (Plug-in oven → press **Timer/Clock** button twice → press **Start** button once → press **Micro Power** button once).
 2. Program oven at Standing Time for 1 minute and press [Start] button.
 3. Press **Micro Power** once, the thermistor level reading will shown on the display.
- The normal reading should be in the range of 16-230.

8 MEASUREMENTS AND ADJUSTMENTS


8.1. Adjustment of primary latch switch, secondary latch switch and short switch.

1. Mount the Primary latch switch, the Secondary latch switch and the Short switch to the door hook assembly as shown in illustration.

NOTE:

No specific individual adjustments during installation of the Primary latch switch, Secondary latch switch or Short switch to the door hook are required.

2. When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of the arrows in the illustration so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.
3. Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the component test procedures.

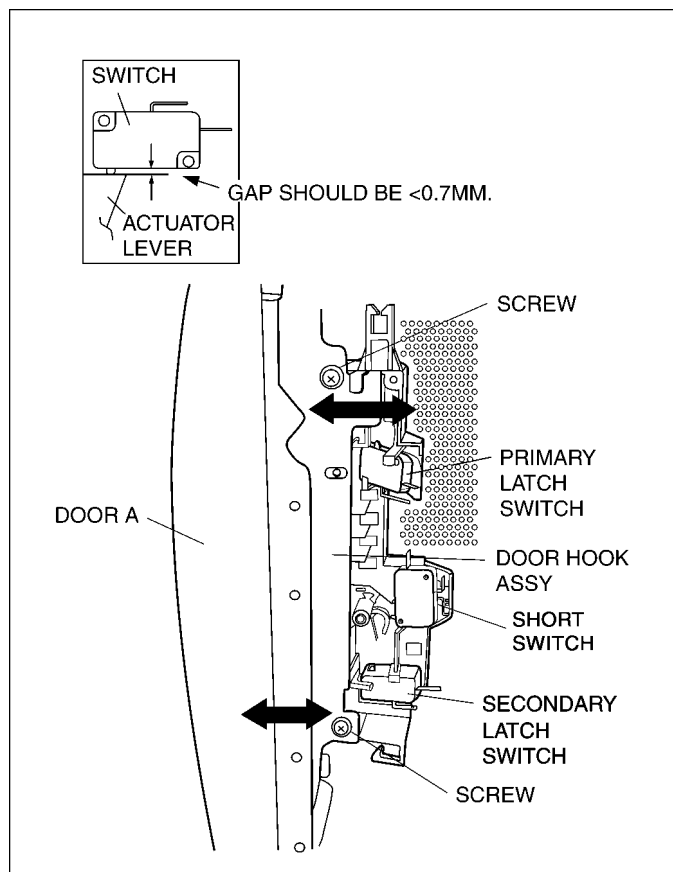

8.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However, due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

- 1 liter beaker
- Glass thermometer
- Wrist watch or stopwatch

NOTE:

Check the line voltage under load. Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately as possible.

1. Fill the beaker with exactly one liter of tap water. Stir the water using the thermometer and record the water's temperature. (recorded as T1).
2. Place the beaker on the center of glass tray. Set the oven for High power and heat it for exactly one minute.
3. Stir the water again and read the temperature of the water. (recorded as T2).
4. The normal temperature rise at High power level for each model is as shown in table.

TABLE (1L-1min. test)

RATED OUTPUT	TEMPERATURE RISE
1000W	Min. 8.5°C

9 TROUBLESHOOTING GUIDE


DANGER: HIGH VOLTAGES ⚠

1. **DO NOT RE-ADJUST PRESET CONTROL on the H.V.Inverter (U).** It is very dangerous to repair or adjust without proper test equipment because this circuit generates very large current and high voltage. Operating a misaligned inverter circuit is dangerous.
2. Ensure proper grounding before troubleshooting.
3. Be careful of the high voltage circuitry, taking necessary precautions when troubleshooting.
4. Discharge high voltage remaining in the H.V.Inverter (U).
5. When checking the continuity of the switches or the H.V.Inverter, disconnect one lead wire from these parts and then check continuity with the AC plug removed. Doing otherwise may result in a false reading or damage to your meter. When disconnecting a plastic connector from a terminal, you must hold the plastic connector instead of the lead wire and then disconnect it, otherwise lead wire may be damaged or the connector cannot be removed.
6. Do not touch any parts of the circuitry on the digital programmer circuit, since static electric discharge may damage this control panel. Always touch ground while working on this panel to discharge any static charge in your body.
7. 110V AC is present on the digital programmer circuit (Terminals of power relay's and primary circuit of Digital Programmer Circuit). When troubleshooting, be cautious of possible electrical shock hazard.

Before troubleshooting, operate the microwave oven following the correct operating procedures in the instruction manual in order to find the exact cause of any trouble, since operator error may be mistaken for the oven's malfunction.

9.1. (Troubleshooting) Oven stops operation during cooking

SYMPTOM	CAUSE	CORRECTIONS
1. Oven stops in 3 seconds after pressing [Start] button.	No input AC is supplied to H.V.Inverter (U) CN702 terminals	1. Latch Switch 2. Power relay RY1 3. Loose lead wire connector CN701, CN702 4. H.V. Inverter (U)
Oven stops in 23 seconds after pressing [Start] button.	H.V.Inverter (U) operates by the control signals from DPC but magnetron is not oscillating	1. Magnetron 2. Loose lead wire connector CN703 3. H.V. Inverter (U)
2. No display and no operation at all. Fuse is blown.	Most probably loose connection of connectors, or door latch mechanism is not adjusted properly	1. Align door, Door Latch Switches 2. Loose wiring connectors

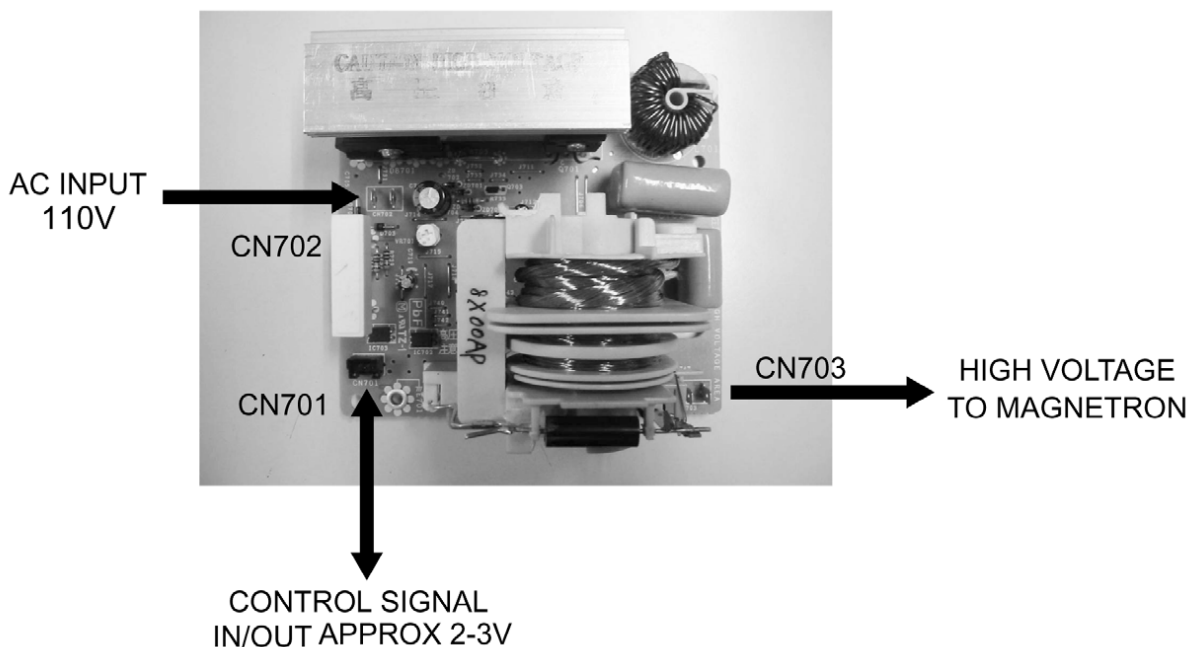


9.2. (Troubleshooting) Other problems

	SYMPTOM	CAUSE	CORRECTIONS
1.	Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness 2. Open thermal cutout / thermistor 3. Open low voltage transformer 4. Defective DPC	Check thermal cutout is defective.
2.	No display and no operation at all. Fuse is blown.	1. Shorted lead wire harness 2. Defective primary latch switch (NOTE 1) 3. Defective short switch (NOTE 1) 4. Defective Inverter Power Supply (U) NOTE 1: All of these switches must be replaced at the same time. Check continuity of power relay RY1 contacts (between 1 and 2) and if it has continuity, replace power relay RY1 also.	Check adjustment of primary, secondary latch switch and short switch including door.
3.	Oven does not accept key input (Program)	1. Key input is not in proper sequence 2. Open or loose connection of membrane key button to DPC (Flat cable) 3. Shorted or open membrane key board 4. Defective DPC	Refer to operation procedure. Refer to DPC troubleshooting.
4.	Fan motor turns on when oven is plugged in with door closed.	1. Misadjustment or loose wiring of secondary latch switch 2. Defective secondary latch switch 3. Door switch CN3	Adjust door and latch switches.
5.	Timer starts count down but no microwave oscillation. (No heat while oven lamp and fan motor turn on)	1. Off-alignment of primary latch switch 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will cause lower magnetron filament voltage and cause magnetron to have lower output and/or be intermittent. 3. Defective high voltage component H.V. Inverter Power Supply (U) Magnetron 4. Open or loose wiring of power relay RY1 5. Defective primary latch switch 6. Defective DPC or power relay RY1	Adjust door and latch switches. Check high voltage component according to component test procedure and replace if it is defective. Refer to DPC troubleshooting
6.	Oven can program but timer does not start countdown.	1. Open or loose wiring of secondary latch switch 2. Off-alignment of secondary latch switch 3. Defective secondary latch switch	
7.	Microwave output is low. Oven takes longer time to cook food.	1. Decrease in power source voltage 2. Open or loose wiring of magnetron filament circuit.(Intermittent oscillation) 3. Aging change of magnetron	Consult electrician
8.	Fan motor turns on and turntable motor rotates when door is opened.	1. Low voltage transformer on DPC.	
9.	Oven does not operate and return to plugged in mode as soon as [Start] button is pressed.	1. Defective DPC	Check grounding connector on escutcheon base.
10.	Loud buzzing noise can be heard.	1. Loose fan and fan motor	
11.	Heater does not turn on.	1. Open or loose wiring of heater 2. Defective heater 3. Defective power relay 4. Defective DPC	
12.	Oven stops operation during cooking.	1. Open or loose wiring of primary and secondary latch switch 2. Operation of thermal cutout	Adjust door and latch switches.

9.3. Troubleshooting of inverter circuit (U) and magnetron

This oven is programmed with a self diagnostics failure code system which will help for troubleshooting. H95, H97, H98 and H99 are the provided failure codes to indicate magnetron and inverter circuit problem areas. This section explains failure codes of H95, H97, H98 and H99. First, you must program the DPC into TEST MODE, press [Timer/Clock] button twice → Press [Start] button once → press [Micro Power] button once. Program unit for operation. H95, H97, H98, H99 appears in display window a short time after [Start] button is pressed and there is no microwave oscillation.

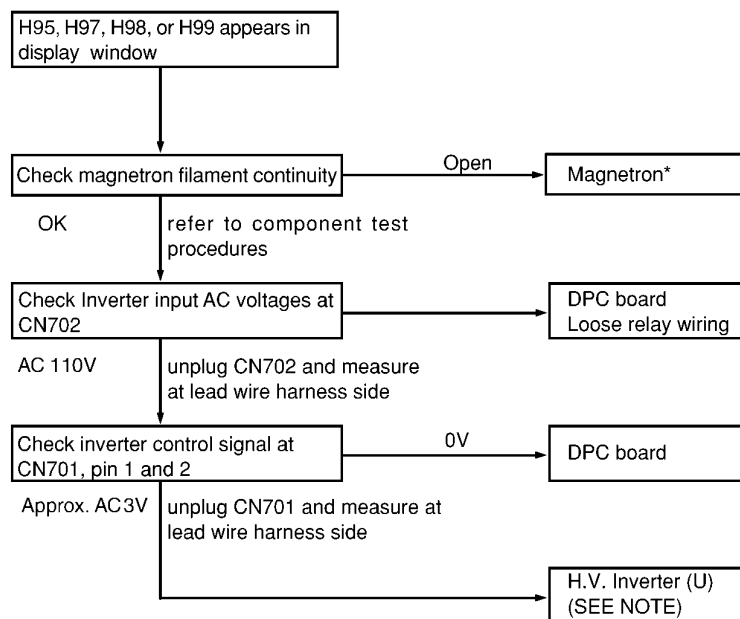


⚠ WARNING: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT RE-ADJUST PRESET CONTROL on the board. It is very dangerous to repair or adjust without proper test equipment because this circuit generates very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to case before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

Alternate way to troubleshoot oven with AC Ampere meter used

H95, H97, H98, H99 appears in display window a short time after [Start] button is pressed and no microwave oscillation with AC Ampere meter used for troubleshooting.

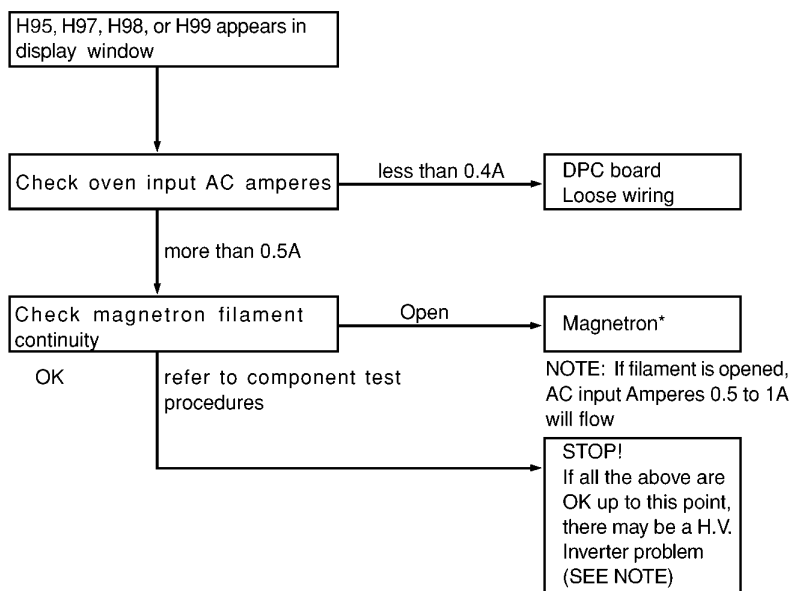

NOTE: After check, unplug unit to reset to normal operation mode.

9.4. Trouble related to Digital Programmer Circuit

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIONS
No display when oven is first plugged in	1	Fuse pattern of D.P.C.	Normal	→Step2
			Open	Replace D.P.C. or Fuse Pattern
	2	Low voltage transform (L.V.T.) secondary voltage	Abnormal 0V	L.V.T.
			Normal	→Step3
	3	IC1 pin23 voltage	Abnormal	Q11, ZD11,Q10,ZD10
			Normal=3.3V	IC1, CX320, Display
No key input	1	Touch switch continuity	Abnormal	Touch switch
			Normal	IC1
No beep sound	1	IC1 pin 29 voltage	Abnormal	IC1
			Normal=3.3V	BZ310, Q224
Power relay RY2 does not turn on even though the program had been set and the start button is tapped	1	IC1 pin 45 voltage while operation	Abnormal	IC1
			Normal=3.3V	→Step2
	2	Collector of Q223 voltage	Abnormal	Q223
			Normal≈0.7V	RY2
No microwave oscillation at any power	1	IC1 pin 47 voltages while operation at high power	Abnormal	IC1
			Normal=3.3V	→Step2
	2	Collector of Q220 voltage	Abnormal	Q220 and /or Q225,Q221,Q222
			Normal≈0.7V	→Step3
	3	Short circuit between collector of Q220 and emitter of Q225	Still not turn on	RY1
			RY1 turns on	Q220 and /or Q225,Q221,Q222
Dark or unclear display	1	Replace display and check operation	Normal	Display
			Abnormal	IC1
Missing or lighting of unnecessary segment	1	Replace IC1 and check operation	Normal	IC1
			Abnormal	Display
H95/H97/H98 appears in window and oven stops operation.Program High power for 1 minute and conduct following test quickly, unless H95/H97/H98 appears and oven stops	1	Unplug CN702 (2 pin) connector and measure voltage between terminals	Abnormal=0V	1. Latch Switch 2. D.P.C. /Power Relay
			Normal=110V	→Step2
	2	Unplug CN701 (3 pin) connector and measure pin1 voltage of CN3	Abnormal=0V	D.P.C.
			Approx. AC 3V	Magnetron


9.5. SIMPLE WAY OF H.V. INVERTER/MAGNETRON TROUBLESHOOTING

Purpose:

Simple way (**3/23 seconds rule**) of identifying whether it's Magnetron, Inverter or others.

Set-up:

The unit under question is connected through the Ammeter as shown below.

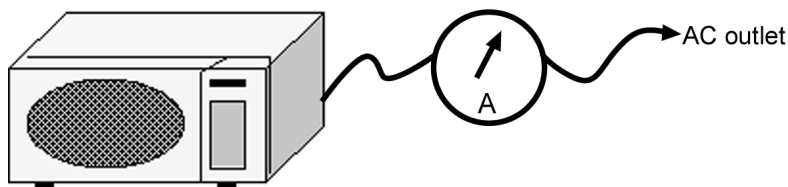

Procedure:

Follow the matrix table below to identify the problem source.

Note:

Do not replace both Inverter board and Magnetron simultaneously and automatically without going through this procedure.


Power will:	Ammeter reading is:	To do:	Remedy:
Shut off in 23 seconds after "Start".	1. Between 0.5A and 1.0A.	Check and repair open magnetron circuit	Open magnetron wiring between Inverter and magnetron terminal.
	2. Between 1.0A and 2.0A.	Check continuity of D702 in Inverter PCB.	
		↓	
		1. D702 shorted	Replace H.V.Inverter (F606Y8X00AP)
		2. D702 is OK	Replace magnetron
Shut off in 3 seconds after "Start"	1. Less than 0.5A	Check open circuit: Latch Switch, DPC, Power Relay and CN701	Replace defective component(s), or correct switch, cables and connectors.

9.6. H.V.INVERTER BOARD MAIN PARTS LIST (F606Y8X00AP)

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
DB701		B0FBQ000007	BRIDGE DIODE	1	20A, 600V
L701		F5020W100AP	CHOKE COIL	1	
Q701		B1JAGV000015	TRANSISTOR SI	1	1000V
T701	⚠	A609A8X00AP	H.V. TRANSFORMER	1	
C701		F0C2H284A012	CAPACITOR	1	0.28μF/500VDC
C702		F0C2E455A246	CAPACITOR	1	4.5μF/250VDC

9.7. How to check the semiconductors using an OHM meter

Diode




	FORWARD	REVERSE
A-K	SMALL	∞

Transistor

NPN Transistor

2SC.....

2SD.....

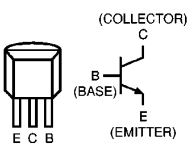


	FORWARD	REVERSE
B-E	SMALL	∞
B-C	SMALL	∞
C-E	∞	∞

PNP Transistor


2SA.....

2SB.....

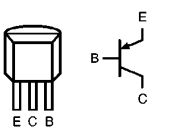

	FORWARD	REVERSE
B-E	SMALL	∞
C-B	SMALL	∞
C-E	∞	∞


Digital Transistor PNP Transistor

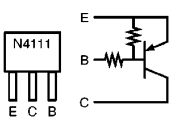

	FORWARD	REVERSE
E-B	10k Ω ~ 30k Ω	10k Ω ~ 30k Ω
C-B	50k Ω ~ 90k Ω	∞
C-E	40k Ω ~ 80k Ω	∞

IGBT


(INSULATED GATE BIPOLAR TRANSISTOR)

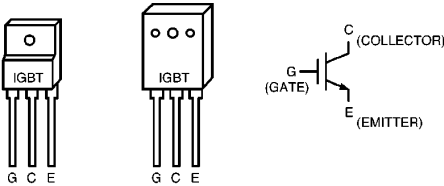

	FORWARD	REVERSE
E-C	SMALL	∞
E-G	∞	∞
C-G	∞	∞

10 EXPLODED VIEW AND PARTS LIST

10.1. EXPLODED VIEW

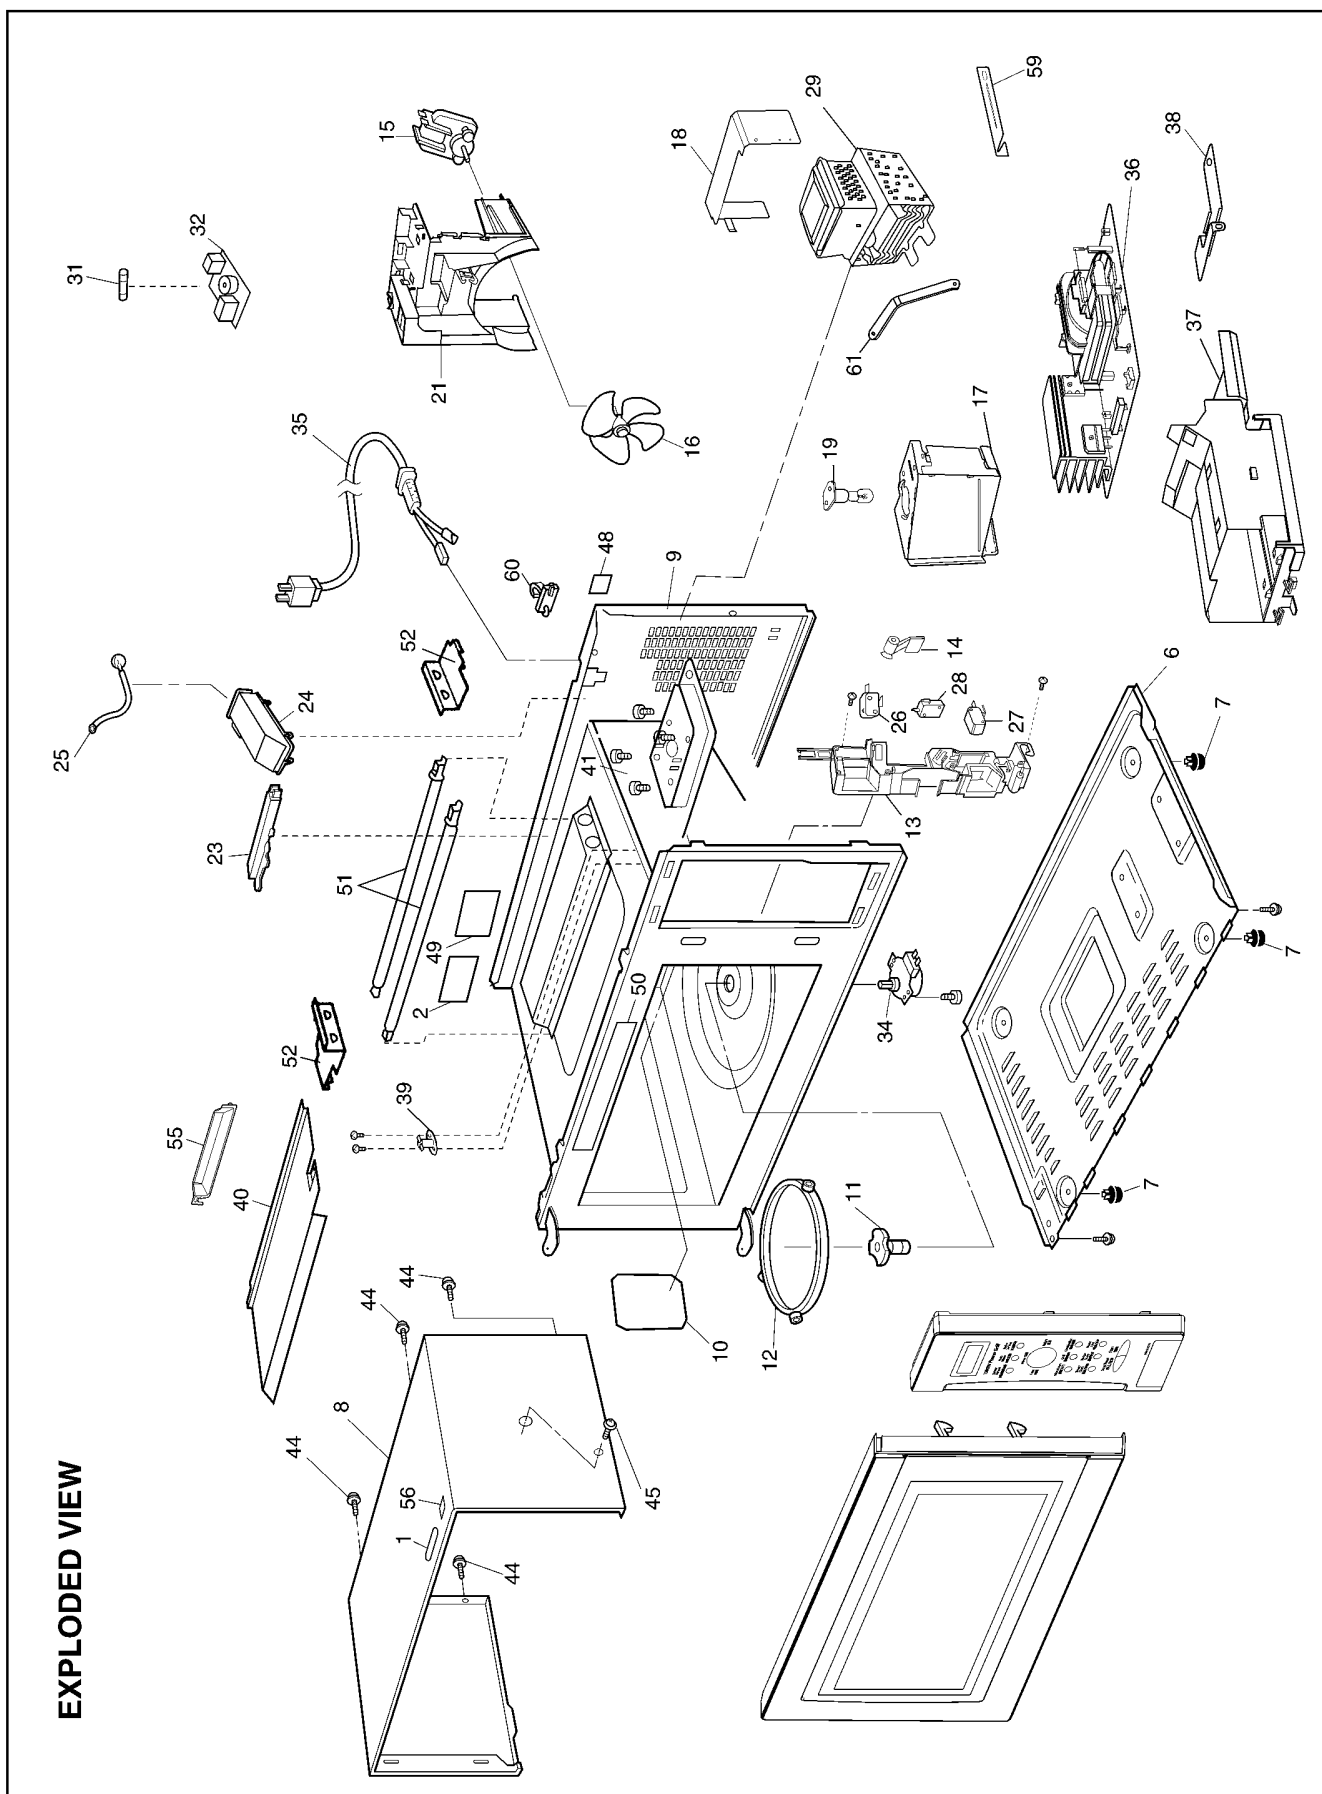

10.2. PARTS LIST

NOTE:

1. When ordering replacement part(s), please use part number(s) shown in this part list.

Do not use description of the part.


2. Important safety notice:

Components identified by \triangle mark have special characteristics important for safety.

When replacing any of these components, use only manufacture's specified parts.


Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
1		F00066S10WT	CAUTION LABEL	1	
2		F00079H60SWT	NAME PLATE	1	
6		F10019G00BPG	BASE	1	
7		F10084T00AP	RUBBER FOOT	4	
8		F10099G40SBP	CABINET BODY	1	
9	\triangle	F200A9H60WT	OVEN	1	
10		F20556W50XP	COVER	1	
11		F21315G10XN	PULLY SHAFT	1	
12		F290D5Q00AP	ROLLER RING (U)	1	
13	\triangle	F30205Q00AP	DOOR HOOK	1	
14		F31365Q00AP	HOOK LEVER A	1	
15		F400A5G60AP	FAN MOTOR	1	
16		F40085G10XN	FAN BLADE	1	
17		F40259G40BP	AIR GUIDE A	1	
18		F40425Q00APG	AIR GUIDE F	1	
19		F612E5U40AP	INCANDESCENT LAMP (U)	1	
21		F41445Q00AP	UPPER ORIFICE	1	
23		F64505Q00APG	SENSOR COVER B	1	
24		F65434W00AP	SENSOR COVER C	1	
25		J607S4T00AP	STEAM SENSOR	1	
26	\triangle	J61415G10XN	MICRO SWITCH	1	(PRIMARY LATCH SWITCH)
27	\triangle	F61415U30XN	MICRO SWITCH	1	(SECONDARY LATCH SWITCH)
28	\triangle	F61785U30XN	MICRO SWITCH	1	(SHORT SWITCH)
29	\triangle	2M261-M32JP	MAGNETRON	1	
31	\triangle	F62308F20AP	FUSE	1	(20A)
32		F692Y8F00APX	NOISE FILTER (U)	1	
34		F63265G60AP	TURNTABLE MOTOR	1	
35	\triangle	F900C8B20WT	AC CORD W/PLUG	1	
36		F606Y8X00AP	H.V.INVERTER (U)	1	
37		F65856M60AP	INVERTER BRACKET	1	
38		F66626H60AP	GROUNDING PLATE	1	
39		F61455G60XN	THERMAL CUTOUT	1	
40		F22175R00APG	INSULATION PLATE	1	
41		XTWFL4+12T	SCREW	4	FOR MAGNETRON
44		XTWFA4+12D	SCREW	4	FOR CABINET BODY
45		XTCAFL4+12AFS	SCREW	1	FOR CABINET BODY SIDE
48		F0005-6S10	EARTH LABEL	1	
49		F02629H60SWT	SCHEMATIC DIAGRAM LABEL	1	
50		F03349H60WT	MENU LABEL	1	
51		F630G6B80XN	HEATER (AU)	2	
52		F64605R00BP	HEATER MOUNTING PLATE	2	
55		F40245R00APG	EXHAUST GUIDE A	1	
56		F01508G60HP	NO TOUCHING LABEL	1	
59		F20345Q00CP	REINFORCE BRACKET	1	
60		F11404J60XN	STOPPER	1	
61		F20348B20WT	REINFORCE BRACKET	1	

10.3. ESCUTCHEON BASE ASSEMBLY

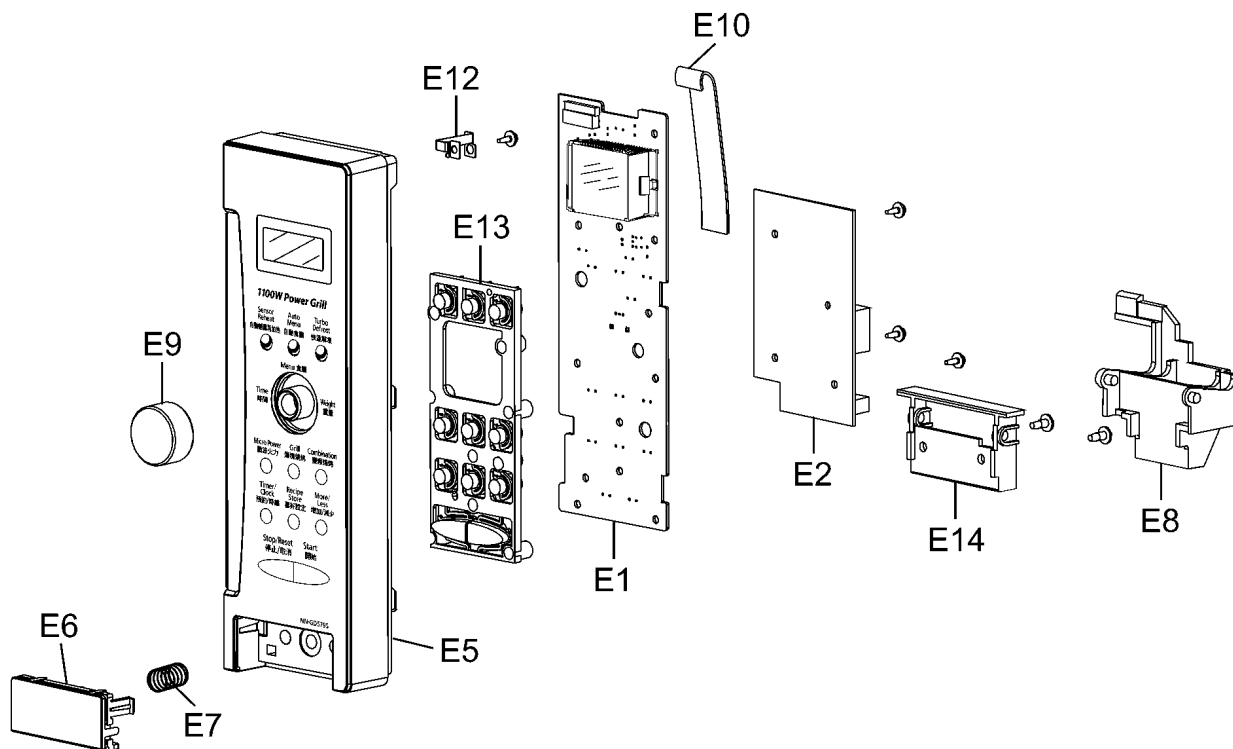


Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
E1	F603L9H60WT	D. P. CIRCUIT (AU)	1	
E2	F603Y9H60WT	D. P. CIRCUIT (DU)	1	
E5	F800L9H60SWT	ESCUTCHEON BASE	1	
E6	F891P8U00SBP	DOOR OPENING BUTTON (U)	1	
E7	F80375K00AP	COOK BUTTON SPRING	1	
E8	F82565Q00AP	DOOR OPENING LEVER	1	
E9	F83928P00KAP	DIAL	1	
E10	F66168U00XP	FLAT CABLE	1	
E12	F90098U00XP	GROUNDING PANEL	1	
E13	F82988W30SAP	BUTTON	1	
E14	F82578U00XP	LEVER BACKSTOP	1	

10.4. DOOR ASSEMBLY

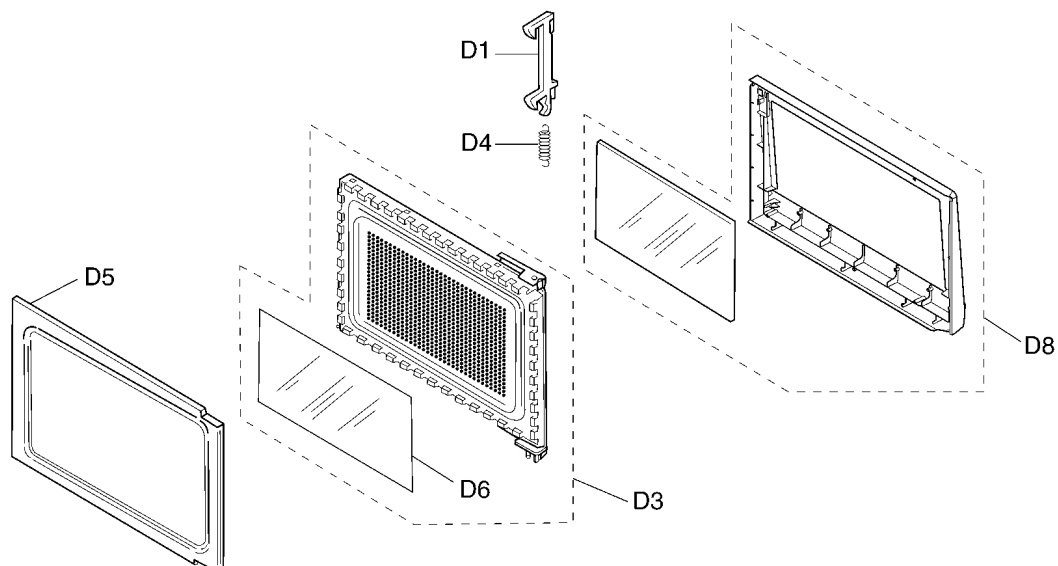


Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F30185Q00AP	DOOR KEY A	1	
D3	⚠	F302K5Q00AP	DOOR E (U)	1	
D4		F30215G10XN	DOOR KEY SPRING	1	
D5	⚠	F30855Q00AP	DOOR C	1	
D6	⚠	F31456V60XP	DOOR SCREEN A	1	
D8	⚠	F302A8U00BXP	DOOR A (U)	1	

10.5. WIRING MATERIALS

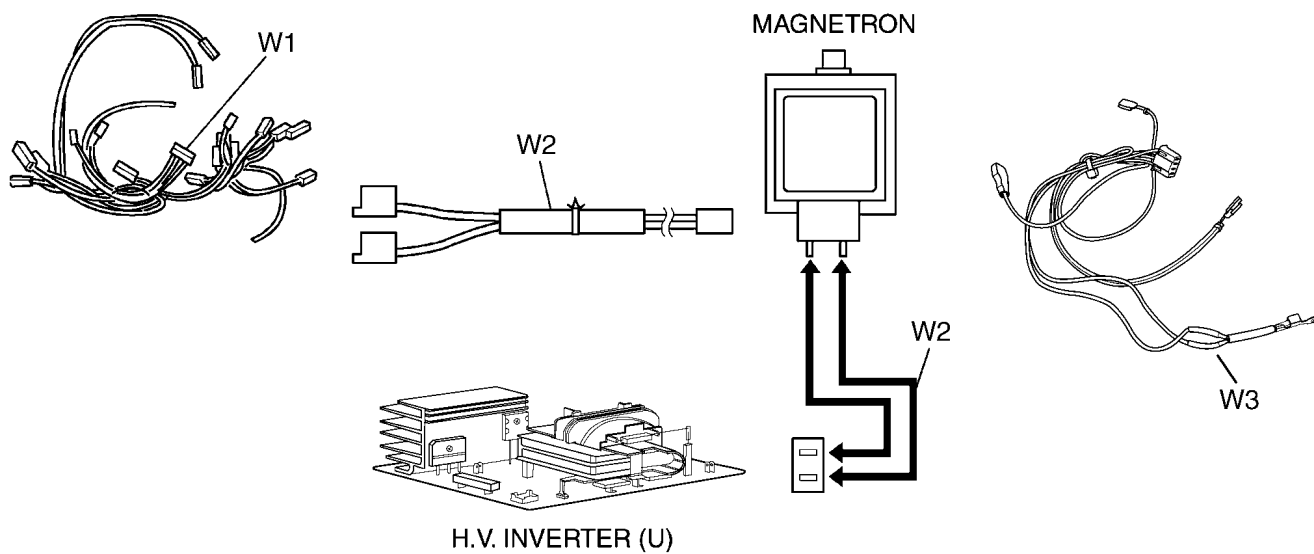

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
W1	F030A8C30WT	LEAD WIRE HARNESS	1	
W2	F030E8B20WT	H.V. LEAD WIRE	1	
W3	F03536W50AP	LEAD WIRE HARNESS U	1	(INCLUDING THERMISTOR)


10.6. PACKING AND ACCESSORIES

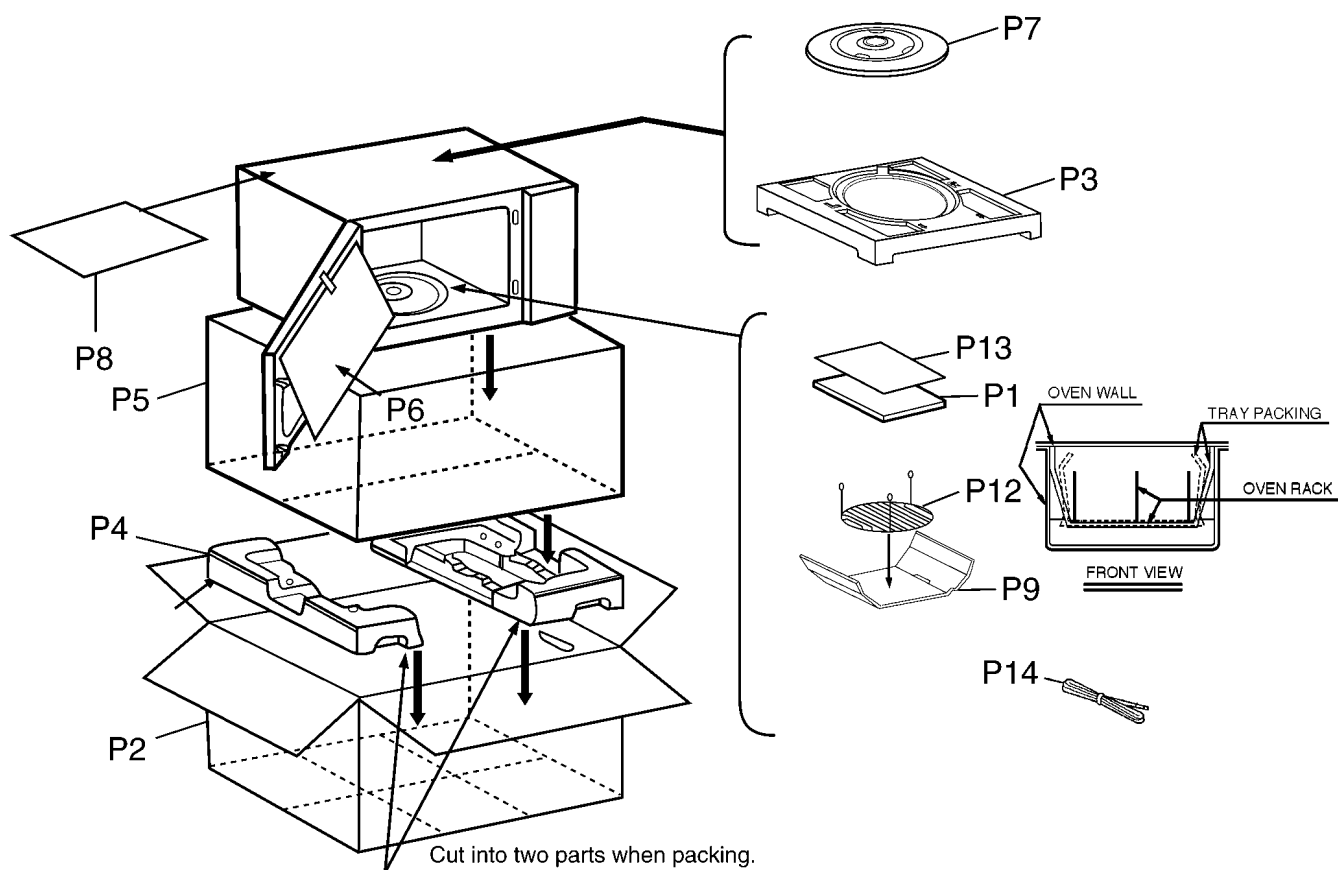


Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
P1	F00039H60WT	INSTRUCTION MANUAL	1	
P2	F01029H60SWT	PACKING CASE, PAPER	1	
P3	F01045Q00AP	UPPER FILLER	1	
P4	F01055Q00AP	LOWER FILLER	1	
P5	F01068100XN	P.E. BAG	1	
P6	F01078J00XN	DOOR SHEET	1	
P7	F06015Q00AP	COOKING TRAY	1	
P8	F01924T00AP	SHEET	1	
P9	F01085R00AP	RACK PACKING	1	
P12	F060V5U00XN	OVEN RACK	1	
P13	F000B9H60WT	COOKING GUIDE	1	
P14	F9164-6S10	EARTH LEAD	1	

11 DIGITAL PROGRAMMER CIRCUIT

11.1. SCHEMATIC DIAGRAM

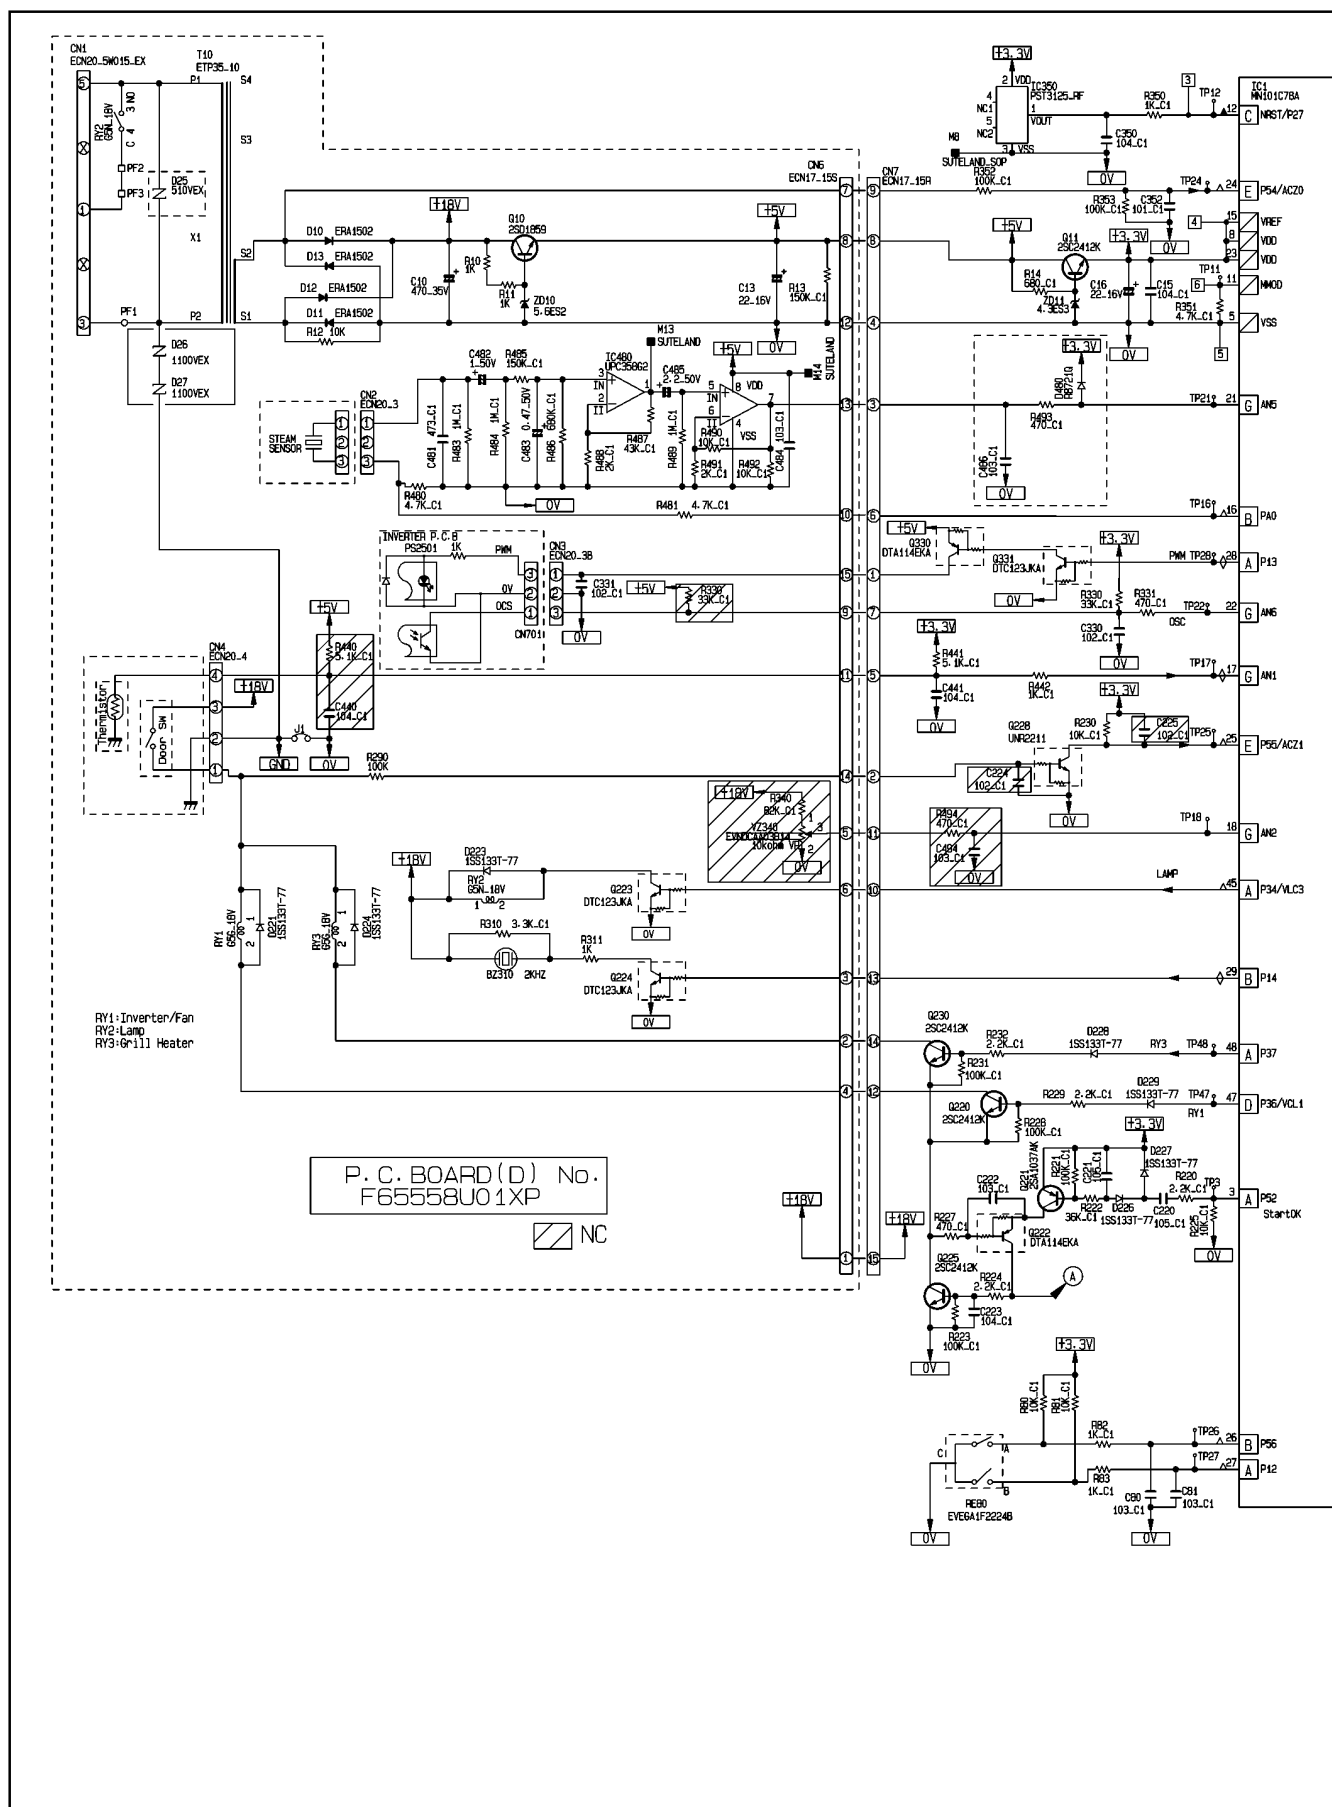

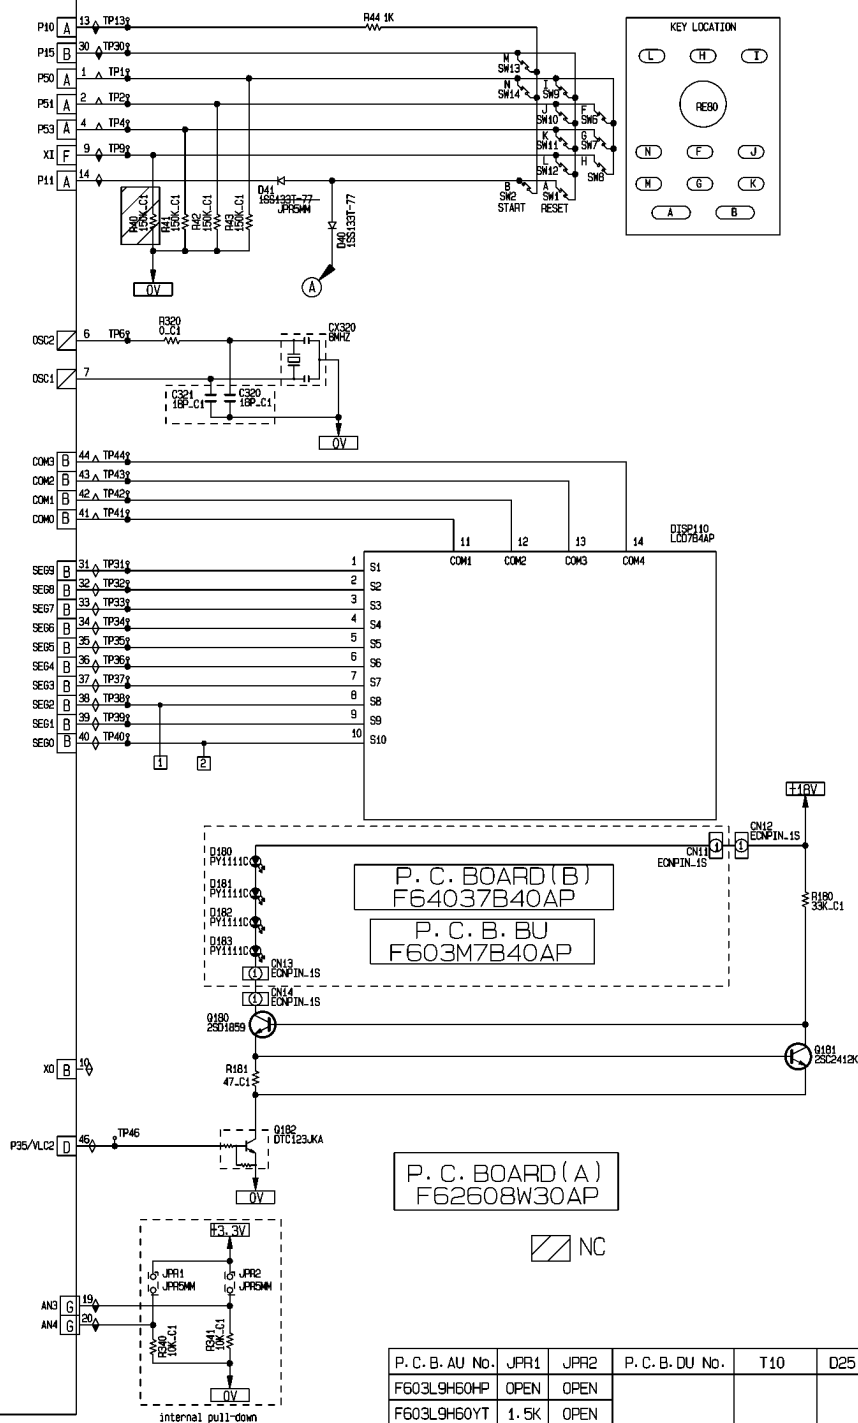

11.2. PARTS LIST

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310	L0DDEA000014	BUZZER	1	2.0KHz
C10	F2A1V471B281	AL CHEM CAPACITOR	1	470 μ F/35V
C13,C16	F2A1C220B624	AL CHEM CAPACITOR	2	22 μ F/16V
C482	F2A1H1R0B574	AL CHEM CAPACITOR	1	1 μ F/50V
C483	F2A1HR47B574	AL CHEM CAPACITOR	1	0.47 μ F/50V
C485	F2A1H2R2B574	AL CHEM CAPACITOR	1	2.2 μ F/50V
CX320	H2B800400007	CERAMIC RESONATOR	1	8.0MHz
DISP110	L5AAAEC000061	LCD	1	
DISP HOLDER	F66177D60AP	LCD HOLDER	1	
D40,D221,D223,D224,D226-D229	MA2C19600E	DIODE	8	
D10-D13	B0EAKT000025	DIODE	4	
D480	MA2C700A0F	DIODE	1	
IC1	MN101C78AFH	L.S.I.	1	
IC350	C0EBE0000401	IC	1	
IC480	C0ABBA000230	IC	1	
Q10,Q180	B1BAAJ000003	TRANSISTOR	2	
D25	D4EAY271A036	ZENER RESISTOR	1	270V
D26,D27	D4EAY112A036	ZENER RESISTOR	2	1100V
RY1,RY3	AEBGJQC25F18	POWER RELAY	2	
RY2	K6B1AZA00011	POWER RELAY	1	
T10	G4C2AAD00006	LOW VOLTAGE TRANSFORMER	1	
SW1,SW2,SW6,SW7,SW8,SW9,SW10,SW11,SW12,SW13,SW14	EVQ11L05R	SWITCH	11	
RE80	EVEJ1HF2224B	REVOLVING ENCODER	1	
ZD10	B0BA5R600016	ZENER DIODE	1	
ZD11	B0BA4R400002	ZENER DIODE	1	