

# Service Manual

Telephone Equipment

Caller ID Compatible

DECT  
**6.0**

Model No. **KX-TG4771B**  
**KX-TG4772B**  
**KX-TG4773B**  
**KX-TGA470B**

Digital Corded/Cordless Answering  
System

B: Black Version  
(for U.S.A.)



KX-TGA470B  
(Portable)



KX-TG4771B  
(Base Unit)



(Charger Unit)

## Configuration for each model


Model No	Base Unit	Portable	Charger Unit	Expandable
KX-TG4771	1 (TG4771)	1 (TGA470)	1	Up to 6
KX-TG4772	1 (TG4771)	2 (TGA470)	2	Up to 6
KX-TG4773	1 (TG4771)	3 (TGA470)	3	Up to 6
KX-TGA470*		1 (TGA470)	1	

\*KX-TGA470 is also an optional accessory, which contains a portable and a charger.

**WARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

**IMPORTANT SAFETY NOTICE**

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

**IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING**

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary slightly from the actual product.

# TABLE OF CONTENTS

	PAGE		PAGE
<b>1 Safety Precautions</b>	<b>4</b>	15.6. Charger Unit	84
1.1. For Service Technicians	4	<b>16 Exploded View and Replacement Parts List</b>	<b>85</b>
<b>2 Warning</b>	<b>4</b>	16.1. Cabinet and Electrical Parts (Base Unit)	85
2.1. Battery Caution	4	16.2. Cabinet and Electrical Parts (Portable)	86
2.2. About Lead Free Solder (PbF: Pb free)	4	16.3. Cabinet and Electrical Parts (Charger Unit)	87
2.3. Discarding of P. C. Board	5	16.4. Accessories and Packing Materials	88
<b>3 Specifications</b>	<b>6</b>	16.5. Replacement Parts List	92
<b>4 Technical Descriptions</b>	<b>7</b>		
4.1. US-DECT Description	7		
4.2. Block Diagram (Base Unit_Main)	9		
4.3. Block Diagram (Base Unit_RF Part)	10		
4.4. Circuit Operation (Base Unit)	11		
4.5. Block Diagram (Portable)	16		
4.6. Block Diagram (Portable_RF Part)	17		
4.7. Circuit Operation (Portable)	18		
4.8. Circuit Operation (Charger Unit)	20		
4.9. Signal Route	21		
<b>5 Location of Controls and Components</b>	<b>23</b>		
<b>6 Installation Instructions</b>	<b>23</b>		
<b>7 Operating Instructions</b>	<b>23</b>		
<b>8 Test Mode</b>	<b>24</b>		
8.1. Engineering Mode	24		
<b>9 Service Mode</b>	<b>28</b>		
9.1. How to Clear User Setting (Portable Only)	28		
<b>10 Troubleshooting Guide</b>	<b>29</b>		
10.1. Troubleshooting Flowchart	29		
<b>11 Disassembly and Assembly Instructions</b>	<b>43</b>		
11.1. Disassembly Instructions	43		
11.2. Assembly Instructions	47		
11.3. How to Replace the Portable LCD	48		
<b>12 Measurements and Adjustments</b>	<b>49</b>		
12.1. Equipment Required	49		
12.2. The Setting Method of JIG	49		
12.3. Adjustment Standard (Base Unit)	53		
12.4. Adjustment Standard (Charger Unit)	54		
12.5. Adjustment Standard (Portable)	55		
12.6. Things to Do after Replacing IC or X'tal	56		
12.7. Frequency Table	58		
<b>13 Miscellaneous</b>	<b>59</b>		
13.1. How to Replace the LLP (Leadless Leadframe Package) IC	59		
13.2. How to Replace the Flat Package IC	61		
13.3. Terminal Guide of the ICs, Transistors and Diodes	63		
<b>14 Schematic Diagram</b>	<b>64</b>		
14.1. For Schematic Diagram	64		
14.2. Base Unit (Main)	66		
14.3. Base Unit (Operation)	68		
14.4. Base Unit (LED)	69		
14.5. Portable (Main)	70		
14.6. Portable (LED)	72		
14.7. Charger Unit	73		
<b>15 Printed Circuit Board</b>	<b>75</b>		
15.1. Base Unit (Main)	75		
15.2. Base Unit (Operation)	77		
15.3. Base Unit (LED)	79		
15.4. Portable (Main)	81		
15.5. Portable (LED)	83		

# 1 Safety Precautions

## 1.1. For Service Technicians

- **Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work.**

1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
3. FASTON terminals shall be plugged straight in and unplugged straight out.

- **ICs and LSIs are vulnerable to static electricity.**

**When repairing, the following precautions will help prevent recurring malfunctions.**

1. Cover plastic parts boxes with aluminum foil.
2. Ground the soldering irons.
3. Use a conductive mat on worktable.
4. Do not grasp IC or LSI pins with bare fingers.

## 2 Warning

### 2.1. Battery Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

**Attention:**



A nickel metal hydride battery that is recyclable powers the product you have purchased.

Please call 1-800-8-BATTERY (1-800-822-8837) for information on how to recycle this battery.

### 2.2. About Lead Free Solder (PbF: Pb free)

**Note:**


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.

**Caution**




- PbF solder has a melting point that is 50 °F ~ 70 °F (30 °C ~ 40 °C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 °F ± 20 °F (370 °C ± 10 °C).
- Exercise care while using higher temperature soldering irons.:  
Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

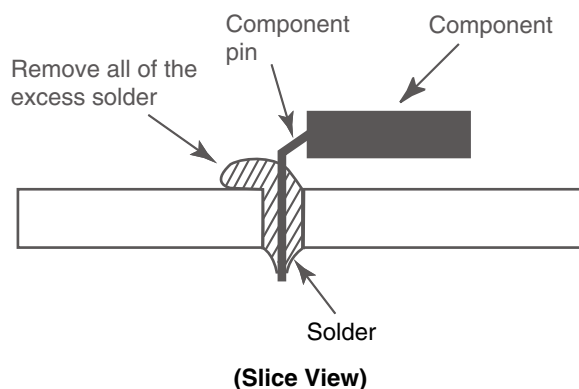

### 2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu), or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials.

The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

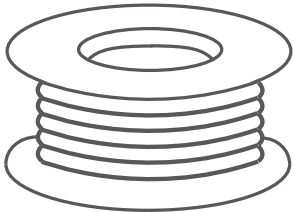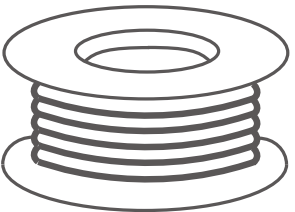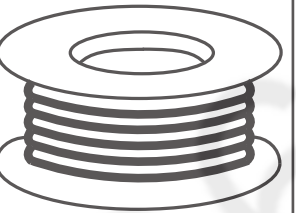0.3 mm X 100 g	0.6 mm X 100 g	1.0 mm X 100 g
		

### 2.3. Discarding of P. C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

### 3 Specifications

**■ Standard:**

 DECT 6.0 (Digital Enhanced Cordless  
Telecommunications 6.0)

**■ Number of channels:**

60 Duplex Channels

**■ Frequency range:**

1.92 GHz to 1.93 GHz

**■ Duplex procedure:**

TDMA (Time Division Multiple Access)

**■ Channel spacing:**

1,728 MHz

**■ Bit rate:**

1,152 kbit/s

**■ Modulation:**

GFSK (Gaussian Frequency Shift Keying)

**■ RF transmission power:**

115 mW (max.)

**■ Voice coding:**

ADPCM 32 kbit/s

	Base Unit	Portable	Charger
Power source	AC Adaptor (PNLV226Z, 120 V AC, 60 Hz)	Rechargeable Ni-MH battery AAA (R03) size (1.2 V 550 mAh)	AC Adaptor (PNLV226Z, 120 V AC, 60 Hz)
Receiving Method	Super Heterodyne	Super Heterodyne	_____
Oscillation Method	PLL synthesizer	PLL synthesizer	_____
Detecting Method	Quadrature Discriminator	Quadrature Discriminator	_____
Tolerance of OSC Frequency	13.824 MHz ± 83 Hz	13.824 MHz ± 83 Hz	_____
Modulation Method	Frequency Modulation	Frequency Modulation	_____
ID Code	40 bit	40 bit	_____
Ringer Equivalence No. (REN)	1.0B	_____	_____
Dialing Mode	Tone (DTMF)/Pulse	Tone (DTMF)/Pulse	_____
Redial	Up to 48 digits	Up to 48 digits	_____
Speed Dialer	Up to 24 digits (Phonebook)	Up to 24 digits (Phonebook)	_____
Power Consumption	Standby: Approx. 0.9 W Maximum: Approx. 1.5 W	11 days at Standby, 13 hours at Talk	Standby: Approx. 0.1 W, Maximum: Approx. 2.0 W
Operating Conditions	0 °C - 40 °C (32 °F - 104 °F) 20 % - 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F - 104 °F) 20 % - 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F - 104 °F) 20 % - 80 % relative air humidity (dry)
Dimensions (H x W x D)	Approx. 111 mm x 186 mm x 197 mm	Approx. 174 mm x 54 mm x 34 mm	Approx. 43 mm x 73 mm x 76 mm
Mass (Weight)	Approx. 650 g	Approx. 150 g	Approx. 50 g

**Note:**

- Design and specifications are subject to change without notice.

**Note for Service:**

- **Operation range:** Up to 300 m outdoors, Up to 50 m indoors, depending on the condition.
- **Analog telephone connection:** Telephone Line
- **Optional headset:** KX-TCA60, KX-TCA93, KX-TCA400, KX-TCA430
- **Optional T-adaptor:** KX-J66
- **Optional Range extender:** KX-TGA405



### 4.1.3. Signal Flowchart in the Radio Parts

#### Reception

##### Base unit:

A voice signal from TEL line is encoded to digital data and converted into a 1.9 GHz modulated radio signal by BBIC(IC501). The RF signal, after which is amplified in BBIC, is fed to selected antenna.

##### Portable:

As for a portable RF, RF signal is received in one antenna.

BBIC down-converts to 864 kHz IF signal from RX signal and demodulates it to digital data "RXDATA".

BBIC (IC1) converts RXDATA into a voice signal and outputs it to speaker.

#### Transmission

##### Portable:

A voice signal from microphone is encoded to digital data and converted into a 1.9 GHz modulated radio signal by BBIC(IC1). The RF signal, after which is amplified in BBIC, is fed to an antenna.

##### Base unit:


As for a base unit RF, RF signal is received in two antennas.

BBIC (IC501) compares RF signal levels and selects the antenna to be used. Then BBIC down-converts to 864 kHz IF signal from RX signal in the selected antenna, and demodulates it to digital data "RXDATA".

BBIC (IC501) converts RXDATA into a voice signal and outputs it to TEL line.



### 4.3. Block Diagram (Base Unit\_RF Part)

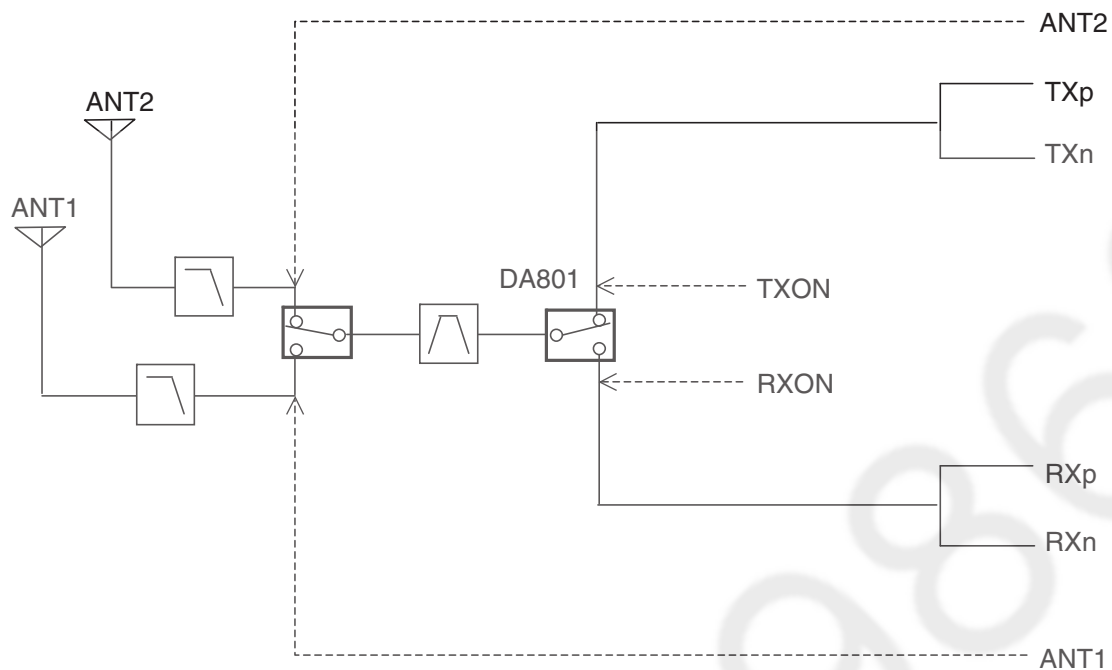


KX-TG4771/4772/4773 BLOCK DIAGRAM (Base Unit\_RF Part)

## 4.4. Circuit Operation (Base Unit)

### General Description:

(BBIC, Flash Memory, EERROM) is a digital speech/signal processing system that implements all the functions of speech compression, record and playback, and memory management required in a digital telephone answering machine.

The BBIC system is fully controlled by a host processor. The host processor provides activation and control of all that functions as follows.

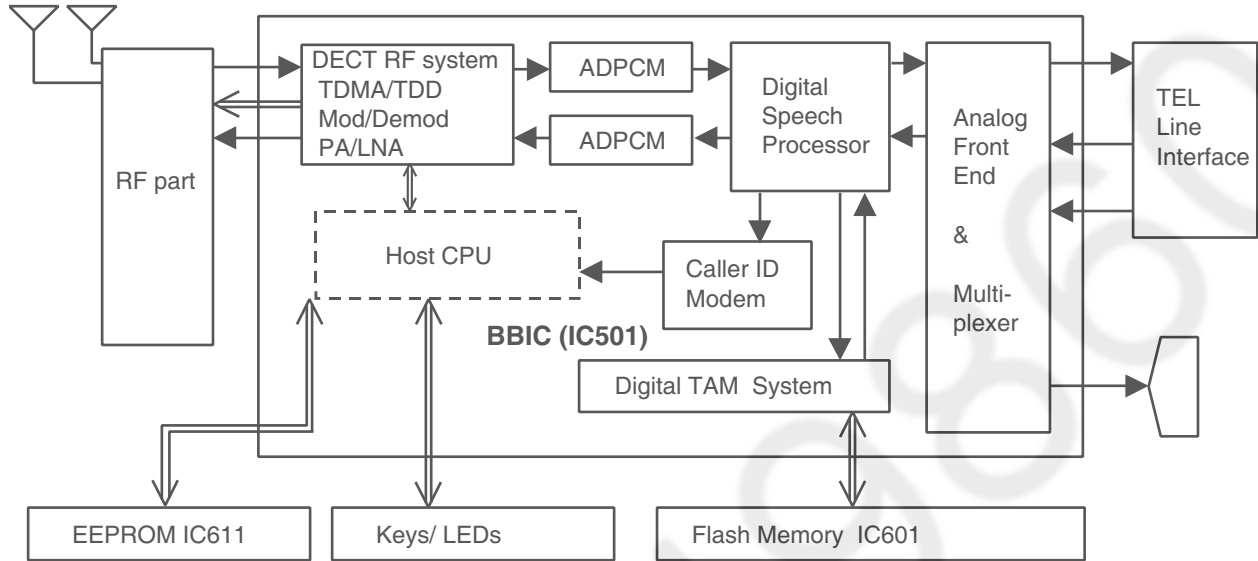

### 4.4.1. BBIC (Base Band IC: IC501)

- **Voice Message Recording/Play back**

The BBIC system uses a proprietary speech compression technique to record and store voice message in Flash Memory.

An error correction algorithm is used to enable playback of these messages from the Flash Memory.

- **DTMF Generator**

When the DTMF data from the portable is received, the DTMF signal is output.

- **Synthesized Voice (Pre-recorded message)**

The BBIC implements synthesized Voice, utilizing the built in speech detector and a Flash Memory, which stored the vocabulary.

- **Caller ID demodulation**

The BBIC implements monitor and demodulate the FSK/DTMF signals that provide CID information from the Central Office.

- **Digital Switching**

The voice signal from telephone line is transmitted to the portable or the voice signal from the portable is transmitted to the Telephone line, etc. They are determined by the signal path route operation of voice signal.

- **Block Interface Circuit**

RF part, LED, Key scan, Speaker, Telephone line.

### 4.4.2. Flash Memory (IC601)

Following information data is stored.

- **Voice signal**

ex: Pre-recorded Greeting message, Incoming message

### 4.4.3. EEPROM (IC611)

Following information data is stored.



- **Settings**

ex: message numbers, ID code, Flash Time, Tone/Pulse

#### 4.4.4. Power Supply Circuit/Reset Circuit

The power supply voltage from AC adaptor is converted to VBAT (3.0 V) in IC302. And +3.0V for peripherals and analog part is insulated from VBAT by Doubler of BBIC.

**Circuit Operation:**

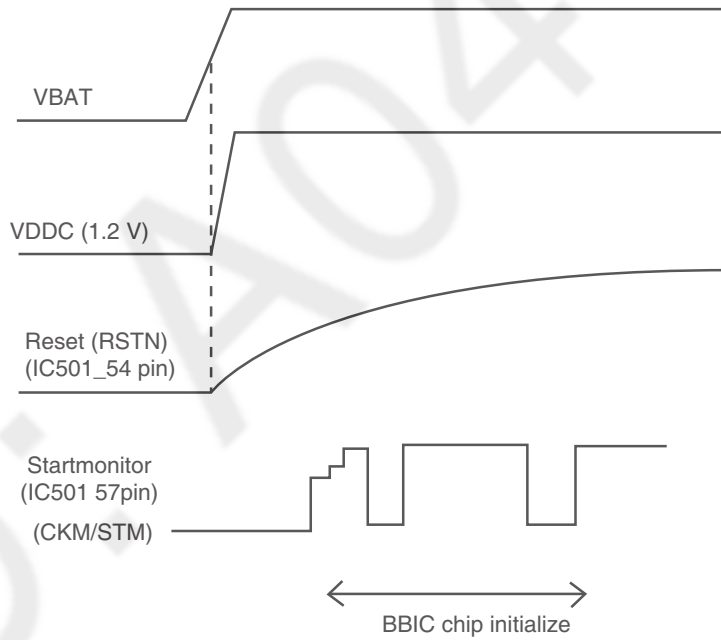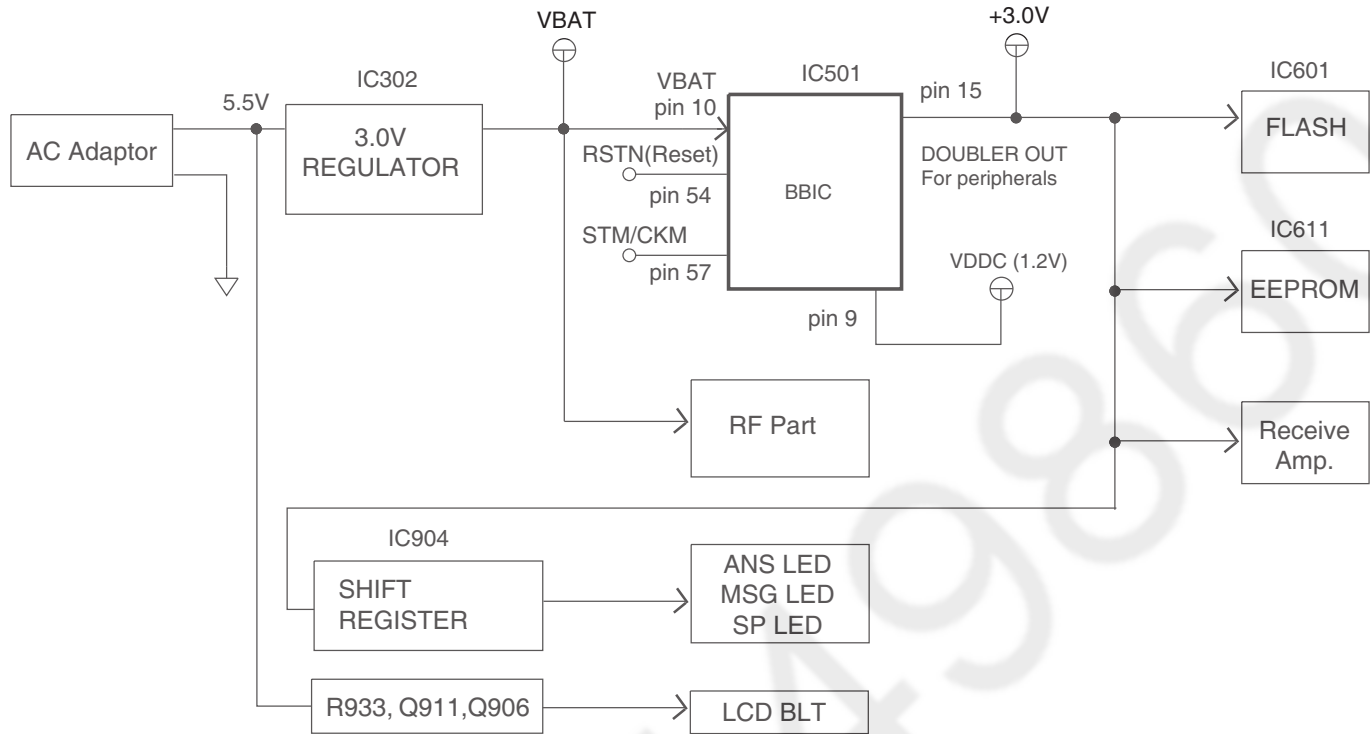

#### 4.4.5. Telephone Line Interface

##### Telephone Line Interface Circuit:

###### Function

- Bell signal detection
- ON/OFF hook and pulse dial circuit
- Side tone circuit

###### Bell signal detection and OFF HOOK circuit:

In the idle mode, Q141 is open to cut the DC loop current and decrease the ring load. When ring voltage appears at the Tip (T) and Ring (R) leads (When the telephone rings), the AC ring voltage is transferred as follows:

T → R111 → C111 → Q111 → BBIC pin 59

When the CPU (BBIC) detects a ring signal, Q141 turns on, thus providing an off-hook condition (active DC current flow through the circuit). Following signal flow is the DC current flow.

T → D101 → Q902 → Q161 → R163 → R167 → D908 → D909 → Q913 → D101 → P101 → R

###### ON HOOK Circuit:

Q902 is open, Q902 is connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an on-hook condition.

###### Pulse Dial Circuit:

Pin 6 of BBIC turns Q902 ON/OFF to make the pulse dialing.

###### Side Tone Circuit:

Basically this circuit prevents the TX signal from feeding back to RX signal. As for this unit, TX signal feed back from Q161 is canceled by the canceller circuit of BBIC.

#### 4.4.6. Parallel Connection Detect Circuit/Auto Disconnect Circuit

##### Function:

In order to disable call waiting and stutter tone functions when using telephones connected in parallel, it is necessary to have a circuit that judges whether a telephone connected in parallel is in use or not. This circuit determines whether the telephone connected in parallel is on hook or off hook by detecting changes in the T/R voltage.

##### Circuit Operation:

Parallel connection detection when on hook:

When on hook, the voltage is monitored at pin 17 of IC501. There is no parallel connection if the voltage is 0.54 V or higher, while a parallel connection is deemed to exist if the voltage is lower.

Parallel connection detection when off hook:

When off hook, the voltage is monitored at pin 18 of IC501; the presence/absence of a parallel connection is determined by detecting the voltage changes.

If the Auto disconnect function is ON and statuses are Hold, receiving ICM, OGM transmitting, BBIC disconnects the line after detecting parallel connection is off hook.

## 4.4.7. Calling Line Identification (Caller ID)/Call Waiting Caller ID


### Function:

#### Caller ID


The caller ID is a chargeable ID which the user of a telephone circuit obtains by entering a contract with the telephone company to utilize a caller ID service. For this reason, the operation of this circuit assumes that a caller ID service contract has been entered for the circuit being used. The data for the caller ID from the telephone exchange is sent during the interval between the first and second rings of the bell signal. The data from the telephone exchange is a modem signal which is modulated in an FSK (Frequency Shift Keying) \* format. Data "1" is a 1200 Hz sine wave, and data "0" is a 2200 Hz sine wave. There are two types of the message format which can be received: i.e. the single message format and plural message format. The plural message format allows to transmit the name and data code information in addition to the time and telephone number data.

\*: Also the telephone exchange service provides other formats.

#### • Single message format

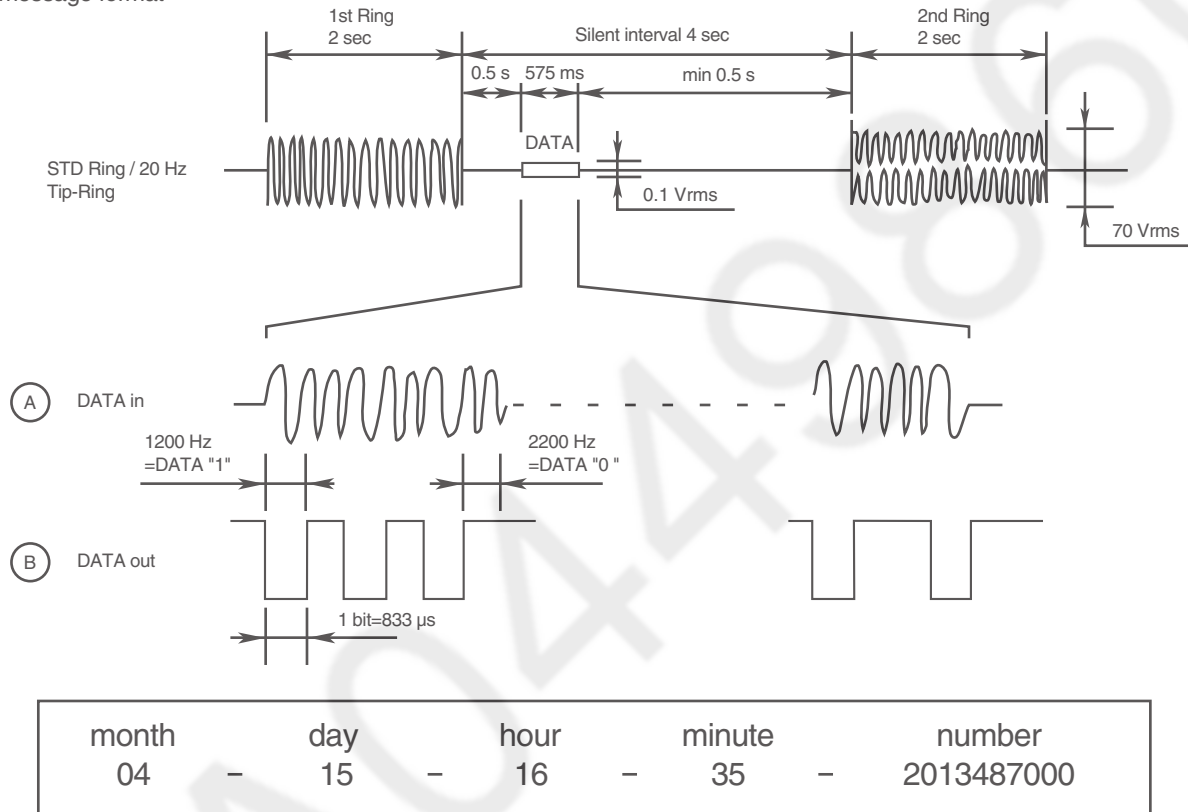

#### • Plural message format

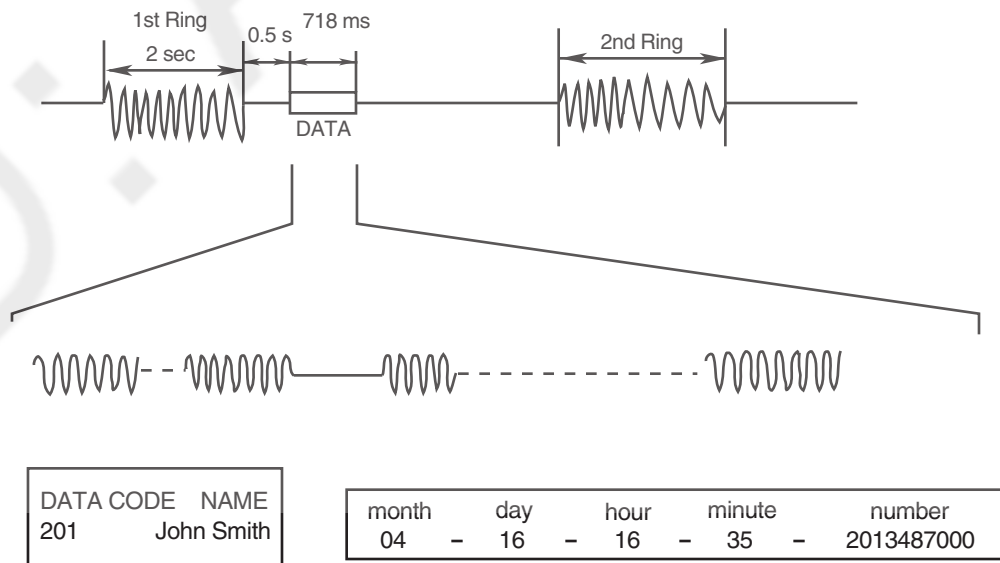

## Call Waiting Caller ID

Calling Identity Delivery on Call Waiting (CIDCW) is a CLASS service that allows a customer, while off-hook on an existing call, to receive information about a calling party on a waited call. The transmission of the calling information takes place almost immediately after the customer is alerted to the new call so he/she can use this information to decide whether to take the new call.


### Function:

The telephone exchange transmits or receives CAS and ACK signals through each voice RX/TX route. Then FSK data and MARK data pass the following route.


Telephone Line → P101 → C121, C122 → R121, R122 → IC501 (25, 24).

If the unit deems that a telephone connected in parallel is in use, ACK is not returned even if CAS is received, and the information for the second and subsequent callers is not displayed on the portable display.

## Call Waiting Format

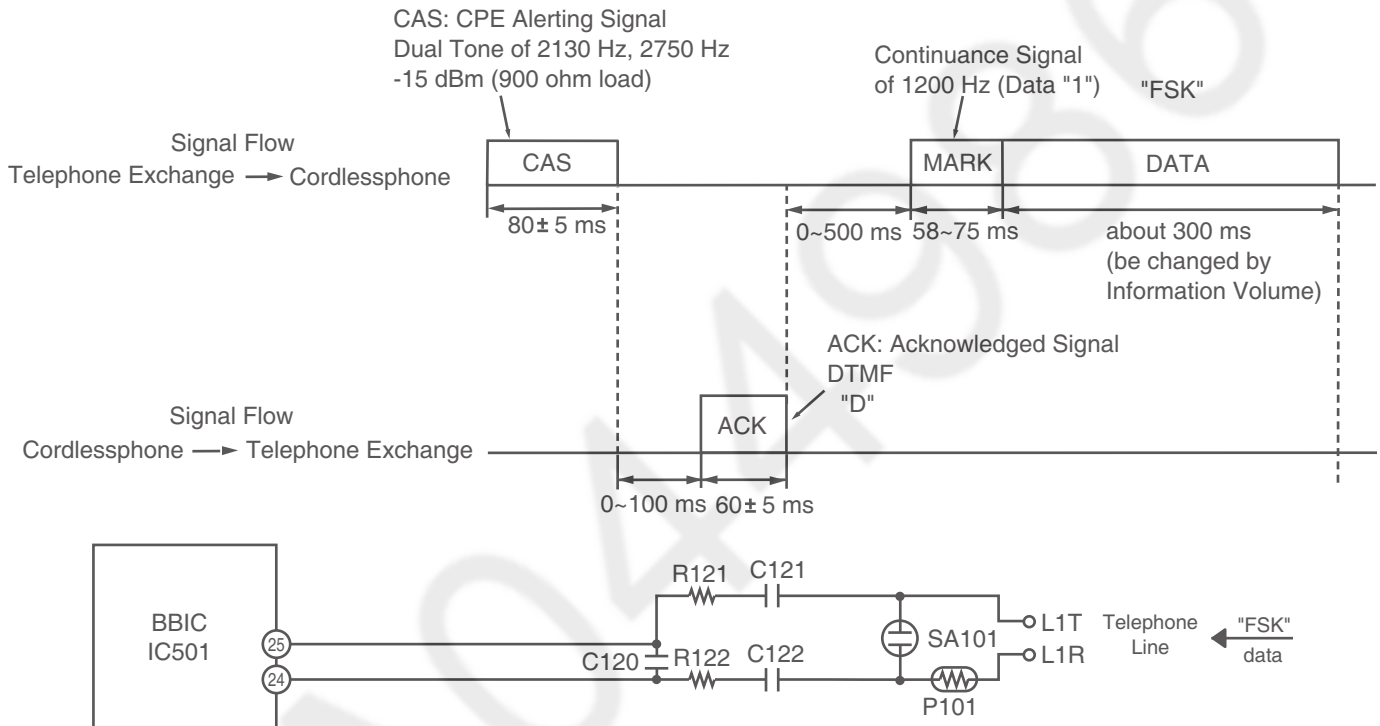


## 4.5. Block Diagram (Portable)

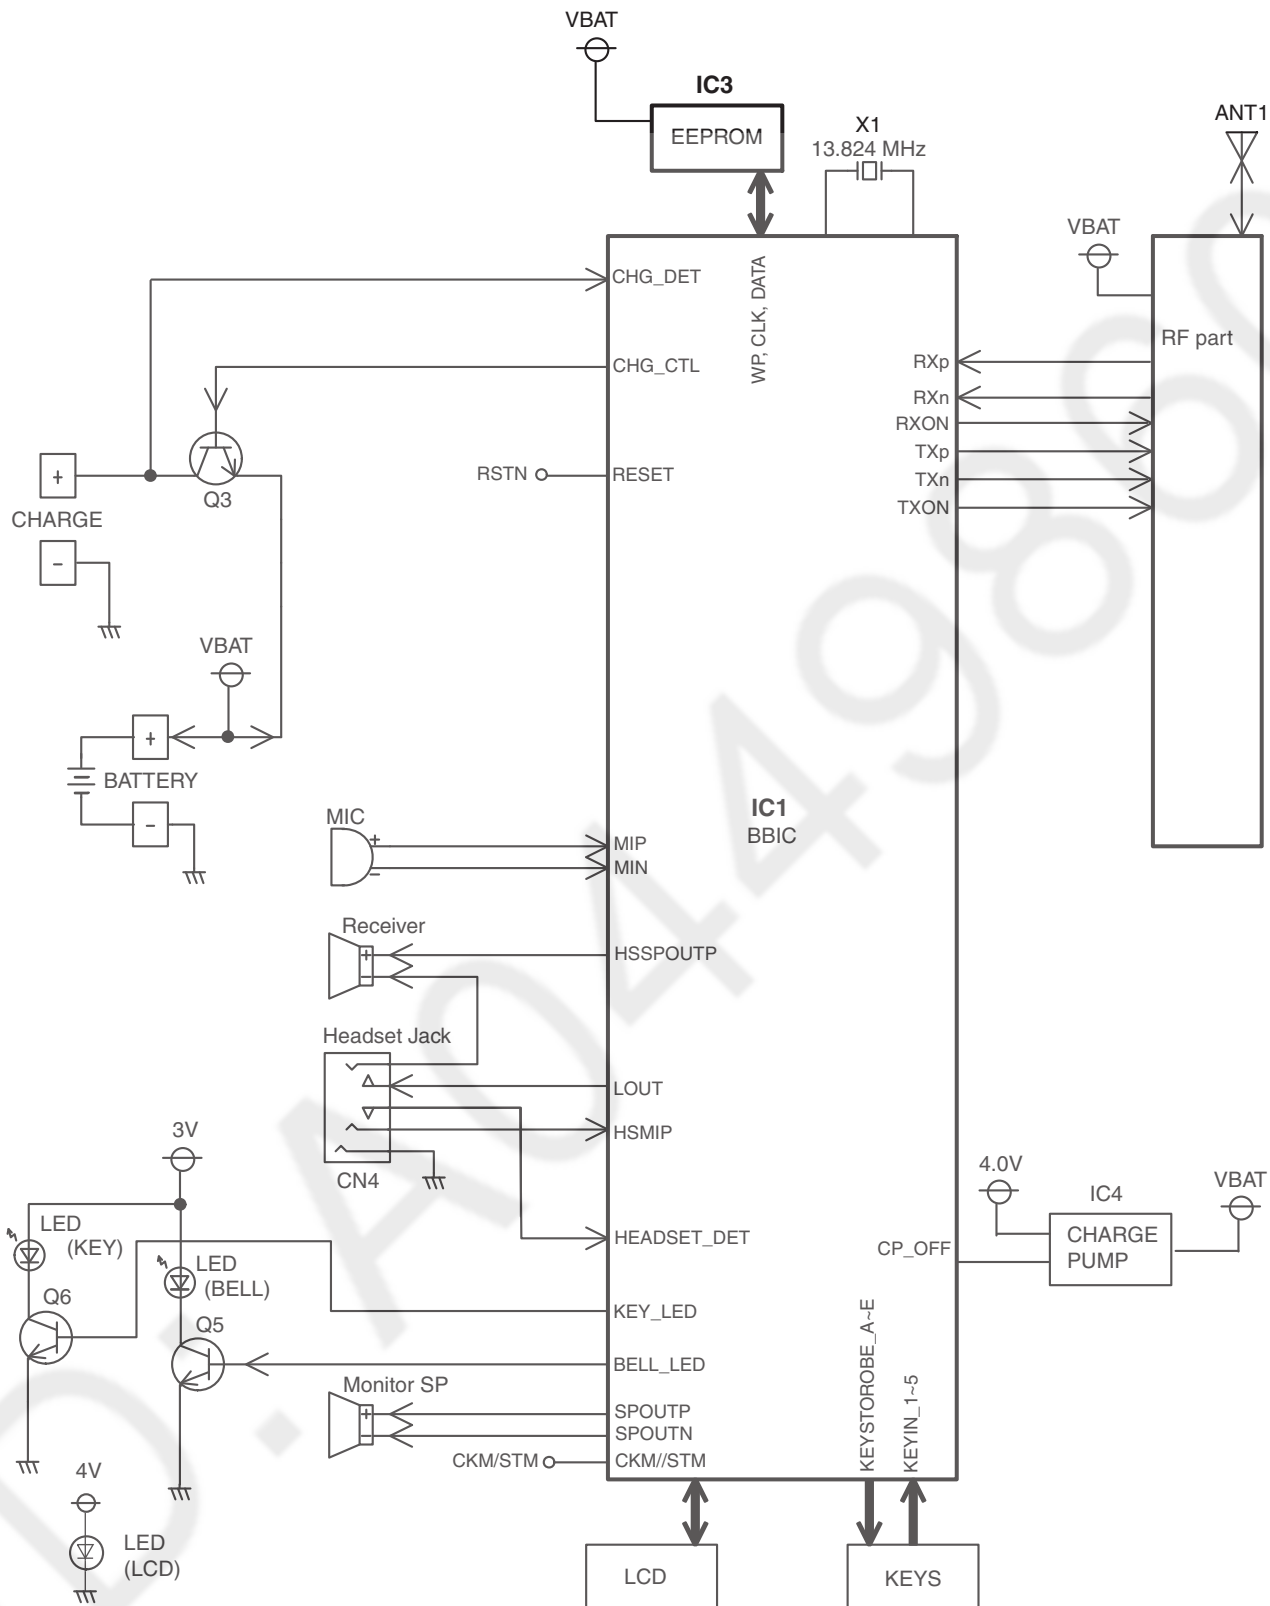

KX-TGA470 BLOCK DIAGRAM (Portable)

#### 4.6. Block Diagram (Portable\_RF Part)

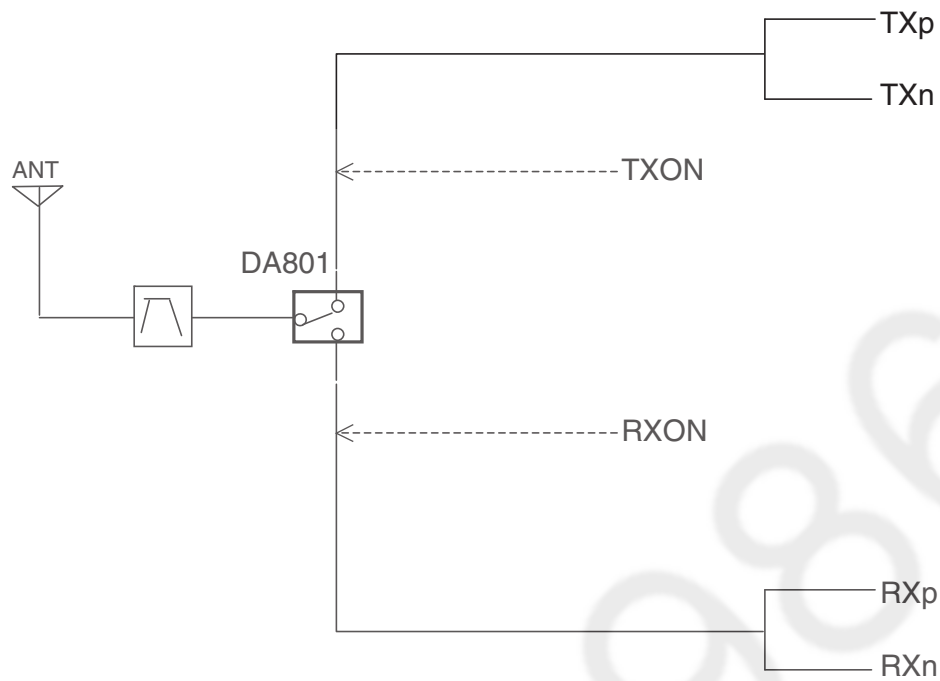

KX-TGA470 BLOCK DIAGRAM (Portable\_RF Part)

## 4.7. Circuit Operation (Portable)

### 4.7.1. Outline

Portable consists of the following ICs as shown in **Block Diagram (Portable)** (P.16).

- DECT BBIC (**B**ase **B**and IC): IC1
  - All data signals (forming/analyzing ACK or CMD signal)
  - All interfaces (ex: Key, Detector Circuit, Charge, EEPROM, LCD)
- EEPROM: IC3
  - Setting data is stored. (e.g. ID, user setting)



### 4.7.2. Power Supply Circuit/Reset Circuit

#### Circuit Operation:

When power on the Portable, the voltage is as follows;

BATTERY(2.2 V ~ 2.6 V: BATT+) → F1 → BBC1 (IC1) 10 pin

The Reset signal generates IC1 (54 pin) and 1.8 V.

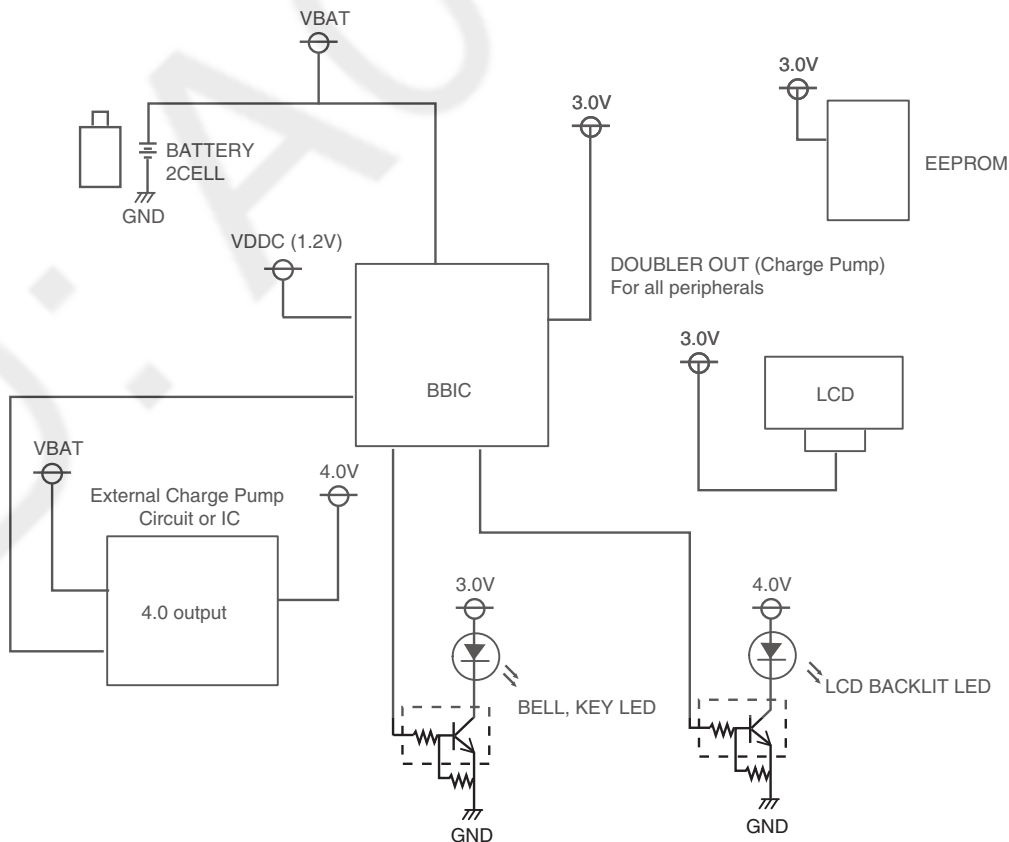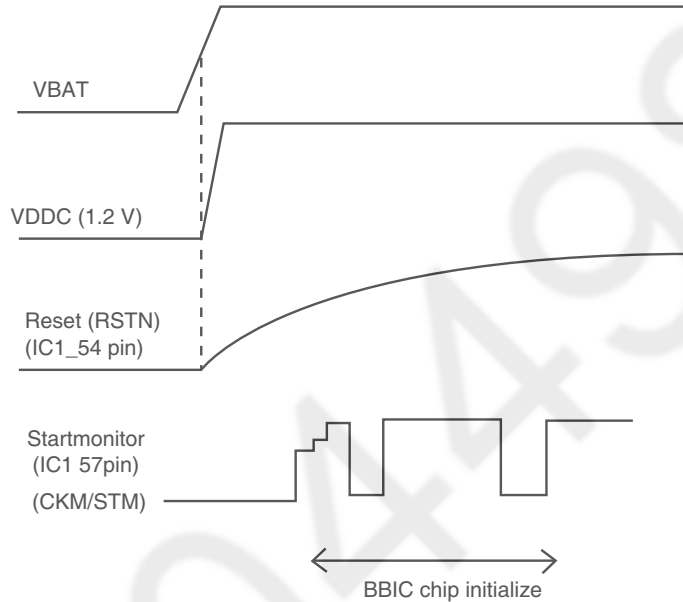




## 4.8. Circuit Operation (Charger Unit)

Charge control is executed at Portable side so that the operation when using charger is also controlled by Portable.

Refer to **Circuit Operation (Portable)** (P.18)

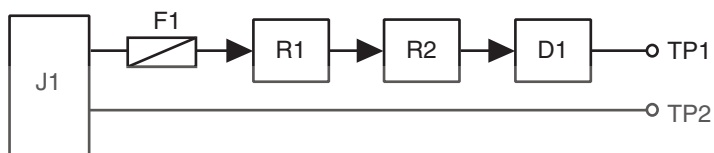

AC Adaptor

The route for this is as follows: DC+pin of J1(+) → F1 → R1 → R2 → D1 → CHARGE+pad → Portable → CHARGE-pad → DC-pin of J1(-).

## 4.9. Signal Route

SIGNAL ROUTE	IN	→	ROUTE	→	OUT
PORTABLE TX	PORTABLE MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - <PORTABLE_RF_TX_ROUTE> - ANT. --- ---ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47 - 28) - C184 - Q161 - Q902 - D101 - [P101] - T/R(TEL LINE)				
PORTABLE RX	T/R(TEL LINE) - [P101] - D101 - Q902 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 44/45) - <BASE_UNIT_RF_TX_ROUTE> - ANT. --- --- ANT. - <PORTABLE_RF_RX_ROUTE> - IC1(28/27) - C16 - L8 - PORTABLE_JACK(5 - 4) - PORTABLE SPEAKER				
PORTABLE TX	PORTABLE_JACK(2) - R80 - C14 - R22 - IC1(25) - <PORTABLE_RF_TX_ROUTE> - ANT. --- ---ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47 - 28) - C184 - Q161 - Q902 - D101 - [P101] - T/R(TEL LINE)				
PORTABLE RX	T/R(TEL LINE) - [P101] - D101 - Q902 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 44/45) - <BASE_UNIT_RF_TX_ROUTE> - ANT. --- --- ANT. - <PORTABLE_RF_RX_ROUTE> - IC1(28) - C16 - L8 - HEADSET_JACK(5)				
PORTABLE SP-Phone TX	PORTABLE MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - <PORTABLE_RF_TX_ROUTE> - ANT. --- ---ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47 - 28) - C184 - Q161 - Q902 - D101 - [P101] - T/R(TEL LINE)				
PORTABLE SP-Phone RX	T/R(TEL LINE) - [P101] - D101 - Q902 - R165 - C173 - Q171 - C178 - R178 - IC501(16-44/45) - <BASE_UNIT_RF_TX_ROUTE> - ANT. --- --- ANT. - <PORTABLE_RF_RX_ROUTE> - IC1(29/31) - Backside SP				
BASE HANDSET TX	MIC - C457/C458 - R945 - IC501(23/22-28) - C184 - Q161 - Q902 - D101 - [P101] - T/R(TEL LINE)				
BASE HANDSET RX	T/R(TEL LINE) - [P101] - D101 - Q902 - Q161 - C173 - Q171 - C178 - R178 - IC501(16-27/GND) - RECEIVER				
BASE SP-Phone TX	MIC - C918/C919 - R946 - IC501 (23/22 - 28) - C184 - Q161 - Q902 - - D101 - [P101] - T/R(TEL LINE)				
BASE SP-Phone RX	T/R(TEL LINE) - [P101] - D101 - Q902 - R165 - C173 - Q171 - C178 - R178 - IC501 (16 - 29/31) - SPEAKER				
INTERCOM PORTABLE TO BASE UNIT	PORTABLE MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - <PORTABLE_RF_TX_ROUTE> - ANT. --- --- ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47 - 29/31) - SPEAKER				
INTERCOM BASE UNIT TO PORTABLE	HANDSETMIC/MIC - C457&C458/C918&919 - R945/R946 - IC501(23/22 - 44/45) - <BASE_UNIT_RF_TX_ROUTE> - ANT. --- --- ANT. - <PORTABLE_RF_RX_ROUTE> - IC1(28/27) - C16 - L8 - PORTABLE_JACK(5 - 4) - R11 - PORTABLE SPEAKER				
GREETING RECORDING	PORTABLE MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - <PORTABLE_RF_TX_ROUTE> - ANT. --- ---ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(46/47- 73/74) - IC601				
GREETING PLAY TO TEL LINE	IC601 - IC501(73/74 - 28) - C184 - Q161 - Q902 - D101 - [P101] - T/R(TEL LINE)				
ICM RECORDING	T/R(TEL LINE) - [P101] - D101 - Q902 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 73/74) - IC601				
ICM PLAY TO SPEAKER	IC601 - IC501(73/74 - 29/31) - SPEAKER				
DTMF SIGNAL TO TEL LINE	IC501(28) - C184 - Q161 - Q902 - D101 - [P101] - T/R(TEL LINE)				
CALLER ID	T/R(TEL LINE) - [P101] - C121/C122 - R121/R122 - IC501(24/25)				
BELL DETECTION	T/R(TEL LINE) - [P101] - R111/R112 - C111/C112 - Q111 - IC501(59)				

**Note:**

: inside of Portable

## RF part signal route

SIGNAL ROUTE	IN	→	ROUTE	→	OUT
<b>PORTABLE RF</b> [ TX_ROUTE ]	IC1(44/45) - L809 - C812 - DA801 - C803 - C801 - ANT				
<b>PORTABLE RF</b> [ RX_ROUTE ]	ANT - C801 - C803 - DA801 - C826 - IC1(46/47)				
<b>BASE UNIT RF</b> [ TX_ROUTE ]	IC501(44/45) - C812 - L809 - DA801 - C895 - DA802 - C894/C893 - ANT1/ANT2				
<b>BASE UNIT RF</b> [ RX_ROUTE ]	ANT1/ANT2 - C894/C893 - DA802 - C895 - DA801 - C826 - IC501(46/47)				

### Note:

: inside of Portable

## 5 Location of Controls and Components

Refer to the Operating Instructions.

**Note:**

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

## 6 Installation Instructions

Refer to the Operating Instructions.

**Note:**

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

## 7 Operating Instructions

Refer to the Operating Instructions.

**Note:**

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.


## 8 Test Mode

### 8.1. Engineering Mode

#### 8.1.1. Base Unit

##### Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

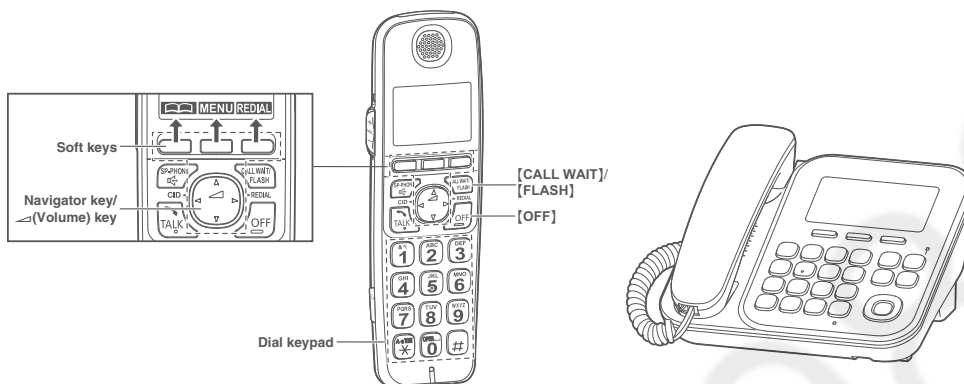

##### H/S key operation


- 1). Press **MENU**.
- 2). Select "Initial Setting" using **[▲]** or **[▼]** then press **SELECT** or **[▶]**.
 

Select "Set tel line" using **[▲]** or **[▼]** then press **SELECT** or **[▶]**.
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".
 

**Note:** 7262 7664 = PANA SONI  
(see letters printed on dial keys)
- 4). Select "Write EEP" using **[▲]** or **[▼]** then press **SELECT** or **[▶]**.
- 5). Enter "●", "●", "●", "●" (Address). (\*1)
- 6). Enter "＊", "＊" (New Data). (\*1)
- 7). Press **OK**, a long confirmation beep will be heard.
- 8). Press **[OFF]** to return to standby mode.

After that, turn the base unit power off and then power on.

##### H/S LCD

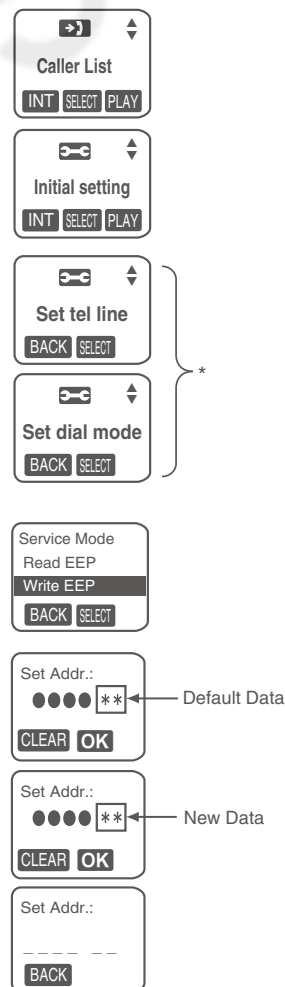

Note: \* To enter "Set dial mode", press **SELECT** or **[▶]** at "Set tel line".  
It is necessary to turn on the power of base unit.

**Frequently Used Items (Base Unit)**

ex.)

Items	Address	Default Data	New Data		Remarks
Frequency	00 07 / 00 08	00/01	-	-	Use these items in a <b>READ-ONLY</b> mode to confirm the contents. Careless rewriting may cause serious damage to the computer system.
ID	00 02 ~ 00 06	Given value	-	-	

**Note:**


(\*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex)	Input Keys	Desired Number (hex)	Input Keys
0	0	A	[Flash] + 0
1	1	B	[Flash] + 1
.	.	C	[Flash] + 2
.	.	D	[Flash] + 3
.	.	E	[Flash] + 4
9	9	F	[Flash] + 5

## 8.1.2. Portable

### Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

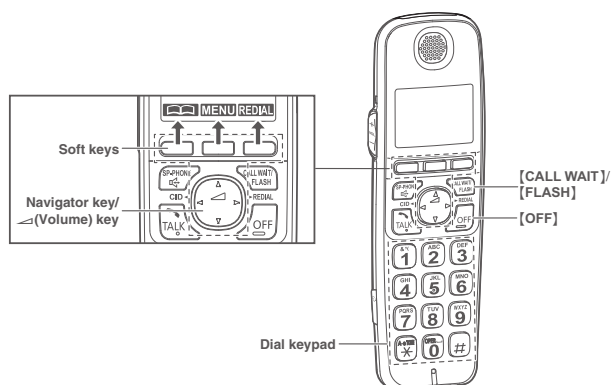

### H/S key operation

- 1). Press **MENU**.
- 2). Select "Initial Setting" using **[▲]** or **[▼]** then press **SELECT** or **[▶]**.
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".  
**Note:** 7262 7664 = PANA SONI  
(see letters printed on dial keys)




- 4). Select "Write EEP" using **[▲]** or **[▼]** then press **SELECT** or **[▶]**.
- 5). Enter "●", "●", "●", "●" (Address). (\*1)

- 6). Enter "●", "●" (New Data). (\*1)

- 7). Press **OK**, a long confirmation beep will be heard.

- 8). Press **[OFF]** to return to standby mode.  
After that, remove and reinsert the batteries. Press the Power button for about 1 second if the power is not turned on.

### H/S LCD

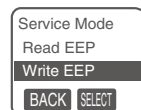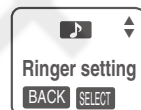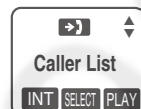

**Frequently Used Items (Portable)**

ex.)

Items	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Battery Low	00 12/00 13	00 / 00	-	-	-	(*2)
Frequency	00 07 / 00 08	00 / 01	-	-	-	
ID	00 02 ~ 00 06	Given value	-	-	-	

**Note:**

(\*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[Flash] + 0
1	1	B	[Flash] + 1
.	.	C	[Flash] + 2
.	.	D	[Flash] + 3
.	.	E	[Flash] + 4
9	9	F	[Flash] + 5

(\*2) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the Portable.

## 9 Service Mode

### 9.1. How to Clear User Setting (Portable Only)

Portable


Press **[2]**, **[5]**, **[8]**, **[0]** simultaneously until a beep sound is heard. Then single portable is initialized.  
(The contents of user setting are reset to factory default)

\*Usage time is not cleared.

# 10 Troubleshooting Guide

## 10.1. Troubleshooting Flowchart

### FLOW CHART

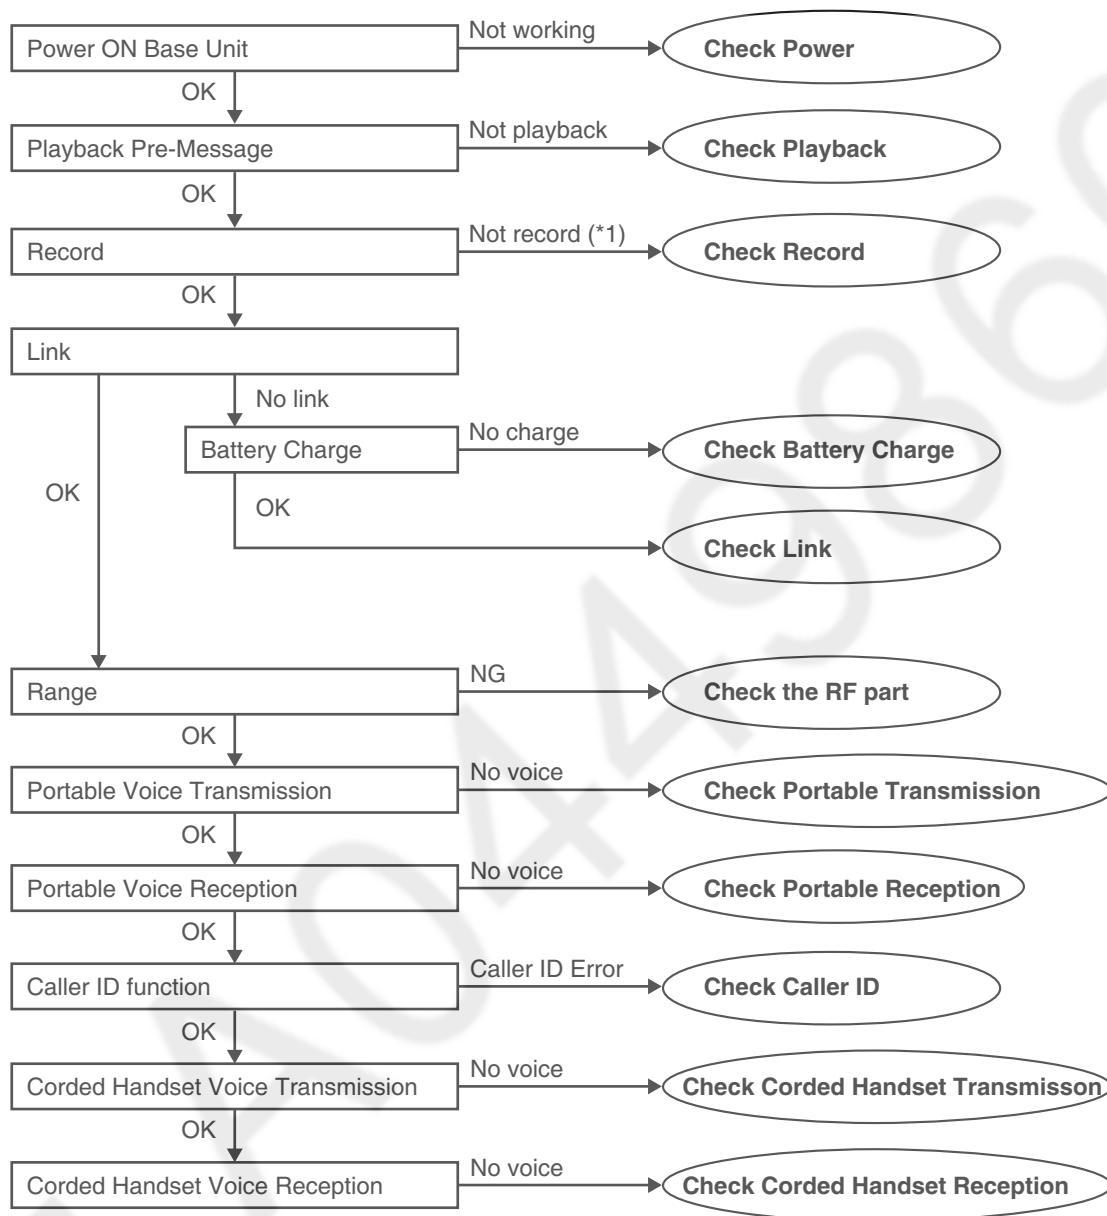

#### Cross Reference:

**Check Power** (P.30)  
**Check Playback** (P.34)  
**Check Record** (P.31)  
**Check Battery Charge** (P.34)  
**Check Link** (P.35)  
**Check the RF part** (P.37)  
**Check Portable Transmission** (P.42)  
**Check Portable Reception** (P.42)  
**Check Caller ID** (P.42)  
**Check SP-phone Transmission** (P.42)  
**Check SP-phone Reception** (P.42)


<How to change the Auto Disconnect activation time and VOX level> (P.32) item (A) and (B).

#### Note:

(\*1) When a user claims that the unit disconnects a call right after the greeting message and no incoming messages can be recorded, this symptom can not be reappeared with TEL simulator in the service center. In this case, try to change the Auto disconnect activation time and Vox level.

## 10.1.1. Check Power


### 10.1.1.1. Base Unit

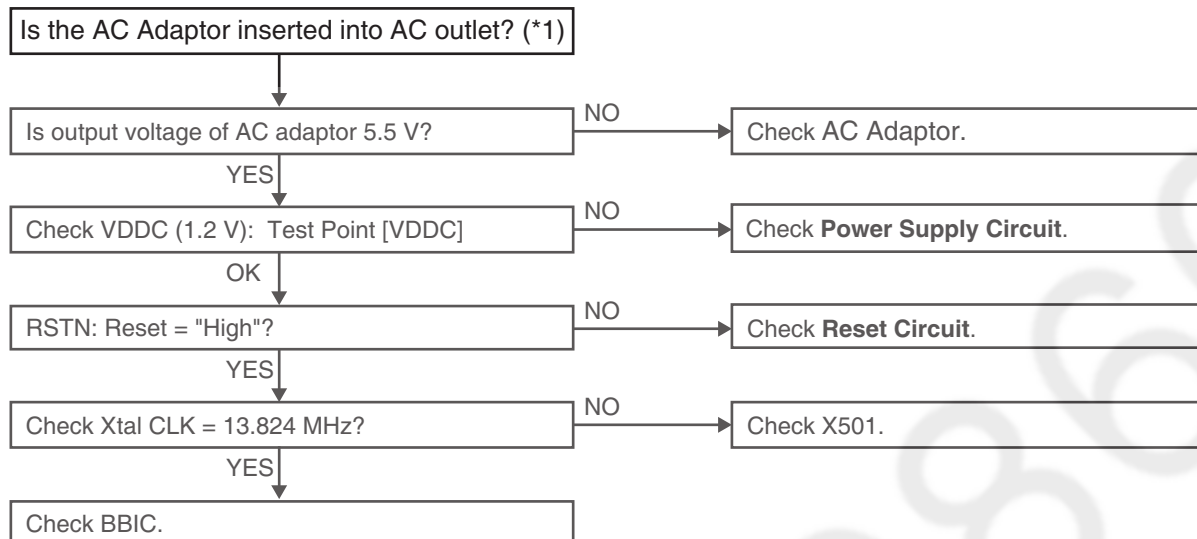

**Cross Reference:**  
**Power Supply Circuit/Reset Circuit (P.12)**

**Note:**  
 BBIC is IC501.  
 (\*1) Refer to **Specifications** (P.6) for part number and supply voltage of AC adaptor.  
 (\*2) Refer to **Base Unit (Main)** (P.75).

### 10.1.1.2. Portable

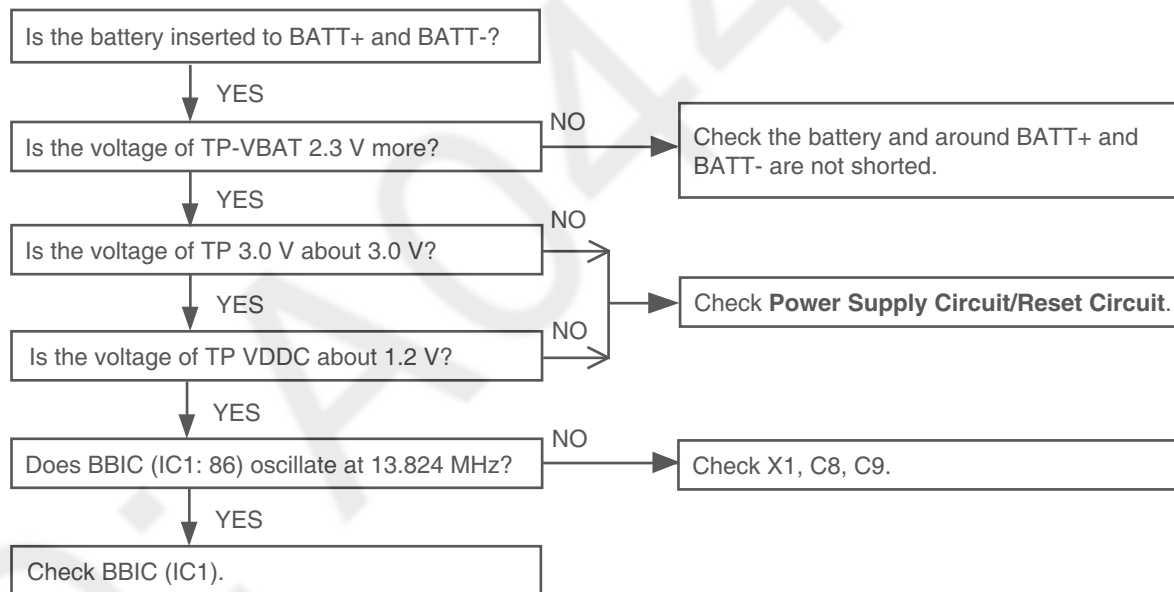


**Cross Reference:**  
**Power Supply Circuit/Reset Circuit (P.18)**

## 10.1.2. Check Record

### 10.1.2.1. Base Unit

#### Not record Incoming Message

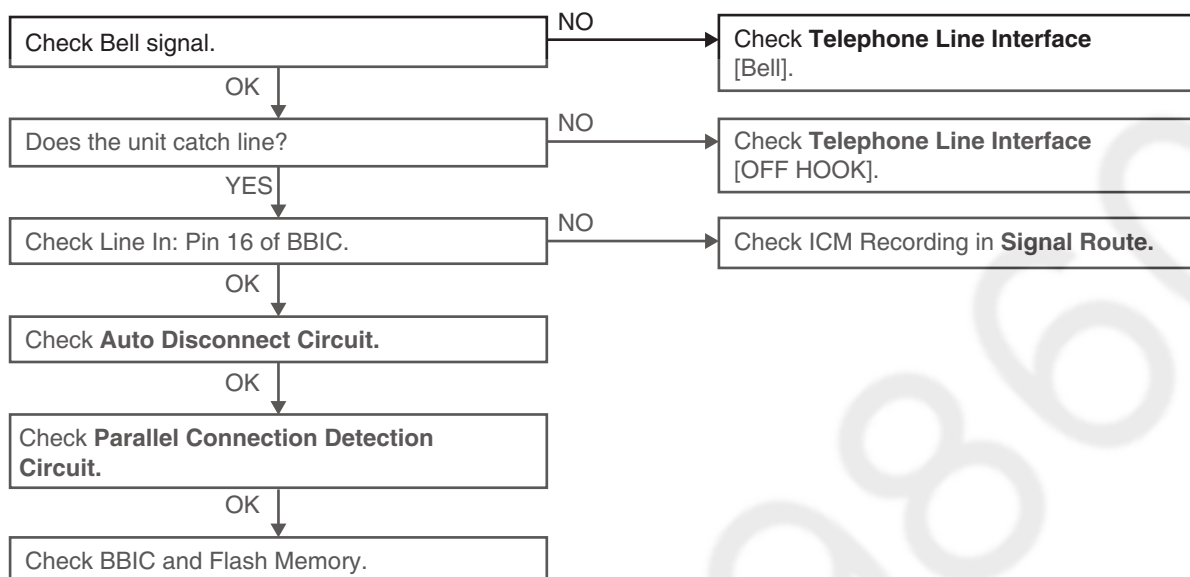

#### Cross Reference:

**Signal Route** (P.21)

**Telephone Line Interface** (P.13)

**Parallel Connection Detect Circuit/Auto Disconnect Circuit** (P.13)

#### Note:

Flash Memory is IC601.

BBIC is IC501.

## <How to change the Auto Disconnect activation time and VOX level>

### A) Auto Disconnect activation time:

Some Telephone Company lines (fiber or cable) ON Hook and OFF Hook voltages are lower than conventional lines, which may cause a malfunction of Auto Disconnect detection. To solve this problem, try changing the Auto Disconnect activation through the procedures below.

- 1) Press "MENU" key at standby Mode and "#" key.

LCD (H/S)

Enter number

: \_\_\_\_\_

BACK

**Note:** The set must power on and be linked.

- 2) Press "9", "0", "0", "0", "\*" .

LCD (H/S)

Service ready

: \_\_\_\_\_

BACK

- 3) Press "7", "3", "1".

Service ready

: 7 3 1 \_

CLEAR

- 4) Then enter the below last digit;

last digit	"0"	Auto disconnect & CPC <sup>(*1)</sup> : enable . . . [default]
	"1"	Auto disconnect : enable <sup>(*1)</sup> CPC : disable
	"2"	Auto disconnect & CPC : disable <sup>(*2)</sup>

**Note:**

(\*1) Both Auto Disconnect and CPC don't detect for the first 2 seconds.

(\*2) If the "Disable" is selected, even if the parallel-connected telephone is OFF HOOK, the line isn't disconnected.

- 5) Back to "standby" mode automatically after step 4).  
You can hear beep sound which is a confirmation tone.

**B) Vox level:**

It makes easier to detect a small voice (caller) by raising the sensitivity of VOX level. Therefore, the recording of TAM is not turned off during a detection.

1) ~ 2) are same as (A).

3) Press "5","1","1".

Service ready  
:511 \_

**CLEAR**

4) Then enter the below last digit;

last digit	"0"	default setting : normal
	"1"	6dB up

5) Back to "standby" mode automatically after step 4).  
You can hear beep sound which is a confirmation tone.

### 10.1.3. Check Playback

#### 10.1.3.1. Base Unit

**Note:**

(\*1) Both Auto Disconnect and CPC don't detect for the first 2 seconds.

(\*2) If the "Disable" is selected, even if the parallel-connected telephone is OFF HOOK, the line isn't disconnected.

5) Back to "standby" mode automatically after step 4).

You can hear beep sound which is a confirmation tone.

**Cross Reference:**

**Power Supply Circuit/Reset Circuit (P.12)**

**Note:**


Flash Memory is IC601.

BBIC is IC1.

(\*1) Refer to **Base Unit (Main)** (P.75).

### 10.1.4. Check Battery Charge

#### 10.1.4.1. Portable

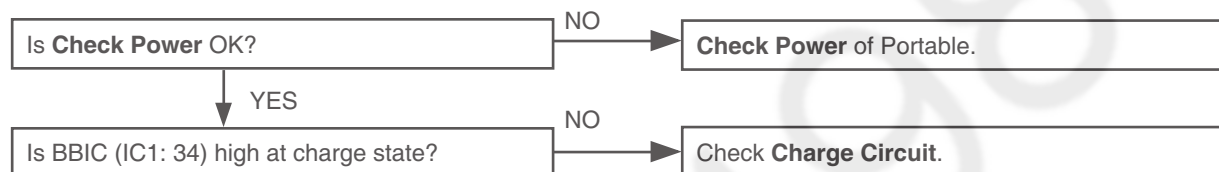


**Cross Reference:**

**Check Power (P.30)**

**Charge Circuit (P.19)**

#### 10.1.4.2. Charger Unit

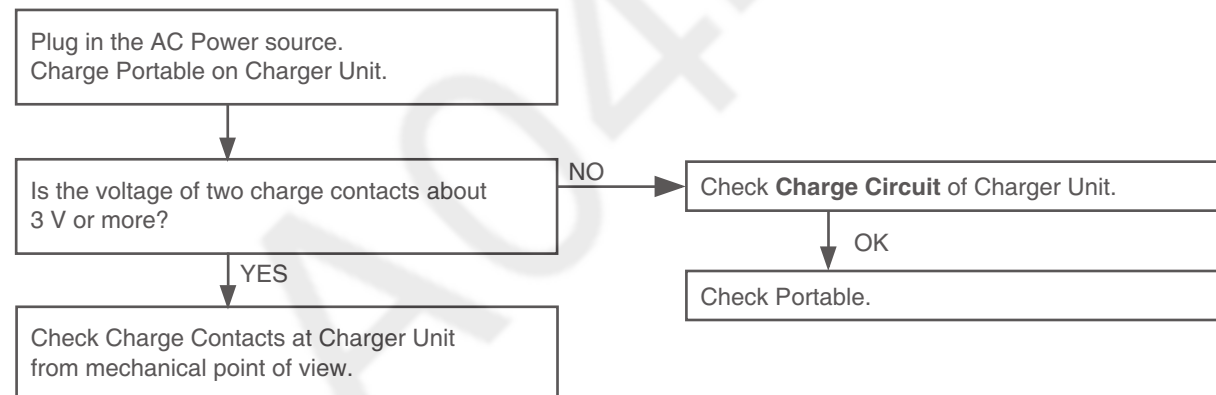


**Cross Reference:**

**Charge Circuit (P.19)**

## 10.1.5. Check Link

### 10.1.5.1. Base Unit

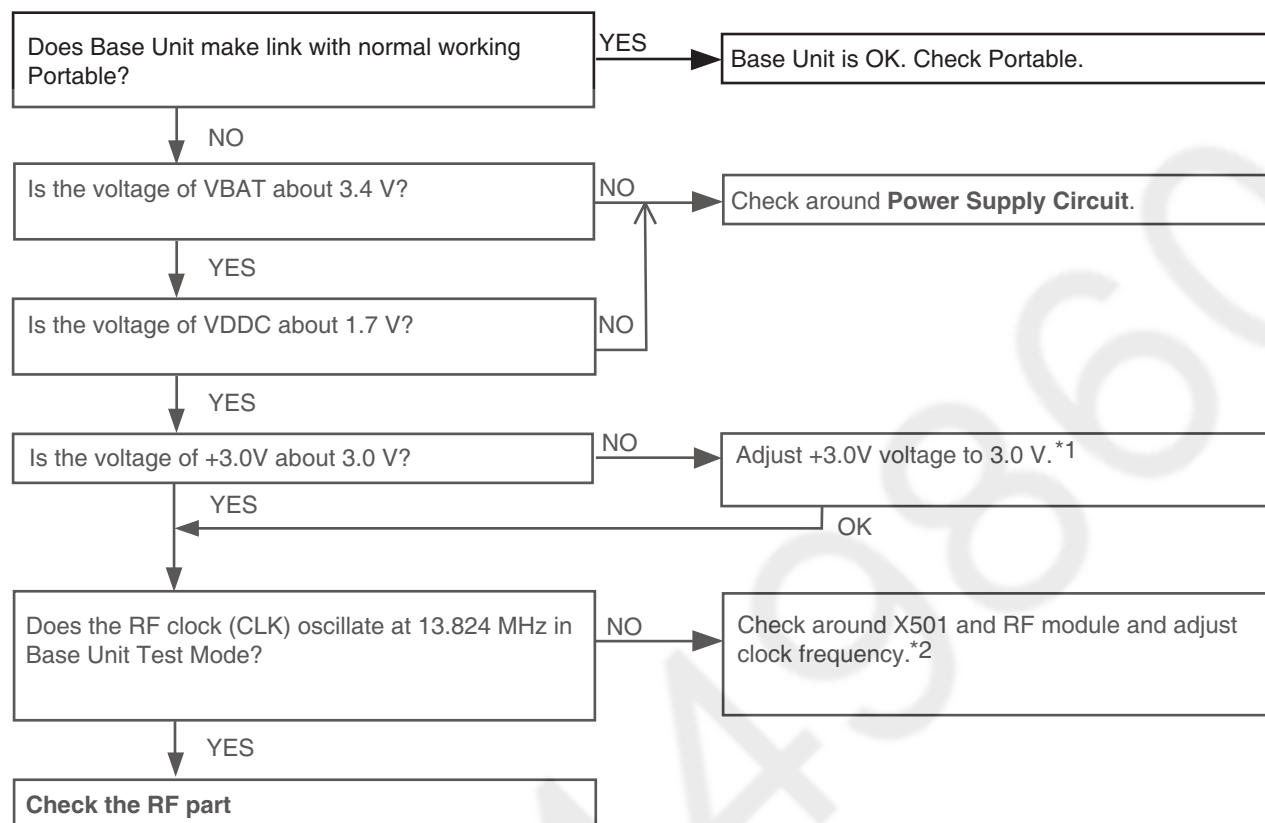

#### Cross Reference:

**Power Supply Circuit/Reset Circuit (P.12)**

**Check the RF part (P.37)**

#### Note:

\*1 How to adjust +3.0V:

Execute the command "VDA"


Refer to **Things to Do after Replacing IC or X'tal** (P.56) for Base Unit.

\*2 How to adjust the frequency of X501:

To see the frequency, execute the command "SFR", then check the TP\_CKM (IC501-57pin).

To adjust frequency, send command "SFR □○○□○○" until the frequency counter becomes 13.824 MHz  $\pm$  83HZ.

### 10.1.5.2. Portable

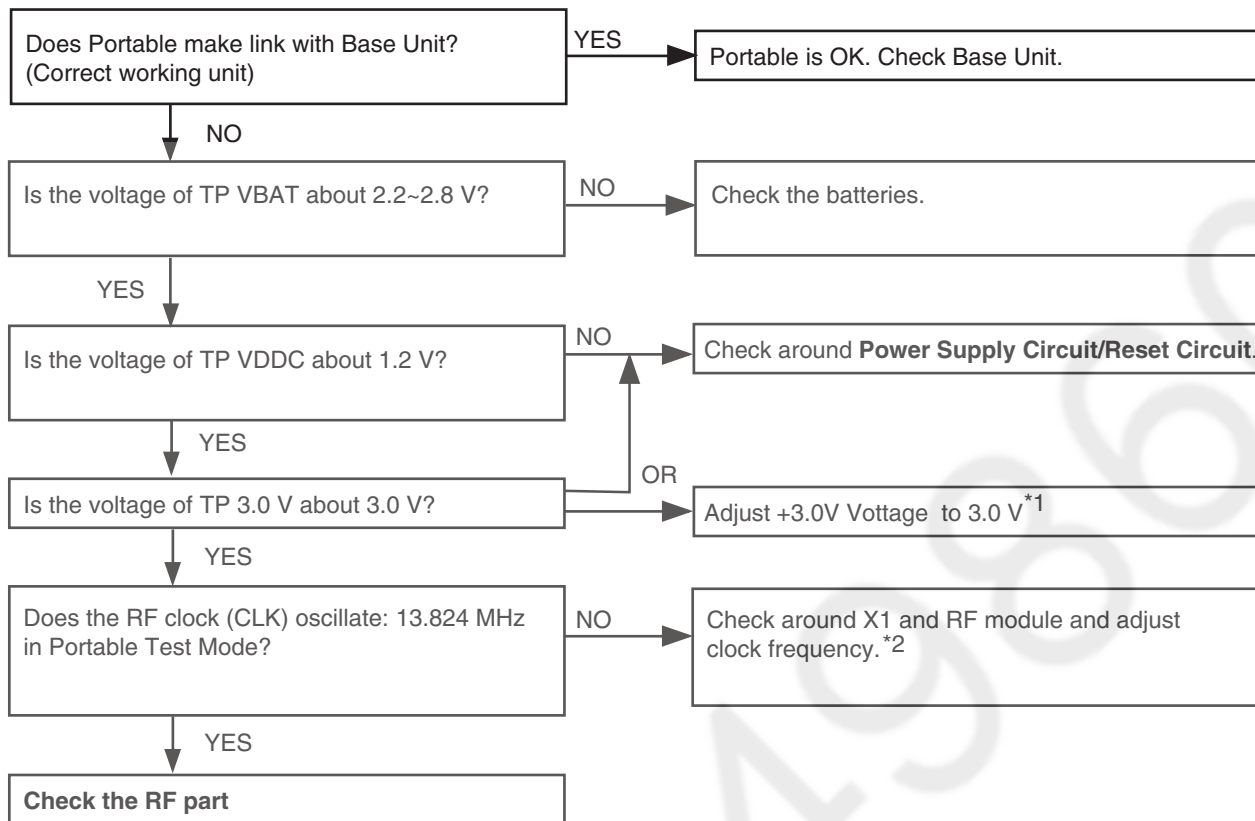

#### Cross Reference:

**Power Supply Circuit/Reset Circuit** (P.18)

**Check the RF part** (P.37)

#### Note:

\*1 How to adjust +3.0V:

Execute the command "VDA"

Refer to **Things to Do after Replacing IC or X'tal** (P.57) for Portable.

\*2 How to adjust the frequency of X1:

To see the frequency, execute the command "SFR", then check the TP\_CKM (IC1-57pin).

To adjust frequency, send command "SFR □○○□○○" until the frequency counter becomes 13.824 MHz ± 83 HZ.


## 10.1.6. Check the RF part

### 10.1.6.1. Finding out the Defective part

1. Prepare Regular P (\*1) and Regular BU(\*2).
2. a. Re-register regular P (Normal mode) to base unit (to be checked).  
If this operation fails in some ways, the base unit is defective.
- b. Re-register portable (to be checked) to regular BU (Normal mode).  
If this operation fails in some ways, the portable is defective.

#### After All the Checkings or Repairing

1. Re-register the checked portable to the checked base unit, and Regular P to Regular BU.

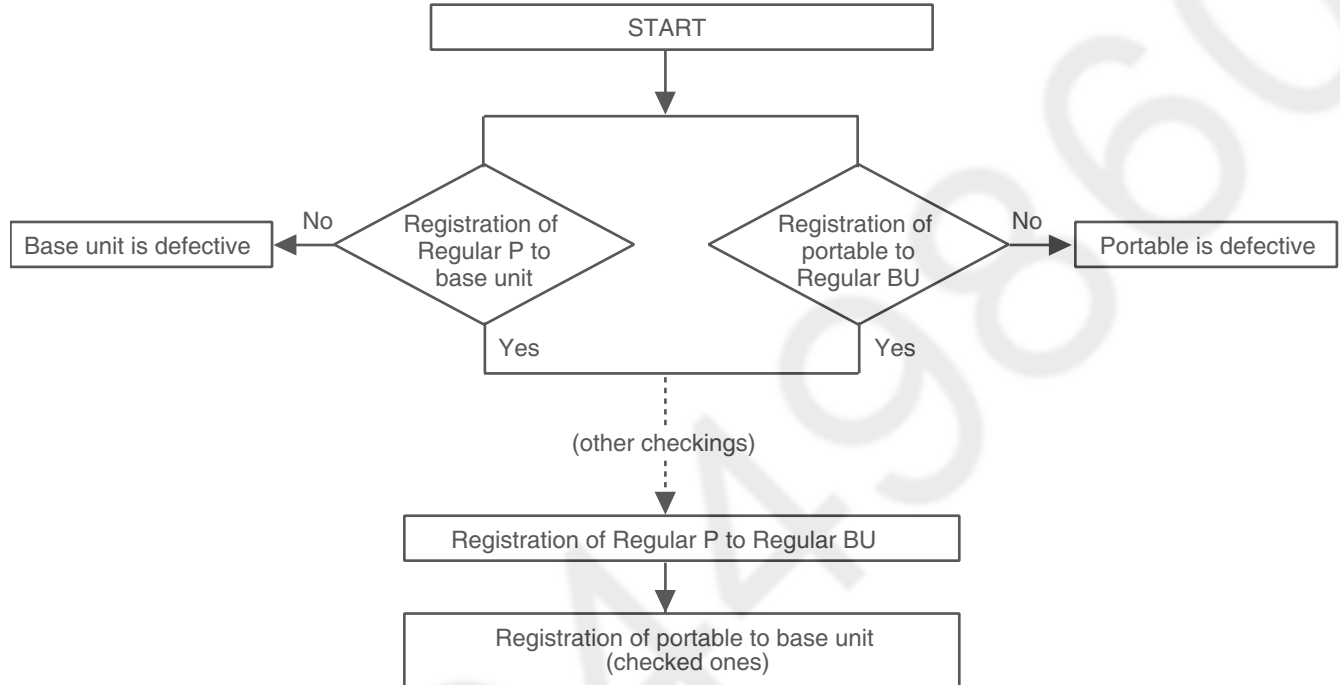


#### Note:

- (\*1) P: Portable  
(\*2) BU: Base Unit

## 10.1.6.2. RF Check Flowchart

Each item (1 ~ 5) of RF Check Flowchart corresponds to **Check Table for RF part** (P.39).  
Please refer to the each item.

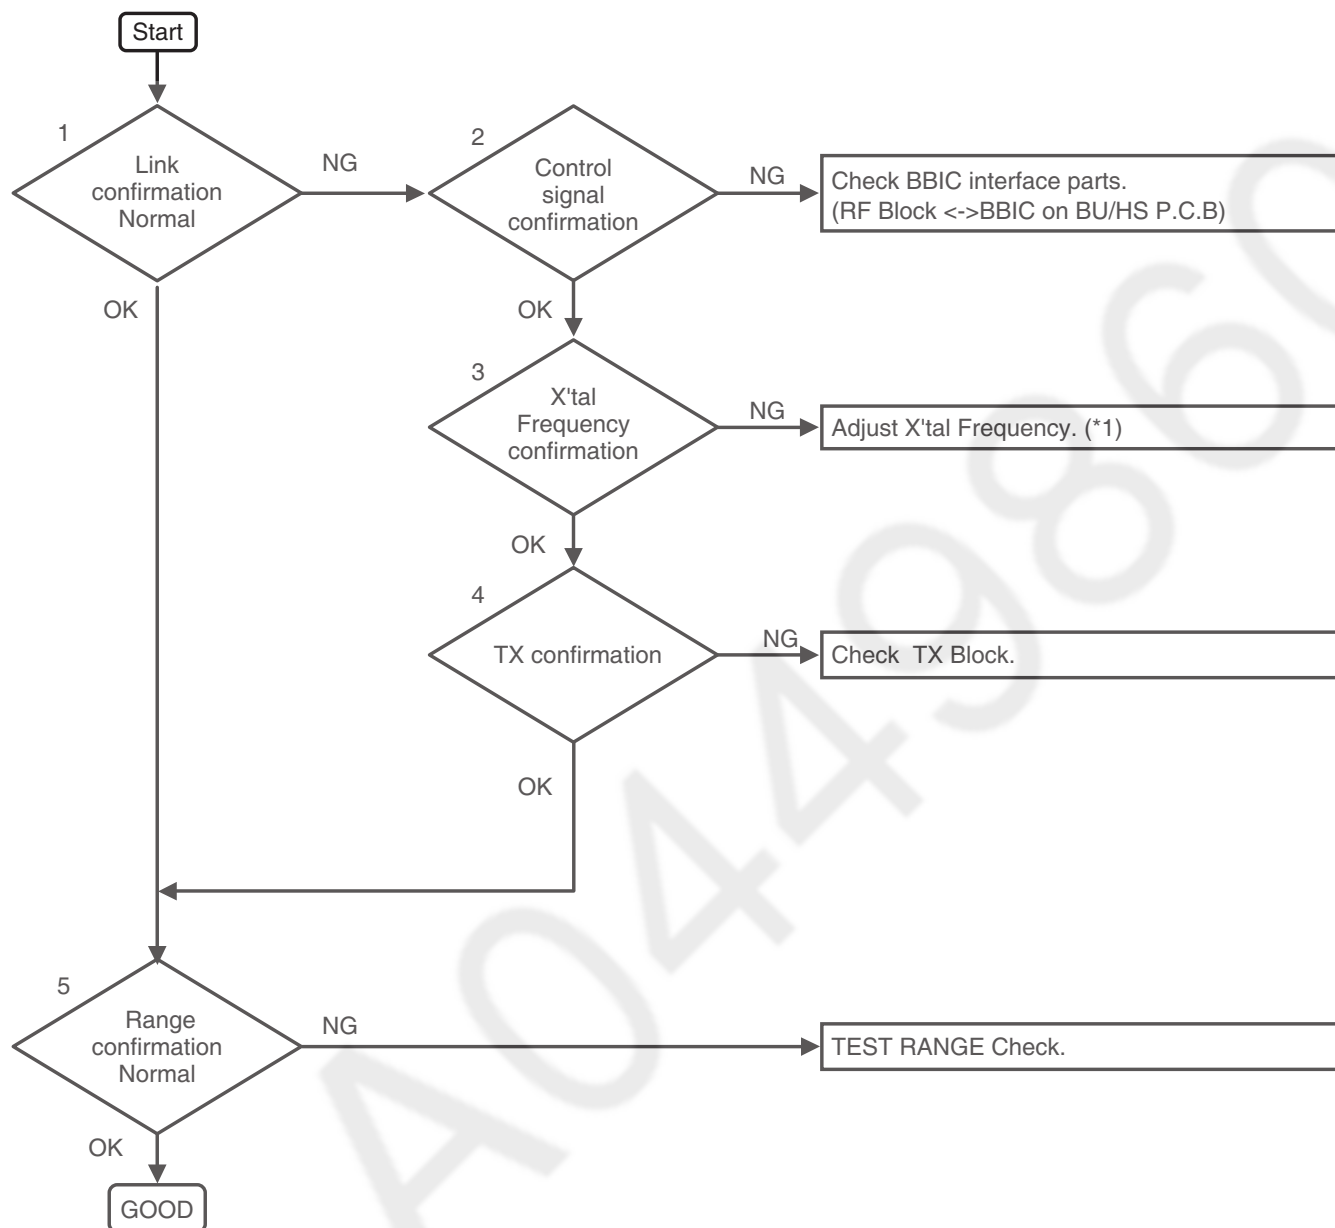

**Note:**

(\*1) Refer to **Check Link** (P.35).

### 10.1.6.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	P (Portable) Check
1	Link Confirmation Normal P, BU Mode [Normal Mode]	1. Register Regular P to BU (to be checked). 2. Press [Talk] key of the Regular P to establish link.	1. Register P (to be checked) to Regular BU. 2. Press [Talk] key of the P to establish link.
2	X'tal Frequency confirmation P, BU Mode: [Adjustment]	Check X'tal Frequency. (13.824000 MHz $\pm$ 83 Hz)	Check X'tal Frequency. (13.824000 MHz $\pm$ 83 Hz)
3	TX confirmation P Mode: [P_Burst Mode ] (*1) BS Mode: [BS_Burst Mode ] (*2)	1. Remove wire antenna 2 and connect spectrum analyzer to TP. (*3) 2. Confirm TX power whether spec. is satisfied. Power = 16.0 dBm ~ 20.5 dBm	1. Connect spectrum analyzer to TP.(*4) 2. Confirm TX power whether satisfied spec. Power = 16.0 dBm ~ 25.0 dBm
4	Range Confirmation Normal P, BU Mode: [Normal Mode]	1. Register Regular P to BU (to be checked). 2. Press [Talk] key of the Regular P to establish link. 3. Compare the range of the BU (being checked) with that of the Regular BU.	1. Register P (to be checked) to Regular BU. 2. Press [Talk] key of the P to establish link. 3. Compare the range of the P (being checked) with that of the Regular HS.

**Note:**

- (\*1) Refer to **Commands (Portable)** (P.52)
- (\*2) Refer to **Commands (Base Unit)** (P.52)
- (\*3) **Adjustment Standard (Base Unit)** (P.53)
- (\*4) **Adjustment Standard (Portable)** (P.55)

**10.1.6.4. TEST RANGE Check**

Circuit block which range is defective can be found by the following check.

Item	BU (Base Unit) Check	P (Portable) Check
<b>Range Confirmation TX TEST</b> (TX Power check)  P, BU setting Checked unit: Low TX power (*1) Regular unit: High TX power (*1)	1. Register Regular P to BU (to be checked).  2. Set TX Power of the BU and the Regular P according to CHART1.  3. At distance of about 20m between P and BU, Link OK = TX Power of the BU is OK. No Link = TX Power of the BU is NG.	1. Register P (to be checked) to Regular BU.  2. Set TX Power of the P and the Regular BU according to CHART1.  3. At distance of about 20m between P and BU, Link OK = TX Power of the P is OK. No Link = TX Power of the P is NG.
<b>Range Confirmation RX TEST</b> (RX sensitivity check)  P, BU setting Checked unit: High TX power (*1) Regular unit: Low TX power (*1)	1. Register Regular P to BU (to be checked).  2. Set TX Power of the BU and the Regular P according to CHART1.  3. At distance of about 20m between P and BU, Link OK= RX Sensitivity of the BU is OK. No Link = RX Sensitivity of the BU is NG.	1. Register P (to be checked) to Regular BU.  2. Set TX Power of the Checking P and the Regular BU according to CHART1.  3. At distance of about 20m between P and BU, Link OK= RX Sensitivity of the P is OK. No Link = RX Sensitivity of the P is NG

**CHART1: Setting of TX Power and RX Sensitivity in Range Confirmation TX TEST, RX TEST**

	BU (to be checked)	Regular_P
	TX Power	TX Power
BU (Base Unit) TX Power Check	Low	High
BU (Base Unit) RX Sensitivity Check	High	Low

	P (to be checked)	Regular_BU
	TX Power	TX Power
P (portable) TX Power Check	Low	High
P (portable) RX Sensitivity Check	High	Low

**Note:**

(\*1) Refer to **Commands (Base Unit)** (P.52).

### 10.1.7. Registering a Portable to the Base Unit

The supplied portable and base unit are pre-registered. If for some reason the portable is not registered to the base unit, re-register the portable.

- 1 **Portable:**  
[MENU] # 1 3 0
- 2 **Base unit:**  
Press and hold [LOCATOR] for about 5 seconds until the registration tone sounds.
  - If all registered portables start ringing, press [LOCATOR] again to stop, then repeat this step.
  - The next step must be completed within 90 seconds.
- 3 **Portable:**  
Press [OK], then wait until a long beep sounds.

**Note:**


- While registering, “Base in registering” is displayed on all registered portables.
- When you purchase an additional portable, refer to the additional portable’s installation manual for registration.

### 10.1.8. Deregistering a Portable

A portable can cancel its own registration to the base unit, or other portables registered to the same base unit. This allows the portable to end its wireless connection with the system.


- 1 [MENU] # 1 3 1
  - All portables registered to the base unit are displayed.
- 2 [↕] : Select the portable you want to cancel. → [SELECT]
- 3 [↕] : “Yes” → [SELECT]
- 4 [OFF]

### 10.1.9. Check Portable Transmission

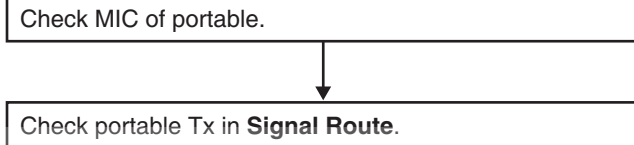

**Cross Reference:**  
**Signal Route** (P.21)

### 10.1.10. Check Portable Reception

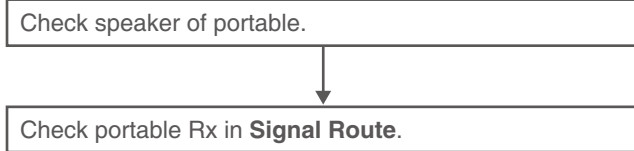


**Cross Reference:**  
**Signal Route** (P.21)

**Note:**  
When checking the RF part, Refer to **Check the RF part** (P.37).

### 10.1.11. Check Caller ID

#### BASE UNIT

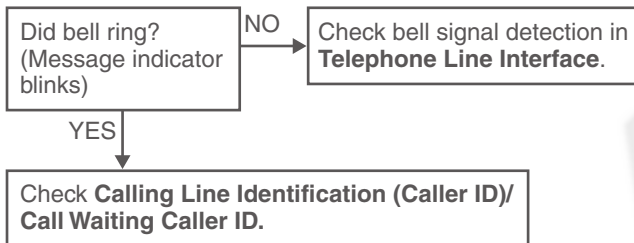


**Cross Reference:**  
**Telephone Line Interface** (P.13)  
**Calling Line Identification (Caller ID)/Call Waiting Caller ID** (P.14)

**Note:**


- Make sure the format of the Caller ID service of the Telephone company that the customer subscribes to.
- It is also recommended to confirm that the customer is really a subscriber of the service.

### 10.1.12. Check SP-phone Transmission

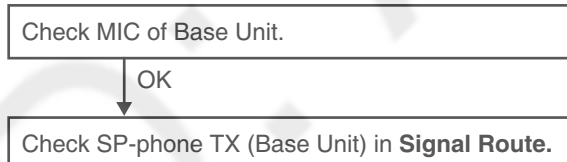


**Cross Reference:**  
**Signal Route** (P.21)

### 10.1.13. Check SP-phone Reception

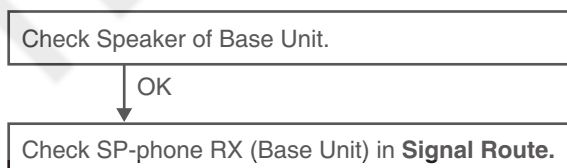


**Cross Reference:**  
**Signal Route** (P.21)

### 10.1.14. Check Corded Handset Transmission

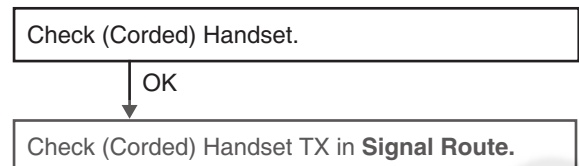

**Cross Reference:**  
**Signal Route** (P.21)

### 10.1.15. Check Corded Handset Reception

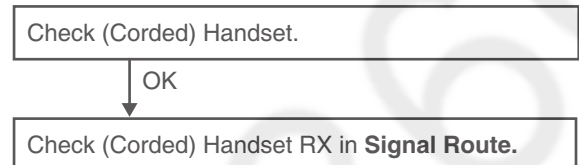


**Cross Reference:**  
**Signal Route** (P.21)

# 11 Disassembly and Assembly Instructions


## 11.1. Disassembly Instructions

### 11.1.1. Base Unit


- ① Remove the 6 screws to remove the cabinet cover.

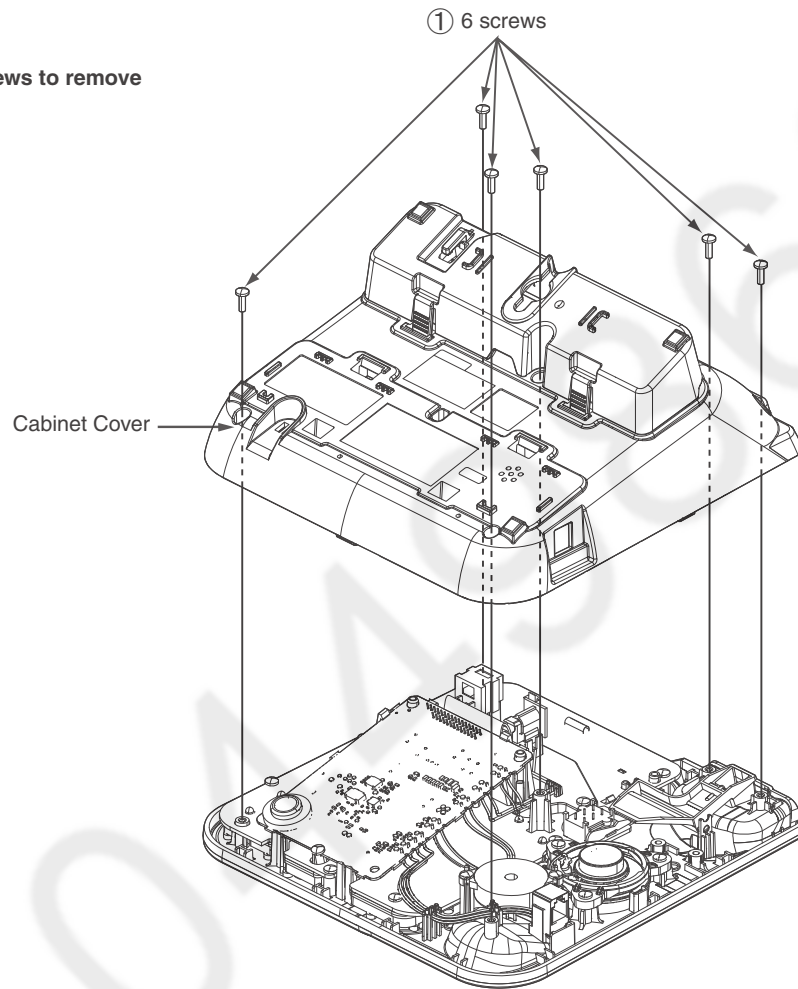


- ② Remove 1 screw, Parallel wire and solders to remove the main P.C. Board.

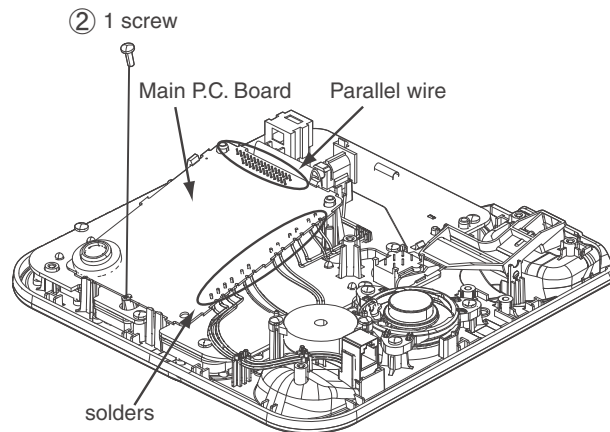

- ③ Unhook the hook and remove the 2 screws to remove the jack holder.

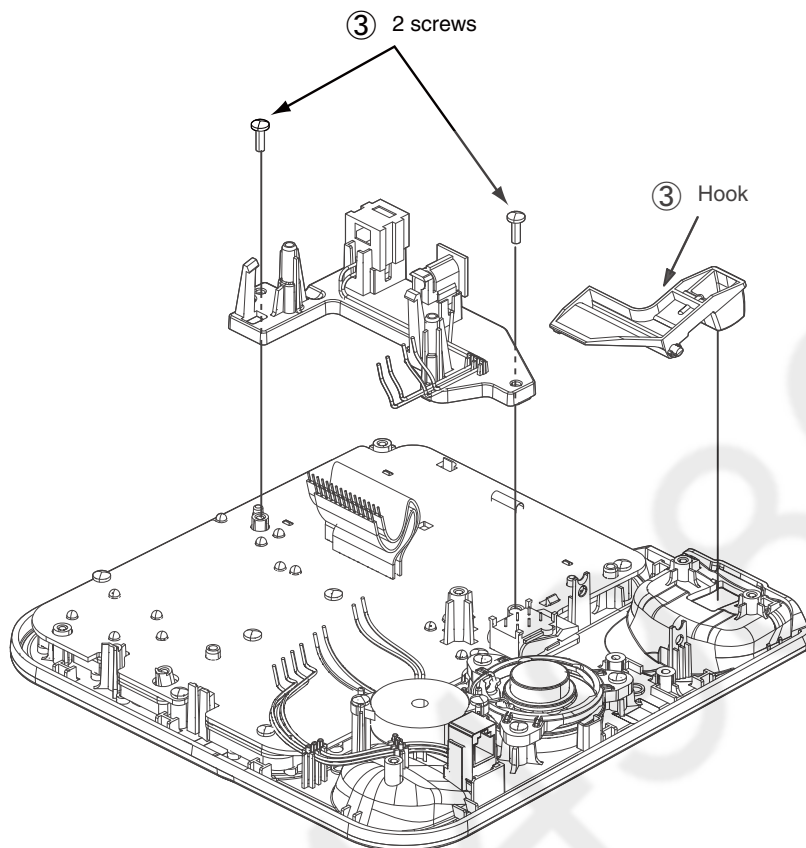


- ④ Remove the 8 screws to remove the Operation P.C. Board.

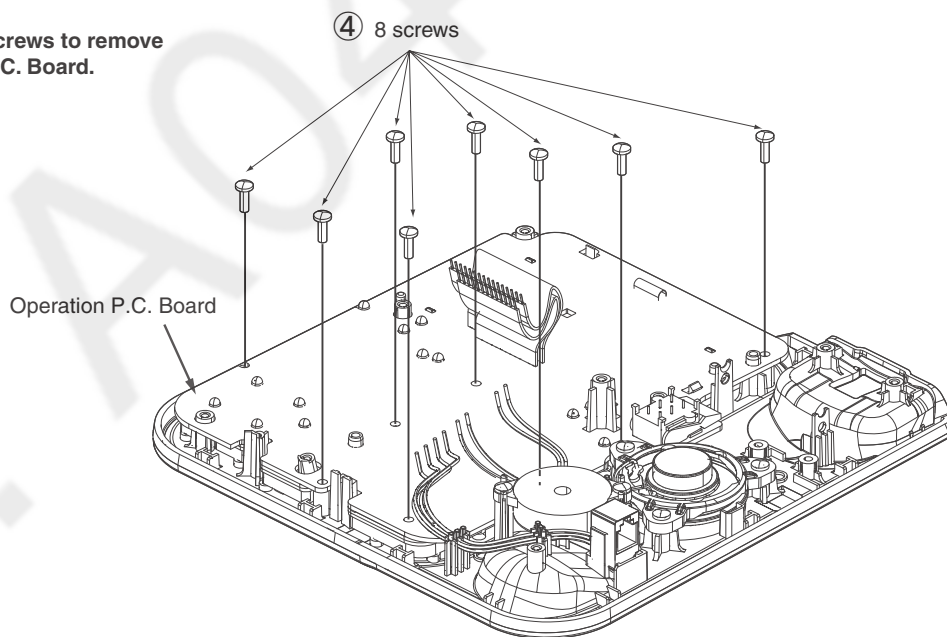


## 11.1.2. Portable


- ① Remove the 2 screws.

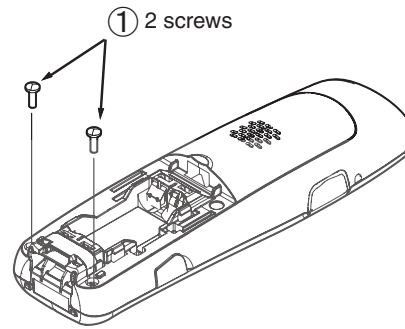


- ② Insert a plastic card.  
(Ex. Used SIM card etc.)  
between the cabinet body  
and the cabinet cover, then  
pull it along the gap to open  
the cabinet.

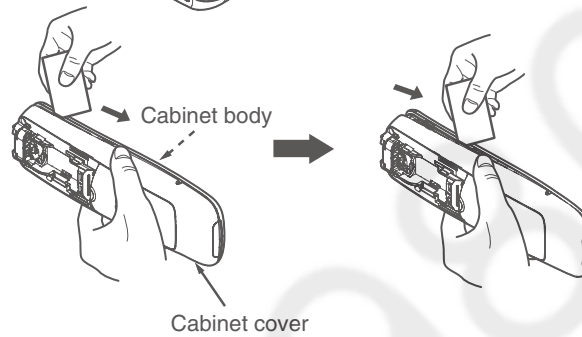

- ③ Likewise, open the other  
side of the cabinet.

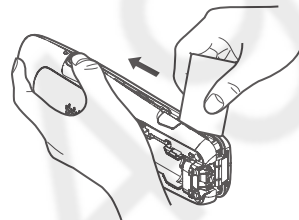


- ④ Remove the cabinet cover  
by pushing it upward.

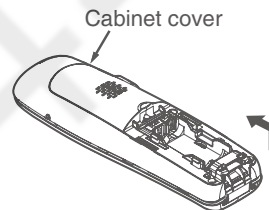

- ⑤ Remove the solders and tape.


- ⑥ Remove the 2 screws to remove  
the 2 charge terminals.

- ⑦ Remove the screw to remove  
the main P. C. board.

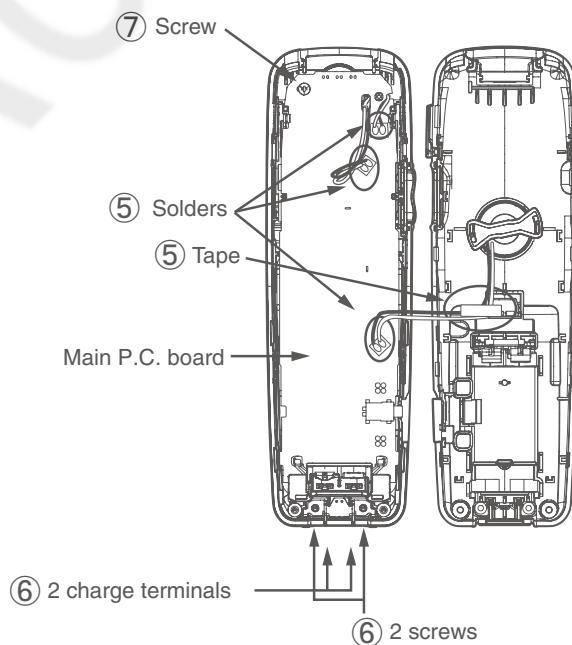


### 11.1.3. Charger Unit

- ① Remove the screw to remove the cabinet cover.

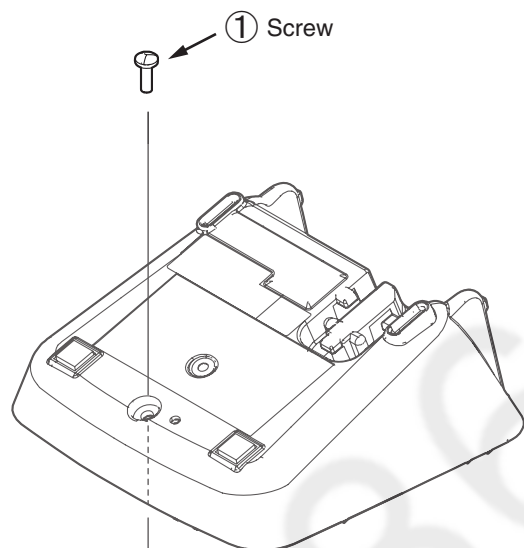

- ② Remove the solders to remove the 2 charge terminals.

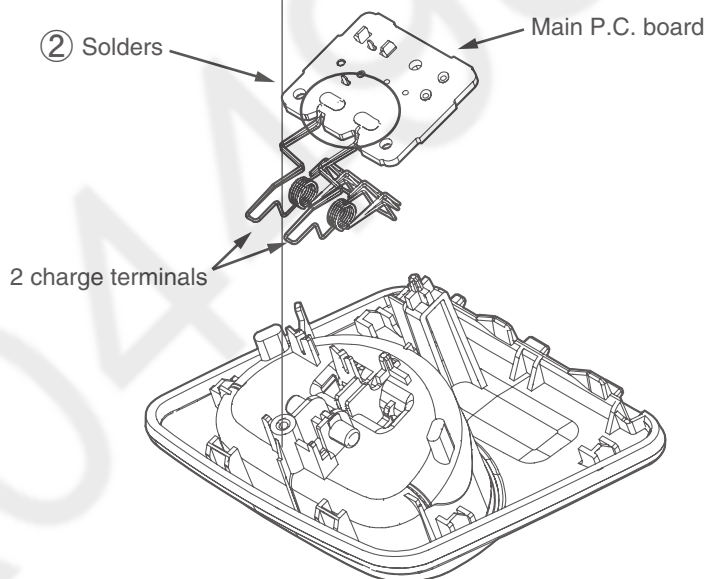

## 11.2. Assembly Instructions

### 11.2.1. How to Replace the Base unit LCD

①





LCD HOLDER



LCD PLATE

②

\*PROCESS IT AS SHOWN IN FIGURE.

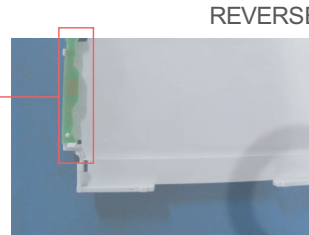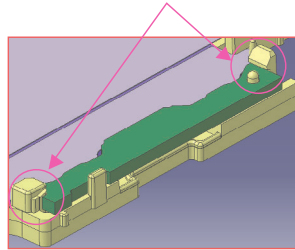



REVERSE.




LED P.C.B.

③

\*PROCESS IT AS SHOWN IN FIGURE.


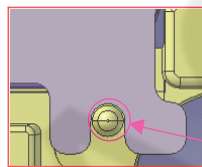
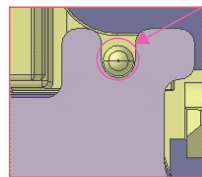


\*PROCESS IT AS SHOWN IN FIGURE.

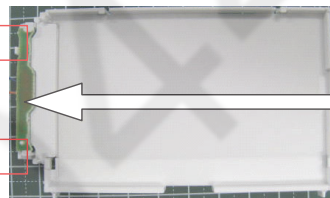



REFLECTOR SHEET

④

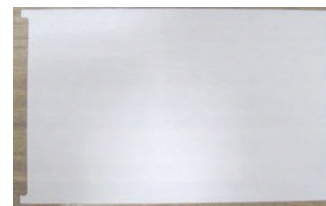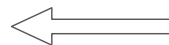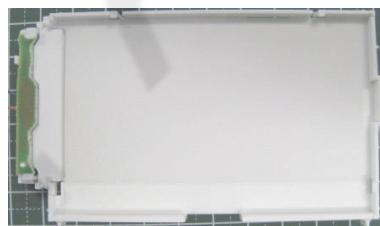

DIFFUSION SHEET

⑤

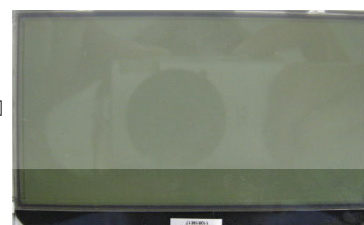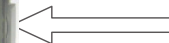


LCD

## 11.3. How to Replace the Portable LCD

### Note:


The illustrations are simplified in this page.  
They may differ from the actual product.

①

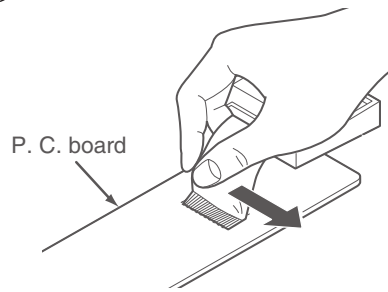


Peel off the FFC (Flexible Flat Cable) from the LCD, in the direction of the arrow. Take care to ensure that the foil on the P.C. board is not damaged.


②

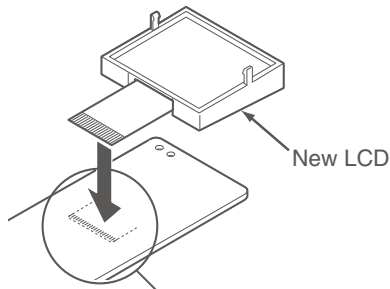


Fit the heatseal of a new LCD.

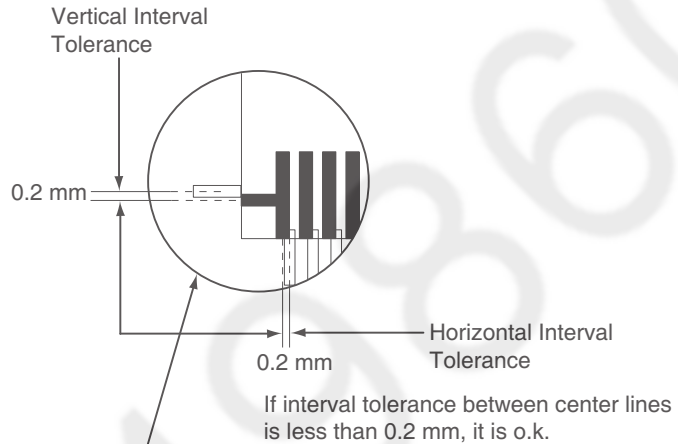

③

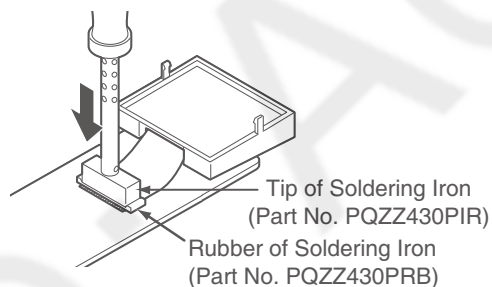


Heatweld with the tip of the soldering iron about 5 to 8 seconds (in case of 60W soldering iron).

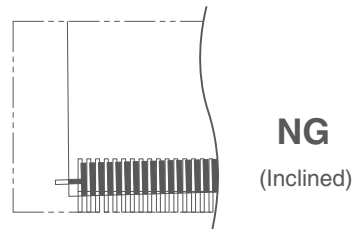


**NG**

(Inclined)

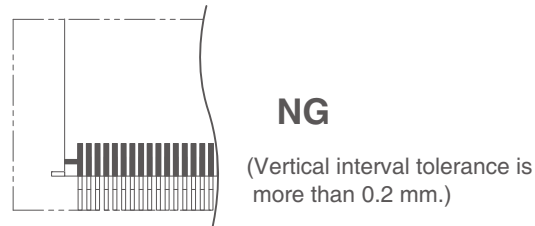

**NG**

(Vertical interval tolerance is more than 0.2 mm.)

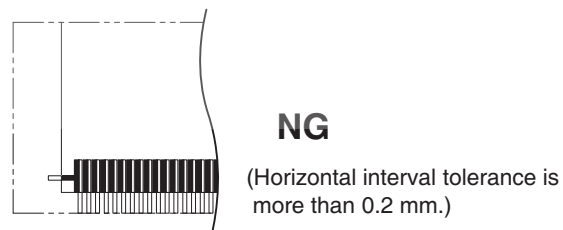

**NG**

(Horizontal interval tolerance is more than 0.2 mm.)

# 12 Measurements and Adjustments

This chapter explains the measuring equipment, the JIG connection, and the PC setting method necessary for the measurement in **Troubleshooting Guide** (P.29)

## 12.1. Equipment Required

- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope.
- Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision;  $\pm 4$  ppm)  
Hewlett Packard, 53131A is recommended.
- DECT tester: Rohde & Schwarz, CMD 60 is recommended.  
This equipment may be useful in order to precisely adjust like a mass production.

## 12.2. The Setting Method of JIG

<Preparation>

- Serial JIG cable: PQZZ1CD300E\*
- PC which runs in DOS mode
- **Batch file CD-ROM** for setting: PNZZTG4771M


**Note:**

\*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (k $\Omega$ )	New value (k $\Omega$ )
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

### 12.2.1. Connections (Base Unit)

- ① Connect the AC adaptor.
- ② Connect the JIG Cable GND (black).
- ③ Connect the JIG Cable RX (red) and TX (yellow).

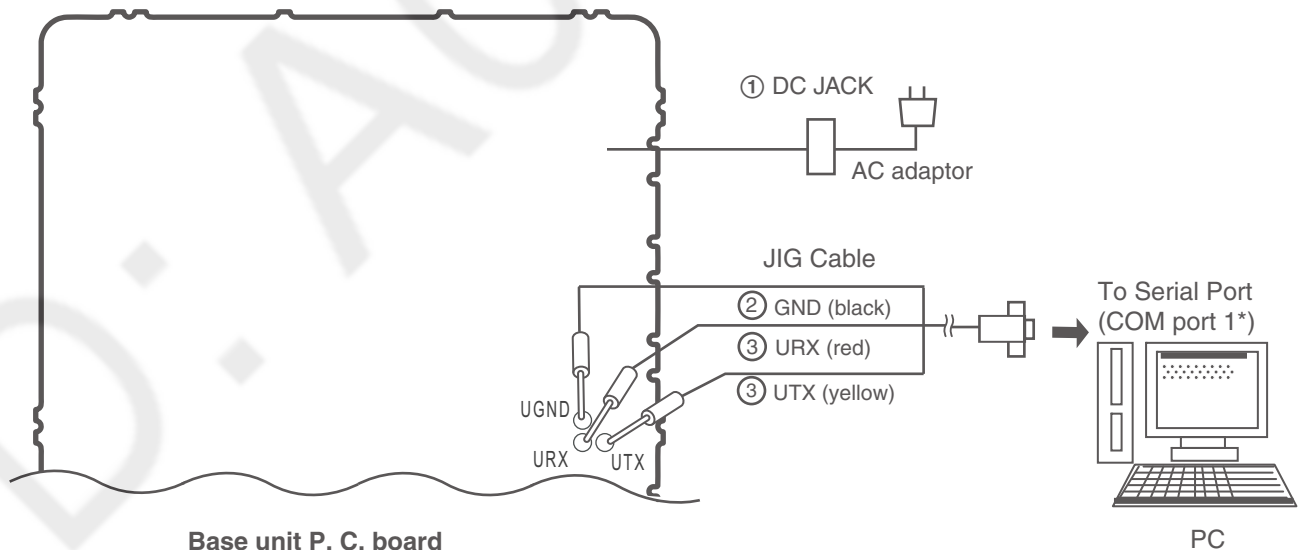


**Note:**

\*: COM port names may vary depending on what your PC calls it.

## 12.2.2. Connections (Portable)

- ① Connect the DC Power or Battery to BATT+ and BATT-.
- ② Connect the JIG cable GND (black) to GND.
- ③ Connect the JIG cable UTX (yellow) to UTX and URX (red) to URX.

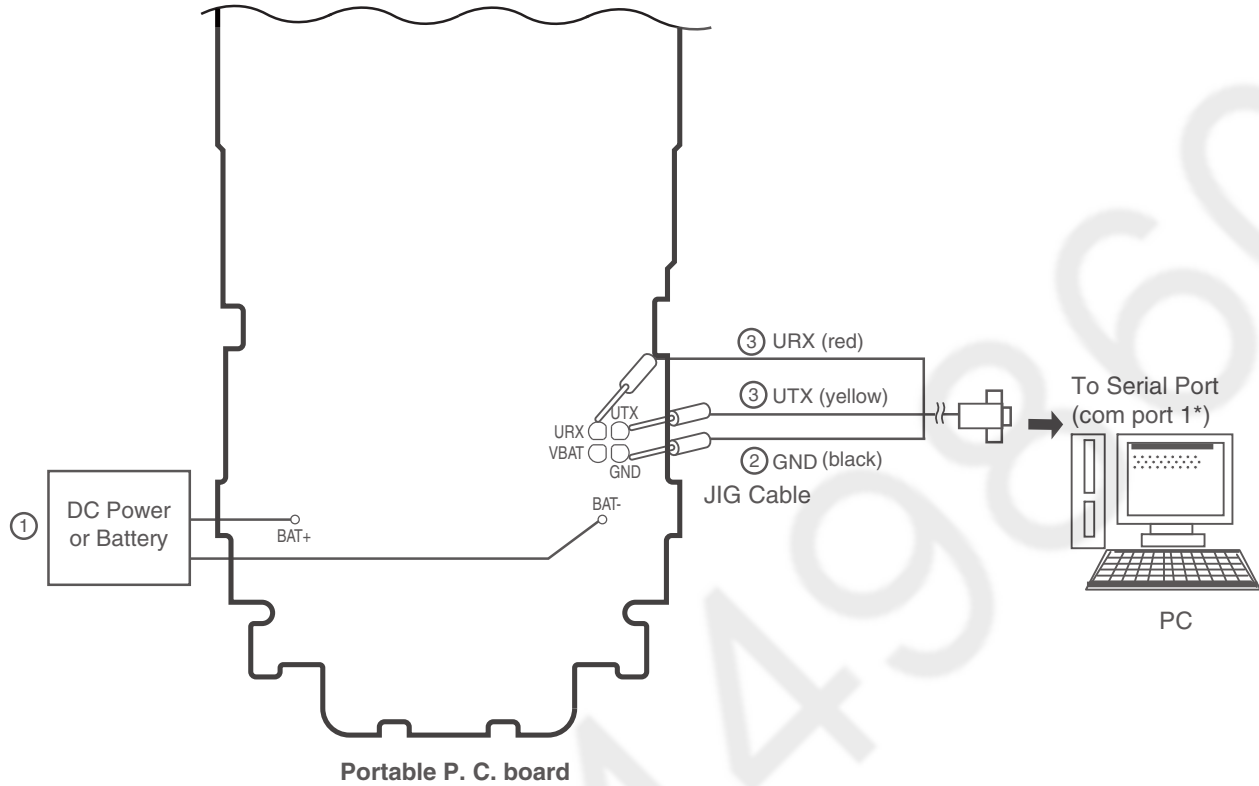

**Note:**

\*: COM port names may vary depending on what your PC calls it.

### 12.2.3. How to install Batch file into P.C.

1. Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG\*\*\*\* folder to your PC (example: D drive).

2. Open an MS-DOS mode window.

#### <Example for Windows>

On your computer, click **[Start]**, select **Programs** (**All Programs** for Windows XP/Windows Server 2003), then click  
**MS-DOS Prompt.** (for Windows 95/Windows 98)  
 Or  
**Accessories-MS-DOS Prompt.** (for Windows Me)  
 Or  
**Command Prompt.** (for Windows NT 4.0)  
 Or  
**Accessories-Command Prompt.** (for Windows 2000/Windows XP/Windows Server 2003)

3. At the DOS prompt, type "**D:**" (for example) to select the drive, then press the **Enter** key.

4. Type "**CD ¥PNZZTG\*\*\*\***", then press the **Enter** key.

5. Type "**SET\_COM=X**", then press the **Enter** key  
 (X: COM port number used for the serial connection on your PC).

6. Type "**READID**", then press the **Enter** key.  
 • If any error messages appear, change the port number or check the cable connection.  
 • If any value appear, go to next step.

7. Type "**DOSKEY**", then press the **Enter** key.

#### <Example>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
00 52 4F A8 A8
D: ¥PNZZTG****>DOSKEY
D: ¥PNZZTG****>_
```

#### <Example: error happens>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
CreateFile error
ERROR 10: Can't open serial port
D: ¥PNZZTG ****>_
```

#### Note:

- "\*\*\*\*" varies depending on the country or models.

## 12.2.4. Commands (Base Unit)

See the table below for frequently used commands.

Command name		Function	Example
rdeeprom		Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid		Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid		Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
hookoff		Off-hook mode on Base	Type "hookoff".
hookon		On-hook mode on Base	Type "hookon".
getchk		Read checksum	Type "getchk".
How to use of "getchk"	1.rdeeprom	Read EEPROM	Type "RdEeprom 04 73 04", and the data from address "03 F2" to "03 F5" is read out *This command gets 4 byte "WW", "XX", "YY", "ZZ". *Please NEVER forget these 4 byte data!
	2.sendchar epw	Write EEPROM	Type "sendchar epw 04 73 04 FF FF FF FF"
	3.sendchar RST	Reset baseset	Type "sendchar RST"
	4.getchk	Read checksum	Type "getchk".
	5.sendchar epw	Write EEPROM	Type "sendchar epw 04 73 04 WW XX YY ZZ" **"WW", "XX", "YY", "ZZ" is 4 byte data that already read from same address.
wreeprom		Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.
bs_burst		Base unit outputs RF power in burst test mode on antenna 2	Type "bs_burst"
tx_high		Keep TX power high	Type "tx_high"
tx_low		Keep TX power low	Type "tx_low"

## 12.2.5. Commands (Portable)


See the table below for frequently used commands.

Command name		Function	Example
rdeeprom		Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid		Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid		Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
getchk		Read checksum	Type "getchk"
How to use of "getchk"	1.rdeeprom	Read EEPROM	Type "RdEeprom 03 7D 04", and the data from address "03 7D" to "03 80" is read out *NEVER forget the read 4 byte data!
	2.sendchar epw	Write EEPROM	Type "sendchar epw 03 7D 04 FF FF FF FF"
	3.sendchar RST	Reset baseset	Type "sendchar RST"
	4.getchk	Read checksum	Type "getchk".
	5.sendchar epw	Write EEPROM	Type "sendchar epw 03 7D 04 WW XX YY ZZ" **"WW", "XX", "YY", "ZZ" is 4 byte data that already read from same address.
weeprom		Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.
hs_burst		Portable outputs RF power in burst test mode	Type "hs_burst"
tx_high		Keep TX power high	Type "tx_high"
tx_low		Keep TX power low	Type "tx_low"

### 12.3. Adjustment Standard (Base Unit)

When connecting the simulator equipment for checking, please refer to below.

### 12.3.1. Bottom View

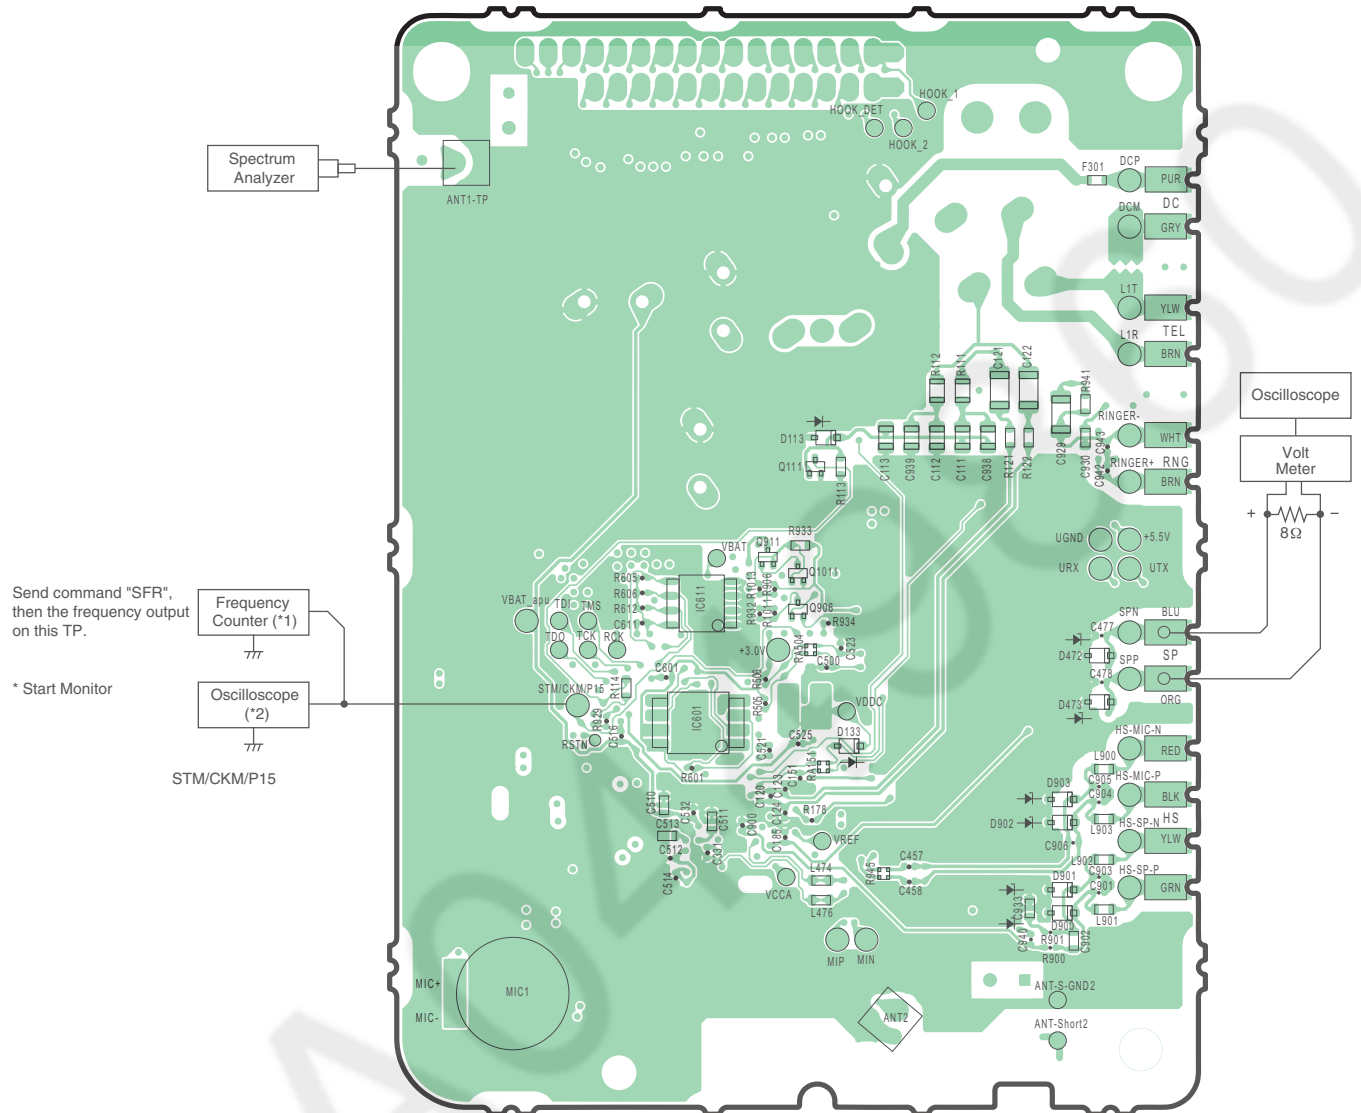

**Note:**


(\*1) is referred to No.2 of Check **Check Table for RF part** (P.39)

(\*2) is referred to **Power Supply Circuit/Reset Circuit** (P.12)

## 12.4. Adjustment Standard (Charger Unit)

When connecting the simulator equipment for checking, please refer to below.

### 12.4.1. Bottom View

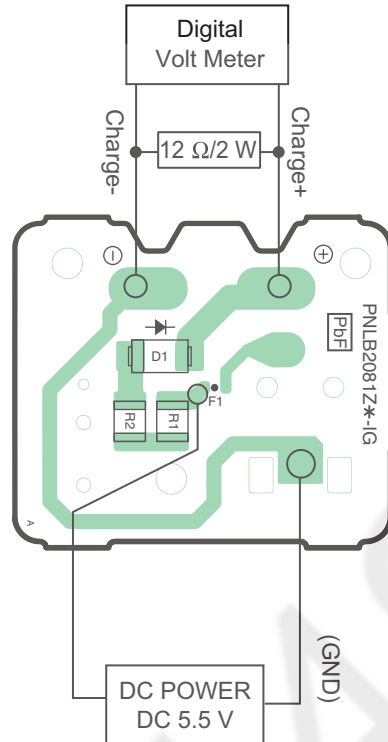

### 12.5.1. Component View



(\*2) is referred to **Power Supply Circuit/Reset Circuit** (P.18)

## 12.6. Things to Do after Replacing IC or X'tal

If repairing or replacing EEPROM and X'tal, it is necessary to download the required data such as Programming data or adjustment data, etc in memory.

The set doesn't operate if it is not executed.

### 12.6.1. How to download the data

#### 12.6.1.1. Base Unit

First, operate the PC setting according to **The Setting Method of JIG** (P.49).

Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
EEPROM (IC611)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	1) Change the address "0001" of EEPROM to "AA" to download the data. 2) Default batch file: Execute the command "default.bat". 3) Country version batch file: Execute the command "TG4771US_US_RevXXX_YYY.bat". (*1) 4) Clock adjustment
X'tal (X1)	System clock	Clock adjustment data is in EEPROM, adjust the data again after replacing it. 1) Apply 5.5V between DCP and DCM with DC power. 2) Input Command "sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(13.824 MHz $\pm$ 83 Hz). 4) If the frequency is not 13.824 MHz $\pm$ 83 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 13.824000 MHz $\pm$ 15 Hz.

**Note:**

(\*1) XXX\_YYY: revision number

"XXX" and "YYY" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.49).

### 12.6.1.2. Portable

First, operate the PC setting according to **The Setting Method of JIG** (P.49).  
Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
EEPROM (IC3)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	1) Default batch file: Execute the command "default.bat". 2) Default batch file (remaining): Execute the command "TGA470US_DEF_RevXXX_YYY.bat". (*2) 3) Country version batch file: Execute the command "TGA470US_US_RevXXX_YYY.bat". (*2) 4) Clock adjustment 5) 2.35 V setting and battery low detection
X'tal (X1)	System clock	1) Apply 2.6V between BATT+ and BATT- with DC power. 2) Input Command "sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(13.824 MHz $\pm$ 83 Hz). 4) If the frequency is not 13.824 MHz $\pm$ 83 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 13.824000 MHz $\pm$ 5 Hz.

**Note:**

(\*2) XXX\_YYY: revision number

"XXX" and "YYY" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.49).

## 12.7. Frequency Table

	Ch. (hex)	TX/RX Frequency (MHz)
Channel 0	00	1928.448
Channel 1	01	1926.720
Channel 2	02	1924.992
Channel 3	03	1923.264
Channel 4	04	1921.536

## 13 Miscellaneous

### 13.1. How to Replace the LLP (Leadless Leadframe Package) IC

**Note:**

This description is only applied on the model with Shield case.

#### 13.1.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron  
Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

**Note:**

We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.


- Hot Air Desoldering Tool  
Temperature: 608 °F ± 68 °F (320 °C ± 20 °C)

#### 13.1.2. Caution

- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

#### 13.1.3. How to Remove the IC


1. Heat the IC with a hot air desoldering tool through the P.C.Board.

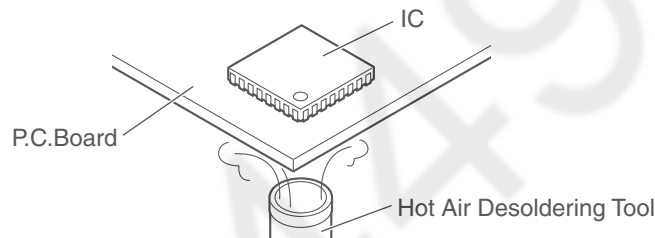


2. Pick up the IC with tweezers, etc. when the solder is melted completely.

**Note:**

- Be careful not to touch the peripheral parts with tweezers, etc. They are unstable.

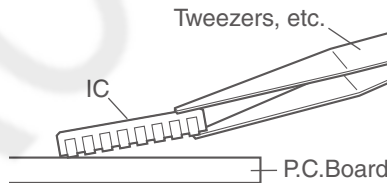


When it is hard to melt the solder completely, heat it with a hot air desoldering tool through the IC besides through the P.C.Board.

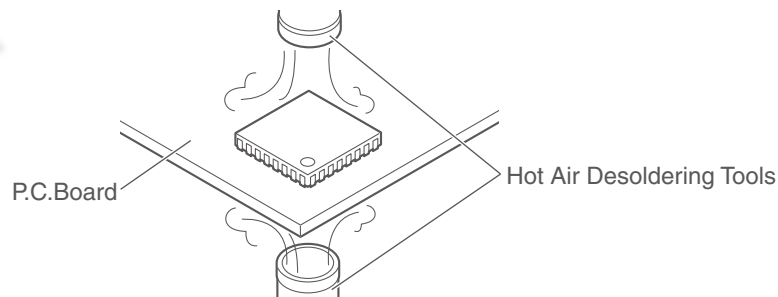

3. After removing the IC, clean the P.C.Board of residual solder.

### 13.1.4. How to Install the IC


1. Place the solder a little on the land where the radiation GND pad on IC bottom is to be attached.

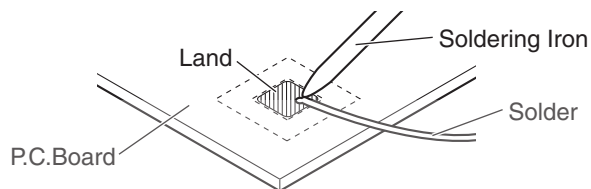

2. Place the solder a little on the land where IC pins are to be attached, then place the IC.

**Note:**


- When placing the IC, the positioning should be done very carefully.

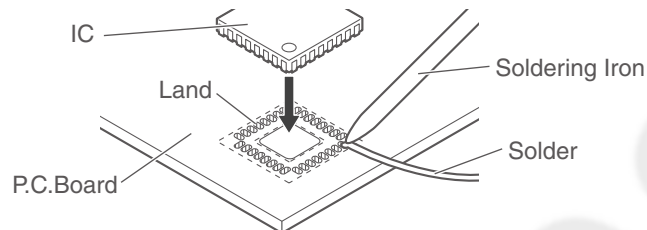

3. Heat the IC with a hot air desoldering tool through the P.C.Board until the solder on IC bottom is melted.

**Note:**

- Be sure to place it precisely, controlling the air volume of the hot air desoldering tool.

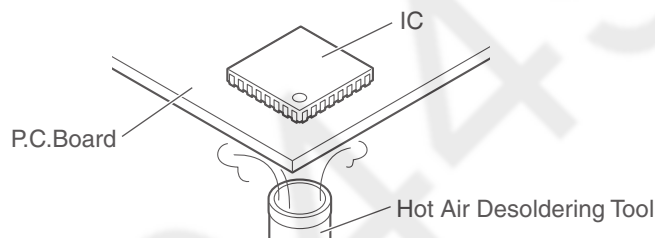

4. After soldering, confirm there are no short and open circuits with visual inspection.

## 13.2. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

### 13.2.1. Preparation

- PbF (: Pb free) Solder

- Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

**Note:** We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

- Flux

Recommended Flux: Specific Gravity → 0.82.

Type → RMA (lower residue, non-cleaning type)


**Note:** See **About Lead Free Solder (PbF: Pb free)** (P.4)

### 13.2.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

**Note:**


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

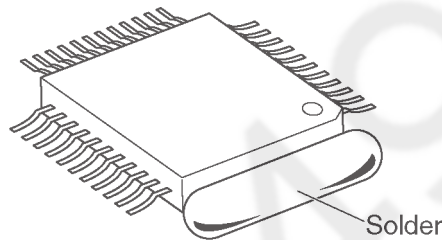

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

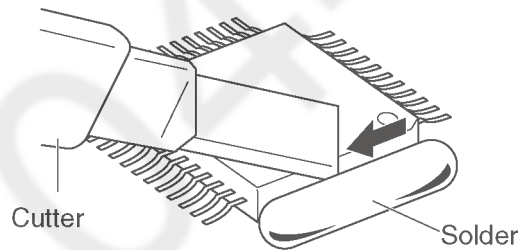

3. While the solder melts, remove it together with the IC pins.

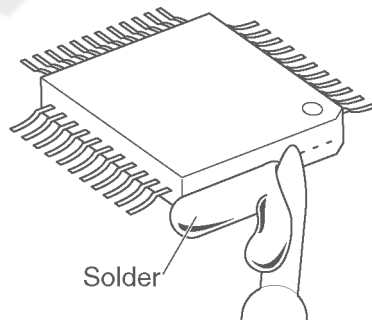

When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.


### 13.2.3. How to Install the IC

1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.




\*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.

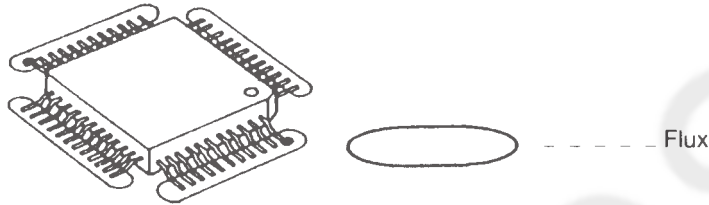


3. Solder the pins, sliding the soldering iron in the direction of the arrow.

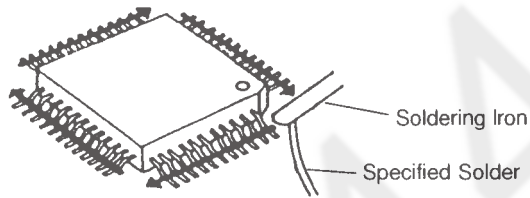

### 13.2.4. How to Remove a Solder Bridge

1. Lightly resolder the bridged portion.
2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.




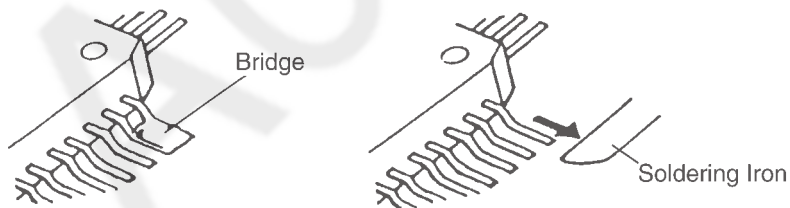

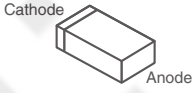
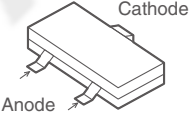
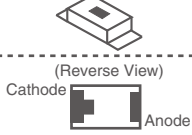


### 13.3. Terminal Guide of the ICs, Transistors and Diodes


#### 13.3.1. Base Unit

 <p>C0DBEYY00102</p>	 <p>(Reverse View) C2HBCY000106</p>	 <p>PNWI2TG4771H PNWI1TG4771H C1CB00002903</p>	 <p>C0JBAQ000247</p>	 <p>DSC7003S0L</p>
 <p>B1GBCFYY00020, B1ADGJ000002, 2SC6054JSL B1ABDM000001, 2SA1037K, B1GDCFNN0001 B1ADCF000040, B1ADNB000003,</p>		 <p>B1CCBR000001</p>	 <p>B1GDCFJJ0001</p>	
 <p>PQVDMD5S</p>	 <p>DA2J10100L B0JCMC000006 B0JCDD000001</p>	 <p>PQVDPTZT2530</p>	 <p>MAZ805100L</p>	 <p>B0ECKM000008</p>
 <p>LNJ237W82RA</p>	 <p>B3AFB0000211</p>	 <p>B0DDCD000001</p>		

#### 13.3.2. Portable

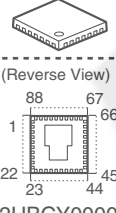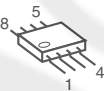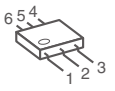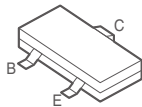 <p>(Reverse View) C2HBCY000081</p>	 <p>PNWITGA470BR</p>	 <p>C0DBZYY00357</p>	 <p>B1ADCF000040 DRC9113Z0L 2SC6054JSL</p>	 <p>B1ABGE000011</p>
 <p>B0BC4R3A0006</p>	 <p>B0DDCD000001</p>	 <p>(Reverse View) B3ACB0000190</p>		

#### 13.3.3. Charger Unit

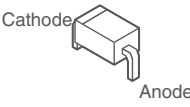 <p>B0ECKM000008</p>
---

## 14 Schematic Diagram

### 14.1. For Schematic Diagram

#### 14.1.1. Base Unit (Base Unit (Main))

**Notes:**

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

**Important Safety Notice:**

Components identified by  $\triangle$  mark have special characteristics important for safety. When replacing any of these components, use only the manufacture's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

#### 14.1.2. Portable (Portable (Main))

**Notes:**

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
2. The schematic diagrams may be modified at any time with the development of new technology.

#### 14.1.3. Charger Unit (Charger Unit)

**Notes:**

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

**Important Safety Notice:**


Components identified by  $\triangle$  mark have special characteristics important for safety. When replacing any of these components, use only the manufacture's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

Memo

ID: A0449860




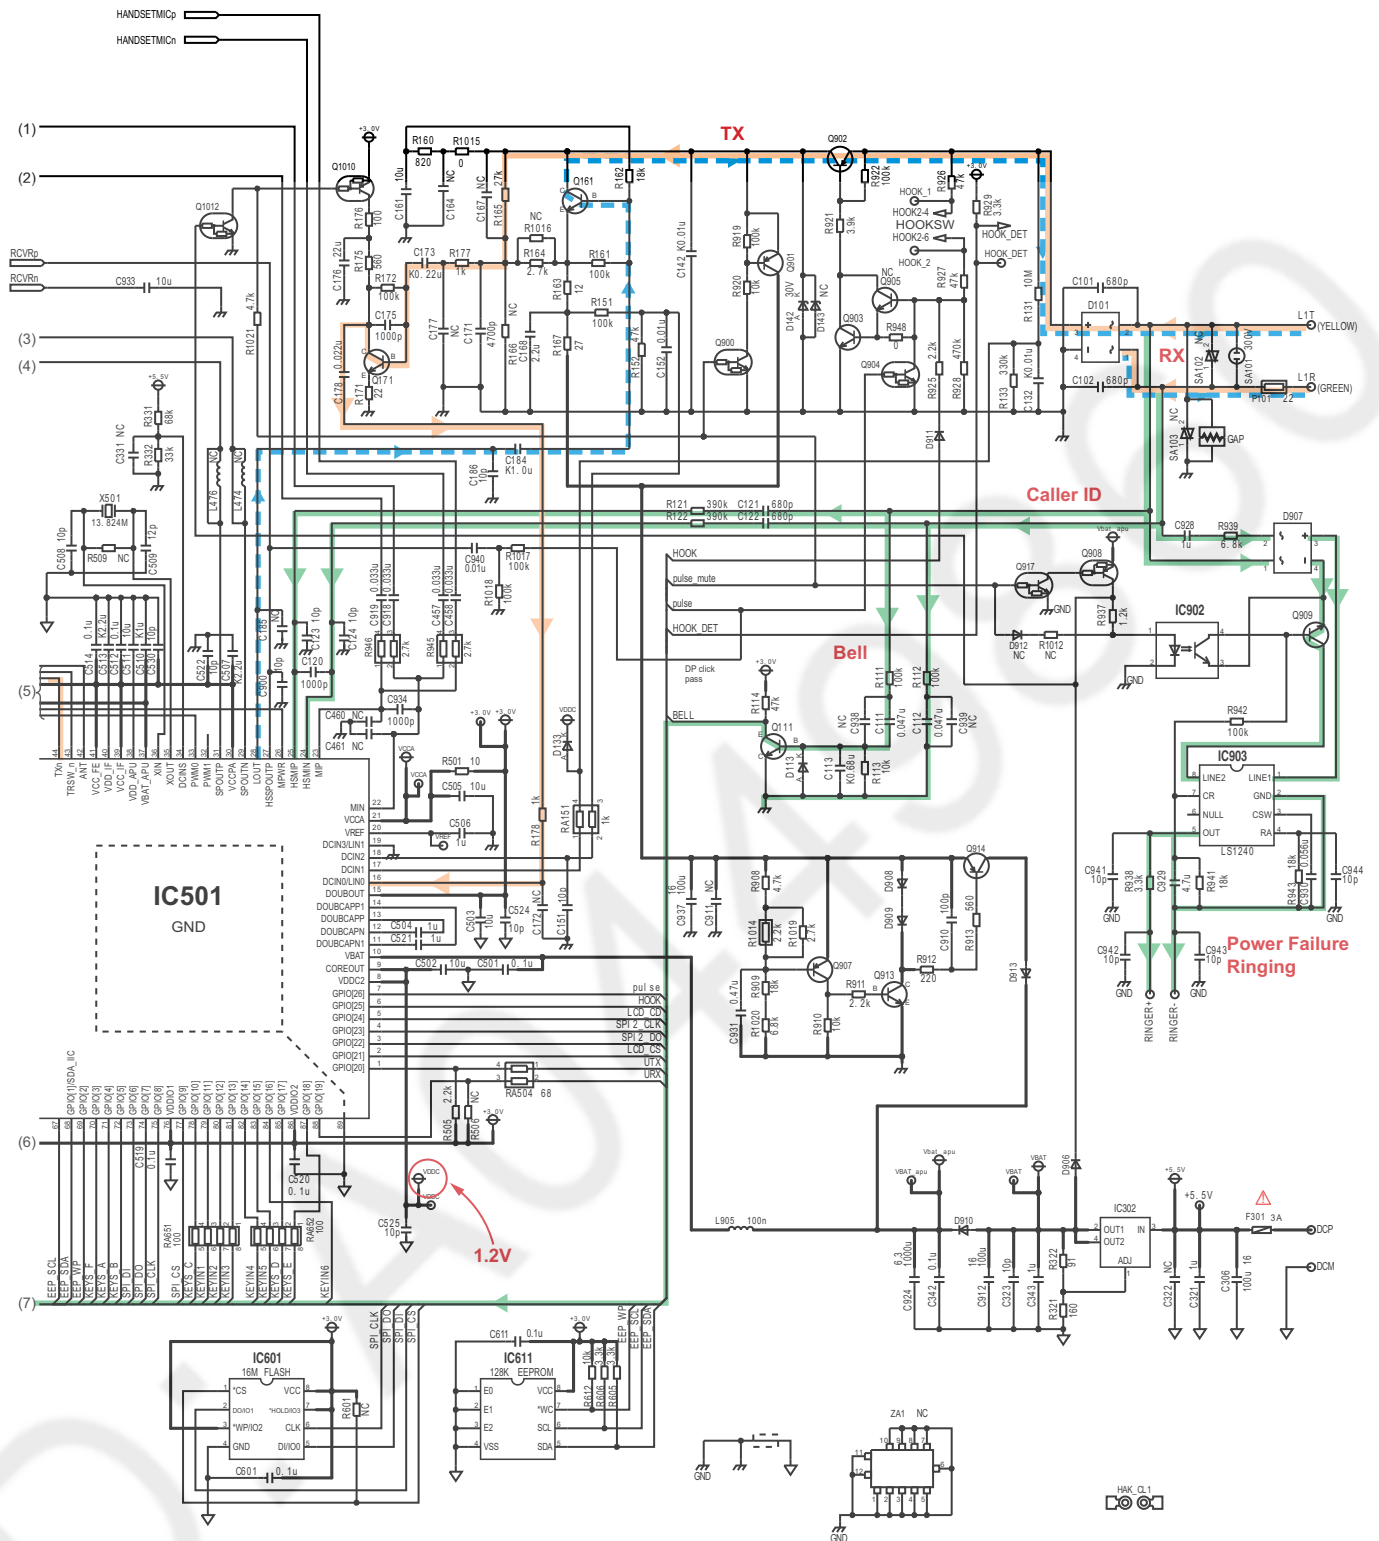

NC: No Components

KX-TG4771 SCHEMATIC DIAGRAM (Base Unit (Main))


## 14.3. Base Unit (Operation)

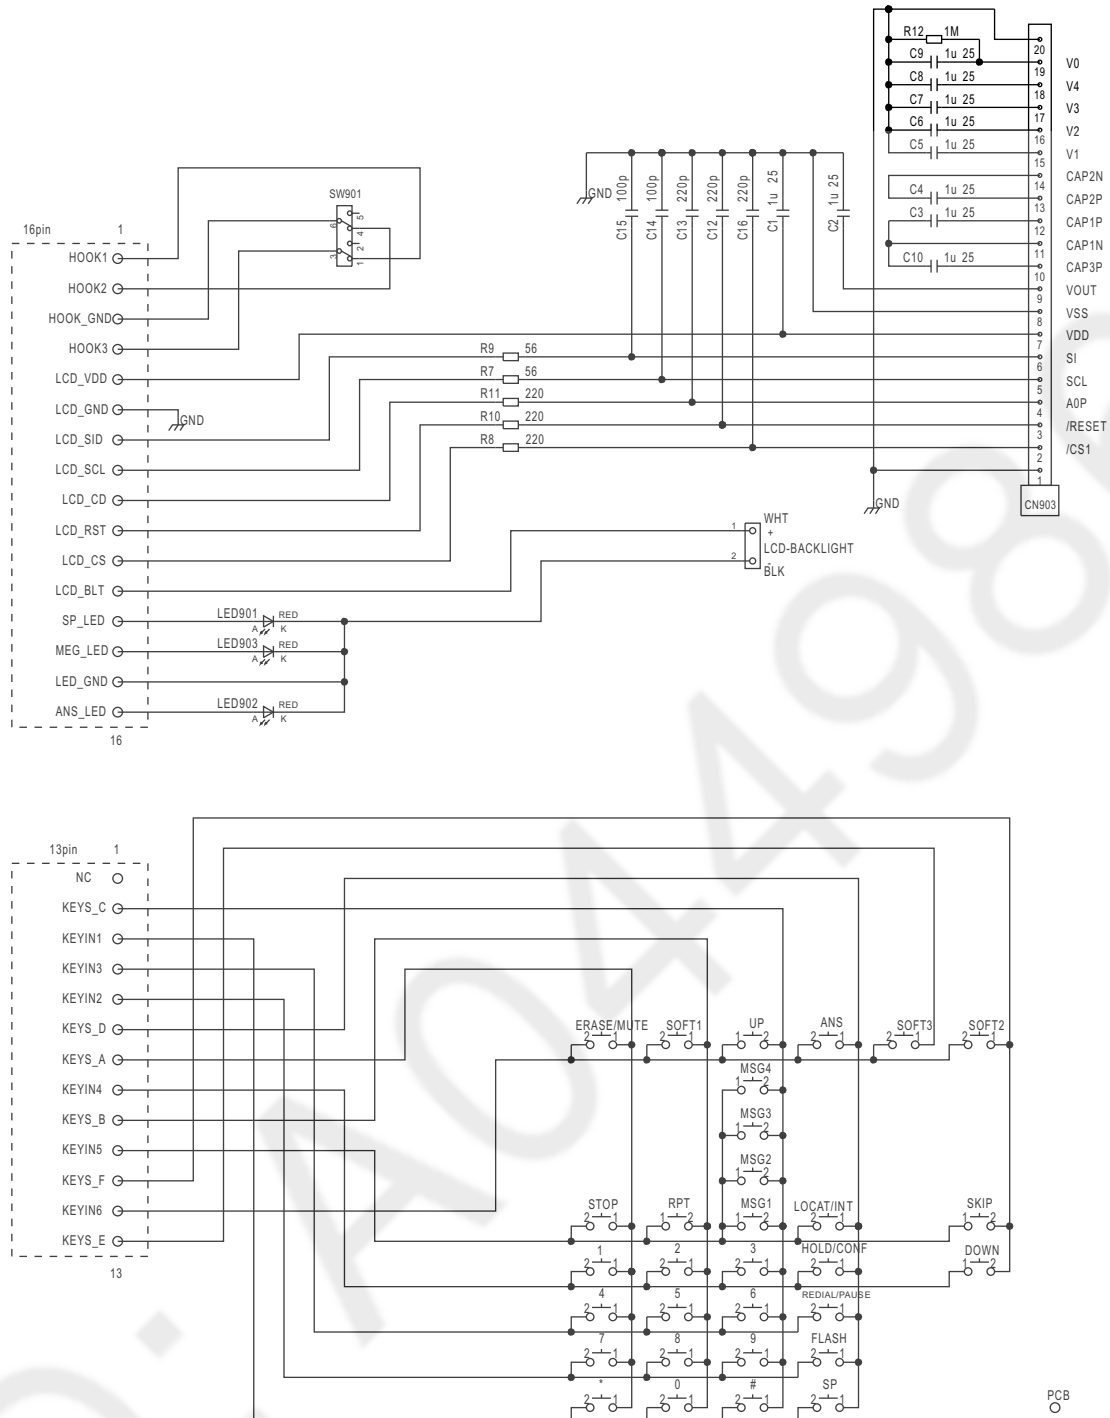

NC: No Components

KX-TG4771 SCHEMATIC DIAGRAM (Base Unit (Operation))


## 14.4. Base Unit (LED)

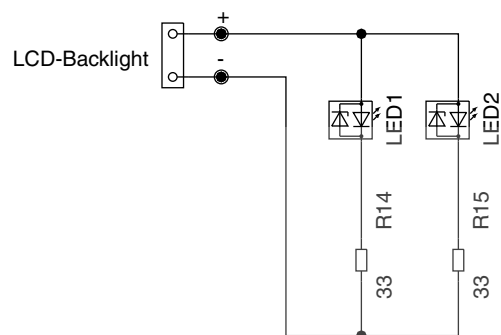



NC: No Components

KX-TG4771 SCHEMATIC DIAGRAM (Base Unit (LED))

## 14.5. Portable (Main)

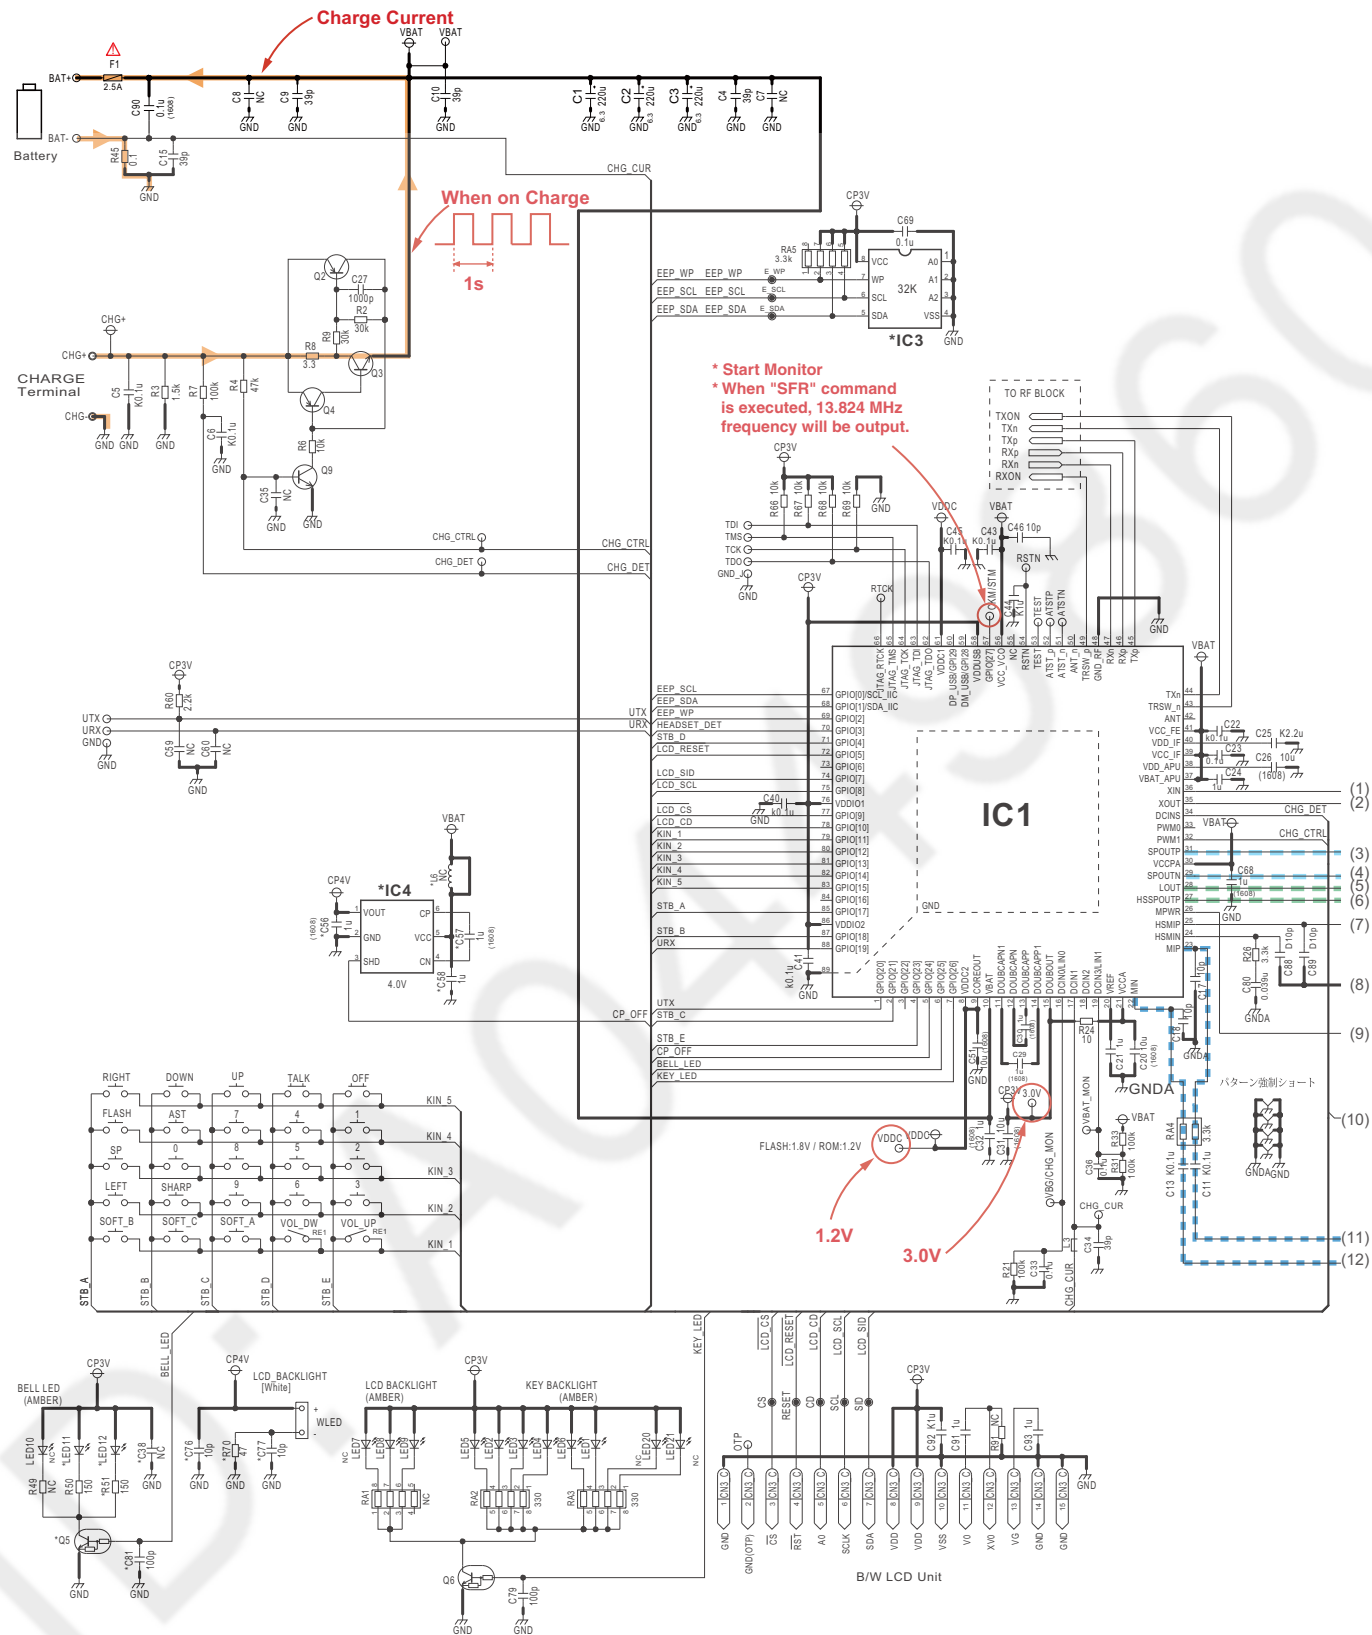


NC: No Components

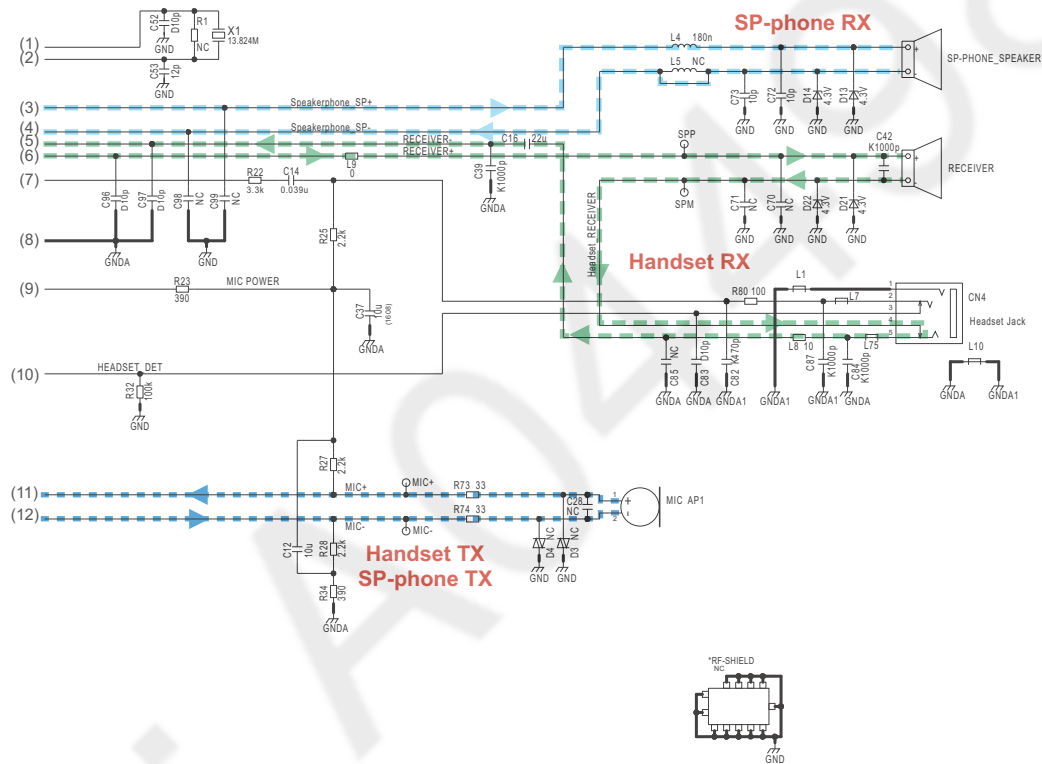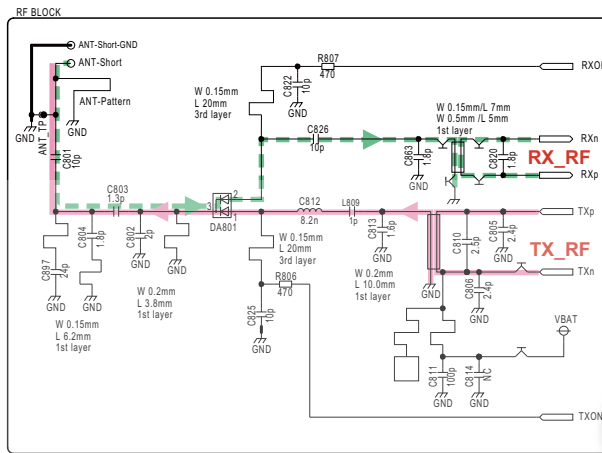

NC: No Components


KX-TGA470 SCHEMATIC DIAGRAM (Handset (Main))

## 14.6. Portable (LED)

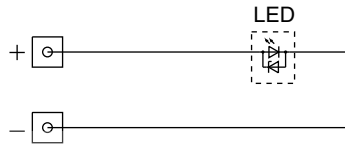

KX-TGA470 SCHEMATIC DIAGRAM (Handset (LED))

## 14.7. Charger Unit

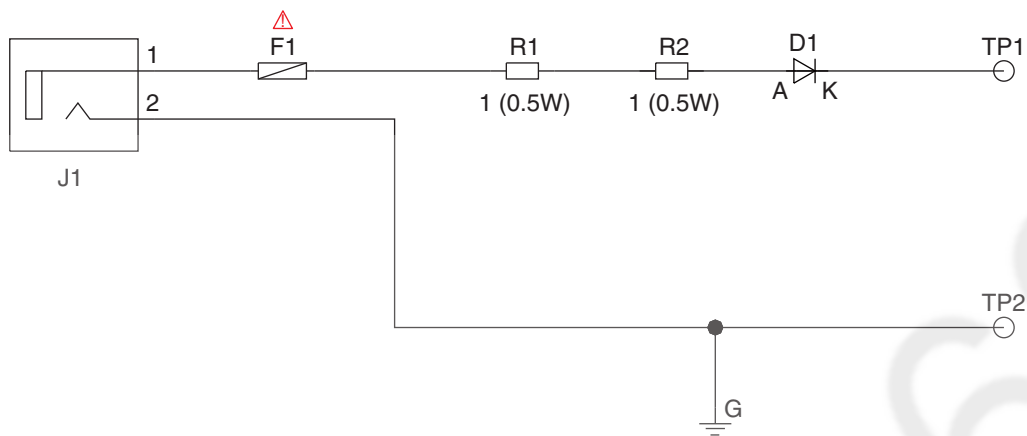

SCHEMATIC DIAGRAM (Charger Unit)


**Memo**

ID: A0449860


# 15 Printed Circuit Board

## 15.1. Base Unit (Main)

### 15.1.1. Component View

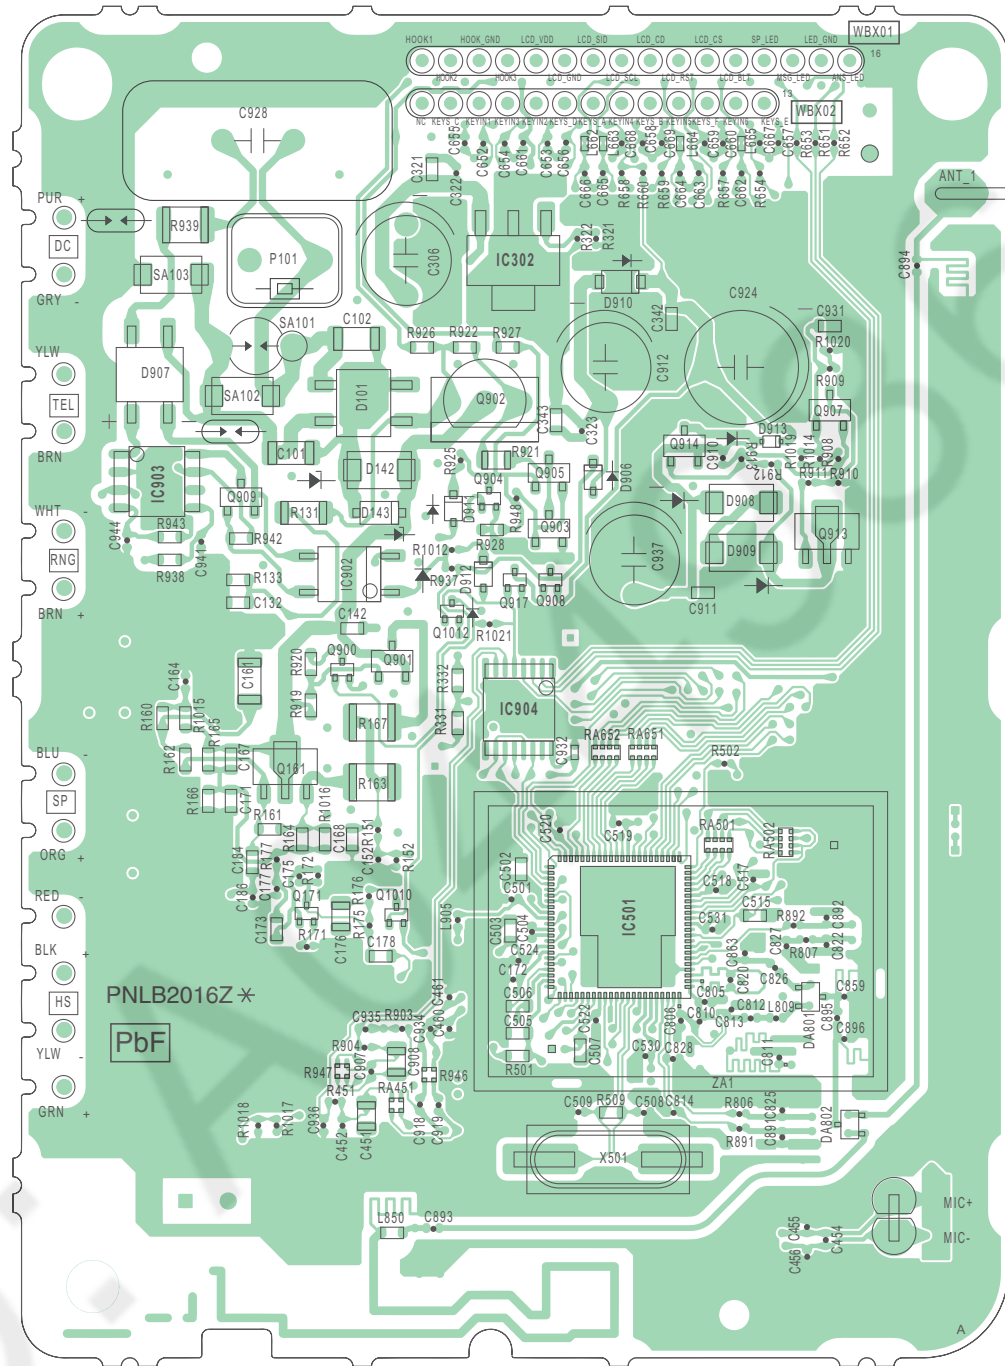


KX-TG4771 CIRCUIT BOARD (Base Unit (Main) (Component View))

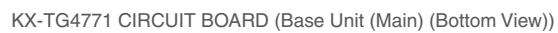


## 15.2. Base Unit (Operation)

### 15.2.1. Component View

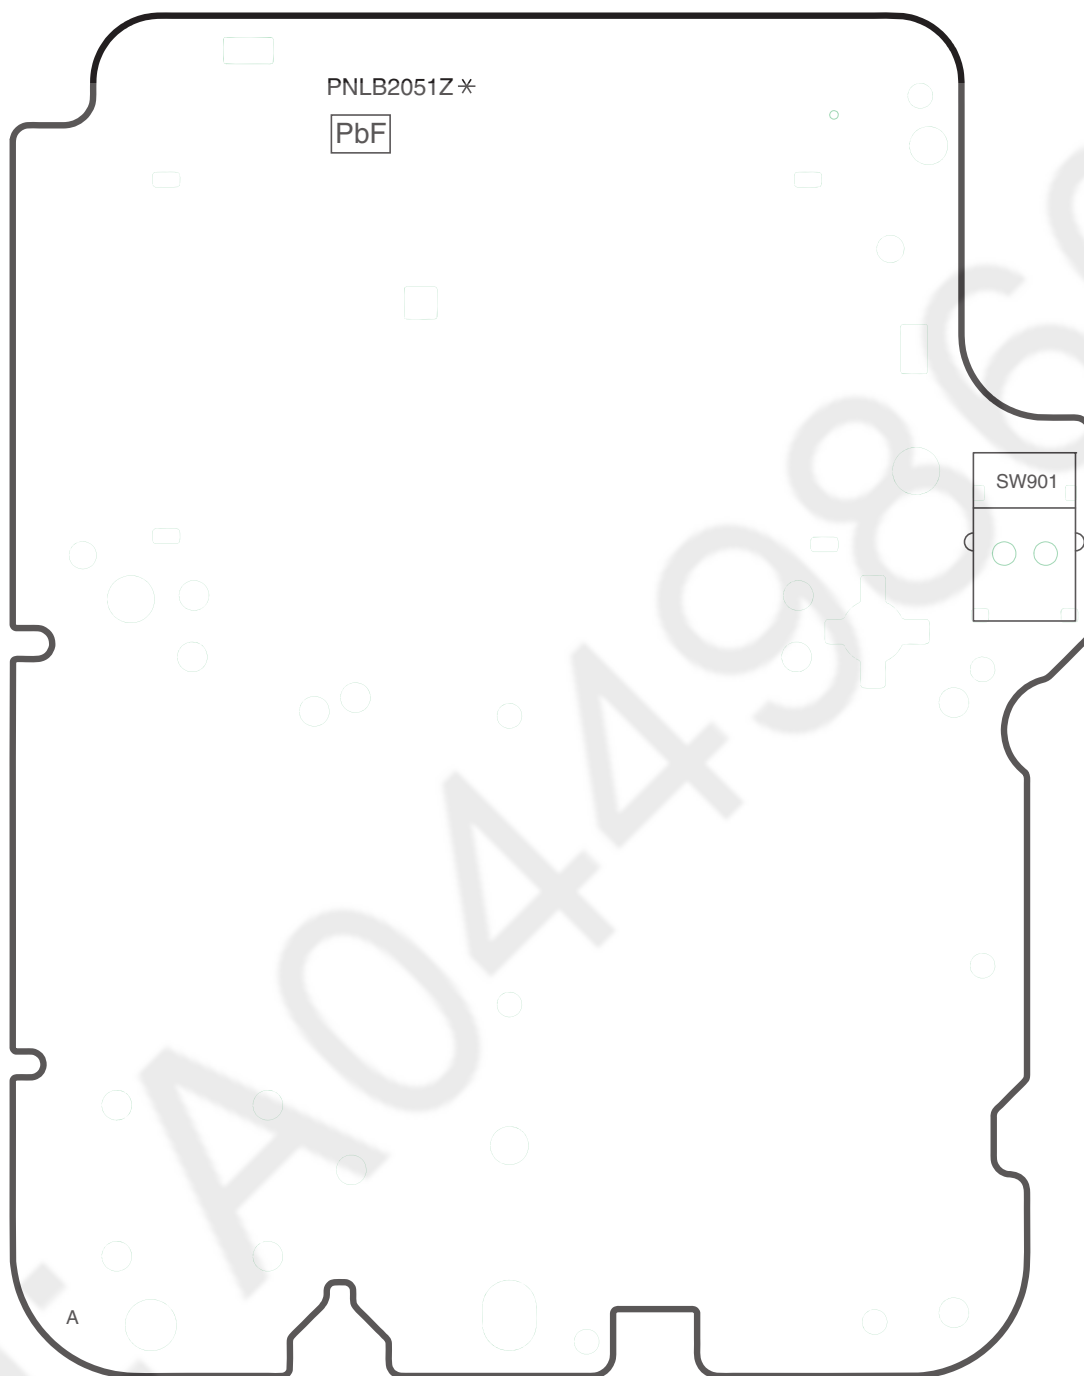


KX-TG4771 CIRCUIT BOARD (Base Unit (Operation) (Component View))

## 15.2.2. Bottom View

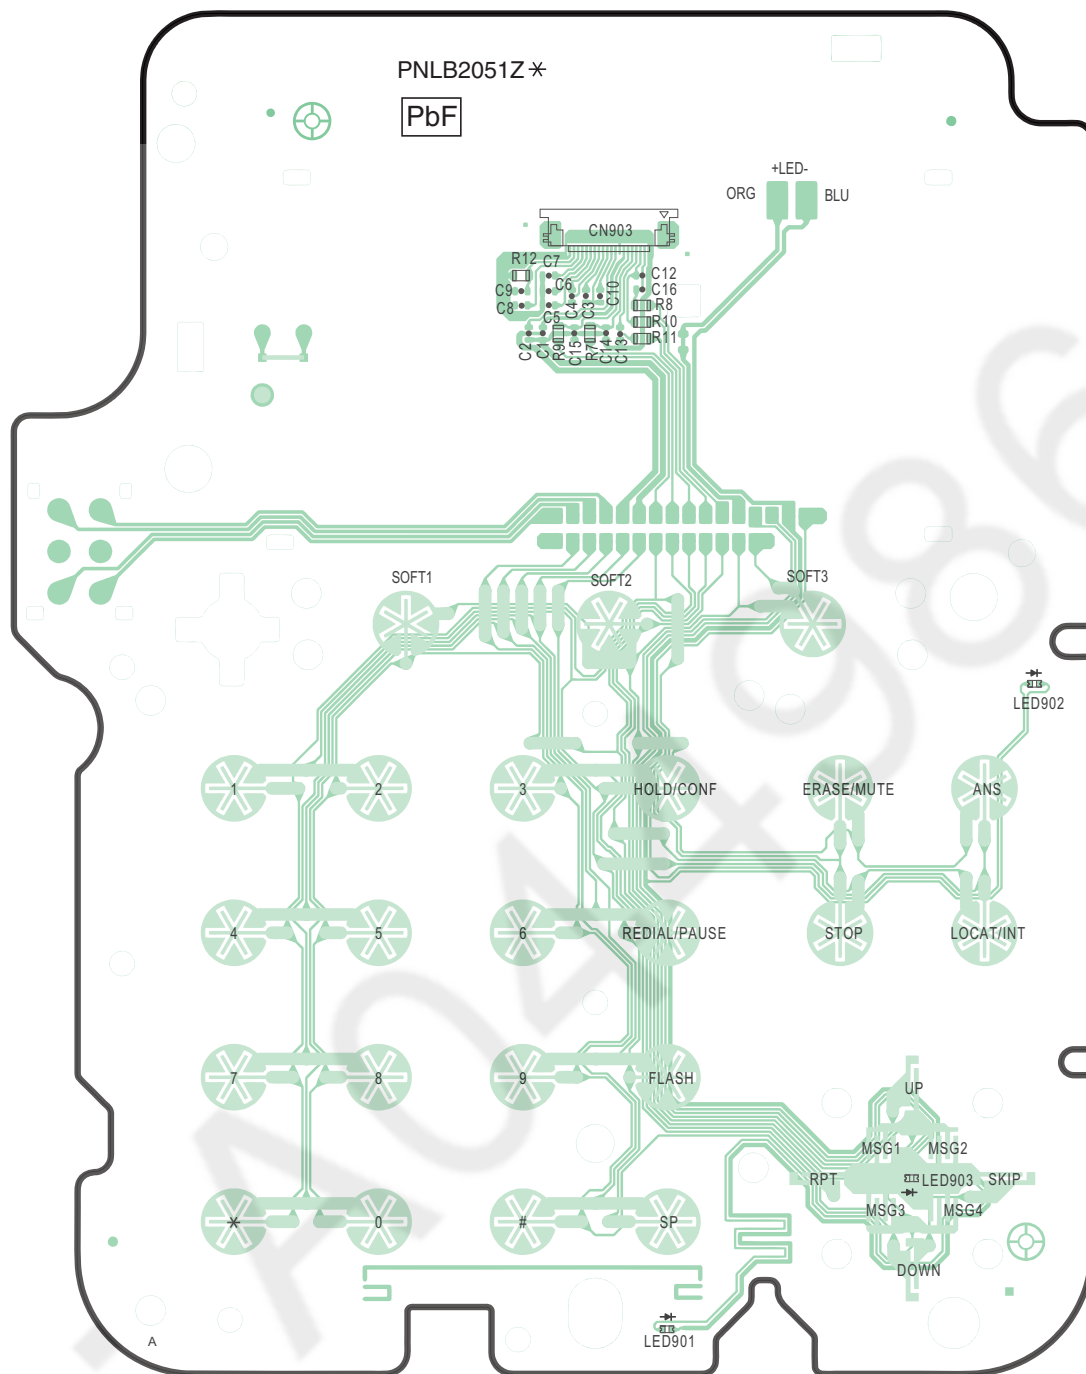

KX-TG4771 CIRCUIT BOARD (Base Unit (Operation) (Bottom View))

### 15.3. Base Unit (LED)

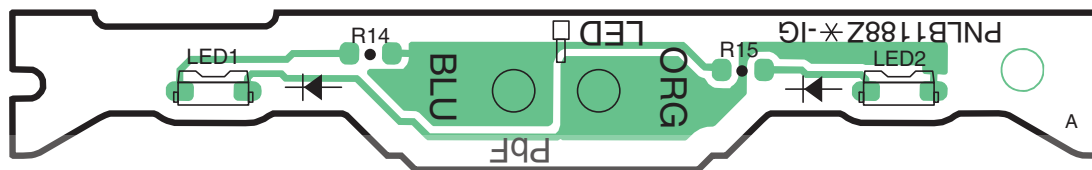


KX-TG4771 CIRCUIT BOARD (Base Unit (LED) (Component View))

**Memo**

ID: A0449860


## 15.4. Portable (Main)

### 15.4.1. Component View

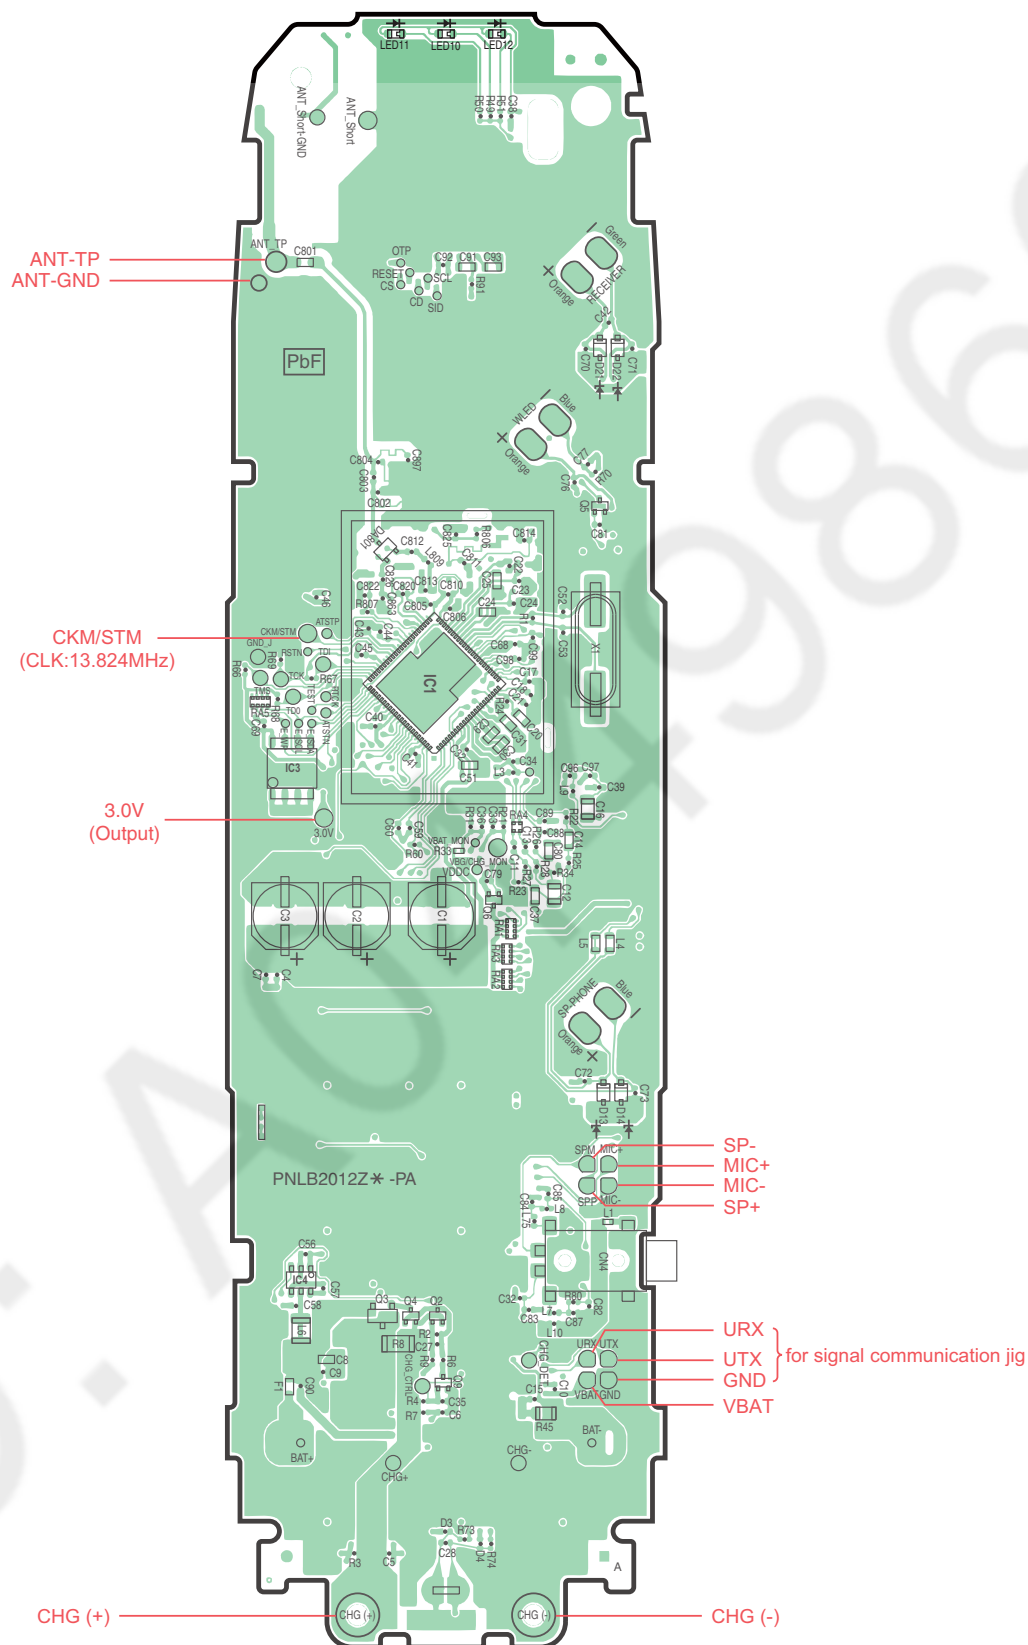


KX-TGA470 CIRCUIT BOARD (Portable (Main) (Component View))

## 15.4.2. Bottom View

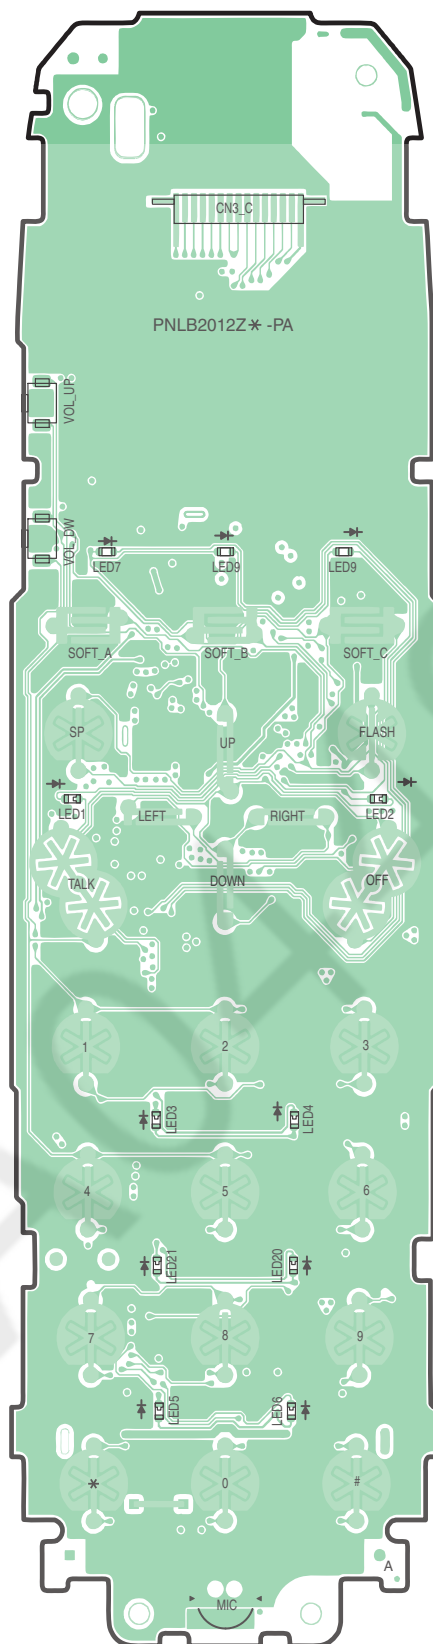

KX-TGA470 CIRCUIT BOARD (Portable (Main) (Bottom View))


## 15.5. Portable (LED)

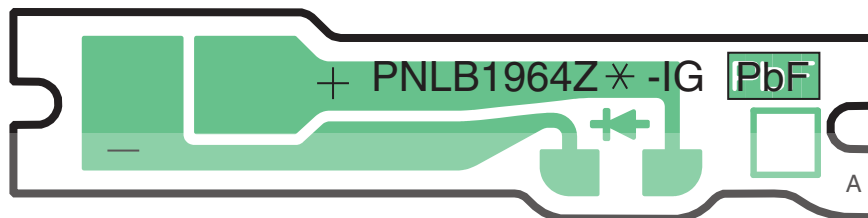

KX-TGA470 CIRCUIT BOARD (Portable (LED) (Component View))


## 15.6. Charger Unit

### 15.6.1. Component View

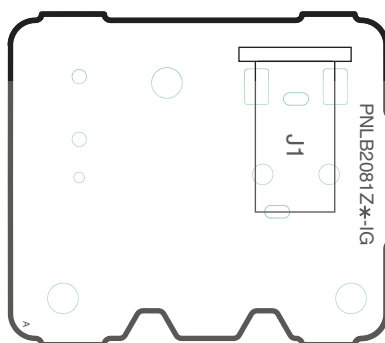

CIRCUIT BOARD (Charger Unit (Component View))


### 15.6.2. Bottom View

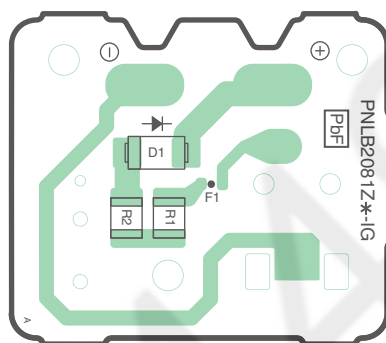


CIRCUIT BOARD (Charger Unit (Bottom View))


# 16 Exploded View and Replacement Parts List

## 16.1. Cabinet and Electrical Parts (Base Unit)

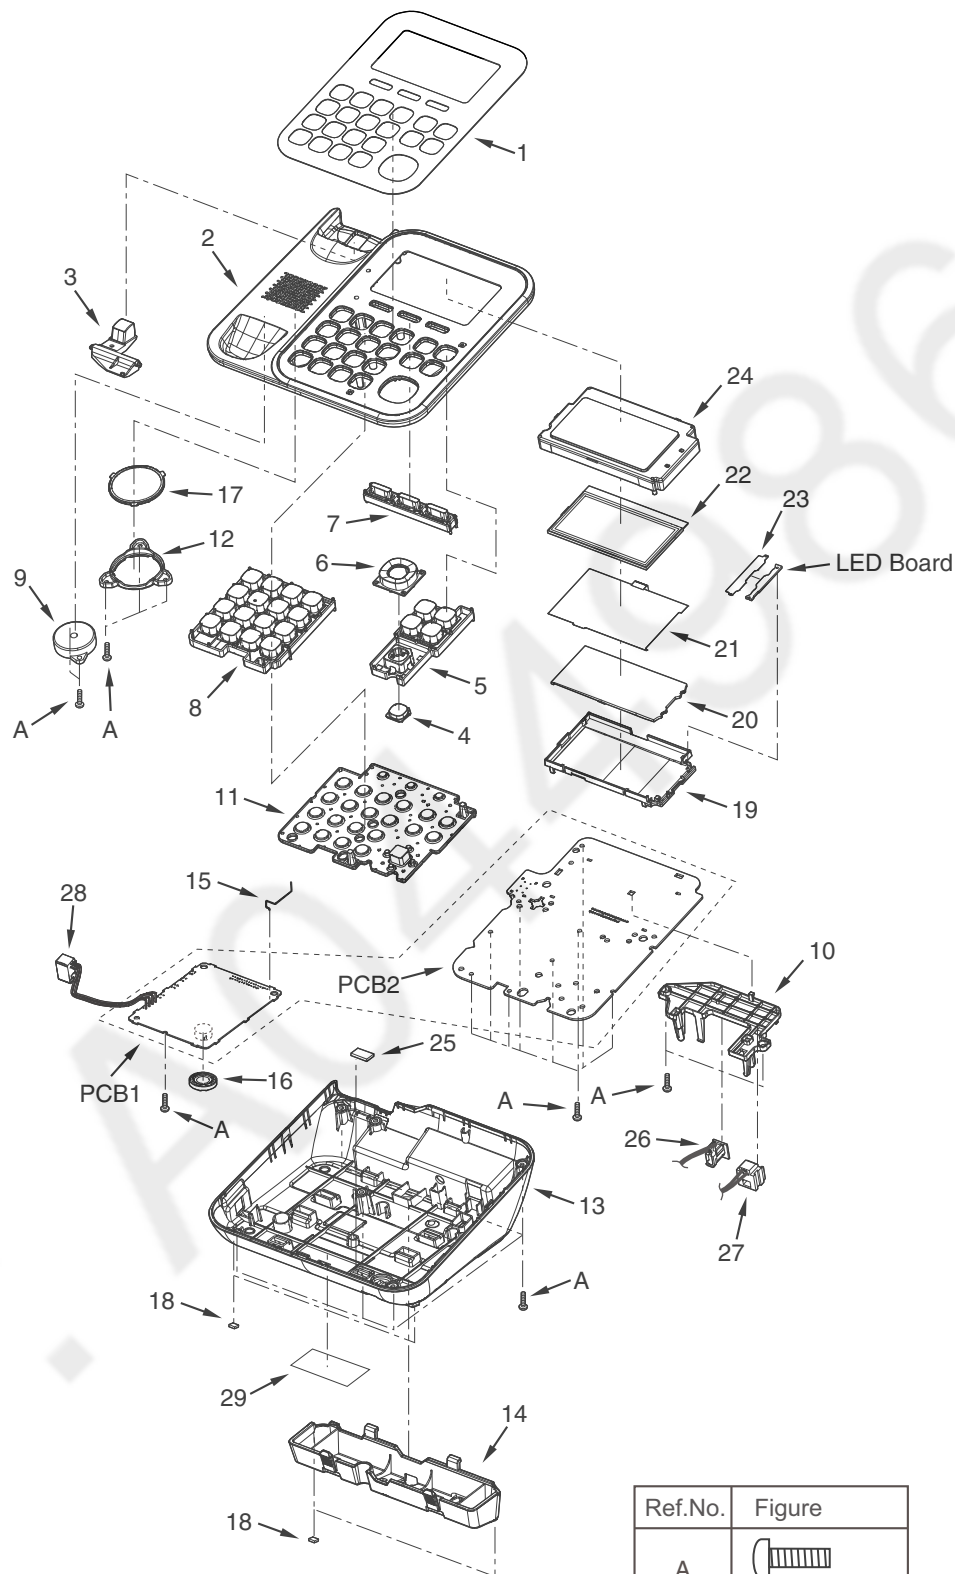


Ref.No.	Figure
A	 φ2.6 × 8 mm

## 16.2. Cabinet and Electrical Parts (Portable)

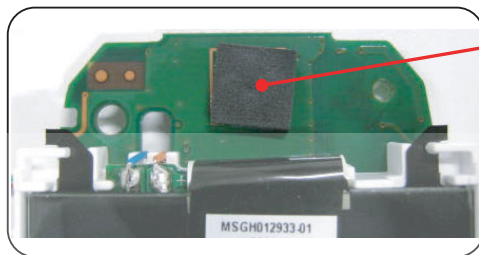

CUSHION RUBBER

\*STICK IT WITHIN THE FRAMEWORK ON P.C.B.

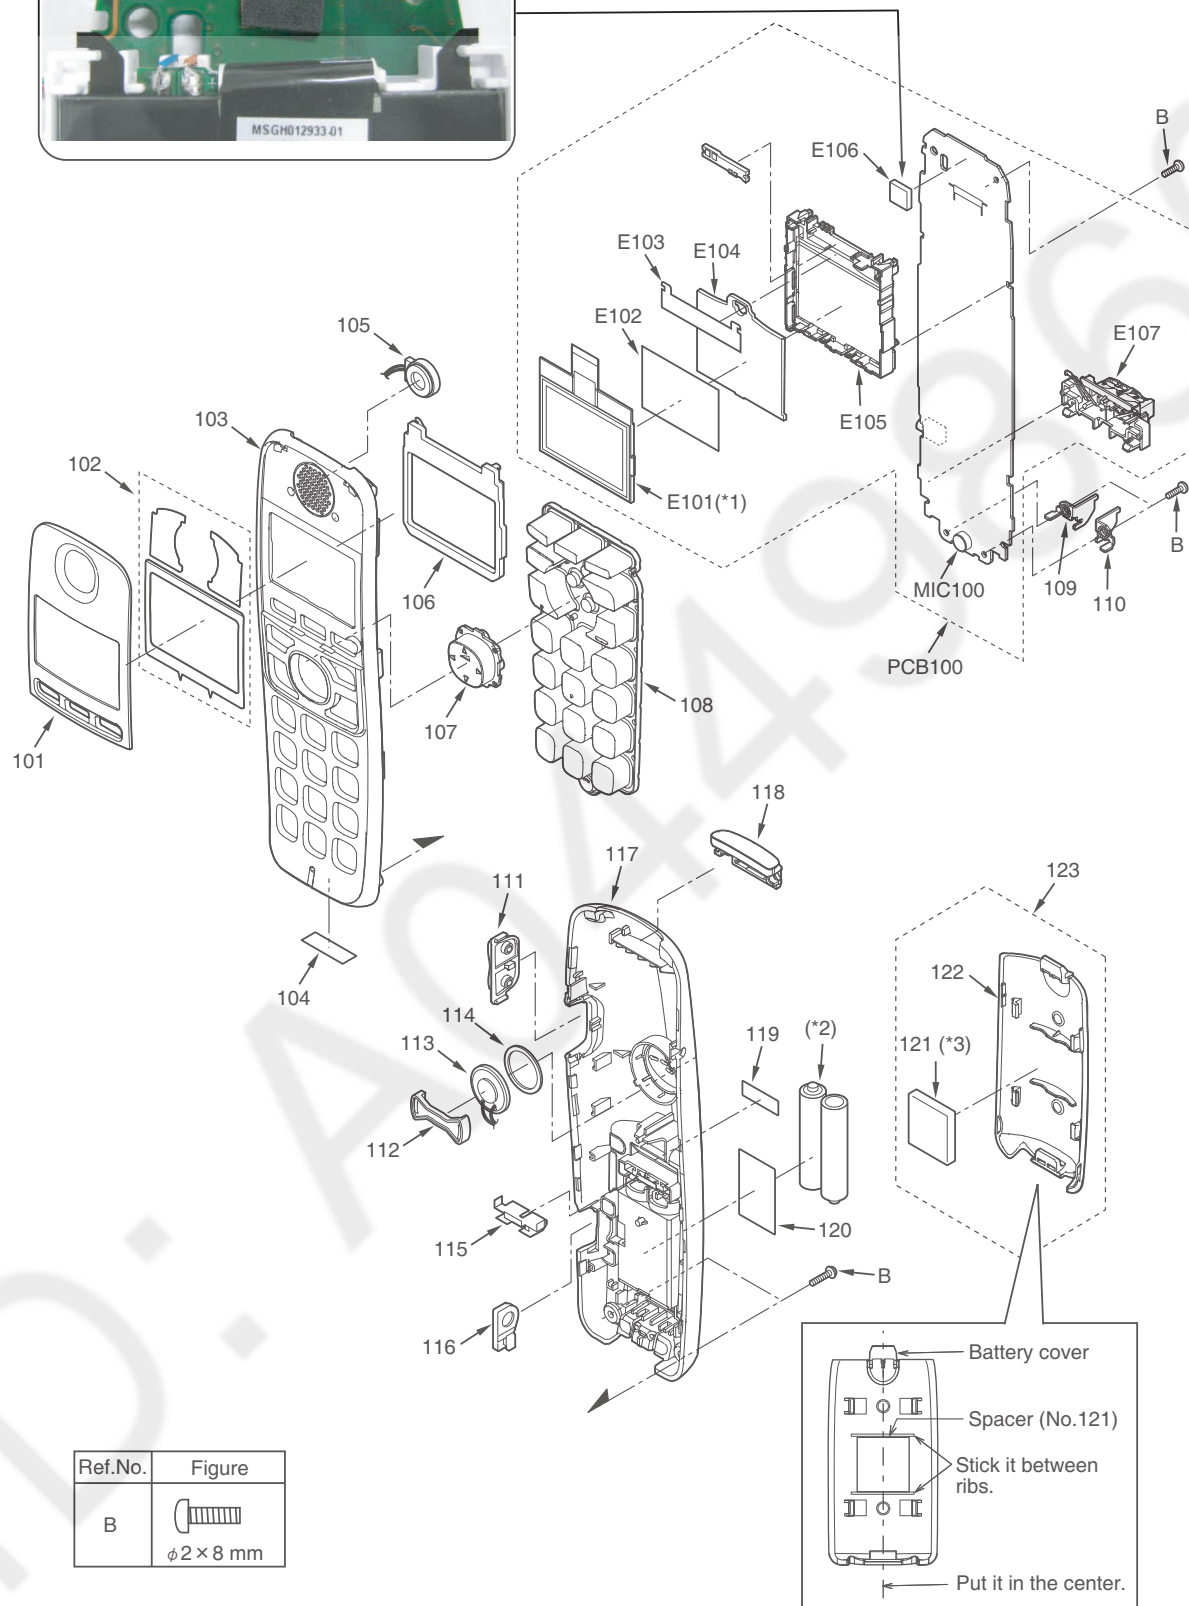

Ref.No.	Figure
B	 φ2 × 8 mm


### Note:


(\*1) This cable is fixed by welding. Refer to **How to Replace the Portable LCD** (P.48).

(\*2) The rechargeable Ni-MH battery HHR-4DPA is available through sales route of Panasonic.

(\*3) Attach the SPACER (No. 121) to the exact location described above.


### 16.3. Cabinet and Electrical Parts (Charger Unit)

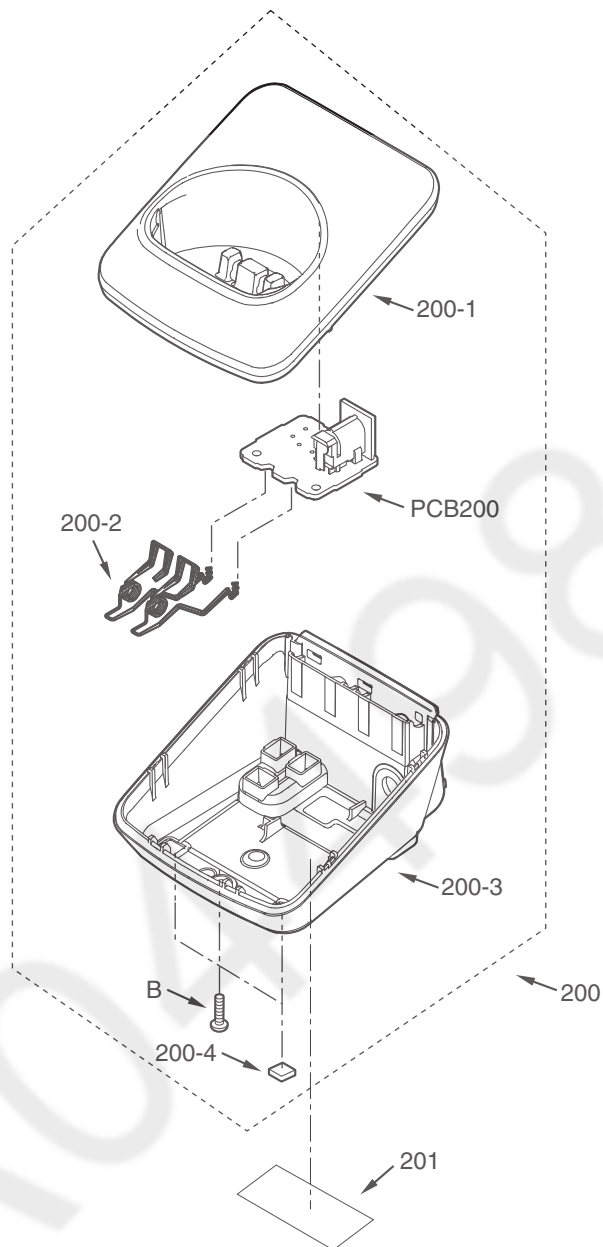


Ref.No.	Figure
B	 $\phi 2 \times 8 \text{ mm}$

## 16.4. Accessories and Packing Materials


### 16.4.1. KX-TG4771B

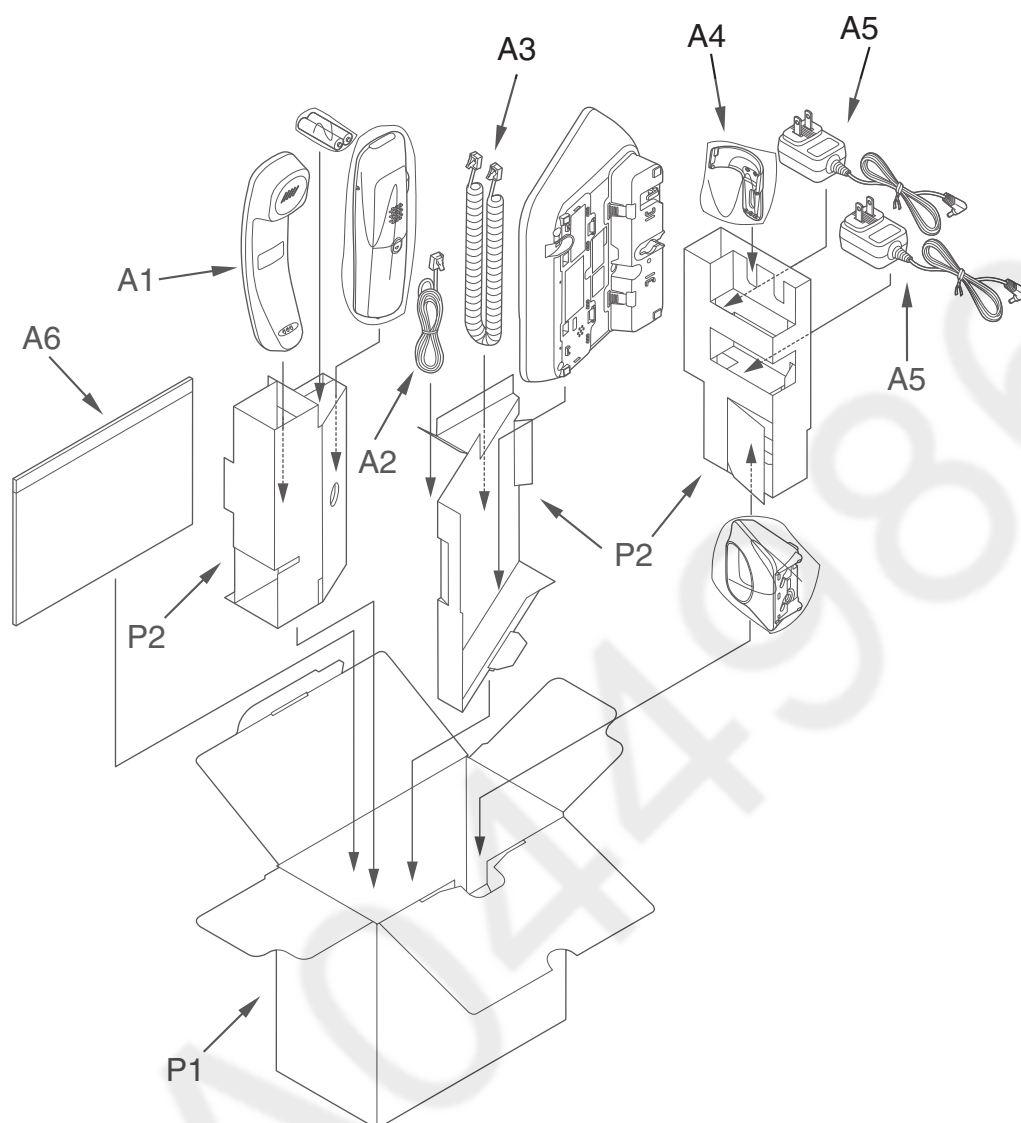


## 16.4.2. KX-TG4772B

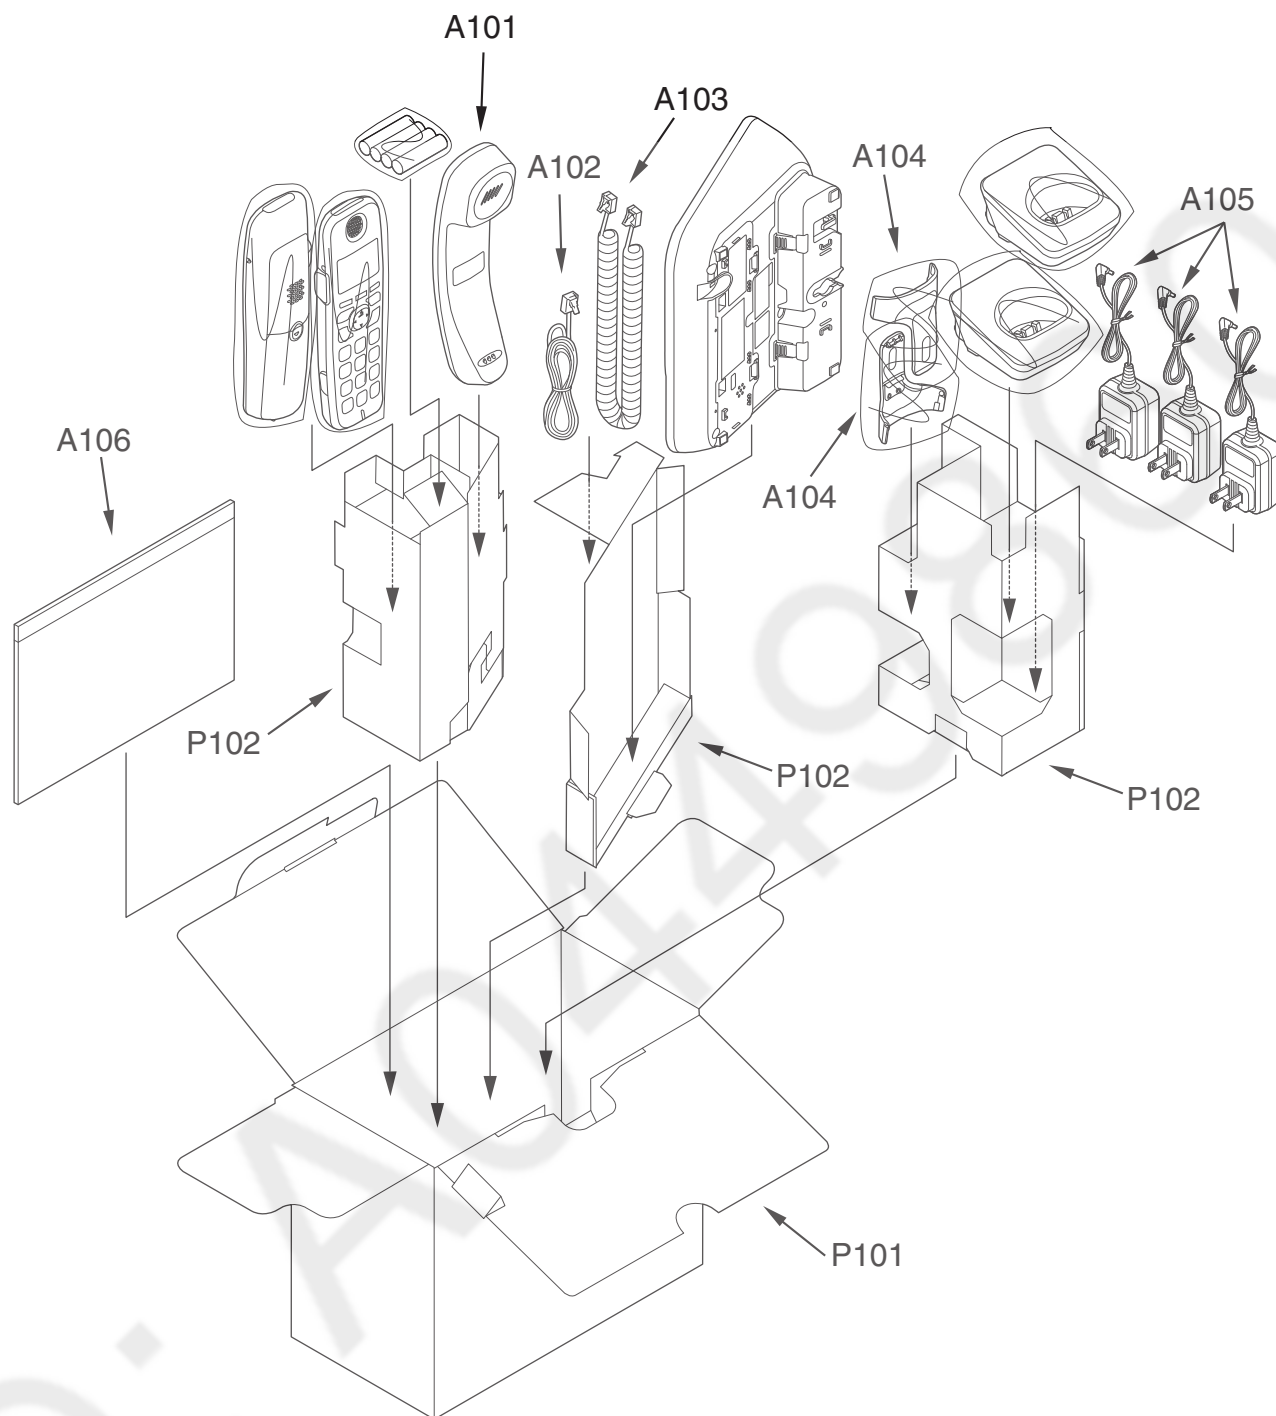

### 16.4.3. KX-TG4773B

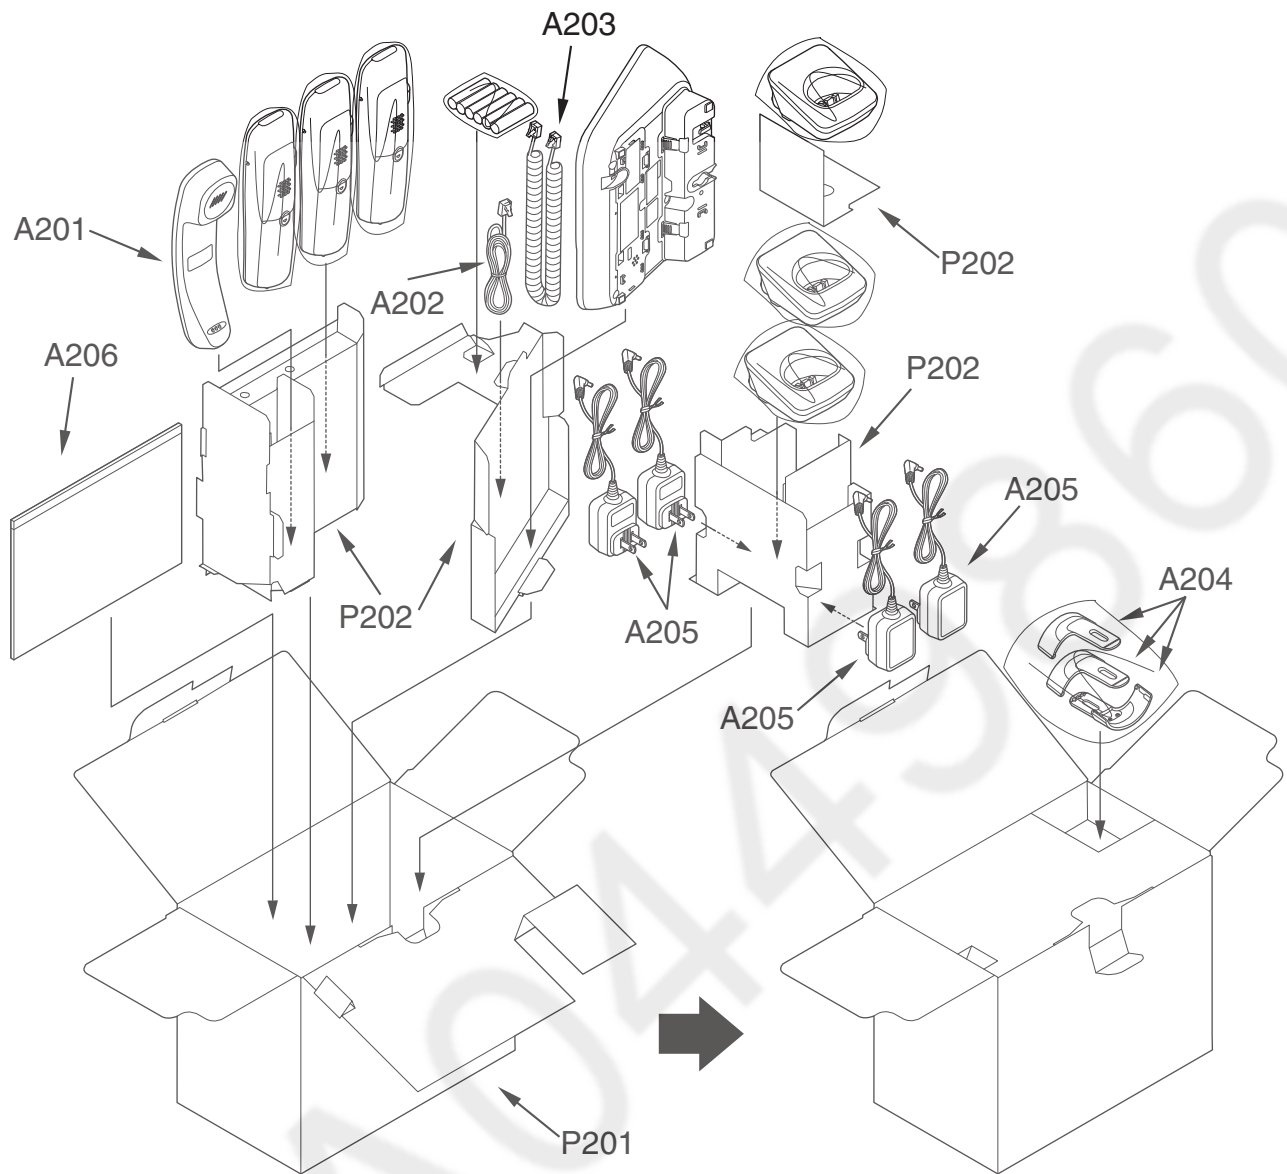

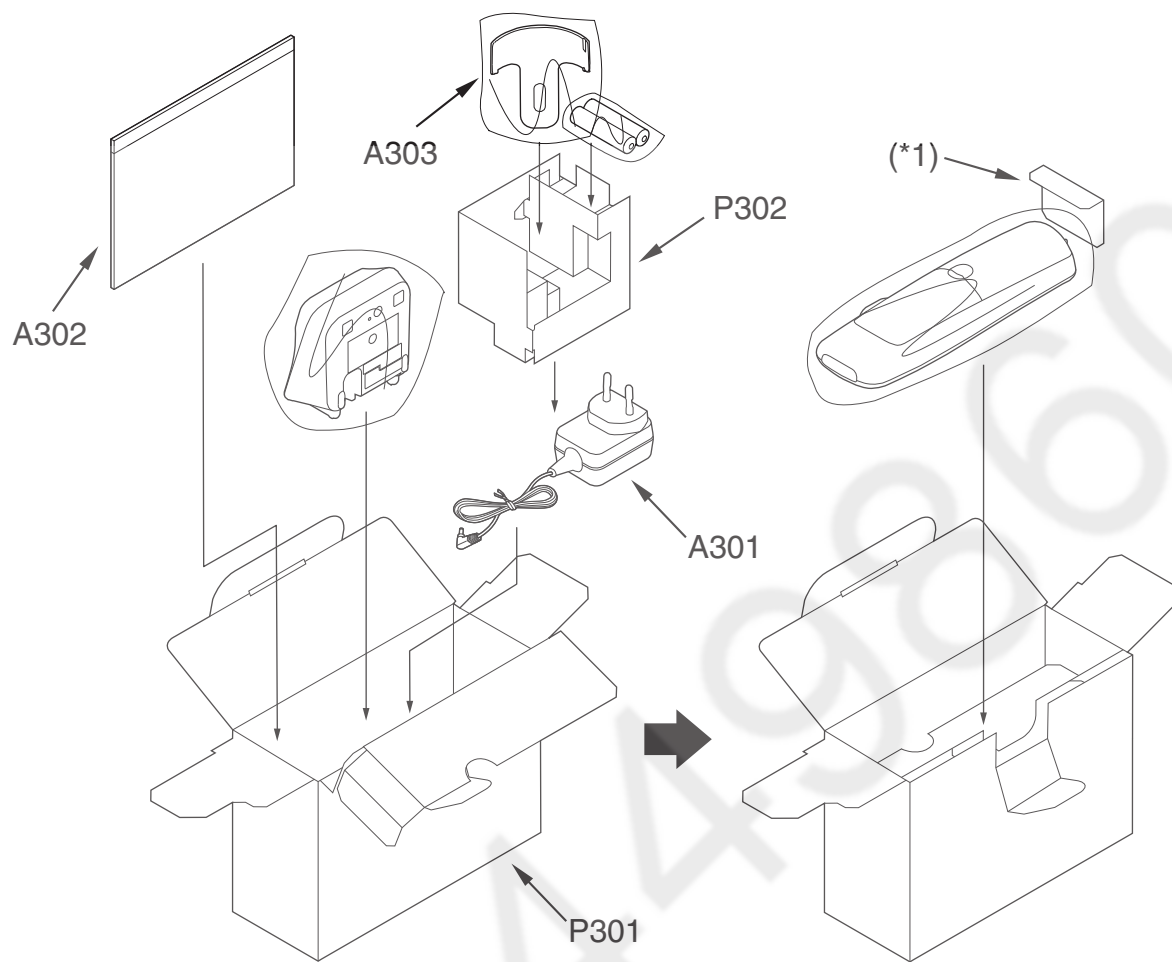**16.4.4. KX-TGA470B****Note:**

(\*) This pad is a piece of Ref. No. P301 (GIFT BOX).

## 16.5. Replacement Parts List

### 1. RTL (Retention Time Limited)

#### Note:

The "RTL" marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time.

This period of time depends on the type of item, and the local laws governing parts and product retention.

At the end of this period, the item will no longer be available.

### 2. Important safety notice

Components identified by the  $\Delta$  mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.

4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.

### 5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms ( $\Omega$ ) k=1000 $\Omega$ , M=1000k $\Omega$

All capacitors are in MICRO FARADS ( $\mu$ F) p= $\mu$ F

\*Type & Wattage of Resistor

#### Type

ERC:Solid	ERX:Metal Film	PQ4R:Chip
ERDS:Carbon	ERG:Metal Oxide	ERS:Fusible Resistor
ERJ:Chip	ER0:Metal Film	ERF:Cement Resistor

#### Wattage

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W
------------	------------	---------	------	------	------

\*Type & Voltage Of Capacitor

#### Type

ECFD:Semi-Conductor	ECCD,ECKD,ECBT,F1K,ECUV: Ceramic
EQS:Styrol	ECQE,ECQV,ECQG: Polyester
ECUV,PQCUV, ECUE:Chip	ECEA,ECST,EEE: Electytic
ECQMS:Mica	ECQP: Polypropylene

#### Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others		
1H:50V	05:50V	0F:3.15V	0J :6.3V	1V :35V	
2A:100V	1:100V	1A:10V	1A :10V	50,1H:50V	
2E:250V	2:200V	1V:35V	1C :16V	1J :16V	
2H:500V		0J:6.3V	1E,25:25V	2A :100V	

### 16.5.1. Base Unit

#### 16.5.1.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	1	PNGP1236Z1	PANEL, UPPER	PC-HB
	2	PNKM1268Z1	CABINET BODY	PS-HB
	3	PNBH1017Z1	BUTTON, HOOK	ABS-HB
	4	PNBC1345Z1	BUTTON, MESSAGE	PMMA-HB
	5	PNBX1306Z1	BUTTON, TAM	ABS-HB
	6	PNBC1404W3	BUTTON, NAVIGATOR KEY	ABS-HB
	7	PNBX1307Z1	BUTTON, FUNCTION	ABS-HB
	8	PNBX1305Z1	BUTTON, DIAL KEY	ABS-HB
	9	L0DDYD000010	BUZZER	
	10	PNHR1605Z	GUIDE, JACK HOLDER	PS-HB
	11	PNJK1154Z	KEYBOARD SWITCH, DIAL	
	12	PQHR11082Z	GUIDE, SPEAKER	POM-HB
	13	PNKF1235Z1	CABINET COVER	PS-HB

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	14	PNKL1037Z1	STAND, WALL MOUNT	ABS-HB
	15	PNLA1088Z	ANTENNA	
	16	PQMG10025W	RUBBER PARTS, MIC	
	17	L0AA04A00028	SPEAKER	
	18	PNHA1013Z	RUBBER PARTS, FOOT CUSHION	
	19	PNHR1606Z	GUIDE, LCD	ABS-HB
	20	PNHR1607Z	PLASTIC PARTS, LCD PLATE	PMMA-HB
	21	PNHX1514Z	PLASTIC PARTS, DEFFUSION SHEET	
	22	L5DYBYY00042	LIQUID CRYSTAL DISPLAY	
	23	PNHX1515Z	PLASTIC PARTS, REFLECTOR SHEET	
	24	PNGP1237Z1	PANEL, LCD	PC-HB
	25	PNYE1065Y	SPACER, CUSHION LCD	
	26	K2ECYZ000001	JACK, DC	
	27	PQJJ1T039J	JACK, MODULAR	
	28	PQJJ1T030N	JACK, HANDSET	
	29	PNGT6470Z	NAME PLATE	

### 16.5.1.2. Main P.C. Board Parts

#### Note:

(\*1) When replacing IC611 or X501, make the adjustment using PNZZTG4771M. Refer to **How to download the data** (P.56) of Things to Do after Replacing IC or X'tal.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB1	PNWP1TG4771H	MAIN P.C.BOARD ASS'Y (RTL)	
			(ICs)	
	IC302	C0DBEYY00102	IC	
	IC501	C2HBCY000106	IC	
	IC601	PNWI2TG4771H	IC	
	IC611	PNWI1TG4771H	IC (*1)	
	IC903	C1CB00002903	IC	
	IC904	C0JBAQ000247	IC	
			(TRANSISTORS)	
	Q111	2SC6054JSL	TRANSISTOR(SI)	S
	Q161	DSC7003S0L	TRANSISTOR(SI)	
	Q171	2SC6054JSL	TRANSISTOR(SI)	S
	Q900	B1GBCFYY0020	TRANSISTOR(SI)	
	Q901	B1ADGJ000002	TRANSISTOR(SI)	
	Q902	B1CCBR000001	TRANSISTOR(SI)	
	Q903	B1ABDM000001	TRANSISTOR(SI)	
	Q904	B1GBCFYY0020	TRANSISTOR(SI)	
	Q906	B1GBCFYY0020	TRANSISTOR(SI)	
	Q907	2SA1037K	TRANSISTOR(SI)	S
	Q908	B1GDCFN00001	TRANSISTOR(SI)	
	Q909	B1ABDM000001	TRANSISTOR(SI)	
	Q911	B1ADCF000040	TRANSISTOR(SI)	
	Q913	DSC7003S0L	TRANSISTOR(SI)	
	Q914	B1ADNB000003	TRANSISTOR(SI)	
	Q917	B1GBCFYY0020	TRANSISTOR(SI)	
	Q1010	B1GDCFJJ0001	TRANSISTOR(SI)	
	Q1012	B1GBCFYY0020	TRANSISTOR(SI)	
			(DIODES)	
	D101	PQVDM5S	DIODE (SI)	
	D113	DA2J10100L	DIODE (SI)	
	D133	DA2J10100L	DIODE (SI)	
	D142	PQVDPZT2530	DIODE (SI)	S
	D900	MAZ805100L	DIODE (SI)	S
	D901	MAZ805100L	DIODE (SI)	S
	D902	MAZ805100L	DIODE (SI)	S
	D903	MAZ805100L	DIODE (SI)	S
	D906	DA2J10100L	DIODE (SI)	
	D907	PQVDM5S	DIODE (SI)	
	D908	B0ECKM000008	DIODE (SI)	
	D909	B0ECKM000008	DIODE (SI)	
	D910	B0JCMC000006	DIODE (SI)	
	D911	DA2J10100L	DIODE (SI)	
	D913	B0JCDD000001	DIODE (SI)	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	DA801	B0DDCD000001	DIODE (SI)	
	DA802	B0DDCD000001	DIODE (SI)	
			(COILS)	
	L809	G1C7N5JA0044	COIL	
	L900	PQLQR2KA20T	COIL	S
	L901	PQLQR2KA20T	COIL	S
	L902	PQLQR2KA20T	COIL	S
	L903	PQLQR2KA20T	COIL	S
	L905	G1CR10J00010	COIL	
			(RESISTOR ARRAYS)	
	RA151	D1H410220001	RESISTOR ARRAY	
	RA451	D1H422220001	RESISTOR ARRAY	
	RA501	EXB28V330	RESISTOR ARRAY	
	RA502	EXB28V103	RESISTOR ARRAY	
	RA504	D1H468020001	RESISTOR ARRAY	
	RA651	EXB28V101JX	RESISTOR ARRAY	
	RA652	EXB28V101JX	RESISTOR ARRAY	
			(VARISTOR)	
	SA101	PQVDDSS301L	VARISTOR	!S
			(RESISTORS)	
	R111	PQ4R10XJ104	100k	S
	R112	PQ4R10XJ104	100k	S
	R113	D0GB103JA057	10k	
	R114	D0GB473JA057	47k	
	R121	ERJ3GEYJ394	390k	S
	R122	ERJ3GEYJ394	390k	S
	R131	PQ4R18XJ106	10M	S
	R133	ERJ3GEYJ334	330k	S
	R151	D0GA104JA021	100k	
	R152	D0GA473JA021	47k	
	R160	ERJ3GSYJ821	820	S
	R161	D0GB104JA057	100k	
	R162	ERJ3GSYJ183	18k	S
	R163	ERJ14YJ120U	12	
	R164	D0GB272JA057	2.7k	
	R165	ERJ3GEYJ273	27k	S
	R167	D0GG270JA007	27	
	R171	D0GA220JA021	22	
	R172	D0GA104JA021	100k	
	R175	D0GA561JA021	560	
	R176	D0GA101JA021	100	
	R177	D0GA102JA021	1k	
	R178	D0GA102JA021	1k	
	R321	ERJ2RKF161X	160	
	R322	ERJ2RKF910X	91	
	R331	ERJ3EKF6802	68k	
	R332	ERJ3EKF3302	33k	
	R451	ERJ2GEYJ391	390	S
	R501	D0GB100JA057	10	
	R502	D0GA330JA015	33	
	R505	D0GA222JA021	2.2k	
	R605	D0GA332JA015	3.3k	
	R606	D0GA332JA015	3.3k	
	R612	D0GA103JA021	10k	
	R651	D0GA681JA021	680	
	R652	D0GA681JA021	680	
	R653	D0GA681JA021	680	
	R654	D0GA101JA021	100	
	R657	D0GA101JA021	100	
	R658	D0GA101JA021	100	
	R659	D0GA101JA021	100	
	R660	ERJ2GEJ474X	470k	S
	R806	ERJ2GEJ471	470	S
	R807	ERJ2GEJ471	470	S
	R891	ERJ2GEJ471	470	S
	R892	ERJ2GEJ471	470	S
	R900	ERJ2GEJ100	10	S
	R901	ERJ2GEJ100	10	S
	R903	D0GA101JA021	100	
	R904	D0GA101JA021	100	
	R908	ERJ2RKF472X	4.7k	
	R909	ERJ2RKF183X	18k	
	R910	D0GA103JA021	10k	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R911	D0GA222JA021	2.2k	
	R912	D0GA221JA021	220	
	R913	D0GA561JA021	560	
	R919	D0GB104JA057	100k	
	R920	D0GB103JA057	10k	
	R921	PQ4R10XJ392	3.9k	S
	R922	D0GB104JA057	100k	
	R925	D0GA222JA021	2.2k	
	R926	D0GB473JA057	47k	
	R927	D0GB473JA057	47k	
	R928	ERJ3GEYJ474	470k	S
	R929	D0GA332JA015	3.3k	
	R932	D0GA821JA021	820	
	R933	ERJ3GEYJ390	39	
	R934	ERJ2GEJ474X	470k	S
	R937	D0GA122JA015	1.2k	
	R938	ERJ3GEYJ332	3.3k	S
	R939	ERJ14YJ682	6.8k	
	R941	ERJ3GSYJ183	18k	S
	R942	D0GB104JA057	100k	
	R943	ERJ3GSYJ183	18k	S
	R945	D1H427220001	2.7k	
	R946	D1H427220001	2.7k	
	R947	D1H422220001	2.2k	
	R948	ERJ2GE0R00	0	S
	R1014	D4CC1222A033	2.2k	
	R1015	ERJ3GEY0R00	0	S
	R1017	D0GA104JA021	100k	
	R1018	D0GA104JA021	100k	
	R1019	D0GA272JA021	2.7k	
	R1020	ERJ2RKF682X	6.8k	
	R1021	D0GA472JA021	4.7k	
	L850	ERJ3GEY0R00	0	S
			(CAPACITORS)	
	C101	F1K2H681A008	680p	
	C102	F1K2H681A008	680p	
	C111	F1J2A473A024	0.047	
	C112	F1J2A473A024	0.047	
	C113	PQCUV1A684KB	0.68	
	C120	ECUE1H102KBQ	0.001	S
	C121	F1K2H681A008	680p	
	C122	F1K2H681A008	680p	
	C123	ECUE1H100DCQ	10p	S
	C124	ECUE1H100DCQ	10p	S
	C132	ECUV1H103KBV	0.01	
	C142	ECUV1H103KBV	0.01	
	C151	ECUE1H100DCQ	10p	S
	C152	ECUE1C103KBQ	0.01	S
	C161	F1K1E1060001	10	
	C168	ECUV1A225KBV	2.2	S
	C171	ECUV1H472KBV	0.0047	
	C173	ECUV1A224KBV	0.22	
	C175	ECUE1H102KBQ	0.001	S
	C176	F1J0J2260004	22	
	C178	ECUV1C223KBV	0.022	
	C184	ECUV1A105KBV	1	
	C186	ECUE1H100DCQ	10p	S
	C306	F2A1C1010119	100	
	C321	ECUV1A105KBV	1	
	C323	ECUE1H100DCQ	10p	S
	C342	ECUV1C104KBV	0.1	
	C343	ECUV1A105KBV	1	
	C451	PQCUV0J106KB	10	S
	C452	ECUE1H100DCQ	10p	S
	C454	ECUE1H100DCQ	10p	S
	C455	ECUE1H100DCQ	10p	S
	C456	ECUE1H100DCQ	10p	S
	C457	ECUE1C333KBQ	0.033	S
	C458	ECUE1C333KBQ	0.033	S
	C477	ECUE1H100DCQ	10p	S
	C478	ECUE1H100DCQ	10p	S
	C501	ECUE1A104KBQ	0.1	
	C502	ECJ1VB0G106M	10	S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C503	ECJ1VB0G106M	10	S
	C504	ECUE0J105KBQ	1	
	C505	ECJ1VB0G106M	10	S
	C506	ECUV1A105KBV	1	
	C507	ECUV1A225KBV	2.2	S
	C508	ECUE1H100DCQ	10p	S
	C509	ECUE1H120JCQ	12p	S
	C510	ECUV1A105KBV	1	
	C511	ECJ1VB0G106M	10	S
	C512	ECUE1A104KBQ	0.1	
	C513	ECUV1A225KBV	2.2	S
	C514	ECUE1A104KBQ	0.1	
	C515	ECUV1A105KBV	1	
	C516	ECUE1A104KBQ	0.1	
	C517	ECUE1A104KBQ	0.1	
	C518	ECUE1A104KBQ	0.1	
	C519	ECUE1A104KBQ	0.1	
	C520	ECUE1A104KBQ	0.1	
	C521	ECUE0J105KBQ	1	
	C522	ECUE1H100DCQ	10p	S
	C524	ECUE1H100DCQ	10p	S
	C525	ECUE1H100DCQ	10p	S
	C530	ECUE1H100DCQ	10p	S
	C531	ECUE1H100DCQ	10p	S
	C532	ECUE1H100DCQ	10p	S
	C601	ECUE1A104KBQ	0.1	
	C611	ECUE1A104KBQ	0.1	
	C652	ECUE1H121JCQ	120p	S
	C653	ECUE1H121JCQ	120p	S
	C654	ECUE1H121JCQ	120p	S
	C655	ECUE1H121JCQ	120p	S
	C656	ECUE1H121JCQ	120p	S
	C657	ECUE1H121JCQ	120p	S
	C658	ECUE1H121JCQ	120p	S
	C659	ECUE1H121JCQ	120p	S
	C660	ECUE1H121JCQ	120p	S
	C661	ECUE1A104KBQ	0.1	
	C662	ECUE1H471KBQ	470p	S
	C663	ECUE1H471KBQ	470p	S
	C664	ECUE1H471KBQ	470p	S
	C665	ECUE1H121JCQ	120p	S
	C666	ECUE1H471KBQ	470p	S
	C667	ECUE1H121JCQ	120p	S
	C668	ECUE1H121JCQ	120p	S
	C669	ECUE1H121JCQ	120p	S
	C805	F1G1H2R7A480	2.7p	
	C806	F1G1H2R7A480	2.7p	
	C810	F1G1H2R4A480	2.4p	
	C811	ECUE1H100DCQ	10p	S
	C812	F1G1HR90A480	0.9p	
	C813	F1G1H2R0A480	2p	
	C814	F1G1H5R0A480	5p	
	C820	F1G1H1R5A480	1.5p	
	C822	ECUE1H100DCQ	10p	S
	C825	ECUE1H100DCQ	10p	S
	C826	ECUE1H100DCQ	10p	S
	C827	ECUE1H100DCQ	10p	S
	C828	ECUE1H100DCQ	10p	S
	C859	F1G1H2R2A480	2.2p	
	C863	F1G1H1R5A480	1.5p	
	C891	ECUE1H100DCQ	10p	S
	C892	F1G1H5R0A480	5p	
	C893	F1G1H3R3A480	3.3p	
	C894	ECUE1H100DCQ	10p	S
	C895	F1G1H1R2A480	1.2p	
	C896	F1G1H2R2A480	2.2p	
	C900	ECUE1H100DCQ	10p	S
	C901	ECUE1H681KBQ	680p	S
	C902	ECUV1A105KBV	1	
	C903	ECUE1H681KBQ	680p	S
	C904	ECUE1H102KBQ	0.001	S
	C905	ECUE1H102KBQ	0.001	S
	C906	ECUE1H331KBQ	330p	S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C908	PQCUV0J106KB	10	S
	C910	ECUE1H101JCQ	100p	
	C912	F2A1C1010119	100	
	C918	ECUE1C333KBQ	0.033	S
	C919	ECUE1C333KBQ	0.033	S
	C924	F2A0J1020031	1000	
	C928	F0C2E1050005	1	
	C929	F1K1H475A199	4.7	S
	C930	ECUV1C563KBV	0.056	
	C931	ECUV1C474KBV	0.47	
	C932	ECUE1A104KBQ	0.1	
	C933	ECJ1VB0G106M	10	S
	C934	ECUE1H102KBQ	0.001	S
	C935	ECUE1H102KBQ	0.001	S
	C936	ECUE1H102KBQ	0.001	S
	C937	F2A1C1010119	100	
	C940	ECUE1C103KBQ	0.01	S
	C941	ECUE1H100DCQ	10p	S
	C942	ECUE1H100DCQ	10p	S
	C943	ECUE1H100DCQ	10p	S
	C944	ECUE1H100DCQ	10p	S
			(OTHERS)	
△	F301	K5H302Y00003	FUSE	
	IC902	B3PBA0000138	PHOTO ELECTRIC TRANSDUCER	
	MIC1	L0CBAY000018	BUILTIN-MICROPHONE	
△	P101	D4DAY220A022	THERMISTOR	
	X501	H0J138500011	CRYSTAL OSCILLATOR (*1)	

### 16.5.1.3. Operational P.C. Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB2	PNWP2TG4771H	OPERATIONAL P.C.BOARD ASS'Y (RTL)	
			(LEDs)	
	LED901	LNJ237W82RA	DIODE (SI)	
	LED902	LNJ237W82RA	DIODE (SI)	
	LED903	LNJ237W82RA	DIODE (SI)	
			(RESISTORS)	
	R10	PQ4R10XJ221	220	S
	R11	PQ4R10XJ221	220	S
	R12	PQ4R10XJ105	1M	S
	R7	PQ4R10XJ560	56	S
	R8	PQ4R10XJ221	220	S
	R9	PQ4R10XJ560	56	S
			(CAPACITORS)	
	C1	F1H1E1050001	1	
	C2	F1H1E1050001	1	
	C3	F1H1E1050001	1	
	C4	F1H1E1050001	1	
	C5	F1H1E1050001	1	
	C6	F1H1E1050001	1	
	C7	F1H1E1050001	1	
	C8	F1H1E1050001	1	
	C9	F1H1E1050001	1	
	C10	F1H1E1050001	1	
	C12	ECUV1H221JCV	220p	
	C13	ECUV1H221JCV	220p	
	C14	ECUV1H101JCV	100p	
	C15	ECUV1H101JCV	100p	
	C16	ECUV1H221JCV	220p	
			(CONNECTORS)	
	CN903	K1MN20BA0110	CONNECTOR	
			(SWITCH)	
	SW901	K0L1LB000021	SPECIAL SWITCH	

### 16.5.1.4. LED Board parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
			(LEDs)	
	LED1	B3AFB0000211	LED	
	LED2	B3AFB0000211	LED	
			(RESISTORS)	
	R14	ERJ3GEYJ330	33	S
	R15	ERJ3GEYJ330	33	S

### 16.5.2. Portable

#### 16.5.2.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	101	PNGP1228Z1	PANEL, LCD	PMMA-HB
	102	PNYE1066Z	TAPE, DOUBLE SIDED	
	103	PNKM1257Z1	CABINET BODY	ABS-HB
	104	PNGT6775Z	NAME PLATE	
	105	L0AD01A00026	RECEIVER	
	106	PNYE1065Y	SPACER, CUSHION LCD	
	107	PNBC1354Z1	BUTTON, NAVIGATOR KEY	ABS-HB
	108	PNJK1149Z	KEYBOARD SWITCH	
	109	PNJT1027Y	BATTERY TERMINAL (L)	
	110	PNJT1026Y	BATTERY TERMINAL (R)	
	111	PNJK1150Z	RUBBER PARTS, SIDE SWITCH	
	112	PQHR11315Z	GUIDE, SPEAKER	ABS-HB
	113	L0AA02A00096	SPEAKER	
	114	PQHS10784Y	SPACER, SPEAKER NET	
	115	PQJC10056W	BATTERY TERMINAL	
	116	PNKE1131Z1	COVER, EP CAP	
	117	PNKF1229Z1	CABINET COVER	ABS-HB
	118	PNHR1588Z	OPTIC CONDUCTIVE PARTS, LED LENS	PS-HB
	119	PNQT2006Z	LABEL, ATTENTION	
	120	PNQT2335Z	LABEL, BATTERY	
	121	PNHS1079Z	SPACER	
	122	PNKK1066Z1	LID, BATTERY	ABS-HB
	123	PNYNTGA470BR	LID, BATTERY ASS'Y	

#### 16.5.2.2. Main P.C. Board Parts

##### Note:

(\*1) Reconfirm the model No. written on the Portable's name plate when replacing PCB100. Because the model No. of the optional Portable may differ from the included Portable.

(\*2) When replacing IC3 or X1, make the adjustment using PNZZTG4771M. Refer to **Portable** (P.57) of Things to Do after Replacing IC or X'tal.

(\*3) When replacing the Portable LCD, See **How to Replace the Portable LCD** (P.48).

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB100	PNWP1TGA470R	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(ICs)	
	IC1	C2HBCY000081	IC	
	IC3	PNWITGA470BR	IC (EEPROM) (*2)	
	IC4	C0DBZY00357	IC	
			(TRANSISTORS)	
	Q2	B1ADCF000040	TRANSISTOR (SI)	
	Q3	B1ABGE000011	TRANSISTOR (SI)	
	Q4	B1ADCF000040	TRANSISTOR (SI)	
	Q5	DRC9113Z0L	TRANSISTOR (SI)	
	Q6	DRC9113Z0L	TRANSISTOR (SI)	
	Q9	2SC6054JSL	TRANSISTOR (SI)	S
			(DIODES)	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	D13	B0BC4R3A0006	DIODE (SI)	
	D14	B0BC4R3A0006	DIODE (SI)	
	D21	B0BC4R3A0006	DIODE (SI)	
	D22	B0BC4R3A0006	DIODE (SI)	
	DA801	B0DDCD000001	DIODE (SI)	
			(LEDs)	
	LED1	B3ACB0000190	LED	
	LED2	B3ACB0000190	LED	
	LED3	B3ACB0000190	LED	
	LED4	B3ACB0000190	LED	
	LED5	B3ACB0000190	LED	
	LED6	B3ACB0000190	LED	
	LED11	B3ACB0000190	LED	
	LED12	B3ACB0000190	LED	
			(COILS)	
	L4	G1CR18J00004	COIL	
	C812	PQLQR4C8N2J	COIL	S
			(RESISTOR ARRAYS)	
	RA2	D1H83314A013	COMPONENTS PARTS	S
	RA3	D1H83314A013	COMPONENTS PARTS	S
	RA4	D1H433220001	COMPONENTS PARTS	
	RA5	EXB28V332JX	COMPONENTS PARTS	
			(IC FILTER)	
	L1	J0JCC0000286	IC FILTER	
	L10	J0JCC0000286	IC FILTER	
	L3	J0JDC0000045	IC FILTER	
	L7	J0JCC0000276	IC FILTER	
	L75	J0JCC0000286	IC FILTER	
			(RESISTORS)	
	R2	ERJ2GEJ303	30k	
	R3	D0GA152JA021	1.5k	
	R4	D0GA473JA021	47k	
	R6	D0GA103JA021	10k	
	R7	D0GA104JA021	100k	
	R8	PQ4R18XJ3R3	3.3	S
	R9	ERJ2GEJ303	30k	
	R21	D0GA104JA021	100k	
	R22	D0GA332JA015	3.3k	
	R23	ERJ2GEYJ391	390	S
	R24	ERJ2GEJ100	10	S
	R25	D0GA222JA021	2.2k	
	R26	D0GA332JA015	3.3k	
	R27	D0GA222JA021	2.2k	
	R28	D0GA222JA021	2.2k	
	R31	ERJ2RKF1003	100k	
	R32	D0GA104JA021	100k	
	R33	ERJ2RKF1003	100k	
	R34	ERJ2GEYJ391	390	S
	R45	ERJ6RSJR10V	0.1	
	R50	D0GA151JA021	150	
	R51	D0GA151JA021	150	
	R60	D0GA222JA021	2.2k	
	R66	D0GA103JA021	10k	
	R67	D0GA103JA021	10k	
	R68	D0GA103JA021	10k	
	R69	D0GA103JA021	10k	
	R70	D0GA470JA021	47	
	R73	D0GA330JA015	33	
	R74	D0GA330JA015	33	
	R80	D0GA101JA021	100	
	R806	ERJ2GEJ471	470	S
	R807	ERJ2GEJ471	470	S
	L8	ERJ2GEJ100	10	S
	L9	ERJ2GE0R00	0	S
			(CAPACITORS)	
	C1	EEE0JA221WP	220	
	C2	EEE0JA221WP	220	
	C3	EEE0JA221WP	220	
	C4	ECUE1H390JCQ	39p	
	C5	ECUE1A104KBQ	0.1	
	C6	ECUE1A104KBQ	0.1	
	C9	ECUE1H390JCQ	39p	
	C10	ECUE1H390JCQ	39p	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C11	ECUE1A104KBQ	0.1	
	C12	PQCUV0J106KB	10	S
	C13	ECUE1A104KBQ	0.1	
	C14	ECUV1C393KBV	0.039	
	C15	ECUE1H390JCQ	39p	
	C16	FLJ0J2260002	22	
	C17	ECUE1H100DCQ	10p	S
	C18	ECUE1H100DCQ	10p	S
	C20	ECJ1VB0G106M	10	S
	C21	ECUE0J105KBQ	1	
	C22	ECUE1A104KBQ	0.1	
	C23	ECUE1A104KBQ	0.1	
	C24	ECUE0J105KBQ	1	
	C25	ECUV1A225KBV	2.2	S
	C26	ECJ1VB0G106M	10	S
	C27	ECUE1H102KBQ	0.001	S
	C29	ECUV1A105KBV	1	
	C30	ECUV1A105KBV	1	
	C31	ECJ1VB0G106M	10	S
	C32	ECUE0J105KBQ	1	
	C33	ECUE1A104KBQ	0.1	
	C34	ECUE1H390JCQ	39p	
	C36	ECUE1A104KBQ	0.1	
	C37	ECJ1VB0G106M	10	S
	C39	ECUE1H102KBQ	0.001	S
	C40	ECUE1A104KBQ	0.1	
	C41	ECUE1A104KBQ	0.1	
	C42	ECUE1H102KBQ	0.001	S
	C43	ECUE1A104KBQ	0.1	
	C44	ECUE0J105KBQ	1	
	C45	ECUE1A104KBQ	0.1	
	C46	ECUE1H100DCQ	10p	S
	C51	ECJ1VB0G106M	10	S
	C52	ECUE1H100DCQ	10p	S
	C53	ECUE1H120JCQ	12p	S
	C56	ECUE0J105KBQ	1	
	C57	ECUE0J105KBQ	1	
	C58	ECUE0J105KBQ	1	
	C68	ECUE0J105KBQ	1	
	C69	ECUE1A104KBQ	0.1	
	C72	ECUE1H100DCQ	10p	S
	C73	ECUE1H100DCQ	10p	S
	C76	ECUE1H100DCQ	10p	S
	C77	ECUE1H100DCQ	10p	S
	C79	ECUE1H101JCQ	100p	
	C80	ECUV1C393KBV	0.039	
	C81	ECUE1H101JCQ	100p	
	C82	ECUE1H471KBQ	470p	S
	C83	ECUE1H100DCQ	10p	S
	C84	ECUE1H102KBQ	0.001	S
	C87	ECUE1H102KBQ	0.001	S
	C88	ECUE1H100DCQ	10p	S
	C89	ECUE1H100DCQ	10p	S
	C90	ECUE1A104KBQ	0.1	
	C91	ECUV1C105KBV	1	
	C92	ECUE0J105KBQ	1	
	C93	ECUV1C105KBV	1	
	C96	ECUE1H100DCQ	10p	S
	C97	ECUE1H100DCQ	10p	S
	C801	ECUV1H100DCV	10p	
	C802	FLG1H2R0A480	2p	
	C803	FLG1H1R3A480	1.3p	
	C804	FLG1H1R8A480	1.8p	
	C805	FLG1H2R4A480	2.4p	
	C806	FLG1H2R4A480	2.4p	
	C810	FLG1H2R5A480	2.5p	
	C811	ECUE1H101JCQ	100p	S
	C813	FLG1H1R6A480	1.6p	
	C820	FLG1H1R8A480	1.8p	
	C822	ECUE1H100DCQ	10p	S
	C825	ECUE1H100DCQ	10p	S
	C826	ECUE1H100DCQ	10p	S
	C863	FLG1H1R8A480	1.8p	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C897	FLG1H240A557	24p	
	L809	FLG1H1R0A480	1p	
			(OTHERS)	
⚠	F1	K5H252Y00002	FUSE	
	E101	L5DYBY00043	LIQUID CRYSTAL DISPLAY (*3)	
	E102	PNHX1569Z	PLASTIC PARTS, DEFFUSION SHEET	
	E103	PNHX1518Z	PLASTIC PARTS, LCD COVER SHEET	
	E104	PNHR1587Z	PLASTIC PARTS, TRANSPARENT PLATE	PMMA-HB
	E105	PNHR1586Z	GUIDE	ABS-HB
	E106	PQHG10729Z	RUBBER PARTS, RECEIVER	
	E107	PNVE1002Z	BATTERY TERMINAL	
	MIC100	L0CBAY000053	MICROPHONE	
	VOL_DW	K0H1BB000094	PUSH SWITCH	
	VOL_UP	K0H1BB000094	PUSH SWITCH	
	X1	H0J138500003	CRYSTAL OSCILLATOR (*2)	S
	CN4	K2HD103D0001	JACK/SOCKET	

### 16.5.2.3. LED Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
			(LED)	
	WLED	B3AFB0000370	LED	

### 16.5.3. Charger Unit

#### 16.5.3.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1029ZB	CHARGER UNIT ASS'Y without NAME PLATE (RTL)	
	200-1	PNKM1258Z1	CABINET BODY	PS-HB
	200-2	PNJT1105Z	BATTERY TERMINAL	
	200-3	PNKF1150Z1	CABINET COVER	PS-HB
	200-4	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	
	201	PNGT6776Z	NAME LABEL	

#### 16.5.3.2. Main P.C. Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB200	PNWPTGA470CH	PC BOARD W/COMPONENT (RTL)	
			(DIODE)	
	D1	B0ECKM000008	DIODE (SI)	
			(RESISTORS)	
	R1	ERJ14YJ1R0U	1	
	R2	ERJ14YJ1R0U	1	
			(JACK)	
	J1	K2ECYB000001	JACK/SOCKET	
			(FUSE)	
⚠	F1	K5H302Y00003	FUSE	

### 16.5.4. Accessories and Packing Materials

#### Note:

(\*1) You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

#### 16.5.4.1. KX-TG4771B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A1	PNLXP1005Z	HANDLE/HANDSET	
⚠	A2	PQJA10075Z	CORD, TELEPHONE	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A3	PQJA212V	CORD, HANDSET	
	A4	PNKE1132Z1	HANGER, BELT CLIP	ABS-HB
△	A5	PNLV226Z	AC ADAPTOR	
	A6	PNQX5103Z	INSTRUCTION BOOK (*1)	
	P1	PNPK3509001Z	GIFT BOX	
	P2	PNPD1612Z	CUSHION	

#### 16.5.4.2. KX-TG4772B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A101	PNLXP1005Z	HANDLE/HANDSET	
△	A102	PQJA10075Z	CORD, TELEPHONE	
	A103	PQJA212V	CORD, HANDSET	
	A104	PNKE1132Z1	HANGER, BELT CLIP	ABS-HB
△	A105	PNLV226Z	AC ADAPTOR	
	A106	PNQX5103Z	INSTRUCTION BOOK (*1)	
	P101	PNPK3510001Z	GIFT BOX	
	P102	PNPD1613Z	CUSHION	

#### 16.5.4.3. KX-TG4773B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A201	PNLXP1005Z	HANDLE/HANDSET	
△	A202	PQJA10075Z	CORD, TELEPHONE	
	A203	PQJA212V	CORD, HANDSET	
	A204	PNKE1132Z1	HANGER, BELT CLIP	ABS-HB
△	A205	PNLV226Z	AC ADAPTOR	
	A206	PNQX5103Z	INSTRUCTION BOOK (*1)	
	P201	PNPK3511001Z	GIFT BOX	
	P202	PNPD1614Z	CUSHION	

#### 16.5.4.4. KX-TGA470B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A301	PNLV226Z	AC ADAPTOR	
	A302	PNQX5093Z	INSTRUCTION BOOK (*1)	
	A303	PNKE1132Z1	HANGER, BELT CLIP	ABS-HB
	P301	PNPK3490001Z	GIFT BOX	
	P302	PNPD1648Z	CUSHION	

#### 16.5.5. Screws

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	B	XTB2+8GFJ	TAPPING SCREW	

#### 16.5.6. Fixtures and Tools

Note:

(\*1) See **Equipment Required** (P.49), and **The Setting Method of JIG** (P.49)

(\*2) When replacing the Portable LCD, See **How to Replace the Portable LCD** (P.48)

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
		PQZZ1CD300E	JIG CABLE (*1)	
		PNZZTG4771M	BATCH FILE CD-ROM (*1)	
		PQZZ430PIR	TIP OF SOLDERING IRON (*2)	
		PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)	

YK/N  
KXTG4771B  
KXTG4772B  
KXTG4773B  
KXTGA470B