Telephone Equipment

Service Manual

Caller ID Compatible



KX-TGA601BXM (Handset)



KX-TG6051BXM (Base Unit)

KX-TG6051BXM KX-TGA601BXM

5.8 GHz Digital Cordless Answering System

Metallic Gray Version (for Asia, Middle Near East and Other areas)

MARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by \triangle in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

· IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary slightly from the actual product.

Note for TABLE OF CONTENTS:

Because sections 5, 6 and 7 of this manual are extracts from the operating instructions for this model, they are subject to change without notice. You can download and refer to the original operating instructions on TSN Server for further information.

TABLE OF CONTENTS

		PAGE
1	Safety Precautions	4
	1.1. For Service Technicians	4
2	Warning	
	2.1. Battery Caution	
	2.2. About Lead Free Solder (PbF: Pb free)	4
	Specifications	
4	Technical Descriptions	7
	4.1. FHSS Description	
	4.2. Explanation of Link Data Communication	
	4.3. Block Diagram (Base Unit_Main)	11
	4.4. Block Diagram (Base Unit_RF Part)	
	4.5. Circuit Operation (Base Unit)	
	4.6. Block Diagram (Handset)	
	4.7. Block Diagram (Handset_RF Part)	
	4.8. Circuit Operation (Handset)	
	4.9. Circuit Operation (RF Part)4.10. Signal Route	
_	Location of Controls and Components	
Э	5.1. Controls	
	5.2. Display	
6	Installation Instructions	
٥	6.1. Setting Up the Base Unit	
	6.2. Battery Installation/Replacement	
	6.3. Battery Charge	34
7	Operation Instructions	35
-	7.1. Programmable Settings	
	7.2. Dial Lock	
	7.3. Error Messages	
	7.4. Troubleshooting	
8	Test Mode	
	8.1. Adjustment and Test Mode Flow Chart	42
9	Service Mode	
	9.1. How to Clear User Setting	52
10	Troubleshooting Guide	54
	10.1. Troubleshooting Flowchart	
	10.2. How to Replace the Flat Package IC	
	10.3. How to Replace the LLP (Leadless Leadframe	
	Package) IC	
11	Disassembly and Assembly Instructions	
	11.1. Disassembly Instructions	
	11.2. How to Replace the Handset LCD	
	11.3. Antenna Soldering Work	
12	Measurements and Adjustments	
	12.1. Things to Do after Replacing IC or X'tal	
	12.2. Base Unit Reference Drawing	
	12.3. Handset Reference Drawing	
40	12.4. Frequency Table	
13	Schematic Diagram	
	13.1. For Schematic Diagram (Page Hait Mair)	
	13.2. Schematic Diagram (Base Unit_Main) 13.3. Schematic Diagram (Base Unit_RF Part)	
	13.4. Schematic Diagram (Base Unit_Operation)	
	13.4. Schematic Diagram (Base Unit_Operation) 13.5. Schematic Diagram (Handset_Main)	
	13.6. Schematic Diagram (Handset_RF Part)	
14	Printed Circuit Board	
	14.1. Circuit Board (Base Unit_Main)	
	14.2. Circuit Board (Base Unit_RF Part)	95 95
	14.2. Circuit Board (Base Unit_NT 1 art)	

	PAG
14.4. Circuit Board (Base Unit_Antenna)	99
14.5. Circuit Board (Handset_Main)	101
14.6. Circuit Board (Handset_RF Part)	103
15 Appendix Information of Schematic Diagram	104
15.1. CPU Data (Base Unit)	104
15.2. CPU Data (Handset)	10
15.3. Explanation of IC Terminals (RF Part)	106
15.4. Terminal Guide of the ICs, Transistors an	d
Diodes	108
16 Exploded View and Replacement Parts List	109
16.1. Cabinet and Electrical Parts (Base Unit)	109
16.2. Cabinet and Electrical Parts (Handset)	11(
16.3. Accessories and Packing Materials	11 [·]
16.4. Replacement Parts List	112

1 Safety Precautions

1.1. For Service Technicians

ICs and LSIs are vulnerable to static electricity.

When repairing, the following precautions will help prevent recurring malfunctions.

- 1. Cover plastic parts boxes with aluminum foil.
- 2. Ground the soldering irons.
- 3. Use a conductive mat on worktable.
- 4. Do not grasp IC or LSI pins with bare fingers.

2 Warning

2.1. Battery Caution

- 1. Danger of explosion if battery is incorrectly replaced.
- 2. Replace only with the same or equivalent type recommended by the manufacturer.
- 3. Dispose of used batteries according to the manufacturer's Instructions.

2.2. About Lead Free Solder (PbF: Pb free)

Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.

Caution


- PbF solder has a melting point that is 50°F ~ 70° F (30°C ~ 40°C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700°F ± 20° F (370°C ± 10°C).
- Exercise care while using higher temperature soldering irons.:
 - Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100°F (600°C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

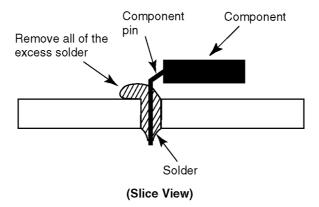

2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu), or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials.

The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

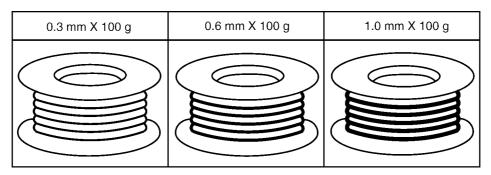

3 Specifications

	Base Unit	Handset
Power Supply	AC Adaptor	Rechargeable Ni-MH battery
,	(PQLV203BXZ, 220-240 V AC, 50/60 Hz)	(3.6 V, 650 mAh) HHR-P107A
Power Output	200 mW (max.)	200 mW (max.)
Receiving/Transmitting Frequency	89 channels within 5.76 GHz - 5.84 GHz	89 channels within 5.76 GHz - 5.84 GHz
Receiving Method	Super Heterodyne	Super Heterodyne
Oscillation Method	PLL synthesizer	PLL synthesizer
Detecting Method	Quadrature Discriminator	Quadrature Discriminator
Tolerance of OSC Frequency	13.824 MHz ±100 Hz	13.824 MHz ±100 Hz
Modulation Method	Frequency Modulation	Frequency Modulation
Spread spectrum Method	Frequency Hopping Spread spectrum	Frequency Hopping Spread spectrum
ID Code	19 bit	22 bit
Security Codes		1,000,000
Ringer Equivalence No. (REN)	0.1	<u> </u>
Dialing Mode		Tone (DTMF)/Pulse
Redial		Up to 48 digits
Speed Dialer		Up to 32 digits (Phonebook)
Power Consumption	Standby: Approx. 2.0 W,	11 days at Standby,
·	Maximum: Approx. 5.4 W	5 hours at Talk
Operating Environment	5 °C - 40 °C	5 °C - 40 °C
Dimensions $(H \times W \times D)$	Approx. 97 mm \times 120 mm \times 144 mm	Approx. 156 mm \times 48 mm \times 33 mm
Mass (Weight)	Approx. 270 g	Approx. 160 g

<sup>Optional Headset: KX-TCA89BX
Design and specifications are subject to change without notice.</sup>

4 Technical Descriptions

4.1. FHSS Description

4.1.1. Frequency


The frequency range of 5.76 GHz-5.84 GHz is used. Transmitting and receiving channel between base unit and handset is same frequency. Refer to **Frequency Table** (P.80).


4.1.2. FHSS (Frequency Hopping Spread Spectrum)

This telephone is using an IC chip which has similar specification to WDCT (World Digital Cordless Telephone) and is the telephone system that can use multiple portable unit simultaneously. The explanation of this system is mentioned below. This system uses a Time Division Multiple Access/Time Division Duplex (**TDMA/TDD**) scheme:

transmitting and receiving frequencies of the base unit and handset are shared in the same frequency. The construction of RX/TX frequency data is shown below. It consists of 4 slots from the base unit to the handset, and 4 slots from the handset to the base unit, total 8 slots in 10 ms. By this slot system, simultaneous air link and communication between 4 handsets and the base unit can be realized. One communication between handset and the base unit is done by one slot from the base unit to handset, and another slot from handset to the base unit.


DSS makes spectrum spread by multiplying carrier signal by PN code. The purpose to make spectrum spread is to reduce power density per time and per band. On the other hand, **FHSS** makes spectrum spread by changing channel every 10 ms according to Hopping table. Also the purpose to make spectrum spread is to reduce power density per time and per band.

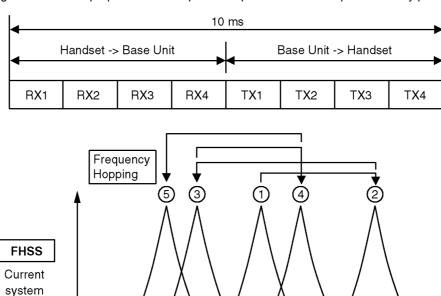

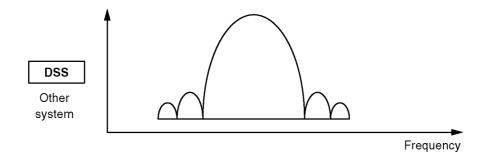

Frequency

4.1.2.1. TDD Frame Format

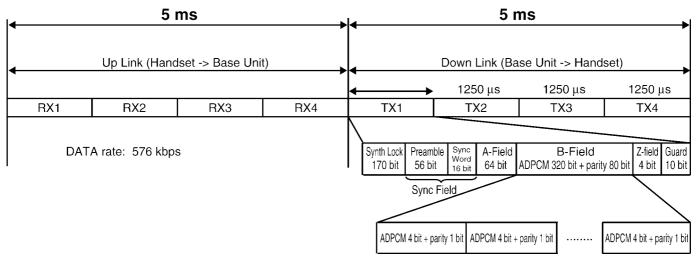

Sync Field (72 bit): Preamble 56 bit + SyncWord 16 bit

Base unit (handset) adjusts the timing of reception so that reception of base unit (handset) can correspond to transmission of handset (base unit).

It is necessary for sync-field that handset gets synchronization.

A - field (64 bit): Each kinds of DATA: ch data, line condition, etc.

B - field (320 bit + 80 bit): Sound data + parity

Z - field (4 bit): Parity Check

4.1.2.2. TDMA system

This system is the cycles of 10 ms, and has four duplex paths,


so it is possible to perform four duplex communications simultaneously.

In 1 slot 1.25 ms, the 10 ms of voice data is transmitted.

Each slot makes every frame frequency hop. (100 hops/sec.)

Although each slot (UpLink3 and UpLink4) uses different frequency, UpLink3 and DownLink3 use the same frequency.

• 2 - Handsets Link

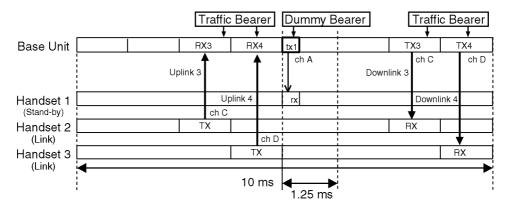

Traffic Bearer

A link is established between base unit and handset.

The state where duplex communication is performed.

The hopping pattern of a 3000 hops (30 seconds) cycle.

Dummy Bearer

The base unit sends Dummy-data to the all stand-by state handsets.

The handsets receive that data for keeping synchronization and monitoring request from the base unit.

Dummy Bearer doesn't contain B-field (sound) data.

4.1.3. Signal Flowchart in the Whole System

Reception


CN101 of the base unit is connected to the TEL line, and signal is input through the bridge diode D101. While talking, the relay (Q141) is turned ON and amplified at the Q171, then led to DSP (IC501). The DSP encodes ADPCM and TDD/TDMA with FHSS to TXDATA. The TXDATA signal goes into IC701 of RF PART, and is modulated to 5.8 GHz. The RF signal is amplified by the power amplifier (IC801) and fed to Antennas.

As for the handset, RF signal from the RX antenna is amplified by LNA (IC801). The amplified signal is down-converted to IF signal in IC701. The IF signal passing through internal filter is demodulated into RXDATA, then goes into DSP (IC501). The DSP performs TDD/TDMA and ADPCM decoding to convert the RXDATA into the voice signal, then it is output to the speaker.

Transmission


The voice signal entering from the handset microphone is led to DSP (IC501). The DSP encodes ADPCM and TDD/TDMA with FHSS to TXDATA. The TXDATA signal goes into IC701 of RF PART, and is modulated to 5.8 GHz. The RF signal is amplified by the power amplifier (IC801) and fed to Antenna.

As for the base unit, RF signal from the Antennas is amplified by LNA (IC801). The amplified signal is down-converted to IF signal in IC701. The IF signal passing through internal filter is demodulated into RXDATA, then goes into DSP (IC501). The DSP performs TDD/TDMA and ADPCM decoding to convert the RXDATA into the voice signal. The voice signal is amplified at the TX amplifier (Q161), then output to the TEL line CN101 through the relay (Q141) and bridge (D101).

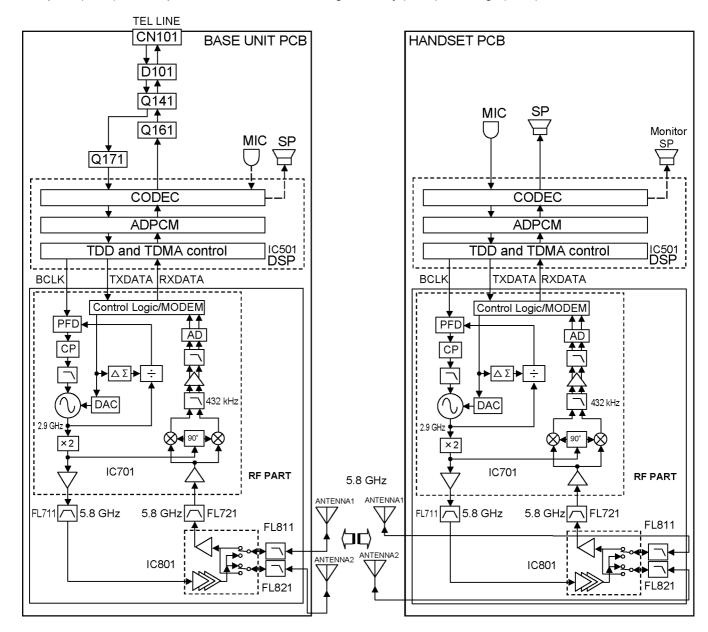


4.2. Explanation of Link Data Communication

4.2.1. Calling

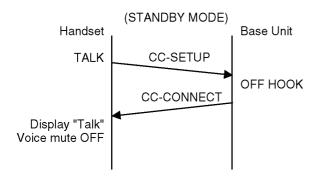

When calling, a communication request DATA (CC-SETUP) is transmitted from the handset, and a permitting DATA (CC-CONNECT) is returned from the base unit to it. At that time the audio path opens.


4.2.2. To Terminate Communication

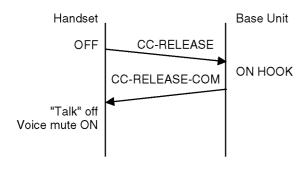


When the OFF button on the handset is pressed during communication, a LINK terminating DATA (CC-RELEASE) is sent to terminate the communication. Then DATA (CC-RELEASE-COM) is returned from base unit.

Handset receives it and reset the link.

4.2.3. Ringing

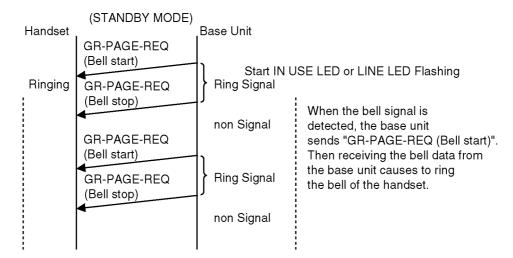


4.3. Block Diagram (Base Unit_Main)

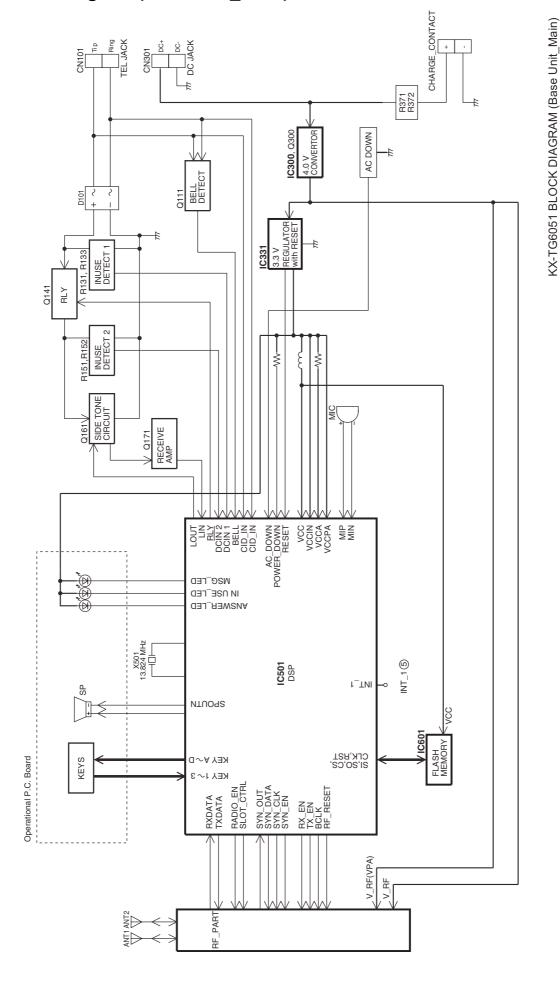

11

4.4. Block Diagram (Base Unit_RF Part)

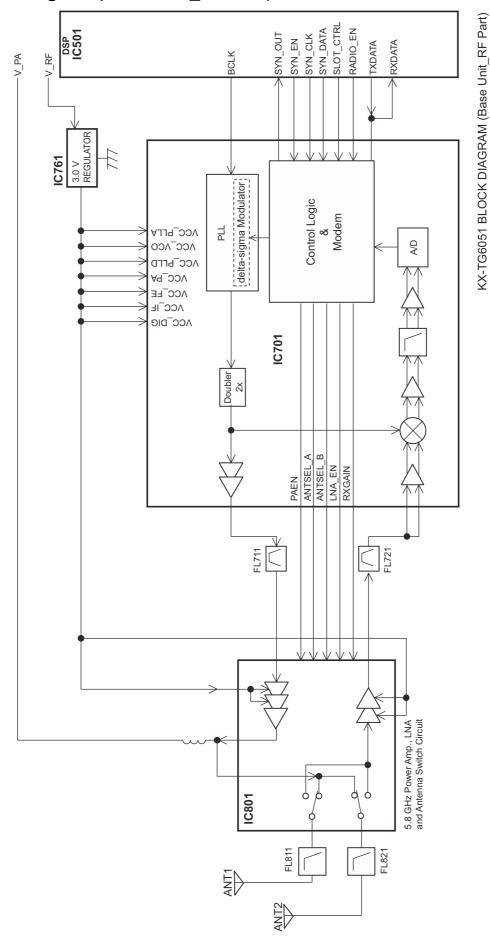


4.5. Circuit Operation (Base Unit)

General Description:

(DSP, Flash Memory) is a digital speech/signal processing system that implements all the functions of speech compression, record and playback, and memory management required in a digital telephone answering machine.

The DSP system is fully controlled by a host processor DSP. The host processor provides activation and control of all that functions as follows.

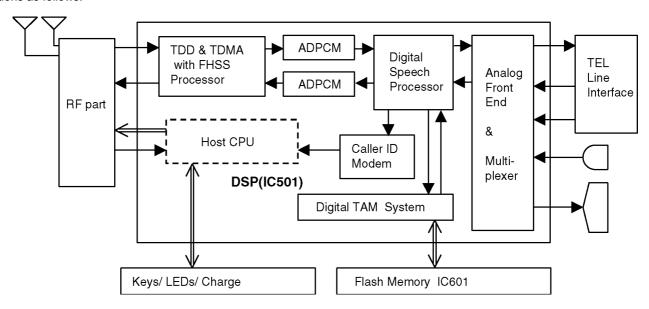

4.5.1. DSP (Digital Speech/Signal Processing: IC501)

Voice Message Recording/Play back

The DSP system uses a proprietary speech compression technique to record and store voice message in Flash Memory. An error correction algorithm is used to enable playback of these messages from the Flash Memory.

DTMF Generator

When the DTMF data from the handset is received, the DTMF signal is output.

Synthesized Voice (Pre-recorded message)

The DSP implements synthesized Voice, utilizing the built in speech detector and a Flash Memory, which stored the vocabulary.

Caller ID demodulation

The DSP implements monitor and demodulate the FSK/DTMF signals that provide CID information from the Central Office.

Digital Switching

The voice signal from telephone line is transmitted to the handset or the voice signal from the handset is transmitted to the Telephone line, etc. They are determined by the signal path route operation of voice signal.

• Block Interface Circuit

RF part, LED, Key scan, Speaker, Microphone, Telephone line.

4.5.2. Flash Memory (IC601)

Following information data is stored.

Voice signal

ex: Pre-recorded Greeting message, Incoming message

Settings

ex: message numbers, ID code, Flash Time, Tone/Pulse


4.5.3. Power Supply Circuit

Function:

The power supply voltage from AC adaptor is converted to the desired voltage of each block.


Circuit Operation:

- Q300 and IC300: 4.0 V DCDC Converter
- IC331: 3.3 V Regulator

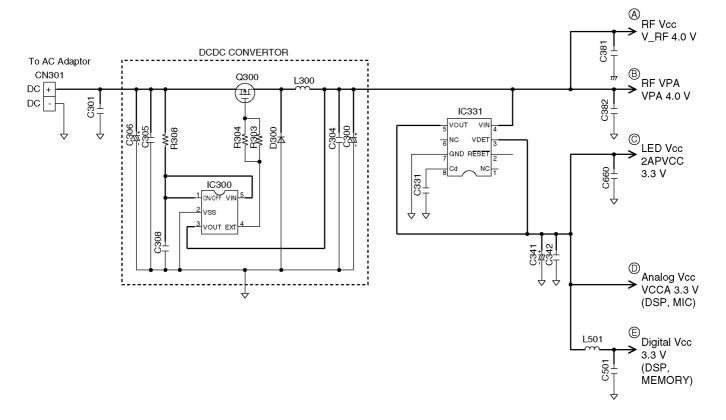

4.5.3.1. Charge Circuit

The voltage from the AC adaptor is supplied to the charge circuits.

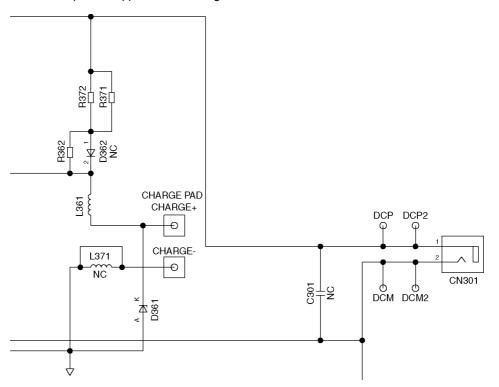

KX-TG6051BXM/KX-TGA601BXM


4.5.4. Reset Circuit


Function:

This circuit is used to initialize the microcomputer when it incorporates an AC adaptor.

Circuit Operation:

When the AC Adaptor is inserted into the unit, then the voltage is shifted by IC331 and power is supplied to the DSP. The set starts to operate when VCC goes up to 3.0 V or more in the circuit voltage diagram.

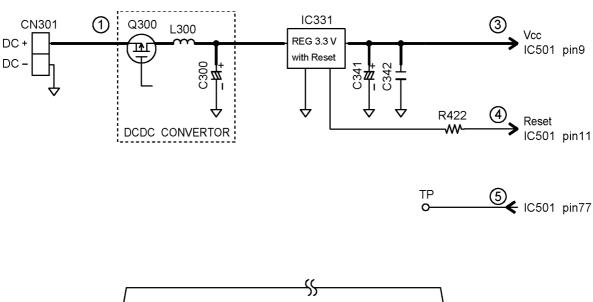

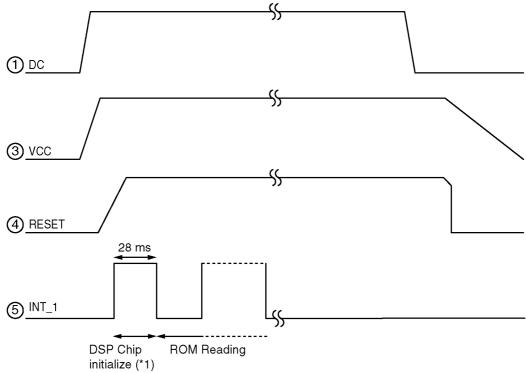

Note:

(*1) The initializing time of the DSP chip is 28 ms under normal conditions.

4.5.5. Telephone Line Interface

Telephone Line Interface Circuit:

Function

- · Bell signal detection
- · ON/OFF hook and pulse dial circuit
- · Side tone circuit

Bell signal detection and OFF HOOK circuit:

In the idle mode, Q141 is open to cut the DC loop current and decrease the ring load. When ring voltage appears at the Tip (T) and Ring (R) leads (When the telephone rings), the AC ring voltage is transferred as follows:

$$T \rightarrow L101 \rightarrow R111 \rightarrow C111 \rightarrow Q111 \rightarrow DSP \ pin \ 58 \ [BELL]$$

When the CPU (DSP) detects a ring signal, Q141 turns on, thus providing an off-hook condition (active DC current flow through the circuit). Following signal flow is the DC current flow.

$$\mathsf{T} \to \mathsf{L}101 \to \mathsf{D}101 \to \mathsf{Q}141 \to \mathsf{Q}161 \to \mathsf{R}163 \to \mathsf{D}101 \to \mathsf{L}102 \to \mathsf{P}101 \to \mathsf{R}$$

ON HOOK Circuit:


Q141 is open, Q141 is connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an on-hook condition.

Pulse Dial Circuit:

Pin 59 of DSP turns Q141 ON/OFF to make the pulse dialing.

Side Tone Circuit:

Basically this circuit prevents the TX signal from feeding back to RX signal. As for this unit, TX signal feed back from Q161 is canceled by the canceller circuit of DSP.

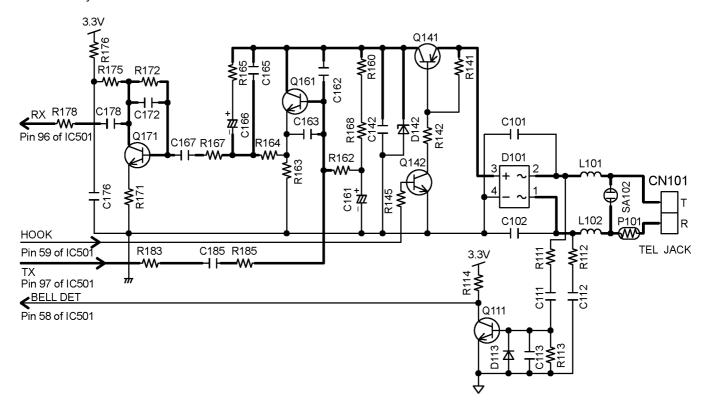

KX-TG6051BXM/KX-TGA601BXM


4.5.6. Auto Disconnect Circuit

Function:

This circuit is used to detect the fact that another telephone connected to the same line is OFF-HOOK while the unit is in a receiving status or OGM transmitting status.

Circuit Operation:

The voltage of pin 90 of IC501 is monitored. If a parallel-connected telephone is put into OFF HOOK status, the presence/ absence of a parallel connection is determined when the voltage changes by 0.2 V or more. When the set detects the parallel-connected telephone is OFF HOOK status, the line is disconnected.

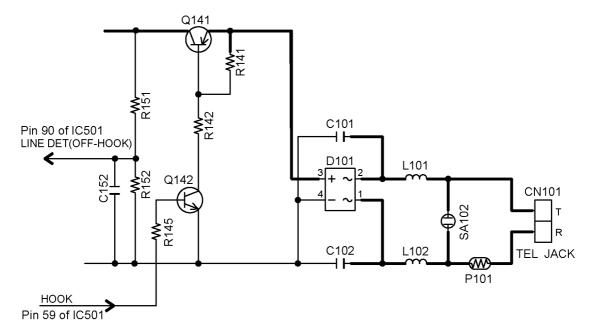

You can enable or disable the Auto Disconnect function. See **Check Record** (P.56)

4.5.7. Parallel Connection Detect Circuit

Function:

In order to disable call waiting and stutter tone functions when using telephones connected in parallel, it is necessary to have a circuit that judges whether a telephone connected in parallel is in use or not. This circuit determines whether the telephone connected in parallel is on hook or off hook by detecting changes in the T/R voltage.


Circuit Operation:

Parallel connection detection when on hook:

When on hook, the voltage is monitored at pin 86 of IC501. There is no parallel connection if the voltage is 1.65 V or higher, while a parallel connection is deemed to exist if the voltage is lower.

Parallel connection detection when off hook:

When off hook, the voltage is monitored at pin 90 of IC501; the presence/absence of a parallel connection is determined when the voltage changes by 0.2 V or more.

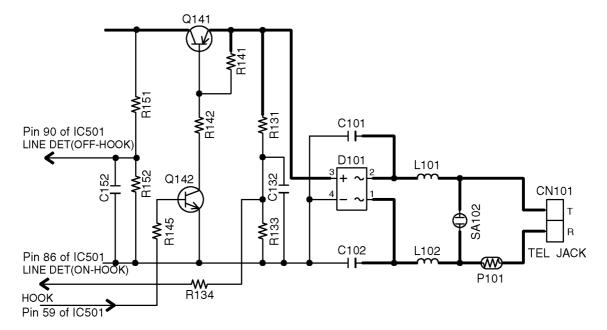


4.5.8. Calling Line Identification (Caller ID)

Function:

The caller ID is a chargeable ID which the user of a telephone circuit obtains by entering a contract with the telephone company to utilize a caller ID service. For this reason, the operation of this circuit assumes that a caller ID service contract has been entered for the circuit being used.

The Caller-ID data from exchange is supplied to the telephone using either method of FSK or DTMF. The method is chosen according to the exchange of telephone office. This unit is available to receive the data with both methods and displays the received data on LCD.

· FSK (Frequency Shift Keying) format

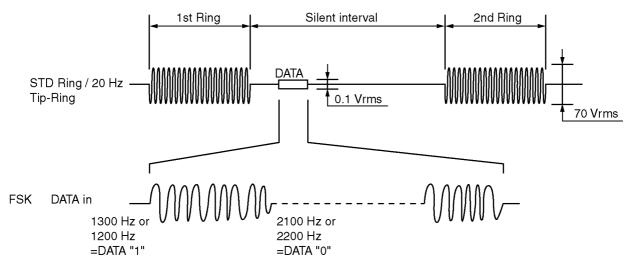


DTMF format


It is the method to send the telephone number of calling party with DTMF to the telephone. DTMF is sent before the first bell signal

The data is sent in turn; first the start code, secondly the telephone number of calling party, lastly end code.

The DTMF is chosen from A (1633 Hz and 697 Hz), B (1633 Hz and 770 Hz), C (1633 Hz and 852 Hz) and D (1633 Hz and 941 Hz) as the start code and end code according to the exchange.

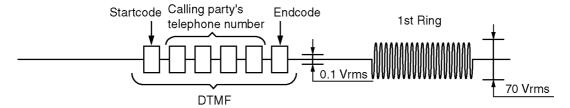


4.6. Block Diagram (Handset)

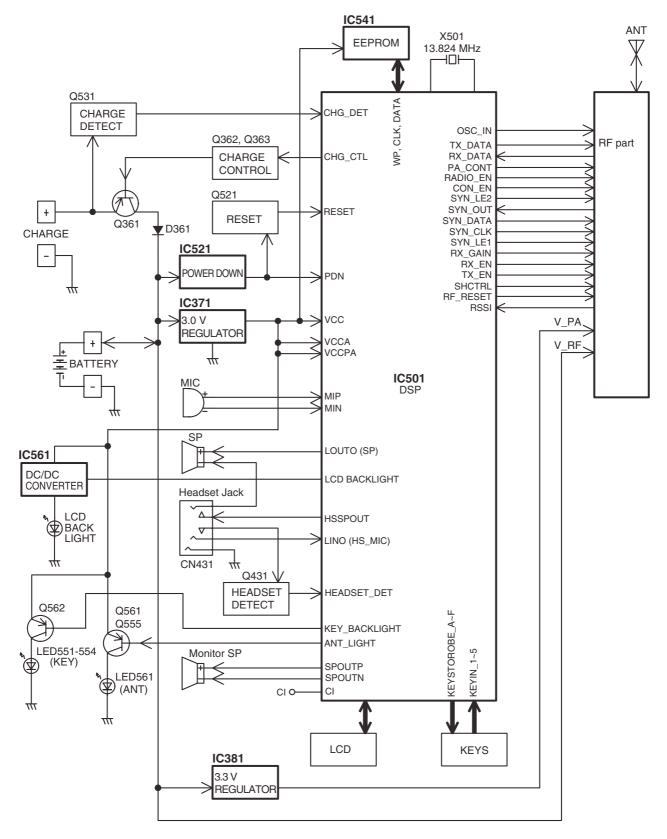

KX-TGA601 BLOCK DIAGRAM (Handset)

4.7. Block Diagram (Handset_RF Part)

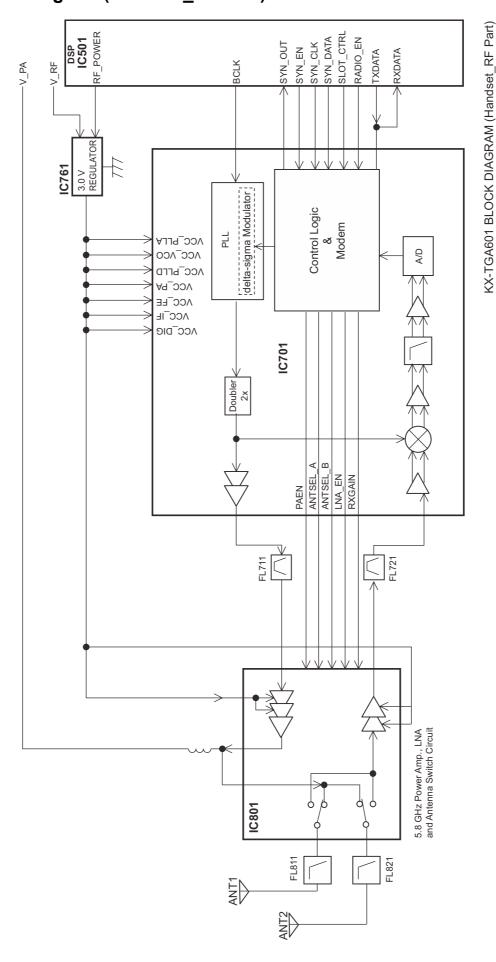

4.8. Circuit Operation (Handset)

4.8.1. Construction

The circuit mainly consists of DSP and RF part as shown in the block diagram.


4.8.1.1. DSP: IC501

Function

- Battery Low, Power down detect circuit
- Ringer Generation
- · Interface circuit

RF part, Speaker, Mic, LED, Key scan, LCD, Headset

Initial waves

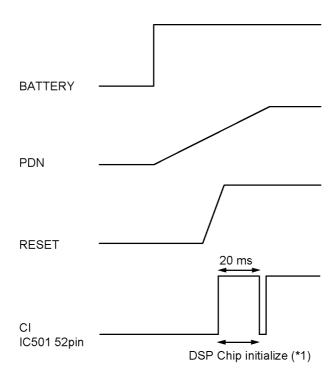

Note:

(*1) The initializing time of the DSP chip is 20 ms under normal conditions.

4.8.1.2. RF part

Mainly voice signal is modulated to RF, or it goes the other way.

4.8.1.3. EEPROM: IC541


All setting data is stored.

ex: ID code, user setting (Phonebook, Caller ID data)

4.8.2. Power Supply Circuit


Voltage is supplied separately to each block.

Block Diagram (Handset Power)

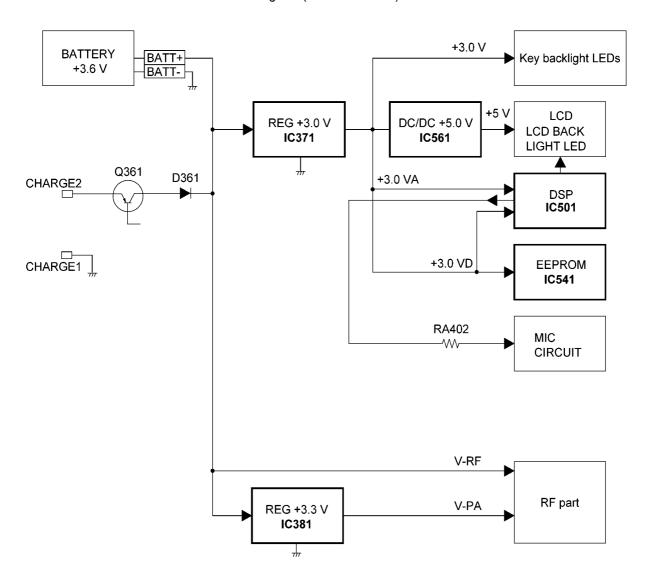

4.8.3. Charge Circuit

When the handset is put on the cradle of the base unit, the power is supplied from CHARGE+ and CHARGE- terminals to charge the battery via R366 or Q361. The voltage between CHARGE+ and CHARGE- flows R531 \rightarrow Q531 \rightarrow pin 38 of IC501, where the charge is detected. Then IC501 calculates the battery consumption amount from the previous charge, and it controls Q361/Q362/Q363 by pin 80 of IC501 until charging is complete. When charging is complete, the control pattern is switched to Trickle charging form from Operational charging form.

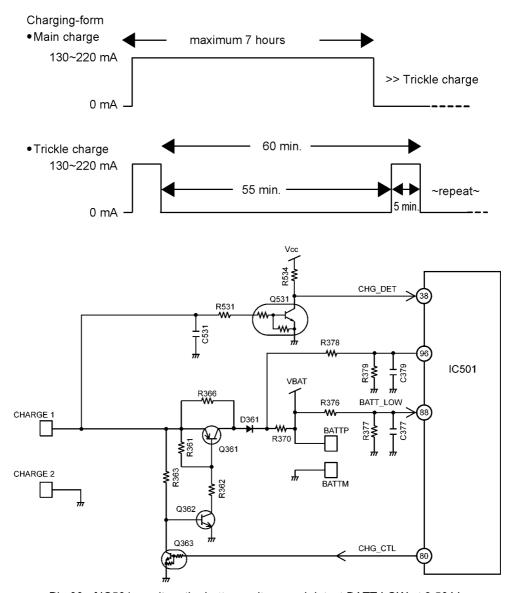

Pin 88 of IC501 monitors the battery voltage and detect BATT LOW at 3.50 V.


4.8.4. Ringer and Handset SP-Phone



KX-TG6051BXM/KX-TGA601BXM


4.8.5. Sending Signal

The voice signal from the microphone is input to DSP (90, 91). CN431 is the headset jack. When the headphone is connected, the Q431 detects it. The input from the microphone of the handset (MIM, MIP) is cut and the microphone signal from the headset is input to DSP (95). Also the power for the microphone is supplied from DSP (92) and the power is turned OFF on standby.

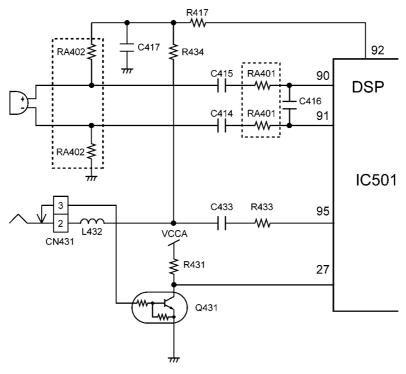

4.8.6. Reception Signal


The voice signal from the base unit is output to DSP (98). This signal is led to the headset jack (CN431). The signal through the headset jack and the other signal output from DSP (97) drives the speaker. When the headset is inserted to the jack, the voice signal is cut at the jack, so the sound does not come out from the speaker, but from the headset only.

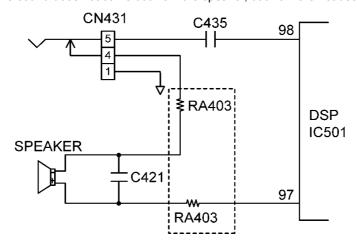

4.9. Circuit Operation (RF Part)

General Description:

RF part includes Transmitter and Receiver functions. Digital signals (Mainly voice data) that come from DSP, are modulated and are transmitted. On the other hand, received signals are demodulated and go out to DSP.

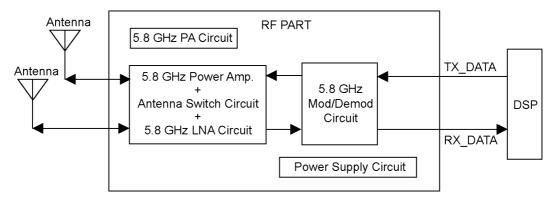


4.9.1. Power Supply Circuit

As indicated below, the various voltages are supplied to each block.

 $V_PA\text{, about }4.0\text{ V at base unit or }3.3\text{ V at handset, is supplied to the Power amplifier in }5.8\text{ GHz PA circuit.}$

IC761 is 3.0 V Regulator and outputs VRF (3.0 V) by order of RADIO_EN signal.

V_RF is approximately 4.0 V (Base Unit) or 3.6 V (Handset).

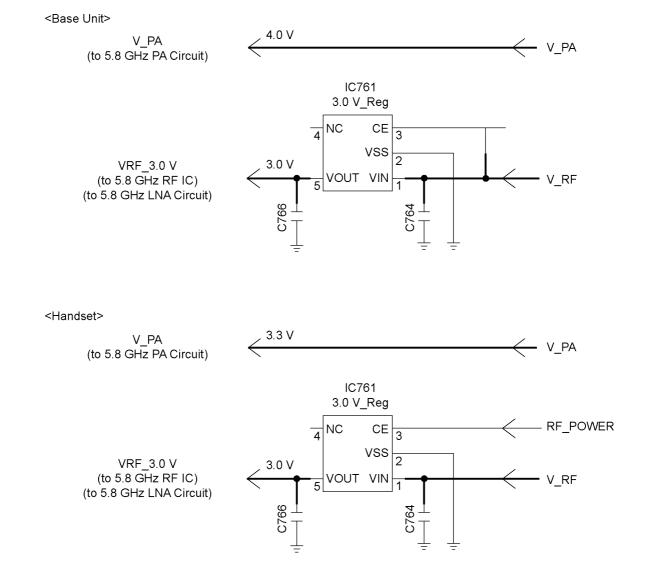

KX-TG6051BXM/KX-TGA601BXM

4.9.2. 5.8 GHz Mod/Demod Circuit


IC701 incorporates all of the modulation and demodulation functions.

TX Digital data (TX_DATA) from DSP is supplied to pin 17 of IC701, and then 5.8 GHz TX modulated signals is output from pin 1. This 5.8 GHz TX signal goes into the PA circuit in IC801.

On the other hand, amplified 5.8 GHz RX signal from LNA in IC801 is passed through BALUN (BALunce-UNbalunce) matching circuit and supplied to pin 7 and pin 8.

In IC701, RX signal is down-converted to 432 kHz IF signal, and demodulated, and RX digital data (RX_DATA) goes from pin 17 to DSP.

IC701 outputs some digital signals (PAEN, ANTSEL_A, ANTSEL_B, LNAEN, RXGAIN), and controls IC801. Reference Clock signal (13.824 MHz) is supplied to pin 25.

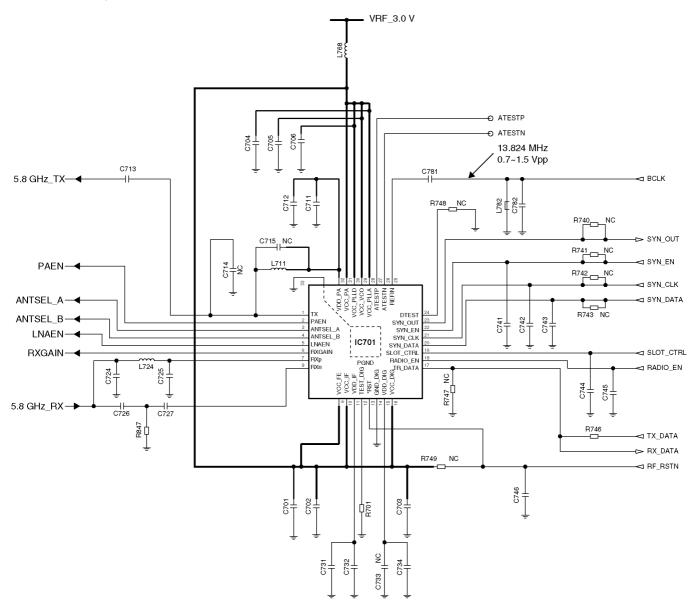

Note:

The exposed GND_PLATE on the bottom of the IC701 supplies the circuit ground(s) for the entire chip. It is very important that a good solder connection is made between this GND_PLATE and the ground plane of the PCB underlying the IC701.

4.9.3. 5.8 GHz PA (Power Amplifier), 5.8 GHz LNA (Low Noise Amplifier) and Antenna Switch Circuit

IC801 includes PA (Power Amplifier) block, LNA (Low Noise Amplifier) Block and Antenna Switch Circuit.

PA block amplifies 5.8 GHz TX signal.

5.8 GHz TX signal from 5.8 GHz RF IC (IC701) is filtered by 5.8 GHz-BPF FL711, and amplified by PA (Power Amplifier) block of IC801. After that, it is supplied to Antenna Switch block from pin 24 of IC801. V_PA is approximately 4.0 V at base unit, and 3.3 V at handset.


LNA block amplifies receiving 5.8 GHz signal. 5.8 GHz RX signal from Antenna Switch block of IC801 is amplified by LNA block and is supplied to IC701 through 5.8 GHz-BPF (FL721).

Antenna Switch block of IC801 switches for RF signals by ANTSEL_A and ANTSEL_B from IC701.

IC701 checks RSSI (Received Signal Strength Indicator), and selects better receiving condition antenna.

At RX mode, RX signal is lead from selected antenna to LNA block.

On the other hand, 5.8 GHz TX signal from PA block is lead to selected antenna at RX mode.

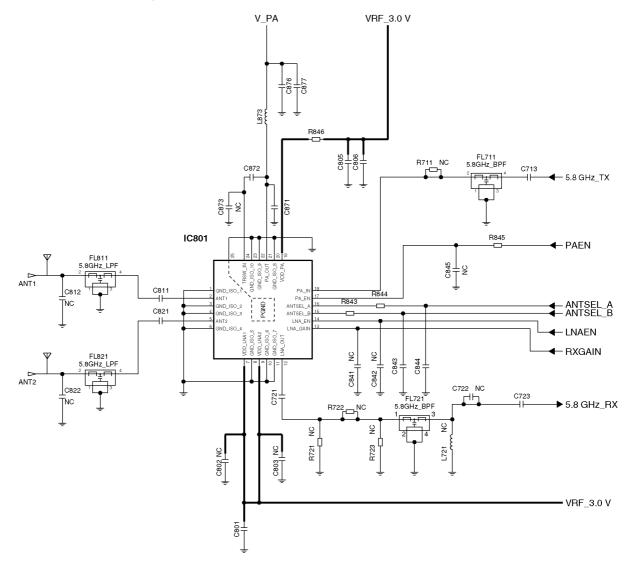

Note:

The exposed GND_PLATE on the bottom of IC801 supplies the circuit ground(s) for the entire chip. It is very important that a good solder connection is made between this GND_PLATE and the ground plane of PCB underlying the IC801.

4.10. Signal Route

SIGNAL ROUTE	IN →	ROUTE	\rightarrow	OUT
HANDSET TX	HANDSET MIC - C414/C415 - <handset_rf_tx_rout< td=""><td></td><td>0)</td><td></td></handset_rf_tx_rout<>		0)	
	ANT <base_unit_rf_i< b=""> - D101 - L101/[L102 - P101] -</base_unit_rf_i<>	RX_ROUTE> - IC501(34 - 9	97) - R183 - C185	5 - R185 - Q161 - Q141
HANDSET RX ——	CN101(TEL LINE) - L101/[P1 - IC501(96 - 18) - <base_ui< b=""></base_ui<>			167 - Q171 - C178 - R178
	ANT <handset_rf_r< b=""> - [C435 - HEADSET_JACK(5</handset_rf_r<>	_ (,	R
HEADSET TX ——	HEADSET_JACK(2) - C433 -	R433 - IC501(95 - 20) - <f< b=""></f<>	HANDSET_RF_T	X_ROUTE> - ANT
	ANT <base_unit_rf_i< b=""> - D101 - L101/[L102 - P101] -</base_unit_rf_i<>		97) - R183 - C185	5 - R185 - Q161- Q141
HEADSET RX ——	CN101(TEL LINE) - L101/[P1 - IC501(96 - 18) - <base_ui< b=""></base_ui<>			167 - Q171 - C178 - R178
	ANT < HANDSET_RF_R	X_ROUTE> - IC501(36 - 98	8) - C435 - HEAD	SET_JACK(5)
HANDSET ———	HANDSET MIC - C414/C415	DA401 ICE01/01/00 00	۵۱	
SP-Phone TX	- <handset_rf_tx_rout< td=""><td></td><td>J)</td><td></td></handset_rf_tx_rout<>		J)	
	ANT <base_unit_rf_< b="">I - D101 - L101/[L102 - P101] -</base_unit_rf_<>		97) - R183 - C185	5 - R185 - Q161 - Q141
HANDSET ———	CN101(TEL LINE) - L101/[P1			167 - Q171 - C178 -R178
SP-Phone RX	- IC501(96 - 18) - <base_u< b=""> ANT. -<handset_rf_r< b="">)</handset_rf_r<></base_u<>			SP
			,	
INTERCOM ——— HANDSET TO	HANDSET MIC - C414/C415 - <handset_rf_tx_rout< td=""><td>,</td><td>0)</td><td></td></handset_rf_tx_rout<>	,	0)	
BASE UNIT	ANT <base_unit_rf_< td=""><td></td><td>2/100) - L473/L4</td><td>72 - SPEAKER</td></base_unit_rf_<>		2/100) - L473/L4	72 - SPEAKER
INTERCOM ——	┆ ┼ MIC - C457/C458 - R459/R46	60 - IC501(88/89 - 18) - <b< b="">a</b<>	ASE_UNIT_RF_1	TX_ROUTE> - ANT
BASE UNIT TO HANDSET	ANT <handset_rf_r< td=""><td></td><td></td><td>_</td></handset_rf_r<>			_
TOTIANDOLT	- [C435 - HEADSET_JACK(5	- 4) - RA403 /RA403 - HAN	NDSET SPEAKE	K
GREETING ——— RECORDING	MIC - C457/C458 - R459/R46	60 - IC501(88/89 - 13/14) -	IC601	
GREETING PLAY— TO TEL LINE	IC601 - IC501(13/14 - 97) - R - CN101(TEL LINE)	1183 - C185 - R185 - Q161	- Q141 - D101 - l	L101/[L102 - P101]
ICM RECORDING -	CN101(TEL LINE) - L101/[P1 - IC501(96 - 13/14) - IC601	01 - L102] - D101 - Q141 -	C165 - R167 - C	167 - Q171 - C178 - R178
ICM PLAY TO —— SPEAKER	IC601 - IC501(13/14 - 2/100)	- L473/L472 - SPEAKER		


Note:

: inside of Handset

KX-TG6051BXM/KX-TGA601BXM

SIGNAL ROUTE	IN	\rightarrow	ROUTE	\rightarrow	OUT
DTMF SIGNAL —— TO TEL LINE	– IC501(97) - R	183 - C185 - R18	85 - Q161 - Q141 - D101	- L101/[L102 - P10	1] - CN101(TEL LINE)
CALLER ID ———	- CN101(TEL L	INE) - L101/[P10	1 - L102] - C121/C122 -	R121/R122 - IC501	(93/94)
BELL DETECTION-	CN101(TEL L	INE) - L101/[P10	1 - L102] - R111/R112 -	C111/C112 - Q111	- IC501(58)

RF part signal route

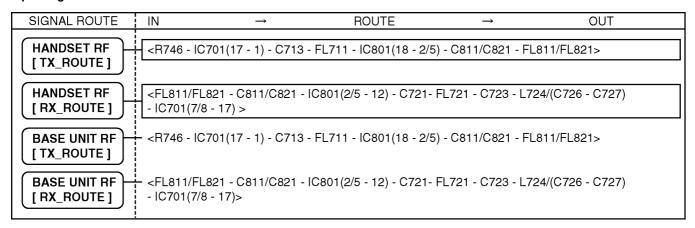


Note:

: inside of Handset

5 Location of Controls and Components

5.1. Controls


5.1.1. Base Unit

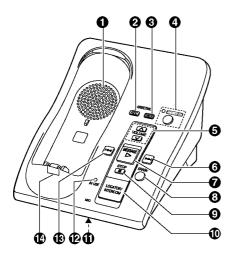

- Speaker
- **②** [GREETING REC] (Recording)
- **③** [GREETING CHECK]
- (ANSWER ON) ANSWER ON indicator
- O VOLUME [∧][∨]
- **③** [▶▶|] (SKIP)
- **⑦** [MESSAGE]

 MESSAGE indicator
- (3 [ERASE]
- (STOP)
- ♠ [LOCATOR] [INTERCOM]
- MIC (Microphone)
- IN USE indicator
- (B [I◄◄] (REPEAT)
- Charge contacts

5.1.2. Handset

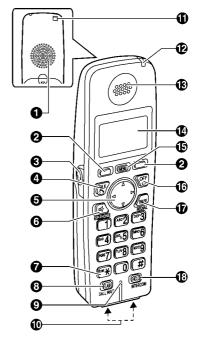

- Speaker
- Soft keys
- Headset jack
- **②** [**↑**] (TALK)
- Navigator key ([▲] [▼] [▼] [►])
- **(** SP-PHONE)
- **②** [★] (TONE)
- (FLASH) [CALL WAIT]
- Microphone
- Charge contacts
- 1 Lanyard/strap eyelet
- Charge indicator Ringer indicator Message indicator
- Receiver
- Display
- (MENU)
- (OFF)
- (PAUSE) [REDIAL]
- (B [HOLD] [INTERCOM]

5.2. Display

Handset display items

Displayed item	Meaning
((V E))	Voice enhancer is on.
	Battery level


6 Installation Instructions

6.1. Setting Up the Base Unit

6.1.1. Connecting the AC Adaptor and Telephone Line Cord

Connect the telephone line cord until it clicks into the base unit and telephone line jack (1). Connect the AC adaptor cord (2) by pressing the plug firmly (3).

 Use only the included Panasonic AC adaptor PQLV203BXZ.

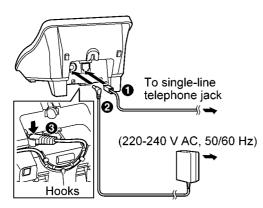


Note:

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floormounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.
- When more than one unit is used, the units may interfere with each other.
 To prevent or reduce interference, please keep ample space between the base units.
- The unit will not work during a power failure. We recommend connecting a corded telephone to the same telephone line or to the same telephone line jack using a T-adaptor.

If you subscribe to a DSL service


Please attach a noise filter (contact your DSL provider) to the telephone line between the base unit and the telephone line jack in the event of the following:

- Noise is heard during conversations.
- Caller ID features do not function properly.

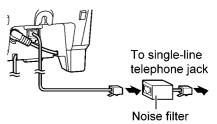


6.2. Battery Installation /Replacement

- 1 Press the notch of the handset cover firmly, and slide it in the direction of the arrow.
 - If necessary, remove the old battery.

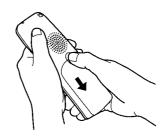

2 Insert the battery (1), and press it down until it snaps into position (2). Then close the handset cover (3, 4).

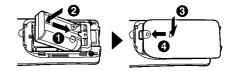

Important:


 Use only the rechargeable Panasonic battery HHR-P107A.

6.3. Battery Charge

Place the handset on the base unit for **7 hours** before initial use.

 While charging, "Charging" is displayed and the charge indicator on the handset lights in amber. When the battery is fully charged, "Charge completed" is displayed and the indicator lights in green.

Base unit:

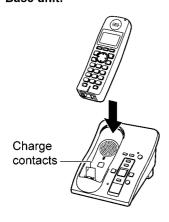

Note:

- If you want to use the handset immediately, charge the battery for at least 15 minutes.
- To ensure that the battery charges properly, clean the charge contacts of the handset and base unit with a soft, dry cloth.
 Clean if the unit is subject to the exposure of grease, dust, or high humidity.
- When the battery is empty, "Charge for 7h" is displayed and the charge indicator does not light for about 5 minutes to concentrate on charging.

Note for service:

The battery strength may not be indicated correctly if the battery is disconnected and connected again, even after it is fully charged. In that case, by recharging the battery as mentioned above, you will get a correct indication of the battery strength.

6.3.1. Battery Level

Battery icon	Battery level
(EEE)	Fully charged
	Medium
	Low Flashing: needs to be recharged.
	Empty

Note:

 When the battery needs to be charged, the handset beeps intermittently during use.

6.3.2. Panasonic Battery Performance

Operation	Operating time
While in use (talking)	Up to 5 hours
While not in use (standby)	Up to 11 days
While using the clarity booster feature	Up to 3 hours

Note:

- Battery operating time may be shortened over time depending on usage conditions and surrounding temperature.
- Battery power is consumed whenever the handset is off the base unit, even when the handset is not in use.
- After the handset is fully charged, displaying "Charge completed", it may be left on the base unit without any ill effect on the battery.
- The battery level may not be displayed correctly after you replace the battery. In this case, place the handset on the base unit and let it charge for 7 hours.

7 Operation Instructions

7.1. Programmable Settings

You can customize the unit by programming the following features using the handset. To access the features, there are 2 methods:

- scrolling through the display menus
- using the direct commands
- Mainly the direct command method is used in this service manual.

7.1.1. Programming by Scrolling through the Display Menus

- 1 [MENU]
- **2** Press [v] or [A] to select the desired menu. \rightarrow [Select]
 - If there is a sub-menu(s), press (▼) or (▲) to select the desired item.
 Select
- **3** Press $[\,\overline{}\,]$ or $[\,\underline{}\,]$ to select the desired setting. \longrightarrow $[\,$
 - This step may vary depending on the feature being programmed.

4 [OFF]

Main menu	Sub-menu 1	Sub-menu 2
Message play	_	_
Alarm	_	_
Ringer setting	Ringer volume	_
	Ringer tone	-
	Ring color	_
Set date & time	Date and time	_
	Time adjustment	_
Voice enhancer	_	_
Dial lock	_	-
Talking CallerID	_	_
Initial setting	Set answering	Ring count
		Recording time
		Remote code
	Message alert	-
	LCD contrast	_
	Key tone	_
	Auto talk	-
	Set area code	-
	Set tel line	Set dial mode
		Set flash time
		Set line mode
	Set base unit	Ringer tone
		Talking CallerID
	Registration	HS registration
		Deregistration

7.1.2. Programming using the Direct Commands

1 [MENU]

- 2 Enter the desired feature code.
- 3 Enter the desired setting code. → [Save]
 This step may vary depending on the feature being programmed.

4 [OFF]

Note:

- In the following table, < > indicates the default setting.
- If you make a mistake or enter the wrong code, press **[OFF]**, then start again from step 1.

Feature	Feature code	Setting code
Alarm	[8]	[1]: Once [0]: <off></off>
Auto talk*1	[0][3]	[1]: On [0]: <off></off>
Date and time	[4][1]	-
Deregistration	[0][0][2]	-
Dial lock	[6]	_
HS registration	[0][0][1]	-
Key tone ^{*2}	[0][2]	[1]: <on> [0]: Off</on>
LCD contrast (Display contrast)	[0][1]	[1]-[6]: Level 1-6 <3>
Ring color (Ringer indicator color)	[1][4]	<pre>[1]: <color1>=Amber [2]: Color2=Green [3]: Color3=Red [4]: Multicolor</color1></pre>
Ringer tone (Handset)	[1][2]	[1]-[3]: Tone <1>-3 [4]-[7]: Melody 1-4
Ringer volume (Handset)	[1][1]	[1]: Low [2]: Medium [3]: <high> [0]: Off</high>
Set area code	[0][4]	-
Set dial mode	[0][5][1]	[1]: Pulse [2]: <tone></tone>
Set flash time ^{*3}	[0][5][2]	[1]: <700ms> [2]: 600ms [3]: 400ms [4]: 300ms [5]: 250ms [6]: 110ms [7]: 100ms [8]: 90ms
Set line mode*4	[0][5][3]	[1]: A [2]:
Time adjustment *5 (Caller ID subscribers only)	[4][2]	[1]: Caller ID[auto] [0]: <manual></manual>
Voice enhancer	[5]	[1]: On [0]: <off></off>

Feature	Feature code	Setting code	
Message alert	[0][#]	[1]: On [0]: <off></off>	
Message play	[2]	_	
Recording time	[0][6][2]	[1]: 1min [2]: 2min [3]: <3min>	
Remote code	[0][6][3]	Default: 11	
Ring count	[0][6][1]	[2]-[7]: 2-7 rings <4> [0]: Toll saver	
Ringer tone (Base unit)	[0][*][1]	[1]-[3]: Tone <1>-3	
Talking CallerID (Handset)	[9]	[1]: On [0]: <off></off>	
Talking CallerID (Base unit)	[0][*][4]	[1]: On [0]: <off></off>	

- *1 If you subscribe to Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature.
- *2 Turn this feature off if you prefer not to hear key tones while you are dialing or pressing any keys, including confirmation tones and error tones.
- *3 The flash time depends on your telephone exchange or host PBX. Consult your PBX supplier if necessary.
- *4 Generally, the line mode setting should not be adjusted. If "Line in use" is not displayed when another phone connected to the same line is in use, you need to change the line mode to "A".
- *5 If the caller ID time and date display service is available in your area, this feature allows the unit to automatically adjust the date and time setting when caller information is received. To use this feature, set the date and time first.

7.2. Dial Lock

This feature prohibits making outside calls. The default setting is OFF.

Important:

- When dial lock is turned on, only phone numbers stored in the phonebook as emergency numbers (numbers stored with a # at the beginning of the name) can be dialed using the phonebook. We recommend storing emergency numbers in the phonebook before using this feature.
- When dial lock is turned on, you cannot store, edit, or erase items in the phonebook.

To turn dial lock on

- 1 [MENU] \rightarrow [6]
- 2 Enter a 4-digit password*.
 - This password is required when turning dial lock off. We recommend writing the password down.
- 3 [Save] \rightarrow [Yes] \rightarrow [OFF]

Note:

- •If dial lock is turned on, the handset displays "Dial lock".
- •While there are new messages, "Dial lock" is not displayed when the handset is off the base unit.

To turn dial lock off

- 1 [MENU] \rightarrow [6]
- 2 Enter the same password* that was entered when dial lock was turned on.
- 3 [Save] \rightarrow [Yes] \rightarrow [OFF]

For Service Hint:

*: If the current password is forgotten, enter "726276642" and you will be able to go to step 3.

7.3. Error Messages

If the unit detects a problem, one of the following messages is shown on the display.

Display message	Cause/solution	
Busy	● The called unit is in use.	
Dial locked	• Dial lock is turned on. To turn it off, see "Dial Lock".	
Error!!	 The handset's registration has failed. Move the handset and base unit away from all electrical appliances and try again. The entered password was wrong in programming dial lock. Enter the correct password. 	
No items stored	Your phonebook or redial list is empty.	
No link to base. Move closer to base, try again.	 The handset has lost communication with the base unit. Move closer to the base unit, and try again. Confirm that the base unit's AC adaptor is plugged in. The handset's registration may have been canceled. Re-register the handset. 	
Phonebook full	There is no space to store new items in the phonebook. Erase unnecessary items.	
Please lift up and try again.	 A handset button was pressed while the handset was on the base unit. Lift the handset and press the button again. 	
System is busy. Please try again later.	 The base unit is in use and the system is busy. Try again later. Another user is listening to messages. Try again later. 	

7.4. Troubleshooting

General use

Problem	Cause/solution
The unit does not work.	 Make sure the battery is installed correctly and fully charged. Check the connections. Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again. The handset has not been registered to the base unit. Register the handset.
I cannot hear a dial tone.	 Confirm the telephone line cord is properly connected. Disconnect the unit from the telephone line and connect a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your telephone service provider.
The communication between the base unit and the handset is unstable.	The handset may not be properly registered. Try to re-register the handset.
The indicator on the top right of the handset flashes slowly.	 New messages have been recorded. Listen to the new messages.

Programmable settings

Problem	Cause/solution	
I cannot program items.	 Programming is not possible while the base unit is being used. Try again later. 	
I cannot set the alarm.	 In order to set the alarm, you must first set the date and time. The handset has lost communication with the base unit. Move closer to the base unit, and try again. 	
While programming, the handset starts to ring.	A call is being received. Answer the call and start again after hanging up.	

Battery recharge

Problem	Cause/solution
I fully charged the battery, but continues to flash, or is displayed.	 Clean the charge contacts and charge again. The battery may need to be replaced with a new one.
The handset display is blank.	Confirm that the battery is properly installed. Fully charge the battery.
While charging, the charge indicator does not light and "Charge for 7h" is displayed.	 The battery is empty. The charge indicator does not light in order to concentrate on charging. After about 5 minutes, the charge indicator lights and "Charging" is displayed.

Making/answering calls, intercom

Problem	Cause/solution	
Static is heard, sound cuts in and out. Interference from other electrical units.	 Move the handset and base unit away from other electrical appliances. Move closer to the base unit. Turn on the clarity booster feature. If your unit is connected to a telephone line with DSL service, we recommend connecting a noise filter between the base unit and the telephone line jack. Contact your DSL provider for details. 	
The handset does not ring.	● The ringer volume is turned off. Adjust it.	
The base unit does not ring.	The ringer volume is turned off. Adjust it.	
I cannot make a call.	 The dialing mode may be set incorrectly. Change the setting. Dial lock is turned on. To turn it off, see "Dial Lock". 	
I cannot have a conversation using the headset.	Make sure that an optional headset is connected properly. If "SP-phone" is displayed on the handset, press [] to switch to the headset.	
I cannot page the handset.	The called handset is too far from the base unit. The called handset is in use. Try again later.	
I cannot page the base unit.	● The base unit is in use. Try again later.	

Caller ID

Problem	Cause/solution
The handset does not display the caller's phone number.	●You have not subscribed to Caller ID service. Contact your telephone service provider to subscribe.
	•If your unit is connected to any additional telephone equipment such as a Caller ID box or cordless telephone line jack, disconnect the unit from the equipment and plug the unit directly into the wall jack.
	 If your unit is connected to a telephone line with DSL service, we recommend connecting a noise filter between the base unit and the telephone line jack. Contact your DSL provider for details.
	 Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.
	●The caller requested not to send caller information.
The handset or base unit does not announce the	 The handset or base unit's ringer volume is turned off. Adjust it.
displayed caller names or phone numbers.	●The Talking Caller ID feature is turned off. Turn it on.
or priorie numbers.	●The ring count for the answering system is set to "2" or "Toll saver". Select a different setting.
	 If the base unit and handset are having an intercom call, your handset does not announce caller information.

Answering system

Problem	Cause/solution	
I cannot listen to	•A touch tone phone is required for remote operation.	
messages from a remote	 Enter the remote code correctly. 	
location.	●The answering system is off. Turn it on.	
The unit does not record	● The answering system is off. Turn it on.	
new messages.	 The message memory is full. Erase unnecessary messages. 	
I cannot operate the answering system.	•Someone is operating the answering system.	


Registration

Problem	Cause/solution
The handset registration may have been canceled or the communication between the base unit and the handset is unstable.	 Re-register the handset. 1 Handset: [MENU] → [0][0][1] 2 Base unit: Press and hold [LOCATOR] until the IN USE indicator flashes. 3 Handset: Press [OK], then wait until a beep sounds. → [OFF]
	If the registration fails, try to deregister the handset. Press [MENU] \rightarrow [0][0][2] \rightarrow [3][3][5] \rightarrow [OK] \rightarrow [1], then re-register it again.
	 If the above remedy does not solve the problem, consult your nearest Panasonic service center.

8 Test Mode

8.1. Adjustment and Test Mode Flow Chart


8.1.1. Test Burst Mode for Base Unit

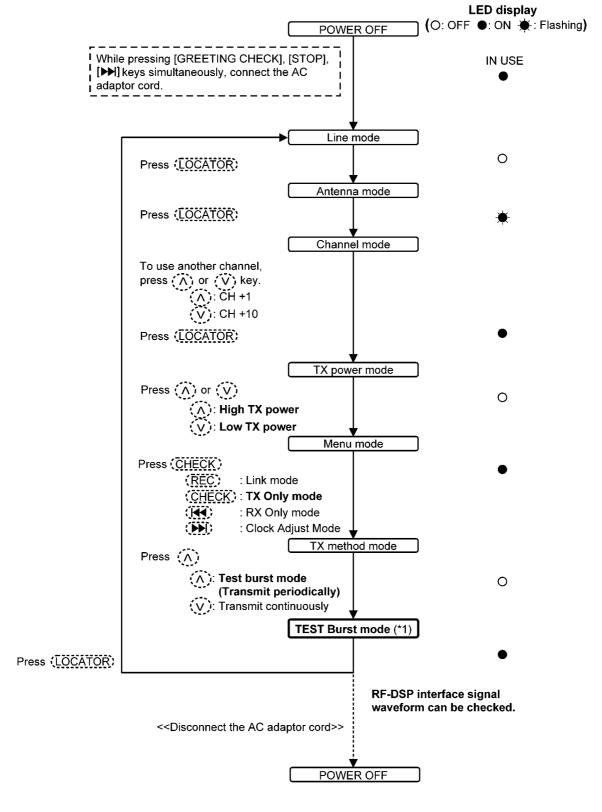

Note:

(*1) Refer to Check Table for RF part (P.61).


8.1.2. TX-CW Mode for Base Unit

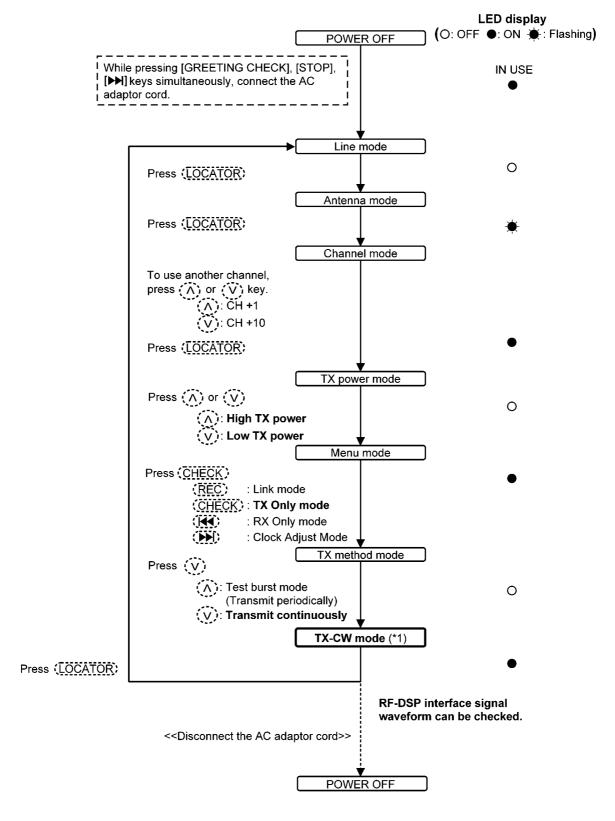

Note:

(*1) Refer to Check Table for RF part (P.61).


8.1.3. RX-CW Test Mode for Base Unit

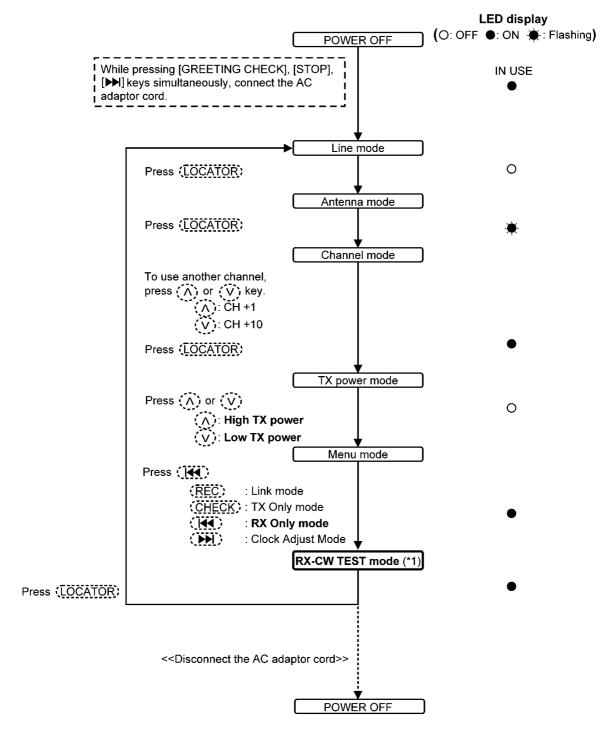

Note:

(*1) Refer to Check Table for RF part (P.61).


8.1.4. Test Link Mode for Base Unit

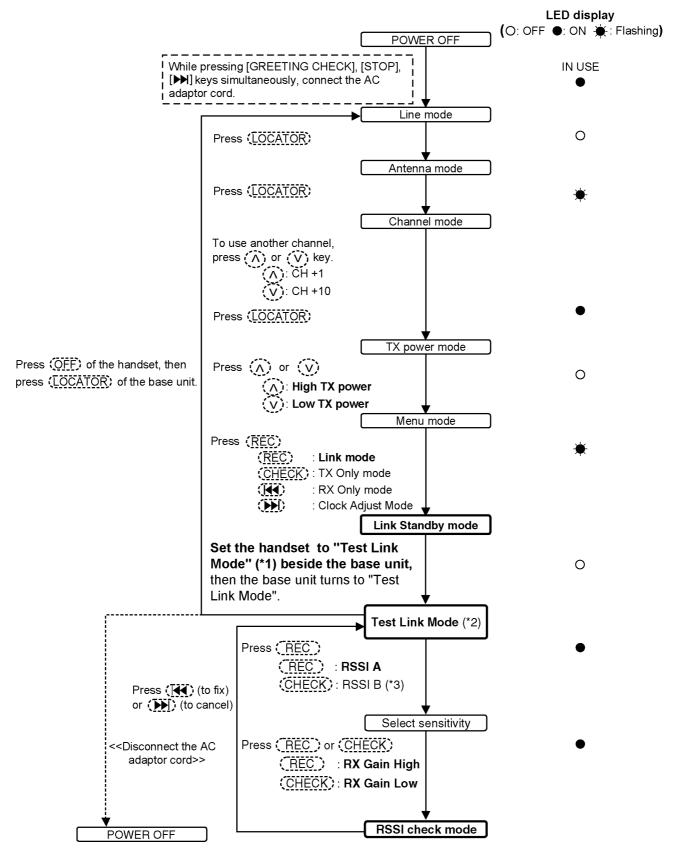

Note:

- (*1) Refer to **Test Link Mode for Handset** (P.50). If you can not proceed to the next step, refer to **Registering a Handset** (P.59).
- (*2) Refer to Check Table for RF part (P.61).
- (*3) for factory use only


8.1.5. Adjustment Mode for Base Unit

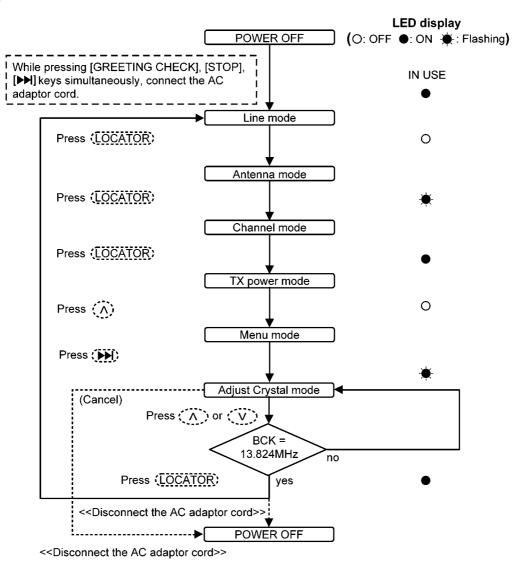

Cross Reference

Check and Adjust Frequency (Base Unit) (P.77)

8.1.6. Test Burst Mode for Handset

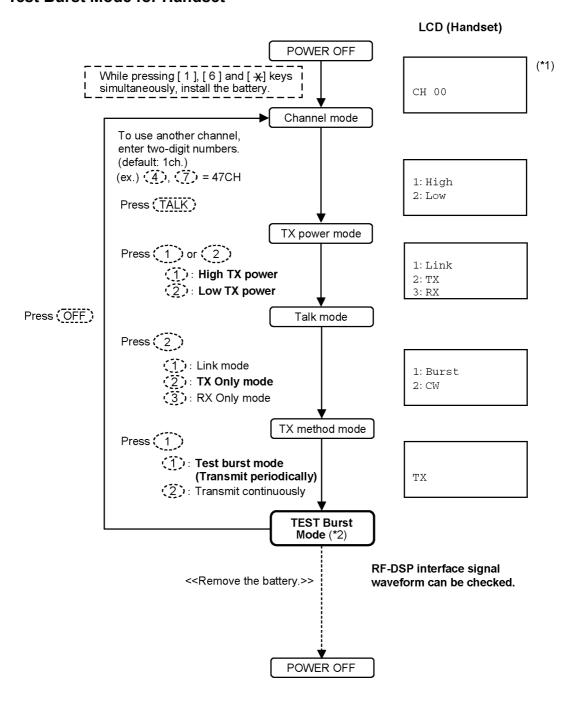


Note:

(*1) LCD displays the Channel number. (exception: default/ CH00 = 1ch.)

(*2) Refer to Check Table for RF part (P.61).

8.1.7. TX-CW Mode for Handset

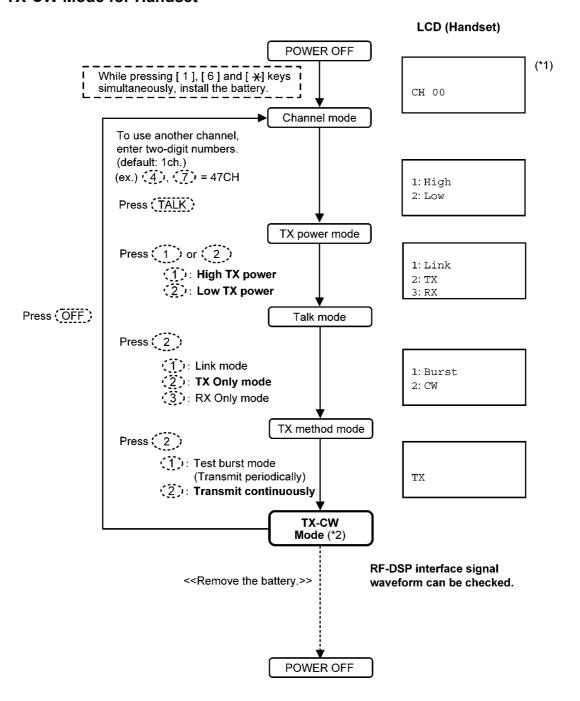


Note:

(*1) LCD displays the Channel number. (exception: default/ CH00 = 1ch.)

(*2) Refer to Check Table for RF part (P.61).

8.1.8. RX-CW Test Mode for Handset

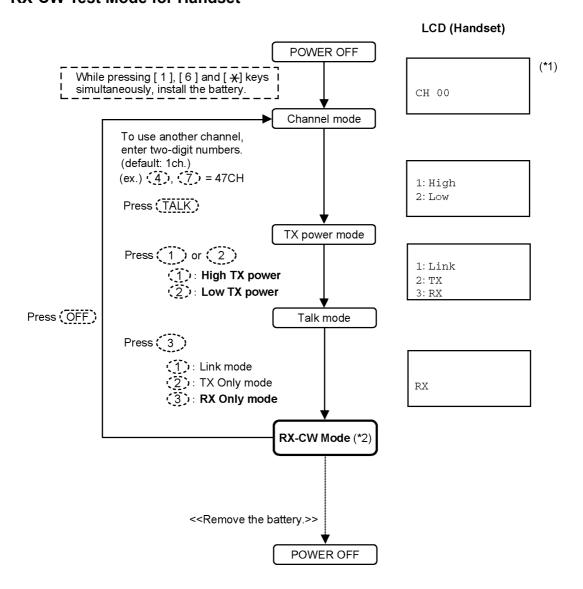


Note:

(*1) LCD displays the Channel number. (exception: default/ CH00 = 1ch.)

(*2) Refer to Check Table for RF part (P.61).

8.1.9. Test Link Mode for Handset

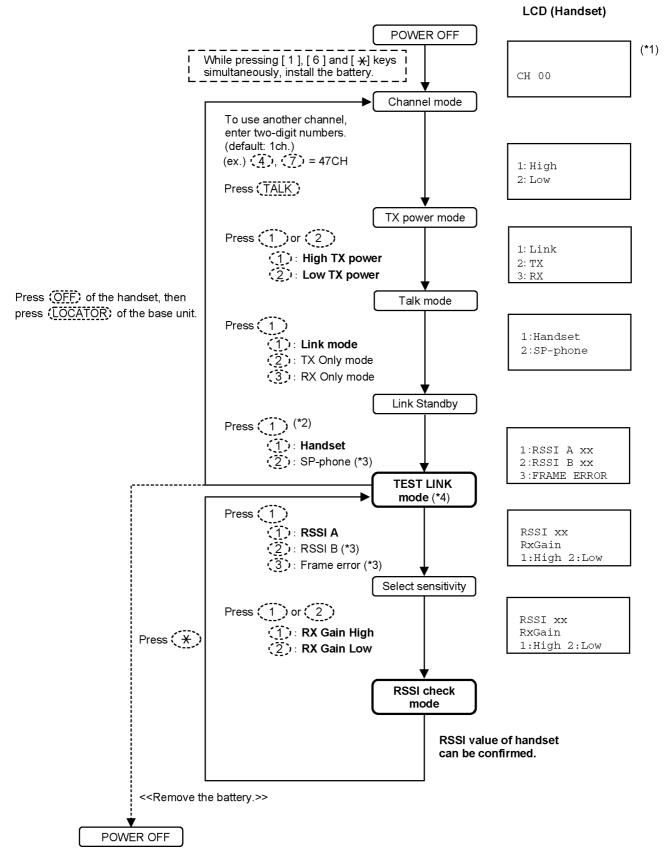

Note:


(*1) LCD displays the Channel number.

(exception: default/ CH00 = 1ch.)

- (*2) If can not proceed to the next step, refer to Registering a Handset (P.59).
- (*3) for factory use only.
- (*4) Refer to Check Table for RF part (P.61).

8.1.10. Adjustment Mode for Handset

LCD (Handset)

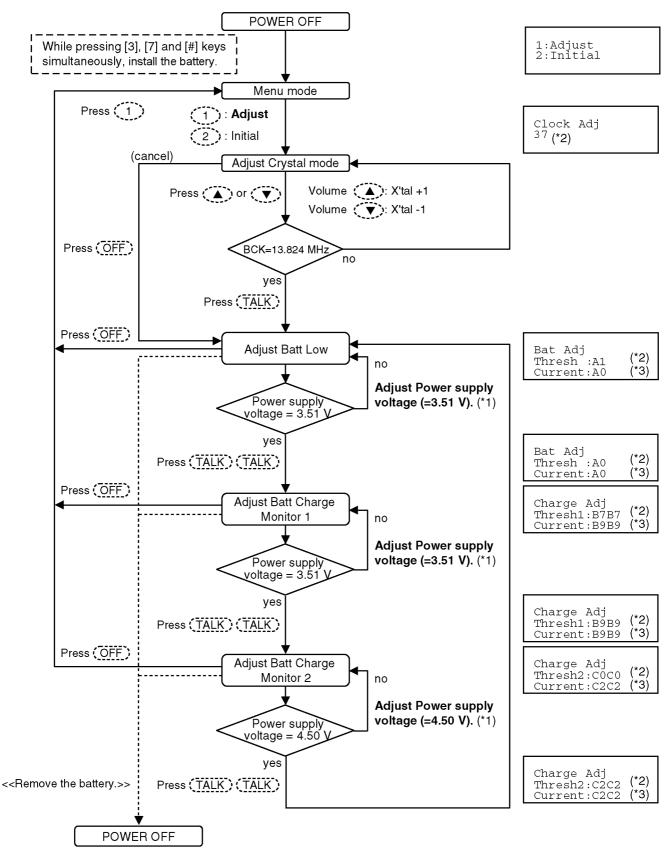

Cross Reference

(*1) Adjust Battery Low Detector Voltage (Handset) (P.77)

Note:

- (*2) These are the default values.
- (*3) These values may not be fixed depending on the battery strength.

KX-TG6051BXM/KX-TGA601BXM


9 Service Mode

9.1. How to Clear User Setting

Units are reset to the Factory settings by this operation (Erase recorded Voice messages, stored Phone numbers, Caller list and etc.).

This operation should not be performed for a usual repair.


9.1.1. Base Unit

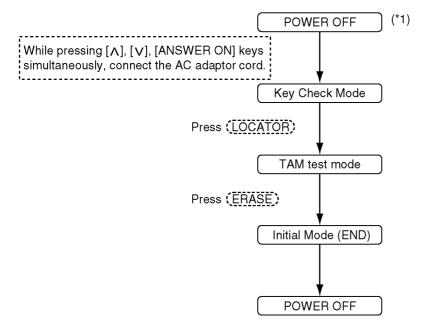

Note:

(*1) Telephone line must be connected.

9.1.2. Handset

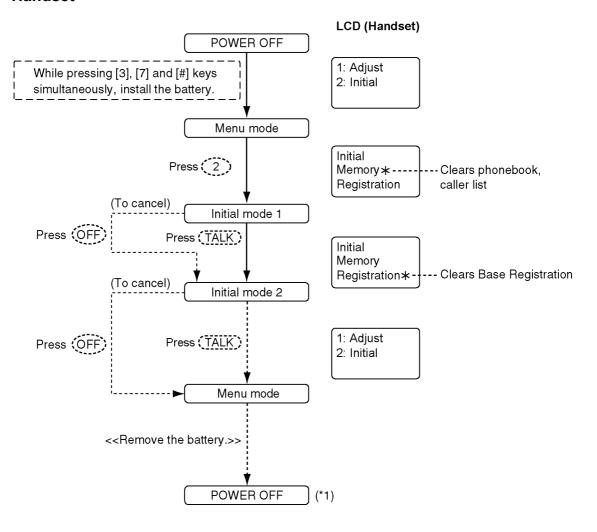


Note:

(*1) Be sure to short the battery terminals of the handset with a lead wire, etc. for 2 seconds for discharge after removing the battery.

10 Troubleshooting Guide

10.1. Troubleshooting Flowchart

FLOW CHART

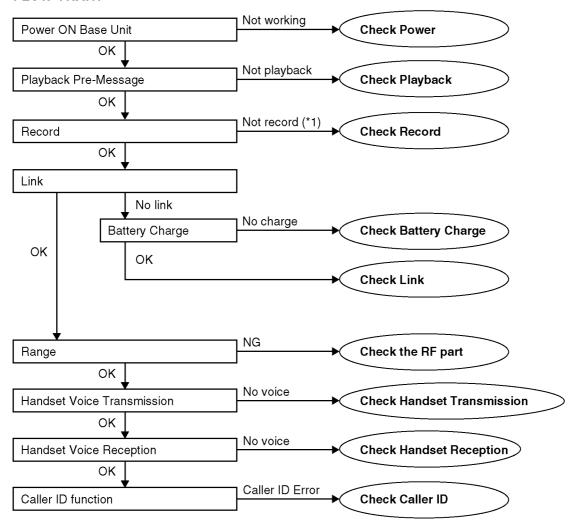

Cross Reference:

Check Power (P.55)

Check Playback (P.57)

Check Record (P.56)

Check Battery Charge (P.57)

Check Link (P.58)

Check the RF part (P.59)

Check Handset Transmission (P.66)

Check Handset Reception (P.66)

Check Caller ID (P.66)

Note:

(*1) When a user claims that the unit disconnects a call right after the greeting message and no incoming messages can be recorded, this symptom can not be reappeared with TEL simulator in the service center. In this case, try **Check Record** (P.56) item (C), (D).

10.1.1. Check Power

BASE UNIT Is the AC Adaptor inserted into AC outlet? (*1) NO Is output voltage of AC adaptor 9 V? Check AC Adaptor. NO Check Power Supply Circuit. Check VCC (3.3 V): (E) of DSP. (*2) NO RST: Reset = "High"? Check Reset Circuit. NO Check Xtal CLK = 13.824 MHz? Check X501. YES Check DSP.

Cross Reference:

Power Supply Circuit (P.14)

Reset Circuit (P.16)

Note:

Flash Memory is IC601.

DSP is IC501.


- (*1) Refer to **Specifications** (P.6) for part number and supply voltage of AC adaptor.
- (*2) Refer to Circuit Board (Base Unit_Main) (P.93).

KX-TG6051BXM/KX-TGA601BXM


10.1.2. Check Record

BASE UNIT

A) Not record Greeting Message

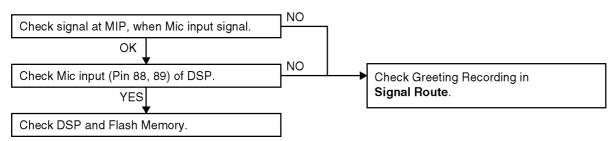

B) Not record Incoming Message

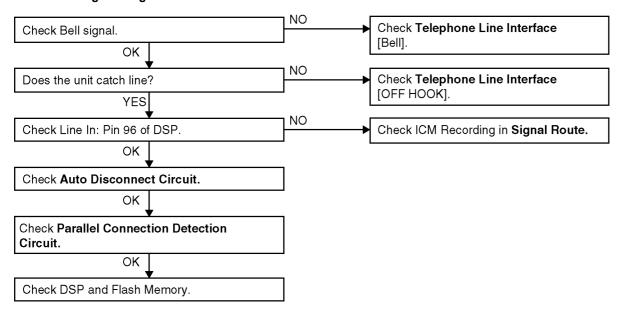

C) How to change the Auto Disconnect activation (time)

Some Telephone Company lines (fiber or cable) ON Hook and OFF Hook voltages are lower than conventional lines, which may cause a malfunction of Auto Disconnect detection. To solve this problem, try changing the Auto Disconnect activation through the procedures below.

Auto Disconnect detect	CPC detect	PROCEDURE at Stand-by mode	
Enable*1		"STOP"+"GREETING CHECK"+"LOCATOR" simultaneously	
Enable*1 [default] Disable		"STOP"+"GREETING CHECK"+"VOL. [^]" simultaneously	
Disable*2		"STOP"+"GREETING CHECK"+"VOL. [v]" simultaneously	

Note:

*2 If the "Disable" is selected, even if the parallel-connected telephone is OFF HOOK, the line isn't disconnected.

D) How to change the VOX level

It makes easier to detect a small voice (caller) by raising the sensitivity of VOX level. Therefore, the recording of TAM is not turned off during a detection.

VOX Level sensitivity	PROCEDURE
Normal [default]	"STOP"+"LOCATOR"+"VOL. [^]" simultaneously
6 dB Up	"STOP"+"LOCATOR"+"VOL. [v]" simultaneously

Cross Reference:

Signal Route (P.30)

Telephone Line Interface (P.17)

Auto Disconnect Circuit (P.18)

Parallel Connection Detect Circuit (P.19)

Note:


Flash Memory is IC601.

DSP is IC501.

^{*1} Both Auto Disconnect and CPC don't detect for the first 2 seconds.

10.1.3. Check Playback

BASE UNIT

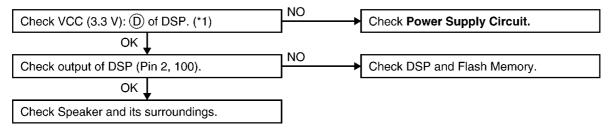

Cross Reference:

Power Supply Circuit (P.14)

Note:


Flash Memory is IC601.

DSP is IC501.

(*1) Refer to Circuit Board (Base Unit_Main) (P.93).

10.1.4. Check Battery Charge

BASE UNIT

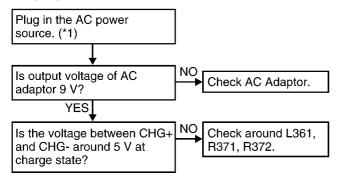


Note:

Flash Memory is IC601.


(*1) Refer to **Specifications** (P.6) for part number and supply voltage of AC adaptor.

HANDSET

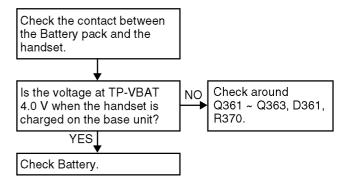

10.1.5. Check Link

BASE UNIT

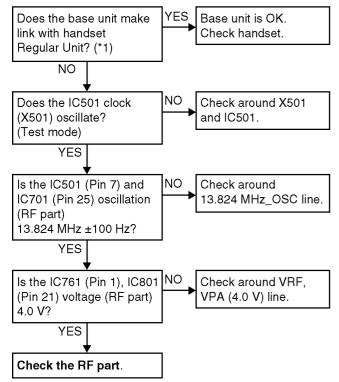


Note:

Flash Memory is IC601. DSP is IC501.

(*1) Refer to Finding out the Defective part (P.59).

HANDSET

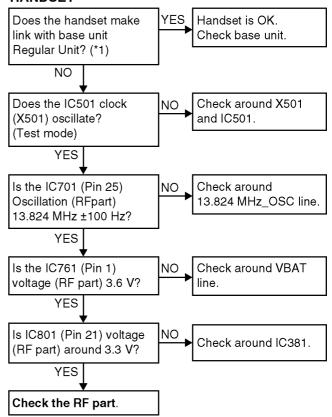

Cross Reference:

Check the RF part (P.59)


10.1.6. Check the RF part

10.1.6.1. Finding out the Defective part

- 1. Prepare Regular HS(*1) and Regular BU(*2).
- 2. a. Re-register regular HS (Normal mode) to base unit (to be checked).
 - If this operation fails in some ways, the base unit is defective. b. Re-register handset (to be checked) to regular BU (Normal mode).
 - If this operation fails in some ways, the handset is defective.

After All the Checkings or Repairing

1. Re-register the checked handset to the checked base unit, and Regular HS to Regular BU.

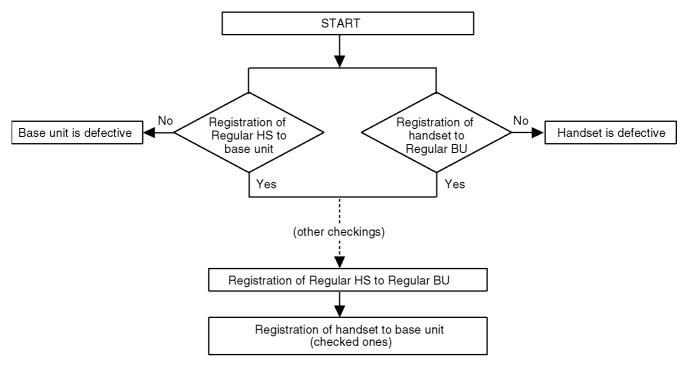

Note:

(*1) HS: Handset (*2) BU: Base Unit

10.1.6.1.1. Registering a Handset

Refer to **Registration** in **Troubleshooting** (P.39).

10.1.6.1.2. Deregistering a Handset

Refer to Registration in Troubleshooting (P.39).

10.1.6.1.3. Deregistering All Handsets by the Base Unit

Base unit:

- 1 Connect the AC adaptor cord while pressing [LOCATOR/INTERCOM], then IN USE indicator flashes.
- **2** Press and hold **[LOCATOR/INTERCOM]** again till IN USE indicator stops flashing.


Important:

When deregistering all handsets by the base unit, the registration information of all handsets in the base unit is erased.

However the registration information in each handset will still remain.

10.1.6.2. RF Check Flowchart

Each item (1 \sim 6) of RF Check Flowchart corresponds to **Check Table for RF part** (P.61). Please refer to the each item.

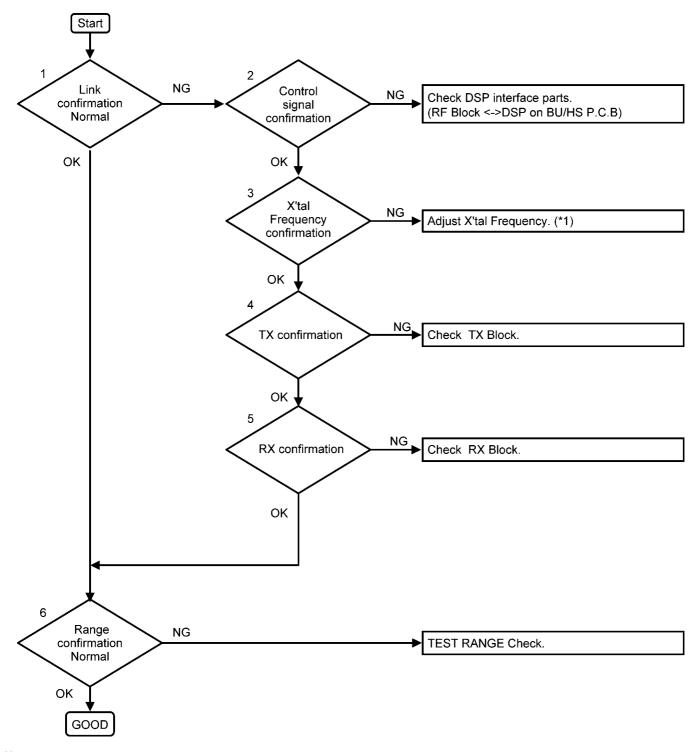

Note:

(*1) Refer to Things to Do after Replacing IC or X'tal (P.77).

10.1.6.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	HS (Handset) Check
1	Link Confirmation Normal	Register Regular HS to BU (to be checked).	Register HS (to be checked) to Regular BU.
	HS, BU Mode [Normal Mode]	Press [Talk] key of the Regular HS to establish link.	Press [Talk] key of the HS to establish link.
2	Control signal confirmation	Check DSP interface. (*2)	Check DSP interface. (*2)
	HS, BU Mode: [Test Burst Mode] (*1)		
3	X'tal Frequency confirmation (*7)	Check X'tal Frequency.	Check X'tal Frequency.
		(13.824000 MHz ±100 Hz)	(13.824000 MHz ±100 Hz)
	HS, BU Mode: [Adjustment] (*3)		
4	TX confirmation	Place the Regular HS about 15 cm away from the BU.	Place the HS about 15 cm away from the Regular BU.
	Regular HS, BU Mode:	Confirm "RXDATA" waveform of the Regu-	Confirm "RXDATA" waveform of the Regu-
	[Test Burst Mode.] (*4)	lar HS by Oscilloscope. (*5) (*8)	lar BU by Oscilloscope. (*6) (*8)
	HS, BU (to be checked) Mode:		
	[TX_CW Mode.] (*1)		
5	RX confirmation	Place the Regular HS about 15 cm away from the BU.	Place the HS about 15 cm away from the Regular BU.
	Regular HS, BU Mode:	2. Confirm "RXDATA" waveform of the BU by	Confirm "RXDATA" waveform of the HS by
	[TX_CW Mode.] (*1)	Oscilloscope. (*5) (*8)	Oscilloscope. (*6) (*8)
	HS, BU (to be checked) Mode:		
	[Test Burst Mode.] (*4)		
6	Range Confirmation Normal	Register Regular HS to BU (to be checked).	Register HS (to be checked) to Regular BU.
	HS, BU Mode: [Normal Mode]	Press [Talk] key of the Regular HS to establish link.	Press [Talk] key of the HS to establish link. Compare the range of the HS (being)
		Compare the range of the BU (being checked) with that of the Regular BU.	checked) with that of the Regular HS.

Note:

- (*1)(*3)(*4) Adjustment and Test Mode Flow Chart (P.42)
- (*2) RF-DSP Interface Signal Wave Form (P.63)
- (*5) Base Unit Reference Drawing (P.78)
- (*6) Handset Reference Drawing (P.79)
- $(\ensuremath{^*7})$ Things to Do after Replacing IC or X'tal (P.77)
- (*8) Test Burst Mode and TX-CW Mode when TX confirmation and RX confirmation (P.65)

10.1.6.4. TEST RANGE Check

Circuit block which range is defective can be found by the following check.

Item	BU (Base Unit) Check	HS (Handset) Check
Range Confirmation TX TEST	Register Regular HS to BU (to be checked).	Register HS (to be checked) to Regular BU.
(TX Power check)	Set BU to "Test Link mode".	Set Regular BU to "Test Link mode".
	Set Regular HS to "Test Link mode".	3. Set HS to "Test Link mode".
HS, BU Mode:		
[Test Link Mode] (*1)	*Set TX Power and RX Sensitivity of the BU and the	*Set TX Power and RX Sensitivity of the HS and the
	Regular HS by CHART1.	Regular BU by CHART1.
	* At distance of about 5 m between HS and BU,	* At distance of about 5 m between HS and BU,
	Link OK = TX Power of the BU is OK.	Link OK = TX Power of the HS is OK.
	No Link = TX Power of the BU is NG.	No Link = TX Power of the HS is NG.
Range Confirmation RX TEST	Register Regular HS to BU (to be checked).	Register HS (to be checked) to Regular BU.
(RX sensitivity check)	2. Set BU to "Test Link mode".	Set Regular BU to "Test Link mode".
	Set Regular HS to "Test Link mode".	3. Set HS to "Test Link mode".
HS, BU Mode:		
[Test Link Mode] (*1)	*Set TX Power and RX Sensitivity of the BU and Regular	* Set TX Power and RX Sensitivity of Checking_HS and
	HS by CHART1.	Regular_BU by CHART1.
	* At distance of about 5 m between HS and BU, Link OK= RX Sensitivity of the BU is OK. No Link = RX Sensitivity of the BU is NG.	* At distance of about 5 m between HS and BU, Link OK= RX Sensitivity of the HS is OK. No Link = RX Sensitivity of the HS is NG

CHART1: Setting of TX Power and RX Sensitivity in Range Confirmation TX TEST, RX TEST

	BU (to be checked)		Regular_HS	
	TX Power	RX Sens.	TX Power	RX Sens.
BU (Base Unit) TX Power Check	High	High	High	Low
BU (Base Unit) RX Sensitivity Check	High	High	Low	High


	HS (to be checked)		Regular_BU	
	TX Power	RX Sens.	TX Power	RX Sens.
HS (Handset) TX Power Check	High	High	High	Low
HS (Handset) RX Sensitivity Check	High	High	Low	High

Note:


(*1) Adjustment and Test Mode Flow Chart (P.42)

10.1.6.5. RF-DSP Interface Signal Wave Form


Test Burst Mode

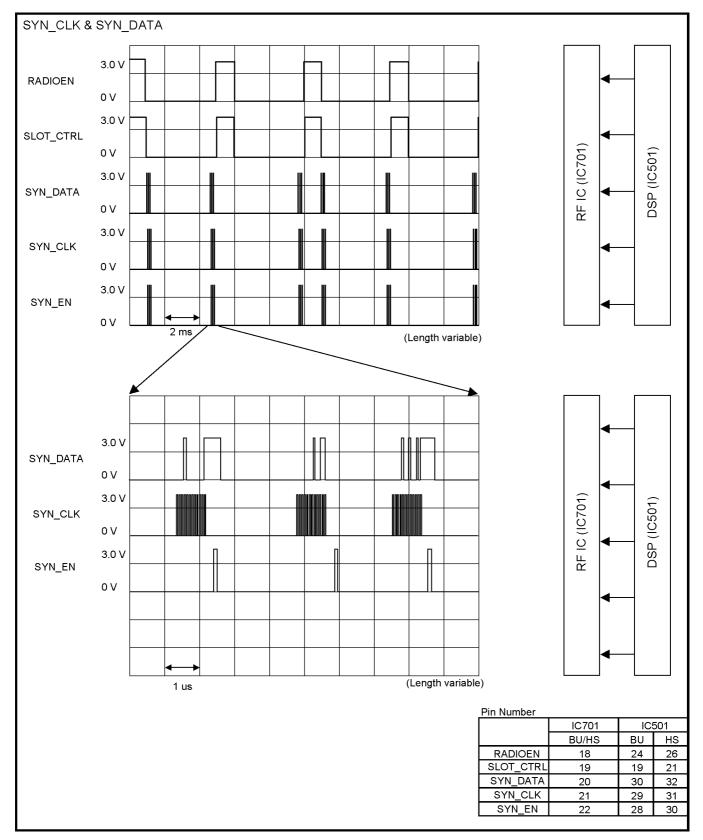


Test Burst Mode

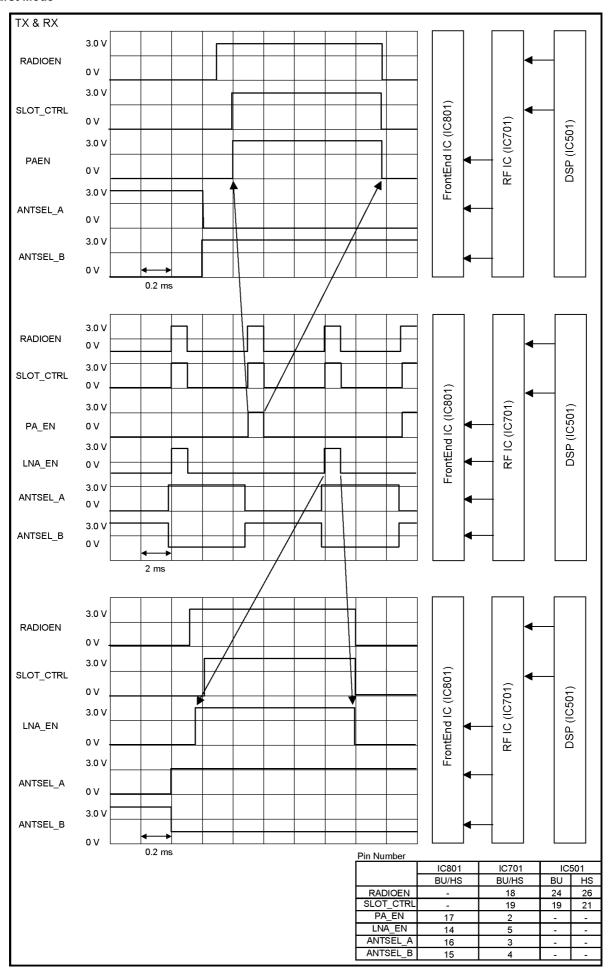

Test Burst Mode and TX-CW Mode when TX confirmation and RX confirmation

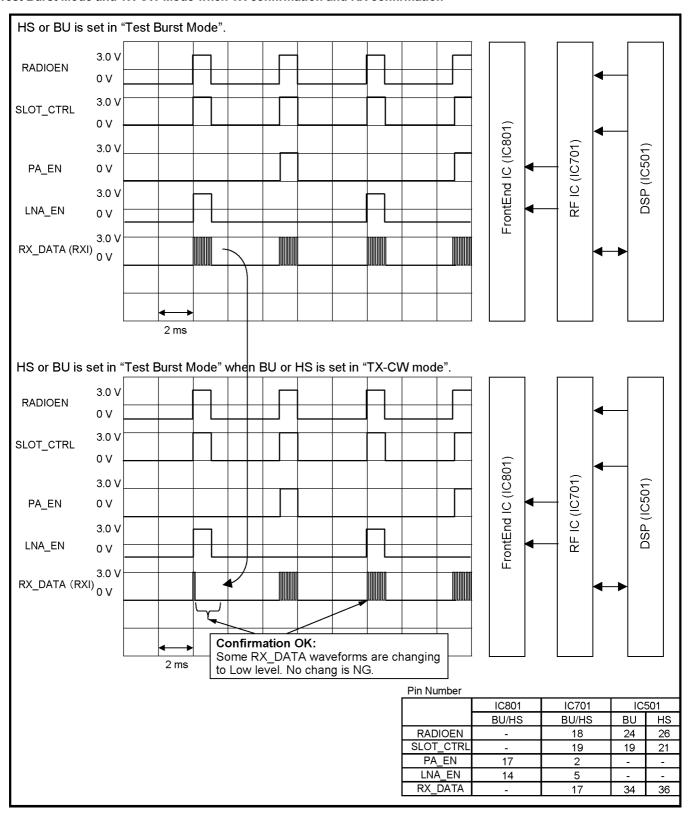


10.1.7. Check Handset Transmission

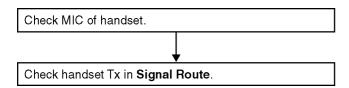

Cross Reference:

Signal Route (P.30)

10.1.8. Check Handset Reception

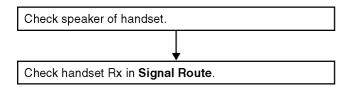

Cross Reference:


Signal Route (P.30)

Note:

When checking the RF part, Refer to **Check the RF part** (P.59).

10.1.9. Check Caller ID

BASE UNIT

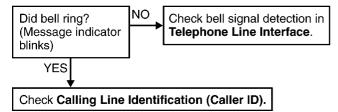

Cross Reference:

Telephone Line Interface (P.17)

Calling Line Identification (Caller ID) (P.20)

Note:

- Make sure the format of the Caller ID service of the Telephone company that the customer subscribes to.
- It is also recommended to confirm that the customer is really a subscriber of the service.

10.2. How to Replace the Flat Package IC

10.2.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of 700°F ± 20°F (370°C ± 10°C)

Note: We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

Flux

Recommended Flux: Specific Gravity \rightarrow 0.82. Type \rightarrow RMA (lower residue, non-cleaning type)


Note: See About Lead Free Solder (PbF: Pb free) (P.4).

10.2.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

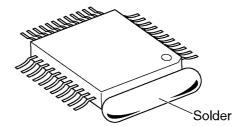

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

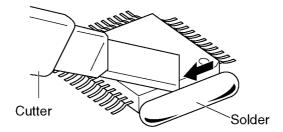

3. While the solder melts, remove it together with the IC pins.

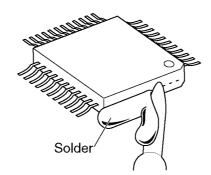

When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.


10.2.3. How to Install the IC

1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.




*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.

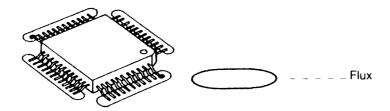

3. Solder the pins, sliding the soldering iron in the direction of the arrow.

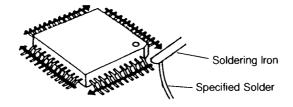

10.2.4. How to Remove a Solder Bridge

- 1. Lightly resolder the bridged portion.
- 2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.



10.3. How to Replace the LLP (Leadless Leadframe Package) IC

10.3.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of 700°F ± 20°F (370°C ± 10°C)

Note:

We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.


Hot Air Desoldering Tool
 Temperature: 608°F ± 68°F (320°C ± 20°C)

10.3.2. Caution

- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

10.3.3. How to Remove the IC


1. Heat the IC with a hot air desoldering tool through the P.C.Board.

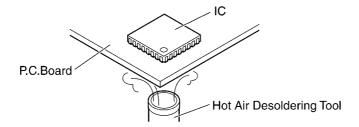


2. Pick up the IC with tweezers, etc. when the solder is melted completely.

Note:

• Be careful not to touch the peripheral parts with tweezers, etc. They are unstable.

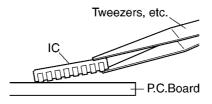


When it is hard to melt the solder completely, heat it with a hot air desoldering tool through the IC besides through the P.C.Board.

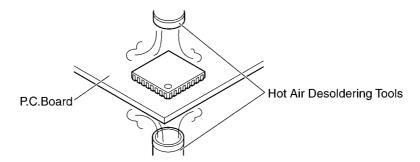


3. After removing the IC, clean the P.C.Board of residual solder.

10.3.4. How to Install the IC


1. Place the solder a little on the land where the radiation GND pad on IC bottom is to be attached.

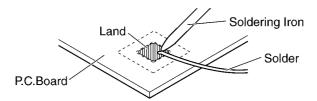

- Place the solder a little on the land where IC pins are to be attached, then place the IC.Note:
 - When placing the IC, the positioning should be done very carefully.

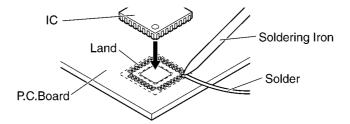


- 3. Heat the IC with a hot air desoldering tool through the P.C.Board until the solder on IC bottom is melted. **Note:**
 - Be sure to place it precisely, controlling the air volume of the hot air desoldering tool.

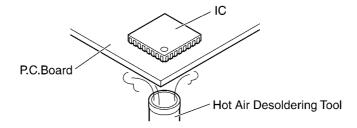

4. After soldering, confirm there are no short and open circuits with visual inspection.

10.3.5. How to Remove a Solder Bridge

When a Solder Bridge is found after soldering the bottom of the IC, remove it with a soldering iron.

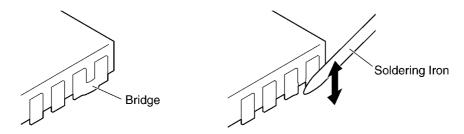


11 Disassembly and Assembly Instructions


11.1. Disassembly Instructions

11.1.1. Base Unit

1 Remove the 3 screws to remove the cabinet cover.

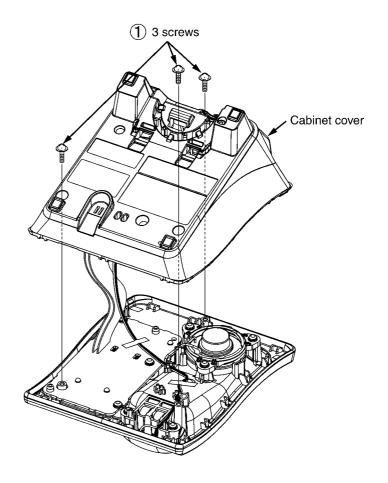


- Remove the 2 screws to remove the jack holder.
- (3) Remove the 2 parallel wires and solders to remove the main P. C. board.
- (4) Remove the solders to remove the antenna P. C. boards.

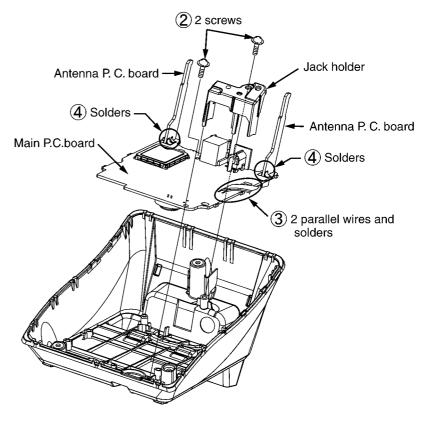

KX-TG6051BXM/KX-TGA601BXM


(5) Remove the 3 screws and the tapes to remove the operational P. C. board.

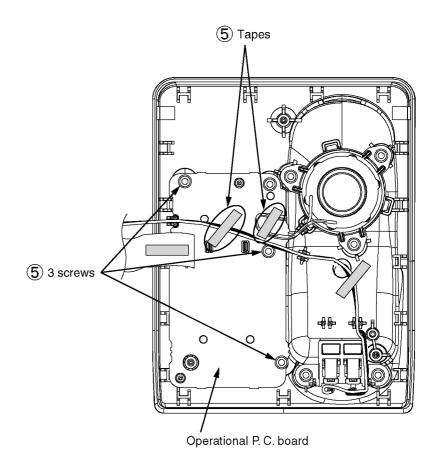


11.1.2. Handset


1 Remove the 2 screws.


② Insert a JIG (PQDJ10006Y) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.

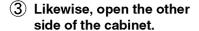

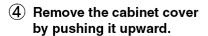


- 5 Remove the tape and solders.
- 6 Remove the 2 screws to remove the 2 charge terminals.
- (7) Remove the screw to remove the main P. C. board.

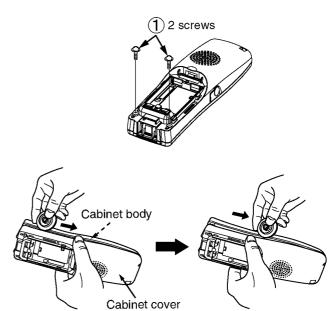

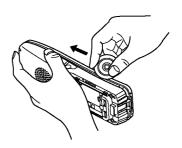




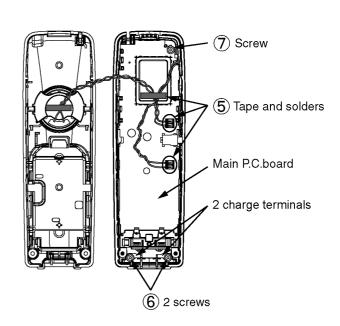


11.2. How to Replace the Handset LCD



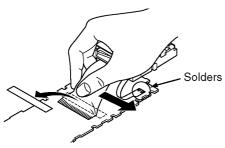


Remove the solders of the FPC (Flexible Printed Circuit), then remove the tape and peel off the FFC (Flexible Flat Cable) from the LCD, in the direction of the arrow. Take care to ensure that the foil on the P.C. board is not damaged.



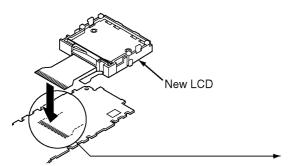


Fit the heatseal of a new LCD.

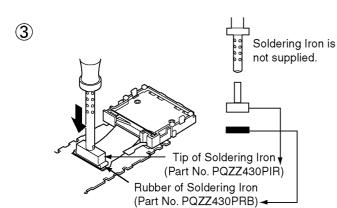


Heatweld with the tip of the soldering iron about 5 to 8 seconds (in case of 60W soldering iron).



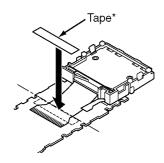


Stick the tape over the heatseal. Use the tape removed in step 1.

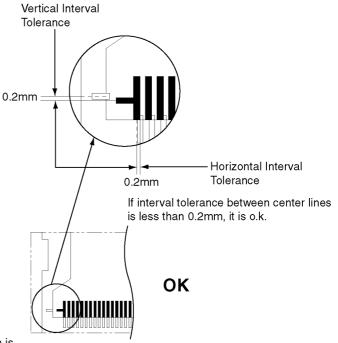




NG (Inclined)

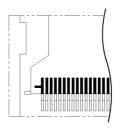

NG


(Vertical interval tolerance is more than 0.2mm.)

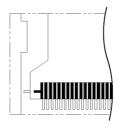

NG

(Horizontal interval tolerance is more than 0.2mm.)



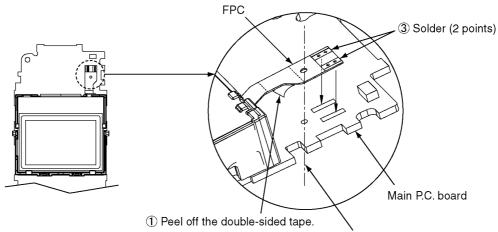

Solder the FPC to the P.C. board.

- * When soldering, don't give the load to the FPC.
- ② Match the each hole on the FPC and on the P.C. board, then stick the FPC on the P.C. board.


11.3. Antenna Soldering Work

- Preparation
 PbF (: Pb free) Solder
 - Soldering Iron

Tip Temperature of 700°F ± 20°F (370°C ± 10°C)

Note: We recommend a 30 to 40 Watt soldering iron.

Solder the antenna P.C. board as below.

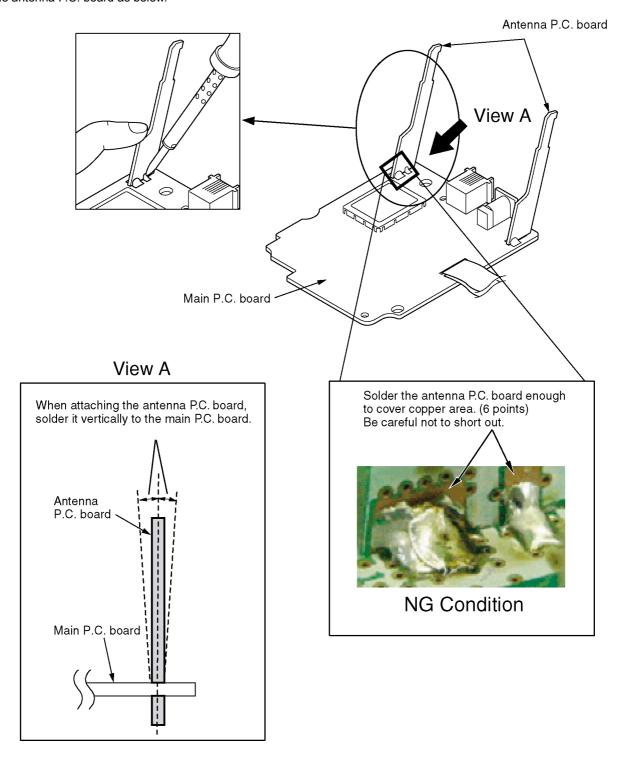

12 Measurements and Adjustments

12.1. Things to Do after Replacing IC or X'tal

12.1.1. Preparation

Equipment: Frequency counter Check Point for measurement: BCK

Checking tolerance: 13.824 MHz ± 100 Hz (Base Unit)/13.824 MHz ± 100 Hz (Handset)

12.1.2. Check and Adjust Frequency (Base Unit)

- 1. Set up base unit in TEST mode.
- 2. Press following keys in order to Adjust Crystal mode. [LOCATOR], [LOCATOR], [LOCATOR], [Λ], [▶]. Check BCK frequency.
- 3. If the BCK frequency is out of the checking tolerance (± 100 Hz), adjust to Adjustment tolelance (± 30 Hz) by pressing [A] or [V] key.

Adjustment Tolerance: 13.824 MHz ± 30 Hz

- 4. Press [LOCATOR] key to write the new frequency factor in Memory.
- 5. Turn the power off. Then this value is available.

Cross Reference:

Adjustment Mode for Base Unit (P.46)

12.1.3. Check and Adjust Frequency (Handset)

- 1. Set DC power supply to 3.9 V.
- 2. Set up handset in TEST mode (Adjustment flow).
- 3. Press [1] key to Adjust Crystal mode ("Clock Adj." is displayed on LCD). Check BCK frequency.
- 4. If the BCK frequency is out of the checking tolerance (± 100 Hz), adjust to Adjustment tolelance (± 30 Hz) by pressing [▲] or [▼] key.

Adjustment Tolerance: 13.824 MHz ± 30 Hz

- 5. Press [TALK] key to write the new frequency factor in EEPROM.
- 6. Turn the power off. Then this value is available.

Cross Reference:

Adjustment Mode for Handset (P.51)

12.1.4. Adjust Battery Low Detector Voltage (Handset)

After handset's DSP (IC501) or EEPROM (IC541) replacement, Re-writing Battery Low voltage to EEPROM is required. With following handset Adjustment Flow, adjust DC power supply and DC voltmeter by the procedure below.

- 1. Set DC power supply to 3.9 V.
- 2. Set up handset in TEST mode (Adjustment flow).
- 3. Press [1] key and [OFF] key to Adjust Batt Low mode. ("Bat Adj." is displayed on LCD)
- 4. Change the voltage of the DC power supply to 3.51 V accurately. Check the voltage at P.C. board pads because some voltage drops occur due to the usage of long or thin cables.
- 5. Press [TALK] key twice to write voltage value in EEPROM.
- 6. Press [TALK] key twice to write charge value 1 in EEPROM.
- 7. Change the voltage of the DC power supply to 4.50 V accurately.
- 8. Press [TALK] key twice to write charge value 2 in EEPROM.
- 9. Turn the power off. Then this value is available.

Note:


Refer to Handset Reference Drawing (P.79) for connection of DC power supply and voltmeter.

Cross Reference:

Adjustment Mode for Handset (P.51)

12.2. Base Unit Reference Drawing

When connecting the simulator equipment for checking, please refer to below.

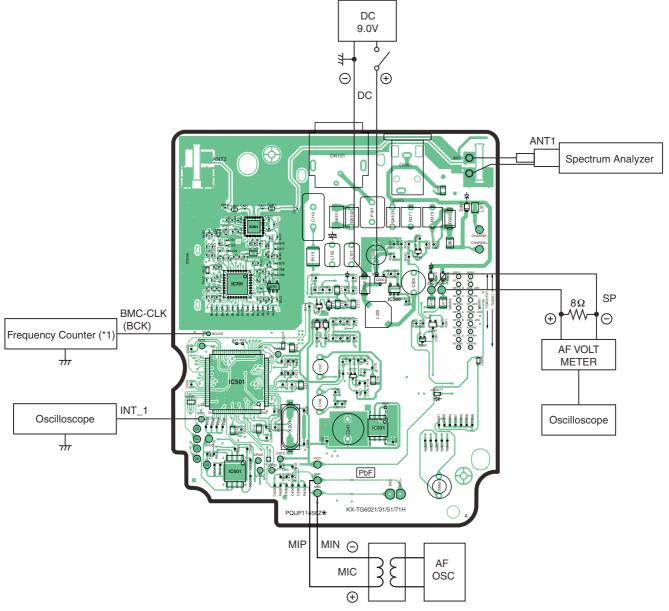


Note:

(*1) is referred to No.3 of Check Table for RF part (P.61).

12.3. Handset Reference Drawing

When connecting the simulator equipment for checking, please refer to below.

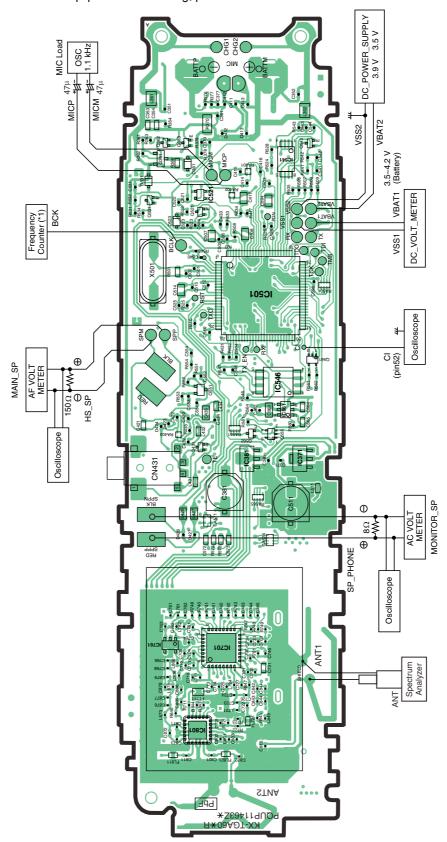

Note:

(*1) is referred to No.3 of Check Table for RF part (P.61).

12.4. Frequency Table

Channel	Ch. (hex)	TX/RX Frequency (MHz)	Channel	Ch. (hex)	TX/RX Frequency (MHz)	Channel	Ch. (hex)	TX/RX Frequency (MHz)
1	01	5759.702	33	21	5788.242	65	41	5816.782
2	02	5760.594	34	22	5789.134	66	42	5817.674
3	03	5761.486	35	23	5790.026	67	43	5818.566
4	04	5762.378	36	24	5790.918	68	44	5819.458
5	05	5763.270	37	25	5791.810	69	45	5820.350
6	06	5764.162	38	26	5792.702	70	46	5821.241
7	07	5765.054	39	27	5793.593	71	47	5822.133
8	08	5765.945	40	28	5794.485	72	48	5823.025
9	09	5766.837	41	29	5795.377	73	49	5823.917
10	0A	5767.729	42	2A	5796.269	74	4A	5824.809
11	0B	5768.621	43	2B	5797.161	75	4B	5825.701
12	0C	5769.513	44	2C	5798.053	76	4C	5826.593
13	0D	5770.405	45	2D	5798.945	77	4D	5827.485
14	0E	5771.297	46	2E	5799.837	78	4E	5828.376
15	0F	5772.189	47	2F	5800.728	79	4F	5829.268
16	10	5773.080	48	30	5801.620	80	50	5830.160
17	11	5773.972	49	31	5802.512	81	51	5831.052
18	12	5774.864	50	32	5803.404	82	52	5831.944
19	13	5775.756	51	33	5804.296	83	53	5832.836
20	14	5776.648	52	34	5805.188	84	54	5833.728
21	15	5777.540	53	35	5806.080	85	55	5834.620
22	16	5778.432	54	36	5806.972	86	56	5835.511
23	17	5779.324	55	37	5807.863	87	57	5836.403
24	18	5780.215	56	38	5808.755	88	58	5837.295
25	19	5781.107	57	39	5809.647	89	59	5838.187
26	1A	5781.999	58	3A	5810.539			
27	1B	5782.891	59	3B	5811.431			
28	1C	5783.783	60	3C	5812.323			
29	1D	5784.675	61	3D	5813.215			
30	1E	5785.567	62	3E	5814.107			
31	1F	5786.459	63	3F	5814.998			
32	20	5787.350	64	40	5815.890			

13 Schematic Diagram

13.1. For Schematic Diagram

13.1.1. Base Unit (Schematic Diagram (Base Unit_Main))

13.1.1.1. Acoustic Testing Mode

Press "STOP", "▶▶" and "^" simultaneously, and insert the plug of AC adaptor.

• No beep sound.

It is easier to measure the transmit level with acoustic testing mode.

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.


2. The schematic diagrams may be modified at any time with the development of new technology.

13.1.2. Handset (Schematic Diagram (Handset_Main))


Notes:

- 1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
- 2. The schematic diagrams may be modified at any time with the development of new technology.

13.2. Schematic Diagram (Base Unit_Main)

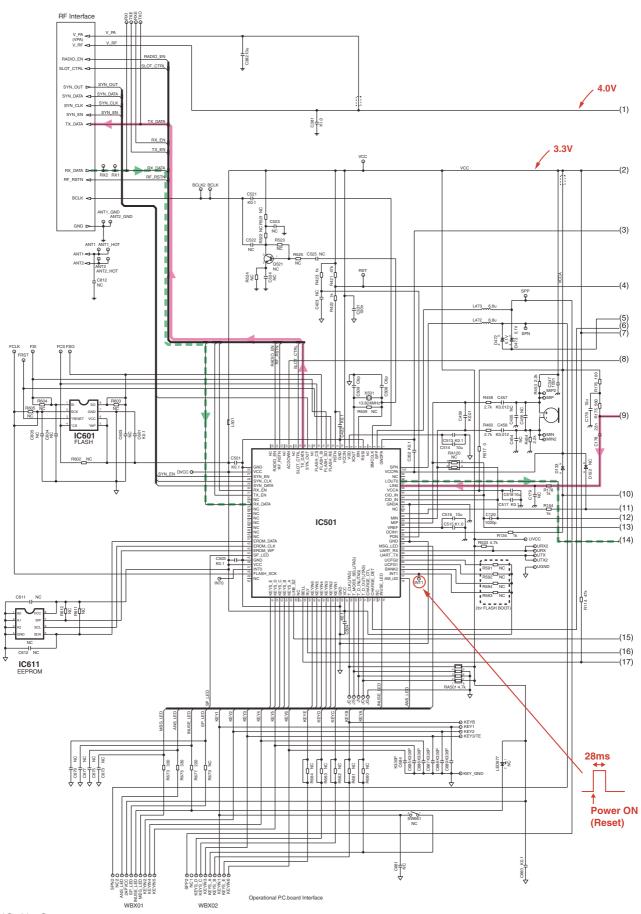


NC: No Components

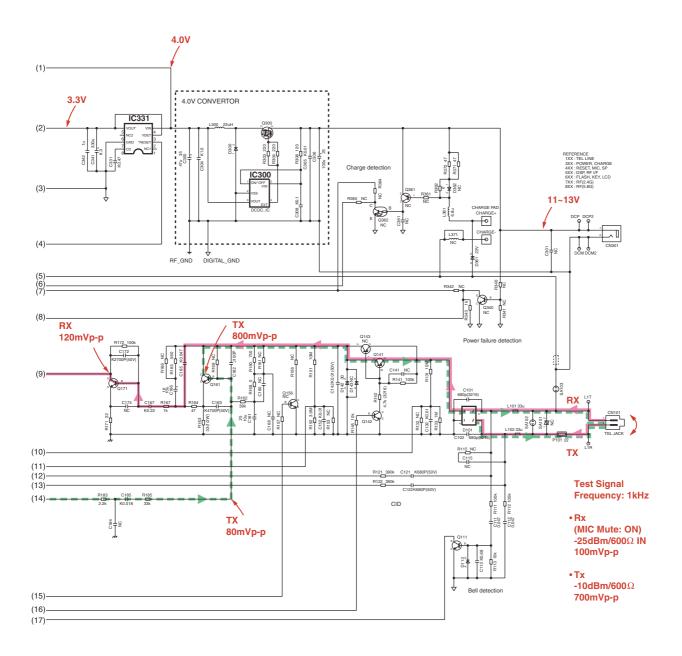


NC: No Components KX-TG6051 SCHEMATIC DIAGRAM (Base Unit_Main)

13.3. Schematic Diagram (Base Unit_RF Part)

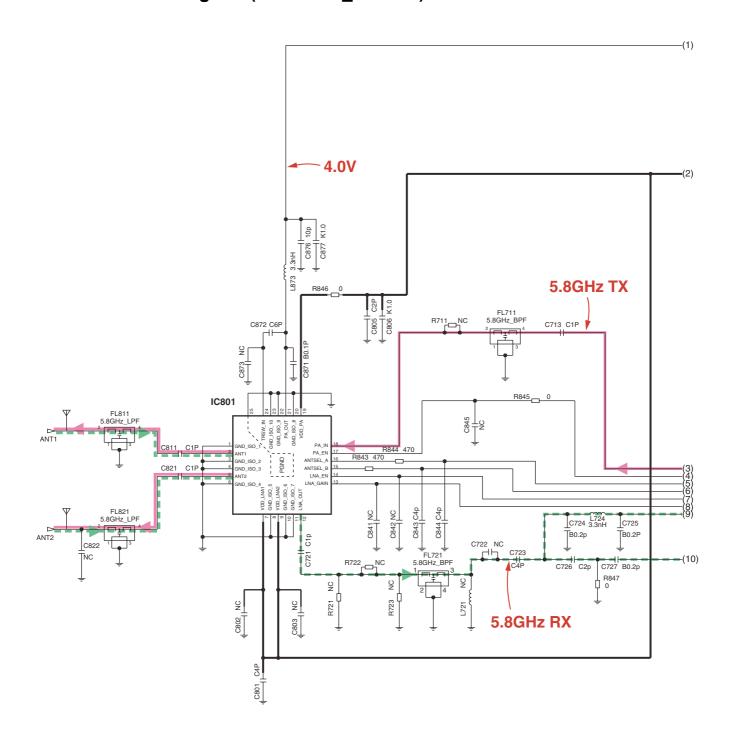


NC: No Components

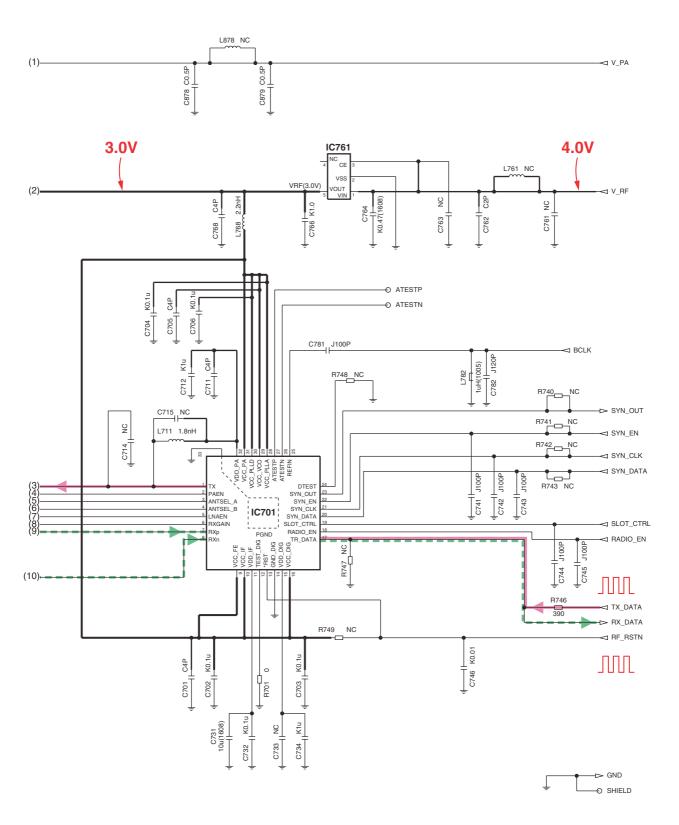

NC: No Components KX-TG6051 SCHEMATIC DIAGRAM (Base Unit_RF Part)

13.4. Schematic Diagram (Base Unit_Operation)

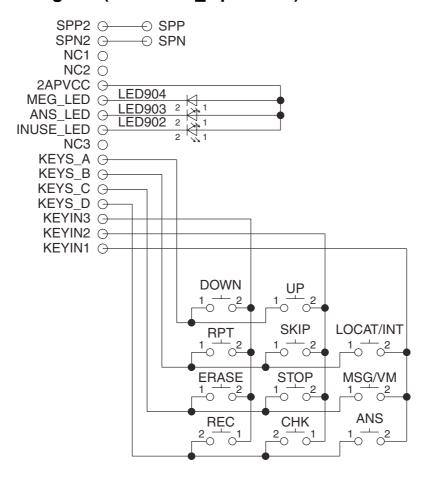


KX-TG6051 SCHEMATIC DIAGRAM (Base Unit_Operation)


KX-TG6051BXM/KX-TGA601BXM

Memo

13.5. Schematic Diagram (Handset_Main)

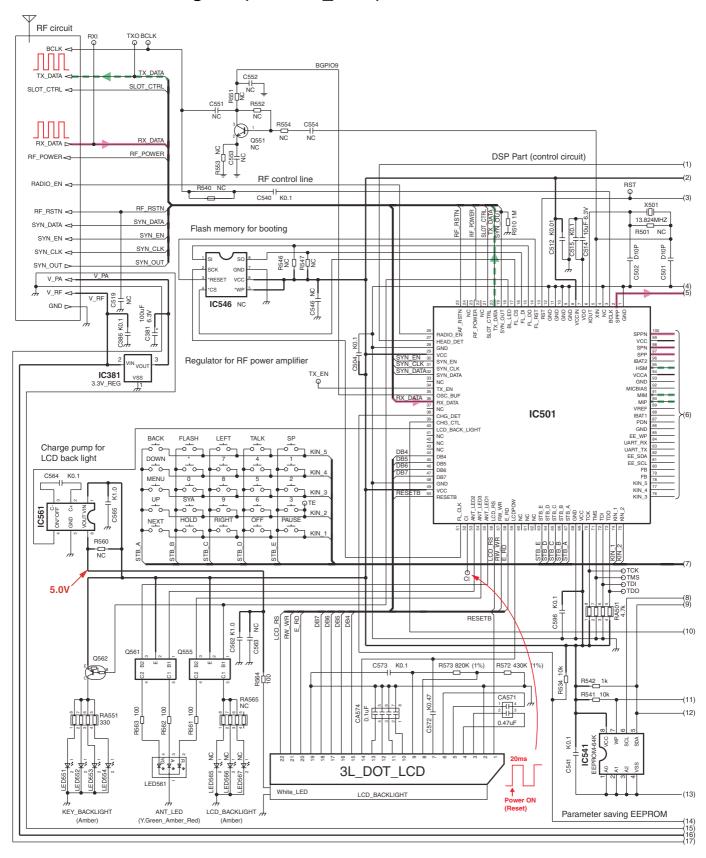


NC: No Components

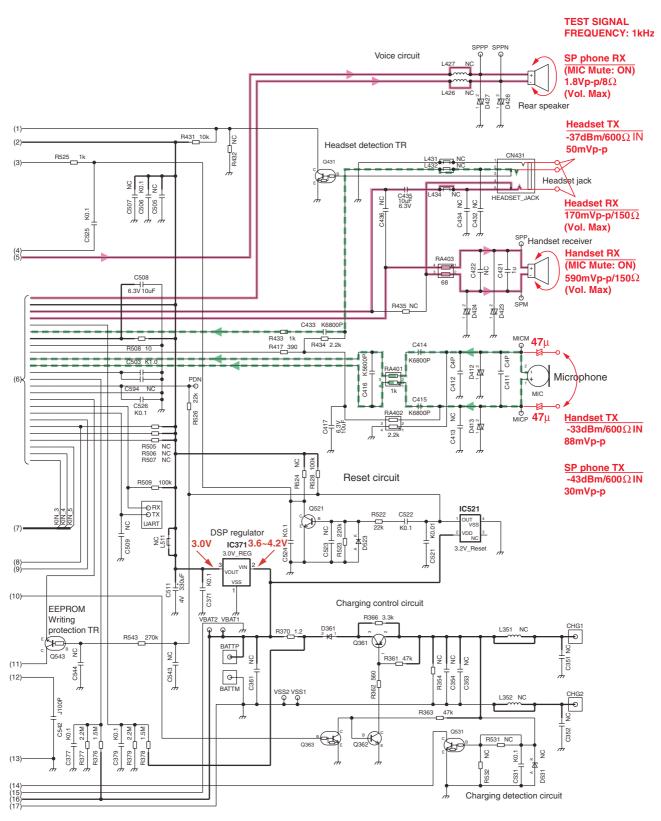


NC: No Components KX-TGA601 SCHEMATIC DIAGRAM (Handset_Main)

13.6. Schematic Diagram (Handset_RF Part)

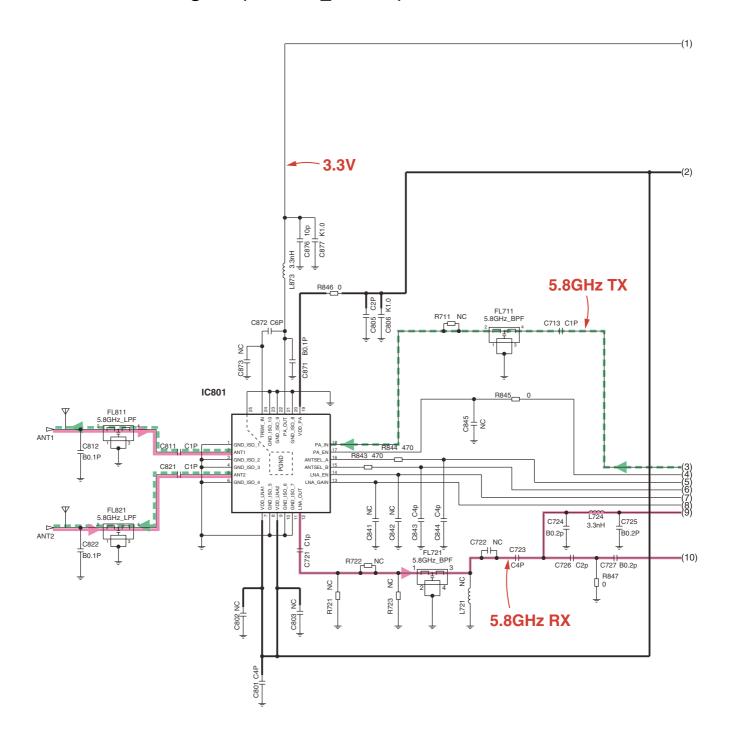

NC: No Components

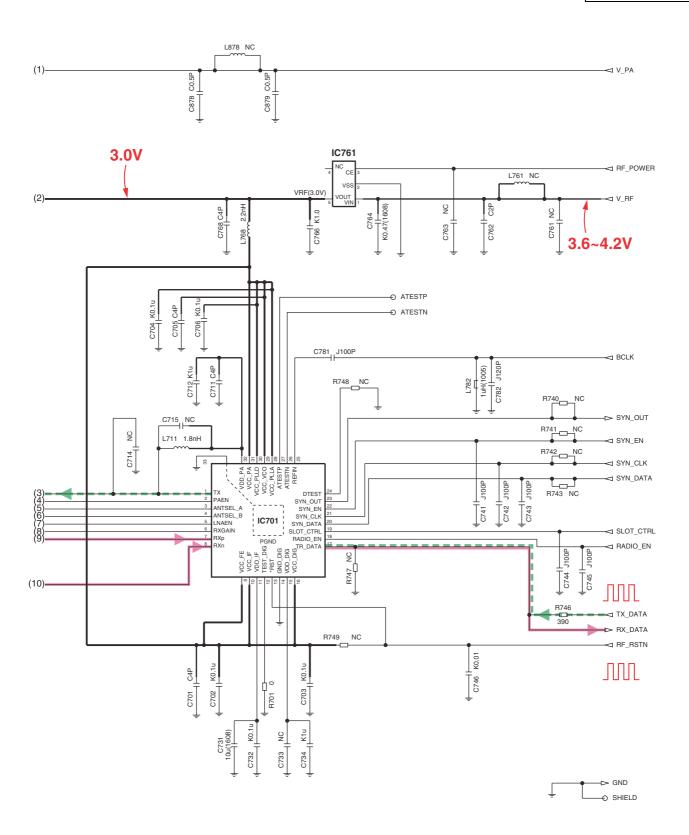

NC: No Components KX-TGA601 SCHEMATIC DIAGRAM (Handset_RF Part)


KX-TG6051BXM/KX-TGA601BXM

Memo

14 Printed Circuit Board


14.1. Circuit Board (Base Unit_Main)

14.1.1. Component View

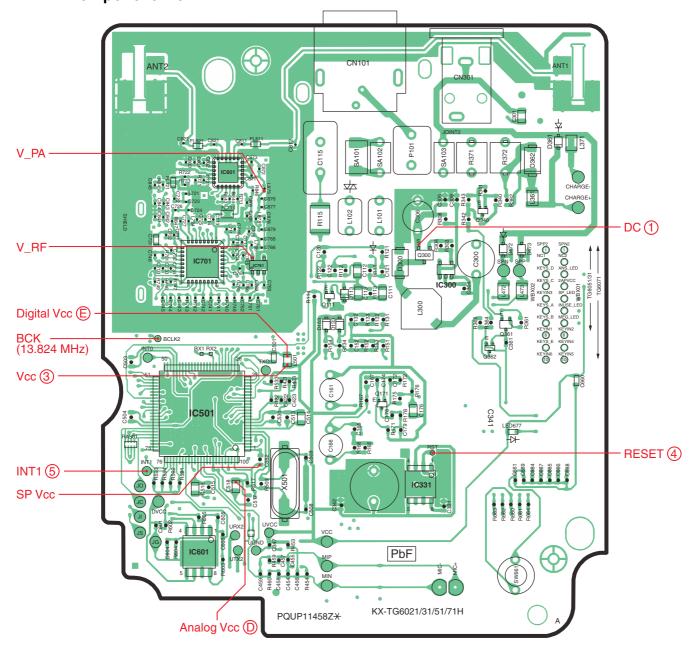


KX-TG6051 CIRCUIT BOARD (Base Unit_Main (Component View))

14.1.2. Flow Solder Side View

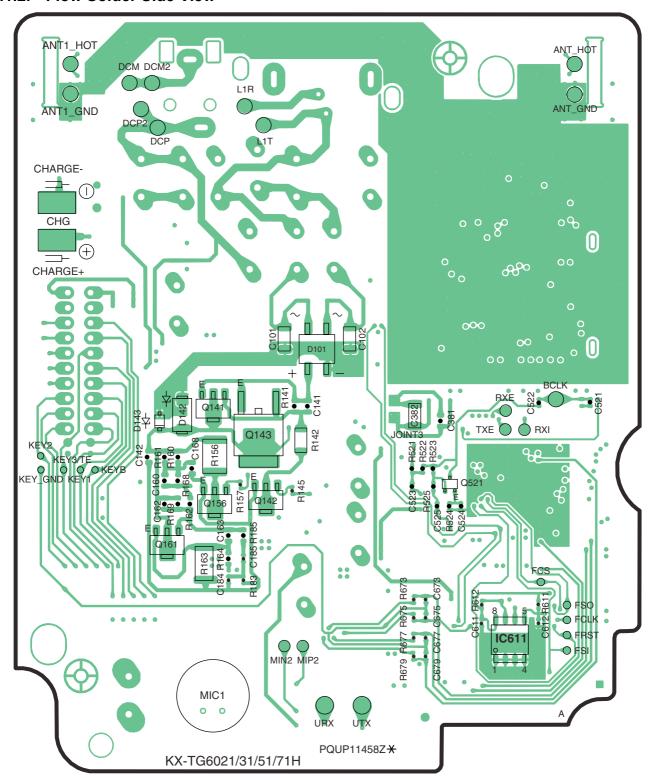

KX-TG6051 CIRCUIT BOARD (Base Unit_Main (Flow Solder Side View))

14.2. Circuit Board (Base Unit_RF Part)

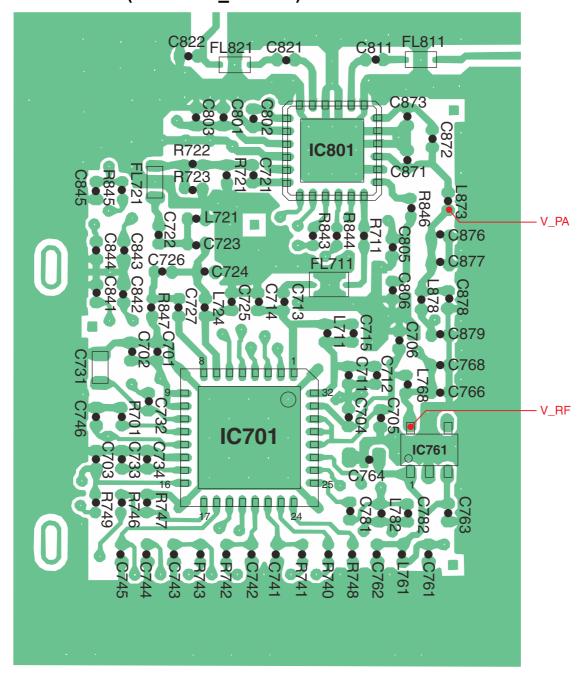


KX-TG6051 CIRCUIT BOARD (Base Unit_RF Part (Component View))

KX-TG6051BXM/KX-TGA601BXM

Memo


14.3. Circuit Board (Base Unit_Operation)

14.3.1. Component View

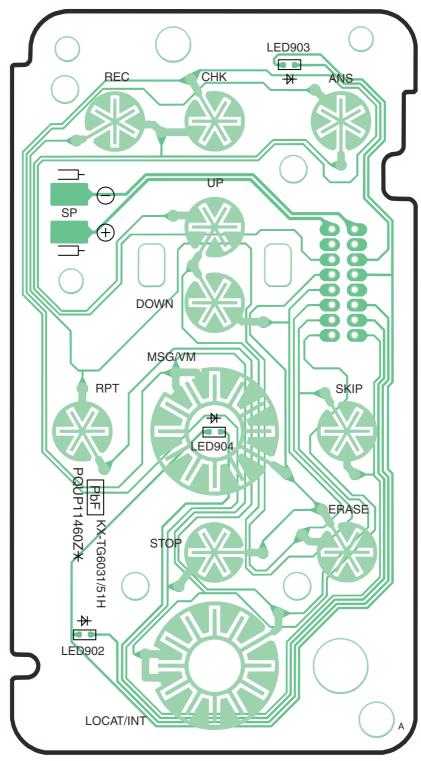


KX-TG6051 CIRCUIT BOARD (Base Unit_Operation (Component View))

14.3.2. Flow Solder Side View

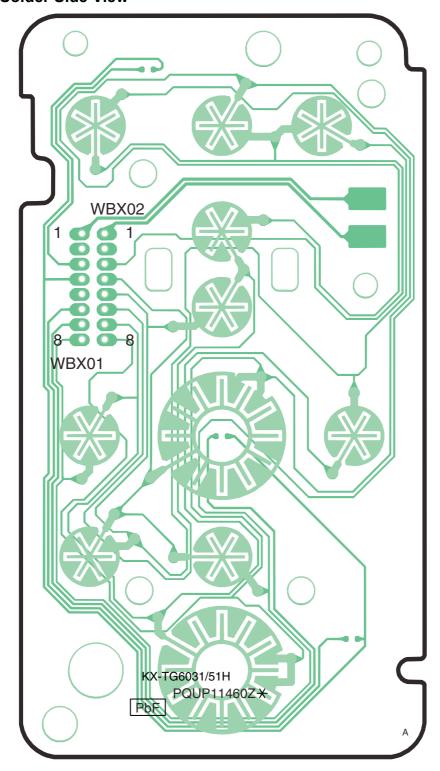

KX-TG6051 CIRCUIT BOARD (Base Unit_Operation (Flow Solder Side View))

14.4. Circuit Board (Base Unit_Antenna)

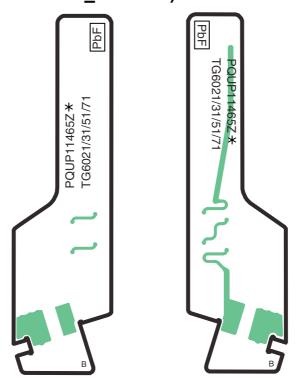


KX-TG6051 CIRCUIT BOARD (Base Unit_Antenna)

KX-TG6051BXM/KX-TGA601BXM

Memo


14.5. Circuit Board (Handset_Main)

14.5.1. Component View

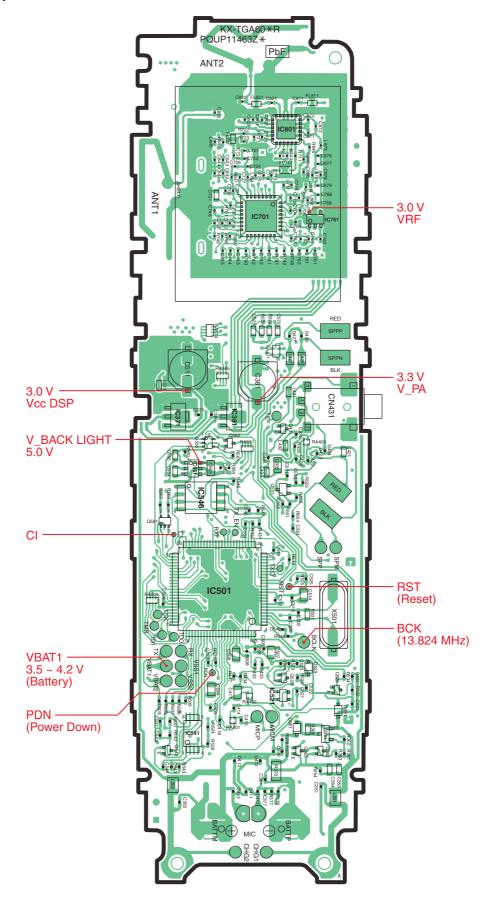


KX-TGA601 CIRCUIT BOARD (Handset_Main (Component View))

14.5.2. Flow Solder Side View

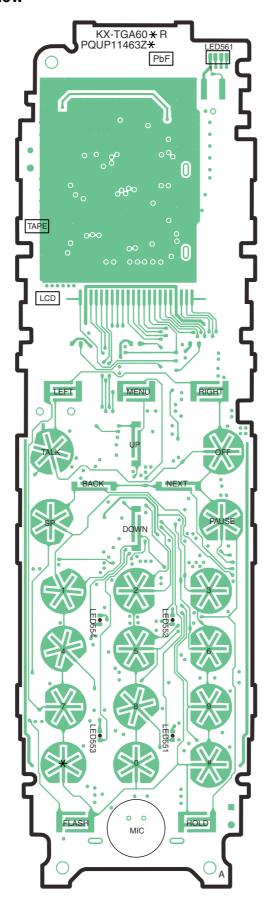

KX-TGA601 CIRCUIT BOARD (Handset_Main (Flow Solder Side View))

14.6. Circuit Board (Handset_RF Part)

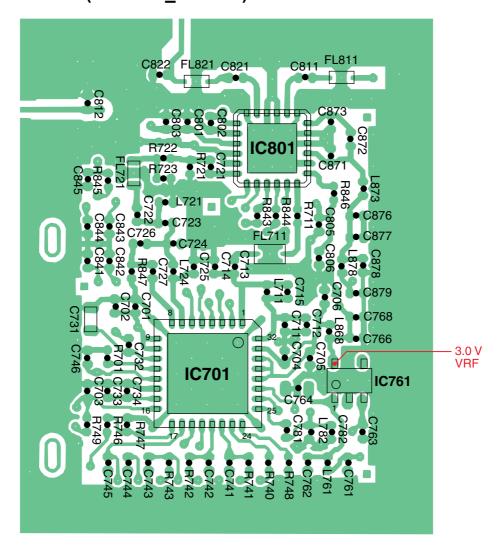

KX-TGA601 CIRCUIT BOARD (Handset_RF Part (Component View))

15 Appendix Information of Schematic Diagram

15.1. CPU Data (Base Unit)

15.1.1. IC501

PIN	Description	I/O	High	High_Z	Low
1	GNDPA	GND			
2	SPP	A.O			
3	BCLK	A.O			
4	TXMOD	A.O			
5	NC	A.I			
6	XIN	A.I			
7	XOUT	A.O		-	
8	VDD	D.O			
9	VCCIN	VCC			
10	GND	GND		-	GND
11	RESET	D.I	Normal		Reset
12	FLASH_RST	*	High	Middle	Low
13	FLASH_SO	*	High	Middle	Low
14	FLASH_SI	*	High	Middle	Low
15	FLASH_CS	*	High	Middle	Low
16	NC	D.O			
17	SYN_OUT	D.I	High	-	Low
18	TX_DATA	D.O	High		Low
19	SLOT_CTRL	D.O	High		Low
20	NC	D.O		-	
21	AC DOWN DET	D.I	High		Low
22	NC	D.O			
23	RF RST	D.O	Normal		WakeUp
24	RADIO EN	D.O	Active		Not
25	NC	D.O	Active		INOL
26	GND	GND			GND
27	VCC	VCC	VCC		GND
				-	A - 45
28	SYN_EN	D.O	Not		Active
29	SYN_CLK	D.O	High	-	Low
30	SYN_DATA	D.O	High	-	Low
31	RXEN	D.O	Active		Off
32	TXEN	D.O	Active		Off
33	NC	D.O	I	-	
34	RX_DATA	D.I	High	-	Low
35	NC	D.O	-		
36	NC	D.O	-		
37	NC	D.O			
38	NC	D.O	-	-	
39	NC	D.O		-	
40	NC	D.O			
41	NC	D.O			
42	NC	D.O			
43	NC	D.O			
44	NC	D.O			
45	SP_LED	D.O			
46	GND	GND			GND
47	VCC	VCC	VCC		
48	INTO (NC)	D.I.O			
49	FLASH SCK	*	High	Middle	Low
50	NC	D.O			
51	KEYS_E	D.O			
52	KEYS_D	D.O	Active	Not	
	_				
53	KEYS_C	D.O	Active	Not	
54	KEYS_B	D.O	Active	Not	
55	KEYS_A	D.O	Active	Not	
56	LINE_SZ	D.O			
57	NC	D.O		-	
58	BELL	D.I	OFF	-	ON
59	RLY	D.O	Off Hook		On Hook

PIN	Description	I/O	High	High_Z	Low
60	KEYIN6	D.I	Non		Key In
61	KEYIN5	D.I	Non		Key In
62	KEYIN4	D.I	Non		Key In
63	KEYIN3	D.I	Non		Key In
64	KEYIN2	D.I	Non		Key In
65	KEYIN1	D.I	Non		Key In
66	GND	GND			GND
67	VCC	VCC	VCC		
68	TCK	D.O			
69	TMS	D.I			
70	TDI	D.O			
71	TD0	D.O			
72	NC	D.O			
73	CHARGE_DET	D.I			
74	NC	D.O			
75	INUSE_LED	D.O		Off	On
76	ANS_LED	D.O		Off	On
77	INT1	D.O			
78	BANK2	D.O			
79	UCFG1	D.O			
80	UCFG2	D.O			
81	UART_TX	D.O	High		Low
82	UART_RX	D.I	High		Low
83	MSG_LED	D.O		Off	On
84	GND	GND			GND
85	PDN	A.I			
86	DCIN1	A.I			
87	VREF	A.O			
88	MIP	A.I			
89	MIN	A.I			
90	DCIN2	A.I			
91	NC	A.O			
92	GNDA	GND			
93	CID_IN P	A.I			
94	CID_IN N	A.I			-
95	VCCA	VCC			
96	LIN0	A.I			
97	LOUT0	A.O			
98	NC	A.O			
99	VCCA	VCC			
100	SPN	A.O			

Note:

• The mark "*" in the I/O column means the port is controlled by the firmware.

15.2. CPU Data (Handset)


15.2.1. IC501

GNDPA	PIN	Description	I/O	High	High_Z	Low
3 BCLK	1	·	GND			GND
4 NC	2	SPOUTP	A.O			
4 NC	3	BCLK	A.O			
6 XOUT	4		A.I			
6 XOUT A.O -	5					
7						
8 VCCIN VCC VCC GND 9 GND GND GNI 10 GND GND GNI 11 GND A.I GNI 11 GND A.O 13 RESET D.I Normal Norm 14 (FLASH_RESET) D.O Norm 15 (FLASH_SO) D.O Norm 16 (FLASH_CS) D.O Norm 16 (FLASH_CS) D.O Norm 17 (FLASH_CS) D.O Norm 18 B.L.ED D.O Off Or Or 19 SYN_OUT D.I High Low Norm 21			-			
9 GND						
10 GND						
11 GND		-				
12 GND						
13 RESET D.I Normal Res 14 (FLASH_RESET) D.O Norm 15 (FLASH_SO) D.O D.O Norm 16 (FLASH_SI) D.O High Low 17 (FLASH_CS) D.O Norm 18 BL ED D.O Off Or 19 SYN_OUT D.I High Low 20 TX_DATA D.O High Low 21 SLOT_CTRL D.O High Low 22 NC D.O Norm 23 RF_POWER D.O High Low 25 RF_RESET D.O On Off 26 RADIO_EN D.O On Off 27 HEADSET_DET D.I Headset Norm 29 VCC VCC VCC VCC Off 32 SYN_DATA D.O High Low 33 SYN_EN D.O High Low 34 TX_EN D.O Active Off 35 SYN_DATA D.O High Low 37 SPAMP_SW D.O Norm 38 CHARGE_DET D.I Off Or Off 42 NC D.O Norm 38 CHARGE_DET D.I Off Off Aff NC D.O Norm 39 CHARGE_CNT D.O High Low 14 NC D.O Norm 14 NC D.O Norm 15 Norm 14 NC D.O Norm 14 NC D.O Norm 14 NC D.O Norm 14 NC D.O High Low 14 NC D.O Norm 14 NC D.O High Low 14 NC D.O Norm 14 NC D.O High Low 14 NC D.O Norm 14 NC D.O High Low 15 Norm						
14		~ · · -				
15						
16						
17 (FLASH_CS) D.O Norm 18 BL LED D.O Off Or 19 SYN_OUT D.I High Lov 20 TX_DATA D.O High Lov 21 SLOT_CTRL D.O High Lov 22 NC D.O Norm 23 RF_POWER D.O High Lov 24 NC D.O Norm 25 RF_RESET D.O On Of 26 RADIO_EN D.O On Of 27 HEADSET_DET D.I Headset Nor 28 GND GND Of 29 VCC VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_CLK D.O High Lov 34 TX_EN D.O Active						
18 BL LED				ŭ		-
19 SYN_OUT D.I High Lov			_			Normal
20 TX_DATA D.O High Low 21 SLOT_CTRL D.O High Low 22 NC D.O Norm 23 RF_POWER D.O High Low 24 NC D.O O Norm 25 RF_RESET D.O On Of 26 RADIO_EN D.O On Of 27 HEADSET_DET D.I Headset In 28 GND GND OF 29 VCC VCC VCC VCC OF 30 SYN_EN D.O High OF 31 SYN_CLK D.O High OF 32 SYN_DATA D.O High OF 33 RX_EN D.O Active OF 34 TX_EN D.O Active OF 35 OSC_BUF D.O High OF 36 TR_DATA D.I OF 37 SPAMP_SW D.O Norm 38 CHARGE_DET D.I Off 40 LCD_BL D.O On OF 41 NC D.O On Norm 42 NC D.O On OF 44 DOT_LCD_D4 D.O High Low 45 DOT_LCD_D5 D.O High Low 46 DOT_LCD_D6 D.O High Low 47 DOT_LCD_D7				_		On
21 SLOT_CTRL D.O High Lov 22 NC D.O Norm 23 RF_POWER D.O High Lov 24 NC D.O On Norm 25 RF_RESET D.O On Off 26 RADIO_EN D.O On Off 27 HEADSET_DET D.I Headset Nor 28 GND GRI 29 VCC VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_CLK D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off <td>_</td> <td></td> <td></td> <td></td> <td>-</td> <td>Low</td>	_				-	Low
22 NC	20				-	Low
23 RF_POWER D.O High Lov 24 NC D.O Norm 25 RF_RESET D.O On Off 26 RADIO_EN D.O On Off 27 HEADSET_DET D.I Headset Norm 27 HEADSET_DET D.I Headset Norm 28 GND GND GNI 29 VCC VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_CLK D.O High Lov 32 SYN_DATA D.O High Lov 34 TX_EN D.O Active Off 35 OSC_BUF D.O Active Off 35 OSC_BUF D.O High	21	SLOT_CTRL	D.O	High		Low
24 NC D.O Norm 25 RF_RESET D.O On Of 26 RADIO_EN D.O On Of 27 HEADSET_DET D.I Headset Norm 28 GND GND GNI 29 VCC VCC VCC GNI 29 VCC VCC VCC VCC GNI 29 VCC VCC VCC VCC GNI 29 VCC VCC VCC VCC GNI 30 SYN_EN D.O High Lov 33 RX_EN D.O High Lov 33 RX_EN D.O Active Of Of 35 OSC_BUF D.O Active <td>22</td> <td>NC</td> <td>D.O</td> <td></td> <td>-</td> <td>Normal</td>	22	NC	D.O		-	Normal
25 RF_RESET D.O On Off 26 RADIO_EN D.O On Off 27 HEADSET_DET D.I Headset In Nor 28 GND GND GNI 29 VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_CLK D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High Lov 36 TR_DATA D.I Norn 38 CHARGE_DET D.I Off Norn 40 LCD_BL D.O On	23	RF_POWER	D.O	High		Low
26 RADIO_EN D.O On Off 27 HEADSET_DET D.I Headset Nor 28 GND GND GNI 29 VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_CLK D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High Lov 36 TR_DATA D.I Norn 36 TR_DATA D.I Off Norn 38 CHARGE_DET D.I Off Or 40 LCD_BL D.O On <	24	NC	D.O			Normal
27 HEADSET_DET D.I Headset In Nor 28 GND GND GNI 29 VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_DATA D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O Active Off 36 TR_DATA D.I In In Off 36 TR_DATA D.I Off In Or 36 TR_DATA D.I Off In Or 36 TR_DATA <td< td=""><td>25</td><td>RF RESET</td><td></td><td>On</td><td></td><td>Off</td></td<>	25	RF RESET		On		Off
27 HEADSET_DET D.I Headset In Nor 28 GND GND GNI 29 VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_DATA D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O Active Off 36 TR_DATA D.I In In Off 36 TR_DATA D.I Off In Or 36 TR_DATA D.I Off In Or 36 TR_DATA <td< td=""><td>26</td><td>RADIO EN</td><td>D.O</td><td>On</td><td></td><td>Off</td></td<>	26	RADIO EN	D.O	On		Off
In	27			Headset		Non
28 GND GND GNI 29 VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_DATA D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High Lov 36 TR_DATA D.I Norn 38 CHARGE_DET D.I Off Norn 39 CHARGE_CNT D.O Trickle Norn 40 LCD_BL D.O On Norn 41 NC D.O Norn 42 NC D.O						
29 VCC VCC VCC 30 SYN_EN D.O High Lov 31 SYN_CLK D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High Off 36 TR_DATA D.I Off 36 TR_DATA D.I Off Off 36 TR_DATA D.I Off Or 36 TR_DATA D.I Off Or Or 38 CHARGE_DATA D.I Off Or Or	28	GND	GND			GND
30 SYN_EN D.O High Lov 31 SYN_CLK D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High Lov 36 TR_DATA D.I Norm 37 SPAMP_SW D.O Norm SPAMP_SW D.O Norm Charge Char Charge Ch						
31 SYN_CLK D.O High Lov 32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High 36 TR_DATA D.I 36 TR_DATA D.I Or 36 TR_DATA D.I Or 36 TR_DATA D.I Or Norm 36 TR_DATA D.I Or Norm Norm Norm	_					Low
32 SYN_DATA D.O High Lov 33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High Lov 36 TR_DATA D.I 37 SPAMP_SW D.O Norn 38 CHARGE_DET D.I Off Or Charge 39 CHARGE_CNT D.O Trickle Norn 40 LCD_BL D.O On Off 40 LCD_BL D.O On Norn 41 NC D.O Norn 42 NC D.O Norn 43 NC D.O High Lov 45 DOT_LCD_DA D.O High		_				
33 RX_EN D.O Active Off 34 TX_EN D.O Active Off 35 OSC_BUF D.O High Lov 36 TR_DATA D.I Norm 37 SPAMP_SW D.O Norm Charge Char		_				
34 TX_EN D.O Active Off 35 OSC_BUF D.O High Lov 36 TR_DATA D.I 37 SPAMP_SW D.O Norn 38 CHARGE_DET D.I Off Or Charge Char 39 CHARGE_CNT D.O Trickle Norn 40 LCD_BL D.O On Off 40 LCD_BL D.O On Off 41 NC D.O On Norn 42 NC D.O Norn 43 NC D.O Norn 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O <		_				
35		_				
36 TR_DATA D.I 37 SPAMP_SW D.O Norn 38 CHARGE_DET D.I Off Or Charge Charge Char 39 CHARGE_CNT D.O Or Norn 40 LCD_BL D.O On Off 41 NC D.O On Norn 42 NC D.O Norn 43 NC D.O Norn 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51						
37 SPAMP_SW D.O Norm 38 CHARGE_DET D.I Off Or Charge Charge Char 39 CHARGE_CNT D.O Trickle Norm 40 LCD_BL D.O On Off 41 NC D.O On Norm 42 NC D.O Norm 43 NC D.O Norm 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High GNI 49 VCC VCC VCC VC 50 DOT_LCD_RESET D.O Normal Res			_	, ,		
38 CHARGE_DET D.I Off Charge Or Charge 39 CHARGE_CNT D.O Trickle Norm 40 LCD_BL D.O On Off 41 NC D.O Norm Norm 42 NC D.O Norm Norm 43 NC D.O Norm Norm 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High GNI 48 GND GND GNI GNI 49 VCC VCC VCC GNI 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Norm 52 CI D.O Off Norm 54 ANT						
Charge	_		_			
39 CHARGE_CNT D.O Trickle Norm 40 LCD_BL D.O On Off 41 NC D.O Norm 42 NC D.O Norm 43 NC D.O Norm 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High GNI 48 GND GND GNI 49 VCC VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Norm 52 CI D.O <t< td=""><td>38</td><td>CHARGE_DET</td><td>D.I</td><td></td><td></td><td></td></t<>	38	CHARGE_DET	D.I			
40 LCD_BL D.O On Off 41 NC D.O Norm 42 NC D.O Norm 43 NC D.O Norm 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High GNI 48 GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Norm 52 CI D.O Off Norm 53 ANT_LED2 D.O Off Or <tr< td=""><td></td><td>OLIA DOE ONT</td><td>D 0</td><td>_</td><td></td><td>ŭ</td></tr<>		OLIA DOE ONT	D 0	_		ŭ
41 NC D.O Norm 42 NC D.O Norm 43 NC D.O Norm 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High Lov 48 GND GND GNI 49 VCC VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Norm 52 CI D.O Off Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off -						Normal
42 NC D.O Norm 43 NC D.O Norm 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High Lov 48 GND GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Off Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or		_				
43 NC D.O Norm 44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High GNI 48 GND GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Off Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or						Normal
44 DOT_LCD_D4 D.O High Lov 45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High CN 48 GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or						Normal
45 DOT_LCD_D5 D.O High Lov 46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High Lov 48 GND GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or						Normal
46 DOT_LCD_D6 D.O High Lov 47 DOT_LCD_D7 D.O High Lov 48 GND GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or				_		Low
47 DOT_LCD_D7 D.O High Lov 48 GND GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or						Low
48 GND GND GNI 49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or						Low
49 VCC VCC VCC 50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or	47		D.O	High		Low
50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or	48	GND	GND			GND
50 DOT_LCD_RESET D.O Normal Res 51 (FLASH_SCK) D.O High Lov 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or	49	VCC	VCC	VCC		
51 (FLASH_SCK) D.O High Low 52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or	50	DOT_LCD_RESET		Normal		Reset
52 CI D.O Norm 53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or						Low
53 ANT_LED2 D.O Off Or 54 ANT_LED3 D.O Off Or		_ /		, ,		Normal
54 ANT_LED3 D.O Off Or						On
		_				On
55 ANT_LED1 D.O Off Or		_				On
		_				Instruct
						Write
						Not
						Off
60 NC D.O Norm	00	INC	ט.ט			Normal

PIN	Description	I/O	High	High Z	Low
61	NC	D.O	3 -		Normal
62	NC	D.O			Normal
63	KEYSTROBE E	D.O		Not	Active
64	KEYSTROBE D	D.O		Not	Active
65	KEYSTROBE C	D.O		Not	Active
66	KEYSTROBE_B	D.O		Not	Active
67	KEYSTROBE_A	D.O		Not	Active
68	GND	GND			GND
69	VCC	VCC	VCC		
70	TEST_CLK	D.I	-		
71	TEST_MODE_SELECT	D.I	-		
72	TEST_DATA_IN	D.I			
73	TEST_DATA_OUT	D.O			
74	KEYIN1	D.I	Non		Key In
75	KEYIN2	D.I	Non		Key In
76	KEYIN3	D.I	Non		Key In
77	KEYIN4	D.I	Non		Key In
78	KEYIN5	D.I	Non		Key In
79	NC (INT1)	D.O	-		Normal
80	NC (INT0)	D.O			Normal
81	EEPROM_CLK	D.O	High		Low
82	EEPROM_DATA	D.I.O	High		Low
83	UART_TX	D.O	High		Low
84	UART_RX	D.I	High	-	Low
85	EEPROM_WP	D.O	WP	-	Write
86	GND	GND	1	1	GND
87	PDN	A.I	I	1	I
88	Battlow	A.I			
89	VREF	A.O			
90	MIP	A.I			
91	MIN	A.I			
92	DCIN2	A.I			
93	GNDA	GND			GND
94	VCCA	VCC	VCC		
95	Headset_MIC_in	A.I	-		
96	DCIN0	A.I	-		
97	LOUT0	A.O	-		
98	HSSPOUT	A.O			
99	VCCPA	VCC	VCC		
100	SPOUTN	A.O			

15.3. Explanation of IC Terminals (RF Part)


15.3.1. IC701

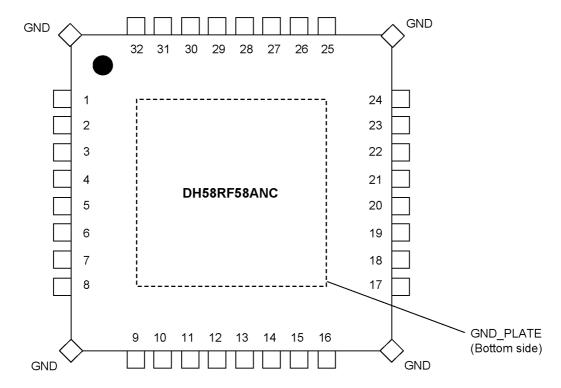

Pin	Description	I/O
1	TX	0
2	PAEN	0
3	ANTSEL_A	0
4	ANTSEL_B	0
5	LNAEN	0
6	ERXGAIN	0
7	RXp	
8	RXn	ı
9	VCC_FE	VCC
10	VCC_IF	VCC
11	11 VDD_IF	
12	TEST_DIG	0
13	*RST	
14	14 GND_DIG 15 VDD_DIG	
15		
16	VCC_DIG	VCC
17	TR_DATA	1/0

Pin	Description	1/0
18	RADIO_EN	I
19	19 SLOT_CTRL	
20	SYN_DATA	
21	SYN_CLK	I
22	SYN_EN	
23	23 SYN_OUT	
24 DTEST		0
25	REFIN	
26 ATESTN		0
27	ATESTP	0
28	VCC_PLLA	VCC
29	VCC_VCO	VCC
30	VCC_PLLD	VCC
31	VCC_PA	VCC
32 VDD_PA		0
G	GND	

15.3.2. IC801

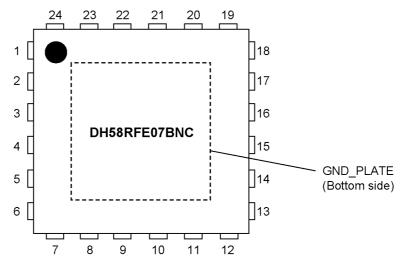


Pin	Description	1/0
1	1 GND_ISO	
2	ANT1	1/0
3	GND_ISO	GND
4	GND_ISO	GND
5	ANT2	1/0
6	GND_ISO	GND
7	VDD_LNA1	VDD
8	GND_ISO	GND
9	VDD_LNA2	VDD
10	GND_ISO	GND
11	GND_ISO	GND
12	LNA_OUT	0
13	LNA_GAIN	ĺ


Pin	1/0				
14	LNA_EN				
15	ANTSEL_B				
16	ANTSEL_A				
17	PA_EN				
18	PA_IN				
19	VDD_PA	VDD			
20	GND_ISO	GND			
21	PA_OUT	0			
22	GND_ISO	GND			
23	GND_ISO	GND			
24	TRSW_IN				
G	GND				

15.4. Terminal Guide of the ICs, Transistors and Diodes

15.4.1. Base Unit

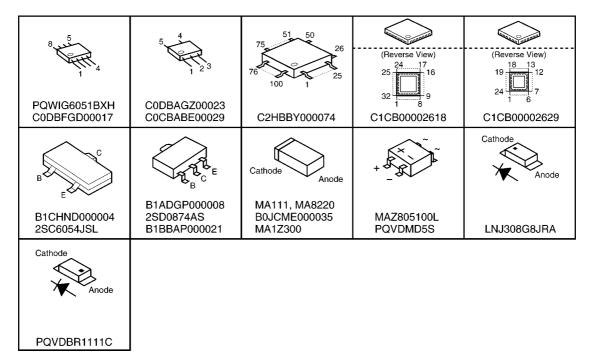


15.4.2. Handset

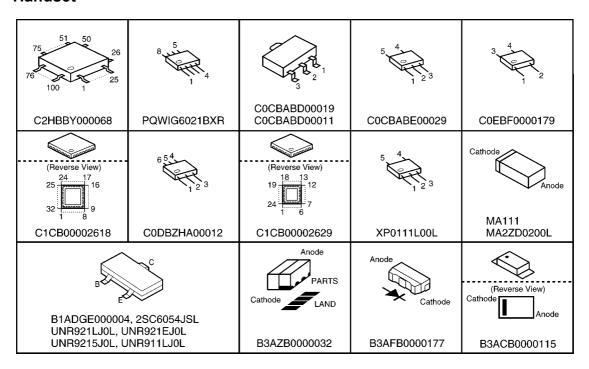


16 Exploded View and Replacement Parts List

16.1. Cabinet and Electrical Parts (Base Unit)

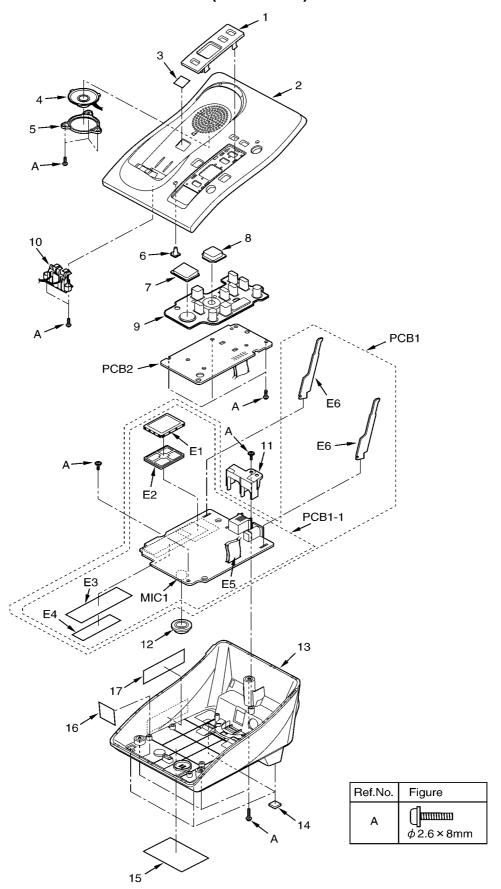


16.2. Cabinet and Electrical Parts (Handset)

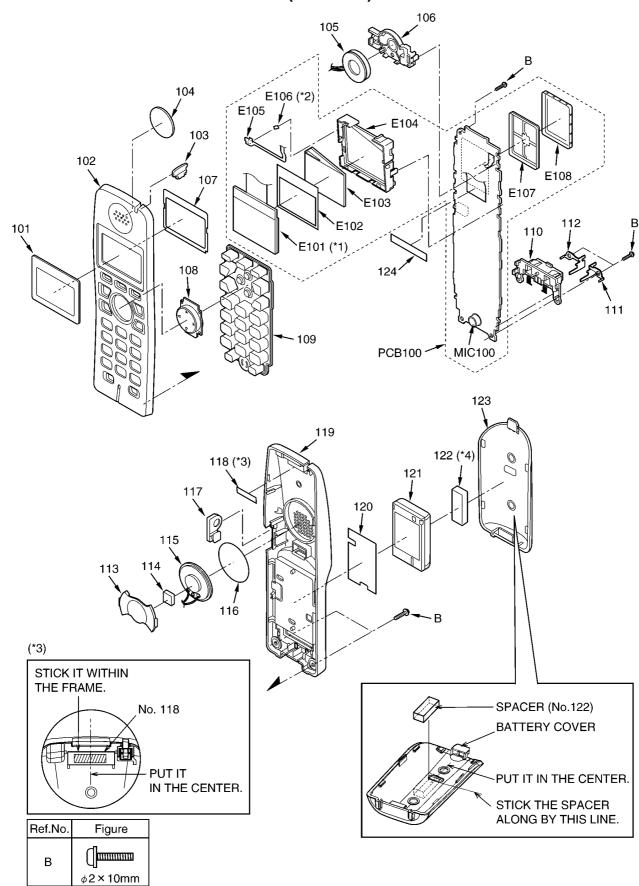

Note:

- (*1) This cable is fixed by welding. Refer to How to Replace the Handset LCD (P.74).
- (*2) Refer to Handset (P.108) of Terminal Guide of the ICs, Transistors and Diodes.
- (*3) Stick the MAGNETIC SHIELD (No. 118) to the exact location described above.
- (*4) Attach the SPACER (No. 122) to the exact location described above.

16.3. Accessories and Packing Materials

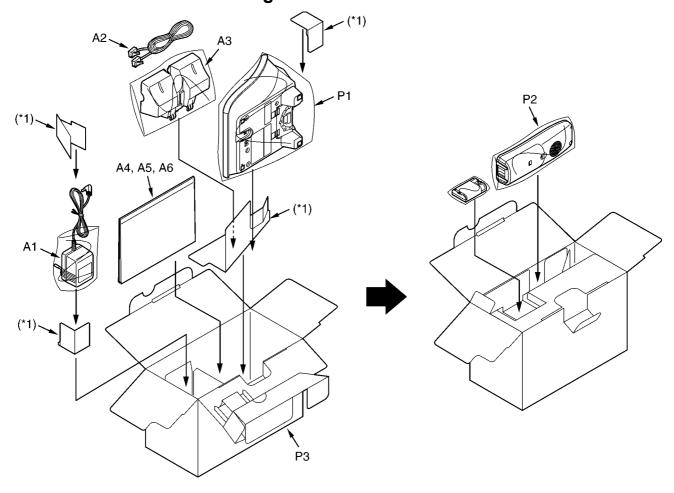

Note:

(*1) These pads are pieces of Ref No. P3 (GIFT BOX).

16.4. Replacement Parts List

Note:

1. RTL (Retention Time Limited)

The marking (RTL) indicates that the Retention Time is limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability depends on the type of assembly and the laws governing parts and product retention.

At the end of this period, the assembly will no longer be available.

2. Important safety notice

Components identified by the $\underline{\wedge}$ mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

- 3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.
- ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.
- 5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) K=1000 Ω , M=1000k Ω All capacitors are in MICRO FARADS (μF) P= $\mu \mu F$

*Type & Wattage of Resistor

Туре

ERC:Solid	ERX:Metal Film	PQ4R:Chip
ERDS:Carbon	ERG:Metal Oxide	ERS:Fusible Resistor
ERJ:Chip	ER0:Metal Film	ERF:Cement Resistor
Wattage		

10,16:1/8W | 14,25:1/4W | 12:1/2W | 1:1W | 2:2W | 3:3W

*Type & Voltage Of Capacitor Type

ı	ECFD:Semi-Conductor	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic
I		ECQE,ECQV,ECQG:Polyester
I	ECUV, PQCUV, ECUE: Chip	ECEA,ECST,EEE:Electlytic
		ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type		Oth	ers	
1H:50V 2A:100V 2E:250V 2H:500V	05:50V 1:100V 2:200V	0F:3.15V 1A:10V 1V:35V 0J:6.3V	0J 1A 1C 1E,2	:6.3V :10V :16V 5:25V	1V 50,11 1J 2A	:35V H:50V :16V :100V

16.4.1. Base Unit

16.4.1.1. Cabinet and Electrical Parts

Ref. No.	Part No.	Part Name & Description	Remarks
1	PQGG10416Y2	GRILLE, MESSAGE	ABS-HB
2	PQKM10743X2	CABINET BODY	PS-HB
3	PQQT23193Z	LABEL, CHARGE	
4	L0AA04A00028	SPEAKER	
5	PQHR11082Z	GUIDE, SPEAKER	POM-HB
6	PQHR11277Z	OPTIC CONDUCTIVE PARTS, LED LENS (IN USE)	PS-HB
7	PQBC10486Y2	BUTTON, LOCATOR	ABS-HB
8	PQBC10487Z2	BUTTON, MESSAGE	AS-HB
9	PQSX10337X	KEYBOARD SWITCH, TAM	
10	PQWE10037Z	BATTERY TERMINAL	PS-HB
11	PQHR11276Z	GUIDE, JACK HOLDER	PS-HB

Ref. No.	Part No.	Part Name & Description	Remarks
12	PQMG10025Z	RUBBER PARTS, MIC	
13	PQKF10728Y2	CABINET COVER	PS-HB
14	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	
15	PQGT19556Z	NAME PLATE	
16	PQMC10519Z	MAGNETIC SHIELD, SHEET	
17	PQMC10520Z	MAGNETIC SHIELD, SHEET	

16.4.1.2. Main P.C. Board Parts

Note:

- (*1) When you have replaced IC501, IC601 or X501, make adjustments. Refer to **Check and Adjust Frequency** (Base Unit) (P.77).
- (*2) When replacing IC701 or IC801, refer to **How to Replace the LLP (Leadless Leadframe Package) IC** (P.69).

Ref. No.	Part No.	Part Name & Description	Remarks
PCB1	PQWP16051BXH	MAIN P.C.BOARD ASS'Y (with ANTENNA P.C.B.) (RTL)	
PCB1-1	PQWP36051BXH	MAIN P.C.BOARD ASS'Y (without ANTENNA P.C.B.) (RTL)	
		(ICs)	
IC300	C0DBAGZ00023	IC	S
IC331	C0DBFGD00017	IC	
IC501	C2HBBY000074	IC (*1)	
IC601	PQWIG6051BXH	IC (*1)	
IC701	C1CB00002618	IC (*2)	
IC761	COCBABE00029	IC	
IC801	C1CB00002629	IC (*2)	
		(TRANSISTORS)	
Q111	2SC6054JSL	TRANSISTOR(SI)	
Q141	B1ADGP000008	TRANSISTOR(SI)	
Q142	B1BBAP000021	TRANSISTOR(SI)	S
Q161	2SD0874AS	TRANSISTOR(SI)	
Q171	2SC6054JSL	TRANSISTOR(SI)	
Q300	B1CHND000004	TRANSISTOR(SI)	
		(DIODES)	
D101	PQVDMD5S	DIODE(SI)	
D113	MA111	DIODE(SI)	S
D133	MA111	DIODE(SI)	S
D142	MA1Z300	DIODE(SI)	S
D300	B0JCME000035	DIODE(SI)	
D361	MA8220	DIODE(SI)	S
D472	MAZ805100L	DIODE(SI)	
D473	MAZ805100L	DIODE(SI)	
		(COILS)	
L101	PQLQXF330K	COIL	S
L102	PQLQXF330K	COIL	S
L300	G1C220M00037	COIL	S
L361	G1C6R8MA0072	COIL	
L472	G1C6R8MA0072	COIL	
L473	G1C6R8MA0072	COIL	
L501	PQLQR2KA213	COIL	S
L711	MQLRF1N8DFB	COIL	
L724	MQLRF3N3DFB	COIL	
L768	MQLRF2N2DFB	COIL	
L782	G1C1R0KA0096	COIL	
L873	MQLRF3N3DFB	COIL	
	1	(JACKS)	
CN101	K2LB102B0053	JACK, MODULAR	
CN301	K2ECYB000001	JACK, DC	
		(IC FILTERS)	
FL711	J0E5797B0001	IC FILTER	
FL721	KNCFH165R8Z1	IC FILTER	
FL811	J0E5797B0002	IC FILTER	
FL821	J0E5797B0002	IC FILTER	
		(COMPONENTS PART)	
RA501	D1H84724A013	RESISTOR ARRAY	S
a.100	DOTTD 0 0 0 1 -	(VARISTORS)	
SA102	PQVDDSS301L	VARISTOR (SURGE ABSORBER)	S
SA103	PQVDDSS301L	VARISTOR (SURGE ABSORBER)	S

Ref. No.	Part No.	Part Name & Description	Remarks
		(RESISTORS)	
R111	ERJ3GEYJ104	100K	
R112	ERJ3GEYJ104	100K	
R113	ERJ3GEYJ103	10K	
R114	ERJ3GEYJ473	47K	
R121	ERJ3GEYJ394	390K	
R122	ERJ3GEYJ394	390K	
R131	ERJ3GEYJ106	10M	
R133	ERJ3GEYJ105	1M	
R134	ERJ3GEYJ102	1K	
R141	ERJ3GEYJ104	100K	
R142	PQ4R18XJ472	4.7K	S
R145	ERJ2GEJ103	10K	
R151	ERJ3GEYJ106	10M	
R152	ERJ3GEYJ395	3.9M	
R154	ERJ3GEYJ102	1K	
R160	ERJ3GEYJ751	750	
R162	ERJ3GEYJ393	39K	
R163	ERJ12YJ330	33	+
R164	ERJ3GEYJ470	47	+
R165	ERJ3GEYJ561	560	+
R167	ERJ2GEJ102	1K	1
R168	ERJ3GEY0R00	0	1
R171	ERJ2GEJ220	22	1
R172	ERJ2GEJ104	100K	+
R175	ERJ3GEYJ561	560	+
R176	ERJ2GEJ101	100	-
R178	ERJ2GEJ102	1K	+
R183	ERJ2GEJ222	2.2K	_
R185	ERJ3GEYJ333	33K	_
R303	ERJ3GEYJ221	220	-
R304	ERJ3GEYJ221	220	-
R304	ERJ3GEYJ121	120	_
R343	ERJ3GEYJ102	1K	_
R362	ERJ3GEY0R00	0	_
R371	ERG2SJ470	47	_
R372	ERG2SJ470	47	_
R421		47K	_
	ERJ2GEJ473	1K	_
R422	ERJ2GEJ102 ERJ2GEJ102	1K	_
R423			_
R453	ERJ2GEJ222	2.2K	_
R454	ERJ2GEJ222		_
R459	ERJ2GEJ272	2.7K	_
R460	ERJ2GEJ272	2.7K	
R517	ERJ2GE0R00	0	
R533	ERJ2GEJ472X	4.7K	
R673	ERJ2GEJ331	330	
R675	ERJ2GEJ331	330	
R677	ERJ2GEJ221	220	
R701	ERJ2GE0R00	0	
R746	ERJ2GEJ391	390	
R843	ERJ2GEJ471	470	
R844	ERJ2GEJ471	470	
R845	ERJ2GE0R00	0	
R846	ERJ2GE0R00	0	
R847	ERJ2GE0R00	0	
		(CAPACITORS)	
C101	F1K2J681A006	680P	
C102	F1K2J681A006	680P	
C111	F1J2A473A024	0.047	
C112	F1J2A473A024	0.047	
C113	PQCUV1A684KB	0.68	
C120	ECUV1H102KBV	0.001	
C121	ECUV1H681JCV	680P	S
C122	ECUV1H681JCV	680P	S
C132	ECUV1H103KBV	0.01	+
C142	ECUV1H103KBV	0.01	+
C152	ECUV1H103KBV	0.01	+
C161	ECEA1EKA100	10	_
C161 C162	ECUV1H101JCV	100P	-
C162 C163	ECUV1H1013CV ECUV1H472KBV	0.0047	
			_
C165	ECUV1C473KBV	0.047	_
C166	ECEA1CKA100	10	1

		KX-1G0031BAW/KX-10	SAUU IBAWI
Ref. No.	Part No.	Part Name & Description	Remarks
C167	ECUV1A224KBV	0.22	
C172	ECUE1H272KBQ	0.0027	
C176	PQCUV0J106KB	10	
C178	ECUE1C223KBQ	0.022	
C185	ECUE1C183KBQ	0.018	
C300	PSEA1VXF470	47	S
C304	ECUV1A105KBV	1	
C305	ECUV1H103KBV	0.01	
C306	ECEA1EU101	100	S
C308	ECUV1E104KBV	0.1	
C331	ECUV1C474KBV	0.47	
C341	ECEA0JSJ331	330	S
C342	ECUV1A105KBV	1	
C347	ECUE1A104KBQ	0.1	
C352	ECUV1C104KBV	0.1	
C381	ECUV1A105KBV	1	
C382	F1K0J1060020	10	
C422	ECUE1A104KBQ	0.1	
C457	ECUE1C123KBQ	0.012	
C458	ECUE1C123KBQ	0.012	
C459	ECUE1C103KBQ	0.01	
C501	ECUV1C104KBV	0.1	
C503	ECUV1C104KBV ECUV1C104KBV	0.1	
C504 C508	ECUVICIO4KBV ECUE1H6ROCCO	0.1 6D	
C508	ECUE1H6R0CCQ	6P 6P	
C509	ECUV1C104KBV	0.1]
C513	PQCUV0J106KB	10	
C514 C515	ECUV1A105KBV	1	
C516	PQCUV0J106KB	10	
C517	ECUV1C104KBV	0.1	
C517	PQCUV0J106KB	10	
C521	ECUE1A104KBQ	0.1	
C531	ECUV1C104KBV	0.1	
C601	ECUE1A104KBQ	0.1	
C660	ECUV1C104KBV	0.1	
C684	ECUE1H331KBQ	330P	
C685	ECUE1H331KBQ	330P	
C686	ECUE1H331KBQ	330P	
C687	ECUE1H331KBQ	330P	
C688	ECUE1H331KBQ	330P	
C689	ECUE1H331KBQ	330P	
C701	ECUE1H4R0CCQ	4P	
C702	ECUE1A104KBQ	0.1	
C703	ECUE1A104KBQ	0.1	
C704	ECUE1A104KBQ	0.1	
C705	ECUE1H4R0CCQ	4P	
C706	ECUE1A104KBQ	0.1	
C711	ECUE1H4R0CCQ	4P	
C712	ECUE0J105KBQ	1	
C713	ECUE1H010CCQ	1P	S
C721	ECUE1H010CCQ	1P	S
C723	ECUE1H4R0CCQ	4P	
C724	F1G1HR20A561	0.2P	
C725	F1G1HR20A561	0.2P	
C726	ECUE1H2R0CCQ	2P	
C727	F1G1HR20A561	0.2P	
C731	ECJ1VB0G106M	10	
C732	ECUE1A104KBQ	0.1	
C734	ECUE0J105KBQ	1	
C741	ECUE1H101JCQ	100P	
C742	ECUE1H101JCQ	100P	
C743	ECUE1H101JCQ	100P	
C744	ECUE1H101JCQ	100P	
C745	ECUE1H101JCQ	100P	
C746	ECUE1C103KBQ	0.01	
C762	ECUE1H2R0CCQ	2P	
C764	ECUV1A474KBV	0.47	
C766	ECUE0J105KBQ	1	
C768	ECUE1H4R0CCQ	100B	
C781	ECUE1H101JCQ	1208]
	ECUE1H121JCQ	120P 4P	
C801	ECUE1H4R0CCQ	7.5]

KX-TG6051BXM/KX-TGA601BXM

Ref.	Part No.	Part Name & Description	Remarks
No.			
C805	ECUE1H2R0CCQ	2P	
C806	ECUE0J105KBQ	1	
C811	ECUE1H010CCQ	1P	S
C821	ECUE1H010CCQ	1P	S
C843	ECUE1H4R0CCQ	4P	
C844	ECUE1H4R0CCQ	4P	
C871	F1G1HR10A561	0.1P	
C872	ECUE1H6R0CCQ	6P	
C876	ECUE1H100DCQ	10P	
C877	ECUE0J105KBQ	1	
C878	ECJ0EC1H0R5C	0.5P	
C879	ECJ0EC1H0R5C	0.5P	
		(OTHERS)	
MIC1	L0CBAB000052	MICROPHONE	
E1	PQMC10508Z	MAGNETIC SHIELD, COVER	
E2	PQMC10507Z	MAGNETIC SHIELD, FRAME	
E3	PQHX11476Z	PLASTIC PARTS, PET SHEET	
E4	PQMC10520Z	MAGNETIC SHIELD, SHEET	
E5	WBX08SH-9SS	LEAD WIRE, PARALLEL WIRE	
E6	PQUP11465Z	ANTENNA P.C.BOARD	
P101	PFRT002	THERMISTOR (POSISTOR)	S
X501	ној138500003	CRYSTAL OSCILLATOR (*1)	

16.4.1.3. Operational P.C. Board Parts

Ref. No.	Part No.	Part Name & Description	Remarks
PCB2	PQWP2TG6051H	OPERATIONAL P.C.BOARD ASS'Y (RTL)	
		(DIODES)	
LED902	LNJ308G8JRA	LED	
LED903	PQVDBR1111C	LED	S
LED904	PQVDBR1111C	LED	S

16.4.2. Handset

16.4.2.1. Cabinet and Electrical Parts

Ref.	Part No.	Part Name & Description	Remarks
No.		_	
101	PQGP10319Z2	PANEL, LCD	PC-HB
102	PQKM10744Z3	CABINET BODY	PS-HB
103	PQHR11280Z	OPTIC CONDUCTIVE PARTS, LED LENS	PS-HB
104	PQHS10658Z	SPACER, RECEIVER NET	
105	L0AD02A00023	RECEIVER	
106	PQHR11282Z	GUIDE, RECEIVER	ABS-HB
107	PQHS10761Z	SPACER, CUSHION LCD	
108	PQBC10494Z1	BUTTON, NAVIGATOR KEY	ABS-HB
109	PQSX10338P	KEYBOARD SWITCH	
110	PQWE10047Z	BATTERY TERMINAL	ABS-HB
111	PQJT10246Z	CHARGE TERMINAL (R)	
112	PQJT10247Z	CHARGE TERMINAL (L)	
113	PQHR11198Z	GUIDE, SPEAKER HOLDER	ABS-HB
114	PQHG10729Z	RUBBER PARTS, SPEAKER	
115	L0AA02A00072	SPEAKER	
116	PQHS10622Z	SPACER, SPEAKER NET	
117	PQKE10471Y2	COVER, EP CAP	
118	PQMC10514Z	MAGNETIC SHIELD, ANTENNA	
119	PQKF10729Z4	CABINET COVER	ABS-HB
120	PQGT19557Z	NAME PLATE	
121	HHR-P107A	BATTERY	
122	PQHS10681Y	SPACER, BATTERY	
123	PQKK10600Z4	LID, BATTERY COVER	ABS-HB
124	PQHS10683Z	TAPE, ADHESIVE	

16.4.2.2. Main P.C. Board Parts

Note:

(*1) When you have replaced IC501, IC541 or X501, make adjustments. Refer to Check and Adjust Frequency (Handset) (P.77) and Adjust Battery Low Detector Volt-

age (Handset) (P.77).

(*2) When replacing IC701 or IC801, refer to **How to Replace the LLP (Leadless Leadframe Package) IC** (P.69).

(*3) When replacing the handset LCD, See **How to Replace the Handset LCD** (P.74).

Ref.	Part No.	Part Name & Description	Remarks
PCB100	PQWPG6021BXR	MAIN P.C.BOARD ASS'Y (RTL)	
	2	(ICs)	
IC371	COCBABD00019	IC .	
IC381	COCBABDO0011	IC	
IC501	C2HBBY000068	IC (*1)	
IC521	C0EBF0000179	IC	
IC541	POWIG6021BXR	IC (*1)	
IC561	CODBZHA00012	IC	
IC701	C1CB00002618	IC (*2)	
IC761	COCBABE00029	IC	
IC801	C1CB00002629	IC (*2)	
		(TRANSISTORS)	
Q361	B1ADGE000004	TRANSISTOR(SI)	
Q362	2SC6054JSL	TRANSISTOR (SI)	
Q363	UNR921LJ0L	TRANSISTOR(SI)	
Q431	UNR921LJ0L	TRANSISTOR(SI)	
Q521	2SC6054JSL	TRANSISTOR(SI)	
Q531	UNR921EJ0L	TRANSISTOR(SI)	
Q543	UNR9215J0L	TRANSISTOR(SI)	
Q555	XP0111L00L	TRANSISTOR(SI)	
Q561	XP0111L00L	TRANSISTOR(SI)	
Q562	UNR911LJ0L	TRANSISTOR(SI)	
-		(DIODES)	
D361	MA2ZD0200L	DIODE(SI)	
D523	MA111	DIODE(SI)	s
LED551	B3ACB0000115	LED	
LED552	B3ACB0000115	LED	
LED553	B3ACB0000115	LED	
LED554	B3ACB0000115	LED	
LED561	B3AZB0000032	LED	
		(COILS)	
L711	MQLRF1N8DFB	COIL	
L724	MQLRF3N3DFB	COIL	
L768	MQLRF2N2DFB	COIL	
L782	G1C1R0KA0096	COIL	
L873	MQLRF3N3DFB	COIL	
		(IC FILTERS)	
FL711	J0E5797B0001	IC FILTER	
FL721	KNCFH165R8Z1	IC FILTER	
FL811	J0E5797B0002	IC FILTER	
FL821	J0E5797B0002	IC FILTER	
		(COMPONENTS PARTS)	
CA571	F5A424740002	CAPACITOR ARRAY	
CA574	F5A841040004	CAPACITOR ARRAY	S
RA401	D1H410220001	RESISTOR ARRAY	
RA402	D1H422220001	RESISTOR ARRAY	
RA403	D1H468020001	RESISTOR ARRAY	
RA501	D1H84724A013	RESISTOR ARRAY	S
RA551	D1H83314A013	RESISTOR ARRAY	S
		(VARISTORS)	
D412	D4ED1180A013	VARISTOR	
D413	D4ED1180A013	VARISTOR	
D423	D4ED1180A013	VARISTOR	
D424	D4ED1180A013	VARISTOR	
D426	D4ED1180A013	VARISTOR	
D427	D4ED1180A013	VARISTOR	
		(RESISTORS)	
R361	ERJ2GEJ473	47K	
R362	ERJ2GEJ561	560	
R363	ERJ2GEJ473	47K	
R366	ERJ3GEYJ332	3.3K	
R370	ERJ8GEYJ1R2	1.2	
R376	ERJ2GEJ155	1.5M	
R377	ERJ2GEJ225	2.2M	
	1	I	

Ref. No.	Part No.	Part Name & Description	Remarks
R378	ERJ2GEJ155	1.5M	
R379	ERJ2GEJ225	2.2M	
R417	ERJ2GEJ391	390	
R431	ERJ2GEJ103	10K	
R433	ERJ2GEJ102	1K	
R434	ERJ2GEJ222	2.2K	
R508	ERJ3GEYJ100	10	
R509	ERJ2GEJ104	100K	
R510	ERJ2GEJ105X	1M	
R522	ERJ2GEJ223	22K	
R523	ERJ2GEJ224	220K	
R525	ERJ2GEJ102	1K	
R526	ERJ2GEJ223	22K	
R528	ERJ2GEJ104	100K	
R534	ERJ2GEJ103	10K	
R541	ERJ2GEJ103	10K	
R542	ERJ2GEJ102	1K	
R543	ERJ2GEJ274	270K	
R561	ERJ2GEJ101	100	
R562	ERJ2GEJ101	100	†
R563	ERJ2GEJ101	100	+
R564	ERJ3GEYJ101	100	+
R572	D1BB4303A055	430K	+
R572	D1BB4303A055	820K	+
			+
R701	ERJ2GE0R00	0	
R746	ERJ2GEJ391	390	1
R843	ERJ2GEJ471	470	
R844	ERJ2GEJ471	470	1
R845	ERJ2GE0R00	0	
R846	ERJ2GE0R00	0	
R847	ERJ2GE0R00	0	
		(CAPACITORS)	
C371	ECUE1A104KBQ	0.1	
C377	ECUE1A104KBQ	0.1	
C379	ECUE1A104KBQ	0.1	
C381	EEE0JA101SP	100	
C386	ECUE1A104KBQ	0.1	
C411	ECUE1H4R0CCO	4P	
C412	ECUE1H4R0CCQ	4P	
C414	ECUE1E682KBQ		
	-	0.0068	
C415	ECUE1E682KBQ	0.0068	
C416	ECUE1E562KBQ	0.0056	
C417	PQCUV0J106KB	10	
C421	ECUV1A105KBV	1	
C433	ECUE1E682KBQ	0.0068	
C435	PQCUV0J106KB	10	
C501	ECUE1H100DCQ	10P	
C502	ECUE1H100DCQ	10P	
C503	ECUE0J105KBQ	1	
C504	ECUE1A104KBQ	0.1	1
C506	ECUE1A104KBQ	0.1	1
C508	PQCUV0J106KB	10	1
C511	EEE0GA331WP	330	1
C512	ECUE1C103KBQ	0.01	+
C514	PQCUV0J106KB	10	+
C515	ECUE1A104KBQ	0.1	+
C521	ECUE1C103KBQ	0.01	+
C521		0.1	+
	ECUE1A104KBQ		+
C524	ECUE1A104KBQ	0.1	
C525	ECUE1A104KBQ	0.1	1
C526	ECUE1A104KBQ	0.1	1
C531	ECUE1A104KBQ	0.1	
C540	ECUE1A104KBQ	0.1	<u> </u>
C541	ECUE1A104KBQ	0.1	
C542	ECUE1H101JCQ	100P	
C562	ECUV1A105KBV	1	
C564	ECUV1C104KBV	0.1	†
C565	ECUV1A105KBV	1	1
	ECUV1C474KBV	0.47	†
	TVD \	/	1
C572	FCIT/1C104VD17	0 1	
C572 C573	ECUV1C104KBV	0.1	
C572 C573 C596	ECUE1A104KBQ	0.1	
C572 C573			

		RX-1G0031BAW/RX-1	<u> </u>
Ref. No.	Part No.	Part Name & Description	Remarks
C703	ECUE1A104KBQ	0.1	
C704	ECUE1A104KBQ	0.1	
C705	ECUE1H4R0CCQ	4P	
C706	ECUE1A104KBQ	0.1	
C711	ECUE1H4R0CCQ	4P	
C712	ECUE0J105KBQ	1	
C713	ECUE1H010CCQ	1P	S
C721	ECUE1H010CCQ	1P	S
C723	ECUE1H4R0CCQ	4P	
C724	F1G1HR20A561	0.2P	
C725	F1G1HR20A561	0.2P	
C726	ECUE1H2R0CCQ	2P	
C727	F1G1HR20A561	0.2P	
C731	ECJ1VB0G106M	10	
C732	ECUE1A104KBQ	0.1	
C734	ECUE0J105KBQ	1	
C741	ECUE1H101JCQ	100P	
C742	ECUE1H101JCO	100P	
C743	ECUE1H101JCQ	100P	
C744	ECUE1H101JCQ	100P	
C745	ECUE1H101JCQ	100P	
C746	ECUE1C103KBQ	0.01	
C7 62	ECUE1H2R0CCO	2P	
C764	ECUV1A474KBV	0.47	
C766	ECUE0J105KBQ	1	
C768	ECUE1H4R0CCQ	4P	
C781	ECUE1H101JCQ	100P	
C781	ECUE1H1010CQ ECUE1H121JCQ	120P	
C801	ECUE1H4R0CCQ	4P	
C805	ECUE1H2R0CCQ	2P	
C806	ECUE0J105KBQ	1	
C811	ECUE1H010CCQ	1P	s
C812	F1G1HR10A561	0.1P	5
C821	ECUE1H010CCQ	1P	s
C822	F1G1HR10A561	0.1P	5
C843	ECUE1H4R0CCQ	4P	
C844		4P	
	ECUE1H4R0CCQ		
C871	F1G1HR10A561	0.1P	
C872	ECUE1H6R0CCQ	6P	
	ECUE1H100DCQ	10P	
C877	ECUE0J105KBQ	1	-
C878	ECJ0EC1H0R5C	0.5P	S
C879	ECJ0EC1H0R5C	0.5P	S
MT C1 00	I OCRAVOGGA	(OTHERS)	
MIC100 E101	L0CBAY000018	MICROPHONE	
	L5DCBYY00011	LIQUID CRYSTAL DISPLAY (*3)	
E102	PQHX11453Z	COVER, LCD COVER SHEET	DMM3 IIP
E103	PQHR11279Z	TRANSPARENT PLATE, LCD PLATE	PMMA-HB
E104	PQHR11278Z	GUIDE, LCD	PS-HB
E105	PQJE10179X	LEAD WIRE, FPC	
E106	B3AFB0000177	LED BONE	
E107	PQMC10507Z	MAGNETIC SHIELD, FRAME	
E108	PQMC10508Z	MAGNETIC SHIELD, COVER	
CN431	K2HD103D0001	JACK	
X501	ној138500003	CRYSTAL OSCILLATOR (*1)	<u> </u>

16.4.3. Accessories and Packing Materials

Note:
 (*1) You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

Ref.	Part No.	Part Name & Description	Remarks
NO.			
A1	PQLV203BXZ	AC ADAPTOR	⚠
A2	PQJA10075Z	CORD, TELEPHONE	
A3	PQKL10084Z2	STAND, WALL MOUNT	PS-HB
A4	PQQX15818Z	INSTRUCTION BOOK (*1)	
A5	PQQW15592Z	LEAFLET, QUICK GUIDE (for Arabic)	
A6	PQQW15593Z	LEAFLET, QUICK GUIDE (for Persian)	

KX-TG6051BXM/KX-TGA601BXM

Ref. No.	Part No.	Part Name & Description Remarks
P1	XZB21X35A03	PROTECTION COVER (for Base Unit)
P2	XZB08X25B02	PROTECTION COVER (for Hand-set)
P3	PQPK15826Z	GIFT BOX

16.4.4. Screws

	Ref. No.	Part No.	Part Name & Description	Remarks
Ī	A	XTW26+T8PFJ	TAPPING SCREW	
ı	В	XTW2+R10PFJ	TAPPING SCREW	

16.4.5. Fixtures and Tools

Note:

When replacing the Handset LCD, See How to Replace the Handset LCD (P.74).

Part No.	Part Name & Description	Remarks
PQZZ430PIR	TIP OF SOLDERING IRON	
PQZZ430PRB	RUBBER OF SOLDERING IRON	