# Service Manual

Caller ID Compatible

Telephone Equipment
Model No. KX-TG6611CXB
KX-TG6611CXS
KX-TG6612CXB
KX-TG6612CXS
KX-TGA661CXS
KX-TGA661CXS



KX-TGA661CXB/CXS (Handset)

KX-TG6611CXB/CXS (Base Unit)

Digital Cordless Phone

B: Bkack Version S: Silver Version (for Singapore) (for Indonesia) (for Vietnam)



(Charger Unit)

#### Configuration for each model

Model No	Base Unit	Handset	Charger Unit	Expandable
KX-TG6611	1 (TG6611)	1 (TGA661)		Up to 6
KX-TG6612	1 (TG6611)	2 (TGA661)	1	Up to 6
KX-TGA661*		1 (TGA661)	1	

<sup>\*</sup>KX-TGA661 is also an optional accessory, which contains a handset and a charger.

# **MARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

#### IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  $\triangle$  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

# IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary slightly from the actual product.

# **TABLE OF CONTENTS**

		PAGE
1	Safety Precautions	4
	1.1. For Service Technicians	4
2	Warning	4
	2.1. Battery Caution	
	2.2. About Lead Free Solder (Pbf: Pb free)	
_	2.3. Discarding of P.C. Board	
	Specifications	
4	Technical Descriptions	· 7
	4.1. Block Diagram (Base Unit)	
	4.2. Circuit Operation (Base Unit)4.3. Block Diagram (Handset)	8
	4.4. Circuit Operation (Handset)	11
	4.5. Circuit Operation (Charger Unit)	
	4.6. Behavior of Electric Power Failure	
	4.7. Signal Route	14
5	Location of Controls and Components	
	Installation Instructions	
	Operating Instructions	
-	7.1. For Service Hint	
8	Service Mode	
	8.1. Engineering Mode	16
	8.2. Copying Phonebook Items when Repairing	
	8.3. How to Clear User Setting	
9	Troubleshooting Guide	23
	9.1. Troubleshooting Flowchart	23
	9.2. Troubleshooting by Symptom (Base Unit and	t
	Charger Unit)	35
	9.3. Troubleshooting by Symptom (Handset)	
10	Disassembly and Assembly Instructions	42
	10.1. Disassembly Instructions	
	10.2. How to Replace the Handset LCD	
11	Measurements and Adjustments	47
	11.1. Equipment Required	
	11.2. The Setting Method of JIG (Base Unit)	
	11.3. Adjustment Standard (Base Unit)	
	11.4. Adjustment Standard (Charger Unit)	
	11.5. The Setting Method of JIG (Handset)	
	11.6. Adjustment Standard (Handset)	
	11.7. Things to Do after Replacing IC or X'tal11.8. RF Specification	
	11.9. How to Check the Handset Speaker of	
	Receiver	
	11.10. Frequency Table (MHz)	
	Miscellaneous	
-	12.1. How to Replace the Flat Package IC	
	12.2. How to Replace the Shield Case	
	12.3. Terminal Guide of the ICs, Transistors and	
	Diodes	
13	Schematic Diagram	
	13.1. For Schematic Diagram	
	13.2. Schematic Diagram (Base Unit)	
	13.3. Schematic Diagram (Handset)	
	13.4. Schematic Diagram (Charger Unit)	68
14	Printed Circuit Board	69
	14.1. Circuit Board (Base Unit_Main)	
	14.2. Circuit Board (Handset)	71
	14.3. Circuit Board (Charger Unit)	
15	Exploded View and Replacement Parts List	74

	PAGE
15.1. Cabinet and Electrical Parts (Base Unit)	74
15.2. Cabinet and Electrical Parts (Handset)	75
15.3. Cabinet and Electrical Parts (Charger Unit	) 76
15.4. Accessories	77
15.5. Replacement Part List	78

# 1 Safety Precautions

# 1.1. For Service Technicians

- Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work.
  - 1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
  - 2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
  - 3. FASTON terminals shall be plugged straight in and unplugged straight out.
- · ICs and LSIs are vulnerable to static electricity.

When repairing, the following precautions will help prevent recurring malfunctions.

- 1. Cover plastic parts boxes with aluminum foil.
- 2. Ground the soldering irons.
- 3. Use a conductive mat on worktable.
- 4. Do not grasp IC or LSI pins with bare fingers.

# 2 Warning

# 2.1. Battery Caution

- 1. Danger of explosion if battery is incorrectly replaced.
- 2. Replace only with the same or equivalent type recommended by the manufacturer.
- 3. Dispose of used batteries according to the manufacture's Instructions.

# 2.2. About Lead Free Solder (Pbf: Pb free)

#### Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.


#### Caution

- PbF solder has a melting point that is 50 ° F ~ 70 ° F (30 ° C ~ 40 ° C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 ° F ± 20 ° F (370 ° C ± 10 ° C).
- Exercise care while using higher temperature soldering irons.:
- Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

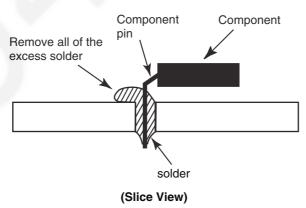

# 2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu) or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials. The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

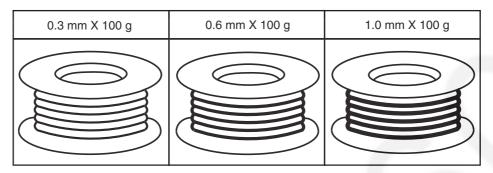

# 2.3. Discarding of P.C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

# 3 Specifications

#### ■ Standard:

DECT (Digital Enhanced Cordless Telecommunications),

GAP (Generic Access Profile)

#### ■ Number of channels:

120 Duplex Channels

#### **■** Frequency range:

1.88 GHz to 1.90 GHz

## ■ Duplex procedure:

TDMA (Time Division Multiple Access)

#### ■ Channel spacing:

1,728 kHz

# ■ Bit rate:

1,152 kbit/s

#### **■** Modulation:

GFSK (Gaussian Frequency Shift Keying)

#### ■ RF transmission power:

Approx. 10 mW (average power per channel)

# ■ Voice coding:

ADPCM 32 kbit/s

#### ■ Power source (AC Adaptor):

100–240 V AC, 50/60 Hz

Base unit: PNLV226BX0Z

Charger: PNLV226BX0Z

■ Power consumption

Base unit:

Standby: Approx. 0.4 W Maximum: Approx. 2.3 W

Charger:

Standby: Approx. 0.1 W Maximum: Approx. 1.8 W • Operating conditions:

0 °C-40 °C, 20 %-80 % relative air humidity (dry)

#### **■** Dimensions:

Base unit: Approx. 126 mm x 90 mm x 77 mm Handset: Approx. 49 mm x 29 mm x 159 mm Charger: Approx. 73 mm x 76 mm x 43 mm

■ Mass (weight):

Base unit: Approx. 140 g Handset: Approx. 130 g Charger: Approx. 50 g

#### Note:


• Design and specifications are subject to change without notice.

#### Note for Service:

- Operation range: Up to 300 m outdoors, Up to 50 m indoors, depending on the condition.
- · Analog telephone connection: Telephone Line
- DECT repeater: KX-A405

# 4 Technical Descriptions

# 4.1. Block Diagram (Base Unit)

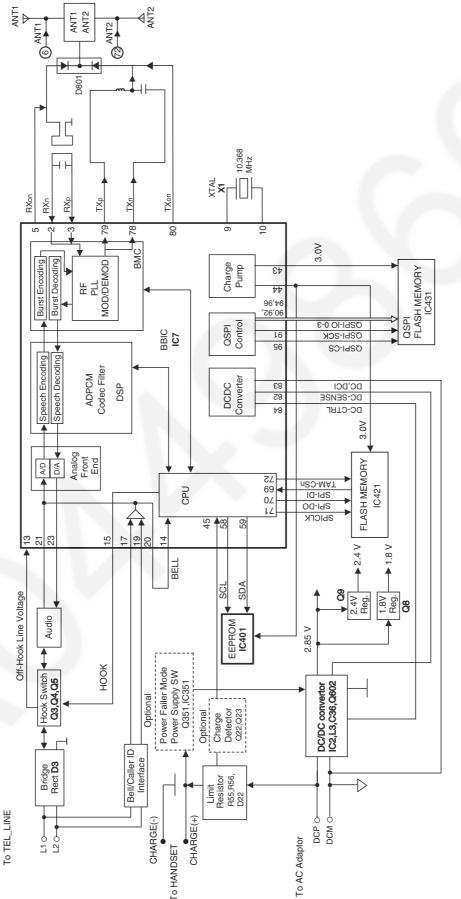

# 4.2. Circuit Operation (Base Unit)

## 4.2.1. **Outline**

Base Unit consists of the following ICs as shown in Block Diagram (Base Unit) (P.7).

- DECT BBIC (Base Band IC): IC7
  - Handling all the audio, signal and data processing needed in a DECT base unit
  - Controlling the DECT specific physical layer and radio section (Burst Module Controller section)
  - ADPCM code filter for speech encoding and speech decoding (DSP section)
  - Echo-cancellation and Echo-suppression (DSP section)
  - Any tones (tone, sidetone, ringing tone, etc.) generation (DSP section)
  - DTMF receiver (DSP section)
  - Clock Generation for RF Module
  - ADC, DAC, timer, and power control circuitry
  - PLL Oscillator
  - Detector
  - Compress/Expander
  - First Mixer
  - All interfaces (ex: QSPI FLASH MEMORY, EEPROM, LED, Analog Front End, etc.)
  - DCDC Converter
  - Integrated 1.9GHz PA for DECT
- EEPROM: IC401
  - Temporary operating parameters (for RF, etc.)
- · Additionally,
  - Power Supply Circuit (+3.0 V, +2.4 V, +1.8 V output)
  - Crystal Circuit (10.368 MHz)
  - Charge Circuit
  - Telephone Line Interface Circuit
- QSPI FLASH MEMORY IC431
  - Main Program D/L Area

# 4.2.2. Power Supply Circuit

The power is supplied to the DECT BBIC, QSPI FLASH MEMORY, EEPROM and Charge Contact from AC Adaptor (+5.5 V) as shown in Fig.101. The power supply is as follows;

• DECT BBIC (IC7):

DC Jack (+5.5 V)  $\rightarrow$ IC2  $\rightarrow$ IC7

DC Jack (+5.5 V) →IC2 →Q9 →IC7

DC Jack (+5.5 V) →IC2 →Q8 →IC7

• EEPROM (IC401):


DC Jack (+5.5 V) →IC2 →IC7→IC401

· Charge Contact (TP16):

DC Jack (+5.5 V) →R56 →R55 →D22→TP16

• QSPI FLASH MEMORY:

DC Jack (+5.5 V)  $\rightarrow$ IC2  $\rightarrow$ IC7  $\rightarrow$ IC431

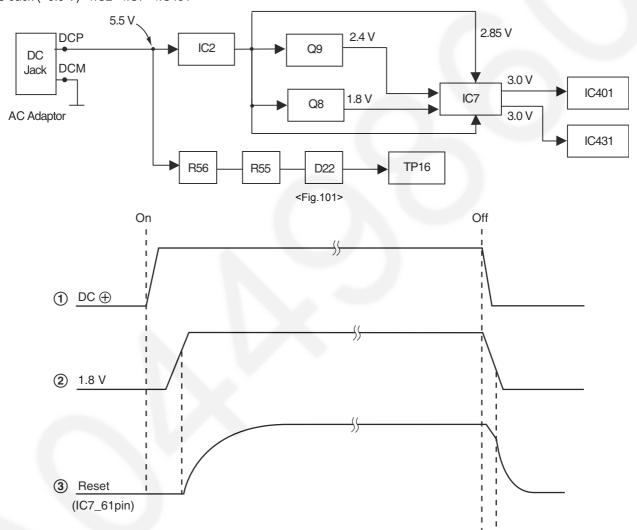

## 4.2.3. Telephone Line Interface

#### <Function>

- · Bell signal detection
- · Clip signal detection
- ON/OFF hook circuit

#### Bell & Clip (: Calling Line Identification Presentation: Caller ID) signal detection:

In the standby mode, Q3 is open to cut the DC loop current and decrease the ring load.

When ring voltage appears at the L1T (A) and L1R (B) leads (when the telephone rings), the AC ring voltage is transferred as follows;

- B  $\rightarrow$ P1  $\rightarrow$ C4  $\rightarrow$ R6  $\rightarrow$ R33  $\rightarrow$ IC7 Pin 17 (CID INp)
- A  $\rightarrow$ C3  $\rightarrow$ R4  $\rightarrow$ R35  $\rightarrow$ IC7 Pin 19 (CID INn)

#### **ON/OFF** hook circuit:

In the standby mode, Q3 is open, and connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an **on-hook condition**.

When IC7 detects a ring signal or press the TALK Key onto the handset, Q4 turns on and then Q3 turns on, thus providing an **off-hook condition** (DC current flows through the circuit) and the following signal flow makes the loop current.

• B  $\rightarrow$ P1  $\rightarrow$ D3  $\rightarrow$ Q3  $\rightarrow$ Q5  $\rightarrow$ R21  $\rightarrow$ R22  $\rightarrow$ D3  $\rightarrow$ A [**OFF HOOK**]

#### 4.2.4. Transmitter/Receiver

• Audio Circuits and DTMF tone signal circuits.

Base Unit and Handset mainly consist of RF Module and DECT BBIC.

Base Unit and Handset transmit/receive voice signal and data signal through the antenna on carrier frequency.

#### Signal Path:

\*Refer to Signal Route (P.14).

#### 4.2.4.1. Transmitter Block

The voice signal input from the TEL LINE interface goes to DECT BBIC (IC7) as shown in **Block Diagram (Base Unit)** (P.7) The voice signal passes through the analog part of IC7 where it is amplified and converted to a digital audio stream signal. The burst switch controller processes this stream performing encryption and scrambling, adding the various other fields to produce the GAP (**G**eneric **A**ccess **P**rofile) standard DECT frame, assigning to a time slot and channel etc.

In IC7, the carrier frequency is changing, and frequency modulated RF signal is generated. In IC7, RF signal is amplified, and radiated from antenna. Handset detects the voice signal or data signal in the circuit same as the following explanation of Receiver Block.

#### 4.2.4.2. Receiver Block


The signal of 1900 MHz band (1881.792 MHz ~ 1897.344 MHz) which is input from antenna is input to IC7 as shown in **Block Diagram (Base Unit)** (P.7).

In IC7, the signal of 1900 MHz band is downconverted to 864 kHz signal and demodulated, as GAP (**G**eneric **A**ccess **P**rofile) standard DECT frames. It passes through the decoding section burst switch controller where it separates out the frame information and performs de-encryption and de-scrambling as required. It then goes to the DSP section where it is turned back into analog audio. This is amplified by the analog front end, and goes to the TEL LINE Interface.

## 4.2.5. Pulse Dialling

During pulse dialling the hookswitch (Q3,Q4) is used to generate the pulses using the HOOK control signal, which is set high during pulses. To force the line impedance low during the "pause" intervals between dial pulses, the PULSE\_DIAL signal turns on Q2.

# 4.3. Block Diagram (Handset)

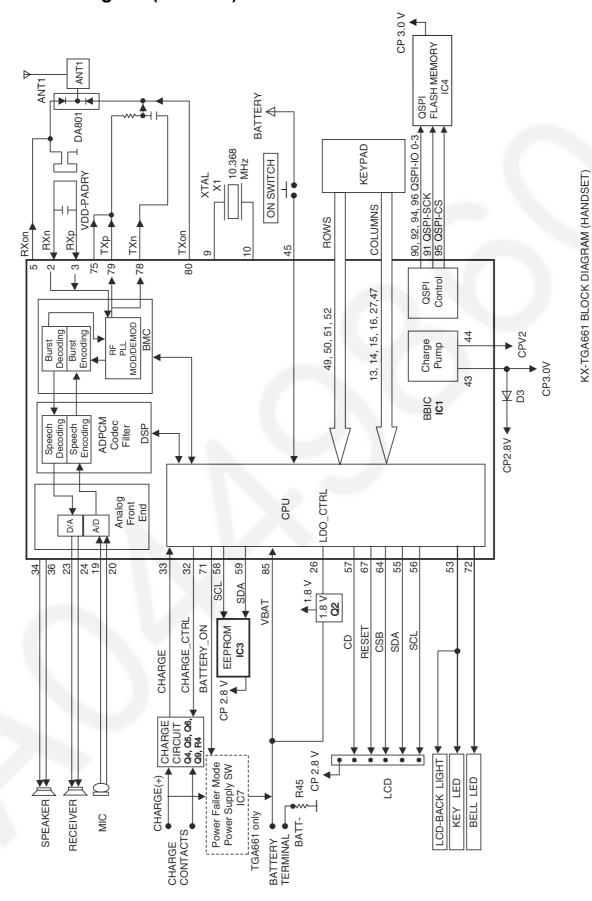

# 4.4. Circuit Operation (Handset)

#### 4.4.1. **Outline**

Handset consists of the following ICs as shown in Block Diagram (Handset) (P.11).

- DECT BBIC (Base Band IC): IC1
  - All data signals (forming/analyzing ACK or CMD signal)
  - All interfaces (ex: Key, Detector Circuit, Charge, DC/DC Converter, EEPROM, LCD, RF Power Amp.)
  - PLL Oscillator
  - Detector
  - Compress/Expander
  - Reception
  - Integrated 1.9GHz PA for DECT
- QSPI FLASH MEMORY: IC4
  - Main Program D/L Area
- EEPROM: IC3
  - Temporary operating parameters (for RF, etc.)


## 4.4.2. Power Supply Circuit/Reset Circuit

#### **Circuit Operation:**

When power on the Handset, the voltage is as follows;

BATTERY(2.2 V ~ 2.6 V: BATT+) →F1 →Q2 (1.8 V), IC1-43pin (3.0V)

The Reset signal generates IC1 (62 pin) and 1.8 V.

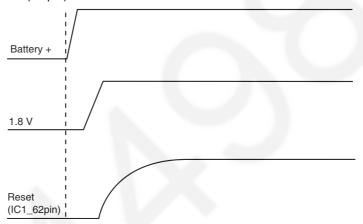

# 4.4.3. Charge Circuit

#### **Circuit Operation:**

When charging the handset on the Base Unit, the charge current is as follows;

$$DC+(5.5 \text{ V}) \rightarrow \!\! R56 \rightarrow \!\! R55 \rightarrow \!\! D22 \rightarrow \!\! CHARGE+(Base) \rightarrow \!\! CHARGE+(Handset) \rightarrow \!\! \left \lfloor \frac{Q5}{R4} \right \rfloor \rightarrow \!\! Q4 \rightarrow \!\! F1 \rightarrow \!\! BATTERY+... \text{ Battery...}$$

BATTERY- →R45 →GND →CHARGE-(Handset)→CHARGE-(Base) →GND →DC-(GND)

In this way, the BBIC on Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q9 of Handset.

Refer to Fig.101 in Power Supply Circuit (P.9).

# 4.4.4. Battery Low/Power Down Detector

#### **Circuit Operation:**

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

· Battery Low

Battery voltage: V(Batt) ≤ 2.25 V ± 50 mV

The BBIC detects this level and " starts flashing.

Power Down

Battery voltage: V(Batt) ≤ 2.0 V ± 50 mV The BBIC detects this level and power down.


## 4.4.5. Speakerphone

The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm.

# 4.5. Circuit Operation (Charger Unit)

# 4.5.1. Power Supply Circuit

The power supply is as shown.

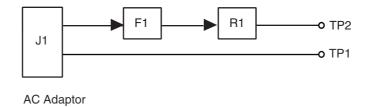


# 4.6. Behavior of Electric Power Failure

In case that the power from AC adaptor is lost and lose radio waves, BBIC (IC1) turns IC6 ON since handset presumes that base unit's power is failed.

Base unit detects that power voltage of AC adaptor +5.5V is OFF at IC351, then turns Q351 ON.

It's possible to use the units during the power failure, supplying power to VBAT of base unit from battery of handset through IC7, CHG terminal and Q351.

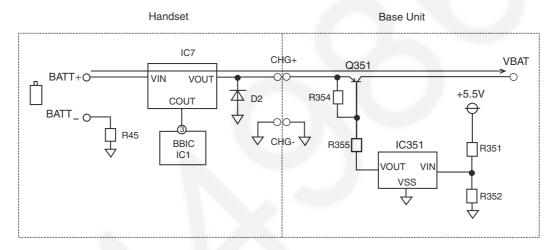

# 4.7. Signal Route

```
SIGNAL
                                                 ROUTE
SIGNAL ROUTE I
                    IN -
                                                                                     OUT
DTMF TONE
                 (BASE UNIT)
TEL OUT
                 IC7 (27) - R116 - R29 - C22 - Q5 - Q3 - D3 -
                                                     L P1 - B
(to Tel Line)
                 (BASE UNIT)
DTMF TONE
                       _ D3 - Q3 - Q5 - R20 - C56 - R117 - IC7 (25)
                 Α ----
TEL IN
(from Tel Line)
                (HANDSET)
CDL TX
                (to Tel Line)
                DA801 - C803 - ANT to BASE
                (BASE UNIT)
                                                                        -C864 - IC7 (3)
                from HANDSET ANT1 - C851 - DA802 - C803 - DA801 - C826 -
                               ANT2 - C853
                                                                         C863 - IC7 (2)
                TIC7 (27) - R116 - R29 - C22 - Q5 - Q3 - D3 TAP1 - B
CDL RX
               (BASE UNIT)
                       (from Tel Line)
               - L802 ___ C812 - DA801 - C803 - DA802 __ C851 - ANT1 to HANDSET
              (HANDSET)
               from BASE UNIT ANT - C803 - DA801 - C826 — C864 - IC1 (3)
                                                          L C863 - IC1 (2)
                IC (23) - RECEIVER (+)
IC (24) - RECEIVER (-)
              + (BASE UNIT)
Caller ID
              B - P1 - C4 - R6 - R33 - IC7 (21) IC7 (95) - L802 C812 - A - C3 - R4 - R35 - IC7 (23) IC7 (94) - C813
(from Tel Line)

─ (HANDSET)
SP-PHONE TX
                (to Tel Line)
                DA801 - C803 - ANT to BASE
                (BASE UNIT)
               from HANDSET ANT1 - C851 DA802 - C803 - DA801 -C826 C864 - IC7 (3)
ANT2 - C853 C863 - IC7 (2)
                T IC7 (27) - R116 - R29 - C22 - Q5 - Q3 - D3 A
SP-PHONE RX (BASE UNIT)
                A B - P1 D3 - Q3 - Q5 - R20 - C56 - R117 - IC7 (25) T IC7 (95) - IC7 (94) -
(to Tel Line)
                - L802 __ C812 - DA801 - C803 - DA802 __ C851 - ANT1 to HANDSET
                - C813 –
                (HANDSET)
               from BASE UNIT ANT - C803 - DA801 - C826 — C864 - IC1 (3) C863 - IC1 (2)
                IC1 (34) - SP (-)
IC1 (36) - SP (+)
```

# 5 Location of Controls and Components

Refer to the Operating Instructions.

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

# 6 Installation Instructions

Refer to the Operating Instructions.

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

# 7 Operating Instructions

Refer to the Operating Instructions.

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

# 7.1. For Service Hint

Items	Contents					
Battery	You could use other rechargeable batteries sold in a market, but the unit is not guaranteed to work properly.					
	The battery strength may not be indicated correctly if the battery is disconnected and connected again, even after it is fully charged. In that case, by recharging the battery as mentioned in the Operating Instructions, you will get a correct indication of the battery strength.					
Recall	Earth Recall feature is not supported in this model.					
PIN Code	<ul> <li>Change the PIN using the following method.</li> <li>1 ■ # 132</li> <li>2 ※ 7000</li> <li>3 Enter the new 4-digit base unit PIN. → ○K → [水心]</li> </ul>					


# 8 Service Mode

# 8.1. Engineering Mode

#### 8.1.1. Base Unit

# Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

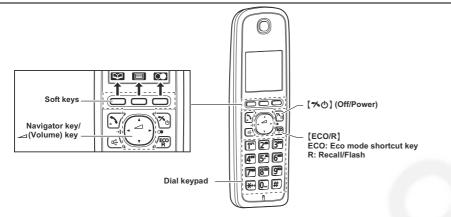




## H/S key operation

- 1). Register a Handset to a Base Unit. (\*1)
- 2). Press 🔳 .
- 3). Select "Initial Setup" using [▲]or[▼] then press ok or [►].
- 4). Select "Line Setup" using [▲]or[▼] then press **OK** or [►].
- 5). Enter "7", "2", "6", "2", "7", "6", "6", "4".

  Note: 7262 7664 = PANA SONI

  (see letters printed on dial keys)
- 6). Select "Write EEP" using [▲]or[▼] then press **OK** or [►].
- 7). Enter "●", "●", "●", "●" (Address). (\*2)
- 8). Enter "\*", "\*" (New Data). (\*2)
- 9). Press **OK** , a long confirmation beep will be heard.
- 10). Press [本句] (off) to return to standby mode.

  After that, turn the base unit power off and then power on.

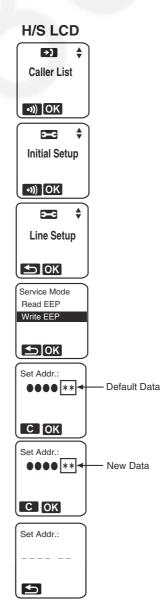

# Frequently Used Items (Base Unit) ex.)

Items	Address	Default Data	New	Data	Remarks
C-ID (FSK) sensitivity	05 6C	00	01 (6 dB up)		When hex changes from "00" to "01" or "02", gain increases by 6 dB or 12 dB.
Frequency	00 08/00 07	02/70	-	-	Use these items in a READ-ONLY mode to
ID	00 02~00 06	Given value	-	-	confirm the contents. Careless rewriting may cause serious damage to the computer system.
Bell length	02 42	64 (10sec) (*3)	1E (3 sec)	14 (2 sec)	This is time until bell stops ringing. (Unit: 100 msec)
PULSE Dial speed (10PPS -> 20PPS)	02 1D	28 (40msec) (*3)	14 (20msec)	-	This is pulse make time. (Unit:1msec)
	02 1E	3C (60msec) (*3)	1E (30 msec)	-	This is pulse break time. (Unit:1msec)
	02 31	57 (870msec) (*3)	2C (440msec)	-	This is inter-digit time in pulse mode.

# Note:

- (\*1) Refer to  ${\bf Registering}$  a  ${\bf Handset}$  to a  ${\bf Base}$   ${\bf Unit}$  in the Operating Instructions.
- (\*2) When you enter the address or New Data, please refer to the table below.

Desired Number (hex)	Input Keys	Desired Number (hex)	Input Keys
0	0	A	[R] + 0
1	1	В	[R] + 1
		С	[R] + 2
		D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5


(\*3)

Bell length	64(hex) = 100(dec) →100 × 100 msec = 10000 msec (10 sec)
PULSE Dial speed	28(hex)=40(dec)
(10PPS -> 20PPS)	3C(hex)=60 (dec) →60 × 1msec=60 msec
	57 (hex)=87 (dec) →87 × 10 msec=870 msec

#### 8.1.2. Handset

# Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

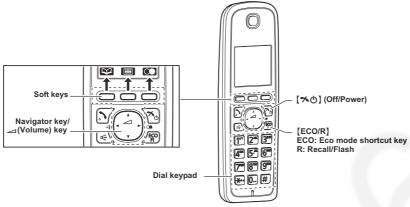


H/S key operation

- 1). Press 🔳 .
- 2). Select "Initial Setup" using [▲] or [▼] then press OK or [►].
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".

  Note: 7262 7664 = PANA SONI

  (see letters printed on dial keys)
- 4). Select "Write EEP" using [▲] or [▼] then press OK or [►].
- 5). Enter "●", "●", "●", "●" (Address). (\*1)
- 6). Enter "\*", "\*" (New Data). (\*1)
- 7). Press **OK**, a long confirmation beep will be heard.
- 8). Press [メゆ] (off) to return to standby mode.

After that, remove and reinsert the batteries. Press the Power button for about 1 second if the power is not turned on.

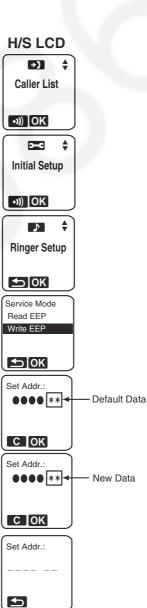

## Frequently Used Items (Handset)

ex.

Items	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Sending level	04 5A	Adjusted value	Given value	F0	DF	(*2)
Receiving level	04 5B	Adjusted value	Given value	F0	DF	(*3)
Battery Low	00 09	70	-	-	-	
Frequency	00 08/00 07	02/70	-	-	-	(*4)
ID	00 02~00 06	Given value	-	-	-	

#### Note:

(\*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[R] + 0
1	1	В	[R] + 1
-		С	[R] + 2
		D	[R] + 3
		E	[R] + 4
9	9	F	[R] + 5

(\*2) When adding "01" (hex) to default value, sending level increases by 0.25 dB. ex.)

Item	Default Data	New Data	
	E7	EB E3	
Sending level -1.0 dBm		0 dBm	-2.0 dBm

(\*3) When reducing "01" (hex) from default value, receiving level increases by 0.25 dB. ex.)


Item	Default Data	New Data	
	E7	EB E3	
Receiving level	-23.5 dBm	-24.5 dBm	-22.5 dBm

(\*4) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the handset.

# 8.2. Copying Phonebook Items when Repairing


You can copy the handset phonebook to another (compatible Panasonic) handset. This will help to save the original phonebook data which the customer has registered.

Refer to the following procedures.

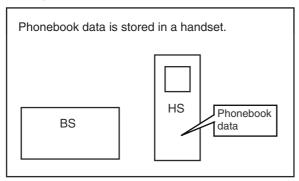

Case 1: A base unit has a defect.


(Replacing a base unit PCB etc...)

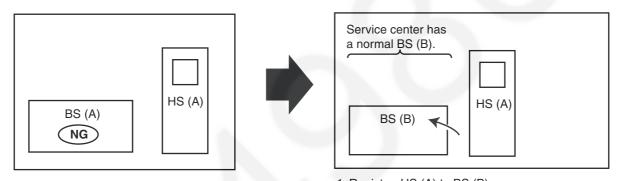

 Register HS (A) to BS (B).
 HS (A) is normal, therefore no need to copy the phonebook data.

Case 2: A base unit has a defect.

(Replacing both a base unit and a handset)

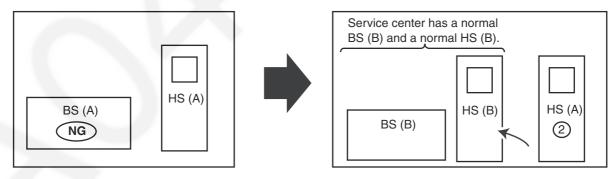


- 1. Register HS (A) to BS (B) as a handset no. 2.
- 2. Copy the phonebook data from HS (A) to HS (B).
- 3. Cancel the HS 2 (HS (A)).

#### Note:


- BS=Base Unit, HS=Handset
- If the max number of handsets are already registered to the base unit, a new handset cannot be registered.
- To register the handset, refer to **Registering a Handset to a Base Unit** in the Operating Instructions.
- To cancel the handset, refer to **Deregistering a Handset** in the Operating Instructions.
- To copy the handset phonebook, refer to Copying Phonebook Entries in the Operating Instructions.

Case 3: A handset has a defect.
(Radio transmission is functioning.)

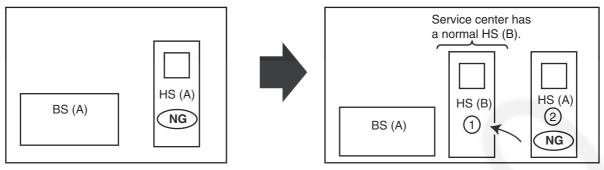

- 1. Cancel HS (A).
- 2. Register HS (B) as a handset no. 1.
- 3. Register HS (A) as a handset no. 2.
- 4. Copy the phonebook data from HS (A) to HS (B).
- 5. Cancel HS 2 (HS (A)).

Case 4: A handset has a defect.
(Radio transmission is functioning.)

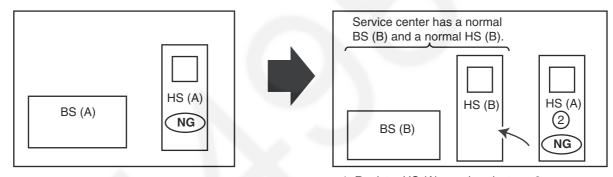

- 1. Register HS (A) as a handset no. 2.
- 2. Copy the phonebook data from HS (A) to HS (B).
- 3. Cancel HS 2 (HS (A)).

#### Note:

- BS=Base Unit, HS=Handset
- If the max number of handsets are already registered to the base unit, a new handset cannot be registered.
- To register the handset, refer to Registering a Handset to a Base Unit in the Operating Instructions.
- To cancel the handset, refer to **Deregistering a Handset** in the Operating Instructions.
- To copy the handset phonebook, refer to **Copying Phonebook Entries** in the Operating Instructions.

# 8.3. How to Clear User Setting


Units are reset to the Factory settings by this operation (Erase stored Phone numbers, Caller list and etc.)

#### Note:

- Some menus are not reset. Refer to Operating Instructions (P.15).
- The reset menus differ depending on the following operations.
- · This operation should not be performed for a usual repair.

## 8.3.1. Resetting both base unit and handset

Both the base unit and the registered handset which you did the following steps ① to ④ are reset. Other registered handsets will not be reset.

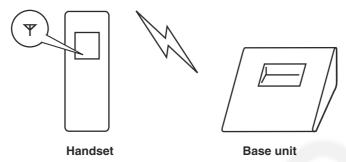

- 1 Connect the AC adaptor to the base unit and install the charged batteries into the handset.
- ② Confirm the handset is registered to the base unit (♥ lights).

  If the handset is not registered to the base unit (♥ lights), register it. (\*1)
- (3) Lift the handset and press [ > 0] to put the handset in standby mode.
- 4 Press 1, 5, 9 and  $\times$  key of the handset simultaneously until a confirmation tone is heard.
- (5) Disconnect the AC adaptor, then remove the battery.

#### Note:

(\*1) Refer to Registering a Handset to a Base Unit in the Operating Instructions.

# 8.3.2. Resetting only handset

The only handset is reset by doing the following steps ① to ④.



- 1) Install the charged batteries into the handset.
- 2 Lift the handset and press [>0] to put the handset in standby mode.
- 3 Press 3, 5, 7 and # key of the handset simultaneously until a confirmation tone is heard. (\*2)
- 4 Remove the battery.


# Note: (\*2)

- The handset registration to the base unit is cancelled.
- If the handset needs to be registered to the base unit, refer to **Registering a Handset to a Base Unit** in the Operating Instructions.
- If users do not bring the base unit with them, the registration procedure has to be done by users themselves.

# 9 Troubleshooting Guide

# 9.1. Troubleshooting Flowchart

#### **Flow Chart**

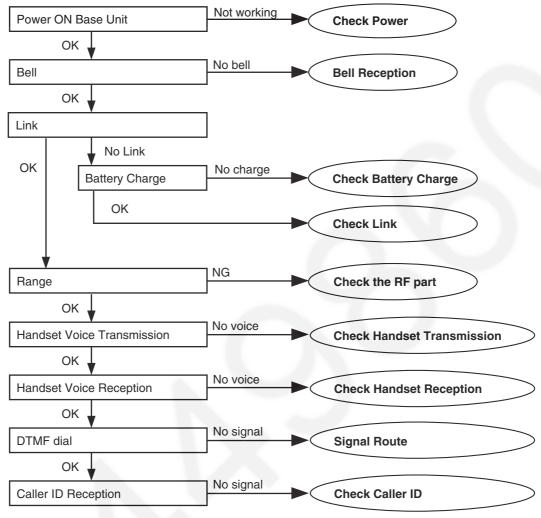

#### **Cross Reference:**

Check Power (P.24)

**Bell Reception** (P.34)

**Check Battery Charge (P.25)** 

Check Link (P.26)

Check the RF part (P.30)

**Check Handset Transmission** (P.33)

**Check Handset Reception (P.33)** 


Signal Route (P.14)

Check Caller ID (P.33)

#### 9.1.1. Check Power

#### 9.1.1.1. Base Unit

Is the AC Adaptor inserted into AC outlet? (\*1)

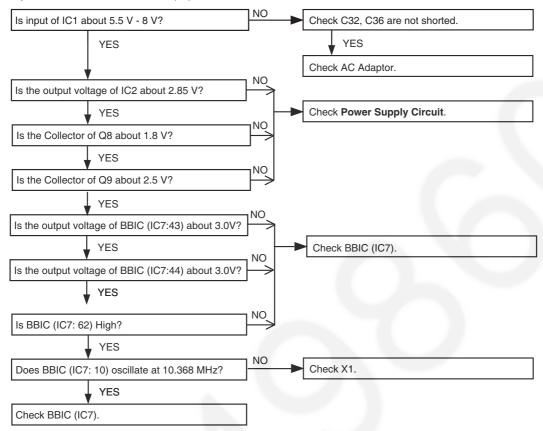


**Cross Reference:** 

**Power Supply Circuit (P.9)** 

#### Note:

(\*1) Refer to **Specifications** (P.6) for part number and supply voltage of AC Adaptor.

#### 9.1.1.2. Handset

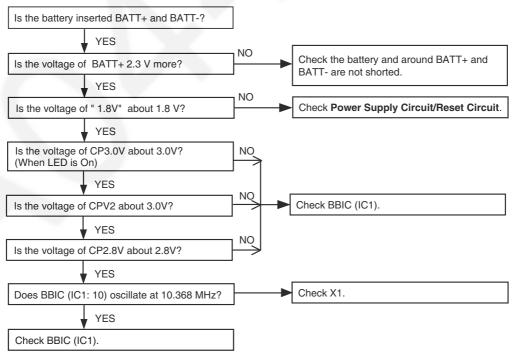


**Cross Reference:** 

**Power Supply Circuit/Reset Circuit (P.12)** 

# 9.1.2. Check Battery Charge


## 9.1.2.1. Base Unit

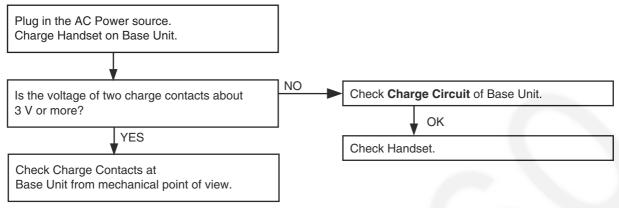

#### **Cross Reference:**

Charge Circuit (P.12)

## 9.1.2.2. Handset

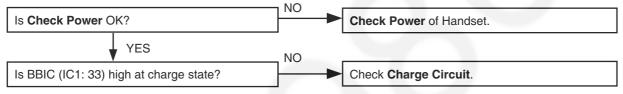


#### **Cross Reference:**

Check Power (P.24)

Charge Circuit (P.12)

# 9.1.2.3. Charger Unit

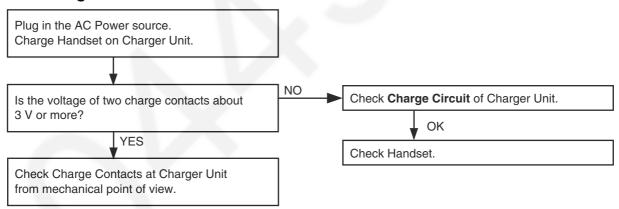


#### **Cross Reference:**

Charge Circuit (P.12)

## 9.1.3. Check Link

#### 9.1.3.1. Base Unit

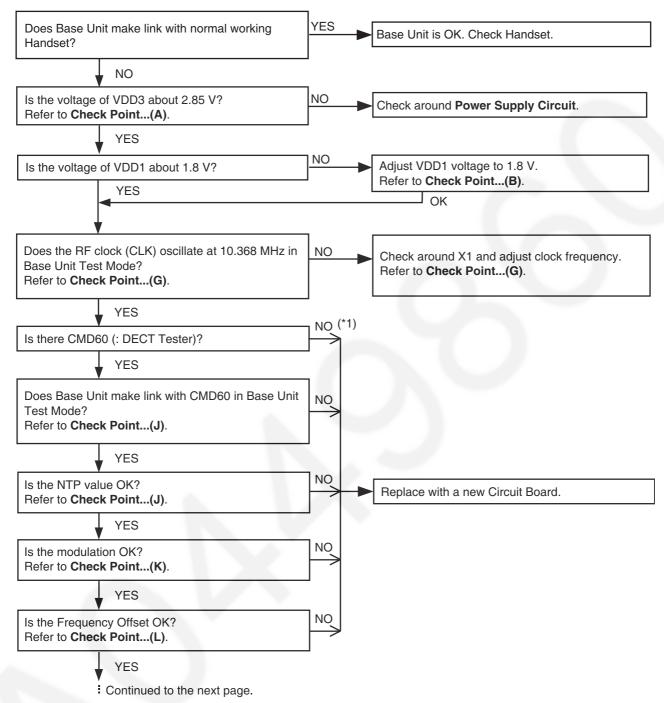


#### Note:

(\*1) Refer to Troubleshooting by Symptom (Base Unit and Charger Unit) (P.35)

#### **Cross Reference:**

Check Point (Base Unit) (P.35)


**Power Supply Circuit (P.9)** 

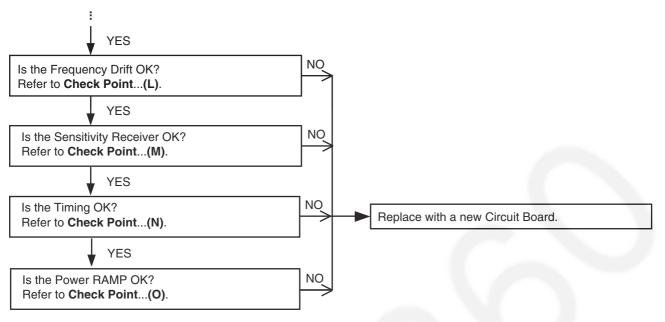

#### **Cross Reference:**

Check Point (Base Unit) (P.35)

#### 9.1.3.2. Handset

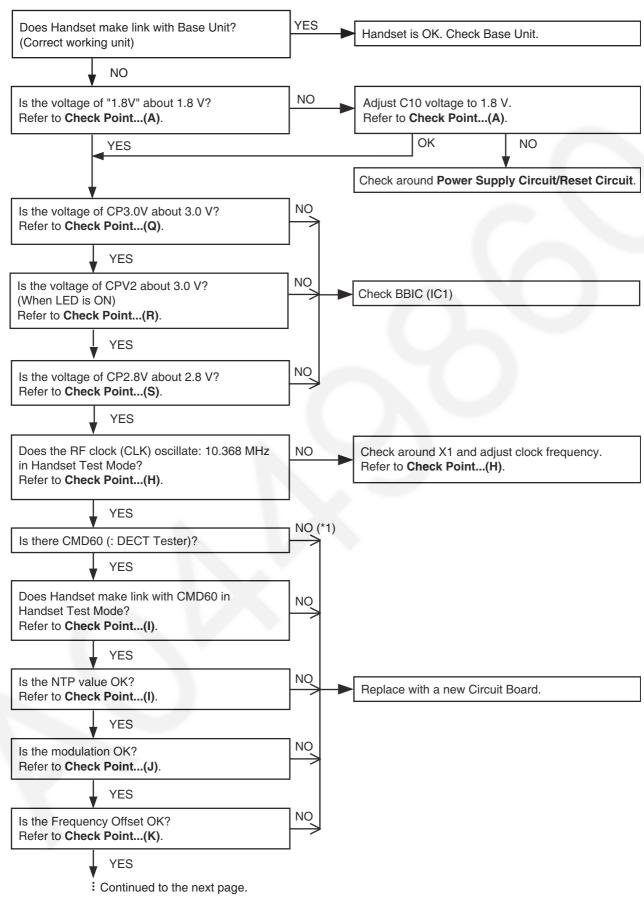


Note:

(\*1) Refer to Troubleshooting by Symptom (Handset) (P.38)

#### **Cross Reference:**

Check Point (Handset) (P.38)

# Power Supply Circuit/Reset Circuit (P.12)

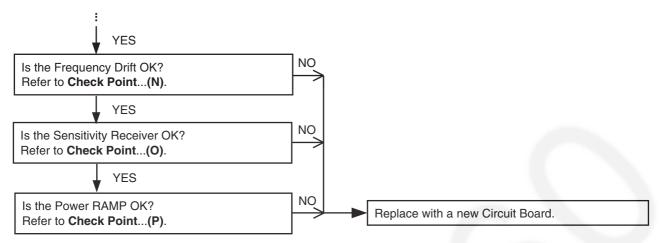

#### **Cross Reference:**

Check Point (Handset) (P.38)


# 9.1.4. Check the RF part

# 9.1.4.1. Finding out the Defective part

- 1. Prepare Regular HS (Handset) and Regular BU (Base unit).
- 2. a. Re-register regular HS (Normal mode) to Base Unit (to be checked).
  - If this operation fails in some ways, the Base Unit is defective.
  - b. Re-register Handset (to be checked) to regular BU (Normal mode). If this operation fails in some ways, the Handset is defective.

#### After All the Checkings or Repairing

1. Re-register the checked Handset to the checked Base Unit, and Regular HS to Regular BU.

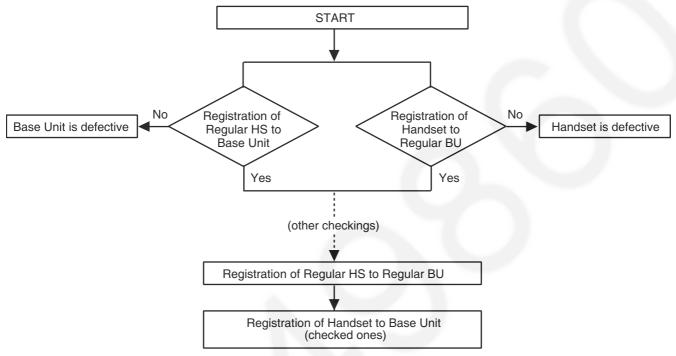


#### Note:

If you need to register a handset, refer to Registering a Handset to a Base Unit in the Operating Instructions.

# 9.1.4.2. RF Check Flowchart

Each item (1  $\sim$  3) of RF Check Flowchart corresponds to **Check Table for RF part** (P.32). Please refer to the each item.

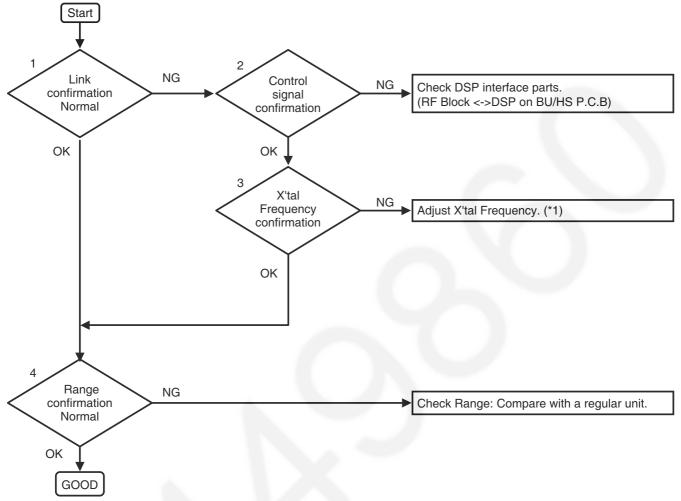

#### Note:

(\*1) Base unit - refer to (G) of **Check Point (Base Unit)** (P.35) Handset - refer to (H) of **Check Point (Handset)** (P.38)


# 9.1.4.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	HS (Handset) Check
1	Link Confirmation Normal	Register Regular HS to BU (to be checked).	Register HS (to be checked) to Regular BU.
	HS, BU Mode: [Normal mode]	Press [Talk] key of the Regular HS to establish link.	Press [Talk] key of the HS to establish link.
2	X'tal Frequency confirmation	1. Check X'tal Frequency. (*1) (10.368 MHz ± 20 Hz)	1. Check X'tal Frequency. (*2) (10.368 MHz ± 20 Hz)
3	Range Confirmation Normal	Register Regular HS to BU (to be checked).	Register HS (to be checked) to Regular BU.
	HS, BU Mode: [Normal mode]	Press [Talk] key of the Regular HS to establish link.     Compare the range of the BU (being checked) with that of the Regular BU.	Press [Talk] key of the HS to establish link.     Compare the range of the HS (being checked) with that of the Regular HS.

# Note:

- (\*1) Refer to **Adjustment Standard (Base Unit)** (P.49)
- (\*2) Refer to Adjustment Standard (Handset) (P.53)


# 9.1.5. Check Handset Transmission

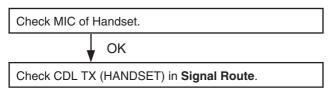

#### **Cross Reference:**

Signal Route (P.14)

# 9.1.6. Check Handset Reception

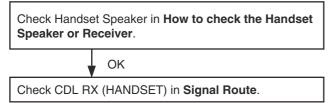

# **Cross Reference:**

How to Check the Handset Speaker or Receiver (P.57). Signal Route (P.14)

# 9.1.7. Check Caller ID


Check Caller ID in Signal Route.

#### **Cross Reference:**


Signal Route (P.14)

# 9.1.8. Bell Reception

## 9.1.8.1. Base Unit

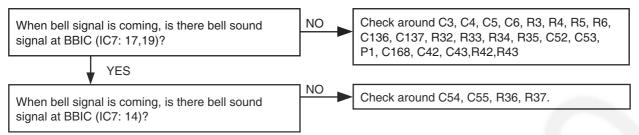

# 9.1.8.2. Handset

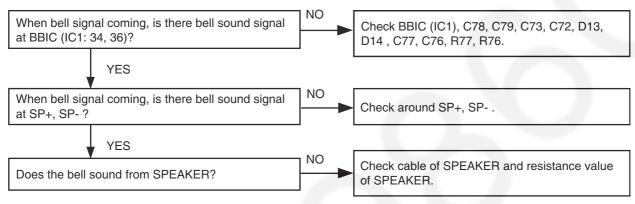

#### **Cross Reference:**

**Telephone Line Interface (P.10)** 

Check Link (P.26)

How to Check the Handset Speaker or Receiver (P.57)

# 9.2. Troubleshooting by Symptom (Base Unit and Charger Unit)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (\*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
You cannot dial.	Check item (A)-(I),(T).	Check item (A)-(I), (J)-(P),(T).	
You cannot hear the caller's voice.	Check item (A)-(G),(Q),(T).	Check item (A)-(G), (J)-(P), (Q),(T).	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (J)-(P).	
The acoustic transmit level is high or low.	Check item (Q).	Check item (Q).	
The acoustic reception level is high or low.	Check item (Q).	Check item (Q).	
Base unit and handset do not link each other.	Check item (A)-(I).	Check item (A)-(P).	
The unit cannot charge.	Check item (R).	Check item (R).	

#### Note:

(\*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.

(\*2) Refer to Check Point (Base Unit) (P.35)

# 9.2.1. Check Point (Base Unit)

Please follow the items below when BBIC or EEPROM or FLASH is replaced.

#### Note:

After the measuring, suck up the solder of TP.

\*: The Setting Method of JIG (Base Unit) (P.47) is required beforehand.

The connections of simulator equipment are as shown in Adjustment Standard (Base Unit) (P.49).

	Items	Check	Procedure	Check or
	items	Point	1 locedule	Replace Parts
(8)	0.01/.0		4.0.5.4.4.4.4.4.4.4.4.4.4.4.4.4.4.4.4.4.	
( <b>A</b> )	3.0 V Supply	VDD3	1. Confirm that the voltage between test point VDD3 and GND is 2.85 V $\pm$ 0.2 V.	IC2, C32, C36,
	Confirmation			C86, C88, R91,
				R93, L3, C602,
				C38, R605,
				R607, R608,
				R609, R610,
				R612, Q602
( <b>B</b> )	1.8 V Supply	VDD1	1. Confirm that the voltage between test point VDD1 and GND is $1.8 \text{ V} \pm 0.02 \text{ V}$ .	Q8, C75, C614,
	Confirmation		Execute the command "VDD", then check the current value.	C61, IC7, R611
			3. Adjust the 1.8V voltage of VDD1 executing command "VDD XX"(XX is the	
			value).	
(C)	Charge Pump 3.0V	VDD5	1. Confirm that the voltage between test point VDD5 and GND is 3.0 V -0.1/+0.3	IC7,C625
	Supply Confirmation		V.	
( <b>D</b> )	Charge Pump 3.0V	VDD4	1. Confirm that the voltage between test point VDD4 and GND is $3.0 \text{ V} \pm 0.2 \text{ V}$ .	IC7,C616, R620
	Supply Confirmation			
(E)*	BBIC Confirmation	-	BBIC Confirmation (Execute the command "getchk").	IC7, X1, R77,
			Confirm the returned checksum value.	RA80
			Connection of checksum value and program number is shown below.	
			checksum value program number	
			ex.) B10C DCE1EN	
/E\*	EEPROM Confirmation		1. EEP-ROM Confirmation (Execute the command "sendchar EPV").	IC7, RA402,
( <b>F</b> )*	EEPROW Commination	-	,	, , , , , , , , , , , , , , , , , , ,
			2. Confirm the returned Value (Value for reference is written at "EEPROM C/	C51, R657, IC401
(O)*	DDIO Ola ala Adiantana ant	01.14	SUM" in Software_Version_Table.xls).	
( <b>G</b> )*	BBIC Clock Adjustment	CLK	1. Confirm that the voltage between testpoint VDD4 and GND is less than 1.0 V.	X1, IC7, R430,
			2. Input Command " sendchar sfr", then you can confirm the current value.	C305
			3. Check X'tal Frequency. (10.368 MHz ± 20 Hz).	
			4. If the frequency is not 10.368MHz ± 20Hz, adjust the frequency of CLK	
			executing the command "sendchar sfr xx xx (where xx is the value)" so that	
			the reading of the frequency counter is 10.368000 MHz ± 5 Hz.	

## KX-TG6611CXB/KX-TG6611CXS/KX-TG6612CXB/KX-TG6612CXS/KX-TGA661CXB/KX-TGA661CXS

	Items	Check	Procedure	Check or
		Point		Replace Parts
(H)*	Hookswitch Check with	-	1. Connect Telephone Socket to Tel-simulator which is connected with 600 Ω	P1, Q3, R14,
	DC Characteristics		<ol><li>Set line voltage to 48 V and line current to 40mA at off-hook condition of normal telephone.</li></ol>	R15, Q4, R16, R17, D3,
			Execute the command "hookoff"	R18~R24, D21,
			4. Confirm that the line current is 40 mA ± 5 mA.	Q5, R27, IC7
			5. Execute the command "hookon".	
			6. Confirm that the line current is less than + 0.8 mA.	
(I)	DTMF Generator Check	-	1. Connect Telephone Socket to DTMF tester. (Load=600 Ω) 2. Link Handoot and much diel key.	IC7, R116, R29,
			Link Handset and push dial key.     Confirm DTMF character.	C22, Q5, D21
			4. Confirm that the high Group is -6.0 dBm ± 2 dBm.	
			5. Confirm that the low Group is -8.0 dBm ± 2 dBm.	
( <b>J</b> )*	Transmitted Power	-	Remove the Antenna before starting step from 1 to 7.	IC7,
	Confirmation	ANTI_TP	Configure the DECT tester (CMD60) as follows;	C802~C806,
			<setting> • Test mode: FP</setting>	C809~C813, C820, C837,
			Traffic Carrier: 5	C822, C823,
			Traffic Slot: 4	C825, C863,
			Mode: Loopback	C826, C864,
			• PMID: 00000	C851, C853,
			RF LEVEL = -70 dBm.     Execute the command "sendchar TST".	DA801, DA802, L802, L803,
			3. Execute the command "sendchar dmv 2 2".	C855~C858,
			Check that "Signalling Status" has been set to "Locked", then press "ACCEPT	R806, R807,
			RFPI".	R106, R109,
			5. Initiate connection from Dect tester ("set up connect")	Q9, C617,R71
			6. Execute the command "ANT1".	
( <b>K</b> )*	Modulation Check	_	7. Confirm that the NTP value at ANT is 19.0 dBm ~ 25.0 dBm. Follow steps 1 to 6 of (J).	IC7,
(14)	Wodulation Check	ANTI_TP	7. Confirm that the B-Field Modulation is $-350 \pm 50 / +350 \pm 50 \text{ kHz/div } \&$	,
			Modulated width ≧ 610 kHz using data type Fig31.	C809~C813,
				C820, C837,
				C822, C823,
				C825, C863,
				C826, C864, C851, C853,
				DA801, DA802,
				L802, L803,
				C855~C858,
				R806, R807,
				R106, R109, Q9, C617,R71
(L)*	Frequency Offset Check	-	Follow steps 1 to 6 of (J).	IC7,
,	, , , , , , , , , , , , , , , , , , , ,	ANTI_TP	7.Confirm that the frequency offset is < ± 20 kHz.	C802~C806,
				C809~C813,
				C820, C837,
				C822, C823, C825, C863,
				C826, C864,
				C851, C853,
				DA801, DA802,
				L802, L803,
				C855~C858, R806, R807,
				R106, R109,
				Q9, C617,R71
( <b>M</b> )*	Frequency Drift	-	Follow steps 1 to 6 of (J).	IC7,
	Confirmation	ANTI_TP	7.Confirm that the frequency drift is < ± 20 kHz/msec.	C802~C806,
				C809~C813,
				C820, C837, C822, C823,
				C825, C863,
				C826, C864,
				C851, C853,
				DA801, DA802,
				L802, L803, C855~C858,
				R806, R807,
1				R106, R109,
				Q9, C617,R71

	Items	Check	Procedure	Check or
	items	Point	Procedure	Replace Parts
/NI\*	Consitivity Desciver	1 Ollit	Follow stone 4 to 6 of (1)	
( <b>N</b> )*	Sensitivity Receiver	ANITI TO	Follow steps 1 to 6 of (J).	IC7,
	Confirmation	ANTI_TP	7.Set DECT tester power to -90 dBm.	C802~C806,
			8.Confirm that the BER is < 1000 ppm.	C809~C813,
				C820, C837,
				C822, C823,
	ļ			C825, C863,
				C826, C864,
				C851, C853,
				DA801, DA802,
				L802, L803,
				C855~C858,
				R806, R807,
				R106, R109,
				Q9, C617,R71
<b>(O</b> )*	Timing Confirmation	-	Follow steps 1 to 6 of (J).	IC7,
		ANTI_TP	7.Confirm that the Timing accuracy is	C802~C806,
			• ± 5.0 ppm (When adjust the frequency of CLK in item (G)).	C809~C813,
		1	• ± 15 ppm (When do not adjust the frequency of CLK in item (G)).	C820, C837,
				C822, C823,
		1		C825, C863,
				C826, C864,
				C851, C853,
				DA801, DA802,
				L802, L803,
				C855~C858,
				R806, R807,
				R106, R109,
				Q9, C617,R71
( <b>P</b> )*	Power RAMP	_	Follow steps 1 to 6 of (J).	IC7,
(- )	Confirmation		7.Confirm that Power RAMP is matching.	C802~C806,
	Committee		7.00mm dat 1 000 1 dam to matering.	C809~C813,
				C820, C837,
				C822, C823,
				C825, C863,
				C826, C864,
				0020, 0004,
	ĺ			C851 C853
				C851, C853,
				DA801, DA802,
				DA801, DA802, L802, L803,
				DA801, DA802, L802, L803, C855~C858,
				DA801, DA802, L802, L803, C855~C858, R806, R807,
		h		DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109,
(6)	Audio Chaeli	R	4. Link with Handact which in connected to Line Circulates	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71
(Q)	Audio Check		Link with Handset which is connected to Line Simulator.      Set line veltage to 49 V and line gurrent to 50 mA.	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1,
(Q)	Audio Check	A	2. Set line voltage to 48 V and line current to 50 mA.	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of Handset and distortion level (Receive volume set to second position from</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of Handset and distortion level (Receive volume set to second position from</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29,
(Q)	Audio Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of Handset and distortion level (Receive volume set to second position from minimum).</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29,
	Audio Check  Charging Check		<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of Handset and distortion level (Receive volume set to second position from minimum).</li> <li>Confirm that the level is -23.5 dBm ± 4 dBm and that the distortion level is</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29,
(Q)			<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of Handset and distortion level (Receive volume set to second position from minimum).</li> <li>Confirm that the level is -23.5 dBm ± 4 dBm and that the distortion level is &lt;5 % at Receiver (34 Ω Load).</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29, C22
(R)	Charging Check	- VDD2	<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of Handset and distortion level (Receive volume set to second position from minimum).</li> <li>Confirm that the level is -23.5 dBm ± 4 dBm and that the distortion level is &lt;5 % at Receiver (34 Ω Load).</li> <li>Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge-2. Measure and confirm voltage across the resistor is 3.9 V ± 0.4 V.</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29, C22
		- VDD2	<ol> <li>Set line voltage to 48 V and line current to 50 mA.</li> <li>Input -45 dBm(600 Ω)/1 kHz to MIC of Handset. Measure the Level at Line I/F and distortion level.</li> <li>Confirm that the level is -1 dBm and that the distortion level is &lt;5 % at TEL Line (600 Ω Load).</li> <li>Input -20 dBm(600 Ω)/1 kHz to Line I/F. Measure the Level at Receiver of Handset and distortion level (Receive volume set to second position from minimum).</li> <li>Confirm that the level is -23.5 dBm ± 4 dBm and that the distortion level is &lt;5 % at Receiver (34 Ω Load).</li> <li>Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge</li> </ol>	DA801, DA802, L802, L803, C855~C858, R806, R807, R106, R109, Q9, C617,R71 IC7, SA1, P1, D3, Q3, Q4, R14, R15, R16, R17, D21, Q5, R19, R20, C14, C56, R117, R116, R29, C22

# 9.2.2. Check Point (Charger Unit)

	Items	Check	Procedure	Check or
		Point		Replace Parts
( <b>A</b> )	Charging Check	-	<ol> <li>Connect Charge Contact 12 Ω/2 W resistor between charge+ and charge</li> </ol>	R1, F1
			<ol><li>Measure and confirm voltage across the resistor is 3.5 V ± 0.3 V.</li></ol>	

## Note:

After the measuring, suck up the solder of TP.

The connection of adjustment equipment is as shown in Adjustment Standard (Charger Unit) (P.50).

## 9.3. Troubleshooting by Symptom (Handset)

If your unit has below symptoms, follow the instructions in remedy column. Remedies depend on whether you have DECT tester (\*1) or not.

	Remedy (*2)		
Symptom	You don't have DECT Tester.	You have DECT Tester. (Model Number : CMD60)	
Battery strength is not indicated correctly by Battery icon.	Check item (A)-(D), (E)-(G).	Check item (A)-(D), (E)-(G).	
You cannot hear the caller's voice.	Check item (A)-(C), (H), (O).	Check item (A)-(C), (H-(M))-(O)	
You cannot use handset a little away from base unit even if the handset is within range of the base unit.	-	Check item (I)-(N).	
Does not link between base unit and handset.	Check item (A)-(C), (H).	Check item (A)-(C), (I)-(N).	
The Audio level is high or low.	Check item (O).	Check item (O).	
The SP-Phone level is high or low.	Check item (P).	Check item (P).	

#### Note:

(\*1) A general repair is possible even if you don't have the DECT tester because it is for confirming the levels, such as Acoustic level in detail.

(\*2) Refer to Check Point (Handset) (P.38)

## 9.3.1. Check Point (Handset)

Please follow the items below when BBIC or EEPROM is replaced.

#### Note:

After the measuring, suck up the solder of TP.

\*: Connections (P.51) is required beforehand.

The connections of adjustment equipment are as shown in Adjustment Standard (Handset) (P.53).

	Items	Check	Procedure	Check or	
		Point		Replace Parts	
(A)*	1.8 V Supply Adjustment	VDD1	1. Confirm that the voltage between test point VDD1 and GND is 1.8 V ± 0.02	2 V. IC1, Q2, D1,	
			2. Execute the command "VDD", then check the current value.	C1, C44, R45,	
			<ol><li>Adjust the 1.8V voltage of VDD1 executing command "VDD XX"(XX is value).</li></ol>	s the C40, C45, F1	
(B)*	BBIC Confirmation		BBIC Confirmation (Execute the command "getchk").	IC1, X1, RA61,	
(3)	BBIO COMMINGUON		Confirm the returned checksum value.	R64, R66	
			Connection of checksum value and program number is shown below.	1104,1100	
			checksum value program number		
			ex.) 491E DCJ2EQ		
(C)*	EEP-ROM Confirmation	-	EEP-ROM Confirmation (Execute the command "sendchar EPV").	IC1, IC3,	
			2. Confirm the returned Value. (Value for reference is written at "EEPROI	M C/ RA40, C172	
			SUM" in Software_Version_Table.xls).		
( <b>D</b> )	Charge Control Check &	-	1. Apply 5.0 V between CHG(+) and CHG(-) with DC power supply and	set IC1, Q4 Q9,	
	Charge Current Monitor		current limit to 150 mA.	Q5, Q6, R9,	
	Check		Confirm the indication of "charging" on LCD.	R4, R5, R33,	
			2. Confirm that the current limit LED of DC power supply is ON/OFF.	C19, F1, C1,	
			Confirm it after waiting over 1 minute at least.	R30, R31, R8,	
			(If charge control cannot be confirmed by this procedure, please use batte	ry to R45	
			handset power supply and try again.)		
( <b>E</b> )*	Charge Detection (OFF)	-	1. Stop supplying 5.0 V to CHG (+) and CHG (-).	IC1, Q4 Q9,	
	Check		Confirm the indication of "charging" has been cleared.	Q5, Q6, R9,	
				R4, R5, R33,	
				C19, F1, C1,	
				R30, R31, R8,	
				R45	

	Items	Check Point	Procedure	Check or Replace Parts
(F)*	Battery Monitor Check	-	1. Apply 2.25 V between BATT+ and BATT-  2. Execute the command sendchar PAD sendchar LED 0 sendchar CRX 0 1 sendchar AD1 It assumes that the return value is XX.  a) 6c ≤ XX ≤ 71: No need to adjust b) XX: 6A ~ 6B: Need to adjust XX: 72 ~ 74: Need to adjust XX: 72 ~ 74: Need to adjust Write AD value of 2.25 V to EEPROM.  ex) read data: XX = 6A, write data: YY = 6A read data: XX = 73, write data: YY = 73 EEPROM = 0009(Low Voltage) write "YY" Execute the command "wreeprom 00 09 01 YY". EEPROM = 000A(No Voltage) write "YY -C" Execute the command "wreeprom 00 0A 01 ZZ".  Note:  ZZ = YY - C No Voltage writing data limit is '00'. c) XX: 00 ~ 69: Reject XX: 75 ~ FF: Reject	IC1, F1, C1, R45
( <b>G</b> )	Battery Low Confirmation	-	1. Apply 2.40 V between BATT+ and BATT 2. Confirm that there is no flashing of Battery Icon. 3. Apply 2.25 V ± 0.08 V between BATT+ and BATT 4. Confirm that there is flashing of Battery Icon.	IC1, F1, C1, R45
(H)*	BBIC Clock Adjustment	CLK	1. Apply 2.6 V between BATT+ and BATT- with DC power.  2. Input Command "sendchar sfr", then you can confirm the current value.  3. Check X'tal Frequency. (10.368 MHz ± 20 Hz).  4. If the frequency is not 10.368 MHz ± 20 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 10.368000 MHz ± 5 Hz.  Note:  Clear the registered information for Base Unit before measurement, because the Frequency will not possibly get stable due to the registered information.  Pressing the button of "3" "5" "7" "#"clears the registration.  Register to it on Base Unit after measurement.	
(I)*	Transmitted Power Confirmation		Remove the Antenna before starting step from 1 to 4.  1. Configure the DECT tester (CMD60) as follows; <setting>  • Test mode: PP  • RFPI: 0102030405  • Traffic Carrier: 5  • Traffic Slot: 4  • Mode: Loopback  • RF LEVEL = -70 dBm  • PACKET: PP32Z  2. Execute the command "sendchar TST 01 02 03 04 05".  3. Initiate connection from DECT tester.  4. Confirm that the NTP value at ANT is 19 dBm ~ 25 dBm.</setting>	IC1, C802~C806, C809~C814, C820, C822, C823, C825~C826, L802, C863, C864, L803, DA801, R806, R807
(J)*	Modulation Check and Adjustment	)	Follow steps 1 to 3 of <b>(K)</b> .  4.Confirm that the B-Field Modulation is -350 ± 50 / +350 ± 50 kHz/div & Modulated width ≧ 610 kHz using data type Fig 31.	IC1, C802~C806, C809~C814, C820, C822, C823, C825~C826, L802, C863, C864, L803, DA801, R806, R807
(K)*	Frequency Offset Confirmation	-	Follow steps 1 to 3 of (I). 4.Confirm that the frequency Offset is < ± 20 kHz.	IC1, C802~C806, C809~C814, C820, C822, C823, C825~C826, L802, C863, C864, L803, DA801, R806, R807

### KX-TG6611CXB/KX-TG6611CXS/KX-TG6612CXB/KX-TG6612CXS/KX-TGA661CXB/KX-TGA661CXS

	Items	Check	Procedure	Check or
		Point		Replace Parts
(L)*	Frequency Drift	-	Follow steps 1 to 3 of (I).	IC1,
	Confirmation		4.Confirm that the frequency Drift is < ± 20 kHz/msec.	C802~C806,
				C809~C814,
				C820, C822,
				C823,
				C825~C826,
				L802, C863,
				C864, L803,
				DA801, R806,
				R807
( <b>M</b> )*	Sensitivity Receiver	-	Follow steps 1 to 3 of (I).	IC1,
	Confirmation		4.Set DECT tester power to -88 dBm.	C802~C806,
			5.Confirm that the BER is < 1000 ppm.	C809~C814,
				C820, C822,
				C823,
				C825~C826,
				L802, C863,
				C864, L803,
				DA801, R806,
(8.1) di				R807
( <b>N</b> )*	Power RAMP	-	Follow steps 1 to 3 of (I).	IC1,
	Confirmation		4.Confirm that Power RAMP is matching.	C802~C806,
				C809~C814,
				C820, C822,
				C823,
				C825~C826,
				L802, C863,
				C864, L803,
				DA801, R806, R807
(0)	Audio Check and		Link to BASE which is connected to Line Simulator.	
<b>(O</b> )	Confirmation	-	Set line voltage to 48 V and line current to 50 mA.	IC1, C12, C96, C97, R215,
	Commination		3. Input -45 dBm (600 $\Omega$ ) / 1 kHz to MIC of Handset. Measure the Level at Line I/F	
			and distortion level.	C11, C13,
			4. Confirm that the level is -1 dBm and that the distortion level is <5 % at TEL Line	
			(600 $\Omega$ Load).	1120, 11110
			5. Input -20 dBm (600 $\Omega$ ) / 1 kHz to Line I/F. Measure the Level at Receiver of	
			Handset and distortion level (Receive volume set to second position from	
			minimum).	
			6. Confirm that the level is -23.5 dBm ± 4 dBm and that the distortion level is <5 %	
			at Receiver (34 $\Omega$ Load).	
( <b>P</b> )	SP phone Audio Check	-	Link to Base which is connected to Line Simulator.	IC1, C12, C73,
(,,,	and Confirmation		Set line voltage to 48 V and line current to 50 mA.	D13, D14,
			Set the handset off-hook using SP-Phone key.	MIC, C11,
			4. Input -30 dBm (600 $\Omega$ ) / 1 KHz to Line I/F and measure Receiving level at SP+	C13, RA4,
			and SP	R27, R28,
			5. Confirm that the level is -5 dBm ± 3 dBm and that the distortion level is < 5 %.	C96, C97,
			(Val = Max at SP (8 $\Omega$ Load))	R215, C72,
			, , , , , , , , , , , , , , , , , , , ,	C73
( <b>Q</b> )	Charge Pump 3.0V	CP3.0V	1. Confirm that the voltage between testpoint CP3.0V and GND is 3.0 V -0.1 /	C49, C53, C54
• /	Supply Confirmation		+0.3 V.	, = = = , = = .
( <b>R</b> )	Charge Pump CPV2	CPV2	1. Confirm that the voltage between testpoint CPV2 and GND is 3.0 V ± 0.3 V.	C52, C55
(,	3.0V Supply		(Power is supplied when LED in on)	
	Confirmation		, , , , , , , , , , , , , , , , , , , ,	
( <b>S</b> )	CP2.8V	CP2.8V	1. Confirm that the voltage between testpoint CPV2.8V and GND is 2.8 V ± 0.3 V.	D3, C51
(-)	Confirmation			-,
				<u> </u>

## 9.3.2. Troubleshooting for Speakerphone

When the customer's telephone line corresponds to the following conditions, and the transmission signal of SP-Phone is interrupted, performing the next set up to a cordless handset will improve it to some extent.

#### **Conditions**

- 1. When customer's line has less line loss.
  - ex.) The customer is using optical fiber, ISDN terminal adaptor, or PBX.
  - In this case, receiving signal is strong and it may affect transmission signal.
- 2. When the other party is talking from noisy place.
  - ex.) The other party is using cellular phone. The background noise is very loud.
  - In this case, the noise from the other party (i.e. surrounding noise) may affect transmission signal.

#### **Setting Method**

• Change the handset address of EEPROM (0129) from 00 to 01 by **Engineering Mode**.


# 10 Disassembly and Assembly Instructions

# 10.1. Disassembly Instructions


## 10.1.1. Base Unit

1 Remove the 4 screws to remove the cabinet cover.
Cabinet cover


② Insert a plastic card. (Ex. Used SIM card etc.) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.

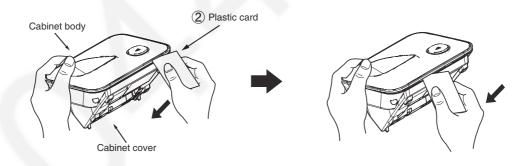


3 Remove the tape and solders.

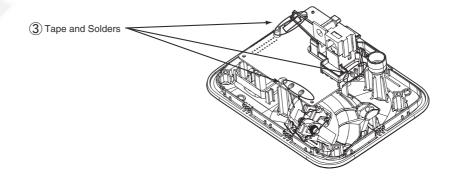

(4) Remove the screw to remove the jack holder.

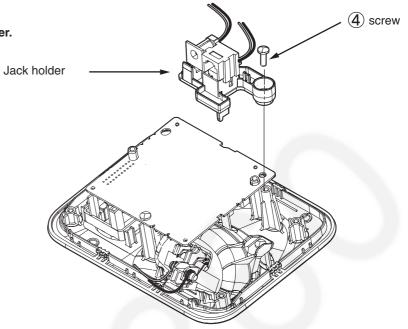

(5) Remove the screw to remove the main P.C. board.

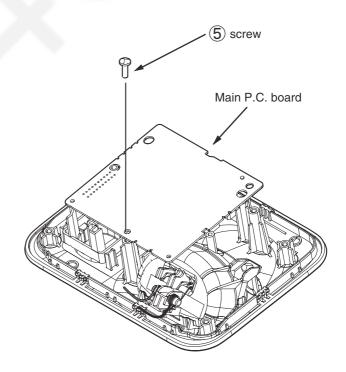


### 10.1.2. Handset

1 Remove the 2 screws.


- ② Insert a plastic card. (Ex. Used SIM card etc.) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.
- (3) Likewise, open the other side of the cabinet.
- 4 Remove the cabinet cover by pushing it upward.

- (5) Remove the solders and tape.
- 6 Remove the screw to remove the main P. C. board.

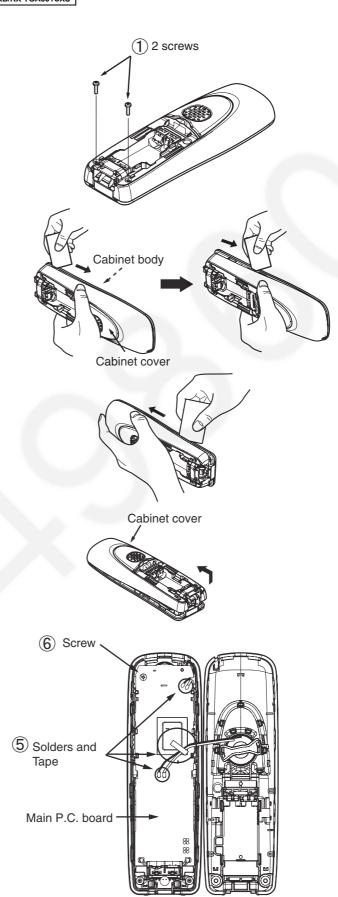


## 10.1.3. Charger Unit


(1) Remove the screw to remove the cabinet cover.

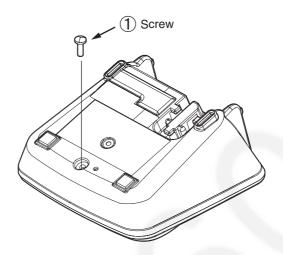

② Insert a plastic card. (Ex. Used SIM card etc.) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.

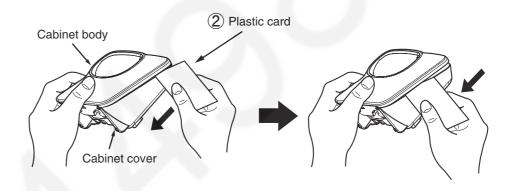


(3) Remove the solders to remove the 2 charge terminals.

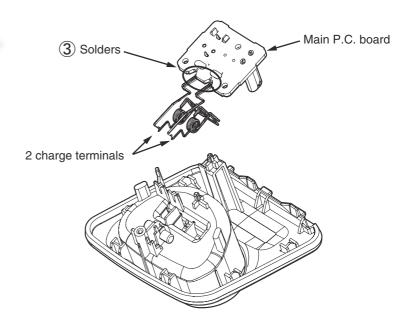


## 10.2. How to Replace the Handset LCD

#### Note:


The illustrations are simplified in this page. They may differ from the actual product.

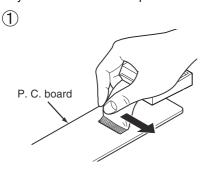


Peel off the FFC (Flexible Flat Cable) from the LCD, in the direction of the arrow. Take care to ensure that the foil on the P.C. board is not damaged.

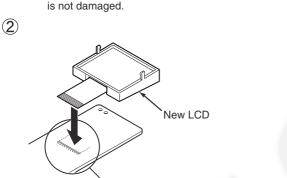

Fit the heatseal of a new LCD.

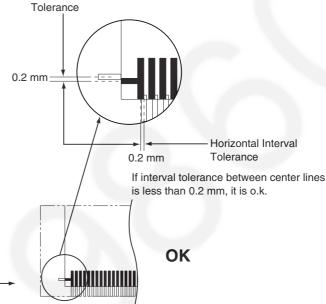

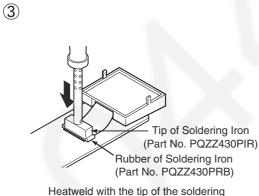

Heatweld with the tip of the soldering iron about 5 to 8 seconds (in case of 60W soldering iron).




Vertical Interval

NG (Inclined)



NG

(Vertical interval tolerance is more than 0.2 mm.)

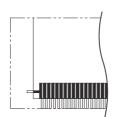

NG

(Horizontal interval tolerance is more than 0.2 mm.)

# 11 Measurements and Adjustments

This chapter explains the measuring equipment, the JIG connection, and the PC setting method necessary for the measurement in **Troubleshooting Guide** (P.23)

## 11.1. Equipment Required

- Digital multi-meter (DMM): it must be able to measure voltage and current.
- · Oscilloscope.
- Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision; ±4 ppm)
   Hewlett Packard, 53131A is recommended.
- DECT tester: Rohde & Schwarz, CMD 60 is recommended.

  This equipment may be useful in order to precisely adjust like a mass production.

## 11.2. The Setting Method of JIG (Base Unit)

This section explains the PC setting to use command required in Check Point (Base Unit)(P.35).

<Preparation>

Serial JIG cable: PQZZ1CD300E\*
PC which runs in DOS mode

• Batch file CD-ROM for setting: PNZZTG6611CX

(PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable )


Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

#### Note:

\*: If you have the JIG Cable for TCD500 series

#### 11.2.1. Connections

- ① Connect the AC adaptor to DC-JACK (base unit).
- 2 Connect the JIG Cable GND (black) to GND.
- (3) Connect the JIG Cable RX (red) to URX and TX (yellow) to UTX.

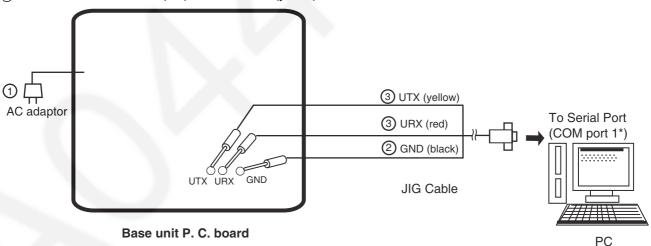

#### Note:

\*: COM port names may vary depending on what your PC calls it.

#### 11.2.2. How to install Batch file into P.C.

- **1.** Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG\*\*\*\* folder to your PC (example: D drive).
- 2. Open an MS-DOS mode window.

#### <Example for Windows>

On your computer, click [Start], select Programs (All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Эr

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

**Accessories-Command Prompt.** 

(for Windows 2000/Windows XP/Windows Server 2003)

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PNZZTG\*\*\*\*", then press the Enter key.
- **5.** Type "SET\_COM=X", then press the Enter key
- (X: COM port number used for the serial connection on your PC).
- **6.** Type "**READID**", then press the **Enter** key.
  - •If any error messages appear, change the port number or check the cable connection.
  - •If any value appear, go to next step.
- **7.** Type "DOSKEY", then press the Enter key.

## <Example>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*
- D: ¥PNZZTG\*\*\*\* >SET\_COM=X
- D: ¥PNZZTG\*\*\*\*>READID
- 00 52 4F A8 A8
- D: ¥PNZZTG\*\*\*\*>DOSKEY
- D: ¥PNZZTG\*\*\*\*>\_

### <Example: error happens>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*
- D: ¥PNZZTG\*\*\*\* >SET\_COM=X
- D: ¥PNZZTG\*\*\*\*>READID CreateFile error

ERROR 10: Can't open serial port

D: ¥PNZZTG \*\*\*\*>\_

#### Note:

• "\*\*\*\*" varies depending on the country or models.

### 11.2.3. Commands


See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
hookoff	Off-hook mode on Base	Type "hookoff".
hookon	On-hook mode on Base	Type "hookon".
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

# 11.3. Adjustment Standard (Base Unit)

When connecting the simulator equipment for checking, please refer to below.

## 11.3.1. Bottom View

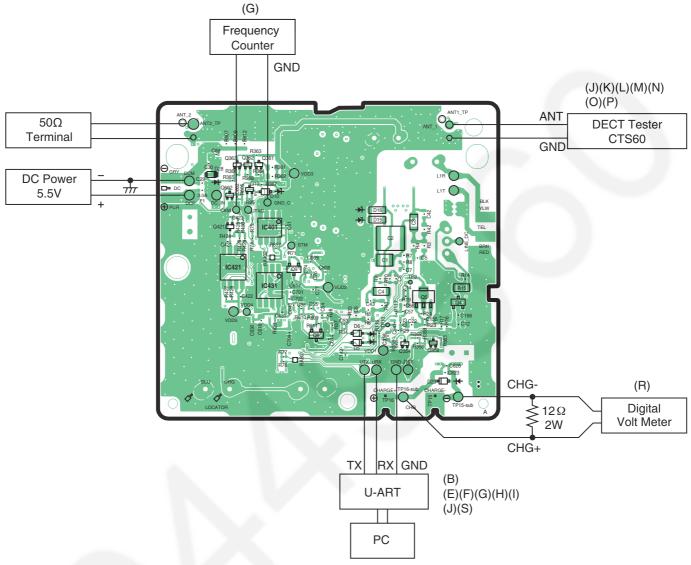


Note:

(A) - (S) is referred to Check Point (Base Unit) (P.35)

# 11.4. Adjustment Standard (Charger Unit)

When connecting the simulator equipment for checking, please refer to below.

## 11.4.1. Bottom View

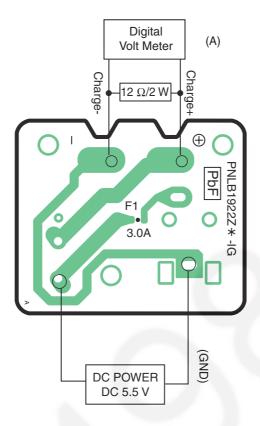

### Note:

(A) is referred to Check Point (Charger Unit) (P.37)

## 11.5. The Setting Method of JIG (Handset)

This section explains the PC setting to use command required in Check Point (Handset)(P.38).

<Preparation>

• Serial JIG cable: PQZZ1CD300E\*

• PC which runs in DOS mode

• Batch file CD-ROM for setting: PNZZTG6611CX

(PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)


Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

### Note:

\*: If you have the JIG Cable for TCD500 series

## 11.5.1. Connections

- ① Connect the DC Power or Battery to BATT+ and BATT-.
- (2) Connect the JIG cable GND (black) to GND.
- (3) Connect the JIG cable UTX (yellow) to UTX and URX (red) to URX.

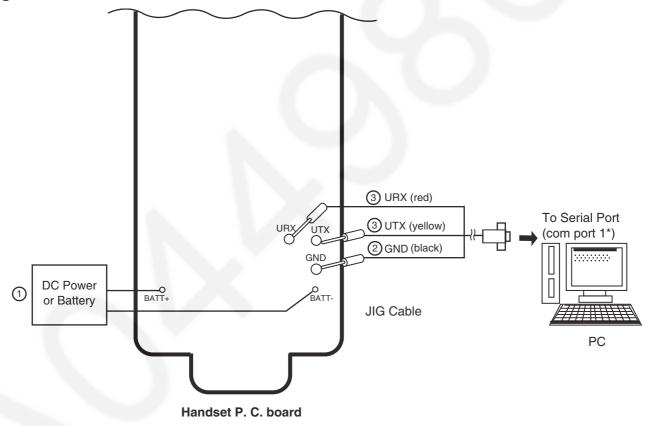

#### Note:

\*: COM port names may vary depending on what your PC calls it.

### 11.5.2. How to install Batch file into P.C.

- 1. Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG\*\*\*\*\* folder to your PC (example: D drive).
- 2. Open an MS-DOS mode window.

#### <Example for Windows>

On your computer, click [Start], select Programs (All Programs for Windows XP/Windows Server 2003), then click

MS-DOS Prompt. (for Windows 95/Windows 98)

Or

Accessories-MS-DOS Prompt. (for Windows Me)

Or

Command Prompt. (for Windows NT 4.0)

Or

**Accessories-Command Prompt.** 

(for Windows 2000/Windows XP/Windows Server 2003)

- **3.** At the DOS prompt, type "D:" (for example) to select the drive, then press the **Enter** key.
- **4.** Type "CD ¥PNZZTG\*\*\*\*\*", then press the Enter key.
- **5.** Type "SET RTX\_COM=X", then press the Enter key (X: COM port number used for the serial connection on your PC).
- **6.** Type "**READID**", then press the **Enter** key.
  - •If any error messages appear, change the port number or check the cable connection.
  - •If any value appear, go to next step.
- **7.** Type "DOSKEY", then press the Enter key.

#### <Example>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*
- D: ¥PNZZTG\*\*\*\* >SET RTX\_COM=X
- D: ¥PNZZTG\*\*\*\*\*>READID
- 00 52 4F A8 A8
- D: ¥PNZZTG\*\*\*\*\*>DOSKEY
- D: ¥PNZZTG\*\*\*\*\*> \_

#### <Example: Error happens>

- C: ¥Documents and Settings>D:
- D: ¥>CD ¥PNZZTG\*\*\*\*\*
- D: ¥PNZZTG\*\*\*\* >SET RTX\_COM=X
- D: ¥PNZZTG\*\*\*\*\*>READID CreateFile error

ERROR 10: Can't open serial port

D: ¥PNZZTG\*\*\*\*\*> \_

#### Note:

• "\*\*\*\*" varies depending on the country or models.

## 11.5.3. Commands


See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

## 11.6. Adjustment Standard (Handset)

When connecting the simulator equipment for checking, please refer to below.

## 11.6.1. Component View

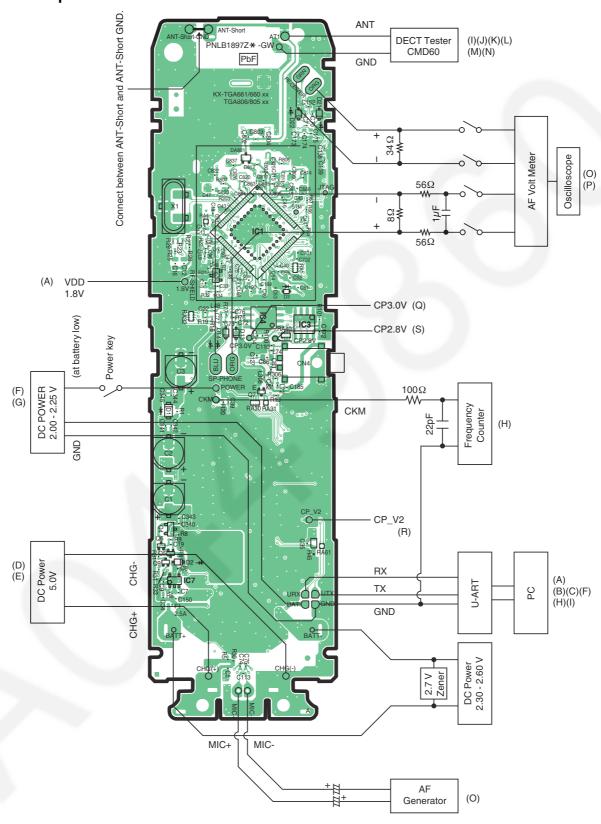

Note:

(A) - (R) is referred to Check Point (Handset) (P.38)

## 11.7. Things to Do after Replacing IC or X'tal

If repairing or replacing BBIC (FLASH type), EEPROM and X'tal, it is necessary to download the required data such as Programming data or adjustment data, etc in memory.

The set doesn't operate if it is not executed.

### 11.7.1. How to download the data

#### 11.7.1.1. Base Unit

First, operate the PC setting according to The Setting Method of JIG (Base Unit)(P.47).

Then download the appropriate data according to the following procedures.

	Items	How to download/Required adjustment
FLASH(IC431)	Programming data is stored in memory.	1) Make sure to connect the JIG cable, then disconnect the DC Power in order to download the data. 2) Execute the command "flw441 ********.hex". 3) Connect the DC Power. 4) Press the PC Enter key once. 5) After a few minutes, "Successful upgrade" is displayed on the PC indicating downloading has finished. 6) Detach the JIG cable, then disconnect the DC Power. 7) Connect the DC Power. 8) Connect the JIG cable again, and execute the command "getchk", then confirm the checksum value is correct.  • If the downloading fails, start again from step 1). 9) Default batch file: Execute the command "default.bat". 10) Country version batch file: Execute the command "TG6611EU_WW_RevXXX_YYY.bat". (*1) 11) Clock adjustment: Refer to Check Point (G). (*2)
EEPROM (IC401)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	1) Change the address "0001" of EEPROM to "55" to download the data. 2) Default batch file: Execute the command "default.bat". 3) Country version batch file: Execute the command "TG6611EU_WW_RevXXX_YYY.bat". (*1) 4) Clock adjustment: Refer to Check Point (G). (*2)
X'tal (X1)	System clock	Clock adjustment data is in EEPROM, adjust the data again after replacing it.  1) Refer to Check Point (F). (*2)

#### Note:

(\*1) XXX\_YYY: revision number, WW: destination code

"XXX\_YYY" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG (Base Unit)** (P.47).

(\*2) Refer to Check Point (Base Unit) (P.35)

## 11.7.1.2. Handset

First, operate the PC setting according to The Setting Method of JIG (Handset)(P.51).

Then download the appropriate data according to the following procedures.

	Items	How to download/Required adjustment
FLASH(IC4)	Programming data is stored in memory.	1) Make sure to connect the JIG cable, then disconnect the DC Power in order to download the data. 2) Execute the command "flw441 ********.hex". 3) Connect the DC Power. 4) Press and hold the handset Power key. 5) While holding down the handset Power key, press the PC Enter key once. 6) After a few minutes, "Successful upgrade" is displayed on the PC indicating downloading has finished. 7) Detach the JIG cable, then press the handset Power key to turn it on. 8) Connect the JIG cable again, and execute the command "getchk", then confirm the checksum value is correct.  • If the downloading fails, start again from step 1). 9) Default batch file: Execute the command "default.bat". 10) Default batch file (remaining): Execute the command "TGA660EX_DEF_RevXXX_YYY.bat". (*3). 11) Country version batch file: Execute the command "TGA660EX_WW_RevXXX_YYY.bat". (*3). 12) Clock adjustment: Refer to Check Point (H). (*4). 13) 1.8 V setting and battery low detection: Refer to Check
EEPROM (IC3)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	Point (A), (F) and (G). (*4).  1) Change the address "0001" of EEPROM to "55" to download the data.  2) Default batch file: Execute the command "default.bat".  3) Default batch file (remaining): Execute the command "TGA660EX_DEF_RevXXX_YYY.bat". (*3)  4) Country version batch file: Execute the command "TGA660EX_WW_RevXXX_YYY.bat". (*3)  5) Clock adjustment: Refer to Check Point (H). (*4)  6) 1.8 V setting and battery low detection: Refer to Check Point (A), (F) and (G). (*4)
X'tal (X1)	System clock	Clock adjustment data is in EEPROM, adjust the data again after replacing it.  1) Refer to Check Point (C). (*4)

### Note:

(\*3) XXX\_YYY: revision number, WW: destination code

"XXX\_YYY" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG (Handset)** (P.51).

(\*4) Refer to Check Point (Handset) (P.38)

# 11.8. RF Specification

## 11.8.1. Base Unit

Item	Value	Refer to *
TX Power	19 dBm ~ 25 dBm	Check Point (Base Unit) (J)
Modulation	-350±50/+350±50 kHz/div & Modulated	Check Point (Base Unit) (K)
	width ≧ 610 kHz	
Frequency Offset	< ± 20 kHz	Check Point (Base Unit) (L)
Frequency Drift	< ± 20 kHz / msec	Check Point (Base Unit) (M)
RX Sensitivity	< 1000 ppm	Check Point (Base Unit) (N)
Timing Accuracy	< ± 5.0 ppm/<±15.0 ppm	Check Point (Base Unit) (O)
Power RAMP	Power RAMP is matching	Check Point (Base Unit) (P)

<sup>\*:</sup> Refer to Check Point (Base Unit) (P.35)


## 11.8.2. Handset

Item	Value	Refer to **
TX Power	19 dBm ~ 25 dBm	Check Point (Handset) (I)
Modulation	-350±50/+350±50 kHz/div & Modulated	Check Point (Handset) (J)
	width ≧ 610 kHz	
Frequency Offset	< ± 20 kHz	Check Point (Handset) (K)
Frequency Drift	< ± 20 kHz / msec	Check Point (Handset) (L)
RX Sensitivity	< 1000 ppm	Check Point (Handset) (M)
Power RAMP	Power RAMP is matching	Check Point (Handset) (N)

<sup>\*\*:</sup> Refer to Check Point (Handset) (P.38)

## 11.9. How to Check the Handset Speaker or Receiver

- 1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
- 2. Put the probes at the speaker terminals as shown below.

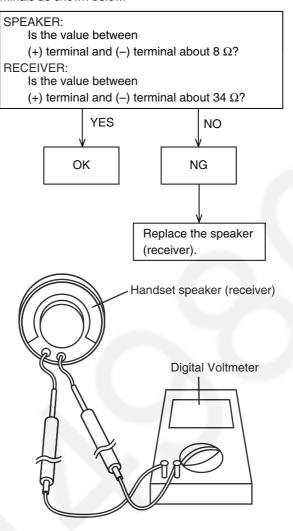

# 11.10. Frequency Table (MHz)

	E	BASE UNIT	HANDSET		
Channel No	Transmit Frequency	Receive Frequency	Transmit Frequency	Receive Frequency	
1	1897.344	1897.344	1897.344	1897.344	
2	1895.616	1895.616	1895.616	1895.616	
3	1893.888	1893.888	1893.888	1893.888	
4	1892.160	1892.160	1892.160	1892.160	
5	1890.432	1890.432	1890.432	1890.432	
6	1888.704	1888.704	1888.704	1888.704	
7	1886.976	1886.976	1886.976	1886.976	
8	1885.248	1885.248	1885.248	1885.248	
9	1883.520	1883.520	1883.520	1883.520	
10	1881.792	1881.792	1881.792	1881.792	

Note:

Channel No. 10: In the Test Mode on Base Unit and Handset.

## 12 Miscellaneous

## 12.1. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

### 12.1.1. Preparation

- PbF (: Pb free) Solder
- · Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

**Note:** We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

Flux

Recommended Flux: Specific Gravity  $\rightarrow$ 0.82. Type  $\rightarrow$ RMA (lower residue, non-cleaning type)


Note: See About Lead Free Solder (Pbf: Pb free) (P.4)

#### 12.1.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

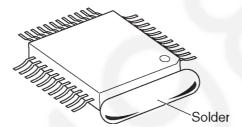

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

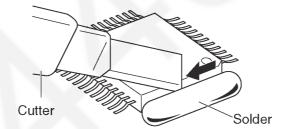


3. While the solder melts, remove it together with the IC pins.

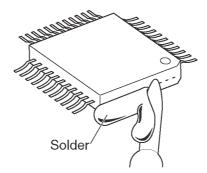

When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.


## 12.1.3. How to Install the IC

1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.

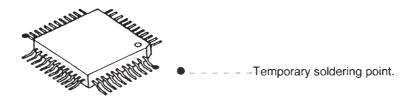


\*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.

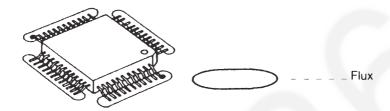

3. Solder the pins, sliding the soldering iron in the direction of the arrow.

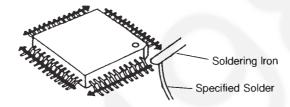

## 12.1.4. How to Remove a Solder Bridge

- 1. Lightly resolder the bridged portion.
- 2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.



## 12.2. How to Replace the Shield Case

## 12.2.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron

Tip Temperature of  $700^{\circ}$  F ±  $20^{\circ}$  F ( $370^{\circ}$  C ±  $10^{\circ}$  C)

#### Note:

We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

• Hot Air Desoldering Tool

Temperature: 608° F ± 68° F (320° C ± 20° C)

### 12.2.2. Caution


- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

## 12.2.3. How to Remove the Shield Case


#### Note:

If you don't have special tools (ex. Hot air disordering tool), conduct the following operations.


1. Cut the case along perforation.

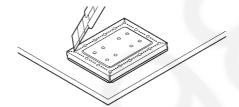


2. Remove the cut part.

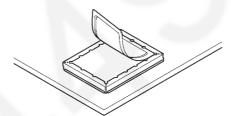

3. Cut the four corners along perforation.

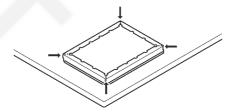


4. Remove the reminds by melting solder.

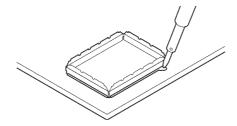


## 12.2.4. How to Install the Shield Case

#### Note:

- If you don't have special tools (ex. Hot air disordering tool), conduct the following operations.
- Shield case's No. : PNMC1032Z
  - 1. Put the shield case.

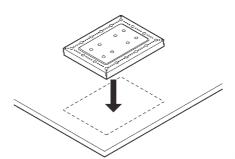


2. Solder the surroundings.

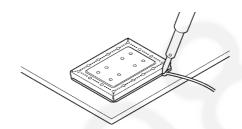


# 12.3. Terminal Guide of the ICs, Transistors and Diodes

## 12.3.1. Base Unit

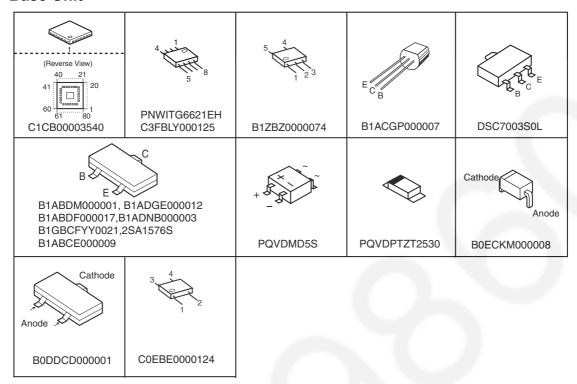

## 12.3.2. Handset

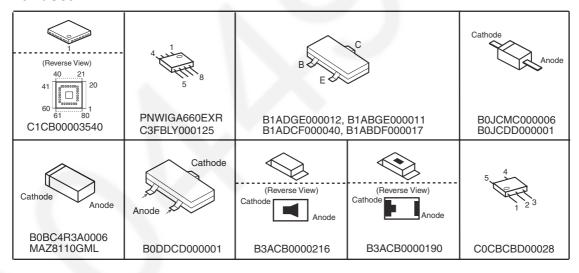

# 13 Schematic Diagram

## 13.1. For Schematic Diagram

## 13.1.1. Base Unit (Schematic Diagram (Base Unit))

#### Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by  $\triangle$  mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

### 13.1.2. Handset (Schematic Diagram (Handset))

#### Notes:

- 1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
- 2. The schematic diagram may be modified at any time with the development of new technology.

## 13.1.3. Charger Unit (Schematic Diagram (Charger Unit))

#### Notes:


1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:


Components identified by  $\triangle$  mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

2. The schematic diagram may be modified at any time with the development of new technology.

## 13.2. Schematic Diagram (Base Unit)

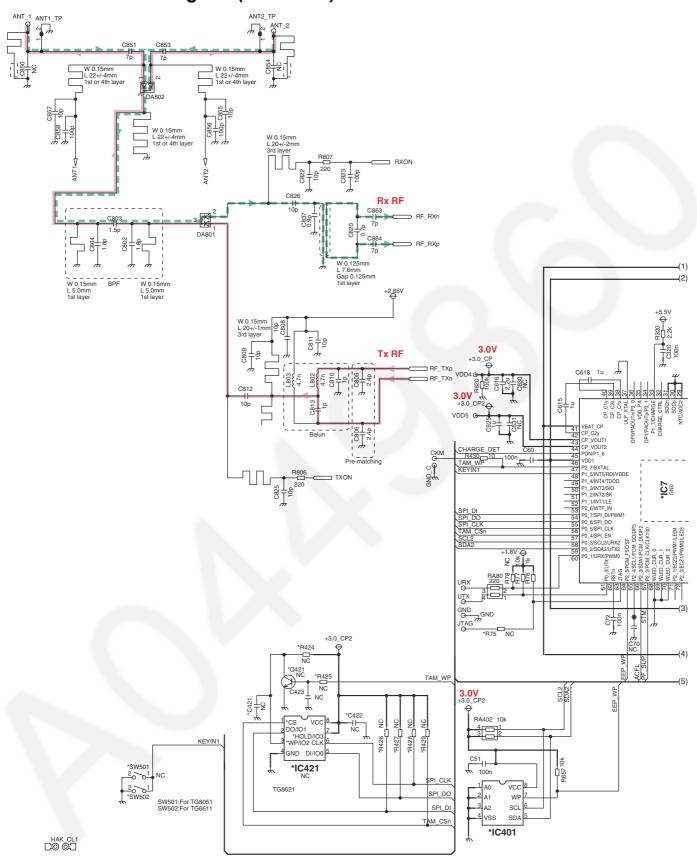


NC: No Components

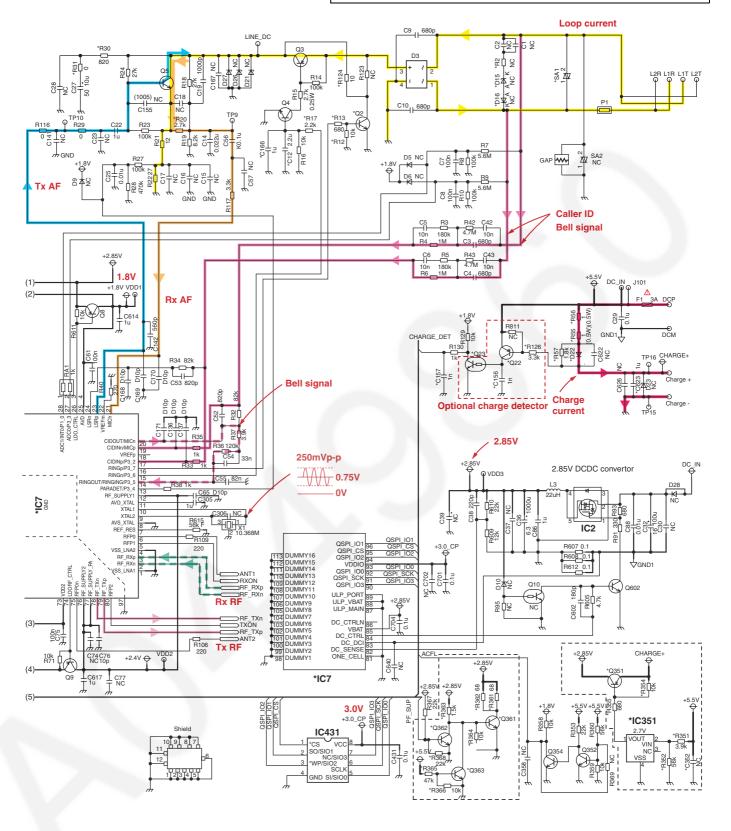


NC: No Components KX-TG6611/6612CX SCHEMATIC DIAGRAM (Base Unit\_Main)

## 13.3. Schematic Diagram (Handset)

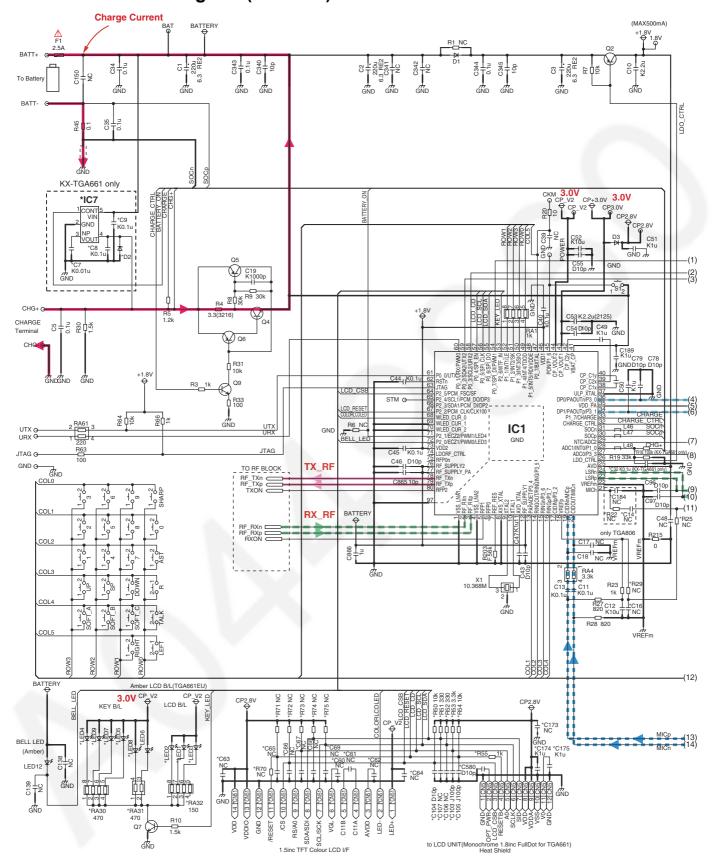


NC: No Components

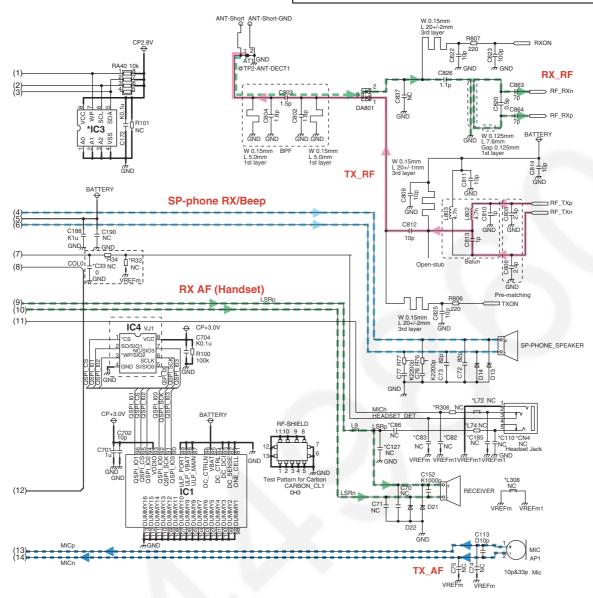

NC: No Components KX-TGA661 SCHEMATIC DIAGRAM (Handset\_Main)

# 13.4. Schematic Diagram (Charger Unit)

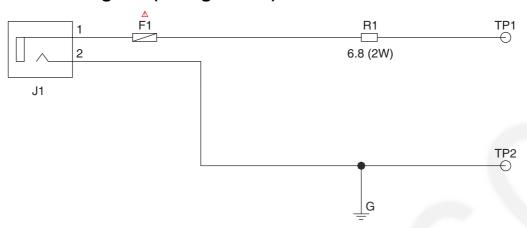


SCHEMATIC DIAGRAM (Charger Unit)

# **14 Printed Circuit Board**


# 14.1. Circuit Board (Base Unit\_Main)

## 14.1.1. Component View

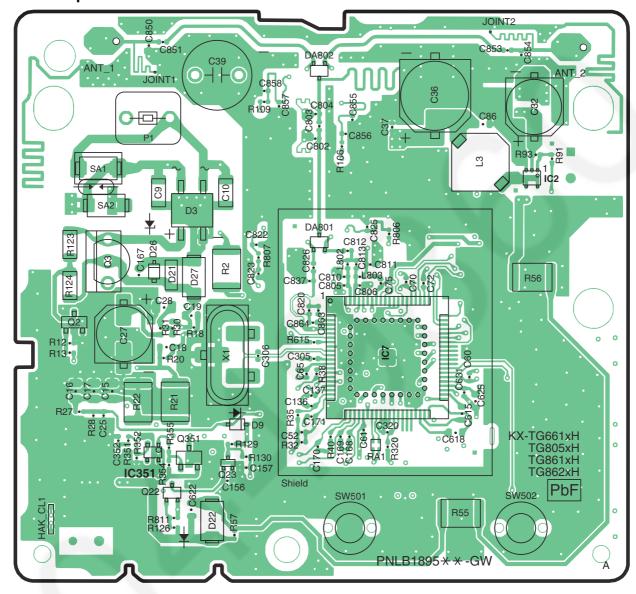

KX-TG6611/6612 CIRCUIT BOARD (Base Unit\_Main (Component View))


## 14.1.2. Bottom View

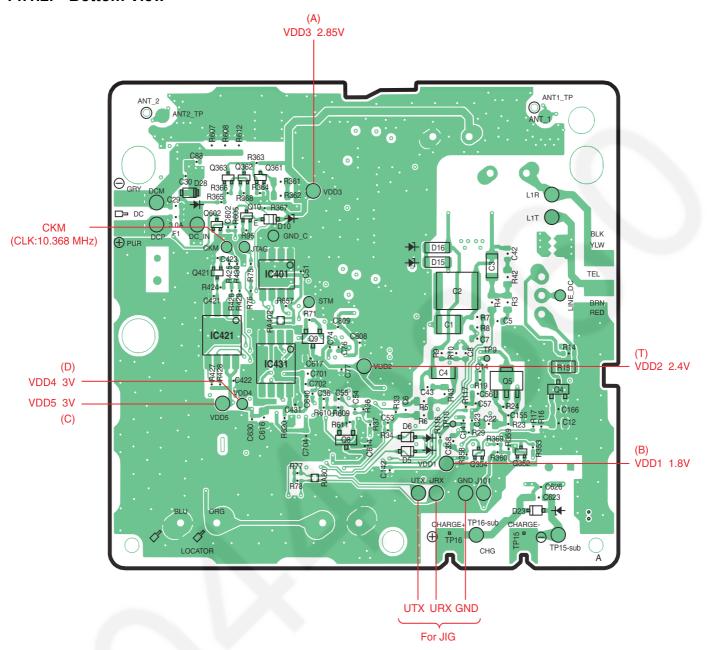

KX-TG6611/6612 CIRCUIT BOARD (Base Unit\_Main (Bottom View))


# 14.2. Circuit Board (Handset)

## 14.2.1. Component View

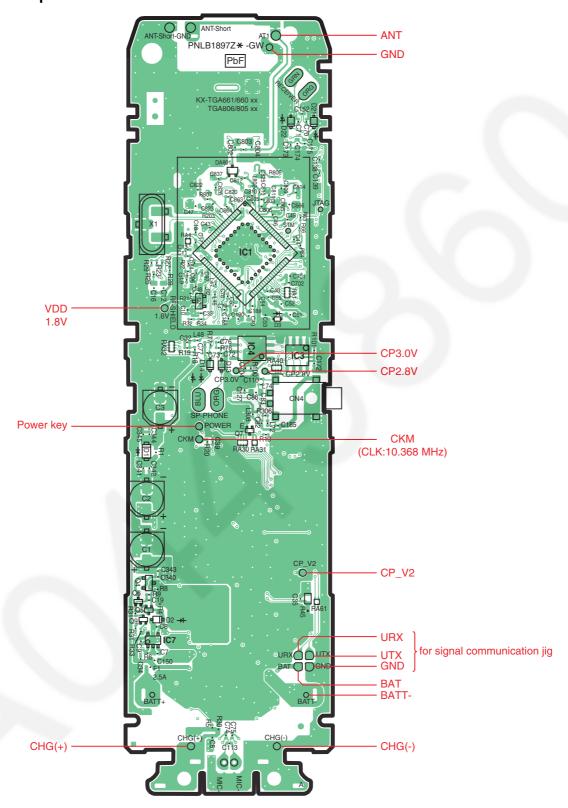

KX-TGA661 CIRCUIT BOARD (Handset\_Main (Component View))


## 14.2.2. Bottom View

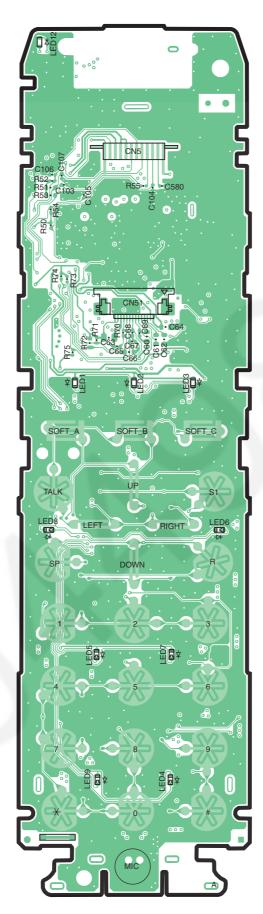

KX-TGA661 CIRCUIT BOARD (Handset\_Main (Bottom View))


# 14.3. Circuit Board (Charger Unit)

# 14.3.1. Component View

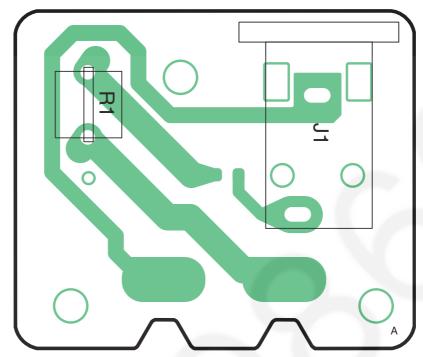

CIRCUIT BOARD (Charger Unit (Component View))


## 14.3.2. Bottom View

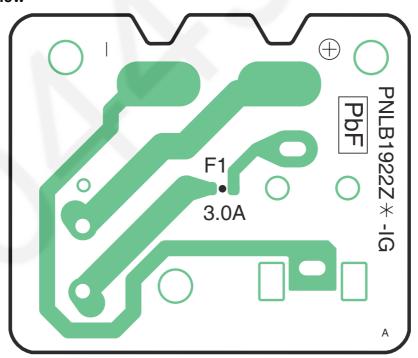

CIRCUIT BOARD (Charger Unit (Bottom View))

# 15 Exploded View and Replacement Parts List


# 15.1. Cabinet and Electrical Parts (Base Unit)

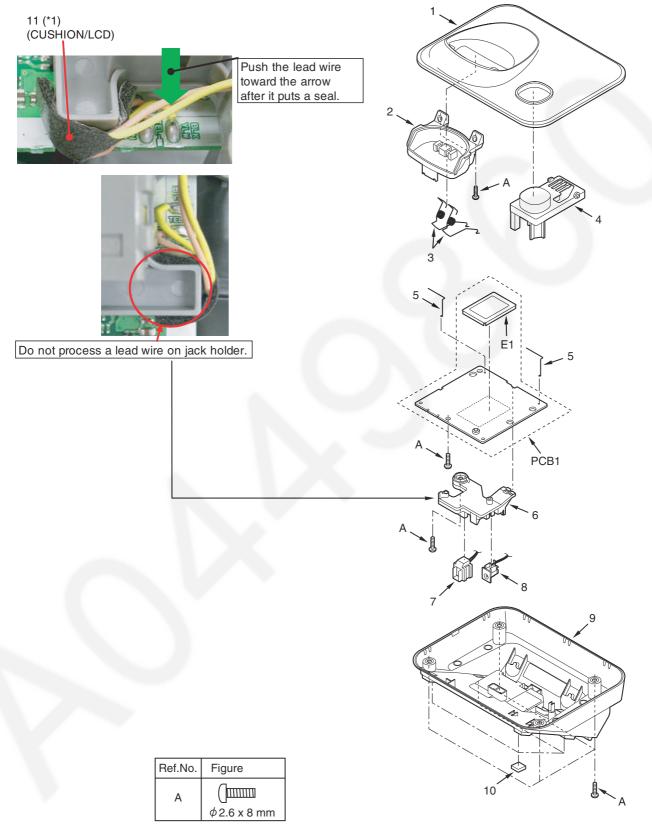

#### Note:

(\*1) The SPACERs (No.11) are cut from the excess parts of SPACER (No.106) of **Cabinet and Electrical Parts (Handset)** (P.75).


# 15.2. Cabinet and Electrical Parts (Handset)

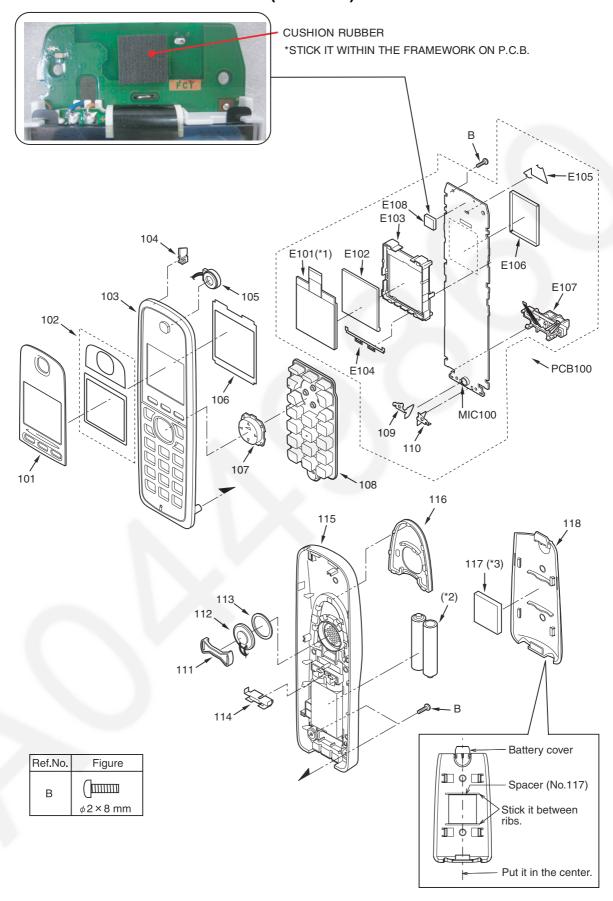

#### Note:

- (\*1) This cable is fixed by welding. Refer to  ${f How\ to\ Replace\ the\ Handset\ LCD\ (P.46)}.$
- (\*2) The rechargeable Ni-MH battery HHR-4MRT is available through sales route of Panasonic.
- (\*3) Attach the spacer (No. 117) to the exact location described above.

# 15.3. Cabinet and Electrical Parts (Charger Unit)

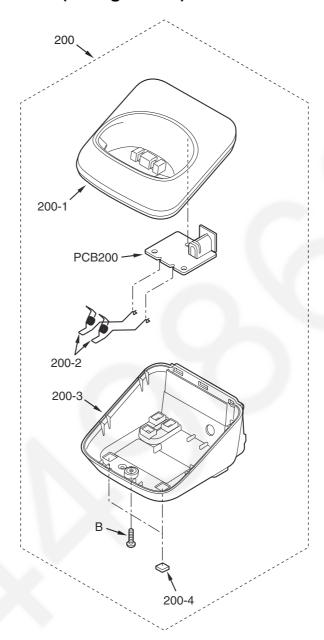

Ref.No.	Figure
В	φ2×8 mm

# 15.4. Accessories





## 15.5. Replacement Part List

1. RTL (Retention Time Limited)

#### Note:

The "RTL" marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time. This period of time depends on the type of item, and the local laws governing parts and product retention.

At the end of this period, the item will no longer be available.

#### 2. Important safety notice

Components identified by the  $\triangle$  mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

- 3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.
- 4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.
- 5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms ( $\Omega$ ) k=1000  $\Omega$ , M=1000 k $\Omega$ All capacitors are in MICRO FARADS ( $\mu$ F)p= $\mu\mu$ F

All capacitors are in which capacitors (µi

\*Type & Wattage of Resistor

#### Type

ERC:Solid ERDS:Carbon ERJ:Chip		ERG:Metal Oxide		PQ4R:Chip ERS:Fusible Resistor ERF:Cement Resistor			
Wattage							
10,16:1/8W	14,2	5:1/4W	12:1/2W		1:1W	2:2W	3:3W

\*Type & Voltage Of Capacitor Type

	ECQS:Styrol ECUV,PQCUV,ECUE:Chip	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic ECQE,ECQV,ECQG:Polyester ECEA,ECST,EEGElectlytic
ŀ	ECQMS:Mica	ECQP:Polypropylene

#### Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type		Oth	ers	
1H:50V		0F:3.15V	0J	:6.3V	1V	:35V
2A:100V		1A:10V	1A	:10V	50,1H	H:50V
2E:250V		1V:35V	1C	:16V	1J	:16V
2H:500V		0J:6.3V	1E,2	5:25V	2A	:100V

#### 15.5.1. Base Unit

### 15.5.1.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	1	PNKM1194Y1	CABINET BODY (for KX- TG6611CXB) (for KX- TG6612CXB)	PS-HB
	1	PNKM1194S4	CABINET BODY (for KX- TG6611CXS) (for KX- TG6612CXS)	PS-HB
	2	PNKE1090Z1	CASE, CHARGE TERMINAL (for KX-TG6611CXB) (for KX-TG6612CXB)	
	2	PNKE1090Z3	CASE, CHARGE TERMINAL (for KX-TG6611CXS) (for KX-TG6612CXS)	
	3	PNJT1064Z	CHARGE TERMINAL	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	4	PNBC1360Z1	BUTTON, LOCATOR (for KX-TG6611CXB) (for KX-TG6612CXB)	
	4	PNBC1360Y4	BUTTON, LOCATOR (for KX-TG6611CXS) (for KX-TG6612CXS)	
	5	PNLA1048Z	ANTENNA	
	6	PNHR1387Z	GUIDE, JACK	PS-HB
	7	PQJJ1T039M	JACK, MODULAR	
	8	K2ECYZ000001	JACK, DC	
	9	PNKF1145Z1	CABINET COVER (for KX- TG6611CXB) (for KX- TG6612CXB)	
	9	PNKF1145Z3	CABINET COVER (for KX- TG6611CXS) (for KX- TG6612CXS)	PS-HB
	10	PQHA10023Z	RUBBER PARTS, FOOT CUSH- ION	
	11	PNYE1029Z	SPACER, CUSHION LCD	

#### 15.5.1.2. Main P.C.Board Parts

#### Note:

- (\*1) When replacing IC401, IC431 or X1, make the adjustment using PNZZTG6611CX. Refer to **How to download the data** (P.54) of **Things to Do after Replacing IC or X'tal.**
- (\*2) When removing E1, use special tools (ex. Hot air disordering tool).
- (\*3) Backside of this IC has a ground plate. Refer to **How to Replace the Flat Package IC** (P.58).
- (\*4) Supplied IC is Flat Package Type.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB1	PNWPG6611CXH	MAIN P.C.BOARD ASS'Y (RTL)	
			(ICs)	
	IC7	C1CB00003540	IC (*3) (*4)	
	IC351	C0EBE0000124	IC	
	IC401	PNWITG6621EH	IC (EEPROM) (*1)	
	IC431	C3FBLY000125	IC (*1)	
			(TRANSISTORS)	
	IC2	B1ZBZ0000074	TRANSISTOR (SI)	
	Q2	B1ABCE000009	TRANSISTOR (SI)	
	Q3	B1ACGP000007	TRANSISTOR (SI)	
	Q4	B1ABDM000001	TRANSISTOR (SI)	
	Q5	DSC7003S0L	TRANSISTOR(SI)	
	Q8	B1ADGE000012	TRANSISTOR (SI)	
	Q9	B1ADGE000012	TRANSISTOR (SI)	
	Q351	B1ADNB000003	TRANSISTOR (SI)	
	Q352	B1ABDF000017	TRANSISTOR (SI)	s
	Q354	B1ABDF000017	TRANSISTOR (SI)	s
	Q361	B1ABDF000017	TRANSISTOR(SI)	
	Q362	B1ABDF000017	TRANSISTOR (SI)	
	Q363	B1ABDF000017	TRANSISTOR (SI)	
	Q602	B1ABDF000017	TRANSISTOR (SI)	S
			(DIODES)	
	D3	PQVDMD5S	DIODE(SI)	
	D22	B0ECKM000008	DIODE(SI)	
	D27	PQVDPTZT2530	DIODE(SI)	
	DA801	B0DDCD000001	DIODE(SI)	
	DA802	B0DDCD000001	DIODE(SI)	
			(COILS)	
	L3	G1C220M00037	COIL	S
	L802	G1C4N7Z00006	COIL	
	T803	G1C4N7Z00006	COIL	
			(RESISTOR ARRAYS)	
	RA1	D1H410220001	RESISTOR ARRAY	
	RA80	D1H422120001	RESISTOR ARRAY	
	RA402	D1H410320002	RESISTOR ARRAY	
			(VARISTOR)	
	SA1	J0LE00000047	VARISTOR (SURGE ABSORBER)	s

Safety	Ref. No.	Part No.	Part Name & Description	Remark
	NO.		(RESISTORS)	
	R3	PQ4R10XJ184	180k	s
	R4	PQ4R10XJ105	1M	s
	R5	PQ4R10XJ184	180k	s
	R6	PQ4R10XJ105	1M	s
	R7	ERJ3GEYJ565	5.6M	s
	R8	ERJ3GEYJ104	100k	S
	R9	ERJ3GEYJ565	5.6M	s
	R10	ERJ3GEYJ104	100k	s
	R12	ERJ2GEJ103	10k	s
	R13	ERJ2GEJ681	680	s
	R14	ERJ3GEYJ104	100k	s
	R15	PQ4R18XJ272	2.7k	S
	R16	ERJ2GEJ103	10k	S
	R17	ERJ2GEJ222	2.2k	
				S
	R18	ERJ2GEJ273X	27k	S
	R19	ERJ2GEJ822	8.2k	S
	R20	ERJ2GEJ272	2.7k	S
	R21	ERJ12YJ120	12	
	R22	ERJ12YJ270	27	
	R23	ERJ2GEJ104	100k	S
	R24	ERJ2GEJ273X	27k	S
	R27	ERJ2GEJ104	100k	S
	R28	ERJ2GEJ474X	470k	S
	R29	ERJ2GE0R00	0	s
	R30	ERJ3GEYJ821	820	S
	R31	ERJ3GEY0R00	0	S
	R32	ERJ2GEJ823	82k	S
	R33	ERJ2GEJ102	1k	S
	R34	ERJ2GEJ823	82k	S
	R35	ERJ2GEJ102	1k	s
	R36	ERJ2GEJ124	120k	S
	R37	ERJ2GEJ392	3.9k	S
	R38	ERJ2GEJ102	1k	S
	R40	ERJ2GEJ271	270	s
	R42	PQ4R10XJ475	4.7M	s
	R43	PQ4R10XJ475	4.7M	s
	R55	ERJ12YJ1R0	1	
	R56	ERJ12YJ1R0	1	
	R57	ERJ2GEJ182	1.8k	
	R71	ERJ2GEJ103	10k	s
	R76	ERJ2GEJ102	1k	S
	R77	ERJ2GEJ103	10k	s
	R91	ERJ2GEJ331	330	s
	R93	ERJ2GEJ681	680	S
	R106	ERJ2GEJ221	220	s
	R109	ERJ2GEJ221	220	s
	R116	ERJ2GE0R00	0	s
	R117	ERJ2GEJ332	3.3k	S
	R124	PQ4R18XJ100	10	S
	R129	ERJ2GEJ103	10k	S
	R130	ERJ2GEJ102	1k	S
	R320	ERJ2GEJ222	2.2k	S
	R351	ERJ2GEJ392	3.9k	S
	R352	ERJ2GEJ563	56k	S
	R353	ERJ2GEJ223	22k	S
	R354	ERJ2GEJ103	10k	S
	R355	ERJ2GEJ681	680	s
	R358	ERJ2GEJ103	10k	s
	R359	ERJ2GEJ103	10k	s
	R360	ERJ2GEJ563	56k	S
	R361	PQ4R10XJ680	68	S
	R362	PQ4R10XJ680	68	S
	R363	ERJ2GEJ152	1.5k	S
	R364	ERJ2GEJ103	10k	s
	R365	ERJ2GEJ473	47k	s
	R366	ERJ2GEJ103	10k	s
	R367	ERJ2GEJ223	22k	s
	R368	ERJ2GEJ223	22k	S
		ERJ2GEJ100	10	s
	R430	ENGEGEGIO		
			4.7k	S
	R430 R605 R607	ERJ2GEJ472X ERJ6RSJR10V	4.7k 0.1	s

Safety	Ref.	Part No.	Part Name & Description	Remarks
	R609	ERJ2RKF1202	12k	
	R610	ERJ2RKF2202	22k	
	R611	ERJ2GEJ103	10k	s
	R612	ERJ6RSJR10V	0.1	
	R615	D0GA563ZA006	56k	
	R620	ERJ2GEJ104	100k	s
	R657	ERJ2GEJ103	10k	S
	R806	ERJ2GEJ221	220	S
	R807	ERJ2GEJ221	220	S
			(CAPACITORS)	
	C3	F1K2H681A008	680p	
	C4	F1K2H681A008	680p	
	C5	ECUV1C103KBV	0.01	
	C6	ECUV1C103KBV	0.01	
	C7	ECUV1C104KBV	0.1	
	C8	ECUV1C104KBV	0.1	
	C9	F1K2H681A008	680p	
	C10	F1K2H681A008	680p	
	C14	ECUE1C223KBQ		S
	C19	ECUV1H102KBV	1000p	
	C22	PQCUV1A105KB		
	C25	ECUE1C103KBQ		
	C27	EEE1HA100SP	10	
	C29	ECUV1C104KBV		
	C32	F2G1C1010034		
	C36	F2G0J1020022		
	C38	ECUE1H221JCQ	_	
	C42	ECUV1C103KBV		
	C43	ECUV1C103KBV		
	C51	ECUE1A104KBQ		
	C52	ECUE1H821KBQ		
	C53	ECUE1H821KBQ		
	C54	ECUE1A333KBQ		
	C55	ECUE1A823KBQ		
	C56	ECUV1C104KBV		
	C60	ECUE1A104KBQ		
	C61	ECUE1A104KBQ		
	C65	ECUE1H100DCQ	•	
	C72	ECUE1A104KBQ ECUE1A104KBQ		
	C75	_		
	C76 C86	ECUE1H100DCQ ECUV1A105KBV	_	S
	C88	ECUE1C103KBQ		
	C136	ECUE1H100DCQ		s
	C137	ECUE1H100DCQ	-	s
	C142	ECUE1H561KBQ		5
	C157	ECUE1H102KBQ		
-	C168	ECUE1H102KBQ ECUE1H100DCQ		s
	C169	ECUE1H100DCQ		S
	C170	ECUE1H100DCQ	_	s
	C171	ECUE1H100DCQ		s
	C305	ECUE0J105KBQ		-
	C320	ECUE1A104KBQ		
	C431	ECUV1C104KBV		
	C602	ECUE1H181JCQ		
	C614	ECUV1A105KBV		
	C615	ECUV1A105KBV		
	C616	PQCUV1A225KB		
	C617	ECUV1A105KBV	1	
	C618	ECUV1A105KBV		
	C623	ECUV1C105ZFV	1	
	C625	ECUV1A105KBV	1	
	C701	ECUV1C104KBV	0.1	
	C704	ECUV1C104KBV	0.1	
	C802	F1G1H1R8A480	1.8p	
	C803	F1G1H1R5A480		
	C804	F1G1H1R8A480	1.8p	
	C805	F1G1H2R4A480	2.4p	
	C806	F1G1H2R4A480	2.4p	
	C808	ECUE1H100DCQ	10p	s
	C809	ECUE1H100DCQ	10p	s
	C810	F1G1H1R0A480	1p	
	C811	ECUE1H100DCQ	10p	S

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
	C812	ECUE1H100DCQ	10p	S
	C813	F1G1H1R0A480	1p	
	C820	F1G1HR70A480	0.7p	
	C822	ECUE1H100DCQ	10p	S
	C823	ECUE1H101JCQ	100p	
	C825	ECUE1H100DCQ	10p	S
	C826	ECUE1H100DCQ	10p	S
	C837	F1G1HR90A480	0.9p	
	C851	F1G1H7R0A480	7p	
	C853	F1G1H7R0A480	7p	
	C855	ECUE1H100DCQ	10p	S
	C856	ECUE1H101JCQ	100p	
	C857	ECUE1H100DCQ	10p	S
	C858	ECUE1H101JCQ	100p	
	C863	F1G1H7R0A480	7p	
	C864	F1G1H7R0A480	7p	
			(OTHERS)	
	E1	PNMC1033Z	CASE, MAGNETIC	
			SHIELD(*2)	
	P1	D4DAY220A022		
$\triangle$	F1	K5H302Y00003	FUSE	
	X1	ној103500037	CRYSTAL OSCILLATOR (*1)	
	SW502	K0H1BA000259	SPECIAL, SWITCH	

### 15.5.2. Handset

### 15.5.2.1. Cabinet and Electrical Parts

Safety		Part No.	Part Name & Description	Remarks
	No.			
	101	PNGP1137Z1	PANEL, LCD (for KX- TGA661CXB)	PMMA-HB
	101	PNGP1137Y6	PANEL, LCD (for KX-TGA661CXS)	PMMA-HB
	102	PNYE1041Z	TAPE, DOUBLESIDED	
	103	PNKM1191X4	CABINET BODY (for KX-TGA661CXB)	ABS-HB
	103	PNKM1191V7	CABINET BODY (for KX-TGA661CXS)	ABS-HB
	104	PNHR1391Z	OPTIC CONDUCTIVE PARTS, LED LENS	PS-HB
	105	L0AD01A00024	RECEIVER	
	106	PNYE1029Z	SPACER, CUSHION LCD	
	107	PNBC1354Z1	BUTTON, NAVIGATOR KEY (for KX-TGA661CXB)	ABS-HB
	107	PNBC1354Y6	BUTTON, NAVIGATOR KEY (for KX-TGA661CXS)	ABS-HB
	108	PNJK1114Y	KEYBOARD SWITCH (for KX-TGA661CXB)	
	108	PNJK1114V	KEYBOARD SWITCH (for KX-TGA661CXS)	
	109	PNJT1059Z	CHARGE TERMINAL (L)	
	110	PNJT1060Z	CHARGE TERMINAL (R)	
	111	PQHR11315Z	GUIDE, SPEAKER	ABS-HB
	112	L0AA02A00095	SPEAKER	
	113	PQHS10784Y	SPACER, SPEAKERNET	
	114	PNJC1018Z	BATTERY TERMINAL	
	115	PNKF1134Z1	CABINET COVER (for KX-TGA661CXB)	ABS-HB
	115	PNKF1134Z3	CABINET COVER (for KX- TGA661CXS)	ABS-HB
	116	PNKE1093Z1	COVER, RUBBER GRIP (for KX-TGA661CXB)	
	116	PNKE1093Z3	COVER, RUBBER GRIP (for KX-TGA661CXS)	
	117	PNHS1079Z	SPACER, BATTERY	
	118	PNKK1053Z1	LID, BATTERY (for KX- TGA661CXB)	ABS-HB
	118	PNKK1053Z4	LID, BATTERY (for KX-TGA661CXS)	ABS-HB

## 15.5.2.2. Main P.C.Board Parts

#### Noto:

(\*1) Reconfirm the model No. written on the handset's name plate when replacing PCB100. Because the model No. of

- the optional handset may differ from the included handset. (\*2) When replacing IC1, IC3 or X1, make the adjustment using PNZZTG6611CX. Refer to **Handset** (P.55) of **Things** to **Do after Replacing IC or X'tal.**
- (\*3) When removing E106, use special tools (ex. Hot air disordering tool).
- (\*4) When replacing the handset LCD, See **How to** Replace the Handset LCD(P.46).
- (\*5) Backside of this IC has a ground plate. Refer to **How to Replace the Flat Package IC** (P.58).
- (\*6) Supplied IC is Flat Package Type.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB100	PNWPGA661CXR	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(ICs)	
	IC1	C1CB00003540	IC (*5) (*6)	
	IC3		IC (EEPROM) (*2)	
	IC4	C3FBLY000125	IC (*2)	
	IC7	C0CBCBD00028	IC	
			(TRANSISTORS)	
	Q2	B1ADGE000012	TRANSISTOR(SI)	
	Q4		TRANSISTOR(SI)	
	Q5		TRANSISTOR(SI)	
	Q6		TRANSISTOR(SI)	
	Q7		TRANSISTOR(SI)	S
	09	B1ABDF000017	TRANSISTOR (SI)	s
	_		(DIODES)	
	D1	B0JCMC000006		
	D2		DIODE(SI)	
	D3	B0JCDD000001		
	D13	B0BC4R3A0006		
	D14	B0BC4R3A0006		
	D21	B0BC4R3A0006		
	D22	B0BC4R3A0006		
	DA801	B0DDCD000001		
	211002	20220200001	(LEDS)	
	LED1	B3ACB0000216		
	LED2	B3ACB0000216		
	LED3	B3ACB0000216		
	LED4	B3ACB0000190		
	LED5	B3ACB0000190		
	LED6	B3ACB0000190		
	LED7	B3ACB0000190		
	LED8	B3ACB0000190		
	LED9	B3ACB0000190		
	LED12	B3ACB0000216		
			(COILS)	
	L802	G1C4N7Z00006		
	L803	G1C4N7Z00006		
	2003	0104117200000	(RESISTOR ARRAYS)	
	RA1	D1H810240004	RESISTOR ARRAY	S
	RA4		RESISTOR ARRAY	-
	RA30		RESISTOR ARRAY	S
	RA31		RESISTOR ARRAY	
	RA32	EXB28V151JX	RESISTOR ARRAY	
	RA40	EXB28V103	RESISTOR ARRAY	
	RA61		RESISTOR ARRAY	
			(IC FILTERS)	
	L9	J0JCC0000287		
	L46	J0JDC0000045		
	L47	J0JDC0000045		
	L48	J0JDC0000045		
			(RESISTORS)	
	R3	ERJ2GEJ102	1k	s
	R4	ERJ8GEYJ3R3	3.3	s
	R5	ERJ2GEJ122	1.2k	s
	R7	ERJ2GEJ103	10k	s
	R8	ERJ2GEJ303	30k	s
	1			~
	R9	ERJ2GEJ303	30k	S

Safety	Ref.	Part No.	Part Name & Description	Remark
	R18	ERJ2GEJ104	100k	s
	R19	ERJ2GEJ333	33k	s
	R20	ERJ2GEJ100	10	s
	R23	ERJ2GEJ102	1k	s
	R27	ERJ2GEJ821	820	s
	R28	ERJ2GEJ821	820	s
	R30	ERJ3GEYJ152	1.5k	s
	R31	ERJ2GEJ103	10k	s
	R33	ERJ2GEJ101	100	s
	R45	ERJ6RSJR10V	0.1	
	R50	ERJ2GEJ103	10k	S
		ERJ3GEYJ331	330	
	R51 R52	ERJ3GE13331 ERJ2GEJ331	330	S
	R53	ERJ3GEYJ332	3.3k	S
	R54	ERJ2GEJ103	10k	S
	R55	ERJ2GEJ102	1k	S
	R63	ERJ2GEJ101	100	S
	R64	ERJ2GEJ103	10k	S
	R66	ERJ2GEJ102	1k	s
	R76	ERJ2GEJ1R0	1	S
	R77	ERJ2GEJ1R0	1	S
	R100	ERJ2GEJ104	100k	S
	R203	D0GA563ZA006	56k	İ
	R215	ERJ2GE0R00	0	s
	R806	ERJ2GEJ221	220	s
	R807	ERJ2GEJ221	220	s
			(CAPACITORS)	
	C1	EEE0JA221WP	220	
	C2	EEE0JA221WP	220	
	C3	EEE0JA221WP	220	
		ECUE1A104KBQ		
	C5			
	C7	ECUE1C103KBQ		
	C8	ECUE1A104KBQ		
	C9	ECUE1A104KBQ		
	C10	ECUV1A225KBV		
	C11	ECUE1A104KBQ	0.1	
	C12	PQCUV0J106KB	10	
	C13	ECUE1A104KBQ	0.1	
	C19	ECUE1H102KBQ	0.001	
	C32	ECUE1A104KBQ	0.1	
	C33	ERJ2GE0R00	0	S
	C34	ECUE1A104KBQ	0.1	
	C35	ECUE1A104KBQ	0.1	
	C40	ECUE1A104KBQ	0.1	
	C43	ECUE1H100DCQ	10p	
	C44	ECUE1A104KBQ	_	
	C45	ECUE1A104KBQ		
	C46	ECUE1H100DCQ		
	C47	ECUV1A105KBV		
	C49	ECUV1A105KBV		
	C50	ECUV1A105KBV		
	C51	ECUV1A105KBV		
	C52	PQCUV0J106KB		
	C53	PQCUV1A225KB		
	C54	ECUE1H100DCQ	_	
	C55	ECUE1H100DCQ	10p	
	C72	ECUE1H820JCQ	82p	
	C73	ECUE1H820JCQ	82p	
	C76	ECUE1H222KBQ	0.0022	
	C77	ECUE1H222KBQ	0.0022	
	C78	ECUE1H100DCQ	10p	Ī
	C79	ECUE1H100DCQ	10p	İ
	C96	ECUE1H100DCQ	_	
	C97	ECUE1H100DCQ	_	
	C103	ECUE1H101JCQ	_	
	C104	ECUE1H101DCQ	_	1
	C104	ECUE1H100DCQ	_	
			_	-
	C113	ECUE1H100DCQ	_	
	C152	ECUE1H102KBQ		
	C172	ECUE1A104KBQ		
	C174	ECUV1C105KBV		
	C175	ECUV1C105KBV		<u></u>
	C188	ECUE0J105KBQ	1.4	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C189	ECUE0J105KBQ	1	
	C340	ECUE1H100DCQ	10p	
	C343	ECUE1A104KBQ	0.1	
	C344	ECUE1A104KBQ	0.1	
	C345	ECUE1H100DCQ	10p	
	C580	ECUE1H100DCQ	10p	s
	C701	ECUV1A105KBV	1	
	C702	ECUE1H100DCQ	10p	
	C704	ECUE1A104KBQ	0.1	
	C802	F1G1H1R8A480	1.8p	
	C803	F1G1H1R5A480	1.5p	
	C804	F1G1H1R8A480	1.8p	
	C805	F1G1H2R4A480	2.4p	
	C806	F1G1H2R4A480	2.4p	
	C809	ECUE1H100DCQ	10p	S
	C810	F1G1H1R0A480	1p	
	C811	ECUE1H100DCQ	10p	S
	C812	ECUE1H100DCQ	10p	S
	C813	F1G1H1R0A480	1p	
	C814	ECUE1H100DCQ	10p	S
	C820	F1G1HR50A480	0.5p	
	C822	ECUE1H100DCQ	10p	S
	C823	ECUE1H101JCQ	100p	
	C825	ECUE1H100DCQ	10p	S
	C826	F1G1H1R1A480	1.1p	
	C863	F1G1H7R0A480	7p	
	C864	F1G1H7R0A480	7p	
	C865	ECUE1H100DCQ	10p	
	C866	ECUV1A105KBV	1	
			(OTHERS)	
	MIC100	L0CBAY000053	MICROPHONE	
	E101	L5DYBYY00001	LIQUID CRYSTAL DISPLAY (*4)	
	E102	PNHR1114Z	TRANSPARENT PLATE, LCD	PMMA-HB
	E103	PNHR1392Z	GUIDE, LCD	ABS-HB
	E104	PNHX1136Z	COVER, LCD	
	E105	PNLA1049Z	ANTENNA	
	E106	PNMC1032Z	CASE, MAGNETIC SHIELD (*3)	
	E107	PNVE1011Z	BATTERY TERMINAL	ABS-HB
	E108	PQHG10729Z	RUBBER PARTS, RECEIVER	
⚠	F1	K5H252Y00002	FUSE	
	X1	ној103500039	CRYSTAL OSCILLATOR (*2)	

# 15.5.3. Charger Unit

## 15.5.3.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1018ZB	CHARGER UNIT ASS'Y without NAME PLATE	
			(RTL) (for KX- TG6612CXB) (for KX- TGA661CXB)	
	200	PNLC1018ZS	CHARGER UNIT ASS'Y without NAME PLATE (RTL)(for KX- TG6612CXS)(for KX- TGA661CXS)	
	200-1	PNKM1204Z1	CABINET BODY(for KX- TG6612CXB)(for KX- TGA661CXB)	PS-HB
	200-1	PNKM1204Y6	CABINET BODY(for KX- TG6612CXS)(for KX- TGA661CXS)	PS-HB
	200-2	PNJT1066Z	CHARGE TERMINAL	
	200-3	PNKF1150Z1	CABINET COVER(for KX- TG6612CXB) (for KX- TGA661CXB)	PS-HB
	200-3	PNKF1150Z3	CABINET COVER (for KX- TG6612CXS) (for KX- TGA661CXS)	PS-HB
	200-4	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	

## 15.5.3.2. Main P.C.Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB200	PNWPTGA660CH	MAIN P.C.BOARD ASS'Y (RTL)	
			(JACK)	
	J1	K2ECYB000001	JACK	S
			(RESISTOR)	
	R1	ERX2SJ6R8	6.8	
			(FUSE)	
<b>A</b>	F1	K5H302Y00003	FUSE	

### 15.5.4. Accessories

#### Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
⚠	A1	PNLV226BX0Z	AC ADAPTOR	
	A2	PQJA10075Z	CORD, TELEPHONE	

## 15.5.5. Screws

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	В	XTB2+8GFJ	TAPPING SCREW	

### 15.5.6. Fixtures and Tools

#### Note:

- (\*1) See Equipment Required (P.47), and The Setting Method of JIG (Handset) (P.51).
- (\*2) When replacing the Handset LCD, See **How to** Replace the Handset LCD (P.46).

Safety	Ref.	Part No.	Part Name & Description	Remarks
	No.			
		PQZZ1CD300E	JIG CABLE (*1)	
		PNZZTG6611CX	BATCH FILE CD-ROM (*1)	
		PQZZ430PIR	TIP OF SOLDERING IRON (*2)	
		PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)	

YANI KXTG6611CXB KXTG6611CXS KXTG6612CXB KXTG6612CXS KXTGA661CXB KXTGA661CXS