

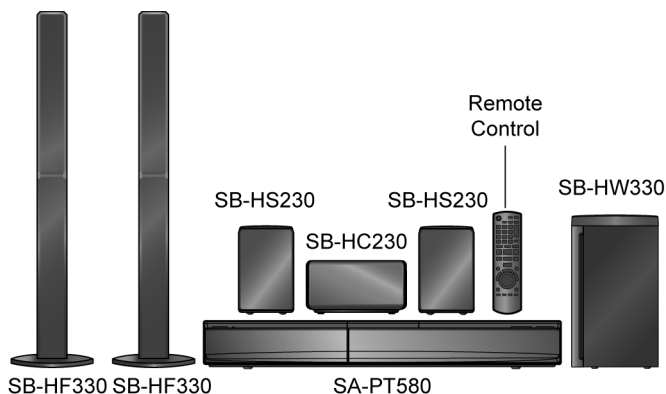
Service Manual

DVD Home Theater Sound System

Model No. **SA-PT580GA**
SA-PT580GS



Product Color: (K)...Black Type



Note: Please refer to the original service manual for:

- DVD Mechanism Unit (DLS6E), Order No. PSG0909002AE
- Speaker system SB-BT330P-K, Order No. PSG1001008CE

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions -----	3	2.3. Service caution based on Legal restrictions -----	9
1.1. GENERAL GUIDELINES-----	3	2.4. Handling Precautions for Traverse Unit -----	10
1.2. Before Use -----	3	3 Service Navigation -----	12
1.3. Before Repair and Adjustment -----	3	3.1. Service Information-----	12
1.4. Protection Circuitry-----	5	4 Specifications -----	13
1.5. Safety Parts Information -----	5	5 Location of Controls and Components -----	15
1.6. Caution for AC Cord (For GS Only)-----	6	5.1. Remote Control Key Button Operations-----	15
2 Warning -----	7	5.2. Main Unit Key Button Operations -----	16
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatic Sensitive (ES) Devices -----	7	5.3. Speaker Connection-----	16
2.2. Precaution of Laser Diode-----	8	5.4. Using the VIERA Link "HDAVI Control™"-----	17
		5.5. Using of iPod/iPhone-----	19

5.6. Disc Information -----	20	11.7. Main P.C.B. (7/7)-----	90
6 Self-Diagnostic and Special Mode Setting -----	22	11.8. FL P.C.B.-----	91
6.1. Cold-Start-----	22	11.9. D-Amp P.C.B. (1/2)-----	92
6.2. Service Mode Table-----	22	11.10. D-Amp P.C.B. (2/2)-----	93
6.3. Self-Diagnostic Mode -----	28	11.11. SMPS P.C.B.-----	93
6.4. Self Diagnostic Function-Error Code-----	29	11.12. Power P.C.B.-----	93
6.5. Sales Demonstration Lock Function -----	32	11.13. Mic P.C.B.-----	94
6.6. Firmware Version-Up Information-----	33	11.14. Waveform Table (1/3)-----	95
7 Troubleshooting Guide-----	36	11.15. Waveform Table (2/3)-----	96
7.1. Troubleshooting Guide for F61 and/or F76-----	36	11.16. Waveform Table (3/3)-----	97
7.2. Part Location -----	37	12 Illustration of ICs, Transistor and Diode-----	98
7.3. Basic Troubleshooting Guide for Traverse Unit (Main P.C.B.)-----	38	13 Overall Simplified Block Diagram-----	99
7.4. Basic Troubleshooting Guide for HDMI AV output-----	39	14 Block Diagram-----	100
8 Disassembly and Assembly Instructions-----	41	14.1. Main(Servo)-----	100
8.1. Disassembly Flow Chart-----	42	14.2. Main(System Control) -----	101
8.2. Main Components and P.C.B. Locations-----	43	14.3. Main(UP-CON)-----	102
8.3. Disassembly of Top Cabinet-----	44	14.4. Main(Audio) -----	103
8.4. Disassembly of AC Inlet P.C.B.-----	45	14.5. Main(Video) -----	105
8.5. Disassembly of Voltage Selector P.C.B.-----	45	14.6. Digital Audio-----	106
8.6. Disassembly of Rear Panel-----	46	14.7. Analog Video-----	107
8.7. Disassembly of DVD Mechanism Unit (DLS6E)-----	46	14.8. Power Supply-----	108
8.8. Disassembly of Front Panel Block Assembly ----	48	15 Wiring Connection Diagram -----	110
8.9. Disassembly of FL P.C.B.-----	49	16 Schematic Diagram Notes-----	111
8.10. Disassembly of Power Button P.C.B.-----	50	17 Schematic Diagram -----	113
8.11. Replacement of Cradle Lid -----	52	17.1. Main Circuit-----	113
8.12. Disassembly of iPod Cradle Assembly -----	54	17.2. FL Circuit-----	126
8.13. Disassembly of iPod/iPhone P.C.B.-----	56	17.3. D-Amp Circuit-----	127
8.14. Disassembly of USB P.C.B.-----	57	17.4. SMPS Circuit-----	131
8.15. Disassembly of Mic P.C.B.-----	57	17.5. Power, Power Button & AC Inlet Circuit-----	133
8.16. Replacement of DVD Lid Unit-----	58	17.6. iPod/iPhone, USB & Voltage Selector Circuit ---	134
8.17. Disassembly of Front Shield Unit -----	60	17.7. Mic Circuit -----	135
8.18. Disassembly of Main P.C.B.-----	61	18 Printed Circuit Board-----	136
8.19. Disassembly of D-Amp P.C.B.-----	63	18.1. Main P.C.B.-----	136
8.20. Replacement of Digital Amplifier IC (IC5100/ IC5200)-----	64	18.2. FL, Power, Power Button & AC Inlet P.C.B.-----	138
8.21. Disassembly of Power P.C.B.-----	65	18.3. D-Amp P.C.B.-----	139
8.22. Disassembly of SMPS P.C.B.-----	66	18.4. SMPS P.C.B.-----	140
8.23. Replacement of Switching Regulator IC (IC5701)-----	68	18.5. iPod/iPhone, USB, Voltage Selector & Mic P.C.B.-----	141
8.24. Replacement of Rectifier Diode (D5702)-----	69	19 Terminal Function of ICs-----	143
8.25. Replacement of Regulator Diode (D5802)-----	70	19.1. IC2300 (RFKWMPT480GA): IC MICROPROCESSOR -----	143
8.26. Replacement of Regulator Diode (D5803)-----	71	19.2. IC6001 (C0HBB0000057): IC FL Driver -----	144
8.27. Disassembly of Fan-----	72	20 Exploded View and Replacement Parts List-----	145
9 Assembling and Disassembling of Traverse Unit----	75	20.1. Exploded View and Mechanical Replacement Part List -----	145
9.1. Disassembly of Traverse Unit-----	75	20.2. Electrical Replacement Part List-----	149
9.2. Assembly of Traverse Unit-----	75		
10 Service Position -----	77		
10.1. Checking & Repairing Main P.C.B.-----	77		
10.2. Checking & Repairing D-Amp P.C.B.-----	79		
10.3. Checking & Repairing SMPS P.C.B.-----	80		
10.4. Checking & Repairing FL P.C.B.-----	82		
11 Voltage & Waveform Chart-----	84		
11.1. Main P.C.B. (1/7)-----	84		
11.2. Main P.C.B. (2/7)-----	85		
11.3. Main P.C.B. (3/7)-----	86		
11.4. Main P.C.B. (4/7)-----	87		
11.5. Main P.C.B. (5/7)-----	88		
11.6. Main P.C.B. (6/7)-----	89		

1 Safety Precautions

1.1. GENERAL GUIDELINES

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, carry out the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1M\Omega$ and $5.2M\Omega$.
When the exposed metal does not have a return path to the chassis, the reading must be ∞

1.1.2. LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5k\Omega$, 10 watts resistor, in parallel with a $0.15\mu F$ capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

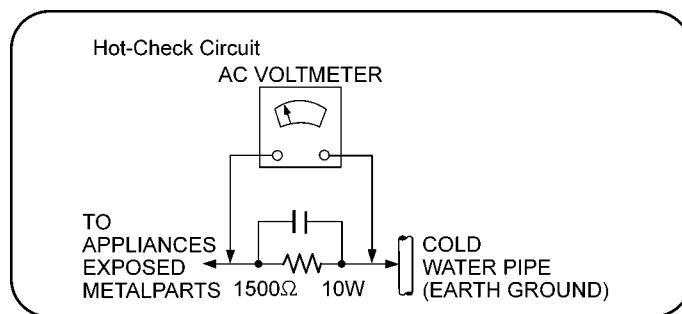


Figure 1

1.2. Before Use

Be sure to disconnect the mains cord before adjusting the voltage selector.

Use a minus(-) screwdriver to set the voltage selector (on the rear panel) to the voltage setting for the area in which the unit will be used. (If the power supply in your area is 110V ~ 127V or 220V ~ 240V, set to the "110V ~ 127V or 220V ~ 240V" position.)

Note that this unit will be seriously damaged if this setting is not made correctly. (There is no voltage selector for some countries, the correct voltage is already set.)

1.3. Before Repair and Adjustment

Disconnect AC power to discharge unit AC Capacitors as such (C5700, C5701, C5702, C5703, C5705, C5706) through a 10Ω , 10 W resistor to ground.

Caution:

DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.

After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 100/127 V, 50/60 Hz in NO SIGNAL at mode volume minimal should be ~ 500 mA.

Current consumption at AC 240 V, 50 Hz in NO SIGNAL at mode volume minimal should be ~ 500 mA.

1.3.1. Caution for fuse replacement

CAUTION:

- i) Replace with the same type fuse:
(Manufacturer: LITTELFUSE, INC, Type: 215, F1, T8AH, 250V)

1.4. Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are “shorted”, or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

1.5. Safety Parts Information

Safety Parts List:

There are special components used in this equipment which are important for safety.

These parts are marked by \triangle in the Schematic Diagrams, Exploded View & Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
\triangle	7	REXX1122	1P BLACK WIRE (AC-SMPS)	
\triangle	8	REXX1123	1P RED WIRE (AC-SMPS)	
\triangle	20	RGRX1001C-E	REAR PANEL	GS
\triangle	20	RGRX1001C-F	REAR PANEL	GA
\triangle	29	RKMX1002-K2	TOP CABINET	
\triangle	60	REXX1120	1P WHITE WIRE (SMPS-VOLTAGE SELECTOR)	
\triangle	61	REXX1121	1P BLUE WIRE (SMPS-VOLTAGE SELECTOR)	
\triangle	401	RAEX1022Z-V	TRAVERSE UNIT	
\triangle	A2	K2CQ2CA00007	AC CORD	
\triangle	A2	K2CZ3YY00005	AC CORD	GS
\triangle	A3	RQTX1114-G	O/I BOOK (Ar/Pe)	GS
\triangle	A3	RQTX1115-B	O/I BOOK (En)	
\triangle	A3	RQTX1117-K	O/I BOOK (Cn)	GA
\triangle	PCB8	REPX0803B	AC INLET P.C.B.	(RTL)
\triangle	PCB9	REPX0803B	SMPS P.C.B.	(RTL)
\triangle	PCB10	REPX0803B	VOLTAGE SELECTOR P.C.B.	(RTL)
\triangle	DZ5701	ERZV10V511CS	ZNR	
\triangle	S5701	KOABCA000007	AC VOLT ADJ	
\triangle	L5702	ELF22V025A	LINE FILTER	
\triangle	L5703	ELF22V025A	LINE FILTER	
\triangle	T5701	ETS42BM1H6AC	TRANSFORMER	
\triangle	T5751	ETS19AB2A6AG	SUB TRANSFORMER	
\triangle	T6100	G4D1A0000142	SWITCHING TRANSFORMER	
\triangle	PC5702	B3PBA0000402	PHOTO COUPLER	
\triangle	PC5720	B3PBA0000402	PHOTO COUPLER	
\triangle	PC5799	B3PBA0000402	PHOTO COUPLER	
\triangle	RY701	K6B1AEA00003	RELAY	
\triangle	F1	K5D802BNA005	FUSE	
\triangle	TH5702	D4CAA5R10001	THERMISTOR	
\triangle	P5701	K2AA2B000011	AC INLET	
\triangle	C5700	F1BAF471A013	470pF	
\triangle	C5701	F0CAF104A105	0.1uF	
\triangle	C5702	F0CAF104A105	0.1uF	
\triangle	C5703	F0CAF104A105	0.1uF	
\triangle	C5705	F1BAF471A013	470pF	
\triangle	C5706	F1BAF471A013	470pF	

1.6. Caution for AC Cord (For GS Only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark \diamond or the BSI mark \heartsuit on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL \perp OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use

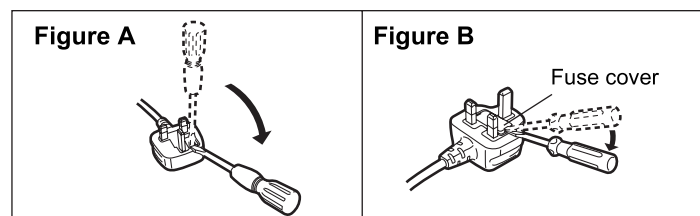
Remove the connector cover.

How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.



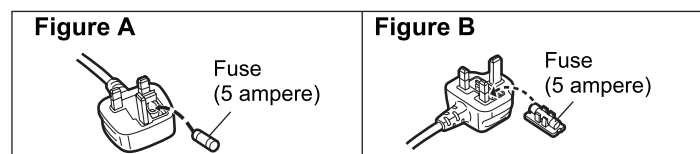2. Replace the fuse and close or attach the fuse cover.



2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatic Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor “chip” components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge build up or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as “anti-static (ESD protected)” can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution:

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. Precaution of Laser Diode

CAUTION:

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Caution:

This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pickup lens.

Wavelength: 655 nm (DVD)/790 nm (CD)



Maximum output radiation power from pickup: 100 μ W/VDE

Laser radiation from the pickup unit is safety level, but be sure the followings:

1. Do not disassemble the pickup unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pickup lens for a long time.

LASER CAUTION LABEL

CAUTION	- LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.	FDA 21 CFR / Class II
CAUTION	- CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.	GB3885-1-A2/ Class 1M
VARNING	- KLASS 1M SYNLIIG OCH OSYNLIIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄCK EJ STRÅLEN DIREKT GENOM OPTISKT INSTRUMENT.	
FORSIGTIG	- SYNLIG OG USYNLIG LASERSTRÅLING KLASSE 1M. NÄR LÅGET ER ÅBENT. UNDGÅ AT SE LIGE PÅ MED OPTISKE INSTRUMENTER.	
VARO!	- AVATTAESSA OLET ALTTIIN LUOKKAN 1M NÄKYVÄÄ JA NÄKYMÄTÖNTÄ LASERSÄTELYÄ. ÄLÄ KATSO OPTISELLA LAITTEILLA SUORAAN SÄTEESEEN.	
VORSICHT	- SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG KLASSE 1M. WENN ABEDECKUNG GEÖFFNET. NICHT DIREKT MIT OPTISCHEN INSTRUMENTEN BETRACHTEN.	
ATTENTION	- RAYONNEMENT LASER VISIBLE ET INVISIBLE. CLASSE 1M. EN CAS D'OUVERTURE. NE PAS REGARDER DIRECTEMENT À L'AIDE D'INSTRUMENTS D'OPTIQUE.	
注意	- ここを開くと可視及び不可視レーザー光が出ます。 ビームを見たり、触れたりしないでください。	
注意	- 打开時可见及不可见激光辐射。避免光照射。	
	GB7247.1-1-2001GB 类	RQLXS0075

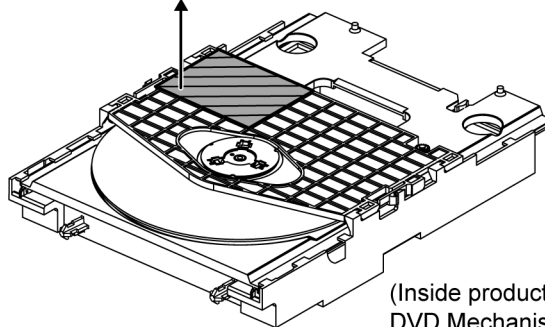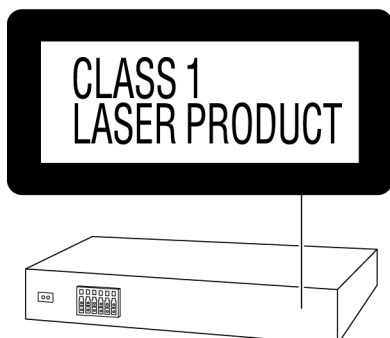

(Inside product on
DVD Mechanism Unit (DLS6E))

2.3. Service caution based on Legal restrictions

2.3.1. General description about Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.

The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30 degrees C (86°F) more than that of the normal solder.

Definition of PCB Lead Free Solder being used

The letter of "PbF" is printed either foil side or components side on the PCB using the lead free solder. (See right figure)	PbF
---	-----

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.
(Definition: The letter of "PbF" is printed on the PCB using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the PCB cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30 degrees C (662±86°F).

Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.
RFKZ03D01K----- (0.3mm 100g Reel)
RFKZ06D01K----- (0.6mm 100g Reel)
RFKZ10D01K----- (1.0mm 100g Reel)

Note

- * Ingredient: tin (Sn), 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

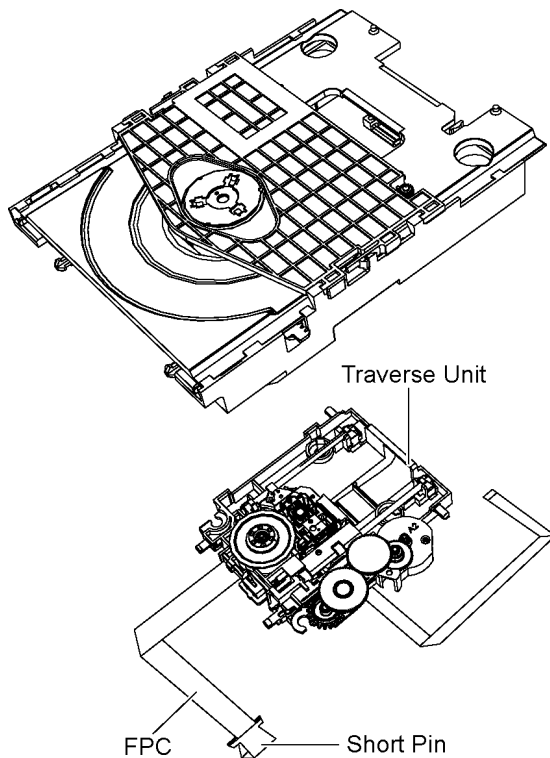
2.4. Handling Precautions for Traverse Unit

The laser diode in the optical pickup unit may break down due to static electricity of clothes or human body. Special care must be taken avoid caution to electrostatic breakdown when servicing and handling the laser diode in the traverse unit.

2.4.1. Cautions to Be Taken in Handling the Optical Pickup Unit


The laser diode in the optical pickup unit may be damaged due to electrostatic discharge generating from clothes or human body. Special care must be taken avoid caution to electrostatic discharge damage when servicing the laser diode.

1. Do not give a considerable shock to the optical pickup unit as it has an extremely high-precise structure.
2. To prevent the laser diode from the electrostatic discharge damage, the flexible cable of the optical pickup unit removed should be short-circuited with a short pin or a clip.
3. The flexible cable may be cut off if an excessive force is applied to it. Use caution when handling the flexible cable.
4. The antistatic FPC is connected to the new optical pickup unit. After replacing the optical pickup unit and connecting the flexible cable, cut off the antistatic FPC.



[Caution]

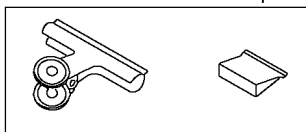Ground the cable with a clip or a short pin.



Clip or Short Pin

Figure 1

2.4.2. Grounding for electrostatic breakdown prevention

Some devices such as the DVD player use the optical pickup (laser diode) and the optical pickup will be damaged by static electricity in the working environment. Proceed servicing works under the working environment where grounding works is completed.

2.4.2.1. Worktable grounding

1. Put a conductive material (sheet) or iron sheet on the area where the optical pickup is placed, and ground the sheet.

2.4.2.2. Human body grounding

1. Use the anti-static wrist strap to discharge the static electricity form your body.

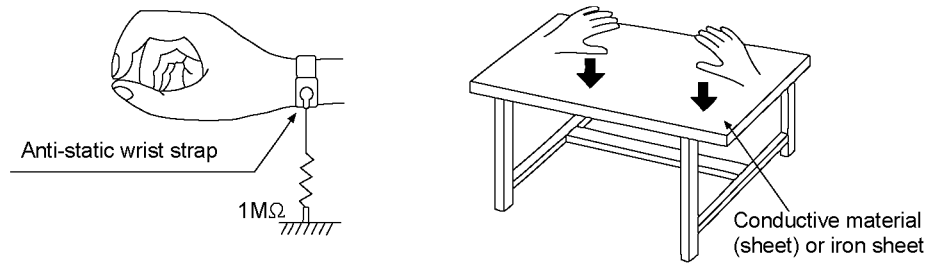


Figure 2

3 Service Navigation

3.1. Service Information

This service manual contains technical information which will allow service personnel's to understand and service this model. Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, this information will be followed by supplement service manual to be filed with original service manual.

- **DVD Mechanism Unit (DLS6E):**

1) This model uses DVD Mechanism Unit (DLS6E).

- **Micro-processor:**

1) The following components are supplied as an assembled part.

- Micro-processor IC, IC2300 (RFKWMPT480GA)

4 Specifications

0.7 mV (1.2 Ω)

Main unit SA-PT580GA/GS

●GENERAL

Power supply: AC 110 V to 127 V, 220 V to 240 V, 50/60 Hz

Power consumption: 95 W

Power consumption in standby mode: approx. 0.1 W

Dimensions (WxHxD): 430 mm×54 mm×287 mm

Mass [Weight]: 2.8 kg

Operating temperature range: 0 °C to +40 °C

Operating humidity range: 35 % to 80 % RH (no condensation)

●AMPLIFIER SECTION

RMS Output Power: Dolby Digital Mode

Front Ch: 125 W per channel (3 Ω), 1 kHz, 10% THD

Surround Ch: 125 W per channel (3 Ω), 1 kHz, 10% THD

Center Ch: 250 W per channel (6 Ω), 1 kHz, 10% THD

Subwoofer Ch: 250 W per channel (6 Ω), 100 Hz, 10% THD

Total RMS Dolby Digital mode power: 1000 W

PMPO Output Power 7500 W

DIN Output Power: Dolby Digital Mode

Front Ch: 90 W per channel (3 Ω), 1 kHz, 1 % THD

Surround Ch: 90 W per channel (3 Ω), 1 kHz, 1 % THD

Center Ch: 115 W per channel (6 Ω), 1 kHz, 1 % THD

Subwoofer Ch: 115 W per channel (6 Ω), 100 Hz, 1 % THD

Total DIN Dolby Digital mode power: 590 W

●FM TUNER, TERMINALS SECTION

Preset Memory: FM 30 stations

Frequency Modulation (FM)

Frequency range: 87.50 MHz-108.00 MHz (50-kHz step)

Antenna terminals: 75 Ω (unbalanced)

Digital audio input

Optical digital input Optical terminal

Sampling frequency 32 kHz, 44.1 kHz, 48 kHz

USB Port

USB standard USB 2.0 full speed

Media file format support MP3 (*.mp3)
WMA (*.wma)
JPEG (*.jpg,*.jpeg)
DivX (*.divx,*.avi)
MPEG4 (*.asf)

USB device file system FAT 12, FAT 16, FAT 32

USB Port power Max. 500 mA

Bit rate Up to 4 Mbps (DivX)

Mic Jack

Sensitivity:

Terminal:

Mono, 6.3 mm (2 system)

●DISC SECTION

Discs played (8 cm or 12 cm):

- (1) DVD (DVD-Video, DivX[®]5,6)
- (2) DVD-R (DVD-Video, DVD-VR, MP3^{2, 5}, JPEG^{4, 5}, MPEG4^{4, 5, 7}, DivX^{5, 6})
- (3) DVD-R DL (DVD-Video, DVD-VR, DivX^{5, 6})
- (4) DVD-RW (DVD-Video, DVD-VR, MP3^{2, 5}, JPEG^{4, 5}, MPEG4^{4, 5, 7}, DivX^{5, 6})
- (5) +R/+RW (Video)
- (6) +R DL (Video)
- (7) CD, CD-R/RW (CD-DA, Video CD, SVCD¹, MP3^{2, 5}, WMA^{3, 5}, JPEG^{4, 5}, MPEG4^{4, 5, 7}, DivX^{5, 6})

*1 Conforming to IEC62107

*2 MPEG-1 Layer 3, MPEG-2 Layer 3

*3 Windows Media Audio Ver.9.0 L3
Not compatible with Multiple Bit Rate (MBR)

*4 Exif Ver 2.1 JPEG Baseline files

Picture resolution: between 160 x 120 and 6144 x 4096 pixels (Sub sampling is 4:0:0, 4:2:0, 4:2:2 or 4:4:4). Extremely long and narrow pictures may not be displayed.

*5 The total combined maximum number of recognizable audio and picture contents and groups: 4000 audio and picture contents and 255 groups. (Excluding Root Folder)

*6 Plays DivX[®] video.

*7 MPEG data recorded with Panasonic SD multi cameras or DVD video recorders
Conforming to SD VIDEO specification (ASF standard)/MPEG4(Simple Profile)video system/G.726 audio system .

Pick up

Wavelength (DVD/CD): 655/790 nm

Laser power: CLASS 1M

Audio output (Disc)

Number of channels: 5.1 ch (FL, FR, C, SL, SR, SW)

●VIDEO SECTION

Video system: PAL625/50, PAL525/60, NTSC

Component video output

Output level: 1 Vp-p (75 Ω)

Terminal: Pin jack (1 system)

HDMI AV output

Terminal 19-pin type A connector

HDAVI Control:

This unit supports "HDAVI Control 5" function.

Note:

1. Specifications are subject to change without notice. Mass and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

Solder:

This model uses lead free solder (PbF).

System	SC-PT580GA/GS-K
Main unit	SA-PT580GA/GS-K
Speakers system	SB-BT330P-K ¹

Refer to their respective original service manuals for *1.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132; and 5,583,936.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

HDAVI Control™ is a trademark of Panasonic Corporation.

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

This product is licensed under the MPEG-4 Visual patent portfolio license for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or (ii) decoding MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 Video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

DivX® is a registered trademark of DivX, Inc., and is used under license.



"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

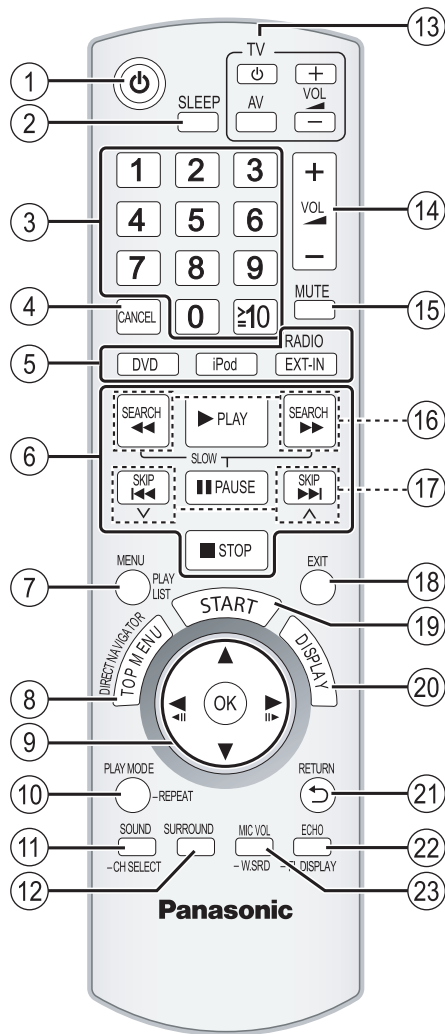
"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc.


5 Location of Controls and Components

5.1. Remote Control Key Button Operations



- ① Turn the main unit on/off
- ② **Set the Sleep timer**
Press [SLEEP].
SLEEP 30→SLEEP 60→SLEEP 90→SLEEP120
↑ OFF (Cancel) ↓
- To confirm the remaining time, press the button again.
- ③ Select channels and title numbers etc. / Enter numbers
- ④ Cancel
- ⑤ **Source select**
[DVD]: Select disc as the source
[iPod]: Select iPod/iPhone as the source
[RADIO, EXT-IN]: Select the FM tuner or the external audio source.
FM → AUX → ARC → D-IN → USB
↑
- ⑥ Basic operations for play
- ⑦ Show a disc menu or play list
- ⑧ Show a disc top menu or program list
- ⑨ Select or confirm menu items / Frame-by-frame
- ⑩ Select the play mode / Set the repeat mode
- ⑪ Select sound mode / Select speaker channel
- ⑫ Select surround sound effects
- ⑬ **TV operations**
Aim the remote control at the Panasonic TV and press the button.
[⏻]: Turn the TV on/off
[AV]: Change the TV's video input mode
[+, VOL, -]: Adjust the TV volume
This may not work properly with some models.
- ⑭ Adjust the volume of the main unit
- ⑮ **Mute the sound**
• "MUTE" flashes on the main unit's display while the function is on.
• To cancel, press the button again or adjust the volume.
• Muting is cancelled when you switch the unit to standby.
- ⑯ Select radio stations manually
- ⑰ Select preset radio stations
- ⑱ Exit the display
- ⑲ Show START menu
- ⑳ Show on screen menu
- ㉑ Return to previous screen
- ㉒ Switch information on the main unit's display / Adjust the echo level
- ㉓ Turn whisper mode surround on / Adjust the volume.

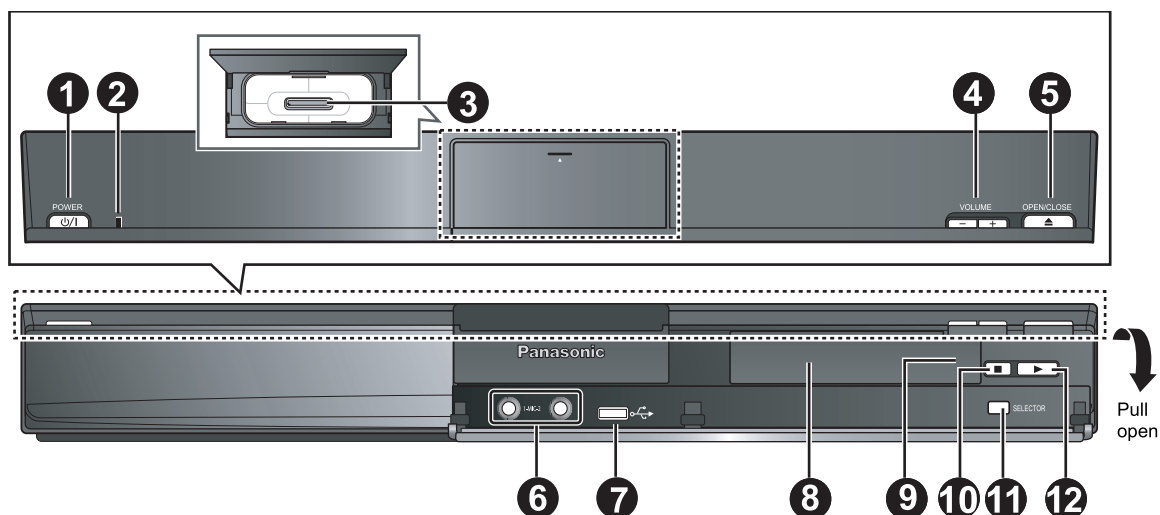5.2. Main Unit Key Button Operations



- ❶ **Standby/on switch (POWER ⏻ / I)**
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ❷ **Power indicator**
The indicator lights when this unit is turn on
- ❸ **Connect iPod/iPhone**
- ❹ **Adjust the volume of the this unit**
- ❺ **Open/Close the disc tray**
- ❻ **Connect Microphones**
- ❼ **Connect USB Device**
- ❽ **Display "SRD" lights when sound is output to the serround speakers.**
- ❾ **Remote control signal sensor**
- ❿ **Stop playing**
- ⓫ **Select the source**
DVD/CD → USB → FM → AUX → ARC → D-IN → IPOD
- ⓬ **Play disc**

5.3. Speaker Connection

Pay attention to the type of speaker and the connector color when you place the speakers.

Main unit (rear)

Connect to the terminals of the same color.

Use of the speaker cable stickers is convenient when making cable connections.

Speakers (rear)

Insert the wire fully, taking care not to insert beyond the wire insulation.

+: White

-: Blue line

- Be careful not to cross (short circuit) or reverse the polarity of the speaker wires as doing so may damage the speakers.

5.4. Using the VIERA Link “HDAVI Control™”

What is VIERA Link “HDAVI Control”

VIERA Link “HDAVI Control”

VIERA Link “HDAVI Control” is a convenient function that offers linked operations of this unit, and a Panasonic TV (VIERA) under “HDAVI Control”. You can use this function by connecting the equipment with the HDMI cable. See the operating instructions for connected equipment for operational details.

- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.
- This unit supports “HDAVI Control 5” function. “HDAVI Control 5” is the newest standard (current as of December, 2009) for Panasonic’s HDAVI Control compatible equipment. This standard is compatible with Panasonic’s conventional HDAVI equipment.
- Please refer to individual manuals for other manufacturers’ equipment supporting VIERA Link function.

The TV with “HDAVI Control 2 or later” function enables the following operation: Easy control only with VIERA remote control (for “HDAVI Control 2 or later”)

Preparation

- Confirm that the HDMI connection has been made
- Set “VIERA Link” to “ON”.
- To complete and activate the connection correctly, turn on all VIERA Link “HDAVI Control” compatible equipment and set the TV to the corresponding HDMI input mode for this unit.

Setting the TV audio for VIERA Link “HDAVI Control”

Select, “AUX”, “ARC” or “D-IN” to work with the linked operations.

Refer to TV audio setting in EASY SETUP or “TV AUDIO” in HDMI menu.

Confirm the audio connection to the AUX terminal (for “AUX”), HDMI AV

OUT terminal (for “ARC”) or DIGITAL AUDIO IN OPTICAL terminal (for “D-IN”)

Setting the STB audio for VIERA Link “HDAVI Control”

Select “D-IN” to work with the linked operations.

Refer to STB setting in “Making settings for digital audio input”.

Confirm the audio connection to the DIGITAL AUDIO IN OPTICAL terminal (for “D-IN”)

Whenever the connection or settings are changed, reconfirm the points above.

- ※ 1 “AUX”, “ARC” or “D-IN” (DIGITAL IN) works depending on the TV audio setting (⇒ above, Setting the TV audio for VIERA Link “HDAVI Control”).
- ※ 2 “D-IN” (DIGITAL IN) works depending on the STB audio setting (⇒ above, Setting the STB audio for VIERA Link “HDAVI Control”).

What you can do with “HDAVI Control”

Auto lip sync

(Available When using VIERA Link “HDAVI Control” with “HDAVI Control 3 or later” compatible TV)

This function automatically provides synchronised audio and video output. (This works only when the source is “DVD/CD”, “USB”, “AUX”^{*1}, “ARC”^{*1} or “D-IN”^{*1,2}.)

- When using “DVD/CD” or “USB” as the source, set “TIME DELAY” in VIDEO menu to “0 ms/AUTO”.

One touch play

You can turn on this unit and the TV, and start playing the disc with a single press of a button.

(Remote control only)

During standby mode, press [1▶PLAY]Ⓞ to start disc playback.

This unit’s speakers will be automatically activated.

Note

Playback may not be immediately displayed on the TV. If you miss the beginning portion of playback, press [SKIP: ◀◀]Ⓞ or [SEARCH6◀◀]Ⓞ to go back to where playback started.

Auto input switching (Power on link)

When the following operations are performed, the TV will automatically switch the input channel and display the corresponding action. Additionally when the TV is off, the TV will automatically turn on.

–When play starts on the unit

–When an action that uses the display screen is performed (e.g., START menu)

- When you switch the TV input to TV tuner mode or the STB input channel, this unit will automatically switch to “AUX”¹, “ARC”¹ or “D-IN”^{1,2}.

(For “IPOD” mode, this works only in iPod/iPhone music mode, or when iPod/iPhone is not connected.) when you start disc Play, the TV will automatically switch its input mode for this unit.

Power off link

All connected equipment compatible with “HDAVI Control”, including this unit, automatically turn off when you switch the TV off.

To continue audio playback even when the TV is turned off, select “VIDEO”.

Note

When you press [Ⓞ]①, only this unit turns off. Other connected equipment compatible with VIERA Link “HDAVI Control” stays on.

For details, refer also to the operating instructions for your TV.

Speaker Selection

You can select whether audio is output from this unit's speakers or the TV speakers by using the TV menu settings. For details, refer to the operating instructions for your TV.

Home Cinema

This unit's speakers are active.

- When you turn on this unit, this unit's speakers will be automatically activated.
- When this unit is in standby mode, changing the TV speakers to this unit's speakers in the TV menu will automatically turn this unit on and select , "AUX" *1 "ARC" *1 or "D-IN" *1,2 as the source.
- The TV speakers are automatically muted.
- You can control the volume setting using the volume or mute button on the TV's remote control. (The volume level is displayed on this unit's display.)
- To cancel muting, you can also use this unit's remote control
- If you turn off this unit, TV speakers will be automatically activated.

TV

TV speakers are active.

- The volume of this unit is set to "0".
 - This function works only when "DVD/CD", "USB", "AUX" *1, "ARC" *1 or "D-IN" *1,2 is selected as the source on this unit.
- Audio output is 2-channel audio.


When switching between this unit speakers and TV speakers, the TV screen may be blank for several seconds.

Easy control only with VIERA remote control (for "HDAVI Control 2 or later")

You can control the playback menus of this unit with the TV's remote control.

1 Select this unit's operation menu by using the TV menu settings. (For details, refer to the operating instructions for your TV.)

- The START menu will be shown.
e.g. **DVD-V**




Playback/menu access

- The START menu can also be shown by using a button on the TV's remote control (e.g. (OPTION))
 - When "DVD/CD" or "USB" is selected as the source, the TV's remote control works only during stop mode.
 - This does not work while iPod music playback screen is displayed on the TV.

2 Select the desired item on the START menu
When the on-screen control panel appears

e.g. **DVD-V** (when "Playback Disc" is selected from the START menu.)



You can operate the playback with the indicated controls.

- The on-screen control panel can also be shown by using a button on the TV's remote control (e.g. (OPTION)).

– This works only during "DVD/CD" or "USB" playback and resume modes or, while iPod music playback screen is displayed on the TV.

Note

- Depending on the menu, some button operations cannot be performed from the TV's remote control.
- You cannot input numbers with the numbered buttons on the TV's remote control ([0] to [9]). Use this unit's remote control to select the play list etc.

5.5. Using of iPod/iPhone

Using the iPod/iPhone

You can enjoy iPod/iPhone music through this unit's speakers or view iPod/iPhone videos/photos on the TV.

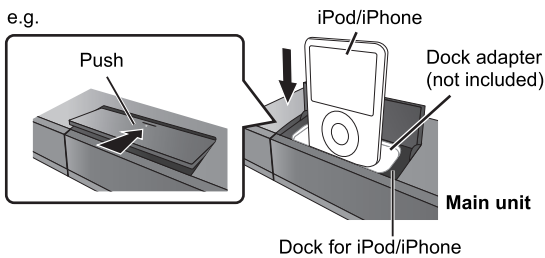
Preparation

- To view photos/videos from the iPod/iPhone
 - Ensure the video connection to the VIDEO OUT terminal on this unit
 - Operate the iPod/iPhone menu to make the appropriate photo/video output settings for your TV. (Refer to operating instructions for your iPod/iPhone.)
- To display the picture, turn on the TV and select the appropriate video input mode.
- Before connecting/disconnecting the iPod/iPhone, turn the main unit off or reduce the volume of the main unit to its minimum.

1 Push Δ to open the Dock for iPod/iPhone lid.

2 Connect the iPod/iPhone (not included) firmly.

Attach the dock adapter which should be supplied with your iPod/iPhone to the dock for the stable use of the iPod/iPhone. If you need an adapter, consult your iPod/iPhone dealer.




3 Press [iPod] to select "IPOD".

The iPod/iPhone automatically switches to this unit's display mode. e.g.



4 Press [FUNCTIONS] to select the menu.

Each time you press the button:



When using the START menu in "IPOD" mode

e.g.



Music: Shows the music menu.

Videos: Shows the video menu.

All (iPod display): Switches to iPod/iPhone menu.

iPod Information: Display iPod/iPhone details.

Enjoying music/videos

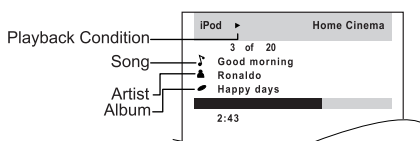
1 Press [FUNCTIONS] to select music or video menu on the TV.

2 Press [Δ , ∇] to select an item and press [OK].

- Press [\blacktriangleleft , \blacktriangleright] to skip page by page.
- To return to the previous screen, press [RETURN].

Play starts from the selected song or video.

e.g. music playback screen



* These icons will only appear for music mode.

: Song shuffle

: Album shuffle

: Repeat 1 song

: Repeat all

Basic controls (For music and videos only)

Button	Function
[▶ PLAY]	Play
[■ STOP] , [PAUSE]	Pause
[SKIP: ◀◀ , SKIP ▶▶]	Skip
(press and hold) [SKIP: ◀◀ , SKIP ▶▶]	Search

Other methods of playback

Shuffle mode (For music playback only)

Press [PLAY MODE]: several times.

SONGS, ALBUMS, OFF

Repeat mode

Press and hold [-REPEAT]: and then press the button several times within a few seconds.

During the music/video playback: ONE, ALL, OFF

Note

- Music playback modes set on the iPod/iPhone will be maintained when connected to the main unit. Changes made while the iPod/iPhone is connected to the main unit will be kept on the iPod/iPhone after disconnecting it.
- If the video menu is accessed, the video shuffle playback mode on the iPod/iPhone is set to off when the iPod/iPhone is disconnected from the unit.

Enjoying photos

1 Press [FUNCTIONS] to select the iPod/iPhone menu.

2 Play a slideshow on your iPod/iPhone.

You can use the remote control to operate the iPod/iPhone menu.

[Δ , ∇]: To navigate menu items.

[OK]: To go to the next menu.

[RETURN]: To return to the previous menu.

The remote control operation may vary between iPod/iPhone models.

While an iPod/iPhone is connected

Do not push or pull your iPod/iPhone back and forth with great force.

About recharging the battery

- iPod/iPhone will start recharging regardless of whether this unit is on or off.

"IPOD*" will be shown on the main unit's display during iPod/iPhone charging in main unit standby mode.

- Check iPod/iPhone to see if the battery is fully recharged.
- If you are not using iPod/iPhone for an extended period of time after recharging has completed, disconnect it from main unit, as the battery will be depleted naturally. (Once fully recharged, additional recharging will not occur.)

Compatible iPod/iPhone (as of December 2009)

- iPhone 3GS (16GB, 32GB)
- iPhone 3G (8GB, 16GB)
- iPhone (4GB, 8GB, 16GB)
- iPod nano 5th generation (video camera) (8GB, 16GB)
- iPod touch 2nd generation (8GB, 16GB, 32GB, 64GB)
- iPod classic (120GB, 160GB (2009))
- iPod nano 4th generation (video) (8GB, 16GB)
- iPod classic (160GB (2007))
- iPod touch 1st generation (8GB, 16GB, 32GB)
- iPod nano 3rd generation (video) (4GB, 8GB)
- iPod classic (80GB)
- iPod nano 2nd generation (aluminum) (2GB, 4GB, 8GB)
- iPod 5th generation (video) (60GB, 80GB)
- iPod 5th generation (video) (30GB)
- iPod nano 1st generation (1GB, 2GB, 4GB)
- iPod 4th generation (color display) (40GB, 60GB)
- iPod 4th generation (color display) (20GB, 30GB)
- iPod 4th generation (40GB)
- iPod 4th generation (20GB)
- iPod mini (4GB, 6GB)

Compatibility depends on the software version of your iPod/iPhone.






To use the iPod touch/iPhone features

- Press the Home button on the iPod touch/iPhone.
- Select the iPod touch/iPhone features on the touch screen to operate.



















5.6. Disc Information

5.6.1. Disc Playability (Media)

Commercial discs

Type of media/Logo	Remarks	Indicated as
DVD-Video  	High quality movie and music discs	
Video CD  	Music discs with video Including SVCD (Conforming to IEC62107)	
CD 	Music discs	

Recorded discs

Type of media/Logo	Formats	Indicated as
DVD-R/RW  	<ul style="list-style-type: none"> DVD-Video Format Version 1.1 of the DVD Video Recording Format MP3 format JPEG format DivX® format MPEG4 format 	     
DVD-R DL 	<ul style="list-style-type: none"> DVD-Video Format Version 1.2 of the DVD Video Recording Format DivX® format 	  
+R/+RW/ +R DL	<ul style="list-style-type: none"> +VR (+R/+RW Video Recording) Format 	
CD-R/RW	<ul style="list-style-type: none"> MP3 format JPEG format WMA format DivX® format MPEG4 format 	    

- Before playback, finalise the disc on the device it was recorded on.
- It may not be possible to play all the above-mentioned discs in some cases due to the type of disc, the condition of the recording, the recording method, or how the files were created (⇒right, Tips for making data discs).

Note about using a DualDisc

The digital audio content side of a DualDisc does not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so playback may not be possible.

Discs that cannot be played

Blu-ray, HD DVD, AVCHD discs, DVD-RW version 1.0, DVD-Audio, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM, and “Chaoji VCD” available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

Video systems

- This unit can play PAL and NTSC, but your TV must match the system used on the disc.
- PAL discs cannot be correctly viewed on an NTSC TV.
- This unit can convert NTSC signals to PAL 60 for viewing on a PAL TV.

Disc handling precautions

- Do not attach labels or stickers to discs. This may cause disc warping, rendering it unusable.
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, liquids which prevent static electricity, or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs, etc.).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

5.6.2. File Extension Type Support (WMA/MP3/JPEG/MPEG4/DivX)

<p>WMA (Extension: “.WMA”, “.wma”) Disc: CD-R/RW</p> <ul style="list-style-type: none">• Compatible compression rate: between 48 kbps and 320 kbps• You cannot play WMA files that are copy-protected.
<p>MP3 (Extension: “.MP3”, “.mp3”) Disc: DVD-R/RW, CD-R/RW</p> <ul style="list-style-type: none">• This unit does not support ID3 tags.• Sampling frequency and compression rate:<ul style="list-style-type: none">– DVD-R/RW: 11.02 kHz, 12 kHz, 22.05 kHz, 24 kHz (8 kbps to 160 kbps), 44.1 kHz and 48 kHz (32 kbps to 320 kbps)– CD-R/RW: 8 kHz, 11.02 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz (8 kbps to 160 kbps), 32 kHz, 44.1 kHz and 48 kHz (32 kbps to 320 kbps)
<p>JPEG (Extension: “.JPG”, “.jpg”, “.JPEG”, “.jpeg”) Disc: DVD-R/RW, CD-R/RW</p> <ul style="list-style-type: none">• JPEG files taken on a digital camera that conform to DCF Standard (Design rule for Camera File system) Version 1.0 are displayed.<ul style="list-style-type: none">– Files that have been altered, edited or saved with computer picture editing software may not be displayed.• This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF), or play pictures with attached audio.
<p>MPEG4 (Extension: “.ASF”, “.asf”) Disc: DVD-R/RW, CD-R/RW</p> <ul style="list-style-type: none">• The recording date may differ from that of the actual date.
<p>DivX (Extension: “.DIVX”, “.divx”, “.AVI”, “.avi”) Disc: DVD-R/R DL/RW, CD-R/RW</p> <ul style="list-style-type: none">• DivX files greater than 2 GB or have no index may not be played properly on this unit.• This unit supports all resolutions up to maximum of 720×480 (NTSC)/720×576 (PAL).• You can select up to 8 types of audio and subtitles on this unit.

6 Self-Diagnostic and Special Mode Setting

6.1. Cold-Start

Here is the procedure to carry out cold-start for initialize to shipping mode.

1. Unplug AC power cord
2. Press & hold [POWER] button
3. Plug AC power cord while [POWER] button being pressed
FL Display will show “_ _ _ _ _ _ _ _”
4. Release [POWER] button

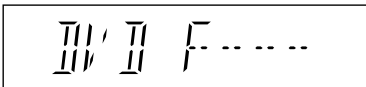
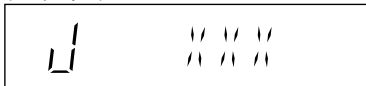
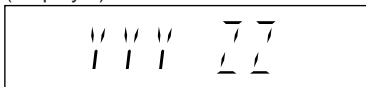

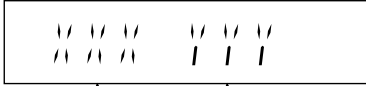
6.2. Service Mode Table

By pressing various button combinations on the main unit and remote control unit, you can activate the various service modes for checking.



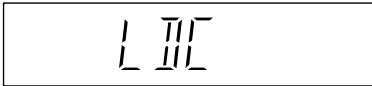
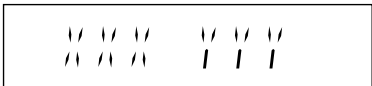
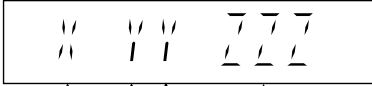
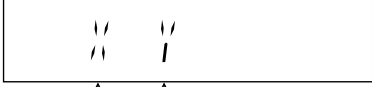
Special Note:

- Due to the limitations of the no. characters that can be shown on the FL Display, the “FL Display” button on the remote control unit can be used to show the two display pages. (Display 1 / Display 2).
- Refer to Section 5.1 for the section on “Remote Control Key Buttons Operations”.


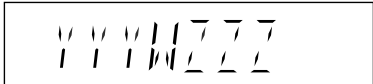
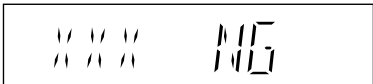
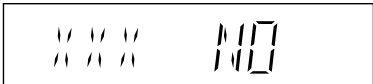
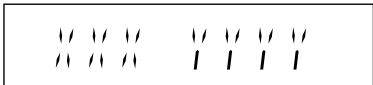
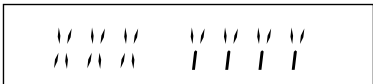

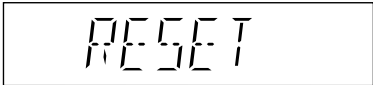
6.2.1. Service Mode Table 1 (For DVD)

Item		FL Display	Key Operation
Mode Name	Description		Front Key
Error code check	<p>Error code check The latest error code stored in the EEPROM IC is displayed.</p> <p>Note: Refer to "[Section 6.4] DVD Self Diagnostic Function-Error Code" for more detailed information on the error codes.</p>	 <p style="text-align: center;">↑ F / H / U</p> <p>Error code (play_err) is expressed in the following convention. Error code = 0 x DAXX is expressed: →DVDnn U12 Error code = 0 x DBXX is expressed: →DVDnn H12 Error code = 0 x DXXX is expressed: →DVDnn F123 Error code = 0 x 0000 is expressed: →DVDnn F--- * "xx" denotes the error code</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [0] button on the remote control unit. *With pointing of cursor up and down on display.</p> <p>To exit, press [POWER] button on main unit or remote control.</p>
Jitter check	<p>Jitter check. Jitter rate is measured and displayed. Measurement is repeatedly done in the cycle of one second. Read error counter starts from zero upon mode setting. When target block data failed to be read out, the counter advances by one increment. When the failure is caused by minor error, it may be corrected when retried to enable successful reading. In this case, the counter advances by one. When the error persists even after retry, the counter may jump by two or more.</p> <p>FL Display sequence: Display 1→2.</p>	<p>(Display 1)</p>  <p style="text-align: center;">↑ Jitter check mode ↑ Jitter rate</p> <p>Jitter rate is shown in decimal notation to one place of decimal. Focus drive value is shown in hexadecimal notation.</p> <p>(Display 2)</p>  <p style="text-align: center;">↑ Lead Error Counter ↑ Focus Drive Value</p>	<p>In STOP (with disc inside tray) mode, press [STOP] button on the main unit, and [5] button on the remote control unit.</p> <p>Press [POWER] or [STOP] button to exit.</p> <p>Press [FL Display] on remote control unit for next page (FL Display).</p>
Initial setting of laser drive current	<p>Initial setting of laser drive current. Initial current value for the DVD laser and CD laser is separately saved in the EEPROM IC.</p> <p>FL Display sequence: Display 1→2.</p>	<p>(Display 1)</p>  <p style="text-align: center;">↑ Laser current measurement mode</p> <p>The value denotes the current in decimal notation.</p> <p>(Display 2)</p>  <p style="text-align: center;">↑ CD Laser ↑ DVD Laser</p> <p>The above example shows the initial current is XXXmA and YYYmA for CD laser and DVD laser respectively when the laser is switched on.</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [PAUSE] button on the remote control unit.</p> <p>Press [FL Display] on remote control unit for next page (FL Display) on values of laser drive current.</p>

6.2.2. Service Mode Table 2 (For DVD)

Item		FL Display	Key Operation
Mode Name	Description		Front Key
DVD laser drive current measurement	<p>DVD laser drive current measurement. DVD laser drive current is measured and the result is displayed together with the initial value stored in the EEPROM IC.</p> <p>After the measurement, DVD laser emission is kept on. It is turned off when POWER key is switched off.</p> <p>FL Display sequence: Display 1→2.</p>	<p>(Display 1)</p>  <p>DVD laser current measurement mode</p> <p>The value denotes the current in decimal notation.</p> <p>(Display 2)</p>  <p>DVD Laser Initial Value DVD Laser Value</p> <p>The above example shows the initial current is XXXmA and the measured value is YYYmA.</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [FUNCTIONS] button on the remote control unit.</p> <p>Press [FL Display] on remote control unit for next page (FL Display) on values of dvd drive current.</p>
CD laser drive current measurement	<p>CD laser drive current measurement. CD laser drive current is measured and the result is displayed together with the initial value stored in the EEPROM IC.</p> <p>After the measurement, CD laser emission is kept on. It is turned off when POWER key is switched off.</p> <p>FL Display sequence: Display 1→2.</p>	<p>(Display 1)</p>  <p>CD laser current measurement mode</p> <p>The value denotes the current in decimal notation.</p> <p>(Display 2)</p>  <p>CD laser initial value CD laser value</p> <p>The above example shows the initial current is XXXmA and the measured value is YYYmA.</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [3] button on the remote control unit.</p> <p>Press [FL Display] on remote control unit for next page. (FL Display)</p>
Region display	<p>Region code display, TV broadcasting system & the model no. information.</p> <p>Note: Refer to Figure 6.1 for "Video Design Information".</p>	 <p>Model No. Information</p> <p>N: NTSC / 6: PAL60</p> <p>N: no PAL / P: PAL</p> <p>Region No.: 0-8</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [6] button on the remote control unit. Display is automatically clear after 5 seconds.</p>
CPPM/CPRM Keys Check	<p>CPPM/CPRM refers to the Content Protection for Recordable Media and Pre-Recorded Media. It displays the existence of the keys as "1" or "0".</p> <p>OK: Existing of keys. NG: Non existing of keys.</p>	 <p>0: NG 0: NG 1: OK 1: OK</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [SOUND] button on the remote control unit. Cancelled automatically 5 seconds later.</p>

6.2.3. Service Mode Table 3 (For DVD)

Item		FL Display	Key Operation
Mode Name	Description		Front Key
Micro-processor firmware version display & EEPROM checksum display.	<p>Micro-processor firmware version display & EEPROM checksum display. EEPROM checksum is only available due to existence of EEPROM IC.</p> <p>Note: Condition 1/2/3 shows the state of EEPROM IC.</p> <p>FL Display sequence: Display 1→2→3.</p>	<p>(Display 1)</p>  <p>(Display 2)</p>  <p>(Condition 1)</p>  <p>If the version of the EEPROM does not match, [NG] is displayed.</p> <p>(Condition 2)</p>  <p>(a) If there is NO EEPROM header string OR (b) If there is no EEPROM (no data is received by Micro-processor), [NO] is displayed.</p> <p>(Condition 3)</p>  <p>If the EEPROM version matches, checksum [YYYY] is displayed.</p> <p>(Display 3)</p>  <p style="text-align: center;"> ↑ Opecon Version ↑ EEPROM Checksum (If applicable, refer below.) </p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [7] button on the remote control unit. Cancelled automatically 5 seconds later.</p> <p>Press [FL Display] button on remote control unit for next page. (FL Display)</p>
Initialization	<p>Initialization. User settings are cancelled and player is initialized to factory setting. It is necessary when after replacement of Micro-processor (DV5 LS1) IC, FLASH ROM IC (IC8651), EEPROM IC (IC8611) & Main P.C.B.</p>		<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [≧10] button on the remote control unit.</p>
(DVD) Main P.C.B. Reset	<p>To reset Main P.C.B. This process is used when the Main P.C.B. or FLASH ROM IC is replaced with a new one.</p>		<p>While in initialization mode, press & hold [STOP] button on the main unit for 3 seconds, follow by [ENTER] button on the remote control unit.</p>

6.2.4. Service Mode Table 4 (For DVD)

Item		FL Display	Key Operation
Mode Name	Description		Front Key
DVD firmware version display	<p>DVD firmware version is displayed on the FL Display. The firmware version can be updated using recovery disc.</p> <p>Note: It is necessary to check for firmware version before carrying out the version up using the disc.</p>	<p>The diagram shows a 7-segment display with the following labels and arrows pointing to specific segments:</p> <ul style="list-style-type: none"> System controller version: points to the top two segments. Destination: points to the middle two segments. System controller generation: points to the bottom two segments. Region No.: 0-8: points to the leftmost segment. 	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [8] button on the remote control unit. Cancelled automatically 5 seconds later.</p>
Timer 1 check	<p>Timer 1 check Laser operation timer is measured separately for DVD laser and CD laser.</p> <p>FL Display sequence: Display 1→2.</p>	<p>(Display 1)</p> <p>The diagram shows a 7-segment display with the following labels and arrows:</p> <ul style="list-style-type: none"> DVD laser usage time: points to the top two segments. CD laser usage time: points to the bottom two segments. <p>Shown to the above is DVD laser usage time, and to the below is CD laser usage time. Time is shown in 5 digits of decimal notation in a unit of 10 hours. "00000" will follow "99999". (DVD laser)</p> <p>(Display 2)</p> <p>The diagram shows a 7-segment display with the following label and arrow:</p> <ul style="list-style-type: none"> CD laser usage time: points to the bottom two segments. <p>Time is shown in 6 digits of decimal notation in a unit of 10 hours. "000000" will follow "999999". (CD laser)</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [▲] button on the remote control unit. Cancelled automatically 5 seconds later.</p> <p>Press [FL Display] button for next page of FL Display.</p>
Timer 1 reset	<p>Timer 1 reset Laser operation timer of both DVD laser and CD laser is reset all at once.</p>	<p>The diagram shows a 7-segment display with the following label and arrow:</p> <ul style="list-style-type: none"> Time: points to the top two segments. <p>Time is shown in 5 digits of decimal notation in a unit of 10 hours. It will clear to "00000" upon reset.</p>	<p>While displaying Timer 1 data, press [STOP] button on the main unit, and [▼] button on the remote control unit. Cancelled automatically 5 seconds later.</p>
Timer 2 check	<p>Timer 2 check Spindle motor operation timer</p>	<p>The diagram shows a 7-segment display with the following label and arrow:</p> <ul style="list-style-type: none"> Time: points to the top two segments. <p>Time is shown in 5 digits of decimal notation in a unit of 1 hour. "00000" will follow "99999".</p>	<p>In STOP (no disc) mode, press [STOP] button on the main unit, and [▶] button on the remote control unit. Cancelled automatically 5 seconds later.</p>
Timer 2 reset	<p>Timer 2 reset Spindle motor operation timer</p>	<p>The diagram shows a 7-segment display with the following label and arrow:</p> <ul style="list-style-type: none"> Time: points to the top two segments. <p>Time is shown in 5 digits of decimal notation in a unit of 1 hour. It will be cleared to "00000" upon activating this.</p>	<p>While displaying Timer 2 data, press [STOP] button on the main unit, and [◀] button on the remote control unit. Cancelled automatically 5 seconds later.</p>

Model Series	Country Region	Region Code	TV Broadcasting System	Product			
				Signal System (Default)	Region Display (Default)	OSD Default	OSD Menu Language
P, PC, PX	USA, Canada, US Military	1	NTSC	NTSC (*A)	1PN	English	English (NA), Spanish (NA), Canadian, French
(S)	Japan	2	NTSC	NTSC (*A)	2PN	Japanese	Japanese, English
EP	Poland, E.Europe	2	PAL	PAL (*C)	2P6	English	English (EU), French, German, Spanish (EU), Polish, Russian, Czech, Hungarian
EB, EG, ES	UK, Germany, W.Europe	2	PAL	PAL (*C)	2P6	English	English (EU), French, German, Italian, Spanish (EU), Polish, Swedish, Dutch
GC, GS	Middle East, Africa, S.E.A	2	PAL	PAL (*C)	2P6	English	English (NA), French, German, Spanish (EU), Polish, Russian, Czech, Hungarian
GA, GD, GT, GJ	South East Asia, Korea, Taiwan	3	PAL NTSC	NTSC (*B)	3PN	English	English (NA), Traditional Chinese
GN	New Zealand, Australia	4	PAL	PAL (*C)	4P6	English	English (EU), French, German, Italian, Spanish (EU), Polish, Swedish, Dutch
PN	Central & S.America, Brazil	4	NTSC	NTSC (*D)	4PN	Spanish	English (NA), Spanish (Panama), French, Brazilian Portuguese
PB	Central & S.America, Brazil	4	NTSC	NTSC (*D)	4PN	Portuguese	English (NA), Spanish (Panama), French, Brazilian Portuguese
PH, PU, PR	South/Central America, Argentina	4	NTSC	NTSC (*D)	4PN	English	English (NA), Spanish (Panama), French, Brazilian Portuguese
EE	CIS	5	SECAM	PAL (*C)	5P6	English	English (EU), French, German, Spanish (EU), Polish, Russian, Czech, Hungarian
GW	India	5	PAL	PAL (*C)	5P6	English	English (NA), Traditional Chinese
GK	China	6	PAL	NTSC (*B)	6PN	Simplified Chinese	English (NA), Simplified Chinese

NTSC (*A)

Source	Output
Screen Saver	NTSC
NTSC disc	NTSC
PAL disc	PAL (DVD-V)
	NTSC (DVD-A/VCD)

NTSC (*B)

Source	Output
Screen Saver	NTSC
NTSC disc	NTSC (default)
	PAL60
PAL disc	PAL

PAL (*C)

Source	Output
Screen Saver	PAL
NTSC disc	PAL60 (default)
	NTSC
PAL disc	PAL

NTSC (*D)

Source	Output
Screen Saver	NTSC
NTSC disc	NTSC
PAL disc	NTSC

Explanation of Display

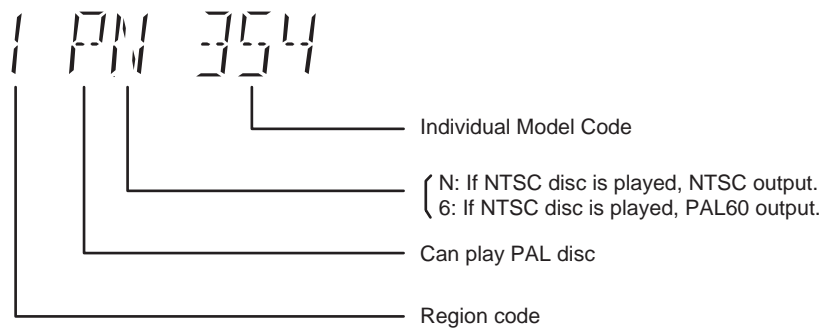
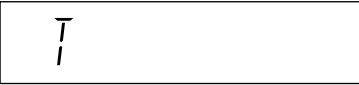
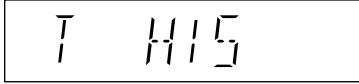
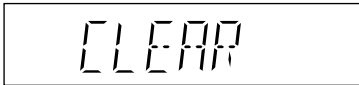


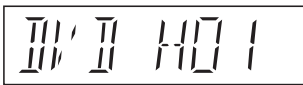




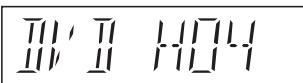

Figure 6.1 Video Design Information

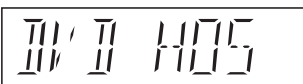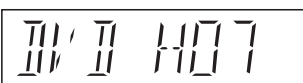6.3. Self-Diagnostic Mode











Item		FL Display	Key Operation
Mode Name	Description		Front Key
Self-Diagnostic Mode	To enter into self-diagnostic checking		Press & hold [STOP] on main unit, follow by [4] then [9] on remote control. (When no disc in mechanism)
Error code information	System will perform a check on any unusual/error code from the memory	Error code will display Example: 	In self-diagnostic mode, press [STOP] on remote control. To exist, press [⏻ / 1] on main unit or remote control.
Delete Error Codes	System will clear all of the contents of unusual/error code from the memory		In self-diagnostic mode, press [CANCEL] on remote control. To exist, press [⏻ / 1] on main unit or remote control.

6.4. Self Diagnostic Function-Error Code



6.4.1. Mechanism Error Code Table (DLS6E)

Error Code	Diagnosis Contents	Description of error	Automatic FL Display	Remarks
H01	Tray loading error	The tray opening and closing is abnormal. CLOSE and OPEN of the tray cannot be carried out properly. Loading motor error, DV5 LSI IC (IC8001) error.		Press [■STOP] on main unit for next error. (OPEN time: OPEN → CLOSE →OPEN → H01 at CLOSE: CLOSE → OPEN → CLOSE H01)
H02	Spindle servo error	The spindle servo/motor is abnormal. The FG pulse is abnormal. CLV servo error.		Press [■STOP] on main unit for next error.
H03	Traverse motor error	The traverse is abnormal. (Traverse servo, DV5 LSI IC (IC8001), TRV motor error.)		Press [■STOP] on main unit for next error.
H04	Tracking servo error	Tracking coil NG (OPU unit abnormal), DV5 LSI IC (IC8001) error.		Press [■STOP] on main unit for next error.
H05	Seek time out error	It is not possible to access the disc. TOC cannot read. Abnormal disc etc. Pickup abnormal or disk is dirty. (TRV motor error, DV5 LSI IC (IC8001) error.)		Press [■STOP] on main unit for next error.
H07	Driver IC thermal shut down	The spindle motor is abnormal. (short between brushes)		Press [■STOP] on main unit for next error.
U11	Focus servo error	Focus coil, FE signal error. Disc may be dirty.		Press [■STOP] on main unit for next error. (Unfinalized DVD-R is likely to become U11.)

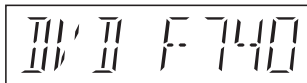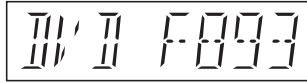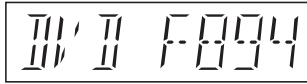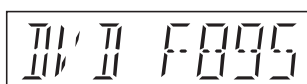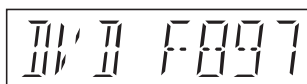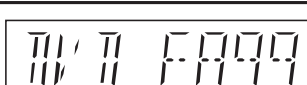6.4.2. DVD Module Error Code Table

Error Code	Diagnosis Contents	Description of error	Automatic FL Display	Remarks
U702	HDMI/DVI I2C communication error	The communication error of I2C when connecting it with HDMI/DVI. For instance, when EDID information to which information on the TV set side has been described cannot be read, it is generated.		Press [■STOP] on main unit for next error.
U703	HDMI/DVI attestation error	When attestation (HDCP) with the TV side fails when connecting it with HDMI/DVI, it is generated.		Press [■STOP] on main unit for next error.
U704	HDMI/DVI SRM Error	It is generated at the equipment to which the TV set is connected with HDMI/DVI.		Press [■STOP] on main unit for next error.
U705	HDMI/DVI SRM disk falsification check error	It is generated at the time of it is time when illegal the SRM data of the reproducing disk (verify error), when connecting it with HDMI/DVI.		Press [■STOP] on main unit for next error.
F740	HDMI device key	I2C error when writing HDMI Key device into transmitter.		Press [■STOP] on main unit for next error.
F893	FLASH ROM IC data falsification error	Firmware error, DV5.0 LSI IC (IC8651) error.		Press [■STOP] on main unit for next error.
F894	EEPROM IC abnormality error	When failing in the access to EEPROM IC located in the Main P.C.B. (IC8611).		Press [■STOP] on main unit for next error.
F895	Language area abnormal	Firmware version agreement check for factory preset setting failure prevention.		Press [■STOP] on main unit for next error.
F897	Initialization error	Incomplete initialization after writing of new firmware (Factory preset setting failure prevention)		Press [■STOP] on main unit for next error.
F899	The communication specification disagreement between micro-processor	Unsuitable combination of number of system com and panel com used. (Firmware)		Press [■STOP] on main unit for next error.

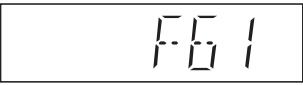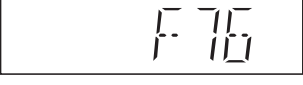6.4.3. Power Supply & Digital Amplifier Error Code Table

Error Code	Diagnosis Contents	Description of error	Automatic FL Display	Remarks
F61	The abnormalities in the D-Amp related problem (over-temperature/shutdown)	In normal operation, when DCDET2 goes to "L" (Low) (Not during POWER OFF condition), F61 appears on FL Display for 1 second and PCONT goes to "L" (Low). This is due to speaker output has DC voltage.		Press [■STOP] on main unit for next error.
F76	Abnormality in the output voltage of stabilized power supply	In normal operation when DCDET1 is detected "L" (Low) for two consecutive times, F76 is displayed on FL for 1 second and after that PCONT will be turned to "L" (Low). This is due to any of the DC voltages (+9V, +7V, -7V, +5V, +5.3V etc.) not available.		Press [■STOP] on main unit for next error.

6.5. Sales Demonstration Lock Function

This function prevents discs from being lost when the unit is used for sales demonstrations by disabling the disc eject function. "LOCKED" is displayed on the unit, and ordinary operation is disabled.

6.5.1. Setting

• Prohibiting removal of disc

1. Select the DVD/CD function.
2. At POWER ON condition, press and hold down the [■] button and the [POWER] button on the main unit for at least three seconds. (The message, "LOCKED" appears when the function is activated.)

Note:

OPEN/CLOSE ▲ button is invalid and the main unit displays "LOCKED" while the lock function mode is entered.

• Prohibiting operation of selector and disc

1. Select the DVD/CD function.
2. At POWER ON condition, press and hold down the [▶] button and the [POWER] button on the main unit for at least three seconds. (The message, "LOCKED" appears when the function is activated.)

Note:

The following buttons are invalid and the main unit displays "LOCKED" while the lock function mode is entered.

Main unit	▲OPEN/CLOSE, ■, ▶, SELECTOR
Remote controller unit	EXT-IN, REPEAT, RADIO, NUMERIC KEYS 0-9, ≥10, I◀◀, ▶▶I, ◀◀, ▶▶, ■, II, ▶ RETURN, FUNCTIONS, FL DISPLAY/SLEEP, MUTE

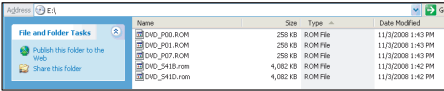
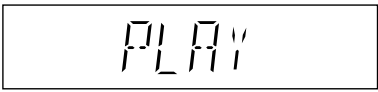
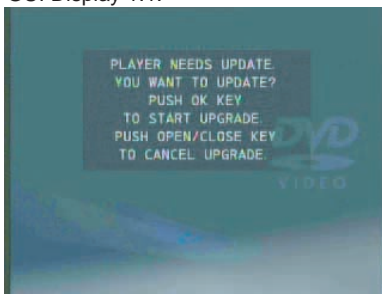
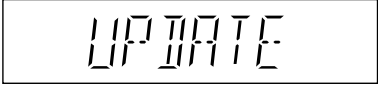
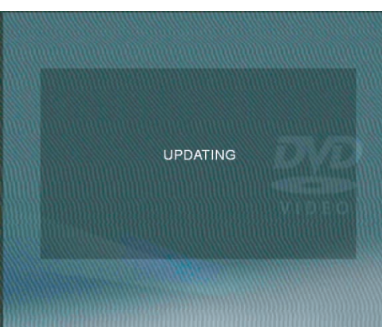

6.5.2. Cancellation

The lock can be cancelled by the same procedure as used in locking. ("UNLOCKED" is displayed on cancellation)






At normal Power ON/OFF the LOCKED condition is not cleared. However AC Power ON/OFF should clear LOCKED condition.

6.6. Firmware Version-Up Information




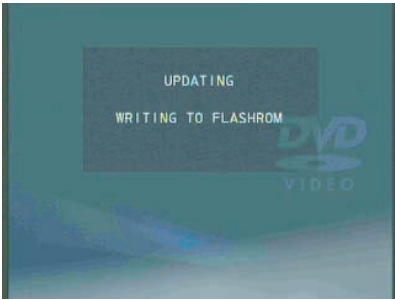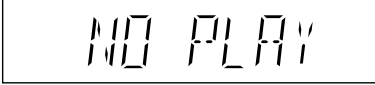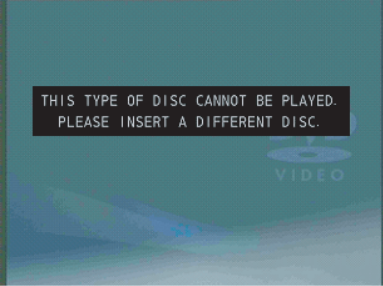
6.6.1. Process Flow (1/3)

Item		FL/ GUI Display	Remarks
Process	Description		
1	<p>Collect ROM Files (Copy files into CD-R/RW)</p> <p>There are 2 files: A) Syscon ROM file type: <ul style="list-style-type: none"> DVD_S52B.ROM (Sample) DVD_S52D.ROM (Sample) (supports chinese fonts OSD display) B) Opecon ROM file type: <ul style="list-style-type: none"> DVD_P10.ROM (Single tray) </p>	<p>Display 1:</p> 	<p>User can put both files into the same root directory. DVD MODEL will choose the right ROM files to update its firmware.</p>
2	<p>Load disc into unit (To update rate)</p> <p>Load the disc into the set (To be updated).</p> <ul style="list-style-type: none"> Press [OK] in remote controller to start updating process after the following signal appear: <ul style="list-style-type: none"> → <i>FL Display 1.1:</i> "PLAY" . → <i>GUI Display 1.1:</i> PLAYER NEED UPDATE. YOU WANT TO UPDATE? PUSH OK KEY TO START UPGRADE. PUSH OPEN/CLOSE KEY TO STAY UPGRADE. PUSH OPEN/CLOSE KEY TO CANCEL UPGRADE. During updating of software, the following signal appear: <ul style="list-style-type: none"> → <i>FL Display 1.2:</i> "UPDATE" . (For Opecon): <ul style="list-style-type: none"> → <i>GUI Display 1.2:</i> UPDATING (For Syscon): <ul style="list-style-type: none"> → <i>GUI Display 1.3.1:</i> UPDATING READING FROM DISC 	<p>FL Display 1.1:</p>  <p>GUI Display 1.1:</p>  <p>FL Display 1.2:</p>  <p>GUI Display 1.2:</p>  <p>GUI Display 1.3.1:</p> 	<p>All panel keys and remote controller keys, including [POWER] key, are invalid during CD Update.</p> <p>Caution: Make sure the powersupply during CD update. If the power supply cable is unplugged during update stage, CD update will fail. The DVD model can't work, and can't be recovered by CD update again.</p>

6.6.2. Process Flow (2/3)

Item		FL/ GUI Display	Remarks
Process	Description		
	<p>➔ <i>GUI Display 1.3.2:</i> UPDATING WRITING TO FLASHROM</p>	<p>GUI Display 1.3.2:</p> 	
2-1	<p>Check Correct ROM file type</p> <p>ROM files doesn't fit to the product type.</p> <ul style="list-style-type: none"> If the ROM files doesn't fit for the product type, then CD update "STOP" and display as below: <ul style="list-style-type: none"> ➔ <i>FL Display 2:</i> "NO PLAY" . ➔ <i>GUI Display 2 :</i> THIS TYPE OF DISC CANNOT BE PLAYER. PLEASE INSERT A DIFFERENT DISC. 	<p>FL Display 2:</p>  <p>GUI Display 2:</p> 	Update stop (Wrong ROM Type)
2-2	<p>Check ROM version type</p> <p>Update not Necessary</p> <ul style="list-style-type: none"> If the ROM files has the same (latest) version or an older version than the product: <ul style="list-style-type: none"> ➔ <i>FL Display 3:</i> "NO NEED" . ➔ <i>GUI Display 3:</i> THIS PLAYER DOES NOT REQUIRE THE UPDATE 	<p>FL Display 3:</p>  <p>GUI Display 3:</p> 	Update stop (product has the latest firmware)

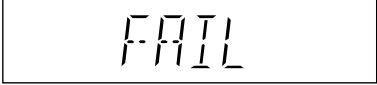6.6.3. Process Flow (3/3)

Item		FL/ GUI Display	Remarks	
Process	Description			
3	Update software (Opecon)	1. Update Failed <ul style="list-style-type: none"> If Opecon software update fail: <ul style="list-style-type: none"> → <i>FL Display 3</i>: "FAIL" . → <i>GUI Display 3</i>: "UPDATE FAIL" 	<p>FL Display 4:</p>  <p>GUI Display 4:</p> 	<p>Update stop. The theater set can't work, and can't be recovered by CD update again.</p>
		2. Update Completed <ul style="list-style-type: none"> If Opecon software update completes successfully: <ul style="list-style-type: none"> → <i>FL Display 3</i>: "GOOD" . → <i>GUI Display 3</i>: COMPLETED PLEASE EJECT THE DISC → Open the tray and take out the CD, the update procedure has been finished successfully. → Power off, then remove AC Cord. 	<p>FL Display 5:</p>  <p>GUI Display 5:</p> 	

7 Troubleshooting Guide

7.1. Troubleshooting Guide for F61 and/or F76

This section illustrates the checking procedures when upon detecting the error of "F61" and/or "F76" after power up of the unit. It is for purpose of troubleshooting and checking in SMPS P.C.B..

Symptom	Checking items	Possible Fault(s)	Remarks
Set cannot ON	1 AC Cord	1 Faulty AC Cord,Loose connection	Refer to SMPS P.C.B. Fig. 1
	2 AC Inlet P5701	2 P5701 soldier crack,dry joint,etc.	
	3 Fuse F1	3 F1 fuse open	
	4 Photocoupler PC5702,PC5799	4 PC5702/PC5799 sildier crack,dry joint ,short circuit,open circuit,etc	
	5 Switching IC IC5701	5 Faulty IC5701	
	6 Switching IC IC5799	6 Faulty IC5799	
Set can ON then F76	1 Transformer T5701	1a Short circuit between Pin 14 and pin 16	
		1b Short circuit between Pin 15 and pin 16	
		1c Short circuit between Pin 16 and 17	
	2 Power P.C.B.	2a Check connection between Power P.C.B (CN2916 & CN2917) and SMPS P.C.B (CN5802 & CN5803)	
		2b L2902 Open (No input to IC2901)	
		2c Faulty IC2901 (No output voltage at pin 10 & 11)	
		2d Faulty Q2902 & Q2903 (Regulator)	
		2e L2907 open (No DC +12v)	
		2f L2908 op[en (No DC+5v)	
	3	3 Check cable connection between main (CN2004) and SMPS	
	4	4a Faulty IC2302	
		4b LB2301 Open	
	5 Photocoupler PC5720	5 PC5720 solder crack dry joint,short circuit,open circuit,etc	
Set can ON working normally for some time then F76	1 Rectifier D5802	1a Improper contact between D5802 to heatsink	
		1b Set trigger tempriture protection	

7.2. Part Location

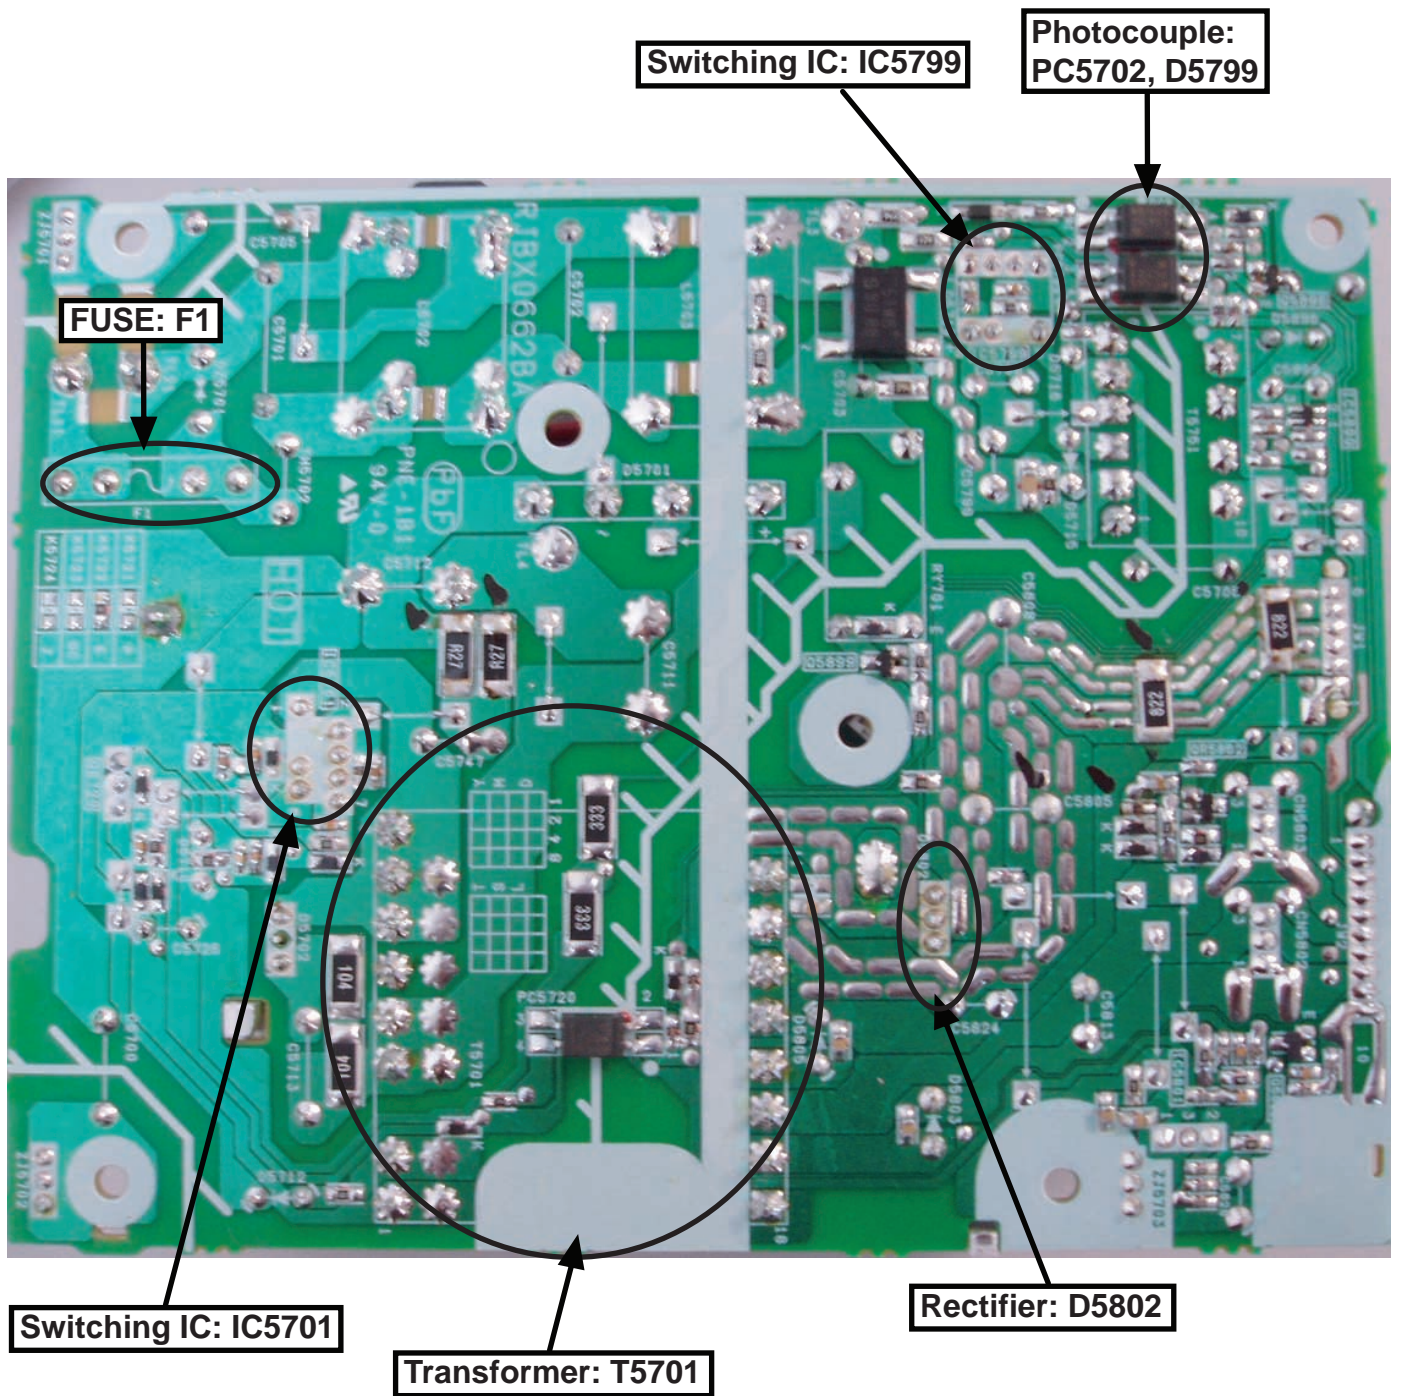


Figure 1. SMPS P.C.B.

7.3. Basic Troubleshooting Guide for Traverse Unit (Main P.C.B.)

Problems	Checking Points	Checking components
1) Distorted picture or abnormal sound is heard during the initialization	a) Check SDRAM address, data bus, CLK and other control signals waveform	IC8051
	b) Check video signals (Y,C)	LB8315, R8321, R8323, (Y) LB8316, R8325, R8327 (C)
	c) Check audio DAC circuitry * Compare the above with OK condition DVD Module P.C.B	IC8001 (Pin 62, 63, 64) R8402 *Check for solder short and/or component missing/damaged
2) No TOC/Long TOC	a) Check motor driver circuitry (+5V)	IC8251 Pin 8, 21
	b) Check laser drive circuitry (Voltages & current)	Q8551, Q8552 (For DVD), Q8561, Q8562 (For CD)
	c) Check LSI IC connection to motor drive circuitry * Compare the above with OK condition Main P.C.B.	IC8001 Pin 66, 67 IC8251 Pin 15 to 16 * Check for solder short and/or component missing/damaged
3) Disc not spinning 4) Traverse not moving 5) Traverse and spindle abnormal movement	a) Check connection from Main to Traverse unit	FP8251
	b) Check motor driver circuitry on the voltages and control signals * Compare the above with OK condition Main P.C.B.	IC8251 * Check for solder short and/or component damaged
6) Cannot read the disc but spindle motor is spinning - Cannot read CD/DVD	a) Check laser drive circuitry (voltages and current) - Check CD Laser Drive - Check DVD Laser Drive * Check voltages and LD current and compare with OK condition Main P.C.B.	Q8551, Q8552, LB8551 (For DVD Laser Drive current) Q8561, Q8562, LB8561 (For CD Laser Drive current)
7) Block Noise during play	a) Check SDRAM address and data bus signal	IC8051
8) Jitter out of specification	a) Check LD current b) Check OPU (Change to other unit and confirmed operating condition)	OPU Unit (Traverse unit), FPC connection (FP8531 & FP8251)

7.4. Basic Troubleshooting Guide for HDMI AV output

Problems	Checking Points	Checking components
1) TV does not have any display. Set FL display shows U702/U703	1) Check setting of the set in Setup Menu whether the HDMI Video output is turned ON	* This year HDMI always ON. No need check Setup Menu. If no resolution selection GUI, then only check SETUP.
	2) +5V Supply to the TV	IC3952 (Pin 4)
	3) HDMI Connector Solderability condition	P3901
	4) HDMI Output TDMS signal lines (IC3901) <ul style="list-style-type: none"> - Data (TX0P/M => 14, 16) - Data (TX1P/M => 18, 20) - Data (TX2P/M => Pin 22, 24) - Clock (TXCP/TXCM => Pin 10, 12) 	L3905 L3904 L3903 L3906
	5) HDMI Transmitter communication lines to TV <ul style="list-style-type: none"> - Data, SDA (Pin 120, IC3901) - Clock, SCL (Pin 121, IC3901) 	LB3905, R3905, Q3902, R3904 LB3904, R3907, Q3903, R3906
	6) HDMI Transmitter communication from LSI (IC8001) (I2C_SCL/I2C_SDA signals)	RX3901
	7) Local Port Slave Address setting resistor at Pin 99 of HDMI Transmitter LSI IC (IC3901) for LPSA signal	R3921
	8) HDMI Transmitter LSI IC (IC3901) +3.3V Supply	LB3901, LB3902, IC3901 (Pin 9, 13, 17, 21, 25, 124)
	9) HDMI Transmitter LSI IC (IC3901) +1.2V Supply	IC3901 (Pin 5, 26, 42, 47, 55, 75, 85, 102, 109, 116, 123), LB3908, IC8151 (Pin 4), LB8001, IC8001 (Pin 20, 44, 83, 158, 187, 211)
	10) HDMI Up-Con +3.3V Supply	LB3901
	11) HDMI Pixel Clock Output from Up-Con to HDMI Transmitter (VCLK)	LB8901
	12) Up-Con IC I2C Data and Clock Line	RX3901

Problems	Checking Points	Checking components
1) TV does not have any display. Set FL display shows U702/U703	13) Hot-Plug Signal	LB3906, R3902, R3903, Q3901, D3901
	14) TDMS Output swing amplitude control resistor	R3901
	15) Host Interface External Input Clock from LSI (IC8001) to Up-Con IC (IC3901) - OSC27M	LB8702
	16) Video Data Lines from LSI (IC8001) to Up-Con (IC3901)	RX3707, RX3708, IC3901 (Pin 92 to 95, Pin 87 to 90)
2) When switching the video output mode from 480p to 720p/1080i, TV display becomes blank	1) Supply for Up-Con (IC3901) - Pin 9,124 2) GND for Up-Con - Pin 7,125 3) Check for capacitor short to GND	LB3902 C3902, C3928, C3925
3) Color Problem. TV Screen is White/Blue/Purple	1) Check digital video data line from LSI(IC8001) to Up-Converter (IC3901), VOUT0-VOUT7.	RX3707, RX3708
4) HDMI got no audio output	1) Audio data lines 2) Check setting of the set in Setup Menu whether the HDMI Audio output is turned On	R8402, RX8402 * Check for solder short and/or component missing/damaged as well as signal condition.

8 Disassembly and Assembly Instructions

Caution Note:

- This section describes the disassembly and/or assembly procedures for all major printed circuit boards & main components for the unit. (You may refer to the section of “Main components and P.C.B Locations” as described in the service manual)
- Before carrying out the disassembly process, please ensure all the safety precautions & procedures are followed.
- During the disassembly and/or assembly process, please handle with care as there may be chassis components with sharp edges.
- Avoid touching heatsinks due to its high temperature after prolong use. (See caution as described below)

**CAUTION: HOT!!
PLEASE DO NOT
TOUCH THE HEAT SINK**

- During disassembly and assembly, please ensure proper service tools, equipments or jigs is being used.
- During replacement of component parts, please refer to the section of “Replacement Parts List” as described in the service manual.
- Select items from the following indexes when disassembly or replacement are required.
 - Disassembly of Top Cabinet
 - Disassembly of AC Inlet P.C.B.
 - Disassembly of Voltage Selector P.C.B.
 - Disassembly of Rear Panel
 - Disassembly of DVD Mechanism Unit (DLS6E)
 - Disassembly of Front Panel Block Assembly
 - Disassembly of FL P.C.B.
 - Disassembly of Power Button P.C.B.
 - Replacement of Cradle Lid
 - Disassembly of iPod Cradle Assembly
 - Disassembly of iPod/iPhone P.C.B.
 - Disassembly of USB P.C.B.
 - Disassembly of Mic P.C.B.
 - Replacement of DVD Lid Unit
 - Disassembly of Front Shield Unit
 - Disassembly of Main P.C.B.
 - Disassembly of D-Amp P.C.B.
 - Replacement of Digital Amplifier IC (IC5100/IC5200)
 - Disassembly of Power P.C.B.
 - Disassembly of SMPS P.C.B.
 - Replacement of Switching Regulator IC (IC5701)
 - Replacement of Rectifier Diode (D5702)
 - Replacement of Regulator Diode (D5802)
 - Replacement of Regulator Diode (D5803)
 - Disassembly of Fan


CAUTION NOTE:

Please use original screw and at correct locations.


Below shown is part no. of different screw types used:

- | | |
|-----------------------|----------------------|
| a :RHD3007-K2J | e :VHD1224-1 |
| b :RHD30119-S | f :RHDX301003 |
| c :RHDV30006 | g :RHDX261002 |
| d :RHD26046 | |

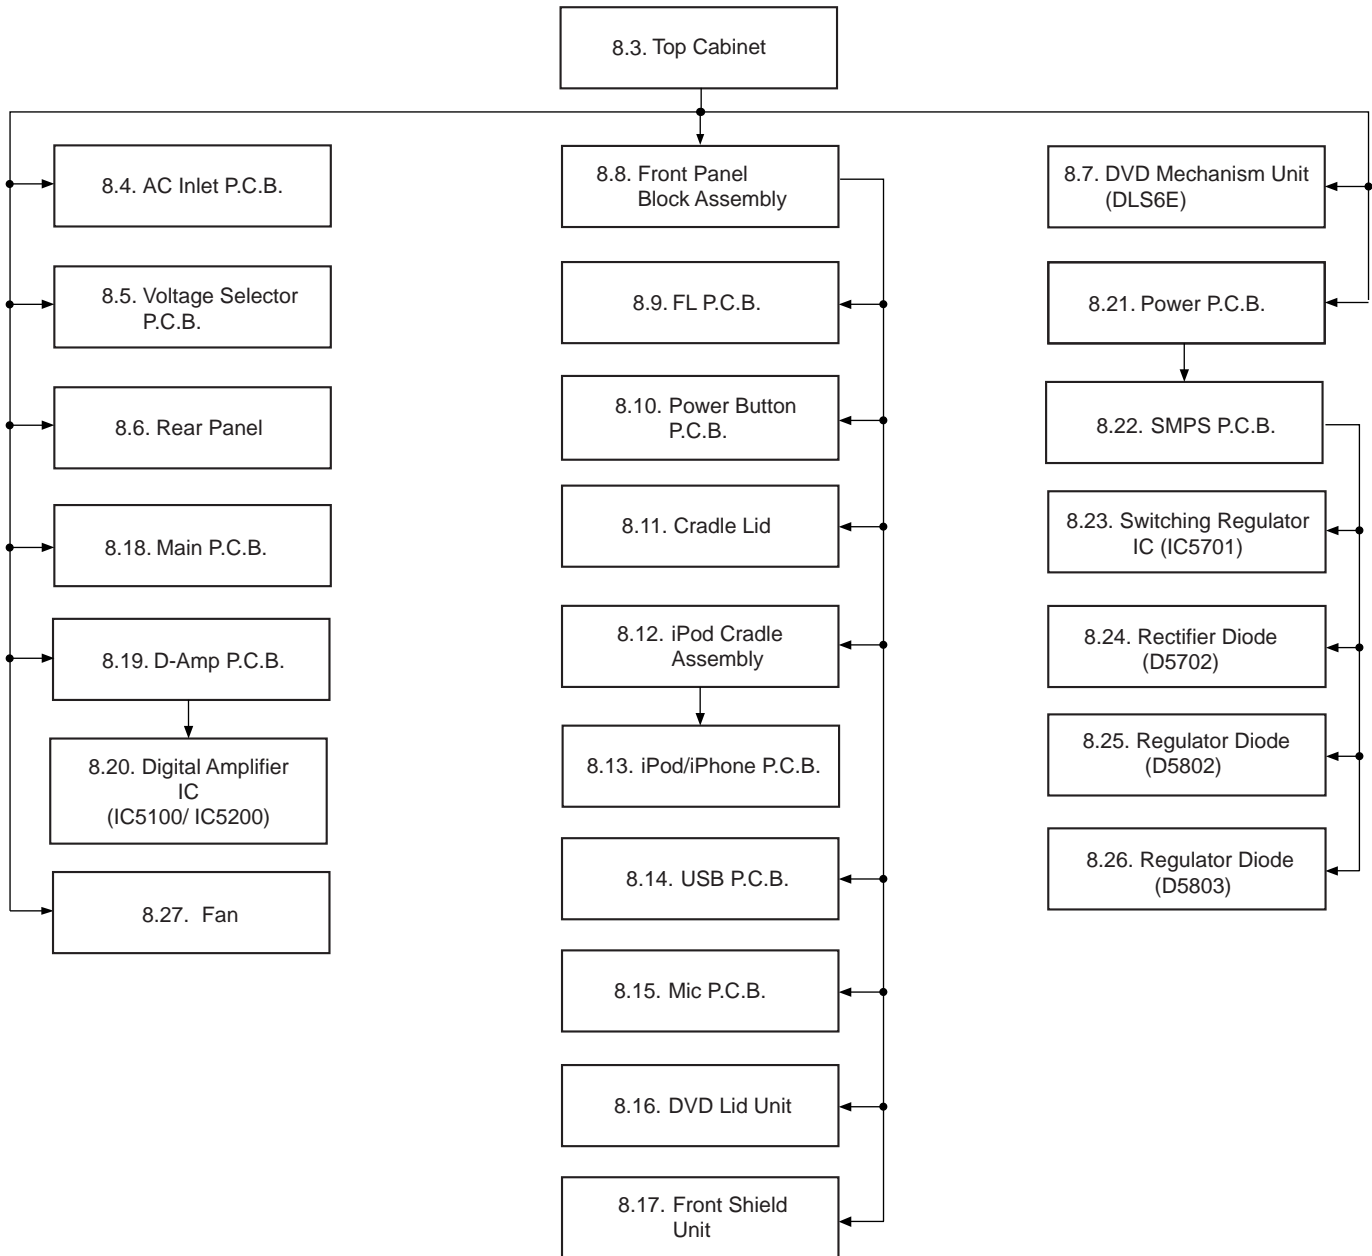8.1. Disassembly Flow Chart




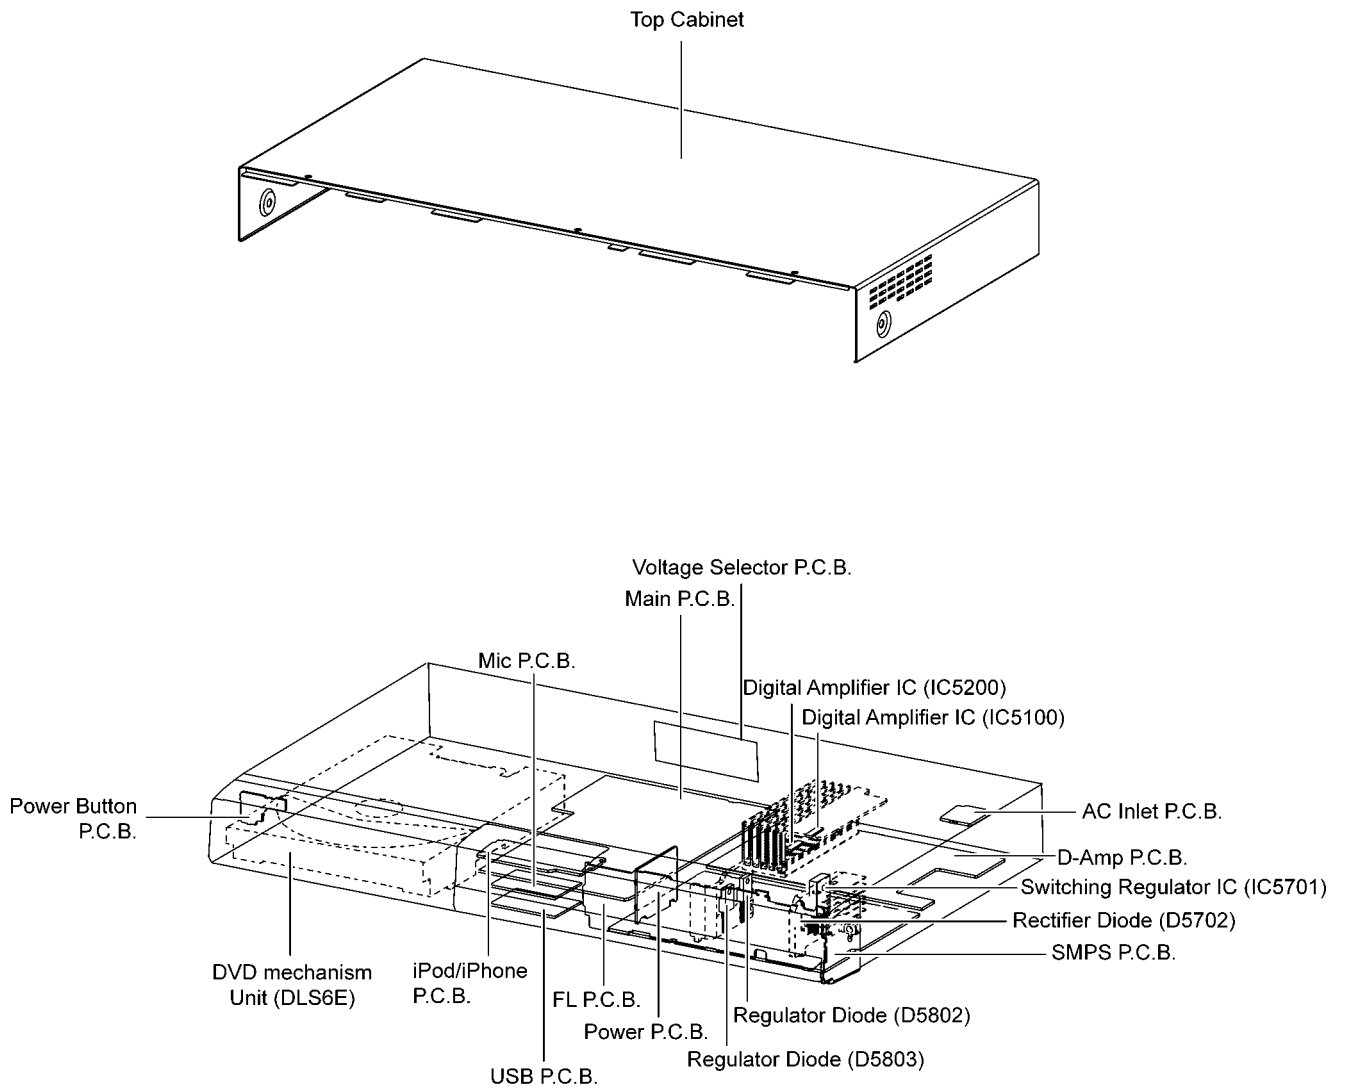8.2. Main Components and P.C.B. Locations




8.3. Disassembly of Top Cabinet

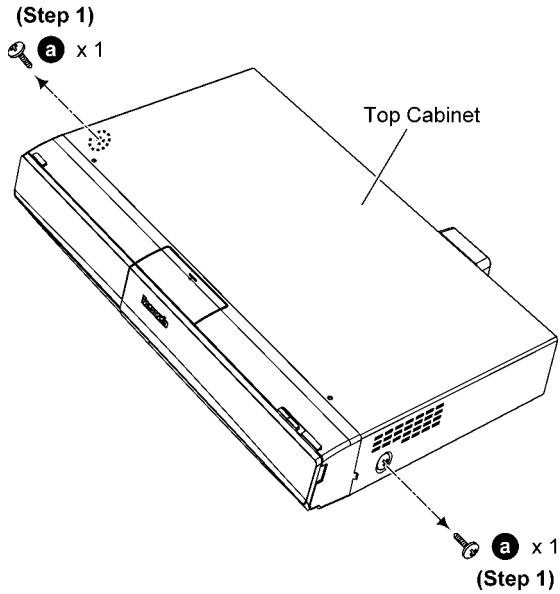
Step 1 Remove 2 screws.



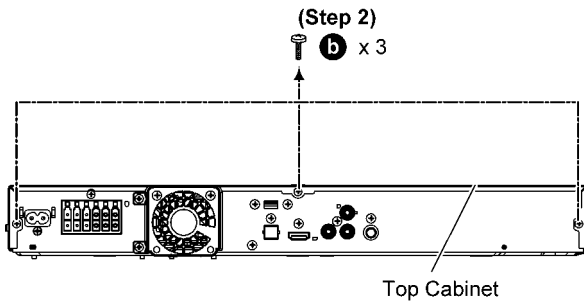
Step 2 Remove 3 screws.



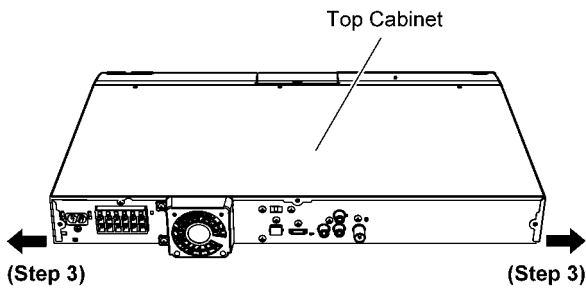Step 3 Slightly pull both sides of Top Cabinet outwards.




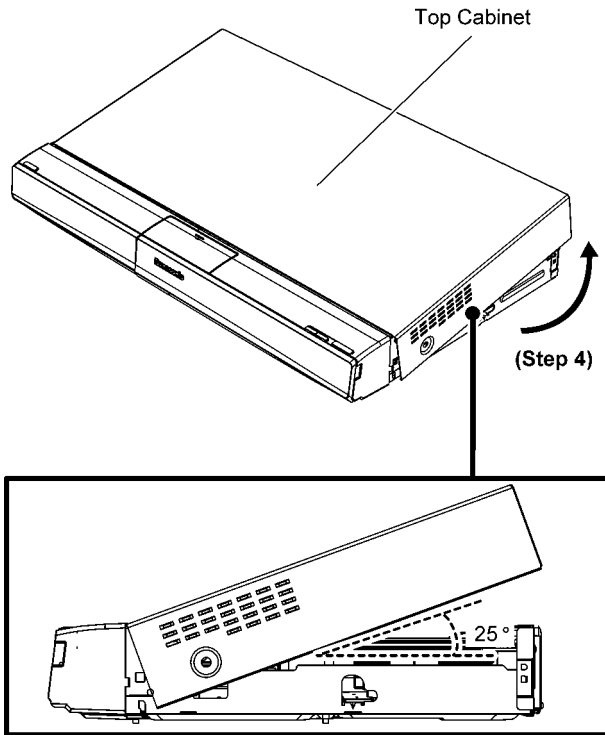Step 4 Lift both sides of Top Cabinet in an outward direction about 25°.




Step 5 Press down the catches one by one.

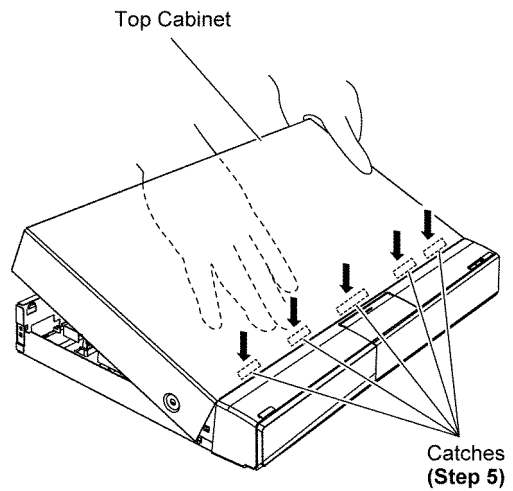
Caution: To avoid shocked by electricity & injured by high temperature. DO NOT TOUCH electrical components when insert hand under the Top Cabinet.



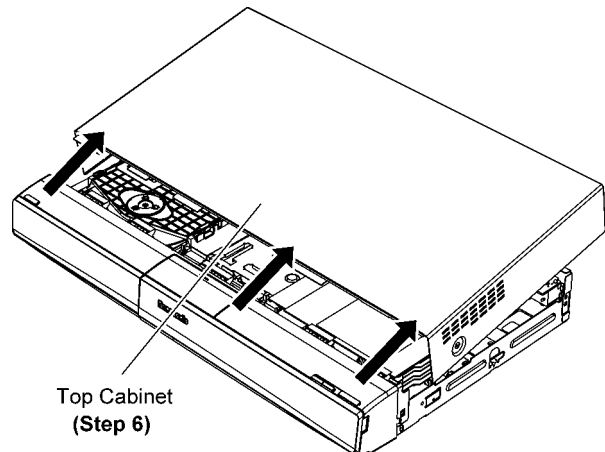
Step 6 Remove Top Cabinet as arrow shown.



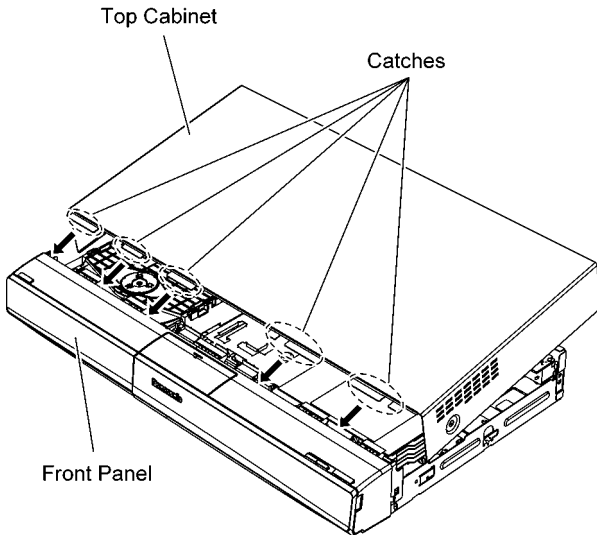Caution: During assembling, ensure that catches of Top Cabinet is insert into Front Panel properly.



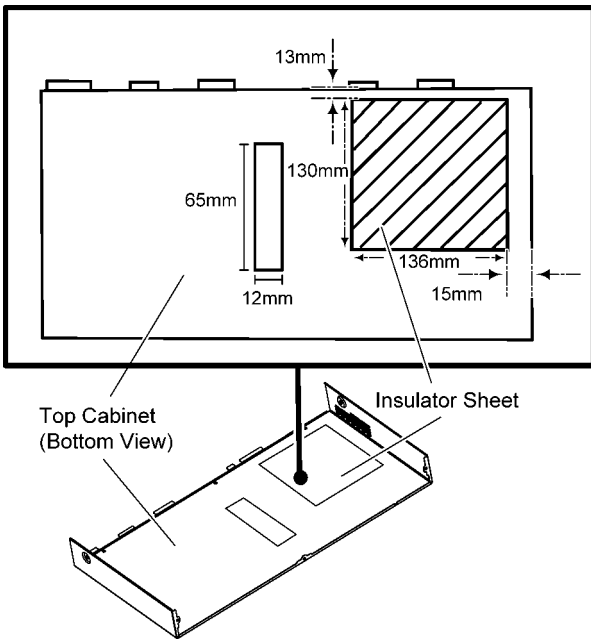
Caution: Replace the insulator sheet if broken & ensure it is pasted properly on the Top Cabinet.



8.4. Disassembly of AC Inlet P.C.B.

• Refer to “Disassembly of Top Cabinet”

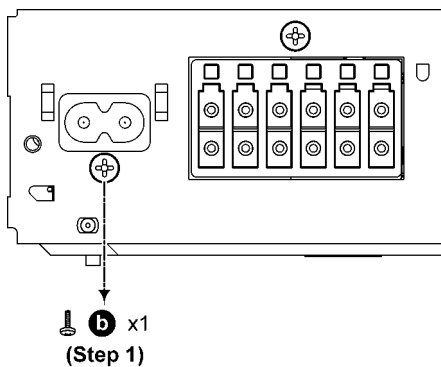Step 1 Remove 1 screw.




Step 2 Twist the Wire Holder.

Step 3 Release Red (TL10) & Black (TL20) wires from the Wire Holder.


Caution: During assembling, ensure that Red (TL10) & Black (TL20) wires are dressed into Wire Holder.

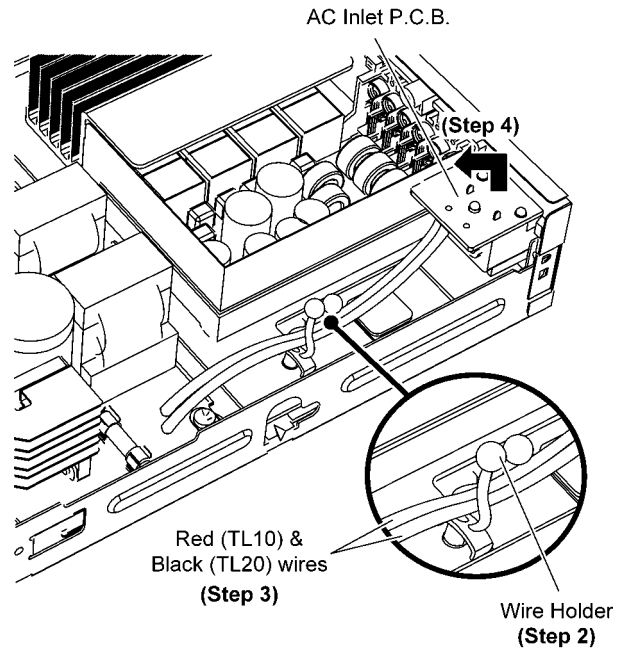Step 4 Lift up AC Inlet P.C.B. as arrow shown.



Step 5 Desolder Red (TL10) & Black (TL20) Wires on AC Inlet P.C.B..

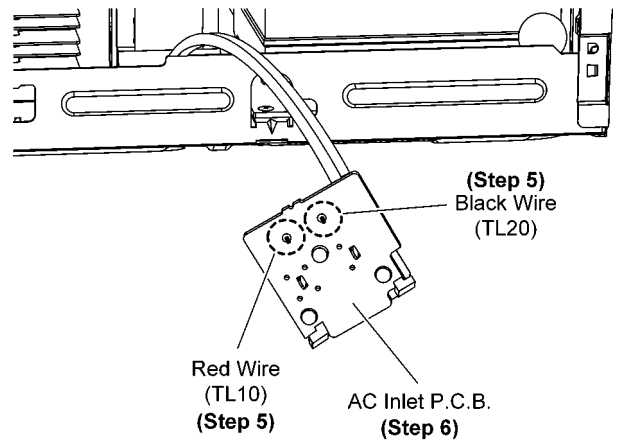
Step 6 Remove AC Inlet P.C.B..




8.5. Disassembly of Voltage Selector P.C.B.

• Refer to “Disassembly of Top Cabinet.”

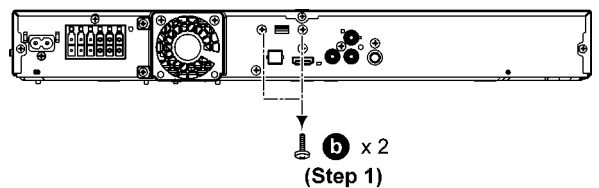Step 1 Remove 2 screws.




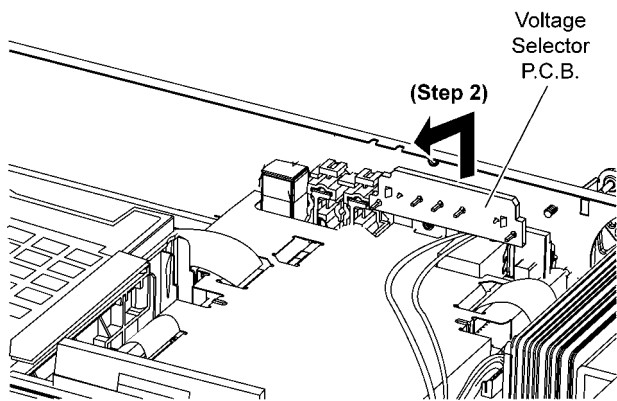Step 2 Lift up Voltage Selector P.C.B. as arrow shown.



Step 3 Desolder White Wire (TL3) and Blue Wire (TL4) at solder side of Voltage Selector P.C.B..

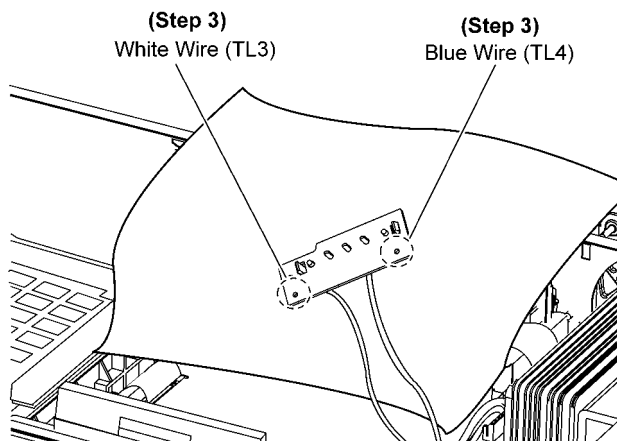Step 4 Remove Voltage Selector P.C.B..




8.6. Disassembly of Rear Panel


- Refer to "Disassembly of Top Cabinet"
- Refer to "Disassembly of Voltage Selector P.C.B.."

Step 1 Twist the Wire Clamper.

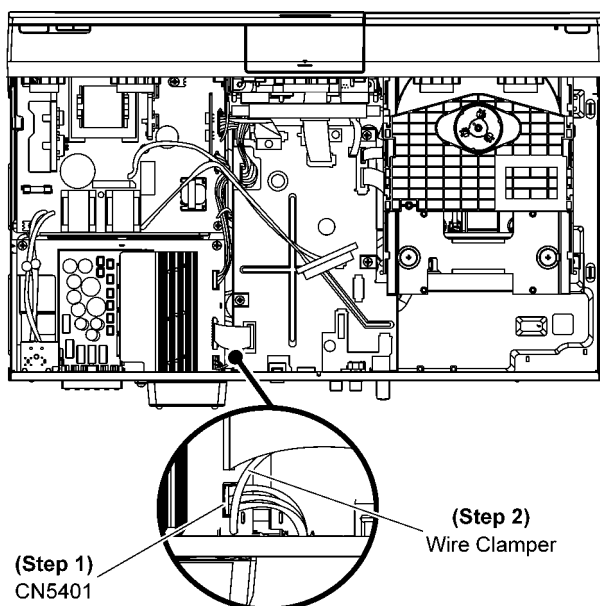
Step 2 Detach the fan unit connector (CN5401) on D-Amp P.C.B..



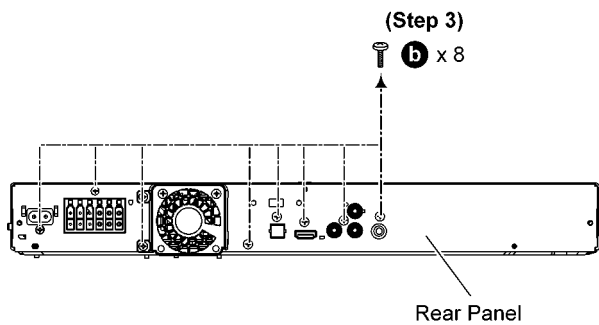
Step 3 Remove 8 screws.



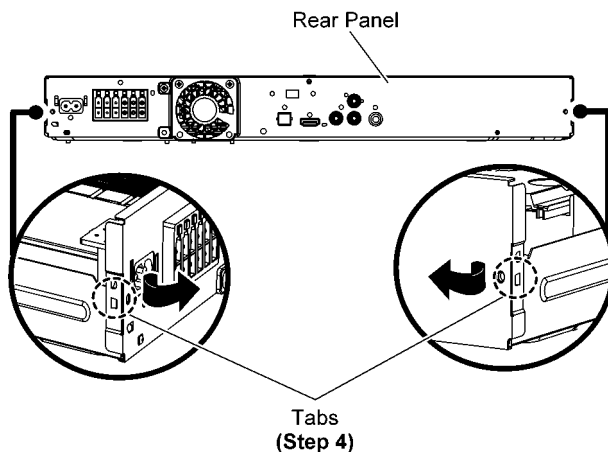Step 4 Release the tabs at both side of the Rear Panel in the direction of arrow.



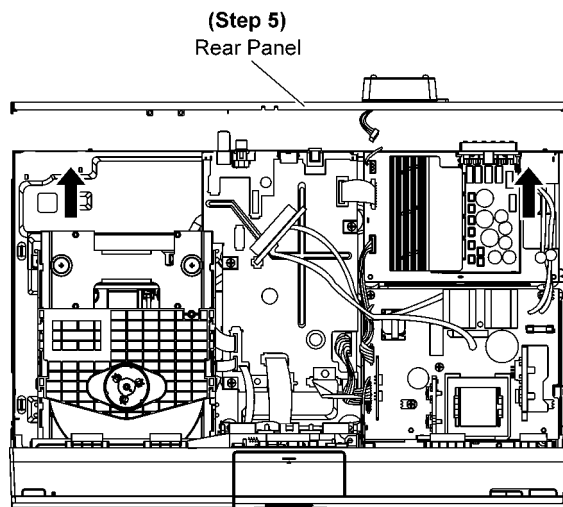Step 5 Remove Rear Panel.




8.7. Disassembly of DVD Mechanism Unit (DLS6E)

- Refer to "Disassembly of Top Cabinet"


Step 1 Detach 7P FFC at the connector (FP8251) on Main P.C.B..

Step 2 Detach 24P PFC at the connector (FP8531) on Main P.C.B..

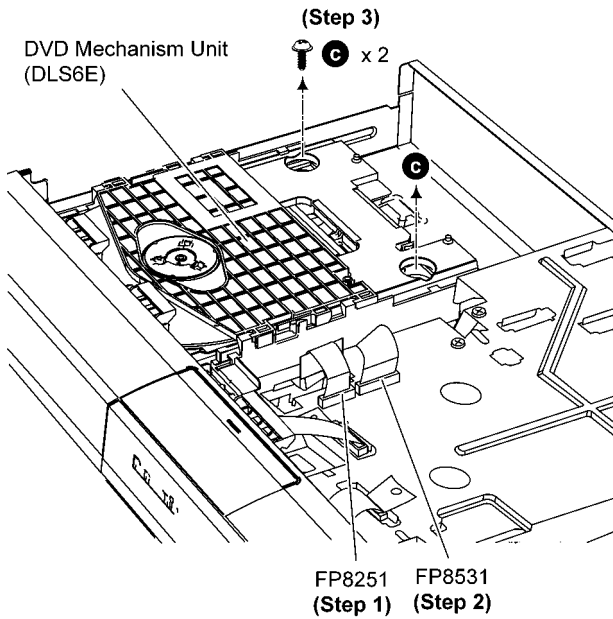
Step 3 Remove 2 screws.



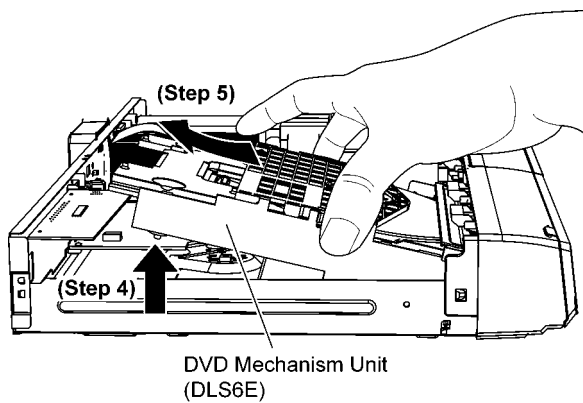Step 4 Slightly lift up the DVD Mechanism Unit (DLS6E).
Step 5 Remove the DVD Mechanism Unit (DLS6E).



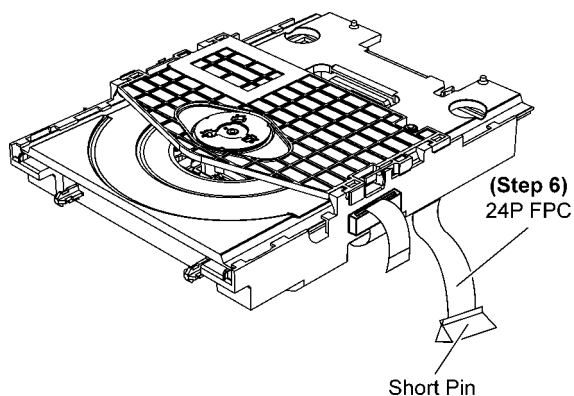
Step 6 Attach a short pin to the 24P FPC of the DVD Mechanism Unit (DLS6E).



• **Assembly of DVD Mechanism Unit (DLS6E)**


Step 1 Install the DVD Mechanism Unit (DLS6E).

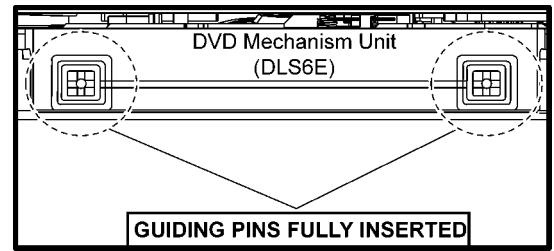Caution: Ensure that two guiding pins of DVD Mechanism Unit (DLS6E) are fully inserted into two slots of Front Panel.



Step 2 Place the DVD Mechanism Unit (DLS6E) onto the Bottom Chassis.

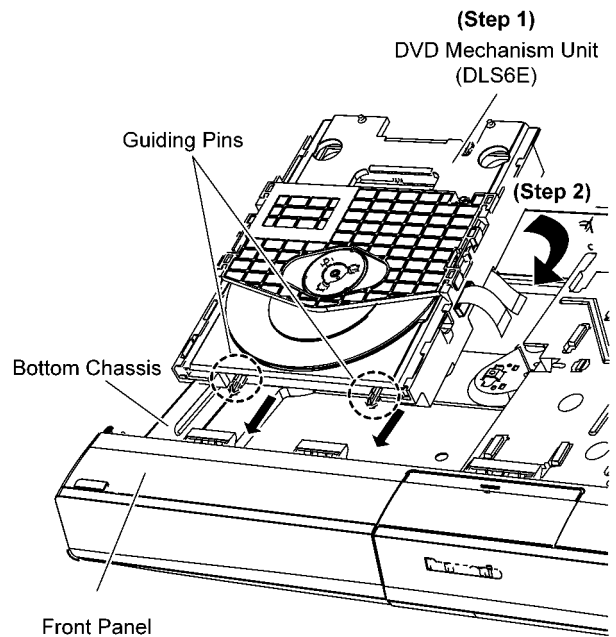Caution: During assembling, ensure that DVD Mechanism Unit (DLS6E) is properly located and fully seated on Bottom Chassis before screwing.




Step 3 Fix 2 screws.


Step 4 Attach 7P FFC at the connector (FP8251) on Main P.C.B..

Step 5 Attach 24P FFC at the connector (FP8531) on Main P.C.B..

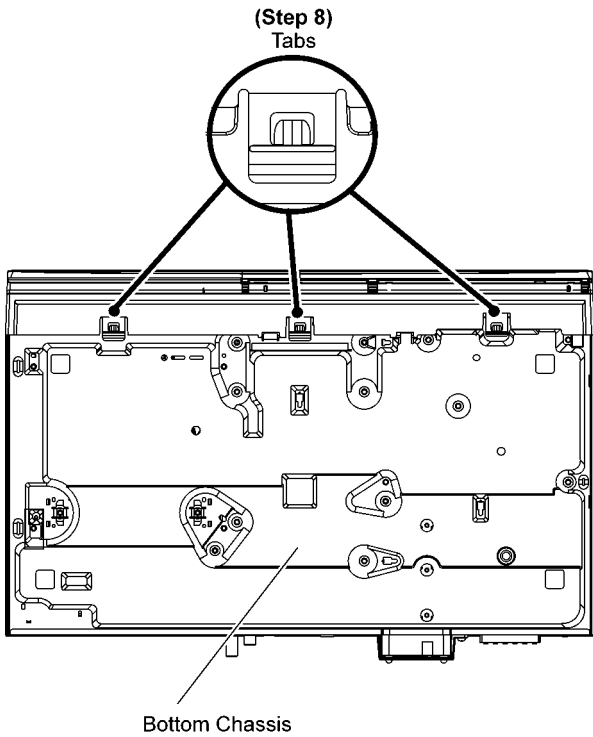Caution: Do not exert strong force when releasing the tabs.



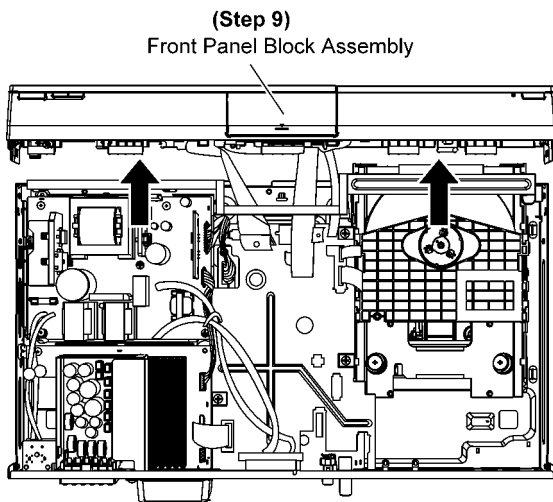
Step 9 Detach the Front Panel Block Assembly.




8.9. Disassembly of FL P.C.B.

• Refer to “Disassembly of Front Panel Block Assembly”

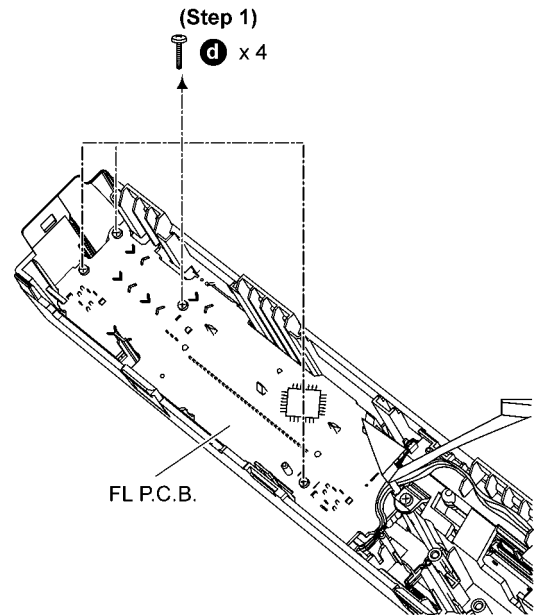
Step 1 Remove 4 screws.



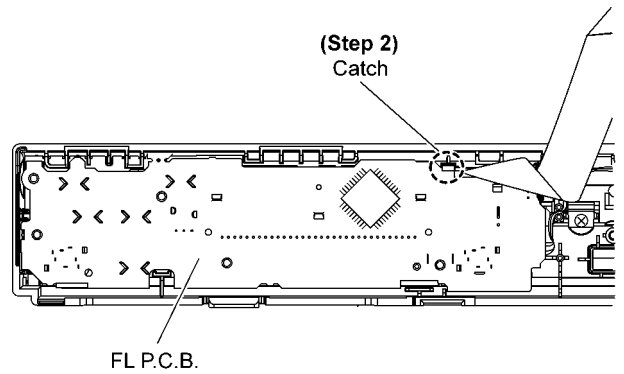Step 2 Release 1 catch.




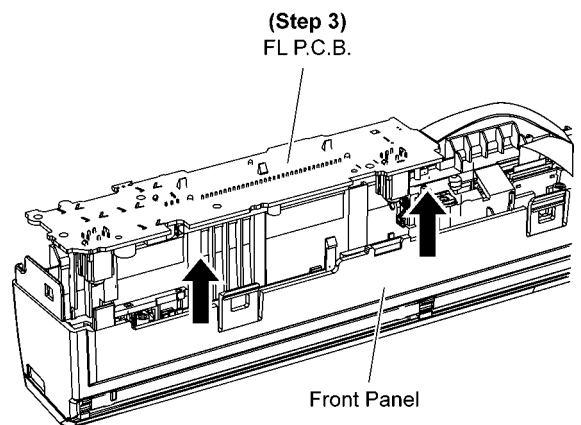Step 3 Lift up FL P.C.B..




Step 4 Desolder 4P cable at the connector (CN6001) on FL P.C.B..

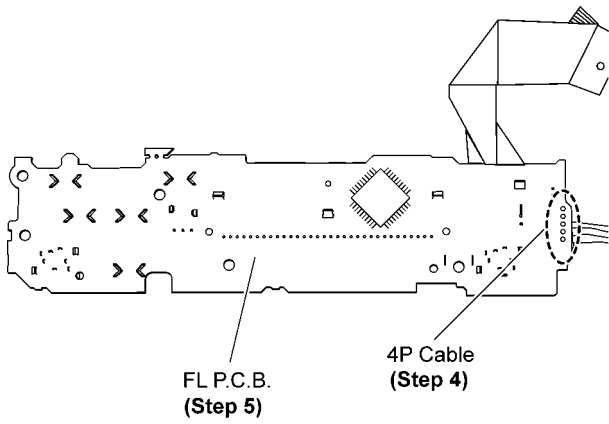Step 5 Remove FL P.C.B..




• **Assembly of FL P.C.B.**

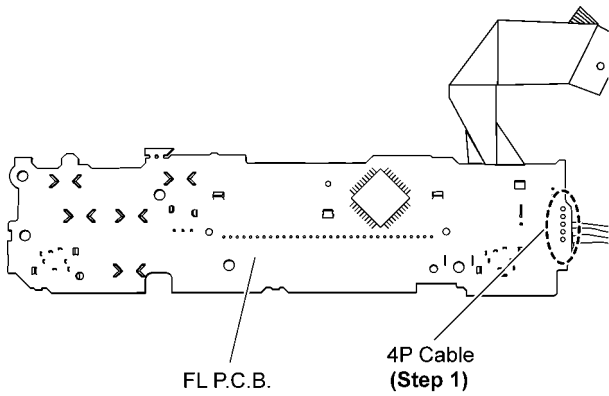Step 1 Solder 4P cable to the connector (CN6001) on FL P.C.B..




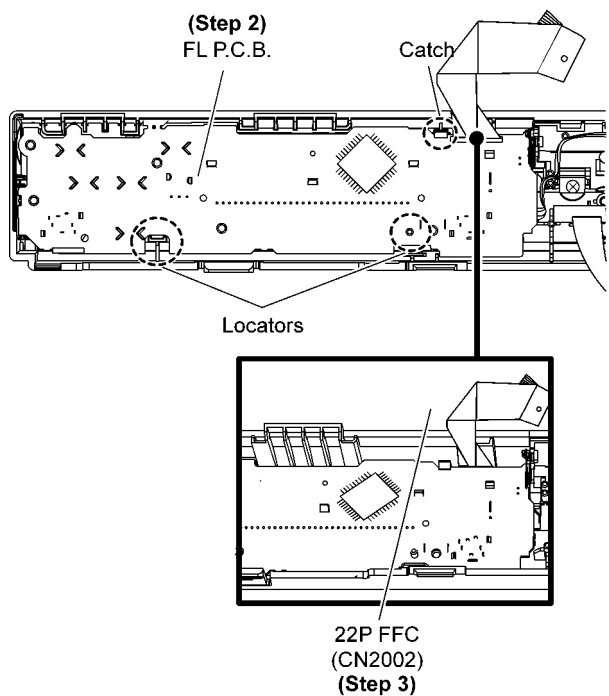Step 2 Place FL P.C.B. onto Front Panel.
Caution: Ensure that it is properly located & fully caught.
Step 3 Dress 22P FFC (CN2002) on Main P.C.B..




Step 4 Dress 4P cable into Front Panel's ribs & USB P.C.B. according to diagram shown.

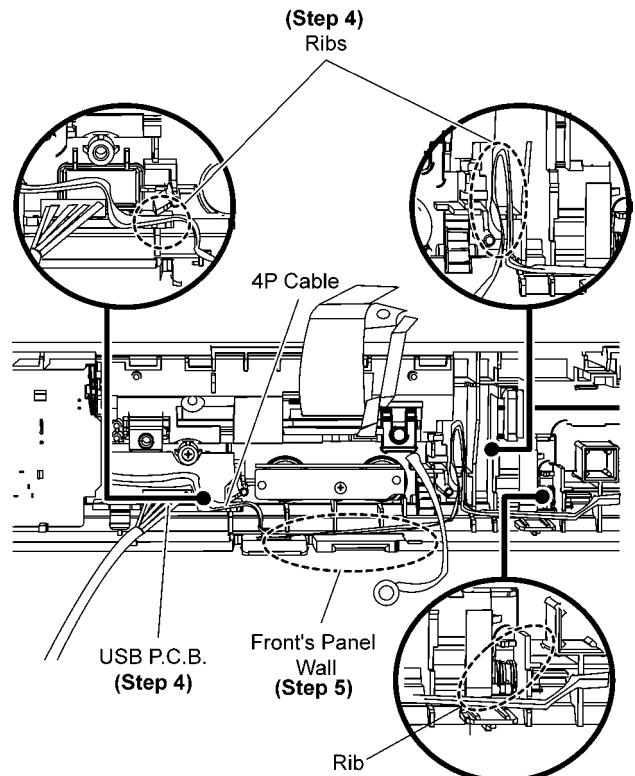Step 5 Dress 4P cable flatly against the wall of Front Panel.



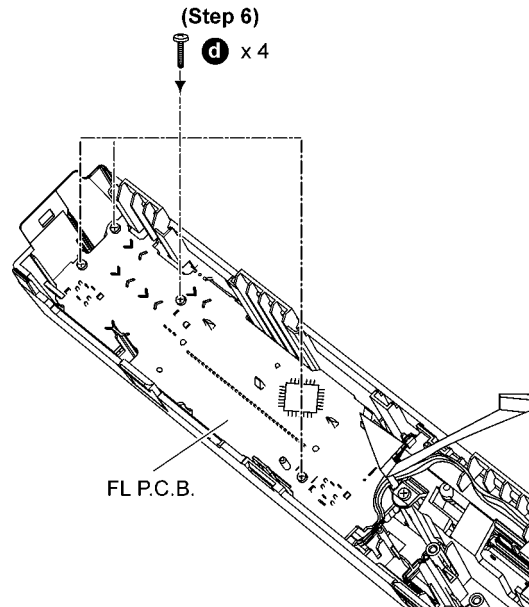
Step 6 Fix 4 screws to FL P.C.B..




8.10. Disassembly of Power Button P.C.B.

• Refer to "Disassembly of Front Panel Block Assembly"

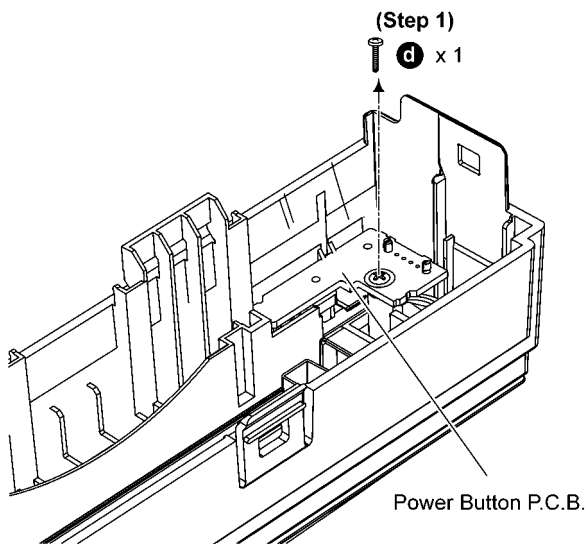Step 1 Remove 1 screw.




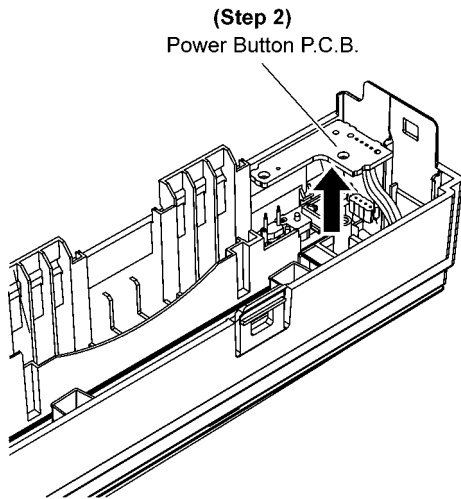Step 2 Lift up Power Button P.C.B..




Step 3 Desolder 4P Cable (H6803) on Power Button P.C.B..

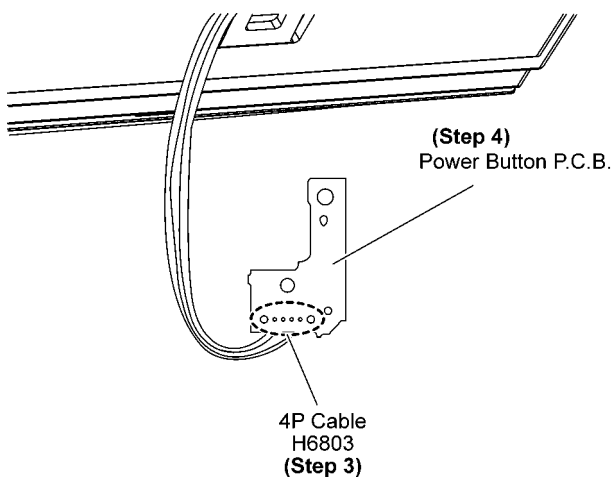Step 4 Remove Power Button P.C.B..




• **Assembly of Power Button P.C.B.**

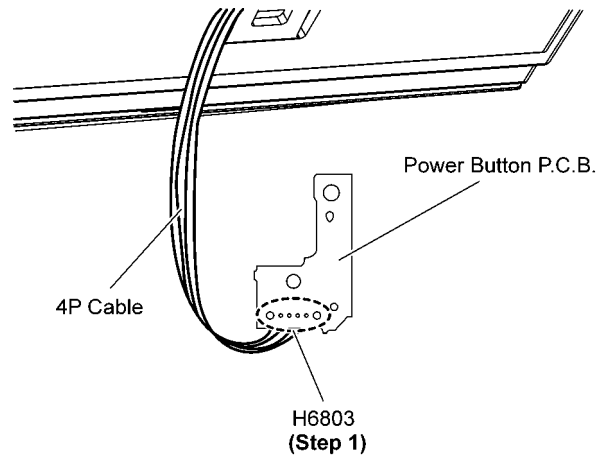
Step 1 Solder 4P cable at (H6803) onto Power Button P.C.B..






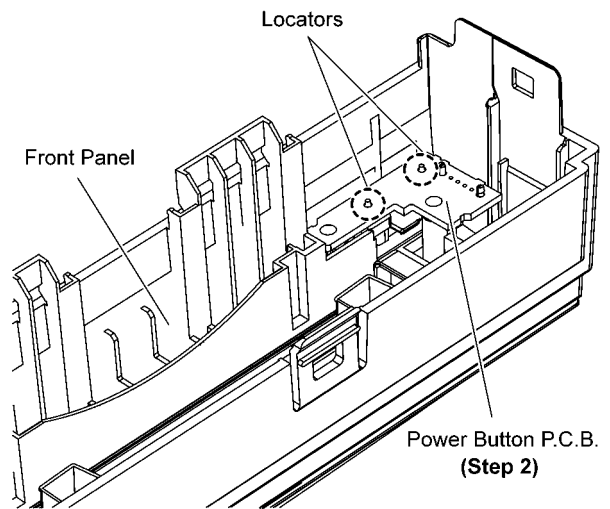
Step 2 Fix the Power Button P.C.B. onto the Front Panel.
Caution: Ensure that it is properly located & fully caught.



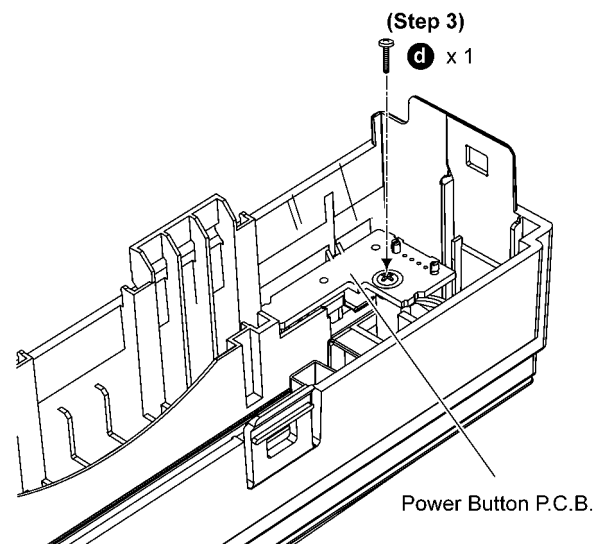
Step 3 Fix 1 screw onto Power Button P.C.B..



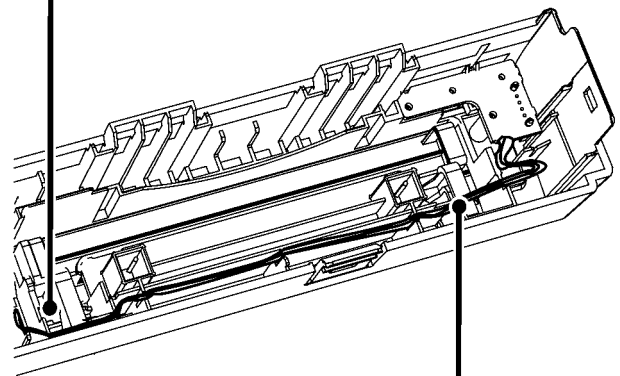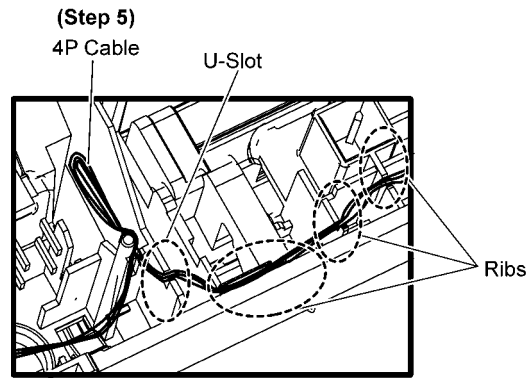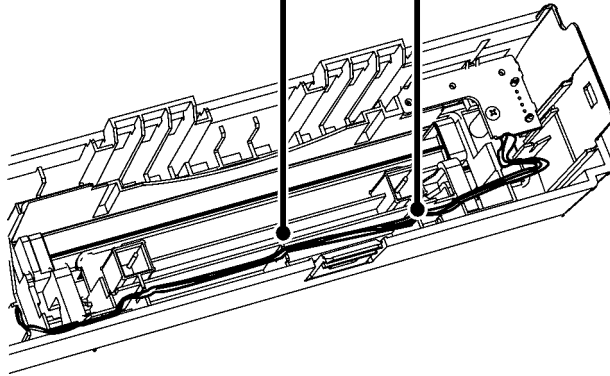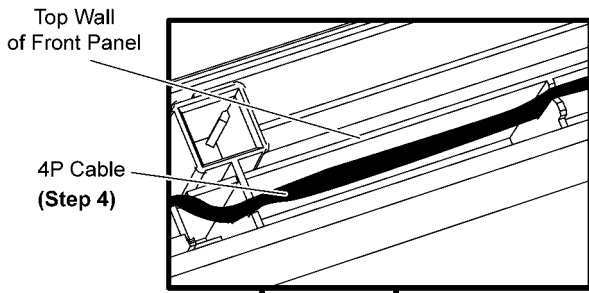Step 4 Dress 4P cable flatly against the Top Wall of Front Panel.



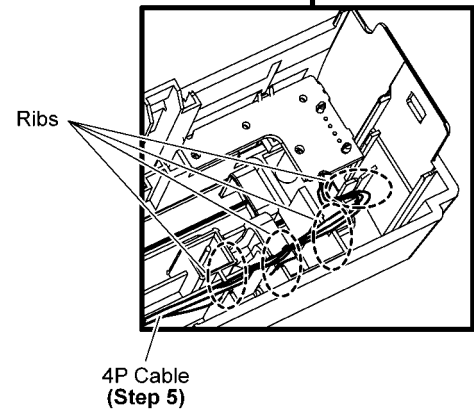Step 5 Dress 4P cable into Front Panel's U-Slot & Ribs according to diagram shown.




8.11. Replacement of Cradle Lid


- Refer to "Disassembly of Front Panel Block Assembly"

8.11.1. Disassembly of Cradle Lid

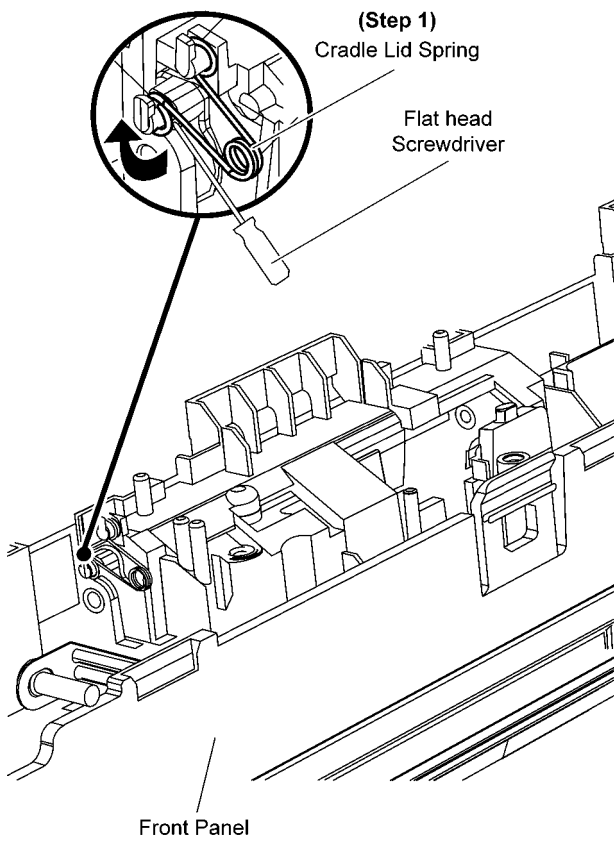
Step 1 Release the Cradle Lid Spring by using a Flat head Screwdriver in the direction of arrow.



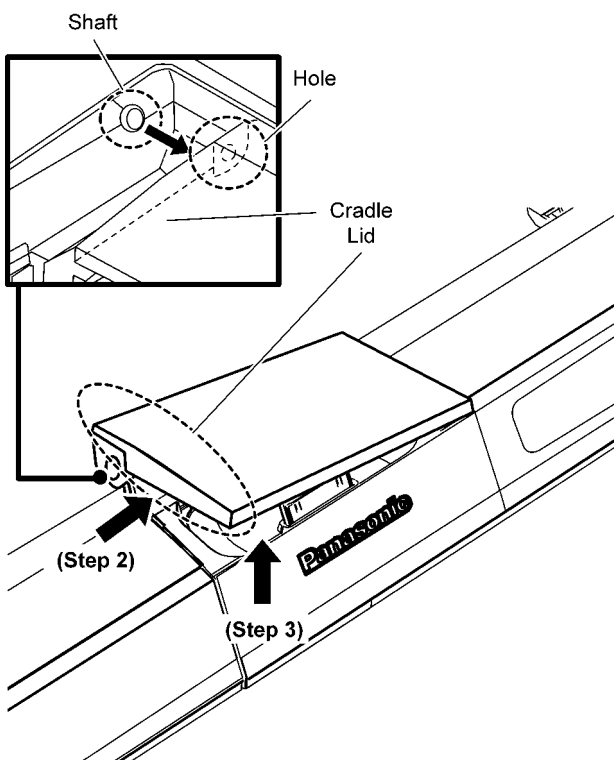Step 2 Slightly push the Cradle Lid inwards.
Step 3 Slightly lift up the Cradle Lid.




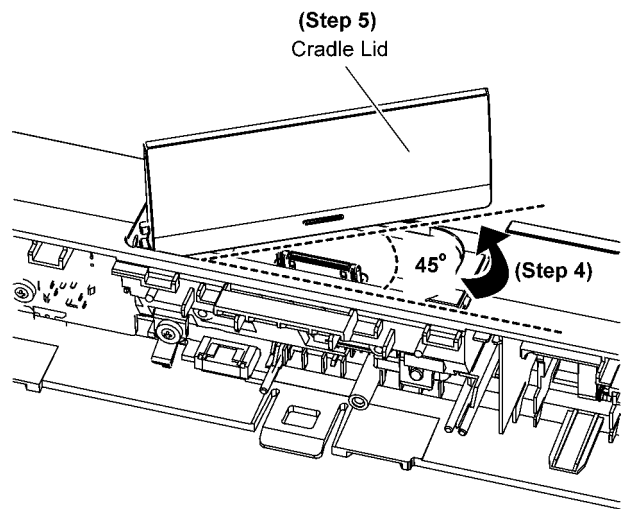Step 4 Rotate the Cradle Lid about 45° according to the diagram shown.
Step 5 Remove Cradle Lid.




8.11.2. Assembly of Cradle Lid

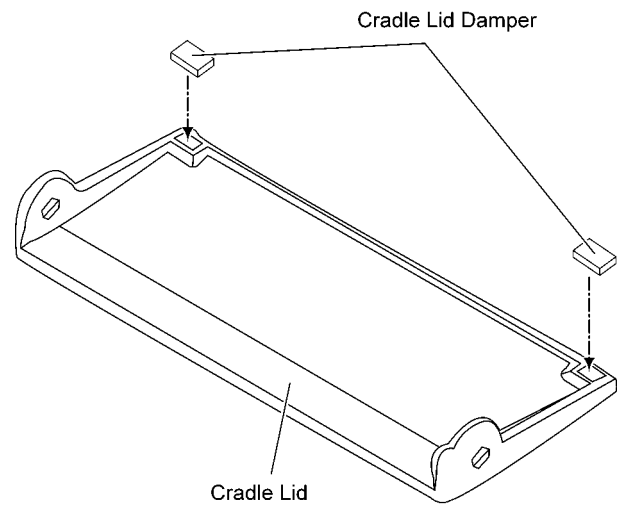
Caution: During assembling, replace Cradle Lid Damper if broken. Ensure it is properly pasted & fully pressed onto Cradle Lid.



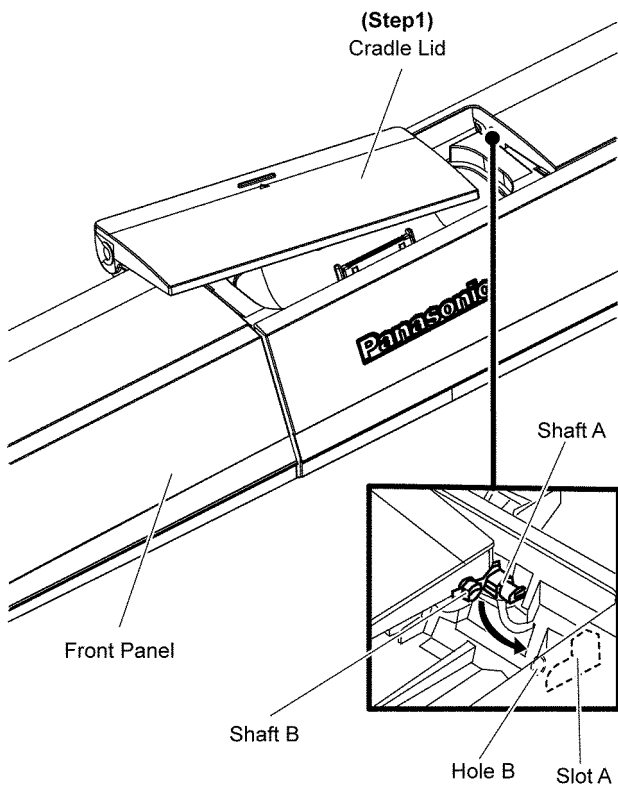
Step 1 Insert the Cradle Lid (Shaft A) into the Front Panel (Slot A & Hole B).



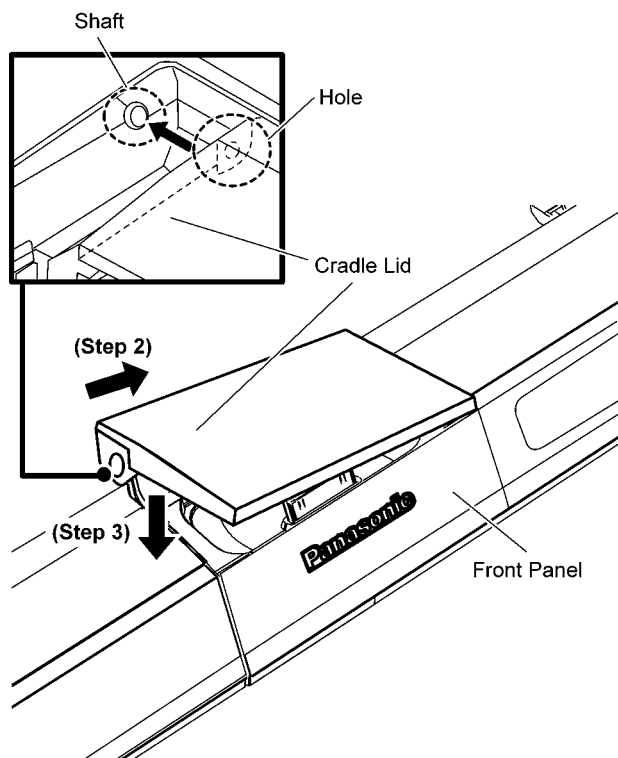Step 2 Slightly push the Cradle Lid inwards.
Step 3 Press the Cradle Lid downward.



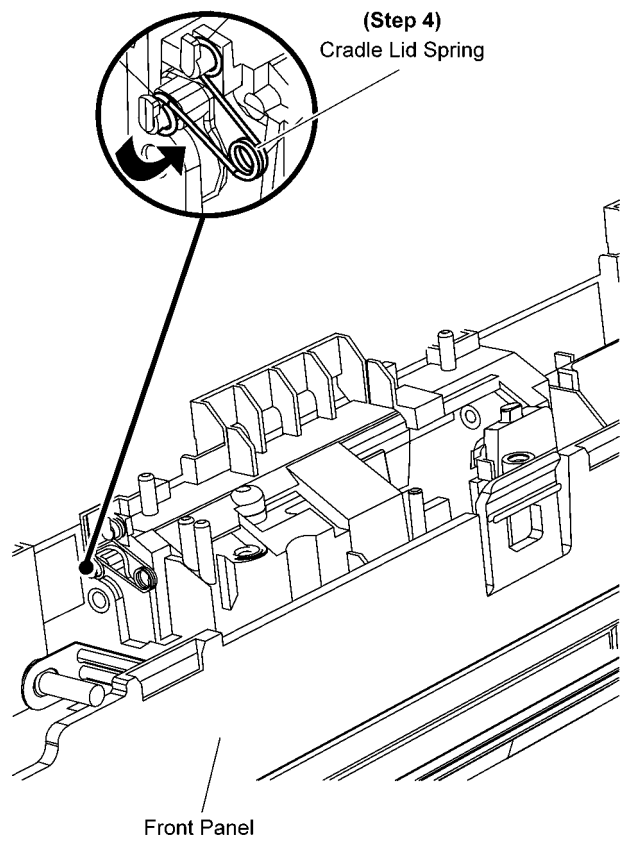Step 4 Fix the Cradle Lid Spring onto Cradle Lid's Shaft A.




8.12. Disassembly of iPod Cradle Assembly

• Refer to "Disassembly of Front Panel Block Assembly"


Step 1 Detach 15P FFC at the connector (CN1002) on iPod/iPhone P.C.B..

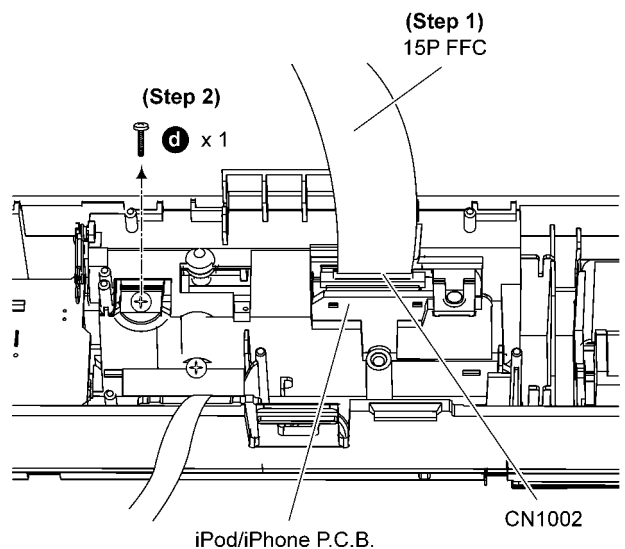Step 2 Remove 1 screw.




Step 3 Open the Front Lid Unit.

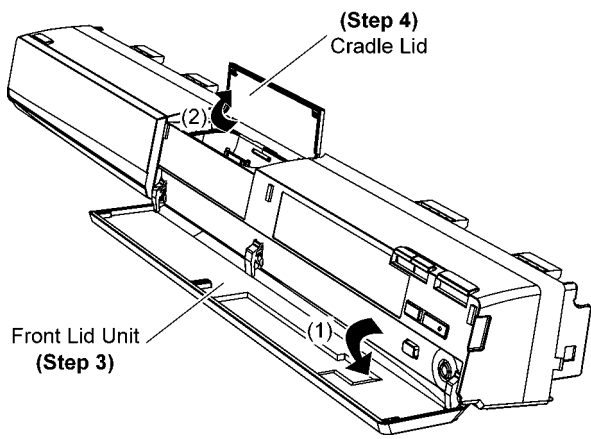
Step 4 Open the Cradle Lid.



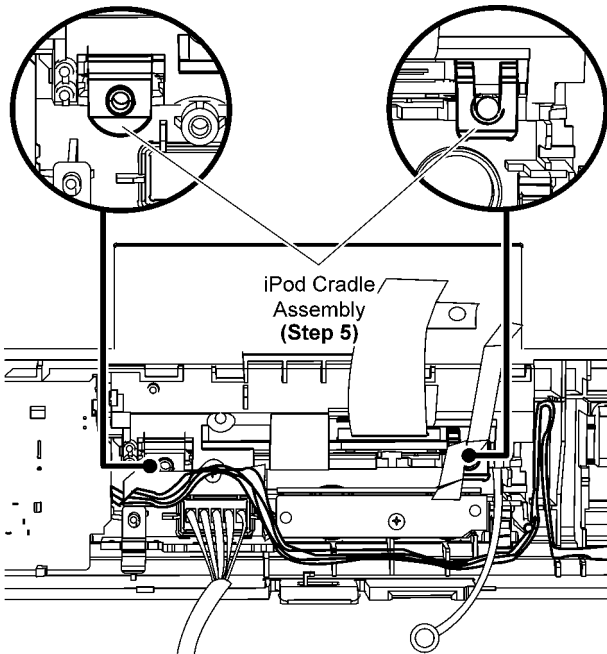
Step 5 Lift up iPod Cradle Assembly on both sides.



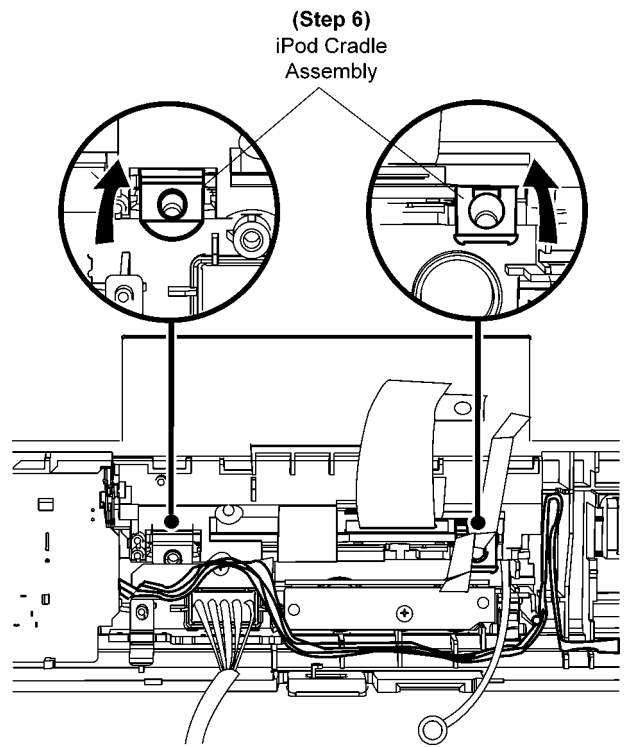Step 6 Press to release iPod Cradle Assembly from Front Panel as arrow shown.




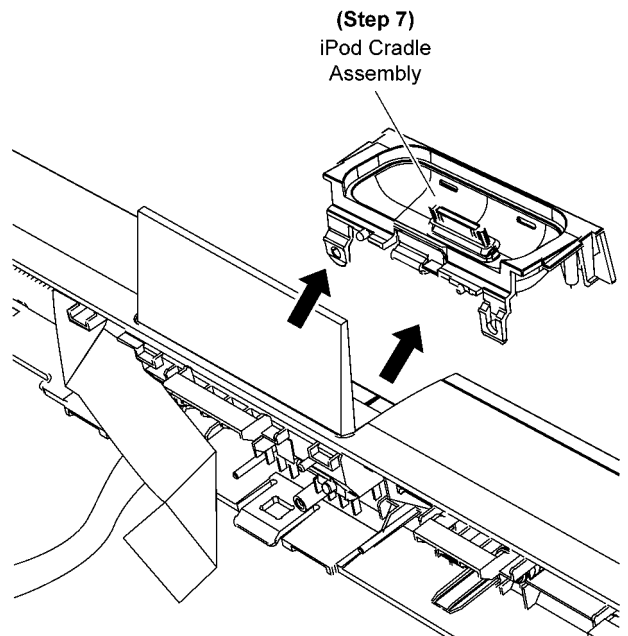Step 7 Remove iPod Cradle Assembly.




• **Assembly of iPod Cradle Assembly**

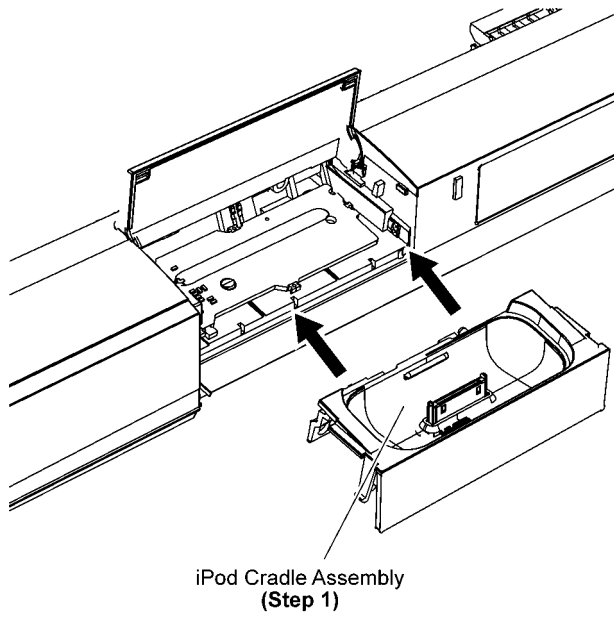
Step 1 Fix the iPod Cradle Assembly to Front Panel.



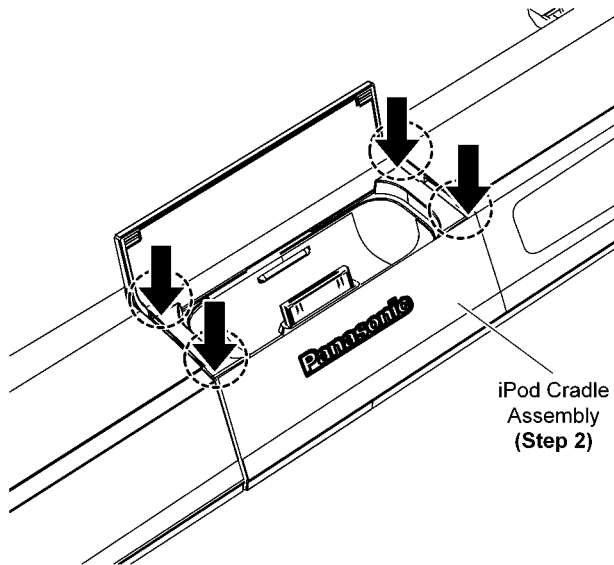Step 2 Press the iPod Cradle Assembly downwards.
Note: A “click” sound can be heard when the iPod Cradle Assembly is fixed onto Front Panel properly.



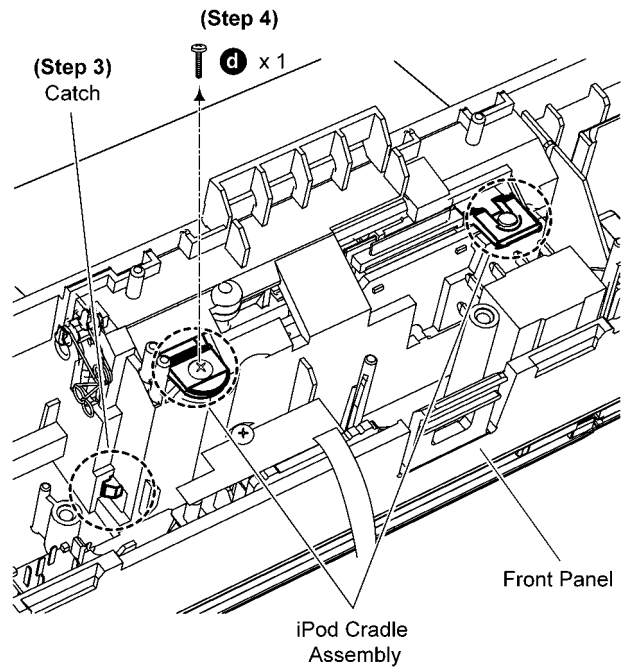
Step 3 Press the catch on the iPod Cradle Assembly.
Step 4 Fix 1 screw.





8.13. Disassembly of iPod/iPhone P.C.B.

• Refer to “Disassembly of iPod Cradle Assembly”

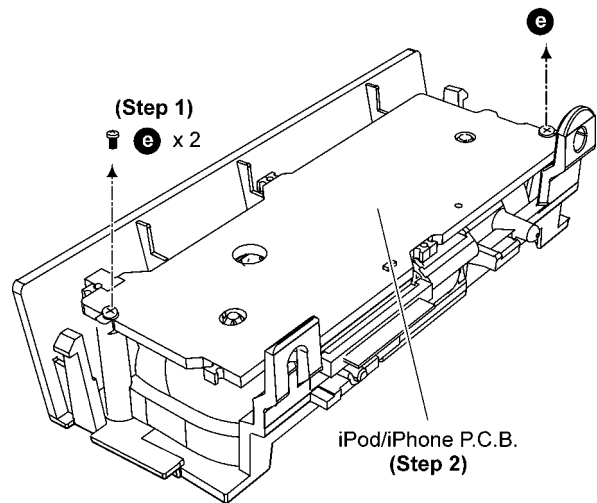Step 1 Remove 2 screws.
Step 2 Remove iPod/iPhone P.C.B..



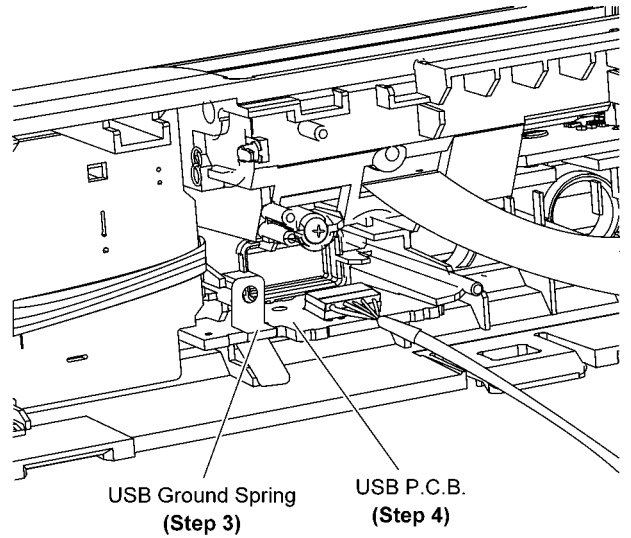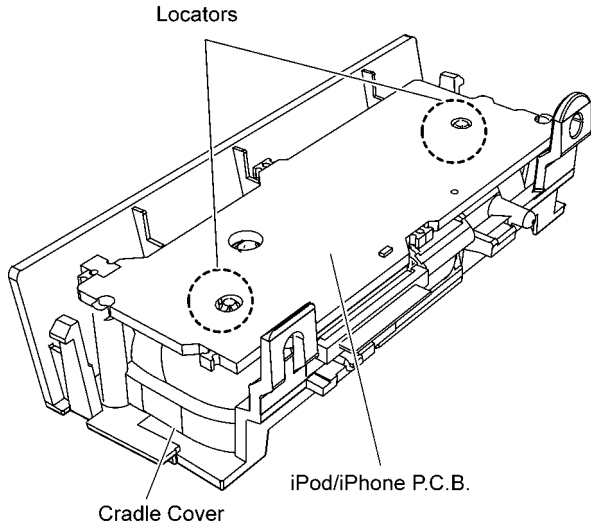Caution: During assembling, ensure that iPod/iPhone P.C.B. is seated properly at the locators.




8.14. Disassembly of USB P.C.B.

- Refer to “Disassembly of Front Panel Block Assembly”
- Refer to (Step 1) to (Step 2) of item 8.10.”

Step 1 Remove 1 screw.

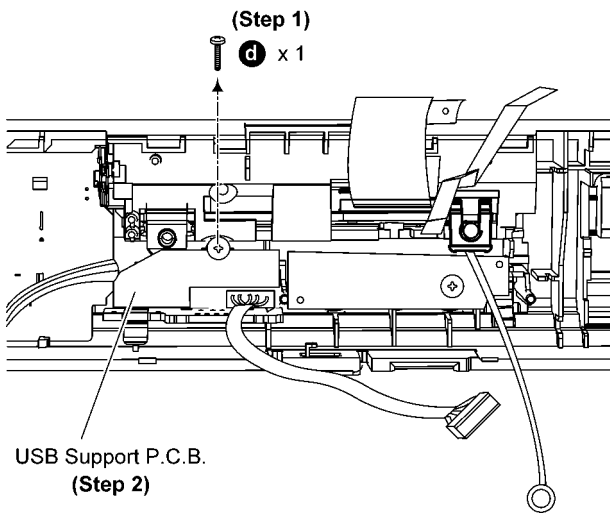Step 2 Remove USB Support P.C.B..



Step 3 Remove USB Ground Spring.

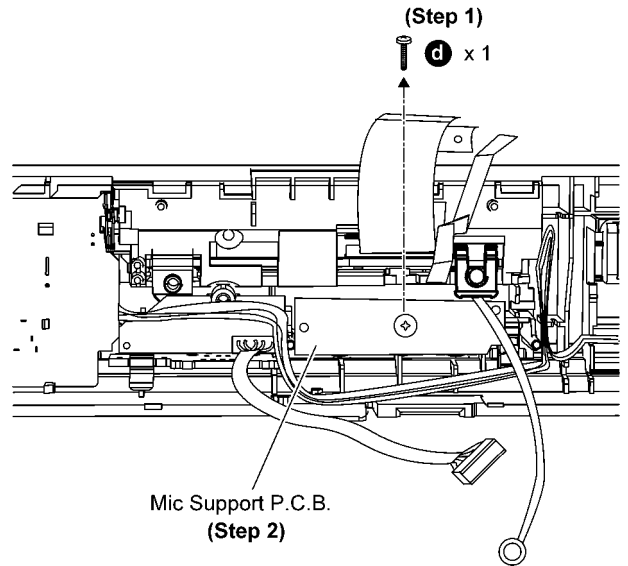
Step 4 Remove USB P.C.B..

8.15. Disassembly of Mic P.C.B.


- Refer to “Disassembly of Front Panel Block Assembly”

Step 1 Remove 1 screw.



Step 2 Remove Mic Support P.C.B..



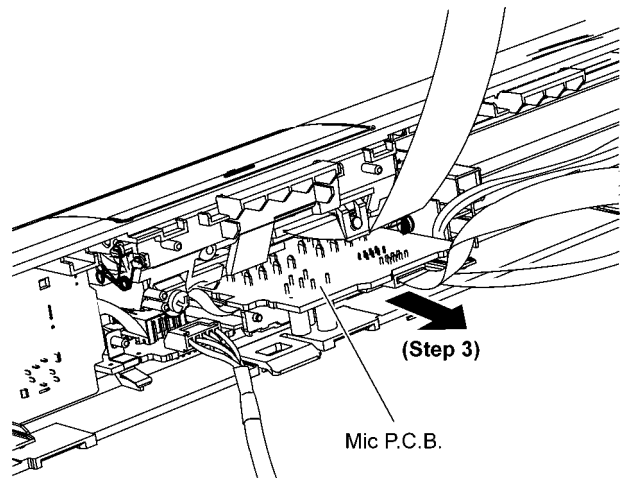Step 3 Remove Mic P.C.B..



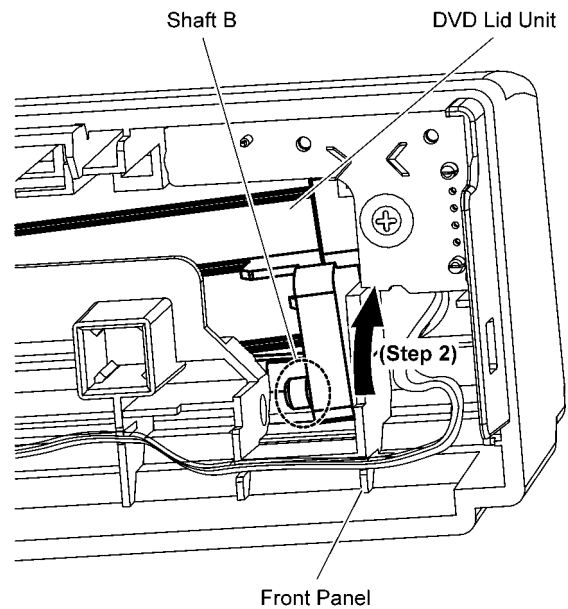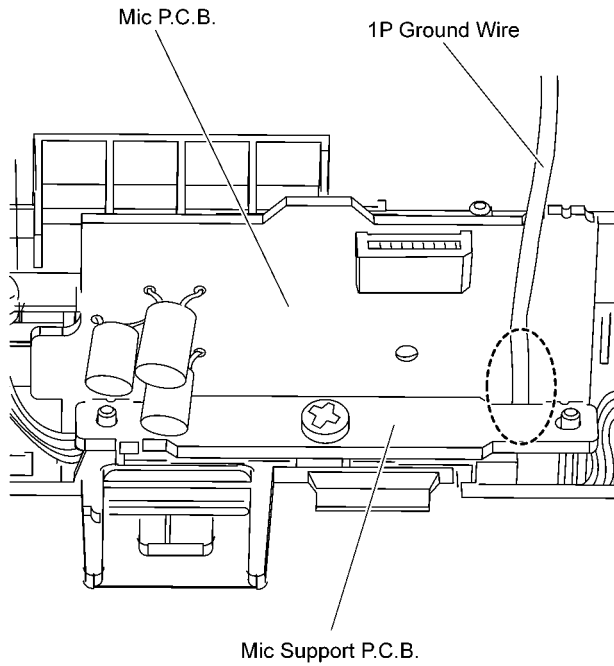Caution: During assembling, dress 1P Ground wire according to diagram shown.




Step 3 Lift the DVD Lid Spring at Shaft A in the direction of arrow.

8.16. Replacement of DVD Lid Unit


• Refer to “Disassembly of Front Panel Block Assembly”

8.16.1. Disassembly of DVD Lid Unit

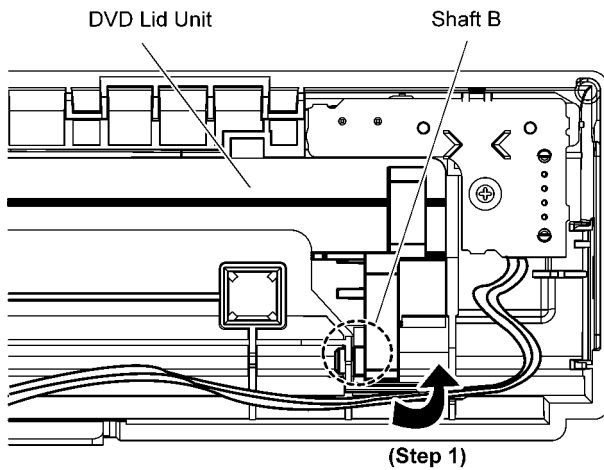Step 1 Push backward the Shaft B of the DVD Lid Unit in the direction of arrow.




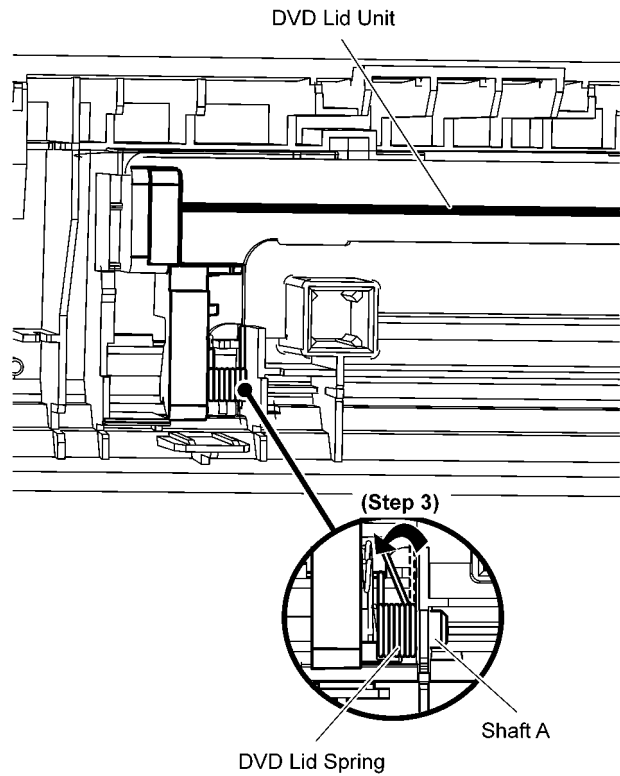Step 2 Push forward the Shaft B of the DVD Lid Unit in the direction of arrow.




Step 4 Move the Shaft A of the DVD Lid Unit in the direction of arrow.

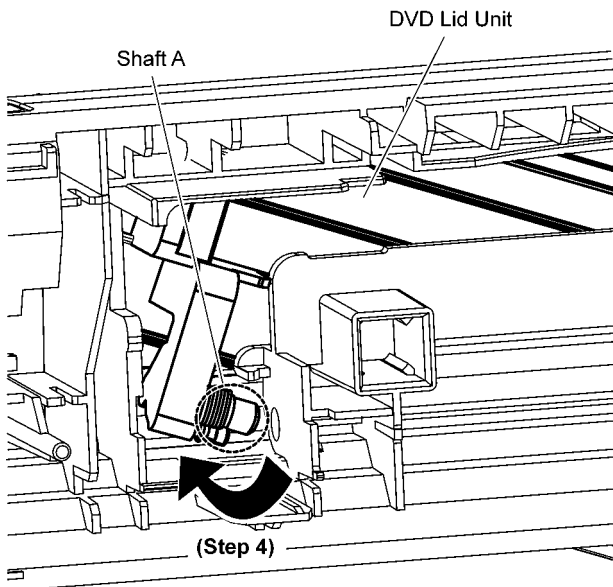Step 5 Remove DVD Lid Unit.



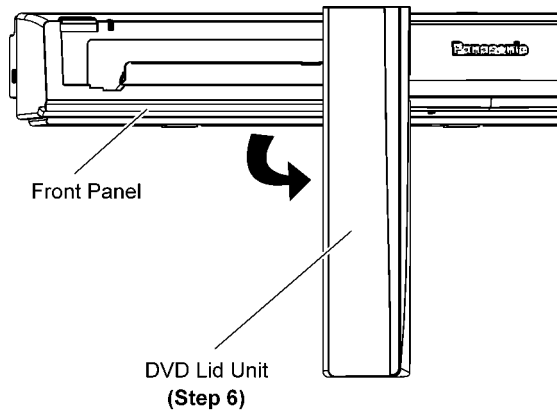
Step 6 Move the DVD Lid Unit to remove from Front Panel.




8.16.2. Assembly of DVD Lid Unit

Step 1 Insert the DVD Lid Unit into the Front Panel as arrow shown.

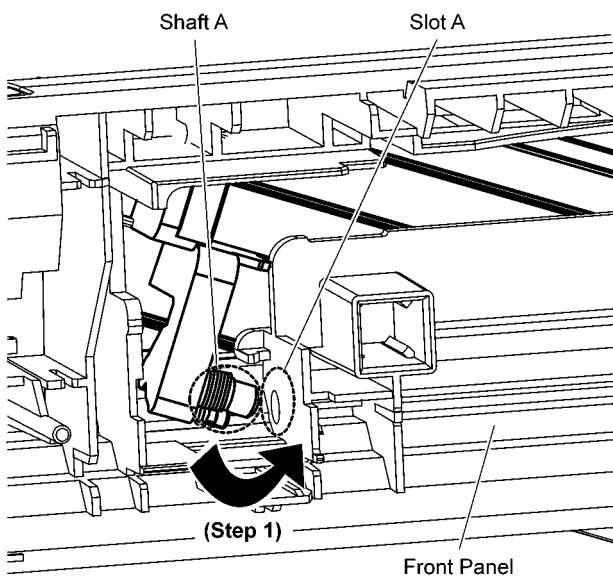
Caution: Ensure that Shaft A of DVD Lid Unit is fully inserted into Slot A of Front Panel.




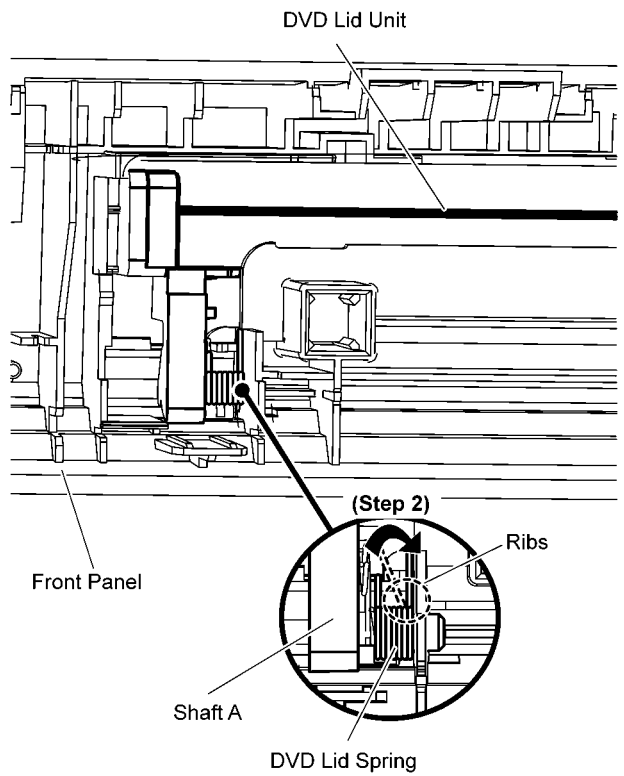
Step 2 Locate DVD Lid Spring in between ribs of Front Panel.



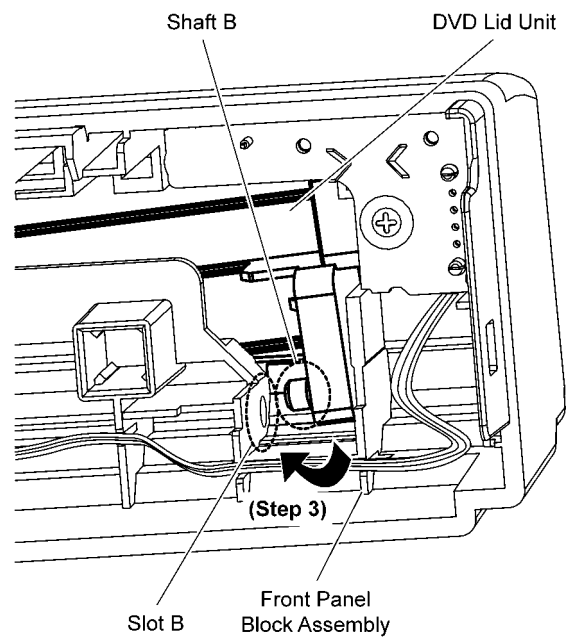Step 3 Insert the DVD Lid Unit (Shaft B) into the Front Panel (Slot B) as arrow shown.



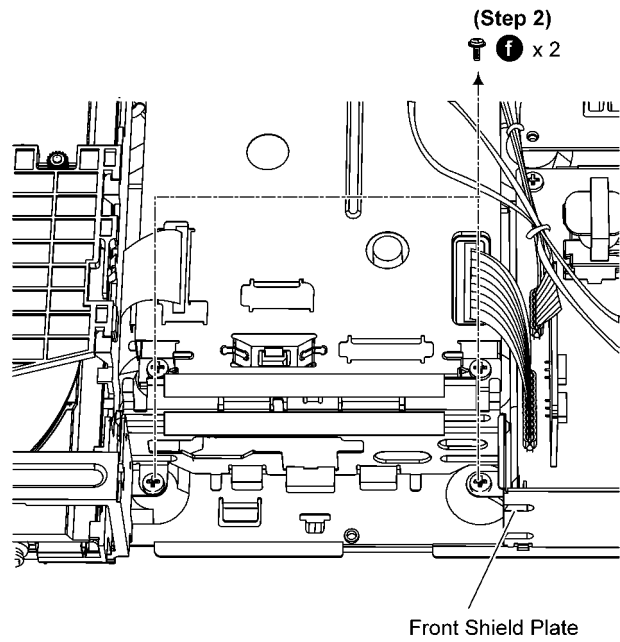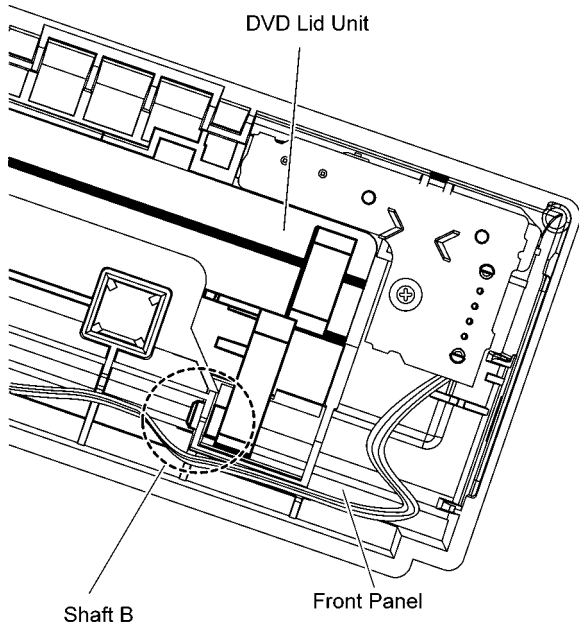
Caution: Ensure that the Shaft B of DVD Lid Unit is fully inserted into Shaft B of Front Panel.



8.17. Disassembly of Front Shield Unit

• Refer to “Disassembly of Front Panel Block Assembly”

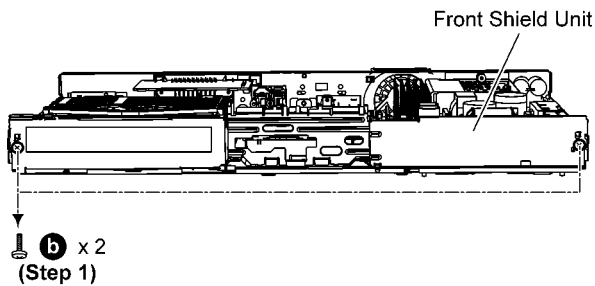Step 1 Remove 2 screws.




Step 2 Remove 2 screws.



Note: Replace the Gaskets if broken.

Step 3 Slightly lift up Front Shield Unit to release 2 catches at both sides.

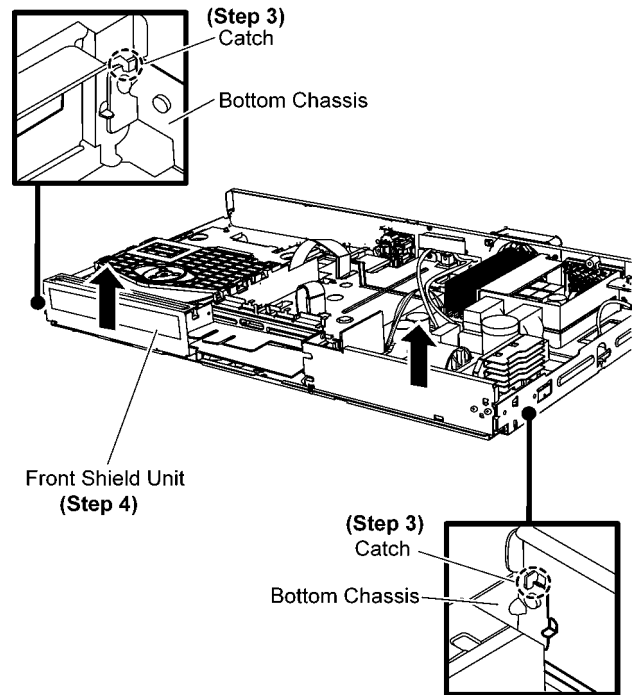Step 4 Remove Front Shield Unit.



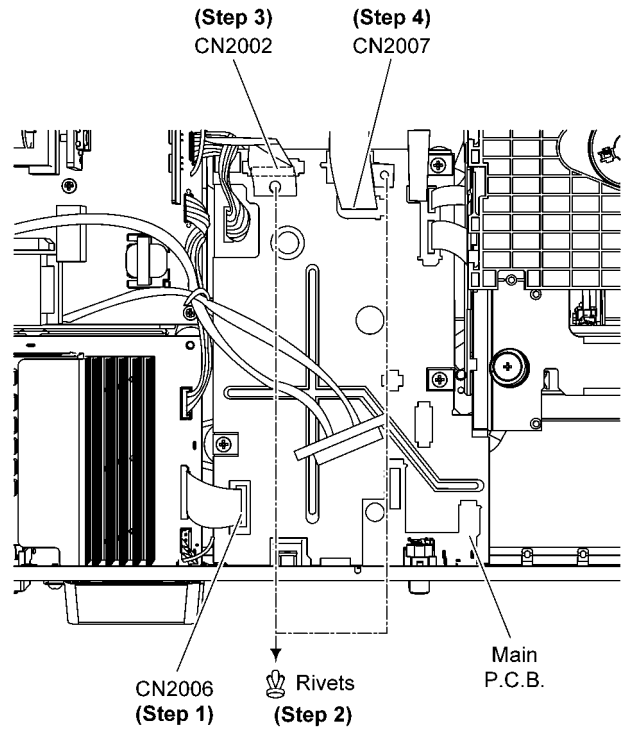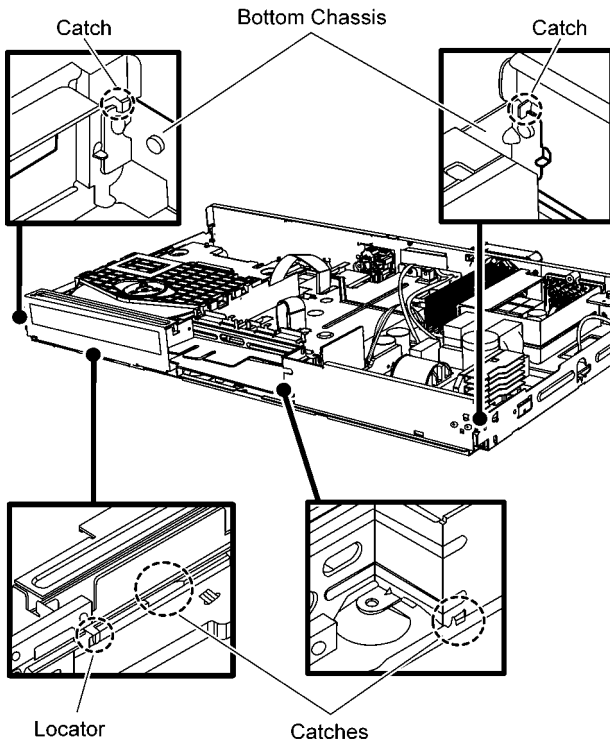Caution: During assembly, ensure that Front Shield Unit is properly located & fully caught onto Bottom Chassis.



8.18. Disassembly of Main P.C.B.

- Refer to “Disassembly of Top Cabinet”
- Refer to (Step 1) to (Step 2) of item 8.5.

Step 1 Detach 18P FFC at the connector (CN2006) on Main P.C.B..

Step 2 Remove 2 rivets.

Caution: Keep the rivets in safe place, place it back during assembling.

Step 3 Detach 22P FFC at the connector (CN2002) on Main P.C.B..

Step 4 Detach 15P FFC at the connector (CN2007) on Main P.C.B..

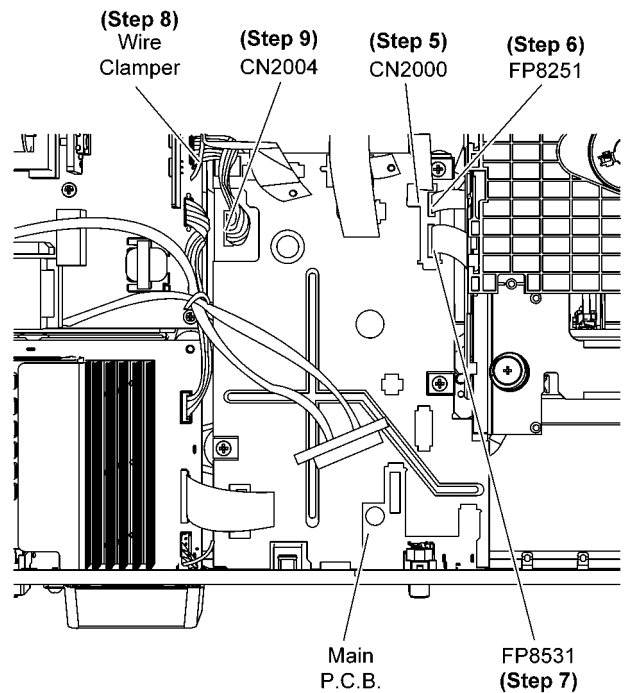
Step 5 Detach 8P FFC at the connector (CN2000) on Main P.C.B..

Step 6 Detach 7P FFC at the connector (FP8251) on Main P.C.B..


Step 7 Detach 24P FPC at the connector (FP8531) on Main P.C.B..

Step 8 Lift up the wire clamber.

Step 9 Detach 10P Cable at the connector (CN2004) on Main P.C.B..




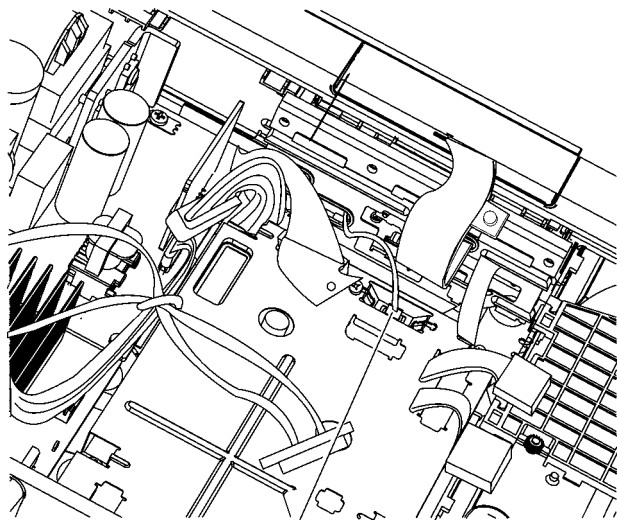Step 10 Detach 10P wire at the connector (FP9001) on Main P.C.B..




FP9001
(Step 10)

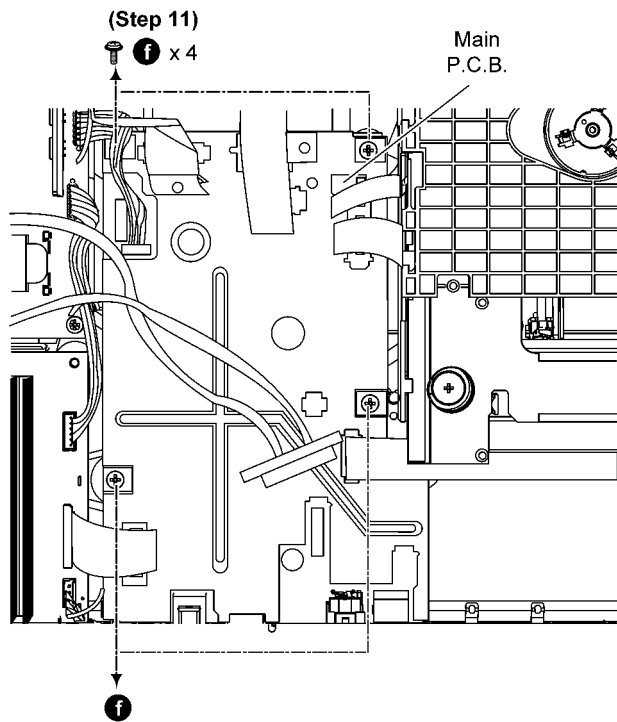
Step 11 Remove 4 screws on Main P.C.B..



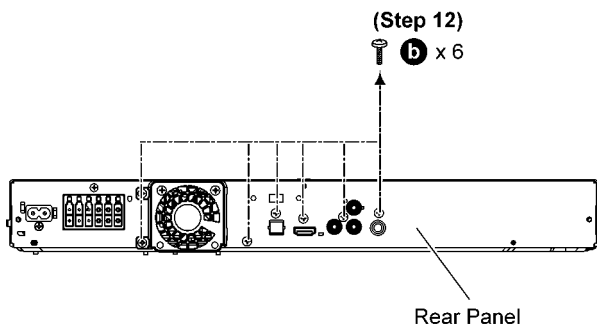
Step 12 Remove 6 screws.



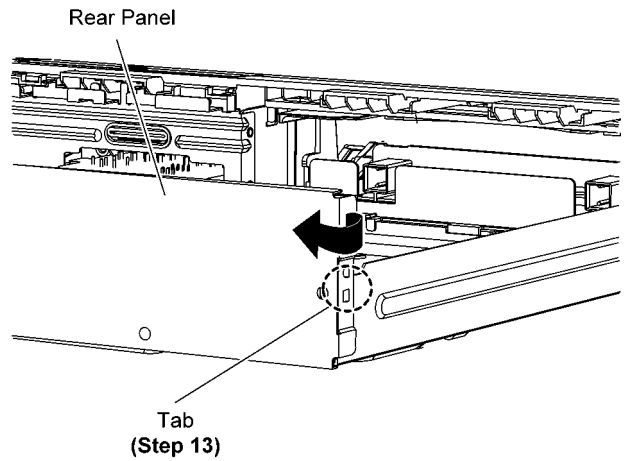
Step 13 Release the tab of the right side of the Rear Panel in the direction of arrow.




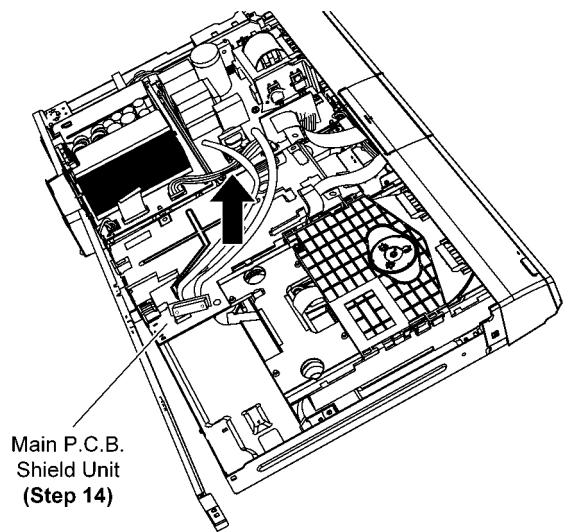
Step 14 Lift up to remove Main P.C.B. Shield Unit.



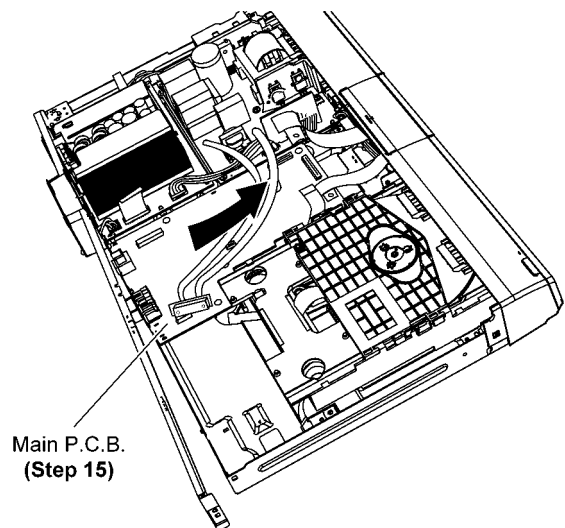Step 15 Remove the Main P.C.B..



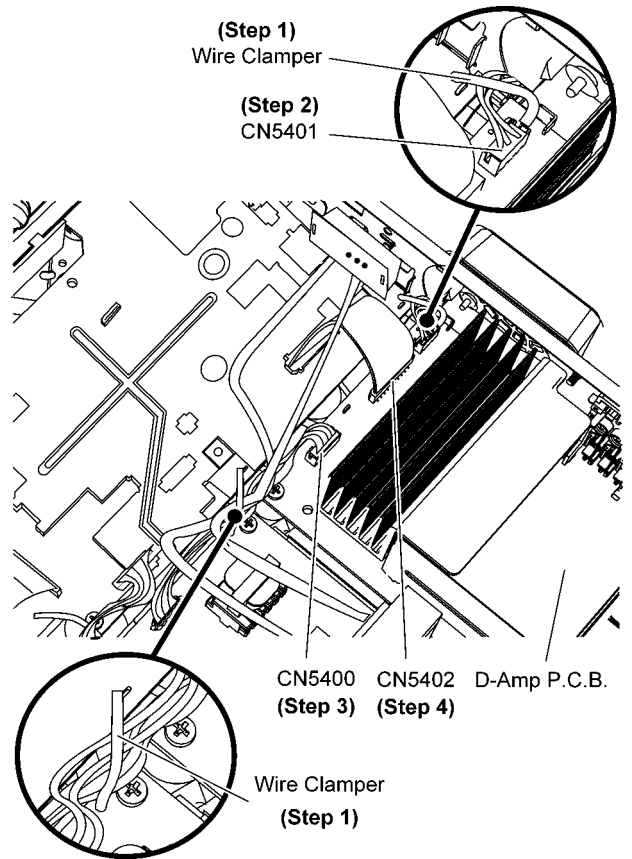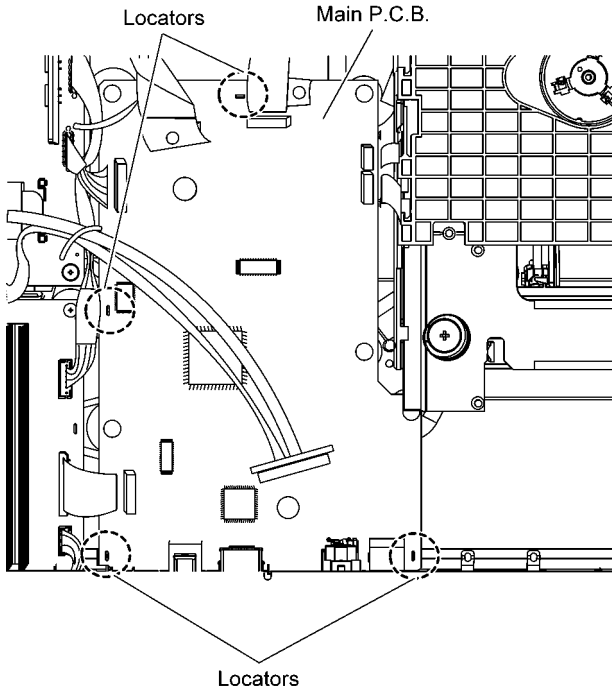Caution: During assembling, ensure that Main P.C.B. is seated properly at the locators.



8.19. Disassembly of D-Amp P.C.B.

• Refer to “Disassembly of AC Inlet P.C.B”

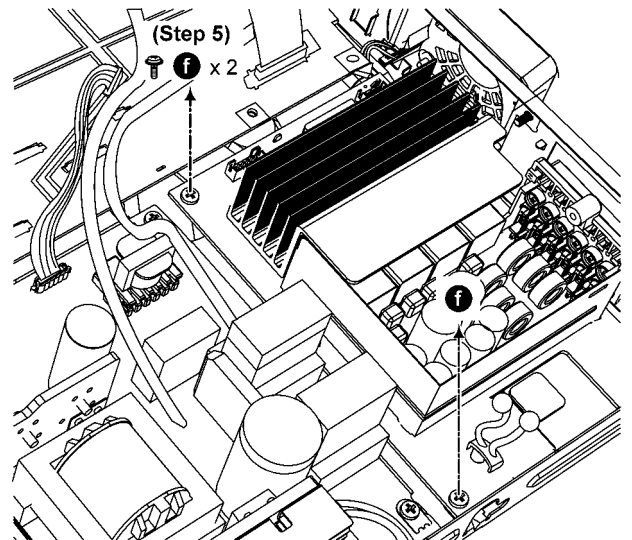
Step 1 Lift Up 2 Wire Clampers.

Step 2 Detach 3P Wire at the connector (CN5401) on D-Amp P.C.B..

Step 3 Detach 6P Cable at the connector (CN5400) on D-Amp P.C.B..


Step 4 Detach 18P Cable at the connector (CN5402) on D-Amp P.C.B..

Step 5 Remove 2 screws on D-Amp P.C.B..




Step 6 Remove 5 screws.

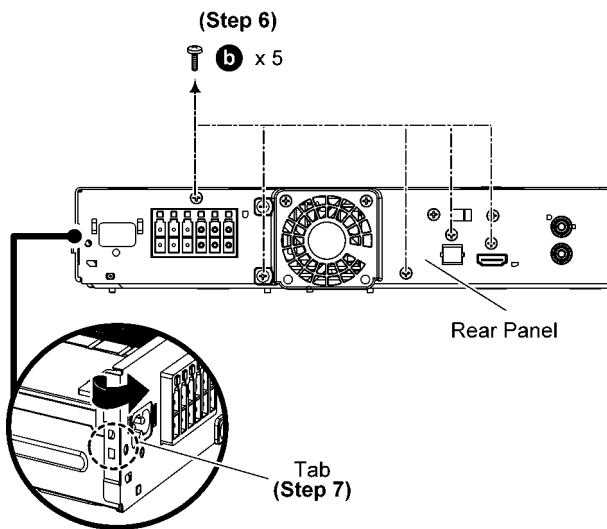
Step 7 Release the tab of the side of the Rear Panel in the direction of arrow.



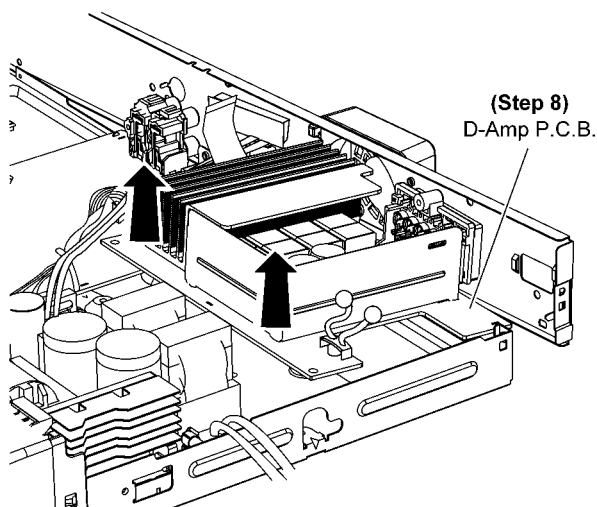Step 8 Slightly lift up to remove D-Amp P.C.B..



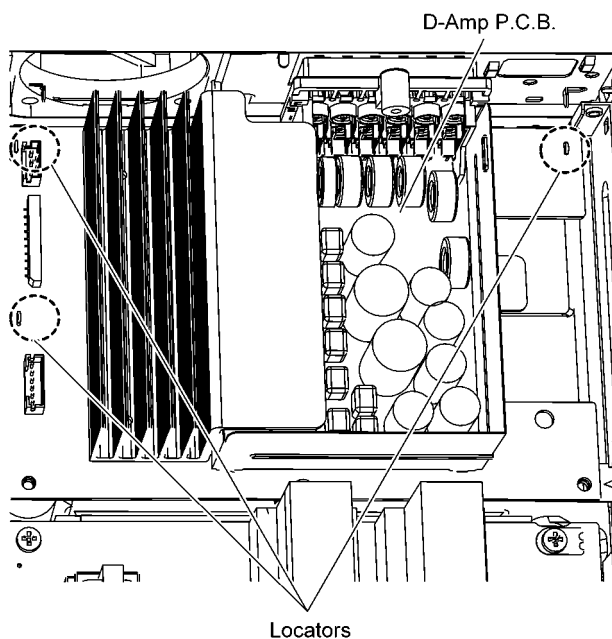Caution: During assembling, ensure that D-Amp P.C.B. is seated properly at the locators.




8.20. Replacement of Digital Amplifier IC (IC5100/IC5200)

• Refer to "Disassembly of D-Amp P.C.B."

8.20.1. Disassembly of Digital Amplifier IC (IC5100/IC5200)


Step 1 Place the D-Amp P.C.B. on an insulated material.

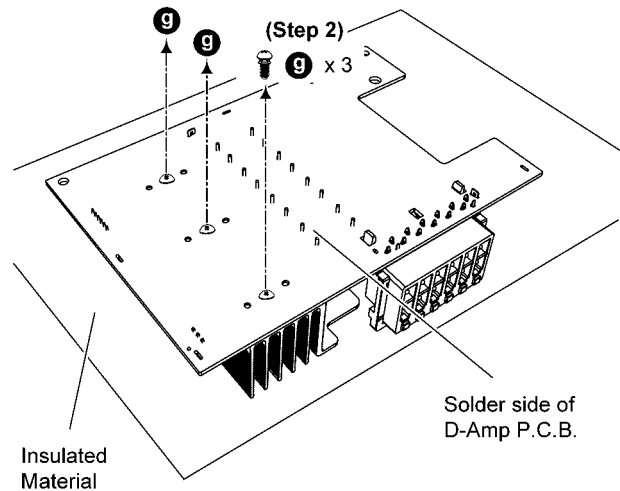Step 2 Remove 3 screws on Solder side of D-Amp P.C.B..



Step 3 Lift up the D-Amp P.C.B..

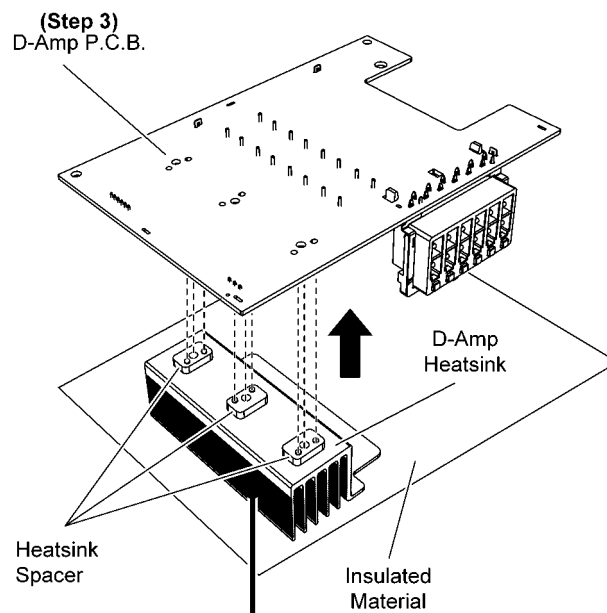Caution: Keep the Heatsink Spacer in safe place. Place it back during assembling.




**CAUTION: HOT!!
PLEASE DO NOT
TOUCH THE HEAT SINK**

Step 4 Upset the D-Amp P.C.B..

Step 5 Desolder pins of Digital Amplifier IC (IC5100).

Step 6 Remove Digital Amplifier IC (IC5100).

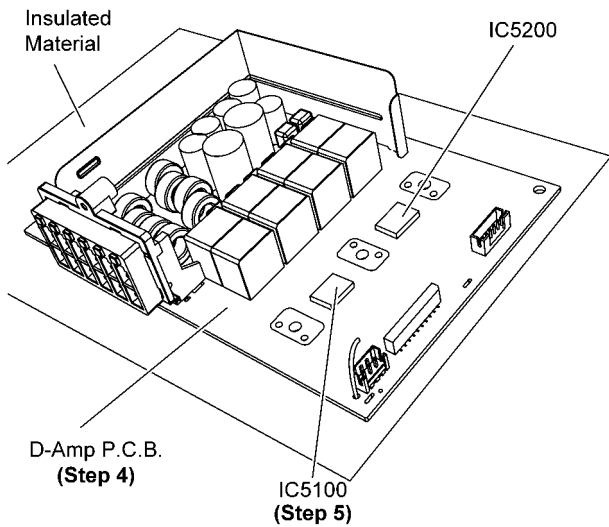Note: For disassembling of Digital Amplifier IC (IC5200), repeat the (Step 1) to (Step 6) of 8.20.1.




8.20.2. Assembly of Digital Amplifier IC (IC5100/IC5200)

Step 1 Mount the Digital Amplifier IC (IC5100) onto the D-Amp P.C.B..

Step 2 Solder pins of Digital Amplifier IC (IC5100).


Caution: Ensure that the pins of Digital Amplifier IC (IC5100) is positioned correctly on D-Amp P.C.B. before soldering check solderability.

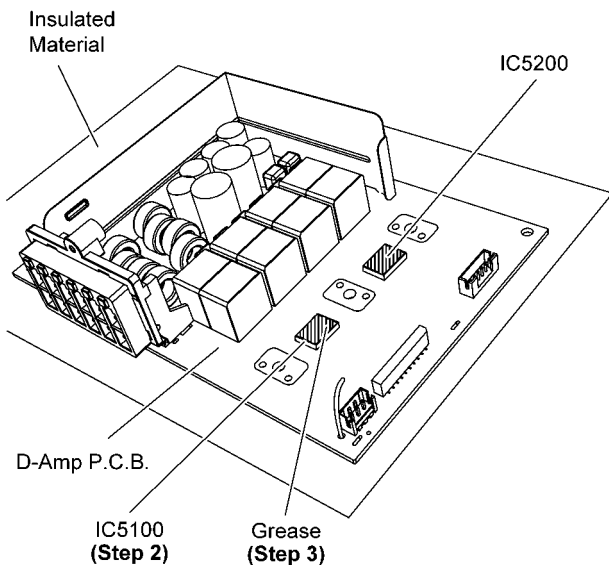Step 3 Apply grease onto the top side of the Digital Amplifier IC (IC5100).



Step 4 Upset the D-Amp P.C.B..

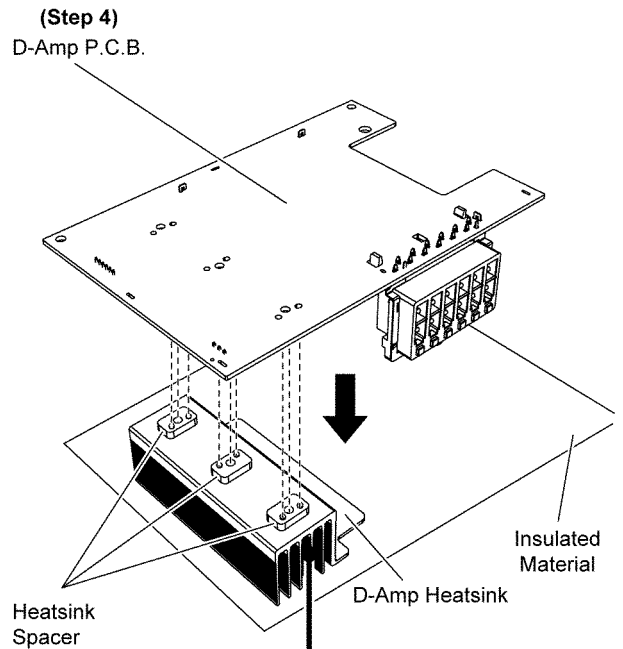Caution: During assembling, ensure that heatsink spacers is seated properly onto D-Amp Heatsink.



**CAUTION: HOT!!
PLEASE DO NOT
TOUCH THE HEAT SINK**

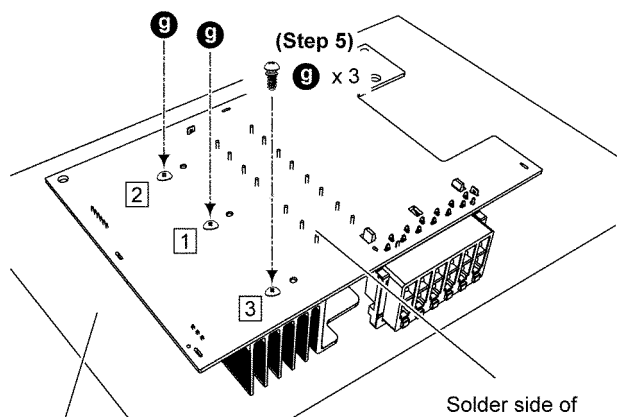
Step 5 Fix 3 screws.

Caution: During assembling, ensure that screwing sequence is strictly follow to the illustration shown.

Note: For assembling of Digital Amplifier IC (IC5200), repeat the (Step 1) to (Step 5) of 8.20.2.

Screwing Sequence:

1 → 2 → 3




8.21. Disassembly of Power P.C.B.

• Refer to "Disassembly of Top Cabinet"


Step 1 Release 2 catches.

Step 2 Remove Power P.C.B. in the direction of arrow.

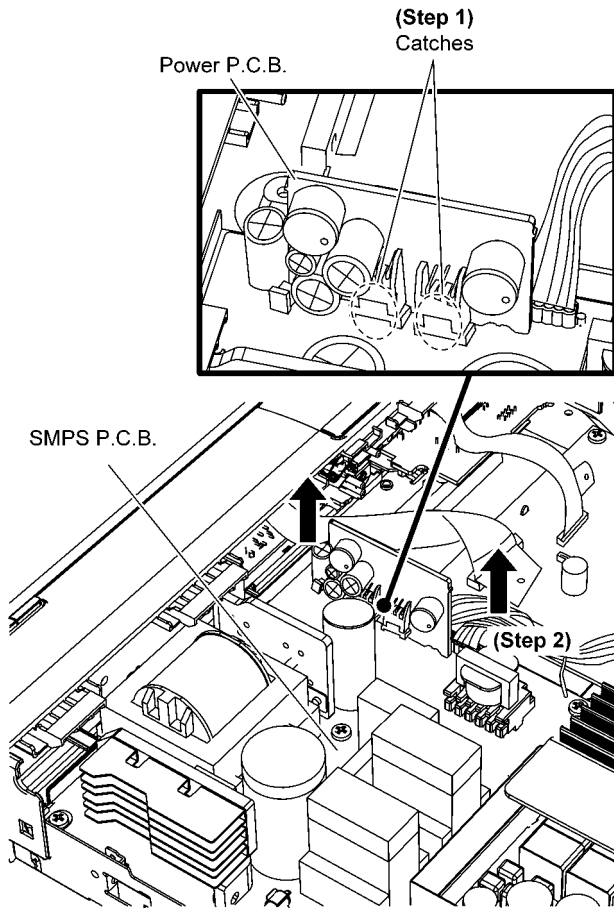
Caution: During assembling, ensure that Power P.C.B. is properly attached & fully connected to SMPS P.C.B..



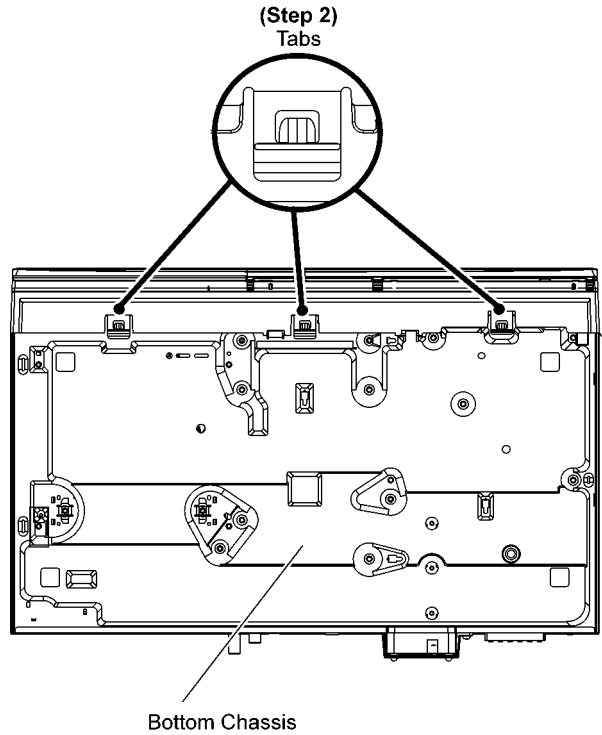Caution: Do not exert strong force when releasing the tabs.



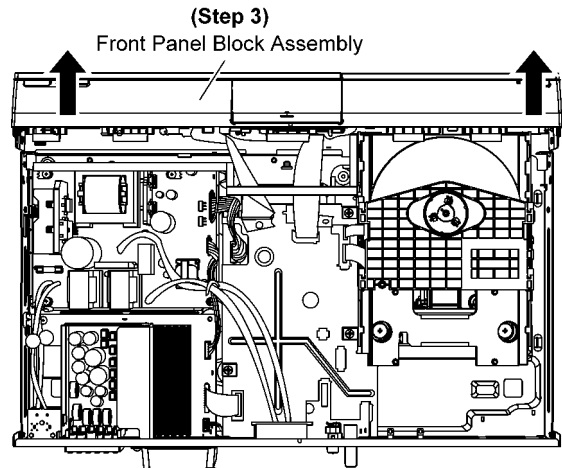
Step 3 Detach the Front Panel Block Assembly slightly forward.



8.22. Disassembly of SMPS P.C.B.

• Refer to "Disassembly of Power P.C.B."

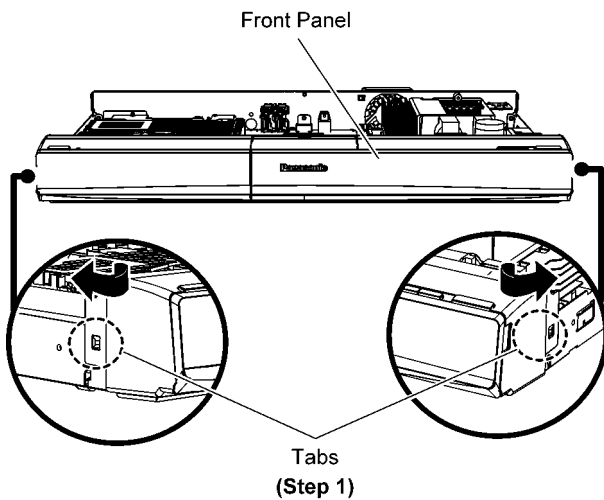Step 1 Release the 2 tabs at each side of the Front Panel Block Assembly in the direction of arrow.




Step 2 Release the 3 tabs at the Bottom Chassis.

Step 4 Lift up the Wire Clampers.


Step 5 Detach 6P Cable wire at the connector (CN5400) on D-Amp P.C.B..

Step 6 Detach 10P Cable wire at the connector (CN2004) on Main P.C.B..

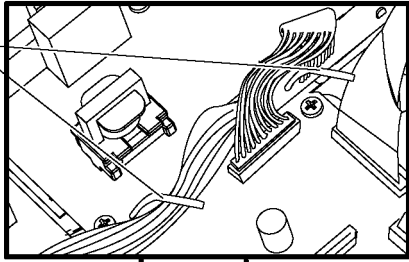(Step 4)
Wire Clampers



SMPS P.C.B.

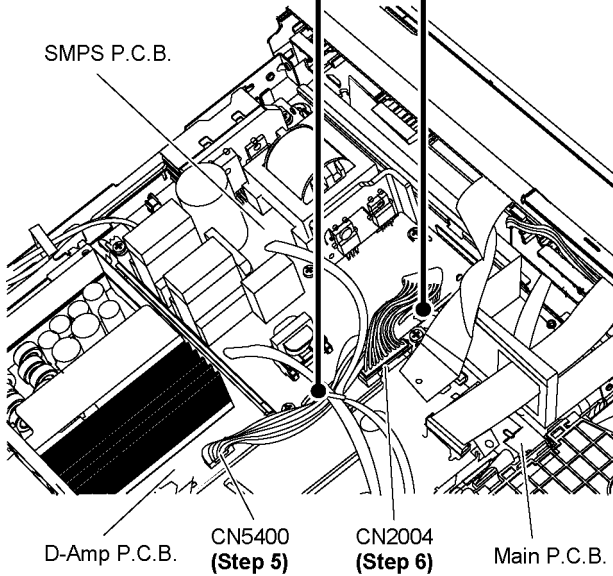

D-Amp P.C.B.

CN5400
(Step 5)


CN2004
(Step 6)

Main P.C.B.

Step 7 Remove 5 screws on SMPS P.C.B..

(Step 7)


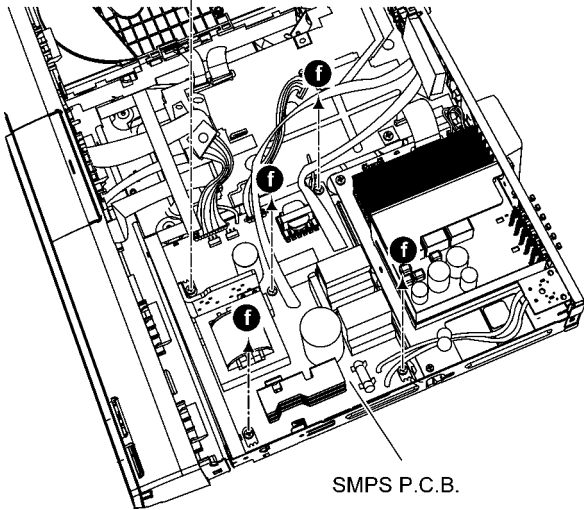
  x 5



SMPS P.C.B.

Step 8 Release P.C.B. Spacer by using long nose plier.

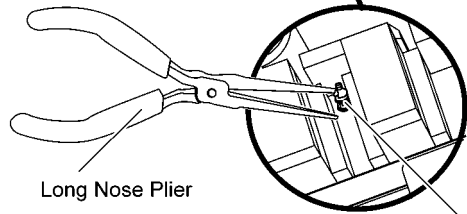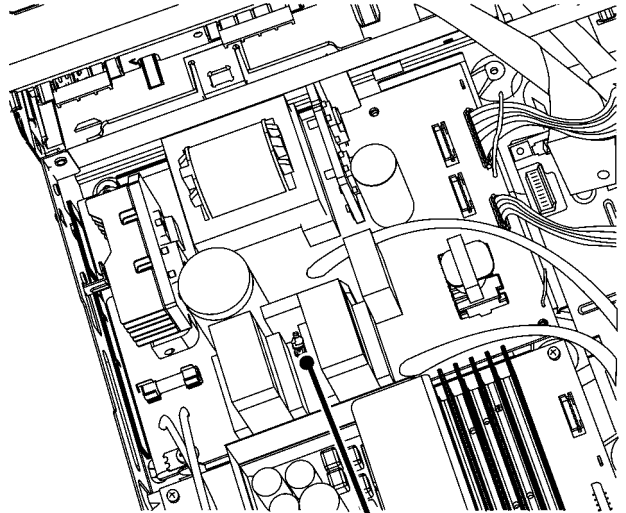
Caution: During releasing P.C.B. Spacer, avoid touching the transformer & surrounding parts as it may lead to electric shock or injuries due to high temperature.



Long Nose Plier


P.C.B. Spacer
(Step 8)

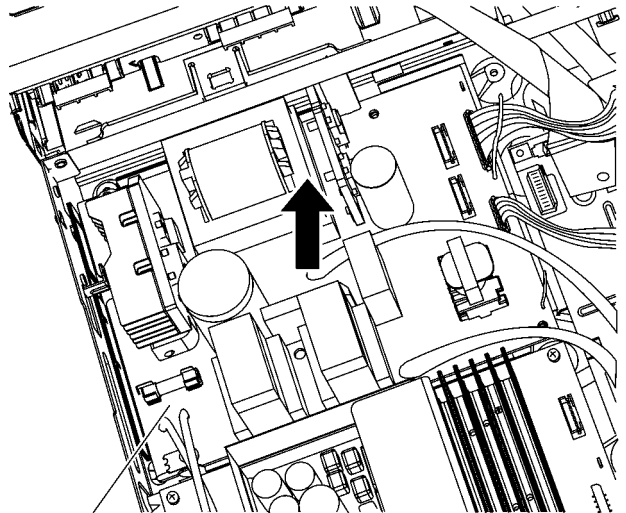Step 9 Lift up SMPS P.C.B. in the direction of arrow.



SMPS P.C.B.
(Step 9)

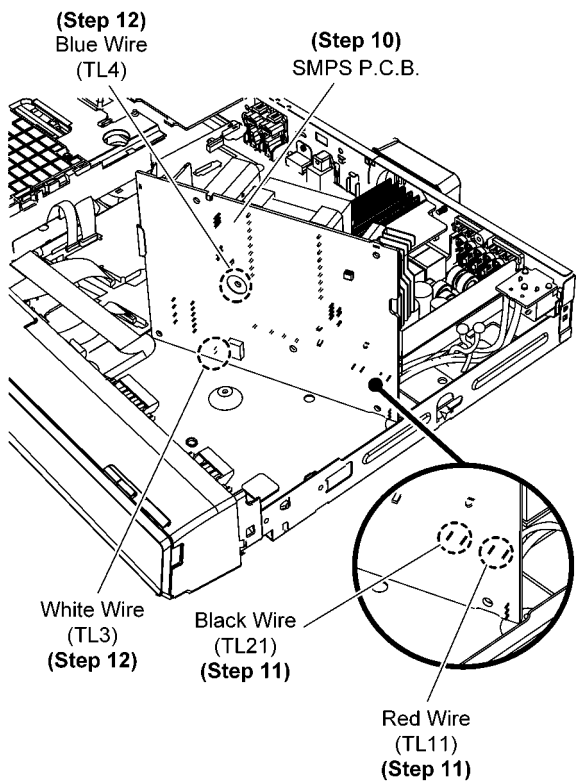- Step 10** Upset the SMPS P.C.B. according to diagram shown.
- Step 11** Desolder Black Wire (TL21) and Red Wire (TL11) on solder side of SMPS P.C.B..
- Step 12** Desolder Blue Wire (TL4) and White Wire (TL3) on solder side of SMPS P.C.B..
- Step 13** Remove SMPS P.C.B..




(IC5701).

Step 3 Remove the Switching Regulator IC (IC5701).

Caution: Avoid touching the Heatsink Unit B due to its high temperature after prolonged use. Touching it may lead to injuries.

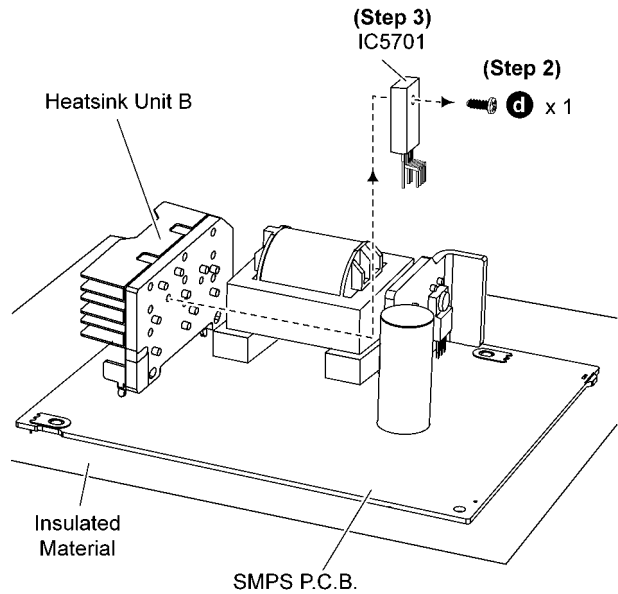Note: Refer to the diagrams of SMPS P.C.B. (Item 18.4) for location of the part.




8.23. Replacement of Switching Regulator IC (IC5701)

• Refer to "Disassembly of SMPS P.C.B."

8.23.1. Disassembly of Switching Regulator IC (IC5701)

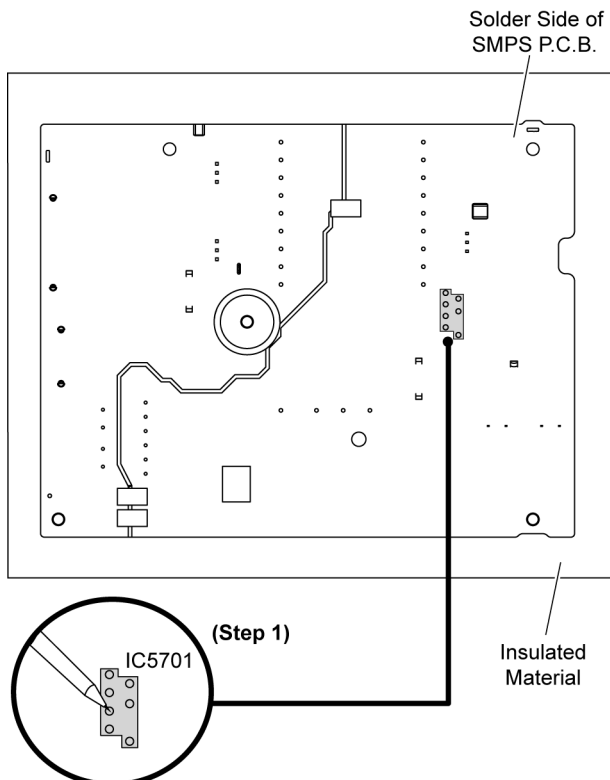Step 1 Desolder pins of the Switching Regulator IC (IC5701) on the solder side of SMPS P.C.B..



Step 2 Remove 1 screw from the Switching Regulator IC

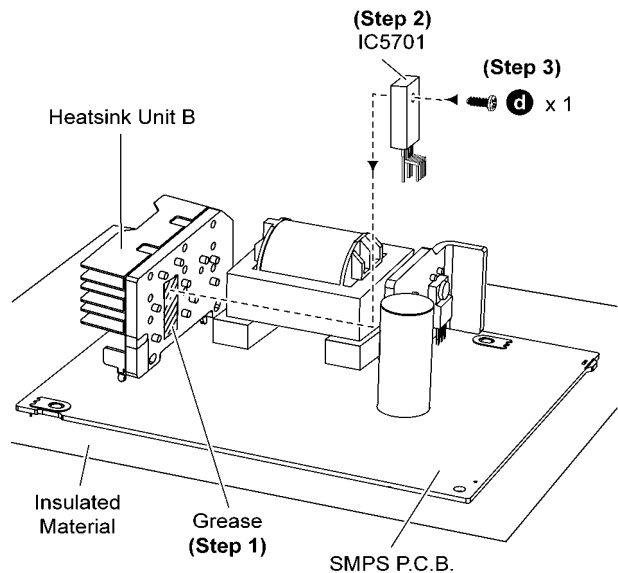
8.23.2. Assembly of Switching Regulator IC (IC5701)

Step 1 Apply grease to the Heatsink Unit B.

Step 2 Fix the Switching Regulator IC (IC5701) onto the SMPS P.C.B..



Caution: Ensure the Switching Regulator IC (IC5701) is tightly screwed to the Heatsink Unit B.

Step 3 Fix and screw the Switching Regulator IC (IC5701) to the Heatsink Unit B.



Step 4 Solder pins of the Switch Regulator IC (IC5701) on the solder side of SMPS P.C.B..

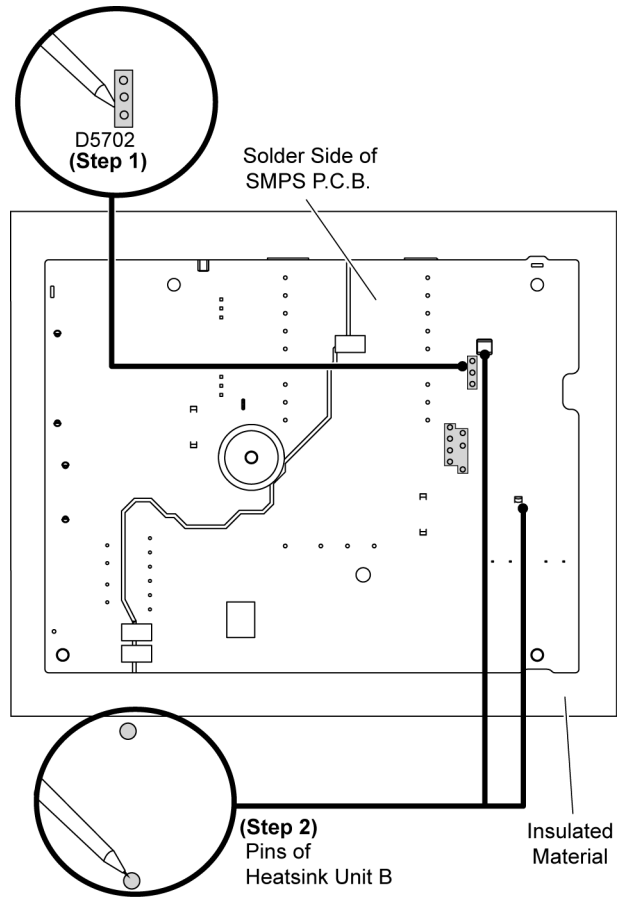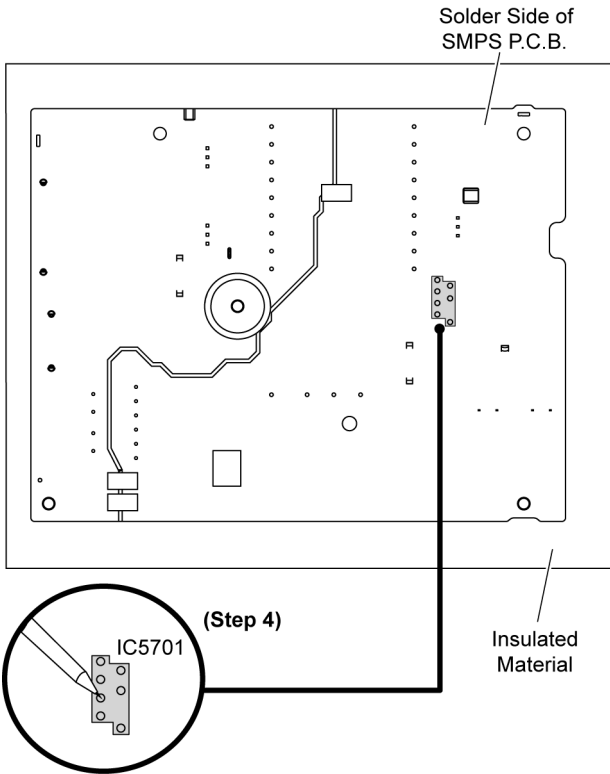Caution: Ensure pins of the Switching Regulator IC (IC5701) are properly seated and soldered on SMPS P.C.B..



8.24. Replacement of Rectifier Diode (D5702)

• Refer to “Disassembly of SMPS P.C.B.”

8.24.1. Disassembly of Rectifier Diode (D5702)

Step 1 Desolder pins of the Rectifier Diode (D5702) on the solder side of SMPS P.C.B..

Step 2 Desolder pins of the Heatsink Unit B.

Step 3 Remove 1 screw from the Switching Regulator IC (IC5701).

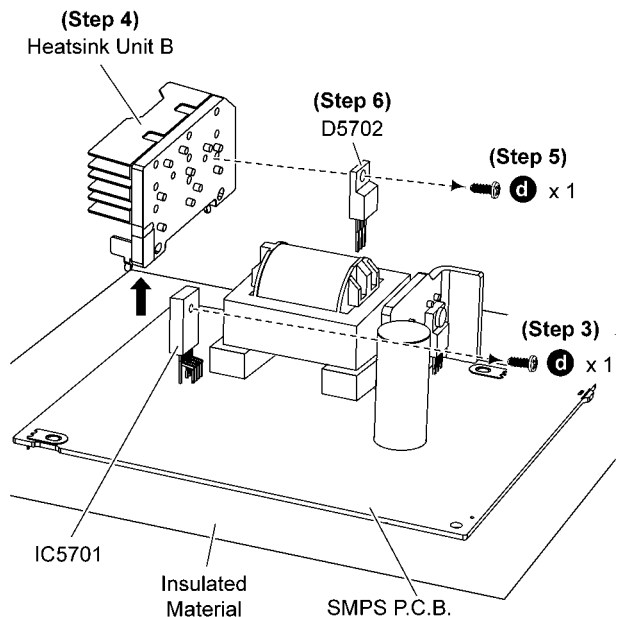
Step 4 Remove the Heatsink Unit B together with Rectifier Diode (D5702) in the direction of arrows.

Step 5 Remove 1 screw from the Rectifier Diode (D5702).

Step 6 Remove the Rectifier Diode (D5702) from the Heatsink Unit B.

Caution: Avoid touching the Heatsink Unit B due to its high temperature after prolonged use. Touching it may lead to injuries.

Note: Refer to the diagrams of SMPS P.C.B. (Item 18.4) for location of the part.



8.24.2. Assembly of Rectifier Diode (D5702)

Step 1 Apply grease to the Heatsink Unit B.

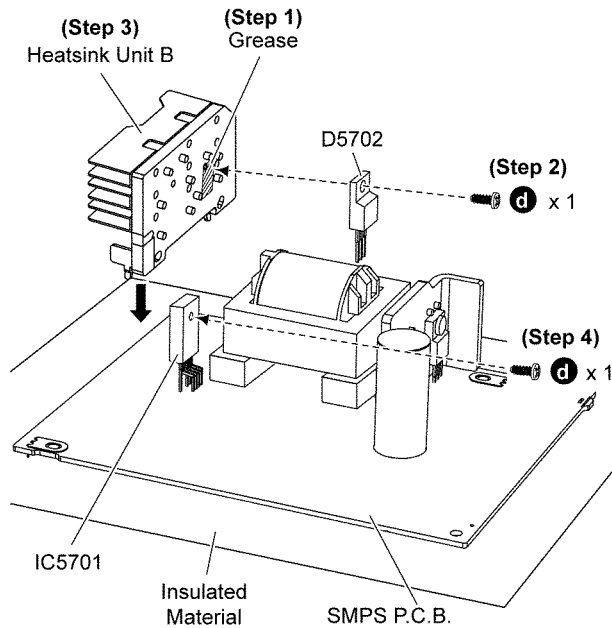
Step 2 Fix and screw the Rectifier Diode (D5702) to the Heatsink Unit B.

Caution: Ensure the Rectifier Diode (D5702) is tightly screwed to the Heatsink Unit B.

Step 3 Mount the Heatsink Unit B with Rectifier Diode (D5702) onto SMPS P.C.B..

Caution: Ensure the Heatsink Unit B with Rectifier Diode (D5702) are properly seated on SMPS P.C.B..


Step 4 Fix and screw the Switching Regulator IC (IC5701) to the Heatsink Unit B.



Step 5 Solder pins of the Heatsink Unit B on the solder side of SMPS P.C.B..

Step 6 Solder pins of the Rectifier Diode (D5702) on the solder side of SMPS P.C.B..

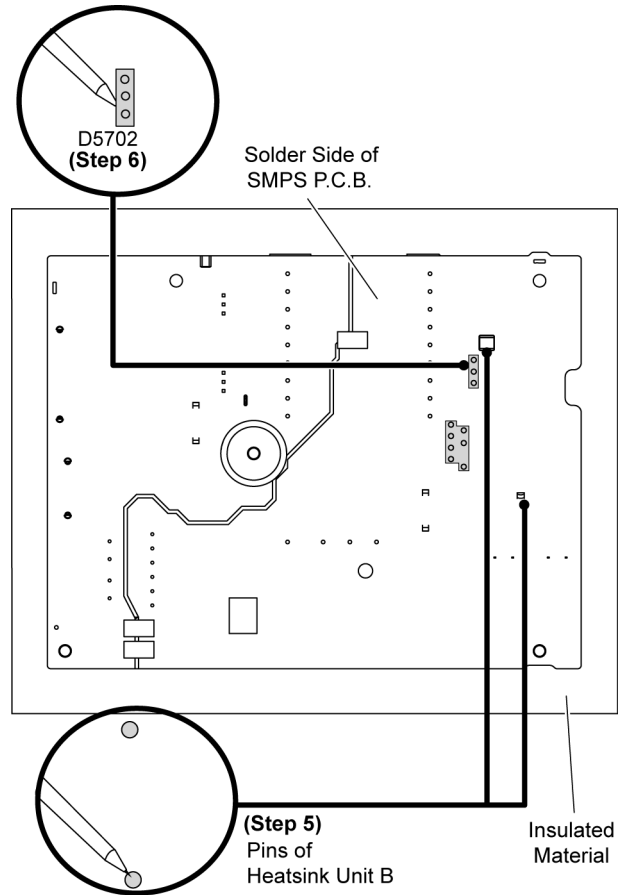Caution: Ensure pins of the Rectifier Diode (D5702) are properly seated before soldered onto SMPS P.C.B..




8.25. Replacement of Regulator Diode (D5802)


- Refer to “Disassembly of SMPS P.C.B.”

8.25.1. Disassembly of Regulator Diode (D5802)

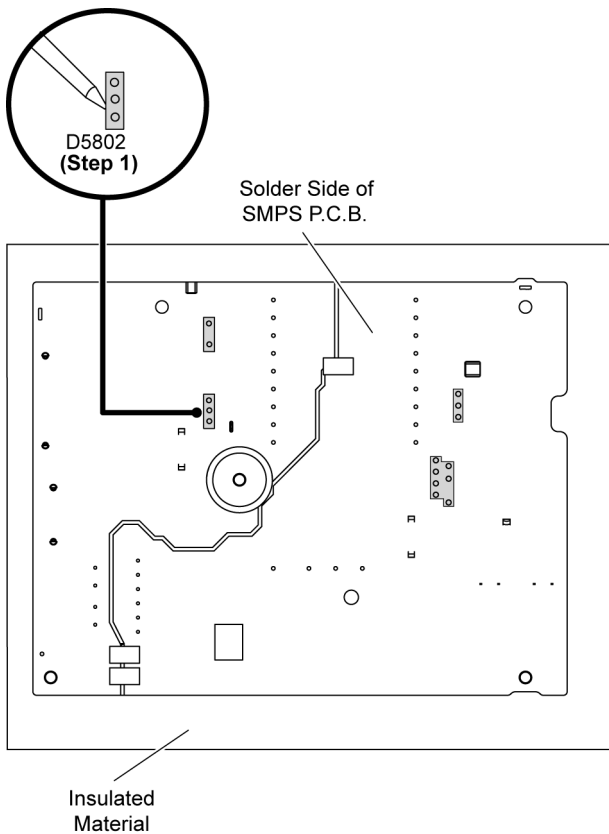Step 1 Desolder pins of the Regulator Diode (D5802) on the solder side of SMPS P.C.B..



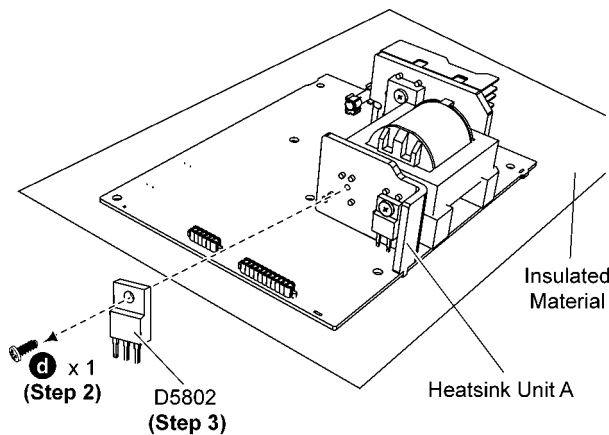
Step 2 Remove 1 screw from the Regulator Diode (D5802).
Step 3 Remove the Regulator Diode (D5802) from the SMPS P.C.B..
Caution: Avoid touching the Heatsink Unit A due to its high temperature after prolonged use. Touching it may lead to injuries.
Note: Refer to the diagrams of SMPS P.C.B. (Item 18.4) for location of the electrical components.




8.25.2. Assembly of Regulator Diode (D5802)

Step 1 Apply grease to the Heatsink Unit A.
Step 2 Fix the Regulator Diode (D5802) on SMPS P.C.B..
Caution: Ensure pins of the Regulator Diode (D5802) are properly seated on SMPS P.C.B..
Step 3 Fix and screw the Regulator Diode (D5802) to the Heatsink Unit A.

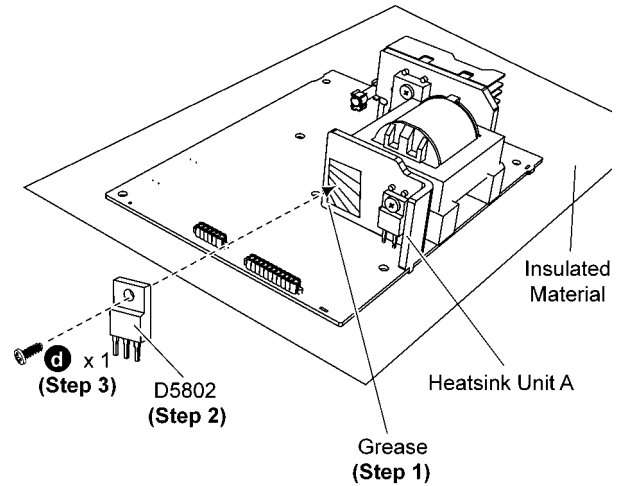Caution: Ensure the Regulator Diode (D5802) is tightly screwed to the Heatsink Unit A.



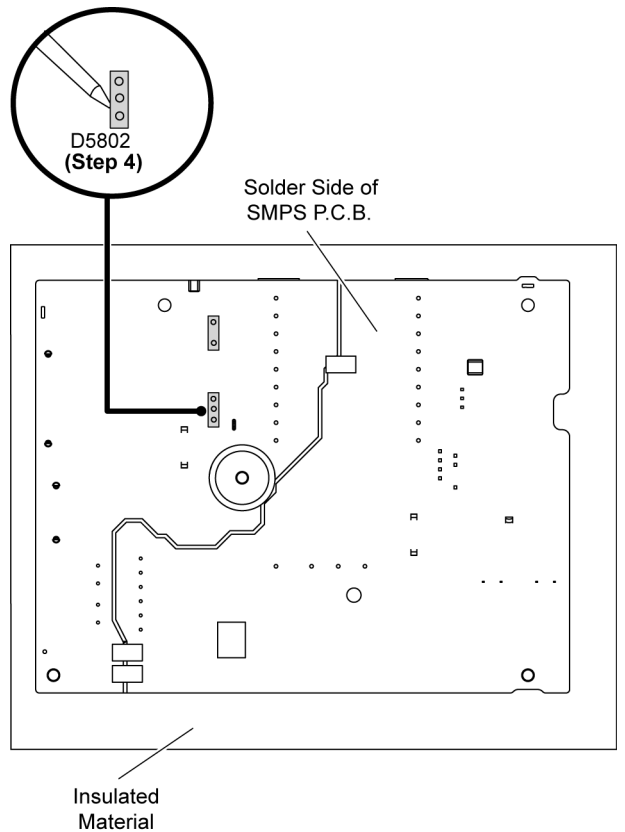Step 4 Solder pins of the Regulator Diode (D5802) on the solder side of SMPS P.C.B..
Caution: Ensure pins of the Regulator Diode (D5802) are properly seated and soldered on SMPS P.C.B..




8.26. Replacement of Regulator Diode (D5803)


• Refer to “Disassembly of SMPS P.C.B.”

8.26.1. Disassembly of Regulator Diode (D5803)

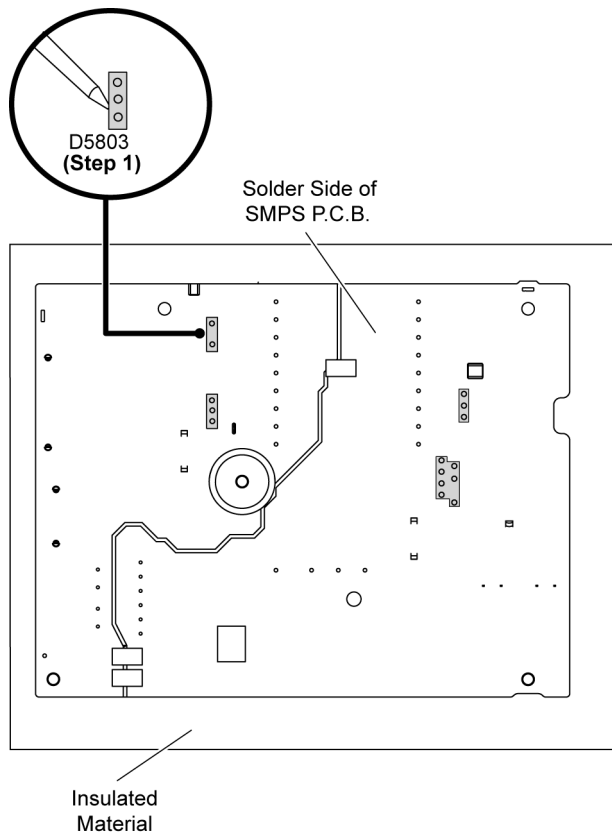Step 1 Desolder pins of the Regulator Diode (D5803) on the solder side of SMPS P.C.B..



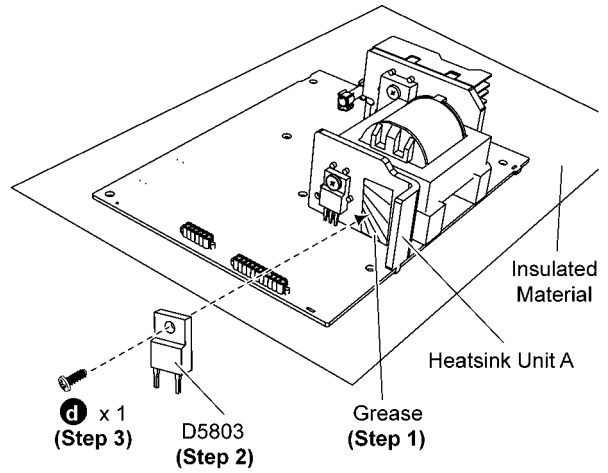Caution: Ensure the Regulator Diode (D5803) is tightly screwed to the Heatsink Unit A.



Step 4 Solder pins of the Regulator Diode (D5803) on the solder side of SMPS P.C.B..

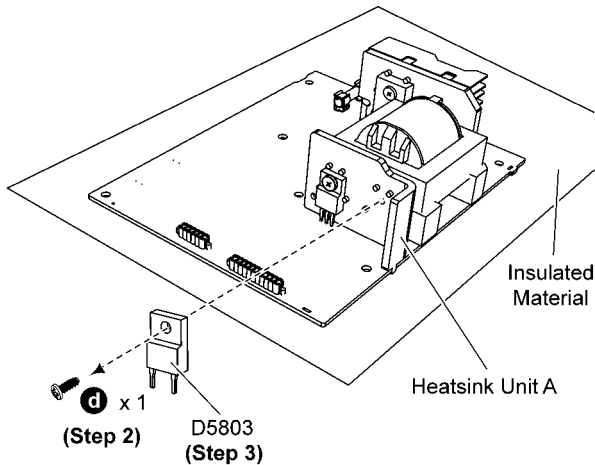
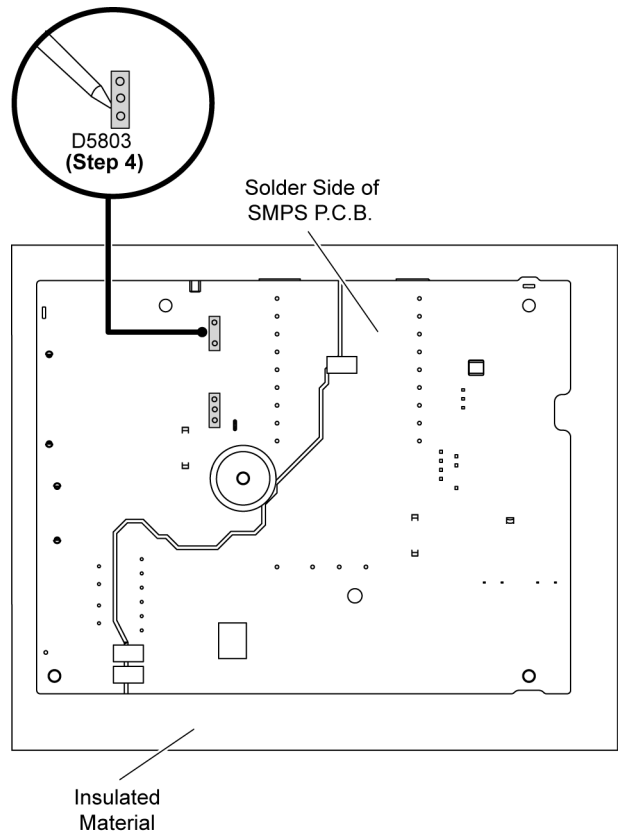
Caution: Ensure pins of the Regulator Diode (D5803) are properly seated before solder onto SMPS P.C.B..

Step 2 Remove 1 screw from the Regulator Diode (D5803).

Step 3 Remove the Regulator Diode (D5803) from the SMPS P.C.B..

Caution: Avoid touching the Heatsink Unit A due to its high temperature after prolonged use. Touching it may lead to injuries.

Note: Refer to the diagrams of SMPS P.C.B. (Item 18.4) for location of the electrical components.



8.26.2. Assembly of Regulator Diode (D5803)

Step 1 Apply grease to the Heatsink Unit A.

Step 2 Mount the Regulator Diode (D5803) on SMPS P.C.B..

Caution: Ensure pins of the Regulator Diode (D5803) are properly seated on SMPS P.C.B..

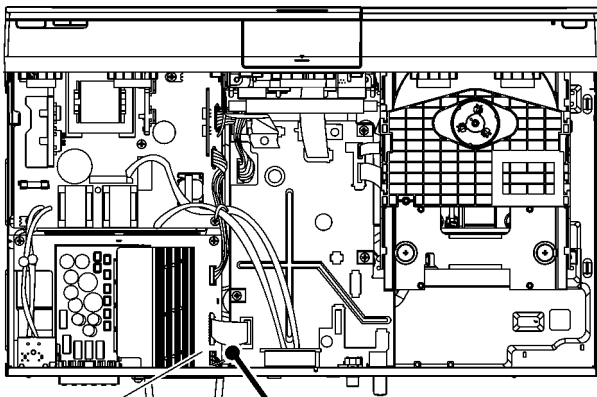
Step 3 Fix and screw the Regulator Diode (D5803) to the Heatsink Unit A.

8.27. Disassembly of Fan

• Refer to "Disassembly of Top Cabinet"


Step 1 Lift up the Wire Clamper.

Step 2 Detach the fan unit connector (CN5401) on D-Amp P.C.B..



D-Amp P.C.B.

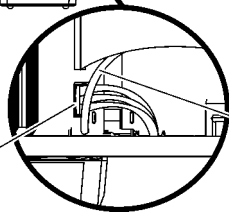
(Step 2)
CN5401



(Step 1)
Wire Clamper

Step 3 Remove 2 screws.

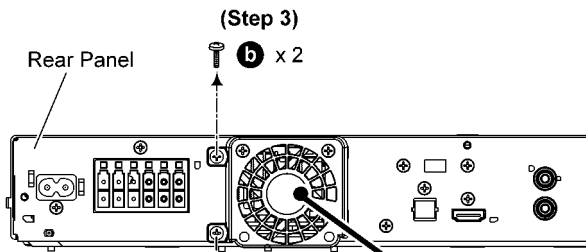
Step 4 Remove Fan Unit.



Rear Panel

(Step 3)
b x 2

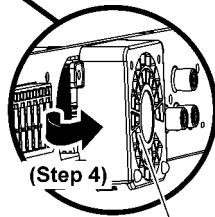
b



(Step 4)

Fan Unit

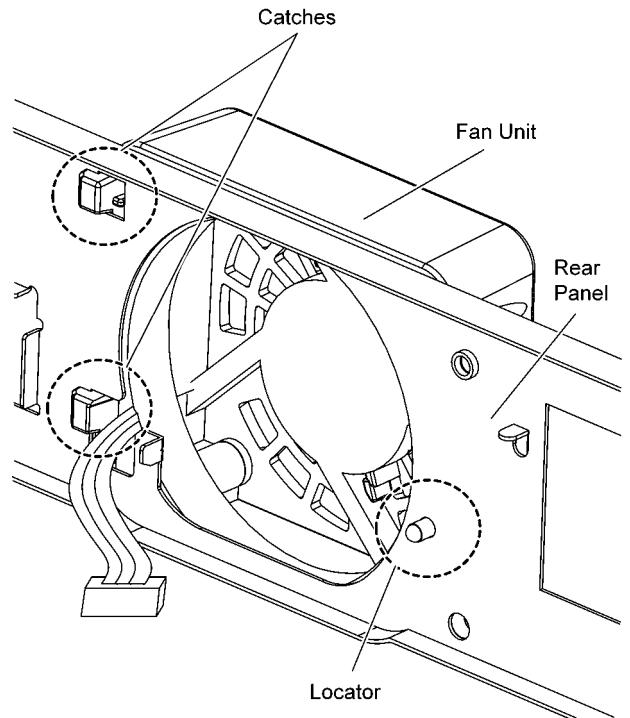Caution: During assembling, ensure Fan Unit is properly located & fully caught onto Rear Panel.




Catches

Fan Unit

Rear Panel

Locator

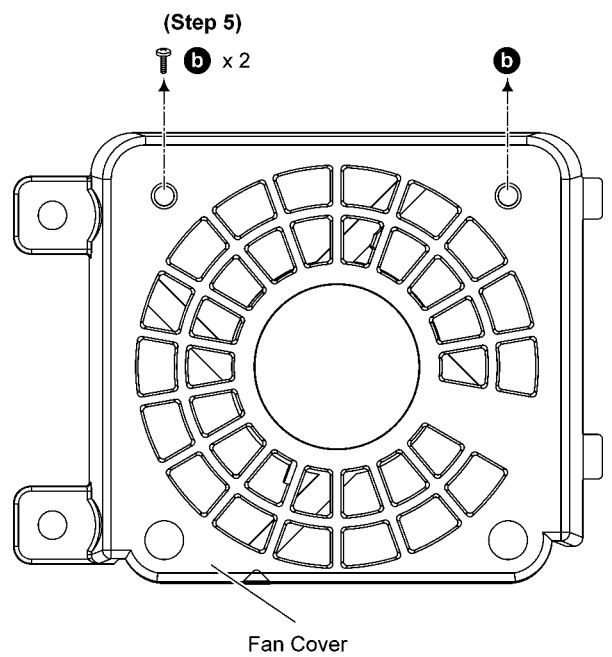Step 5 Remove 2 screws.



(Step 5)

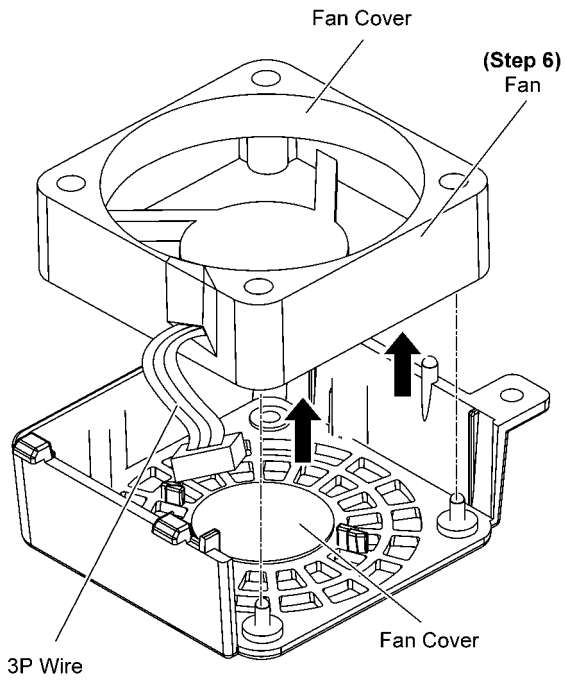
b x 2

b

Fan Cover

Step 6 Lift up to remove Fan.

Caution: During assembling, ensure that 3P Wire is positioned as diagram shown.






9 Assembling and Disassembling of Traverse Unit


9.1. Disassembly of Traverse Unit

- Refer to “Disassembly of DVD Mechanism Unit (DLS6E)”

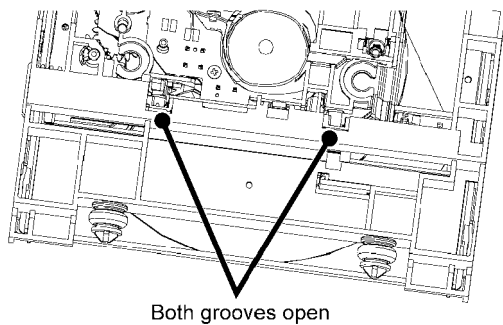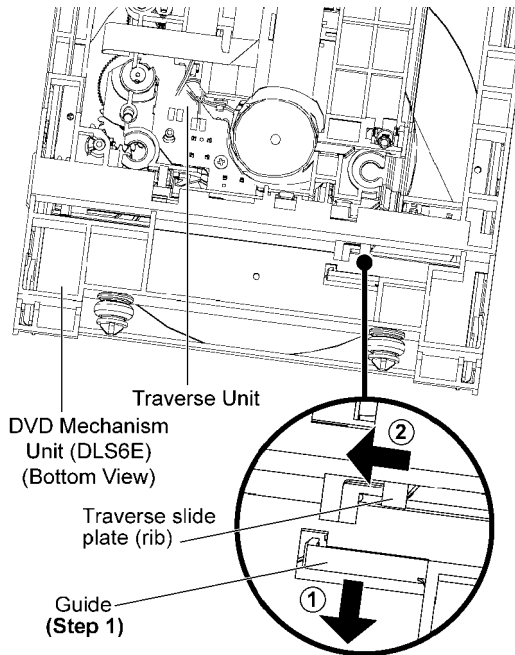
Step 1 Release the guide and slide the traverse slide plate (rib) as arrows shown.



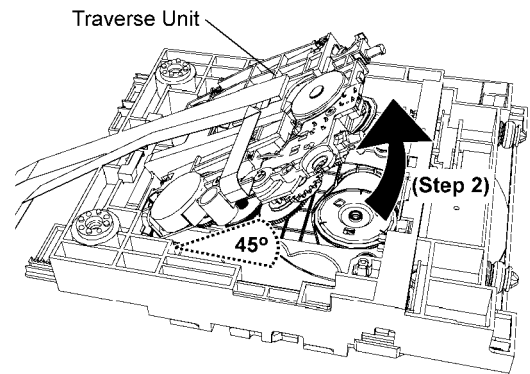
Step 2 Lift up the Traverse unit approximately 45° as shown.



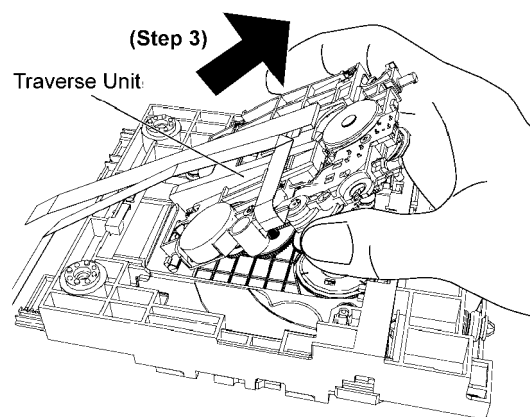Step 3 Slide out the Traverse unit as arrow shown.




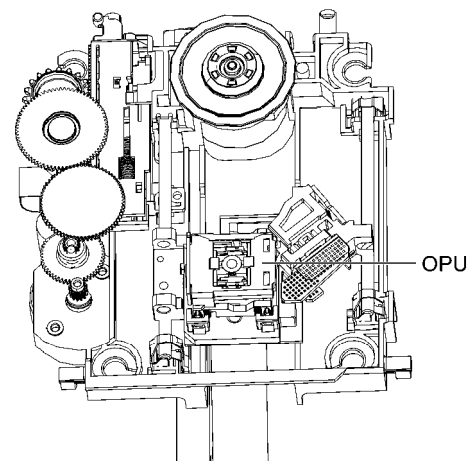Caution: Do not touch the surface of the Traverse unit and place it so that the OPU is on top.




9.2. Assembly of Traverse Unit

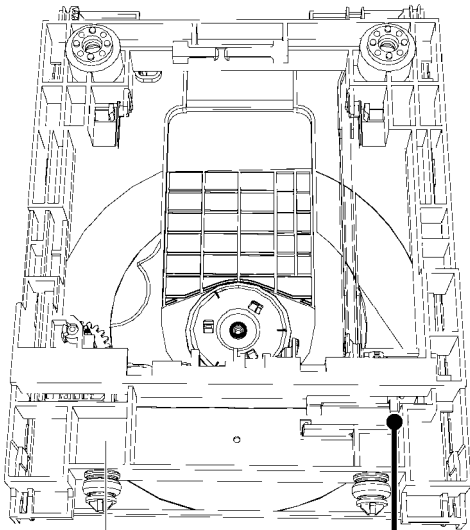Step 1 Release the guide and slide the traverse slide plate (rib) as arrows shown.





DVD Mechanism Unit (DLS6E)
(Bottom View)

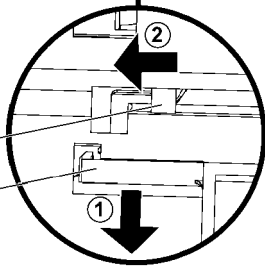Traverse slide plate (rib)
Guide
(Step 1)





Step 2 Slot the traverse unit approximately 45° into the mecha chassis as arrow shown.

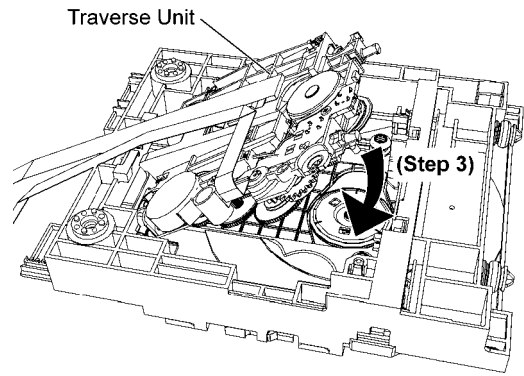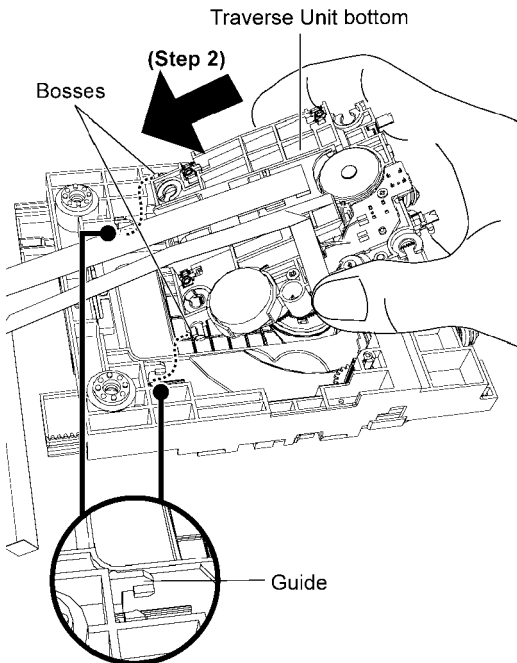Note: Ensure the bosses fix exactly onto the guides.



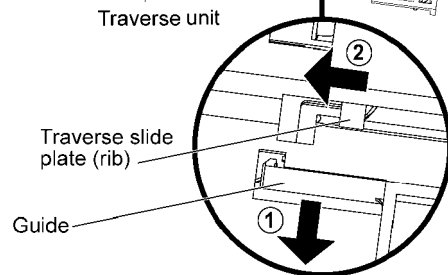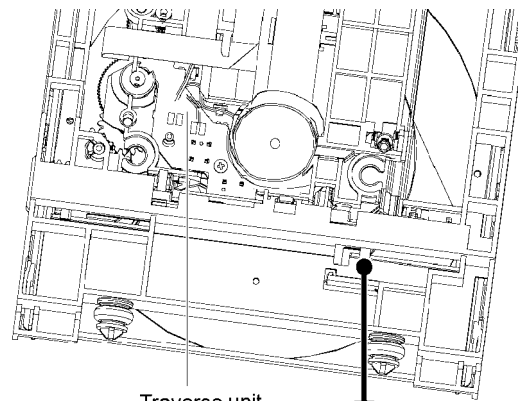Step 4 Release the guide and slide the traverse slide plate (rib) in the direction of arrows shown to lock in the traverse unit.



Step 3 Place down the traverse unit as arrow shown.

10 Service Position

Note: For description of the disassembly procedures, see the Section 8.

10.1. Checking & Repairing Main P.C.B.

10.1.1. Checking & Repairing of Side B of Main P.C.B.

Step 1 Remove Top Cabinet.

Step 2 Lift up Voltage Selector P.C.B..

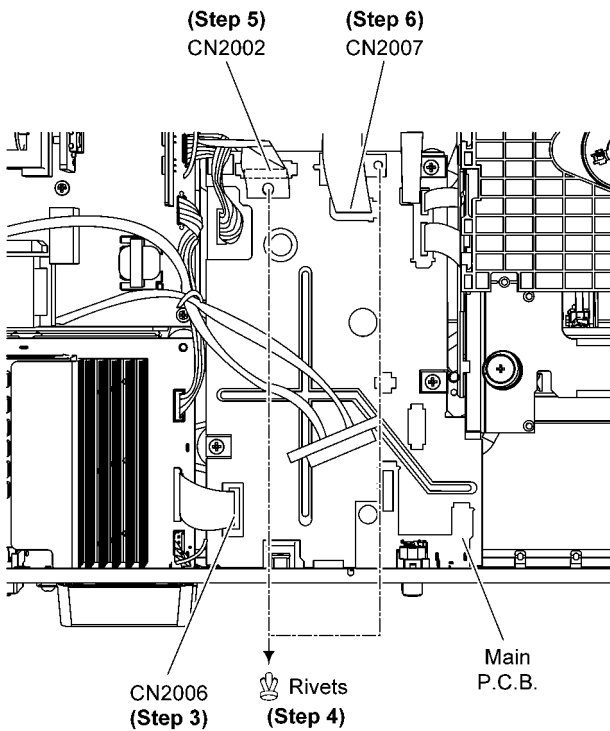
Step 3 Detach 18P FFC at the connector (CN2006) on Main P.C.B..

Step 4 Remove 2 rivets.

Caution: Keep the rivets in safe place, place it back during assembling.

Step 5 Detach 22P FFC at the connector (CN2002) on Main P.C.B..

Step 6 Detach 15P FFC at the connector (CN2007) on Main P.C.B..




Step 7 Detach 8P FFC at the connector (CN2000) on Main P.C.B..

Step 8 Detach 7P FFC at the connector (FP8251) on Main P.C.B..


Step 9 Detach 24P FFC at the connector (FP8531) on Main P.C.B..

Step 10 Lift up the wire clamber.

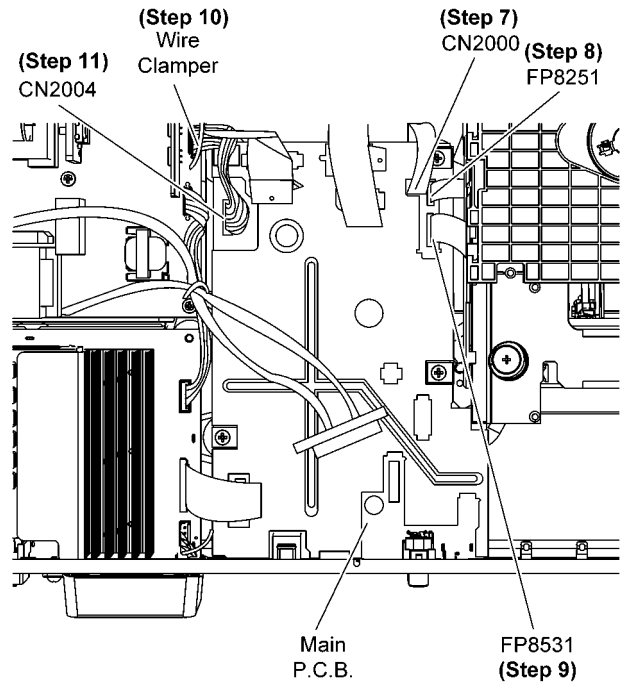
Step 11 Detach 10P Cable at the connector (CN2004) on Main P.C.B..



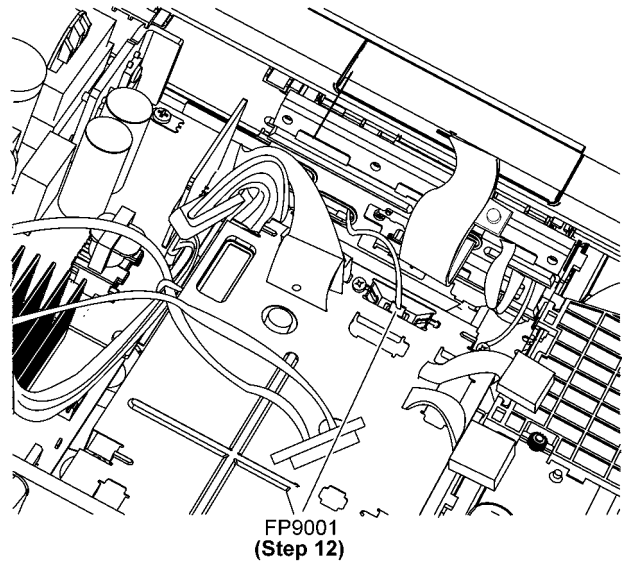
Step 12 Detach 10P wire at the connector (FP9001) on Main P.C.B..



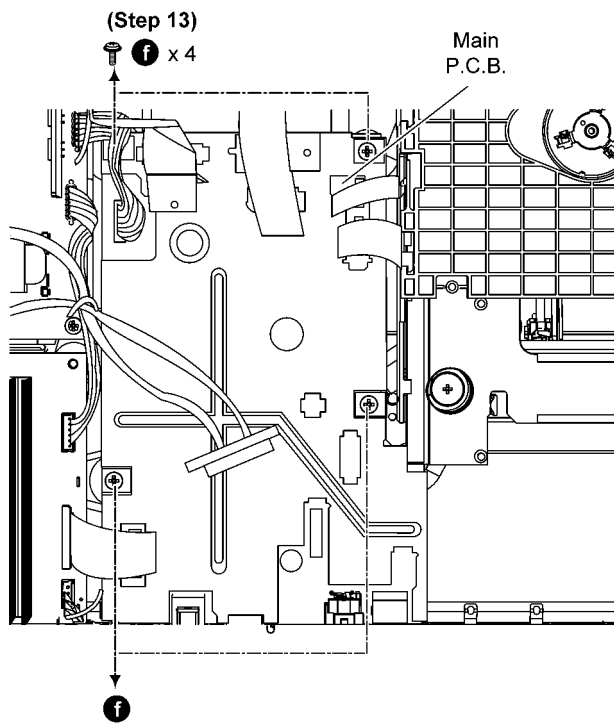
Step 13 Remove 4 screws on Main P.C.B..



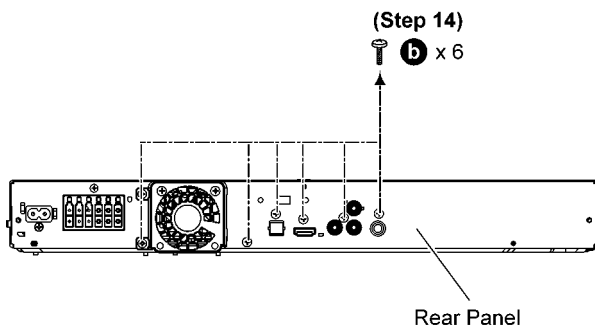
Step 14 Remove 6 screws.



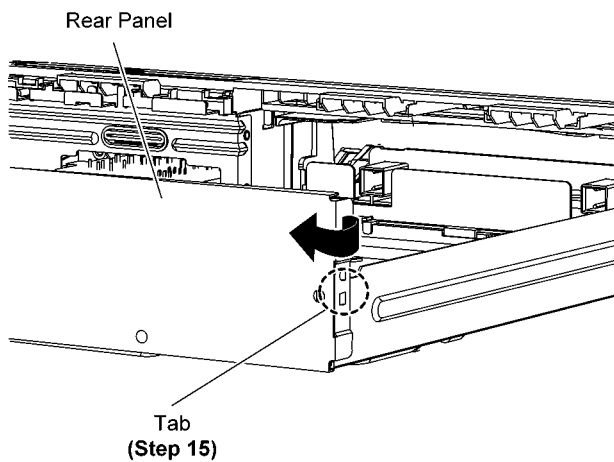Step 15 Release the tab of the right side of the Rear Panel in the direction of arrow.



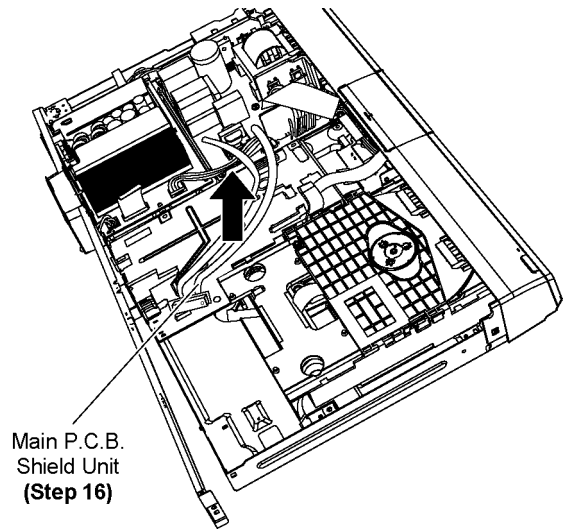Step 16 Lift up to remove Main P.C.B. Shield Unit.



Step 17 Connect 18P FFC to the connector (CN2006) on Main P.C.B..

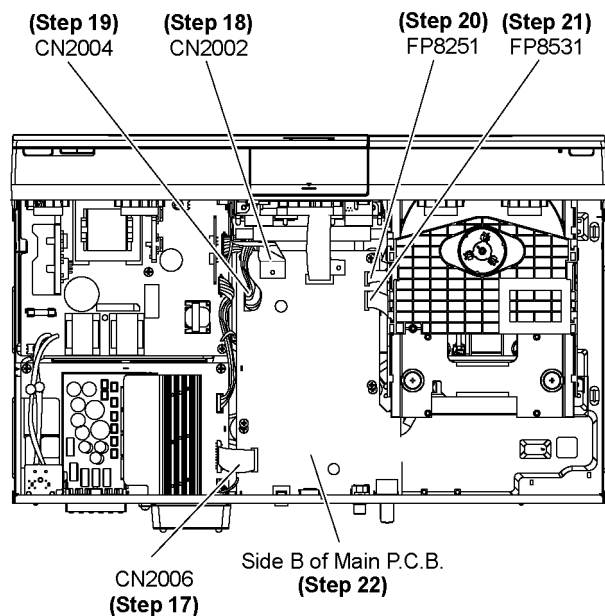
Step 18 Connect 22P FFC to the connector (CN2002) on Main P.C.B..

Step 19 Connect 10P Cable wire to the connector (CN2004) on Main P.C.B..

Step 20 Connect 7P FFC to the connector (FP8251) on Main P.C.B..

Step 21 Connect 24P FFC to the connector (FP8531) on Main P.C.B..

Step 22 Side B of Main P.C.B. can be checked & repaired at its original position.




10.1.2. Checking & Repairing of Side A of Main P.C.B.

• Refer to (Step 1) to (Step 19) of item 10.1.1.

Step 1 Remove DVD Mechanism Unit (DLS6E).

Step 2 Lift up the Main P.C.B..

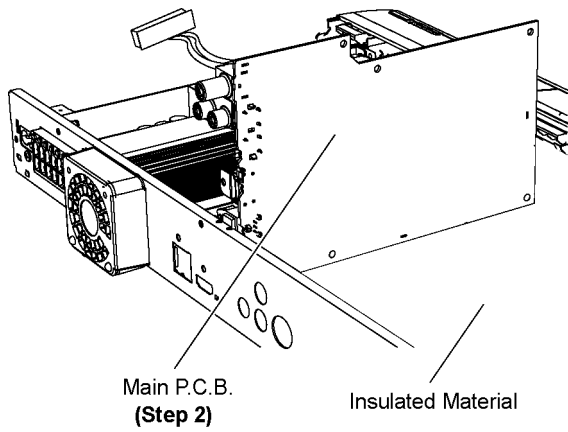
Step 3 Flip the Main P.C.B. according to diagram shown.




Step 4 Position DVD Mechanism Unit (DLS6E) according to diagram shown.

Step 5 Connect 7P FFC to the connector (FP8251) on Main P.C.B..

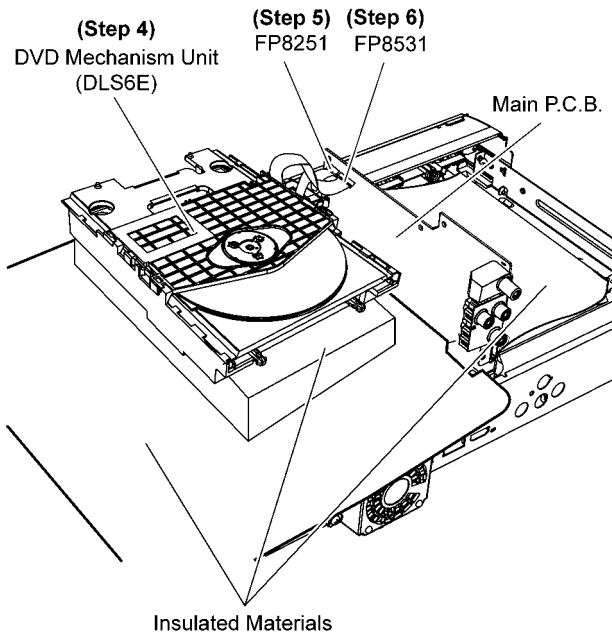Step 6 Connect 24P FFC to the connector (FP8531) on Main P.C.B..



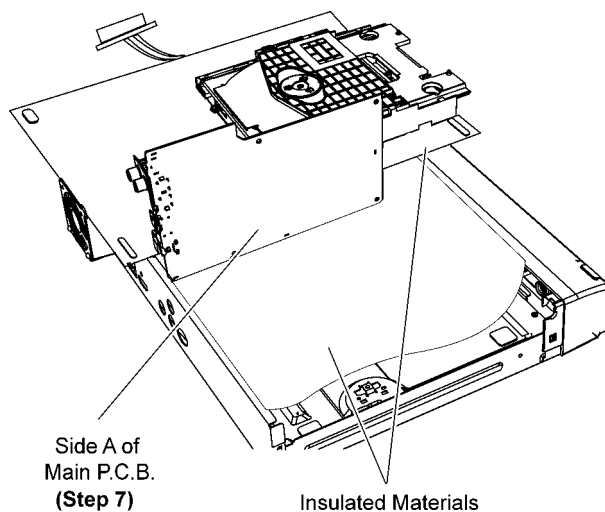Step 7 Proceed to check & repair side A of Main P.C.B..



10.2. Checking & Repairing D-Amp P.C.B.

10.2.1. Checking & Repairing of Side B of D-Amp P.C.B.

Step 1 Remove Top Cabinet.

Step 2 Remove D-Amp P.C.B..

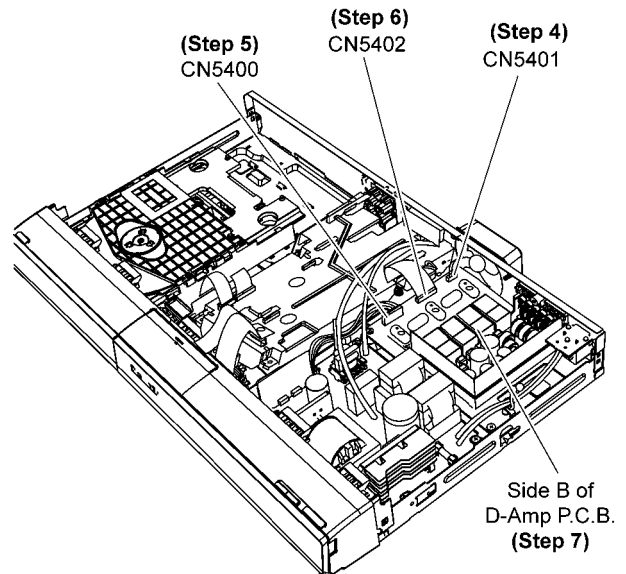
Step 3 Remove D-Amp Heatsink.

Step 4 Connect 3P wire at connector (CN5401) on D-Amp P.C.B..

Step 5 Connect 6P Cable wire at connector (CN5400) on D-Amp P.C.B..

Step 6 Connect 18P FFC at connector (CN5402) on D-Amp P.C.B..

Step 7 Proceed to check & repair side B of Main D-Amp P.C.B..




10.2.2. Checking & Repairing of Side A of D-Amp P.C.B.

Step 1 Remove Top Cabinet.


Step 2 Lift up the Wire Clamper.

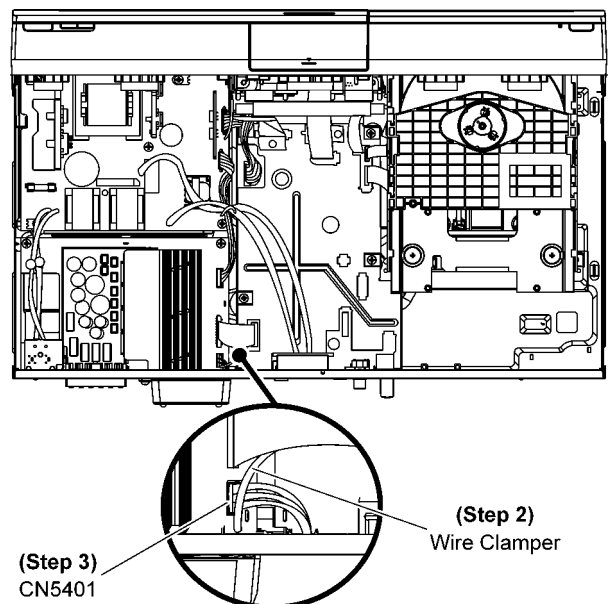Step 3 Detach the Fan Unit connector (CN5401) on D-Amp P.C.B..



Step 4 Twist the Wire Clamper to release 6P Cable.

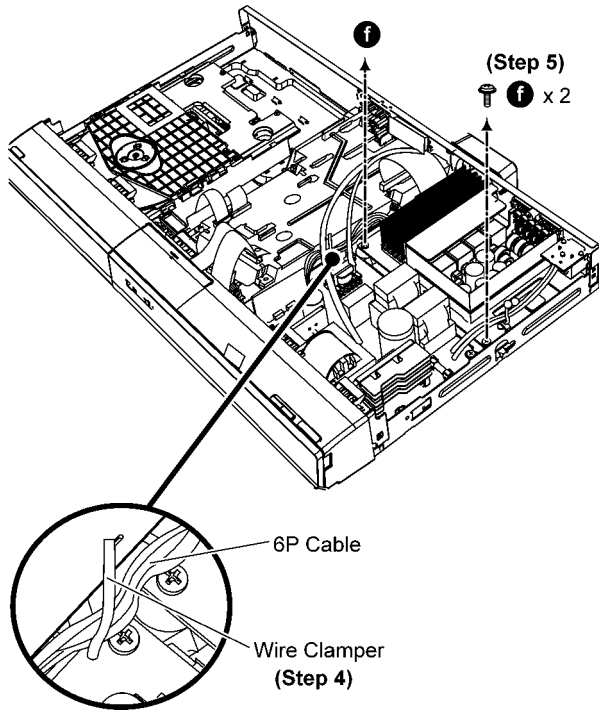
Step 5 Remove 2 screws.



Step 6 Remove 7 screws.

Step 7 Remove Fan Unit according to arrow shown.

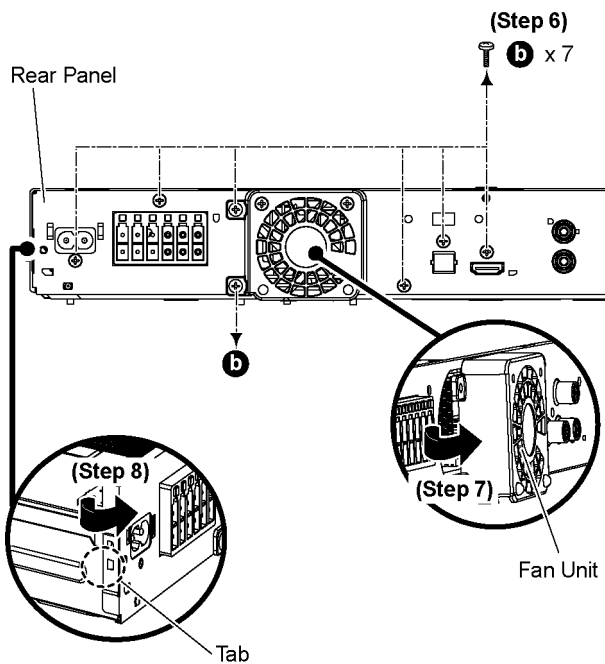
Step 8 Release tab at the side of the Rear Panel in the direction of arrow.



Step 9 Twist the Wire Holder.

Step 10 Release Red (TL10) & Black (TL20) wires from the Wire Holder.

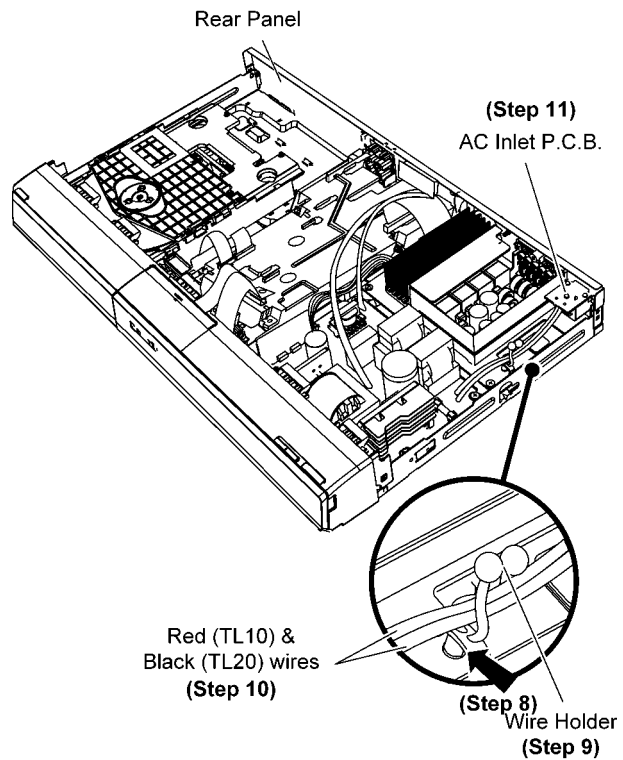
Step 11 Lift up AC Inlet P.C.B..



Step 12 Flip the D-Amp P.C.B. and position it according to diagram shown.

Step 13 Connect Fan Unit to connector (CN5401) on D-Amp P.C.B..

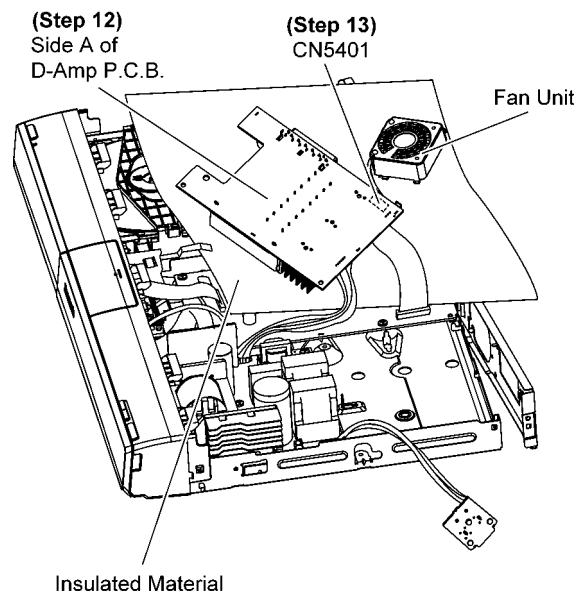
Step 14 Proceed to check & repair Side A of D-Amp P.C.B..




10.3. Checking & Repairing SMPS P.C.B.

Step 1 Remove Top Cabinet.

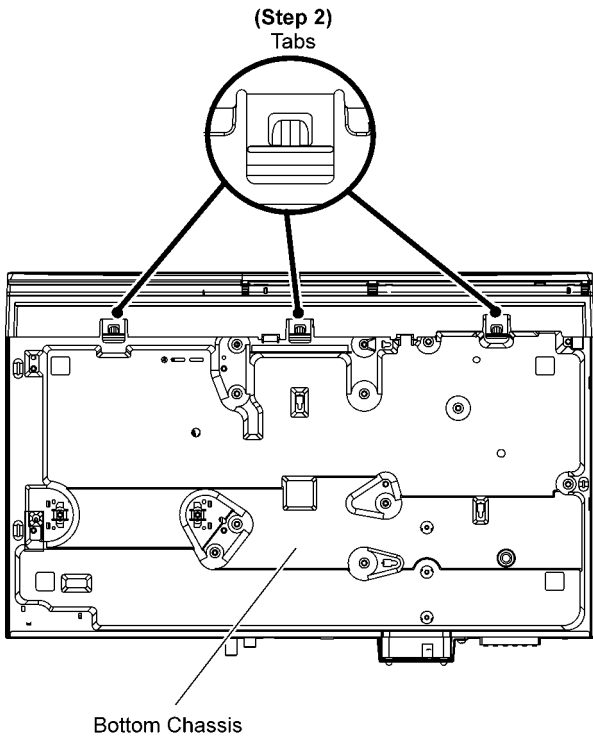
Step 2 Release the 3 tabs at the Bottom Chassis.



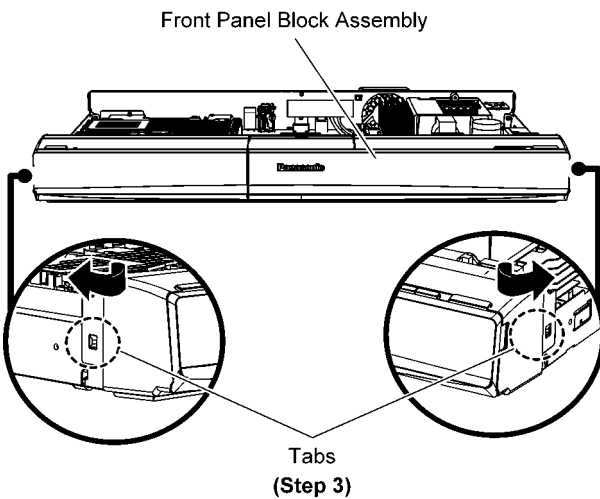
Step 3 Release the 2 tabs at each side of the Front Panel Block Assembly in the direction of arrow.



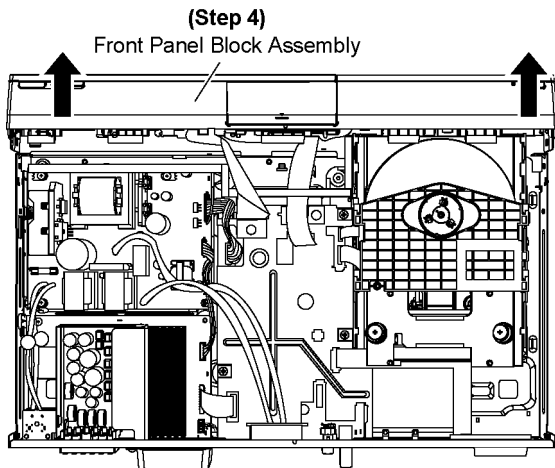Step 4 Slightly move Front Panel Block Assembly forward according to diagram shown.



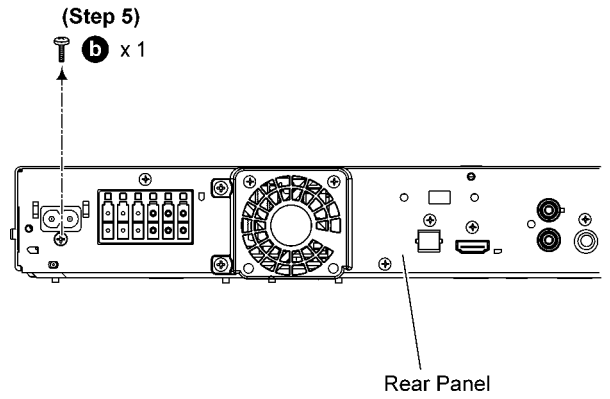
Step 5 Remove 1 screw.




Step 6 Twist the Wire Holder.

Step 7 Release Red (TL10) & Black (TL20) wires from the Wire Holder.

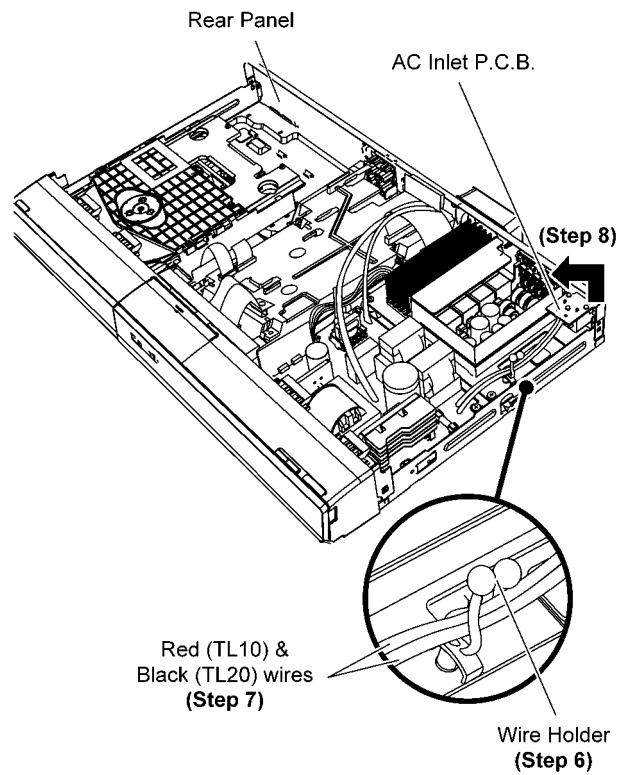
Step 8 Remove AC Inlet P.C.B. as arrow shown.



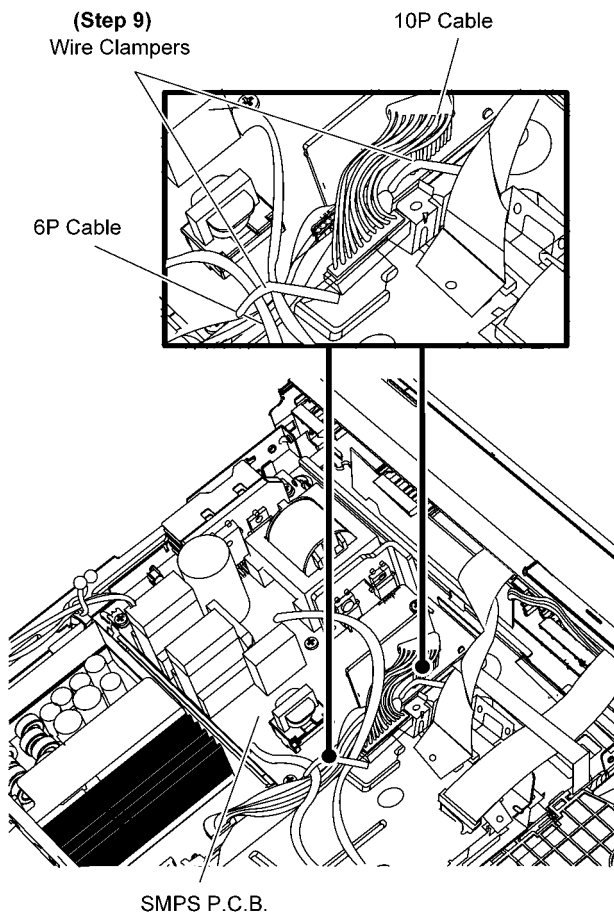
Step 9 Twist the Wire Clampers to release 6P (SMPS P.C.B. to D-Amp P.C.B.) & 10P (SMPS P.C.B. to Main P.C.B.) cables.



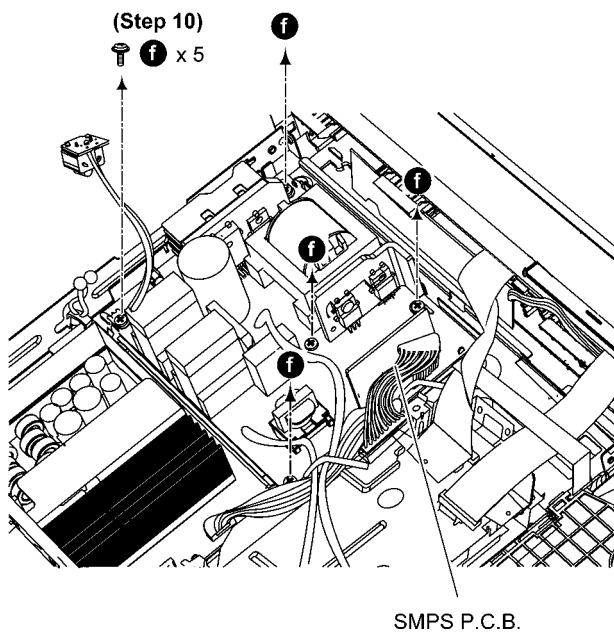Step 10 Remove 5 screws on SMPS P.C.B..




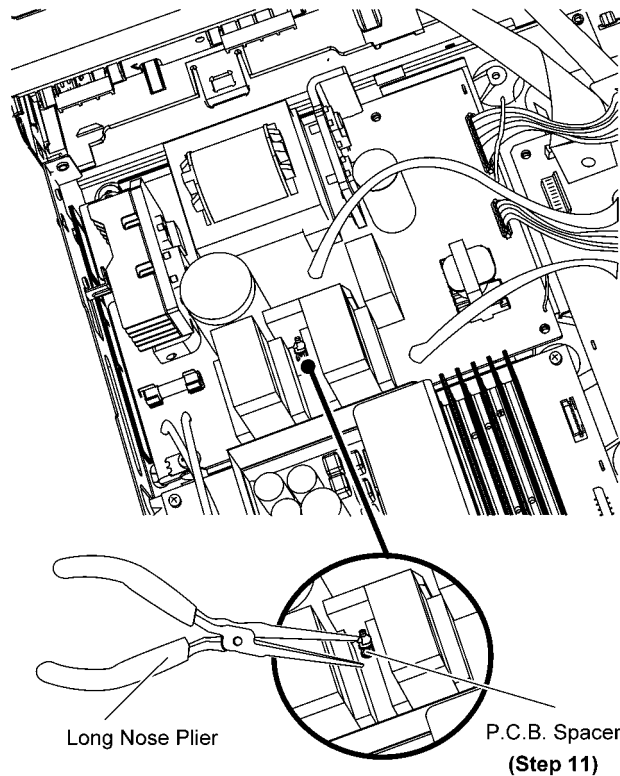Caution: During releasing P.C.B. Spacer, ensure that long nose plier avoid touching the electrical components.
Step 11 Release P.C.B. Spacer by using long nose plier.



Step 12 Flip the SMPS P.C.B. and position it according to diagram shown.

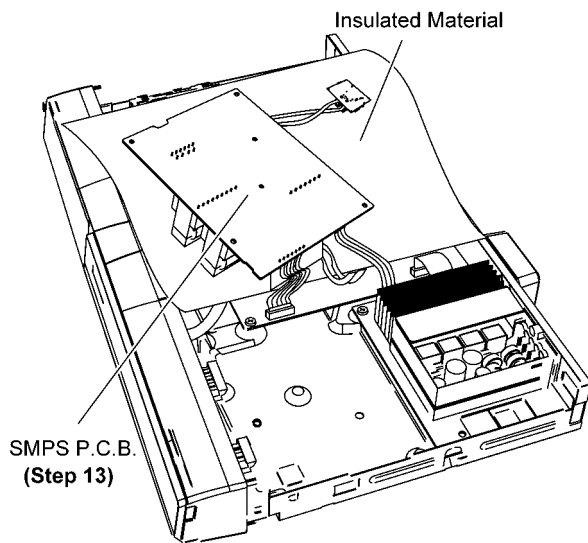Step 13 Proceed to check & repair SMPS P.C.B..




10.4. Checking & Repairing FL P.C.B.


Step 1 Remove Top Cabinet.

Step 2 Remove Front Panel Block Assembly.

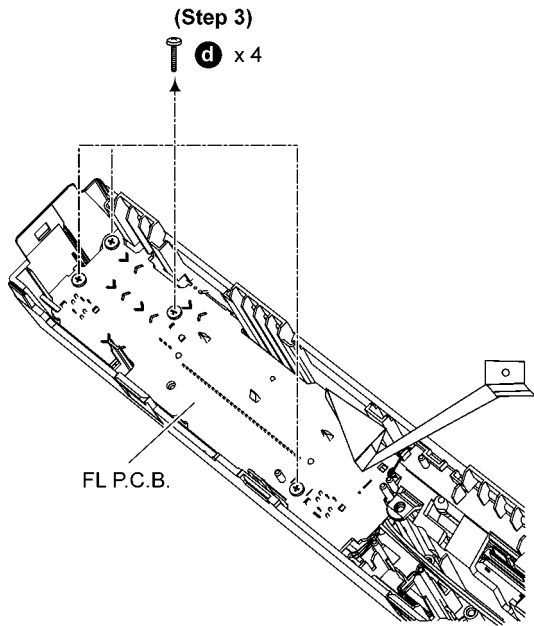
Step 3 Remove 4 screws.



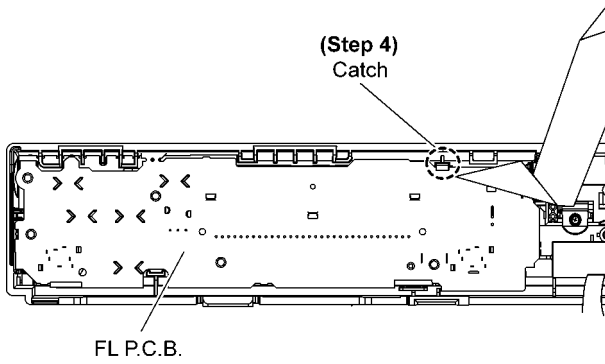
Step 4 Release 1 catch on FL P.C.B..



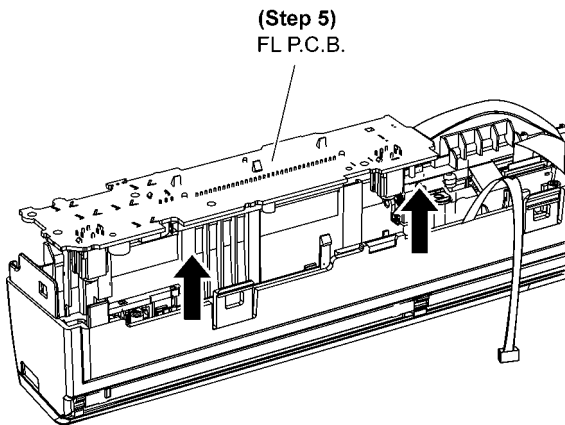
Step 5 Lift up FL P.C.B..



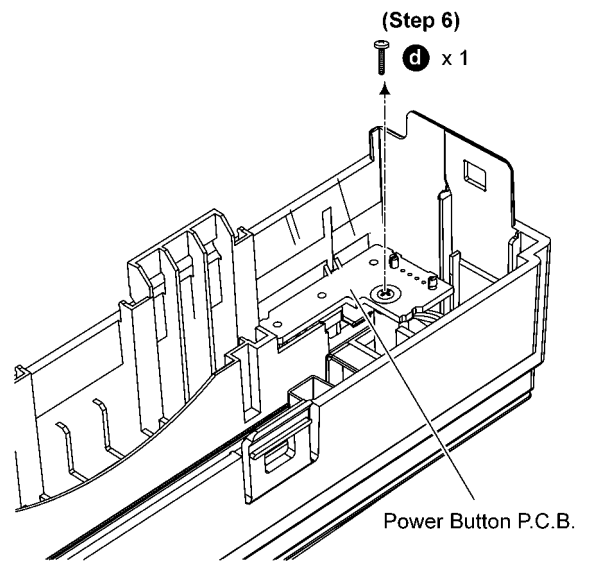Step 6 Remove 1 screw.




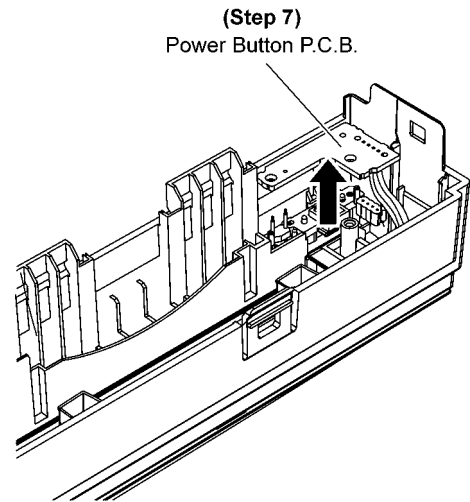Step 7 Lift up Power Button P.C.B..



Step 8 Connect 22P FFC to the connector (CN2002) on Main P.C.B..

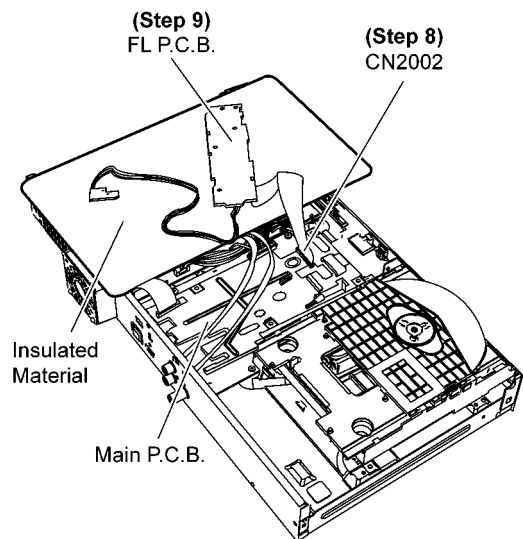Step 9 Proceed to check & repair FL P.C.B..



11 Voltage & Waveform Chart

Note:

- Indication Voltage Values are in standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard.
- Therefore, there may exist some errors in voltage values, depending on the internal impedance of the DC circuit tester.
- Circuit voltage and waveform described herein shall be regarded as reference information when probing defect point because it may differ from actual measuring value due to difference of Measuring instrument and its measuring condition and product itself.

11.1. Main P.C.B. (1/7)

REF NO.	IC2001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	1.5	1.5	0.8	0	0	0	0	0	0	0	0	3.2	3.2	3.2	3.2	3.2	1.5	0	3.2	0
STANDBY	1.5	1.5	0	0	0	0	0	0	0	0	0	3.0	0	3.0	3.0	3.0	1.4	0	2.9	0

REF NO.	IC2001																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	0	0	0	1.4	1.5	0	1.3	3.1	0	0	0	0	0	0	0.6	1.6	1.6	1.2	3.3	1.7
STANDBY	0	0	0	1.4	1.4	0	1.2	3.0	0	0	0	0	0	0	0	1.5	1.5	0	3.0	1.5

REF NO.	IC2091									
MODE	1	2	3	4	5	6	7	8		
CD PLAY	3.3	0	0	1.9	5.2	0	0	5.2		
STANDBY	3.3	0	0	1.9	5.0	0	0	5.2		

REF NO.	IC2151															
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
CD PLAY	0	0	0	2.5	0	5.1	3.4	0	0.7	1.7	1.5	1.7	3.3	0	0	0
STANDBY	0	0	0	0	0	5.2	3.4	0	0	1.7	1.5	1.7	0	0	0	0

REF NO.	IC2300																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	0	0	0	3.3	0	0	0	0	1.2	1.6	0	1.6	0	1.3	3.3	3.3	0	2.1	1.4
STANDBY	0	0	0	0	3.3	0	0	0	0	0.8	1.6	0	1.6	0	1.4	3.3	3.3	0	2.1	1.4

REF NO.	IC2300																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	2.2	3.3	0	3.3	3.3	3.3	1.4	2.9	3.3	3.3	0	3.2	3.2	3.3	0	0	3.3	3.3	0	3.3
STANDBY	2.2	3.3	0	3.3	3.3	3.3	1.4	2.9	3.3	3.3	0	3.2	3.2	0	0	0	3.3	3.3	0	3.3

REF NO.	IC2300																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
CD PLAY	0	3.3	3.3	1.4	3.3	3.3	3.3	0	0	3.2	0	3.3	0	0	0	3.3	3.3	3.3	0	0
STANDBY	0	3.3	3.3	1.4	3.3	3.3	3.3	0	0	3.2	0	3.3	0	0	3.3	3.3	3.3	3.3	0	3.3

REF NO.	IC2300																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
CD PLAY	0	3.3	0.1	0	3.3	3.3	3.3	3.3	3.3	0	3.3	0	0	3.3	0	0	1.6	2.8	3.0	3.8
STANDBY	0	3.3	0.1	0	0	0	3.3	0	3.3	0	3.3	0	0	3.3	0	0	1.6	2.8	3.0	3.8

REF NO.	IC2300																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
CD PLAY	0	0	3.3	3.3	0	3.3	2.3	0.3	0	3.3	1.9	1.8	1.4	0	0.8	0	0	3.3	3.3	0
STANDBY	0	0	3.3	0	0	3.3	3.3	0.4	0	3.3	1.9	1.8	1.4	0	0.8	0	0	3.2	3.2	0

REF NO.	IC2301							
MODE	1	2	3	4	5	6	7	8
CD PLAY	0	0	0	0	0	1.1	0	3.3
STANDBY	0	0	0	0	0	1.1	0	3.3

SA-PT580GA/GS MAIN P.C.B.

11.2. Main P.C.B. (2/7)

REF NO.	IC2302																			
MODE	1	2	3																	
CD PLAY	3.3	0	6.0																	
STANDBY	3.3	0	6.0																	

REF NO.	IC2400																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	3.3	0	3.3	3.3	0	0	0	0	0	3.3	3.3	3.3	3.3	0	0	0	0	0	0
STANDBY	0	3.3	0	3.3	3.3	0	0	0	0	0	3.3	3.3	3.3	3.3	0	0	0	0	0	0

REF NO.	IC2510																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	5.0	0	0	2.2	5.1	0	0	1.6	2.3	0	0	0	0	0	0	5.0	0	0	0	0
STANDBY	5.0	0	0	2.3	5.1	0	0	1.6	2.3	0	0	0	0	0	0	5.0	0	0	0	0

REF NO.	IC2510																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32								
CD PLAY	2.7	0	1.4	1.4	0	1.5	1.5	0	1.5	1.7	0	2.4								
STANDBY	3.2	0	2.0	2.0	0	1.5	1.5	0	1.6	1.6	0	2.4								

REF NO.	IC2600																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	0	0	0	-6.7	0	0	0	6.7												
STANDBY	0	0	0	-6.8	0	0	0	6.7												

REF NO.	IC2601																			
MODE	1	2	3	4	5															
CD PLAY	2.1	0	5.2	2.8	2.8															
STANDBY	2.1	0	5.2	2.8	2.8															

REF NO.	IC2602																			
MODE	1	2	3	4	5															
CD PLAY	5.0	0	0	3.6	0															
STANDBY	5.0	0	0	3.6	0															

REF NO.	IC2800																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
CD PLAY	0	0	2.5	0	0	0	-6.6	0	0	6.5	0.2	0	2.5	0	0	6.6				
STANDBY	0	0	2.5	0	0	0	-6.8	0	0	6.5	0.1	0	2.5	0	0	6.6				

REF NO.	IC2801																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	3.5	3.5	3.5	0	3.5	3.5	3.5	6.9												
STANDBY	3.5	3.5	3.5	0	3.5	3.5	3.5	6.9												

REF NO.	IC2802																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	3.5	3.5	3.5	0	3.5	3.5	3.5	6.9												
STANDBY	3.5	3.5	3.5	0	3.5	3.5	3.5	6.9												

SA-PT580GA/GS MAIN P.C.B.

11.3. Main P.C.B. (3/7)

REF NO.	IC2952																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	0.3	0	0	3.3	3.3	3.3	3.3	1.5	3.3	3.3	0	0.3	0.3	0.3	0	0.3	3.3	0	0
STANDBY	0	0.3	0	0	3.3	3.3	3.3	3.3	1.5	3.3	3.3	0	0.3	0.3	0.3	0	0.3	3.3	0	0

REF NO.	IC3901																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	0	0	0	1.2	1.4	0.1	2.8	3.3	0.1	0.1	0.1	3.3	0.1	0.1	0.1	3.4	0.1	0.1	0.1
STANDBY	0	0	0	0	1.2	1.4	0.1	2.8	3.3	0.1	0.1	0.1	3.3	0.1	0.1	0.1	3.4	0.1	0.1	0.1

REF NO.	IC3901																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	3.4	0.1	0.1	0.1	3.4	1.3	0.1	3.4	0	0	0	0	1.7	3.4	0.9	0.1	0.1	0.9	0.1	3.4
STANDBY	3.4	0.1	0.1	0.1	3.4	1.3	0.1	3.4	0	0	0	0	1.7	3.4	0.9	0.1	0.1	0.9	0.1	3.4

REF NO.	IC3901																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
CD PLAY	1.7	1.3	1.7	0.1	1.7	0.1	1.3	0.1	0.1	0.1	0.1	3.3	0.1	0.1	1.3	0.1	0.1	0.1	0.1	0.1
STANDBY	1.7	1.3	1.7	0.1	1.7	0.1	1.3	0.1	0.1	0.1	0.1	3.3	0.1	0.1	1.3	0.1	0.1	0.1	0.1	0.1

REF NO.	IC3901																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
CD PLAY	0.1	0.1	0.1	0	0	0.1	0.1	0.1	0.1	3.4	0.1	0.1	0.1	0.1	1.3	0.1	0.1	0.1	0.1	0.1
STANDBY	0.1	0.1	0.1	0	0	0.1	0.1	0.1	0.1	3.4	0.1	0.1	0.1	0.1	1.3	0.1	0.1	0.1	0.1	0.1

REF NO.	IC3901																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
CD PLAY	0.1	0.1	0.1	3.4	1.3	0.1	1.7	0.1	0.2	0.7	0.1	0.7	0.6	0.3	0.8	0.1	0.1	0.1	0.1	3.4
STANDBY	0.1	0.1	0.1	3.4	1.3	0.1	1.7	0.1	0.2	0.7	0.1	0.7	0.6	0.3	0.8	0.1	0.1	0.1	0.1	3.4

REF NO.	IC3901																			
MODE	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120
CD PLAY	0.1	1.3	0.1	0.1	0.1	3.4	3.4	3.4	1.3	0.1	1.8	0.1	3.3	3.3	3.3	1.3	1.7	0.1	0.1	3.4
STANDBY	0.1	1.3	0.1	0.1	0.1	3.4	3.4	3.4	1.3	0.1	1.8	0.1	3.3	3.3	3.3	1.3	1.7	0.1	0.1	3.4

REF NO.	IC3901																			
MODE	121	122	123	124	125	126	127	128												
CD PLAY	3.4	0.1	1.3	3.4	0.1	1.4	0	0												
STANDBY	3.4	0.1	1.3	3.4	0.1	1.4	0	0												

REF NO.	IC3952																			
MODE	1	2	3	4	5															
CD PLAY	8.5	0	1.3	4.9	8.8															
STANDBY	8.5	0	1.3	4.9	8.8															

REF NO.	IC3953																			
MODE	1	2	3	4	5	6														
CD PLAY	1.6	0	0	3.4	3.4	1.6														
STANDBY	1.6	0	0	3.4	3.4	1.6														

SA-PT580GA/GS MAIN P.C.B.

11.4. Main P.C.B. (4/7)

REF NO.	IC8001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	0	0	3.3	0	3.4	0	3.3	2.1	0.9	0.9	1.7	1.0	1.2	0	3.4	1.2	1.2	0	1.2
STANDBY	0	0	0	3.3	0	3.4	0	3.3	2.1	0.9	0.9	1.7	1.0	1.2	0	3.4	1.2	1.2	0	1.2
REF NO.	IC8001																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	1.6	0.7	2.2	1.6	2.3	2.0	0.9	1.2	2.0	1.1	3.4	0	3.4	1.7	1.3	2.1	2.1	2.1	1.7	1.7
STANDBY	1.6	0.7	2.2	1.6	2.3	2.0	0.9	1.2	2.0	1.1	3.4	0	3.4	1.7	1.3	2.1	2.1	2.1	1.7	1.7
REF NO.	IC8001																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
CD PLAY	1.7	1.7	1.7	0	1.2	0	3.4	3.4	3.4	1.6	0	3.4	3.3	3.4	3.4	3.4	3.4	3.4	0.3	3.3
STANDBY	1.7	1.7	1.7	0	1.2	0	3.4	3.4	3.4	1.6	0	3.4	3.3	3.4	3.4	3.4	3.4	3.4	0.3	3.3
REF NO.	IC8001																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
CD PLAY	1.6	0	0	0	1.4	2.0	1.7	0	3.4	3.3	0	3.4	3.4	0	0.3	0	0	3.3	3.3	3.3
STANDBY	1.6	0	0	0	1.4	2.0	1.7	0	3.4	3.3	0	3.4	3.4	0	0.3	0	0	3.3	3.3	3.3
REF NO.	IC8001																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
CD PLAY	0	0	1.2	3.3	0.9	2.4	0	1.9	0	0.5	1.7	3.3	1.4	1.4	1.8	1.8	1.7	1.7	1.6	1.6
STANDBY	0	0	1.2	3.3	0.9	2.4	0	1.9	0	0.5	1.7	3.3	1.4	1.4	1.8	1.8	1.7	1.7	1.6	1.6
REF NO.	IC8001																			
MODE	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120
CD PLAY	0	0	0.2	0	0.2	2.4	3.3	0	2.1	1.6	2.3	2.3	2.3	2.2	2.2	0	0	0	0	1.7
STANDBY	0	0	0.2	0	0.2	2.4	3.3	0	2.1	1.6	2.3	2.3	2.3	2.2	2.2	0	0	0	0	1.7
REF NO.	IC8001																			
MODE	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140
CD PLAY	2.1	1.6	1.7	0	1.7	1.7	3.3	0.8	0.8	0.4	3.2	2.3	0.9	1.0	2.3	0	0.4	0.7	0	3.2
STANDBY	2.1	1.6	1.7	0	1.7	1.7	3.3	0.8	0.8	0.4	3.2	2.3	0.9	1.0	2.3	0	0.4	0.7	0	3.2
REF NO.	IC8001																			
MODE	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160
CD PLAY	3.2	0	0	0	0	3.2	1.5	1.6	1.6	0.8	1.6	0	3.2	1.4	1.5	0	1.2	3.1	3.2	3.2
STANDBY	3.2	0	0	0	0	3.2	1.5	1.6	1.6	0.8	1.6	0	3.2	1.4	1.5	0	1.2	3.1	3.2	3.2
REF NO.	IC8001																			
MODE	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180
CD PLAY	3.1	3.1	3.1	3.0	0	3.2	3.1	3.2	3.2	3.2	3.2	3.2	0	3.2	3.0	3.0	3.1	3.1	3.0	3.0
STANDBY	3.1	3.1	3.1	3.0	0	3.2	3.1	3.2	3.2	3.2	3.2	3.2	0	3.2	3.0	3.0	3.1	3.1	3.0	3.0
REF NO.	IC8001																			
MODE	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200
CD PLAY	3.2	0	1.5	3.2	1.5	0	1.2	3.3	3.1	3.0	3.2	0	1.9	0	0	3.2	1.7	0	0	1.4
STANDBY	3.2	0	1.5	3.2	1.5	0	1.2	3.3	3.1	3.0	3.2	0	1.9	0	0	3.2	1.7	0	0	1.4

SA-PT580GA/GS MAIN P.C.B.

11.5. Main P.C.B. (5/7)

REF NO.	IC8001																			
MODE	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216				
CD PLAY	0.1	1.6	0.5	0	3.1	1.7	0.5	1.5	1.4	0	0	0	3.2	2.6	0	0				
STANDBY	0.1	1.6	0.5	0	3.1	1.7	0.5	1.5	1.4	0	0	0	3.2	2.6	0	0				

REF NO.	IC8051																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	3.4	3.2	3.4	3.2	3.2	3.2	3.1	3.4	3.2	3.2	0.1	3.2	0.1	3.0	3.4	3.3	3.3	3.3	3.3	1.9
STANDBY	3.4	3.2	3.4	3.2	3.2	3.2	3.1	3.4	3.2	3.2	0.1	3.2	0.1	3.0	3.4	3.3	3.3	3.3	3.3	1.9

REF NO.	IC8051																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	1.6	0.1	0.2	0.5	0.6	1.5	3.4	0.1	0	1.9	1.7	1.6	0.1	0.1	0.1	0.1	3.4	1.6	2.9	0
STANDBY	1.6	0.1	0.2	0.5	0.6	1.5	3.4	0.1	0	1.9	1.7	1.6	0.1	0.1	0.1	0.1	3.4	1.6	2.9	0

REF NO.	IC8051																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54						
CD PLAY	0.1	3.2	3.4	3.2	3.2	0.1	3.2	3.2	3.4	3.2	3.1	0.1	3.1	0.1						
STANDBY	0.1	3.2	3.4	3.2	3.2	0.1	3.2	3.2	3.4	3.2	3.1	0.1	3.1	0.1						

REF NO.	IC8111																			
MODE	1	2	3	4	5	6	7													
CD PLAY	5.2	0	5.2	0	0.9	3.4	1.2													
STANDBY	4.9	0	5.2	0	0.9	3.4	1.2													

REF NO.	IC8251																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	1.5	1.6	1.6	2.2	2.2	2.1	0	4.8	3.1	0	2.2	2.6	2.3	2.6	4.1	4.2	5.5	2.8	0	3.3
STANDBY	1.7	1.7	1.7	2.0	3.6	3.6	0	5.2	0	0	2.6	2.6	2.6	2.6	4.2	4.2	3.9	3.9	0	3.4

REF NO.	IC8251																			
MODE	21	22	23	24	25	26	27	28	29	30										
CD PLAY	8.8	8.7	1.8	1.6	1.6	1.6	3.3	2.7	0	0										
STANDBY	9.0	8.9	1.7	1.7	1.7	1.7	0	0	0	0										

REF NO.	IC8422																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16				
CD PLAY	0	0	0	2.5	0	5.1	3.4	0	0.7	1.7	1.5	1.7	3.3	0	0	0				
STANDBY	0	0	0	0	0	5.2	3.4	0	0	1.7	1.5	1.7	0	0	0	0				

REF NO.	IC8601																			
MODE	1	2	3	4																
CD PLAY	3.3	1.2	0	0																
STANDBY	3.3	1.2	0	0																

REF NO.	IC8606																			
MODE	1	2	3	4	5															
CD PLAY	3.3	3.4	0	0	0															
STANDBY	3.3	3.4	0	0	0															

SA-PT580GA/GS MAIN P.C.B.

11.6. Main P.C.B. (6/7)

REF NO.	IC8611																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	0	0	0	0	3.3	3.3	0	3.4												
STANDBY	0	0	0	0	3.3	3.3	0	3.4												
REF NO.	IC8651																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0.6	2.3	1.7	2.3	1.9	0.9	1.2	2.1	1.0	0.7	3.4	3.3	3.4	3.4	1.2	1.7	1.3	2.1	2.1	1.2
STANDBY	0.3	2.8	2.2	2.7	2.5	0.6	0.7	2.6	1.9	0.5	3.4	3.3	3.4	3.4	1.2	2.1	2.1	2.6	2.5	0.7
REF NO.	IC8651																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	2.2	0.9	1.2	2.5	1.3	2.5	0	2.6	1.2	0.6	2.2	1.5	2.2	1.9	0.9	1.1	3.4	2.1	2.0	2.0
STANDBY	2.6	0.7	0.9	2.7	0.9	2.9	0	2.9	0.8	0.3	2.8	2.1	2.7	2.5	0.6	0.8	3.4	2.5	2.6	2.5
REF NO.	IC8651																			
MODE	41	42	43	44	45	46	47	48												
CD PLAY	1.1	2.2	1.0	1.3	2.5	0	3.4	1.5												
STANDBY	0.7	2.6	0.7	0.9	0.9	0	3.4	2.2												
REF NO.	IC8701																			
MODE	1	2	3	4	5															
CD PLAY	0	3.3	0	1.7	3.4															
STANDBY	0	3.3	0	1.7	3.4															
REF NO.	IC8901																			
MODE	1	2	3	4	5															
CD PLAY	3.3	3.3	0	3.4	3.4															
STANDBY	3.3	3.3	0	3.4	3.4															
REF NO.	IC9001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	1.2	2.5	1.4	1.1	2.1	1.2	2.1	2.1	0	2.5	2.1	2.1	1.2	2.2	1.1	1.3	2.5	1.3	3.4
STANDBY	0	0.9	2.7	0.9	0.7	2.6	0.7	0	2.6	0	2.9	2.6	2.5	0.7	2.6	0.7	0.8	2.7	0.9	3.4
REF NO.	IC9002																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	3.2	0	0	0	0	3.2	3.2	0	0	0	0	3.4	3.2	0	0	0	0	3.3	3.3
STANDBY	0	3.2	0	0	0	0	3.2	3.2	0	0	0	0	3.4	3.2	0	0	0	0	3.3	3.3
REF NO.	IC9003																			
MODE	1	2	3	4	5	6														
CD PLAY	1.5	0	1.6	1.7	3.3	1.6														
STANDBY	1.5	0	1.6	1.7	3.3	1.6														
REF NO.	IC9006																			
MODE	1	2	3	4	5															
CD PLAY	5.2	0	0	3.3	0															
STANDBY	5.2	0	0	3.3	0															

SA-PT580GA/GS MAIN P.C.B.

11.7. Main P.C.B. (7/7)

REF NO.	Q2302			Q2303			Q2304			Q2305			Q2400		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	0	1.7	0	3.2	1.5	3.1	0	0	4.4	3.1	1.5	3.1	9.0	9.0	0
STANDBY	0	1.7	0	3.1	1.5	3.0	0	3.2	0	3.1	1.5	3.1	9.0	9.0	0
REF NO.	Q2501			Q2502			Q2503			Q2510			Q2600		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	0	9.0	7.5	-6.9	-10.0	-7.5	0	-7.5	0	0	5.1	0	0	3.2	0
STANDBY	0	9.0	7.5	-6.9	-10.0	-7.5	0	0	0	0	0	3.3	0	3.1	0
REF NO.	Q2601			Q2602			Q2603			Q2604			Q2709		
MODE	E	C	B	E	C	B	S	D	G	S	D	G	E	C	B
CD PLAY	0	0	0	0	0	0	0	1.1	0	0	1.2	0	0	0	7.0
STANDBY	0	0	0	0	0	0	0	1.2	0	0	1.1	0	0	0	7.0
REF NO.	Q2719			Q2730			Q2800			Q2805			Q3901		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	0	0	0	0	3.2	0	0	6.8	0	0	7.0	0	0	4.2	0.1
STANDBY	0	0	0	0	3.2	0	0	6.8	0	0	7.0	0	0	4.3	0.1
REF NO.	Q3902			Q3903			Q3904			Q8321			Q8325		
MODE	S	D	G	S	D	G	S	D	G	E	C	B	E	C	B
CD PLAY	3.2	4.8	3.3	3.2	4.8	3.2	3.3	4.0	3.0	1.3	0	0.6	1.5	0	0.9
STANDBY	3.2	4.8	3.2	3.2	4.8	3.2	3.3	4.1	3.0	1.1	0	0.5	1.5	0	0.9
REF NO.	Q8551			Q8552			Q8561			Q8562			Q8563		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	S	D	G
CD PLAY	0	5.1	0	5.0	0	5.0	1.9	3.3	2.5	4.0	1.8	3.4	0	0	5.0
STANDBY	0	5.1	0	5.1	0	5.1	0	5.1	0	5.2	0	5.2	0	0	5.0
REF NO.	Q8564			Q8565			QR2300			QR2400			QR2605		
MODE	S	D	G	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	0	0	5.0	0	4.4	0	0	0	2.9	0	0	2.9	0	0	2.9
STANDBY	0	0	5.0	0	4.4	0	0	0	2.9	0	0	2.8	0	0	2.8
REF NO.	QR2606			QR2700			QR2701			QR8420			QR9030		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	0	0	2.9	0	0	2.9	0	0	2.9	0	4.3	0	4.9	0	4.9
STANDBY	0	0	2.9	0	0	2.8	0	0	2.9	0	0	3.3	5.1	0	5.1

SA-PT580GA/GS MAIN P.C.B.

11.8. FL P.C.B.

REF NO.	IC6001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0.1	0.1	0.1	0.1	1.9	1.4	1.4	2.9	2.1	1.4	1.4	0.1	3.3	-23.4	-23.4	-23.4	-21.2	-16.9	-16.9	-21.2
STANDBY	0.1	0.1	0.1	0.1	1.9	1.2	1.4	2.9	2.2	1.2	1.2	0.1	3.3	-23.4	-23.4	-23.4	-23.4	-14.8	-16.9	-21.2

REF NO.	IC6001																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	-23.4	-23.4	-23.4	-17.0	-17.0	-23.4	-23.4	-17.0	-17.0	-23.8	-14.9	-23.6	-21.4	-21.4	-21.4	-21.4	-21.4	-21.4	-21.4	-21.4
STANDBY	-21.2	-23.4	-21.2	-14.8	-14.8	-21.2	-23.4	-14.8	-12.6	-23.9	-17.1	-23.6	-21.4	-21.4	-21.4	-21.4	-21.4	-21.4	-21.4	-21.4

REF NO.	IC6001																			
MODE	41	42	43	44																
CD PLAY	-21.4	-21.4	-3.3	0.1																
STANDBY	-21.4	-21.4	-3.3	0.1																

REF NO.	Q6100			Q6800																
MODE	E	C	B	E	C	B														
CD PLAY	0	0	9.0	0	0	5.0														
STANDBY	0	0	0	0	0	5.0														

SA-PT580GA/GS FL P.C.B.

11.9. D-Amp P.C.B. (1/2)

REF NO.	IC5100																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	11.5	3.3	3.3	1.6	3.1	1.6	1.1	0	0	3.5	3.5	0	0	1.5	3.1	1.5	11.6	11.4	11.5	0
STANDBY	11.5	3.3	3.3	1.6	3.1	1.6	1.1	0	0	3.5	3.5	0	0	1.5	3.1	1.5	11.6	11.4	11.5	0

REF NO.	IC5100																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36				
CD PLAY	42.4	0	0	0	0	42.4	0	0	42.4	0	0	0	0	42.4	0	11.4				
STANDBY	42.4	0	0	0	0	42.4	0	0	42.4	0	0	0	0	42.4	0	11.4				

REF NO.	IC5200																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	11.5	3.2	3.3	1.6	3.2	1.6	1.1	0	0	3.2	0	0	3.2	1.6	3.2	1.6	11.6	11.5	11.5	0
STANDBY	11.5	3.2	3.3	1.6	3.2	1.6	1.1	0	0	3.2	0	0	3.2	1.6	3.2	1.6	11.6	11.5	11.5	0

REF NO.	IC5200																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36				
CD PLAY	42.4	0	0	0	0	42.4	0	0	42.4	0	0	0	0	42.4	0	11.5				
STANDBY	42.4	0	0	0	0	42.4	0	0	42.4	0	0	0	0	42.4	0	11.5				

REF NO.	IC5301																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	1.7	3.2	0	0	0.8	0.9	0	1.6	3.2	3.1	3.1	0	0	1.1	1.8	3.2	3.2	3.2	1.5	1.5
STANDBY	1.7	3.2	0	0	0.8	0.9	0	1.6	3.2	3.1	3.1	0	0	1.1	1.8	3.2	3.2	3.2	1.5	1.5

REF NO.	IC5301																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38		
CD PLAY	0	0	0	0	0.6	1.2	0	0	0	1.8	3.1	3.1	1.6	1.6	1.5	1.5	1.5	1.5		
STANDBY	0	0	0	0	0.6	1.2	0	0	0	1.8	3.1	3.1	1.6	1.6	1.5	1.5	1.5	1.5		

REF NO.	IC5400																			
MODE	1	2	3	4	5															
CD PLAY	13.1	13.1	0	11.6	1.1															
STANDBY	13.1	13.1	0	11.6	1.1															

REF NO.	IC5401																			
MODE	1	2	3	4	5															
CD PLAY	3.2	3.2	0	0	0															
STANDBY	3.2	3.2	0	0	0															

REF NO.	IC5402																			
MODE	1	2	3	4	5															
CD PLAY	3.2	3.2	0	3.2	3.2															
STANDBY	3.2	3.2	0	3.2	3.2															

REF NO.	IC5404																			
MODE	1	2	3	4	5	6														
CD PLAY	1.5	0	1.5	1.6	3.1	1.6														
STANDBY	1.5	0	1.5	1.6	3.1	1.6														

SA-PT580GA/GS D-AMP P.C.B.

11.10. D-Amp P.C.B. (2/2)

REF NO.	IC5405																
MODE	1	2	3	4	5												
CD PLAY	3.2	3.2	0	3.2	3.1												
STANDBY	3.2	3.2	0	3.2	3.1												

REF NO.	Q5400			Q5401			Q5402			Q5403			Q5404		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	12.0	18.0	12.0	18.0	12.0	0	0	0	5.0	0	2.9	12.0	0	7.5	0.7
STANDBY	12.0	18.0	12.0	18.0	12.0	0	0	0	5.0	0	2.9	12.0	0	7.5	0.7

REF NO.	Q5405			Q5408			Q5409			Q5412			Q5413		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	0	3.7	12.0	0	0	0	0	0	0	0	0	42.3	42.4	42.3	0
STANDBY	0	3.7	12.0	0	0	0	0	0	0	0	0	42.3	42.4	42.3	0

REF NO.	Q5414			QR5400			QR5401		
MODE	E	C	B	E	C	B	E	C	B
CD PLAY	0	0	0	0	0	0	12.0	0	5.0
STANDBY	0	0	0	0	0.1	5.0	12.0	0	5.0

SA-PT580GA/GS D-AMP P.C.B.

11.11. SMPS P.C.B.

REF NO.	IC5701																
MODE	1	2	3	4	5	6	7										
CD PLAY	165.0	0	0	19.0	0.1	1.5	0.4										
STANDBY	165.0	0	0	19.0	0.1	1.5	0.4										

REF NO.	IC5799																
MODE	1	2	3	4	5	6	7	8									
CD PLAY	6.0	0.8	2.4	12.3	165.0	0	0	0									
STANDBY	6.0	0.8	2.4	12.3	165.0	0	0	0									

REF NO.	IC5801																
MODE	1	2	3														
CD PLAY	18.3	2.5	0														
STANDBY	18.3	2.5	0														

REF NO.	IC5899																
MODE	1	2	3	4													
CD PLAY	0	0	3.8	2.3													
STANDBY	0	0	3.8	2.3													

REF NO.	Q5720			Q5863			Q5898			Q5899			QR5862		
MODE	E	C	B	E	C	B	E	C	B	E	C	B	E	C	B
CD PLAY	-10.3	-9.9	-10.2	0	0.6	0	0	1.9	0.4	0	0.1	0.7	0	0	13.0
STANDBY	-10.3	-9.9	-10.2	0	0.6	0	0	1.9	0.4	0	0.1	0.7	0	0	13.0

SA-PT580GA/GS SMPS P.C.B.

11.12. Power P.C.B.

REF NO.	IC2901																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	1.7	2.5	2.0	1.0	1.6	0	0	18.0	11.2	14.9	14.3	18.0	16.5	0	15.8	1.6	1.0	2.0	2.4	2.5
STANDBY	1.7	2.5	2.0	1.0	1.6	0	0	18.0	11.2	14.9	14.3	18.0	16.5	0	15.8	1.6	1.0	2.0	2.4	2.5

REF NO.	Q2902						Q2903					
MODE	1	2	3	4	5	6	1	2	3	4	5	6
CD PLAY	12.0	12.0	16.1	17.8	12.0	12.0	5.0	5.0	16.2	17.8	5.0	5.0
STANDBY	12.0	12.0	16.1	17.8	12.0	12.0	5.0	5.0	16.2	17.8	5.0	5.0

SA-PT580GA/GS POWER P.C.B.

11.13. Mic P.C.B.


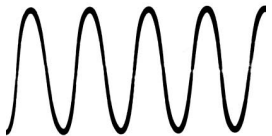
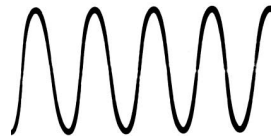
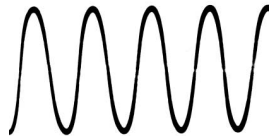



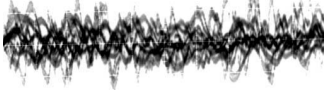

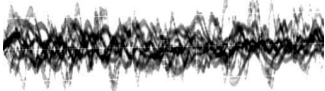

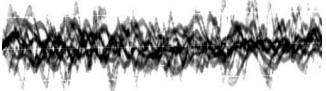

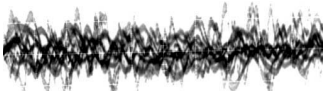
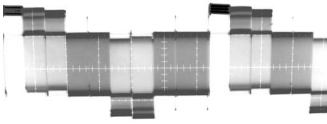
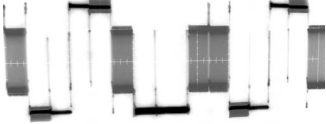
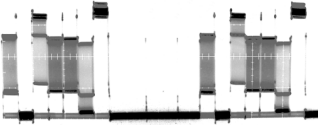
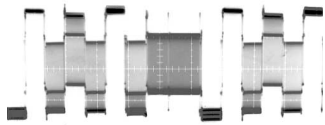
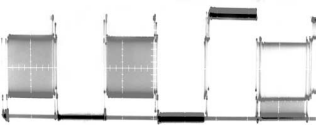
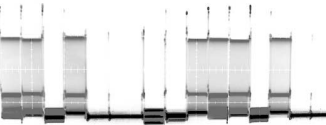
REF NO.	IC7000																	
MODE	1	2	3	4	5	6	7	8										
CD PLAY	0	0	0	-6.7	0	0	0	6.8										
STANDBY	0	0	0	-6.7	0	0	0	6.8										

REF NO.	IC7100																	
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16		
CD PLAY	5.2	2.6	0	0	2.7	2.6	0.6	0.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6		
STANDBY	5.2	2.6	0	0	2.7	2.6	0.6	0.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6		

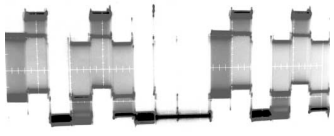
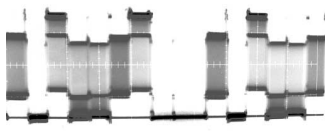
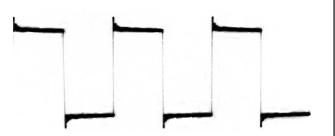
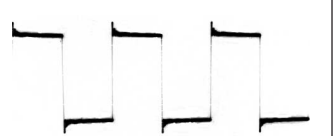
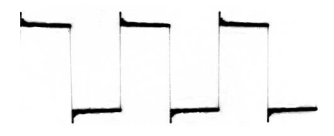
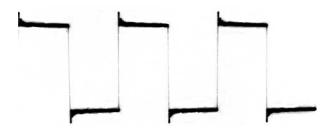
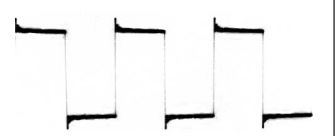
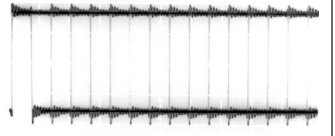
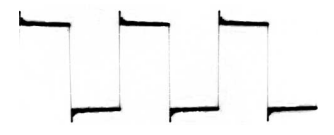
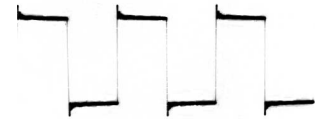
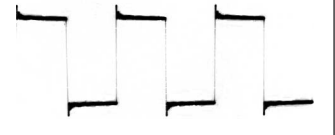

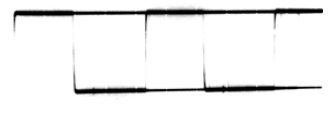
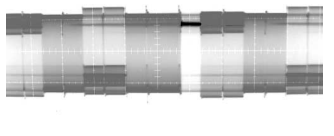
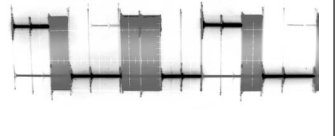
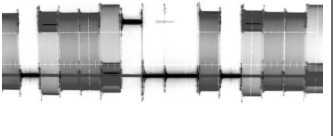
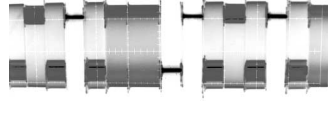

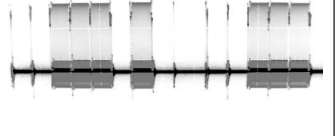
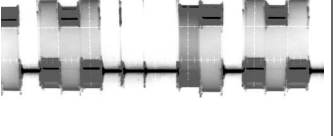
REF NO.	Q7100			Q7101			Q7102			Q7103							
MODE	E	C	B		E	C	B		E	C	B		E	C	B		
CD PLAY	0	0	5.1		0	0	5.1		0	0	5.1		0	0	5.0		
STANDBY	0	0	5.1		0	0	5.1		0	0	5.1		0	0	5.0		

SA-PT580GA/GS MIC P.C.B.

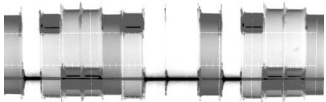
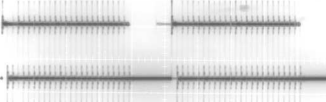
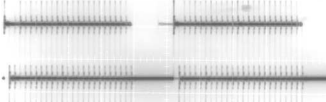



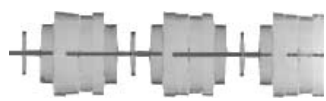
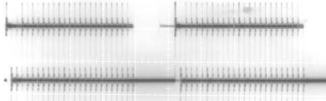



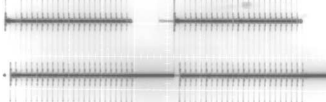

11.14. Waveform Table (1/3)

<p>WF No. IC2001-34,35,38 (PLAY)</p>  <p>5Vp-p(500nsec/div)</p>	<p>WF No. IC2300-10,11 (PLAY)</p>  <p>3Vp-p(20usec/div)</p>	<p>WF No. IC2300-13 (PLAY)</p>  <p>3.4Vp-p(100nsec/div)</p>	<p>WF No. IC2300-15 (PLAY)</p>  <p>1.5Vp-p(100nsec/div)</p>
<p>WF No. IC2510-4 (PLAY)</p>  <p>0.64Vp-p(20usec/div)</p>	<p>WF No. IC2510-8 (PLAY)</p>  <p>1.1Vp-p(20usec/div)</p>	<p>WF No. IC2510-30 (PLAY)</p>  <p>2.1Vp-p(20usec/div)</p>	<p>WF No. IC2800-1 (PLAY)</p>  <p>0.1Vp-p(200usec/div)</p>
<p>WF No. IC2800-3 (PLAY)</p>  <p>0.15Vp-p(500usec/div)</p>	<p>WF No. IC2800-12 (PLAY)</p>  <p>0.1Vp-p(100usec/div)</p>	<p>WF No. IC2800-13 (PLAY)</p>  <p>1.5Vp-p(500usec/div)</p>	<p>WF No. IC2952-2 (PLAY)</p>  <p>0.1Vp-p(200usec/div)</p>
<p>WF No. IC2952-9,17 (PLAY)</p>  <p>0.6Vp-p(10usec/div)</p>	<p>WF No. IC2952-13,14 (PLAY)</p>  <p>0.1Vp-p(100usec/div)</p>	<p>WF No. IC3901-87 (PLAY)</p>  <p>3.6Vp-p(5usec/div)</p>	<p>WF No. IC3901-88 (PLAY)</p>  <p>3.8Vp-p(5usec/div)</p>
<p>WF No. IC3901-89 (PLAY)</p>  <p>3.8Vp-p(5usec/div)</p>	<p>WF No. IC3901-90 (PLAY)</p>  <p>3.6Vp-p(5usec/div)</p>	<p>WF No. IC3901-92 (PLAY)</p>  <p>3.6Vp-p(2usec/div)</p>	<p>WF No. IC3901-93 (PLAY)</p>  <p>3.6Vp-p(5usec/div)</p>






































11.15. Waveform Table (2/3)

<p>WF No. IC3901-94 (PLAY)</p>  <p>3.8Vp-p(5usec/div)</p>	<p>WF No. IC3901-95 (PLAY)</p>  <p>3.8Vp-p(5usec/div)</p>	<p>WF No. IC5100-4,6,14,16 (PLAY)</p>  <p>5.2Vp-p(1usec/div)</p>	<p>WF No. IC5100-22,25,30,33 (PLAY)</p>  <p>80Vp-p(1usec/div)</p>
<p>WF No. IC5200-4,14 (PLAY)</p>  <p>5.6Vp-p(1usec/div)</p>	<p>WF No. IC5200-6,16 (PLAY)</p>  <p>6.8Vp-p(1usec/div)</p>	<p>WF No. IC5200-22,25,30,33 (PLAY)</p>  <p>76Vp-p(1usec/div)</p>	<p>WF No. IC5301-24,25,26 (PLAY)</p>  <p>3.6Vp-p(500nsec/div)</p>
<p>WF No. IC5301-33,34,35,36, 37,38 (PLAY)</p>  <p>6Vp-p(1usec/div)</p>	<p>WF No. IC5404-1,3 (PLAY)</p>  <p>5.6Vp-p(1usec/div)</p>	<p>WF No. IC5404-4,6 (PLAY)</p>  <p>7.2Vp-p(1usec/div)</p>	<p>WF No. IC6001-5 (PLAY)</p>  <p>1.5Vp-p(2usec/div)</p>
<p>WF No. IC6001-8 (PLAY)</p>  <p>3.2Vp-p(2usec/div)</p>	<p>WF No. IC8001-9 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>	<p>WF No. IC8001-10 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>	<p>WF No. IC8001-11 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>
<p>WF No. IC8001-12 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>	<p>WF No. IC8001-13 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>	<p>WF No. IC8001-14 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>	<p>WF No. IC8001-17 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>


11.16. Waveform Table (3/3)

<p>WF No. IC8001-18 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>	<p>WF No. IC8001-59 (PLAY)</p>  <p>2Vp-p(2usec/div)</p>	<p>WF No. IC8001-62,63,64 (PLAY)</p>  <p>6Vp-p(1usec/div)</p>	<p>WF No. IC8001-129 (PLAY)</p>  <p>0.58Vp-p(20usec/div)</p>
<p>WF No. IC8001-130 (PLAY)</p>  <p>0.52Vp-p(20usec/div)</p>	<p>WF No. IC8001-131,138 (PLAY)</p>  <p>1.6Vp-p(20usec/div)</p>	<p>WF No. IC8001-139 (PLAY)</p>  <p>0.64Vp-p(20usec/div)</p>	<p>WF No. IC8001-151 (PLAY)</p>  <p>6Vp-p(2usec/div)</p>
<p>WF No. IC8001-152 (PLAY)</p>  <p>6Vp-p(2usec/div)</p>	<p>WF No. IC8422-1 (PLAY)</p>  <p>1.5Vp-p(500usec/div)</p>	<p>WF No. IC8422-2 (PLAY)</p>  <p>0.15Vp-p(500usec/div)</p>	<p>WF No. IC8422-9 (PLAY)</p>  <p>3.8Vp-p(1usec/div)</p>
<p>WF No. IC8701-2 (PLAY)</p>  <p>1.4Vp-p(20nsec/div)</p>			

12 Illustration of ICs, Transistor and Diode

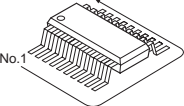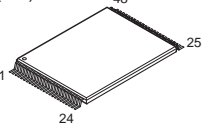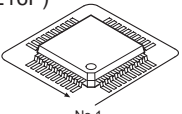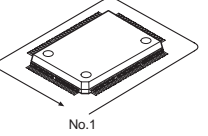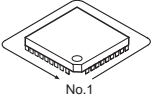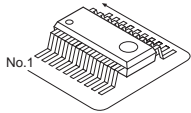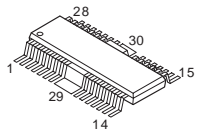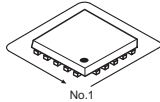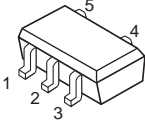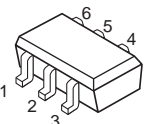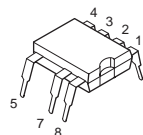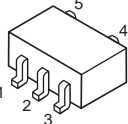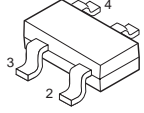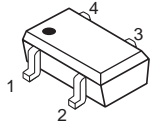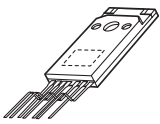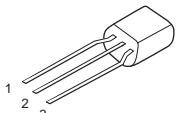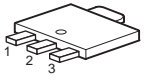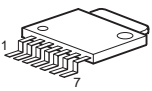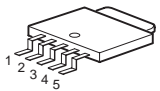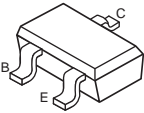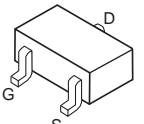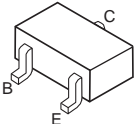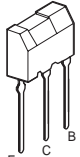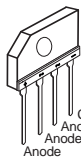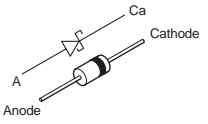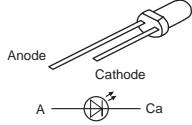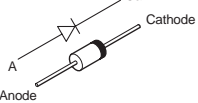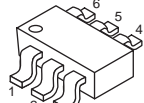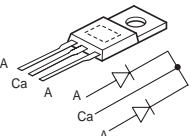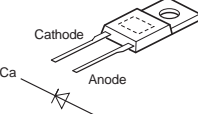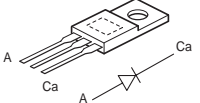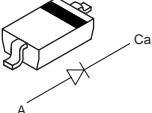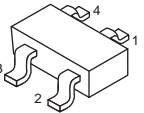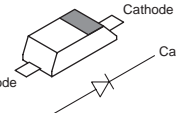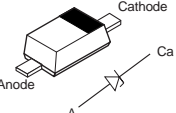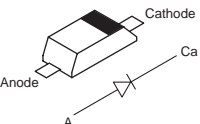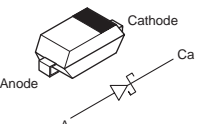 <p>No.1</p>	<p>REPX0861E (8P)(GS) REPX0861F (8P)(GA) C3EBFY000006 (8P) C0ABBB000179 (8P) C0ABBB000189 (8P) C0DBZYY00018 (8P) C0FBAK000026 (16P) C0JBAR000540 (16P)</p>	<p>C1AB00002773 (16P) C0JBAZ001251 (20P) C0DBAYY00729 (20P) C1AB00002461 (38P) C1AB00003260 (36P) C3ABPG000160 (54P)</p>	<p>RFKWMH52B3D3 (48P) (GS) RFKWMH52D3D0 (48P) (GA)</p>  <p>48 1 24 25</p>	<p>C0HBB0000057 (44P) MN864702A (128P) MN2DS0018MP (216P)</p>  <p>No.1</p>	<p>RFKWMPT480GA (100P)</p>  <p>No.1</p>
<p>MFI341S2164 (20P)</p>  <p>No.1</p>	<p>C2HBCA000001 (40P) C9ZB00000461 (32p)</p>  <p>No.1</p>	<p>C0GBG0000048 (30P)</p>  <p>28 30 15 1 29 14</p>	<p>VUEALLPT040 (20P)</p>  <p>No.1</p>	 <p>5 4 1 2 3</p>	<p>C0ABZA000080 C0JBAA000501 C0JBAB000907 C0DBZYY00311 C0EBE0000456</p>
<p>C0JBAB000837 C0JBAB000908 C0JBAB000986</p>  <p>6 5 4 1 2 3</p>	<p>MIP2F20MSSCF</p>  <p>4 3 2 1 5 7 8</p>	<p>C0CBCDC00063</p>  <p>5 4 1 2 3</p>	<p>C0EBA0000039</p>  <p>4 1 3 2</p>	<p>C0DBZMC00006</p>  <p>4 3 1 2</p>	<p>C5HACY00003 (7P)</p> 
<p>C0DABFC00002</p>  <p>1 2 3</p>	<p>C0CBABC00117</p>  <p>1 2 3</p>	<p>C0DBFZG00001</p>  <p>1 7</p>	<p>C0DBEKG00004</p>  <p>1 2 3 4 5</p>	 <p>C B E</p> <p>B1ABCF000176 B1ABEB000002 B1ABGC000001 B1ABMF000020</p>	<p>B1ADBL000010 B1ADCE000012 B1ADGB000008 B1ADNB000003 B1GBCFJJ0051 B1GBCFGG0030 B1GBCFNN0038 B1GDCFJJ0002 B1GBCFJN0038</p>
<p>B1CFHA000002</p>  <p>D S G</p>	 <p>C B E</p>	<p>B1ABCF000011 B1ABDF000026 B1ADDF000012 B1GBCFJJ0040</p>	<p>B1BABK000001 B1BAAJ000003</p>  <p>E C B</p>	<p>B0FBAR000043</p>  <p>Cathode Anode Anode</p>	<p>B0JAMF000011</p>  <p>Ca Anode Anode</p>
<p>B3ABA0000187</p>  <p>Anode Cathode A Ca</p>	<p>B0EAMM000057 B0HAMP000094 B0HAJM000005</p>  <p>Ca Anode A Ca</p>	<p>B1CHPD000003</p>  <p>6 5 4 1 2 3</p>	<p>B0HBSM000054</p>  <p>Ca A Ca A</p>	<p>B0HFRJ000012</p>  <p>Cathode Anode Ca A</p>	<p>B0ZAZ0000052</p>  <p>A Ca A</p>
<p>B0JCCE000008</p>  <p>Ca A</p>	<p>B0EDKT000009</p>  <p>4 1 3 2</p>	<p>B0JCMD000010 B0ECET000002</p>  <p>Cathode Anode Ca A</p>	 <p>Cathode Anode Ca A</p>	<p>B0BC010A0269 B0BC011A0264 B0BC012A0269 B0BC020A0267 B0BC024A0267 B0BC027A0264 B0BC030A0264 B0BC2R4A0263 B0BC3R3A0262</p>	<p>B0BC5R1A0262 B0BC5R1A0266 B0BC6R2A0266 B0BC6R8A0266 B0BC7R500001 B0BC7R5A0268</p>
<p>B0ACCK000012 B0ACCK000005</p>  <p>Cathode Anode A Ca</p>	<p>B0JCPG000005 B0HCSP000001</p>  <p>Cathode Anode A Ca</p>				

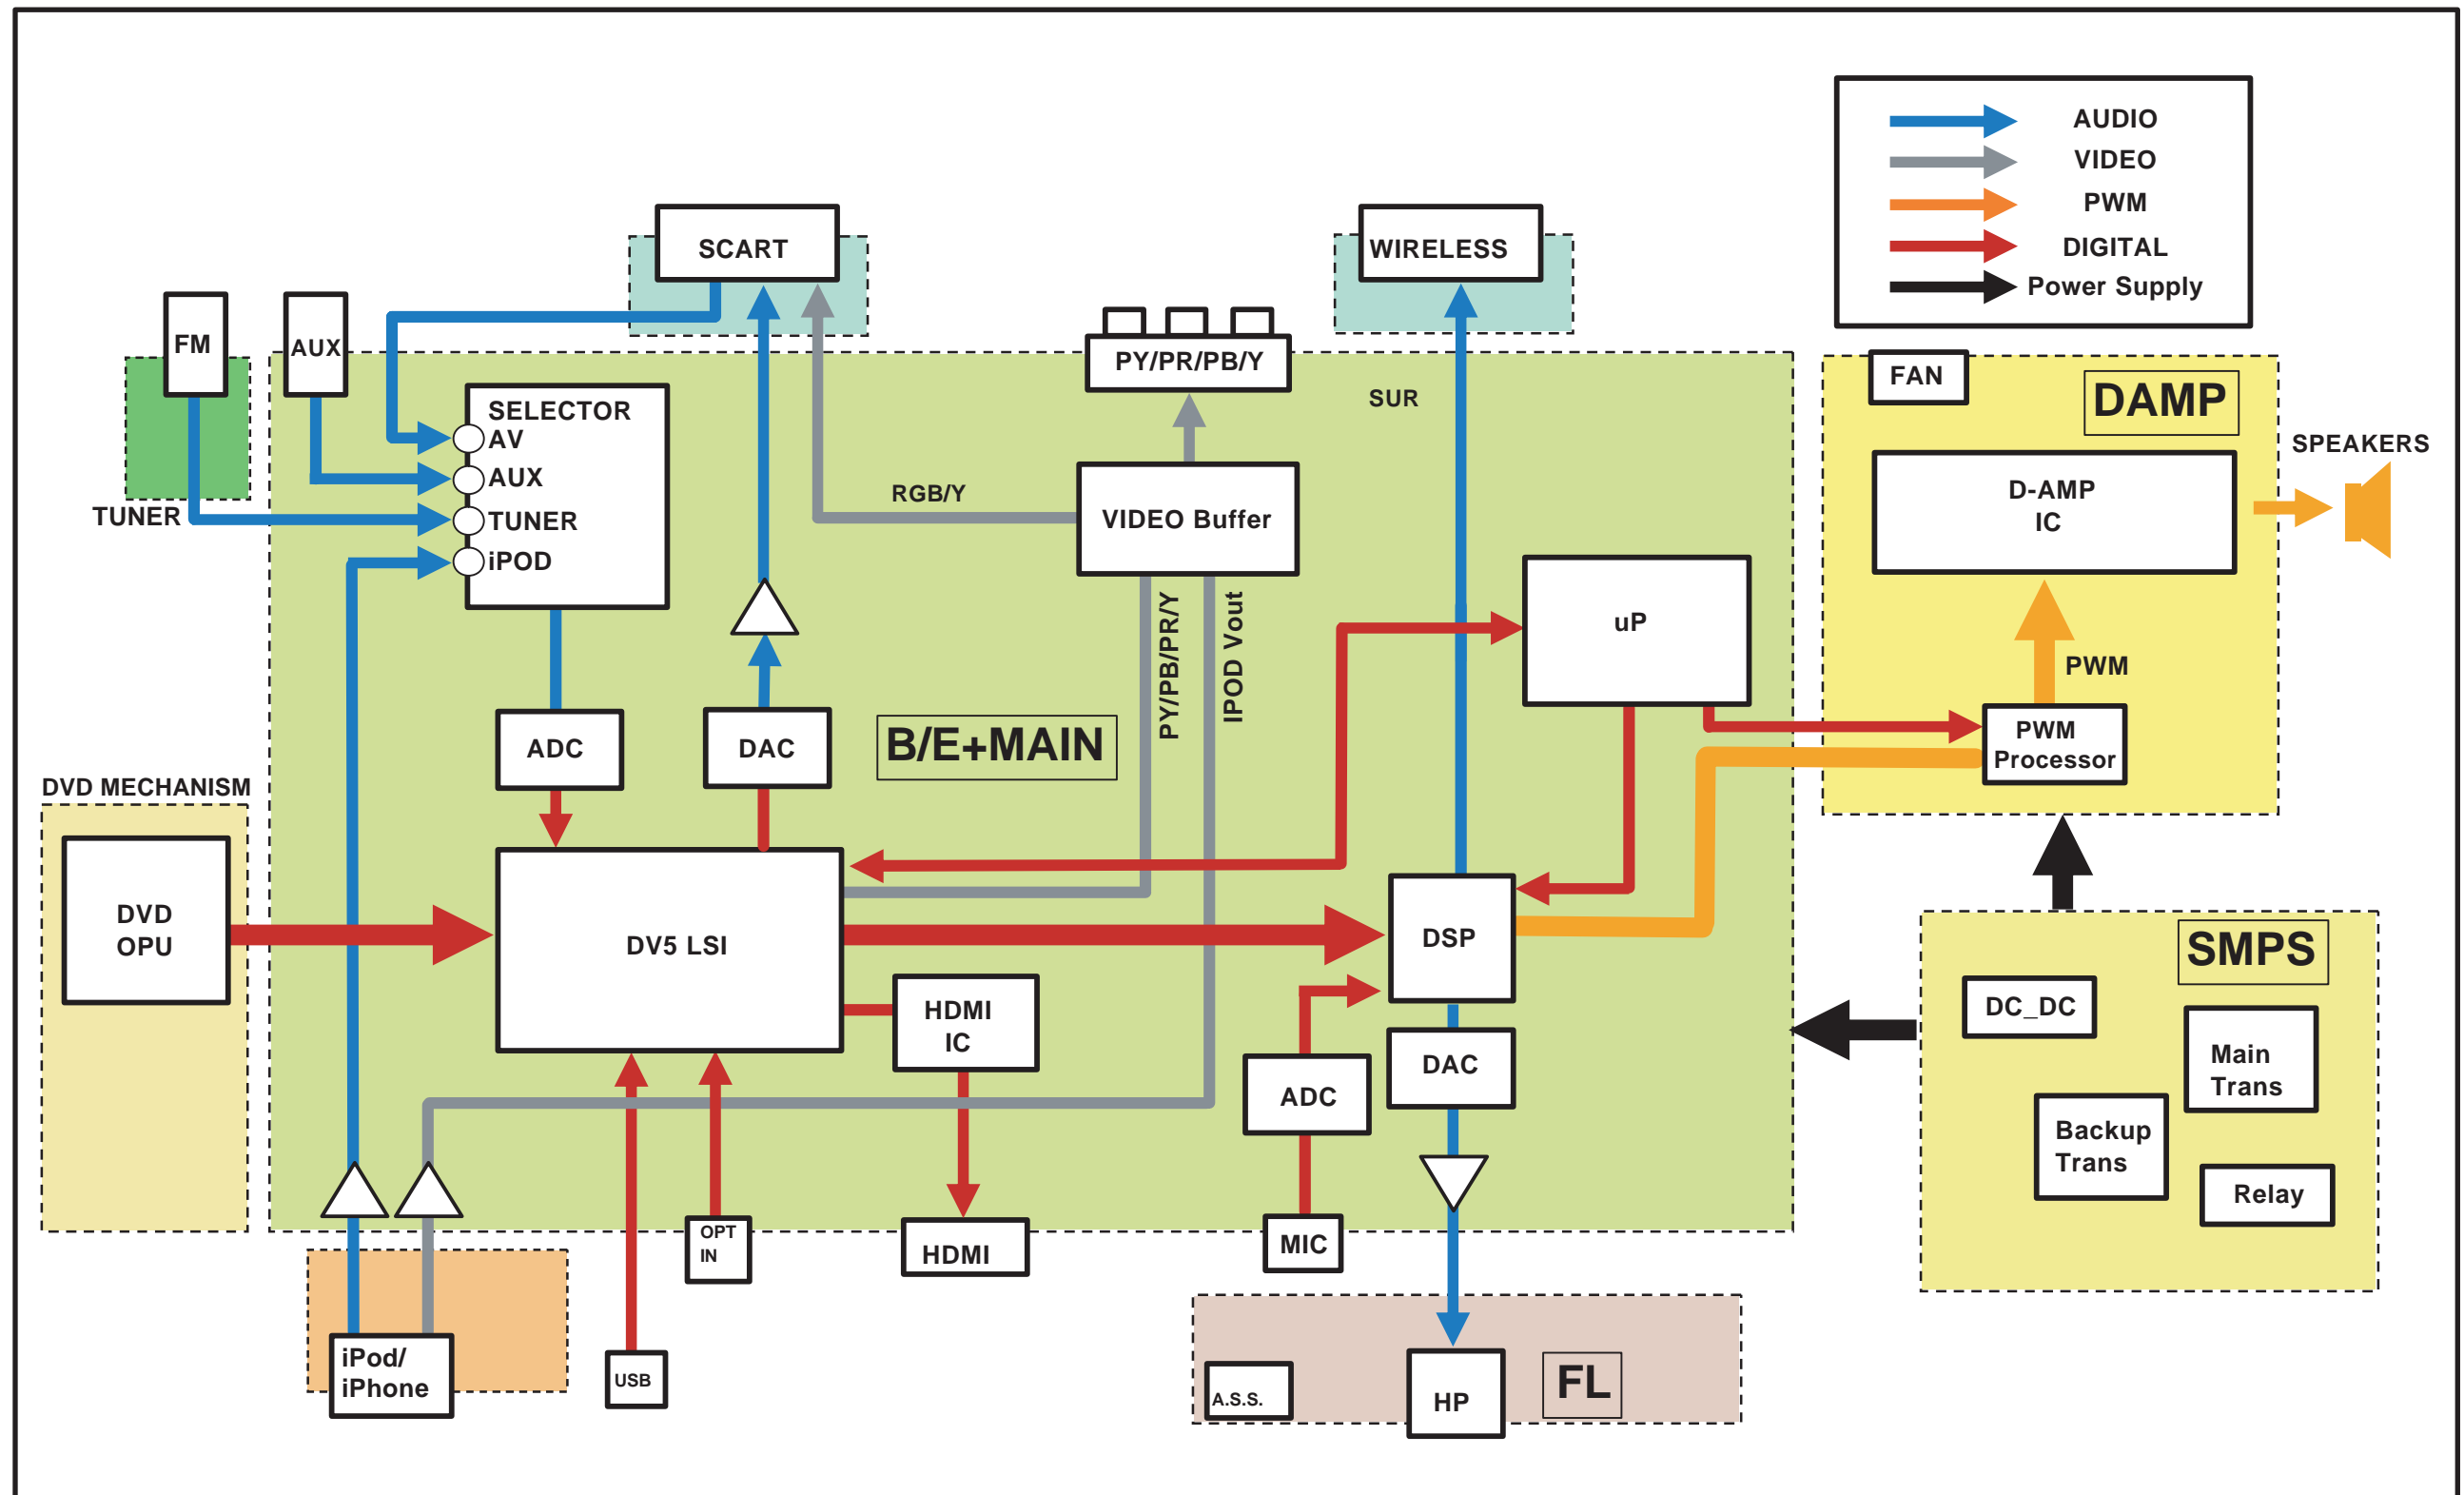13 Overall Simplified Block Diagram




14 Block Diagram

14.1. Main(Servo)

 : CD/DVD AUDIO INPUT SIGNAL LINE
  : CD/DVD VIDEO INPUT SIGNAL LINE


TRAVERSE UNIT

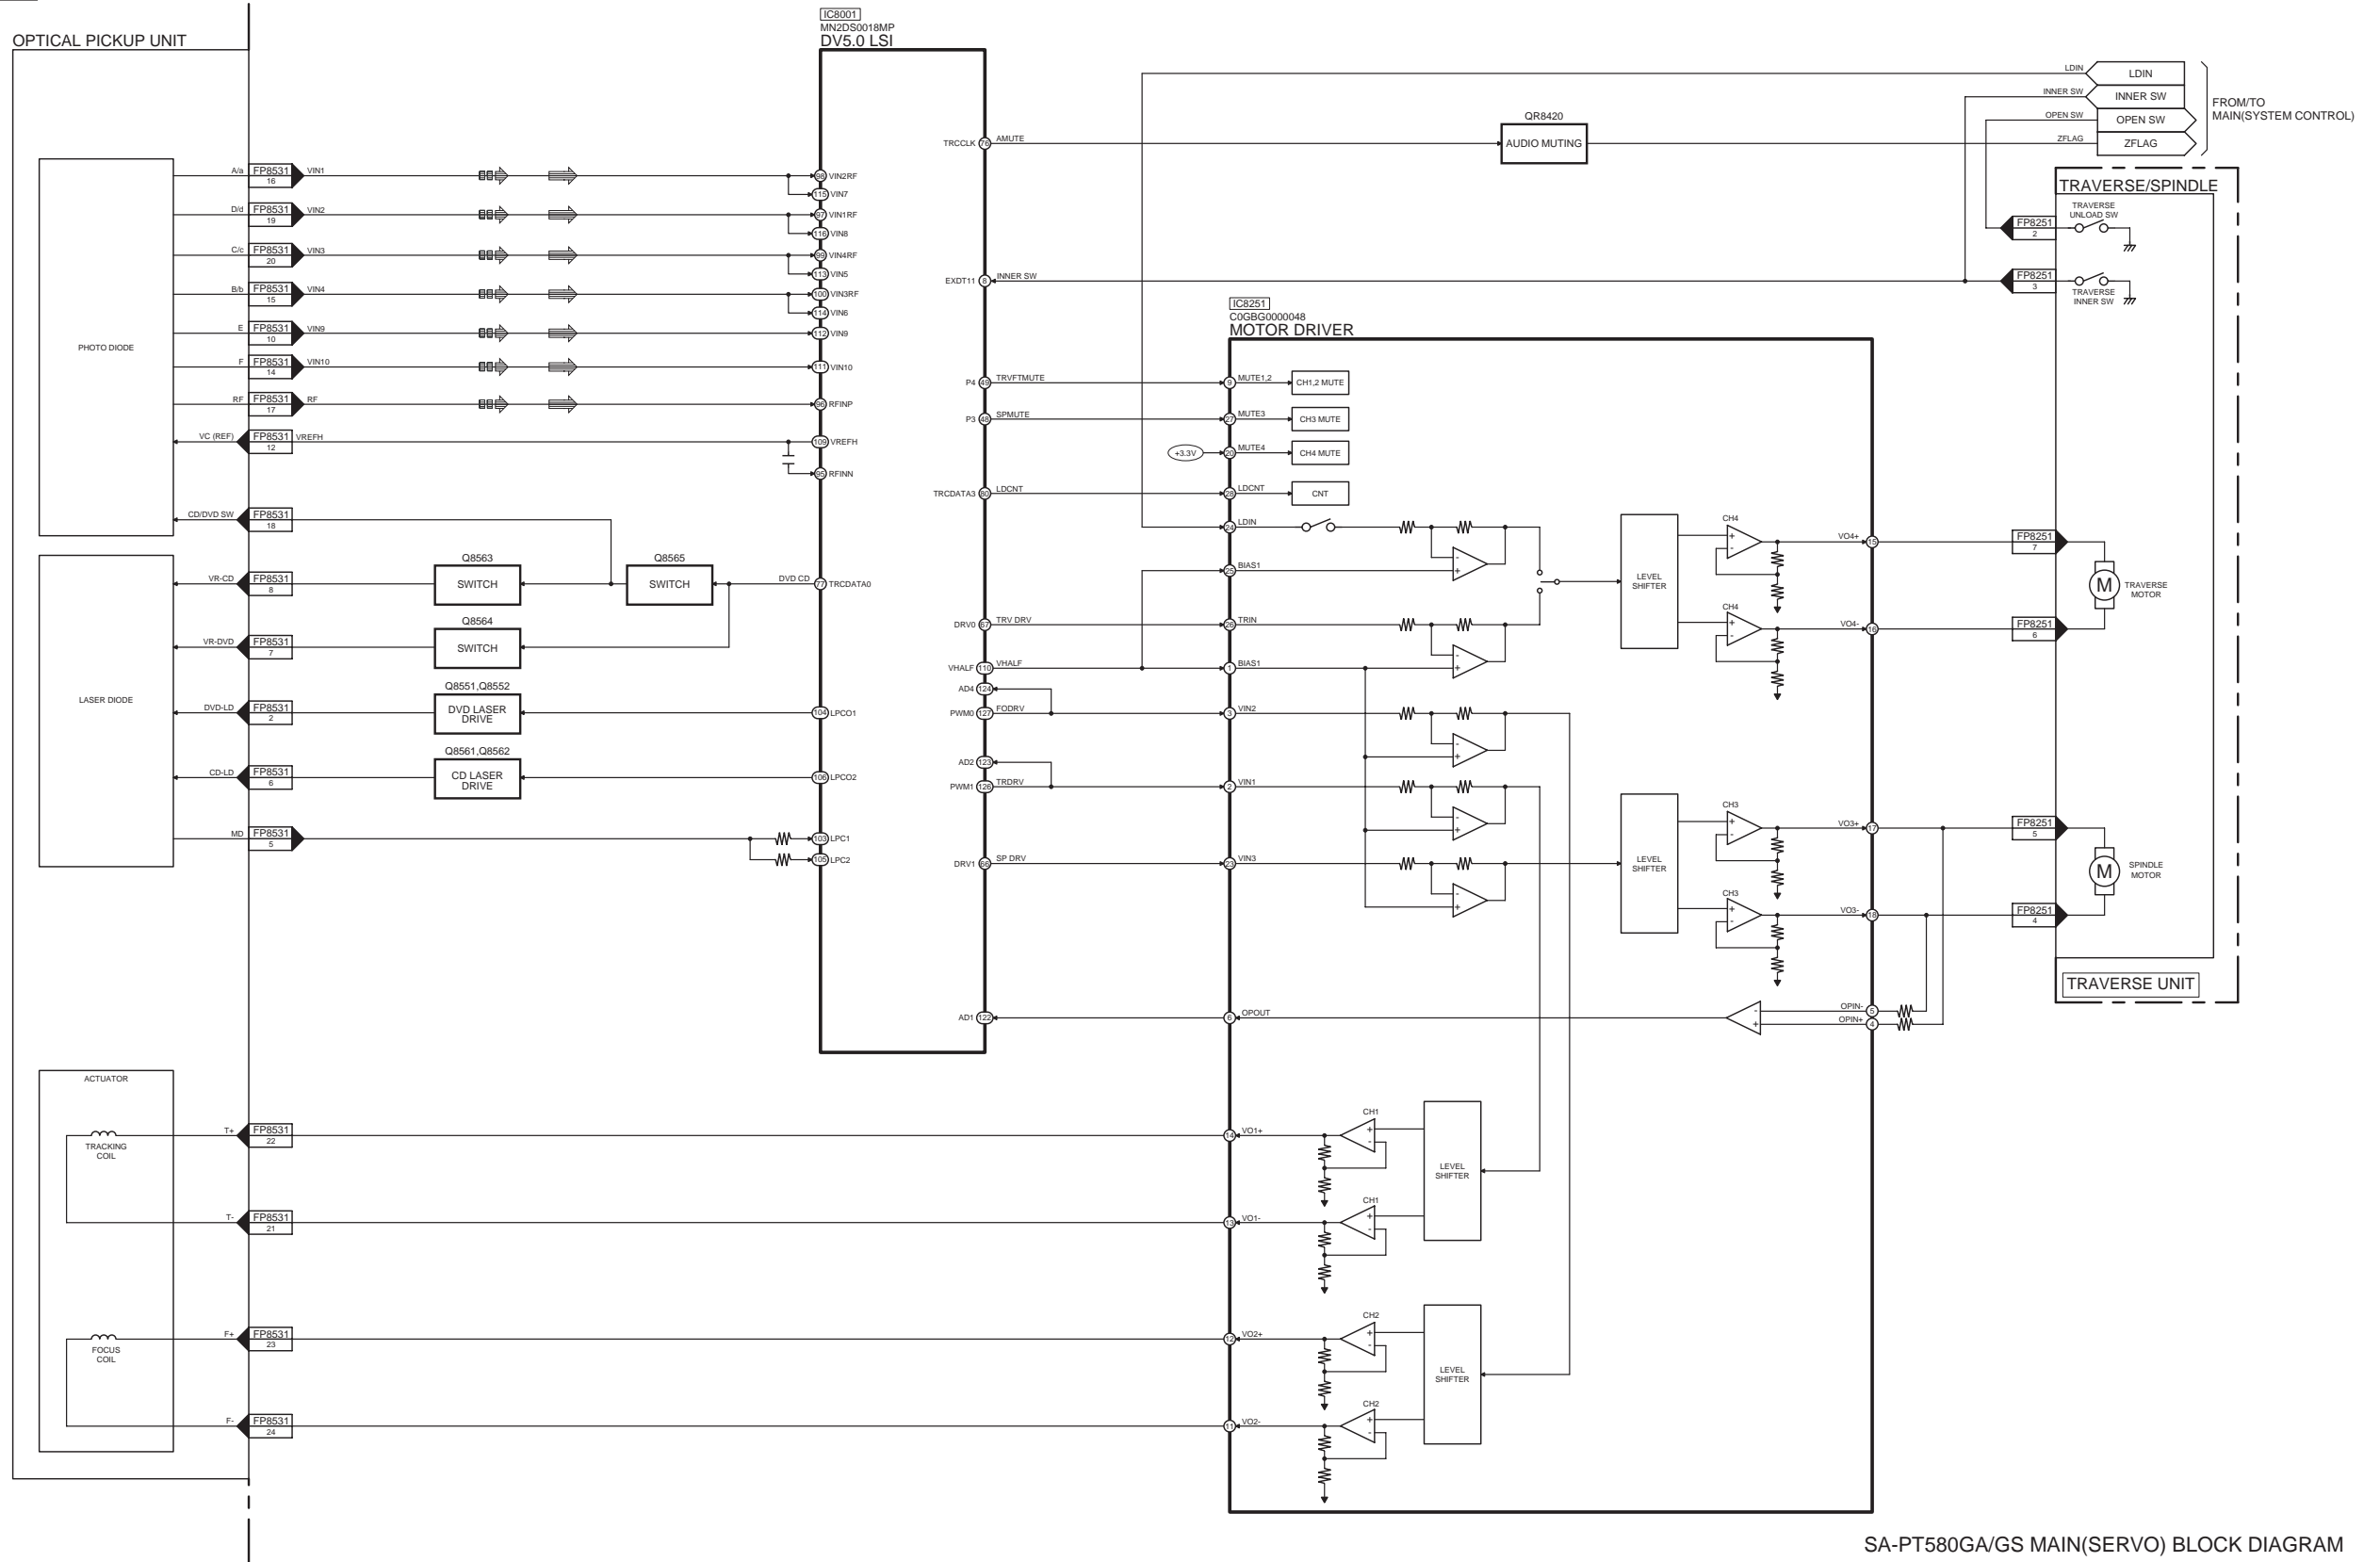MAIN P.C.B.






SA-PT580GA/GS MAIN(SERVO) BLOCK DIAGRAM

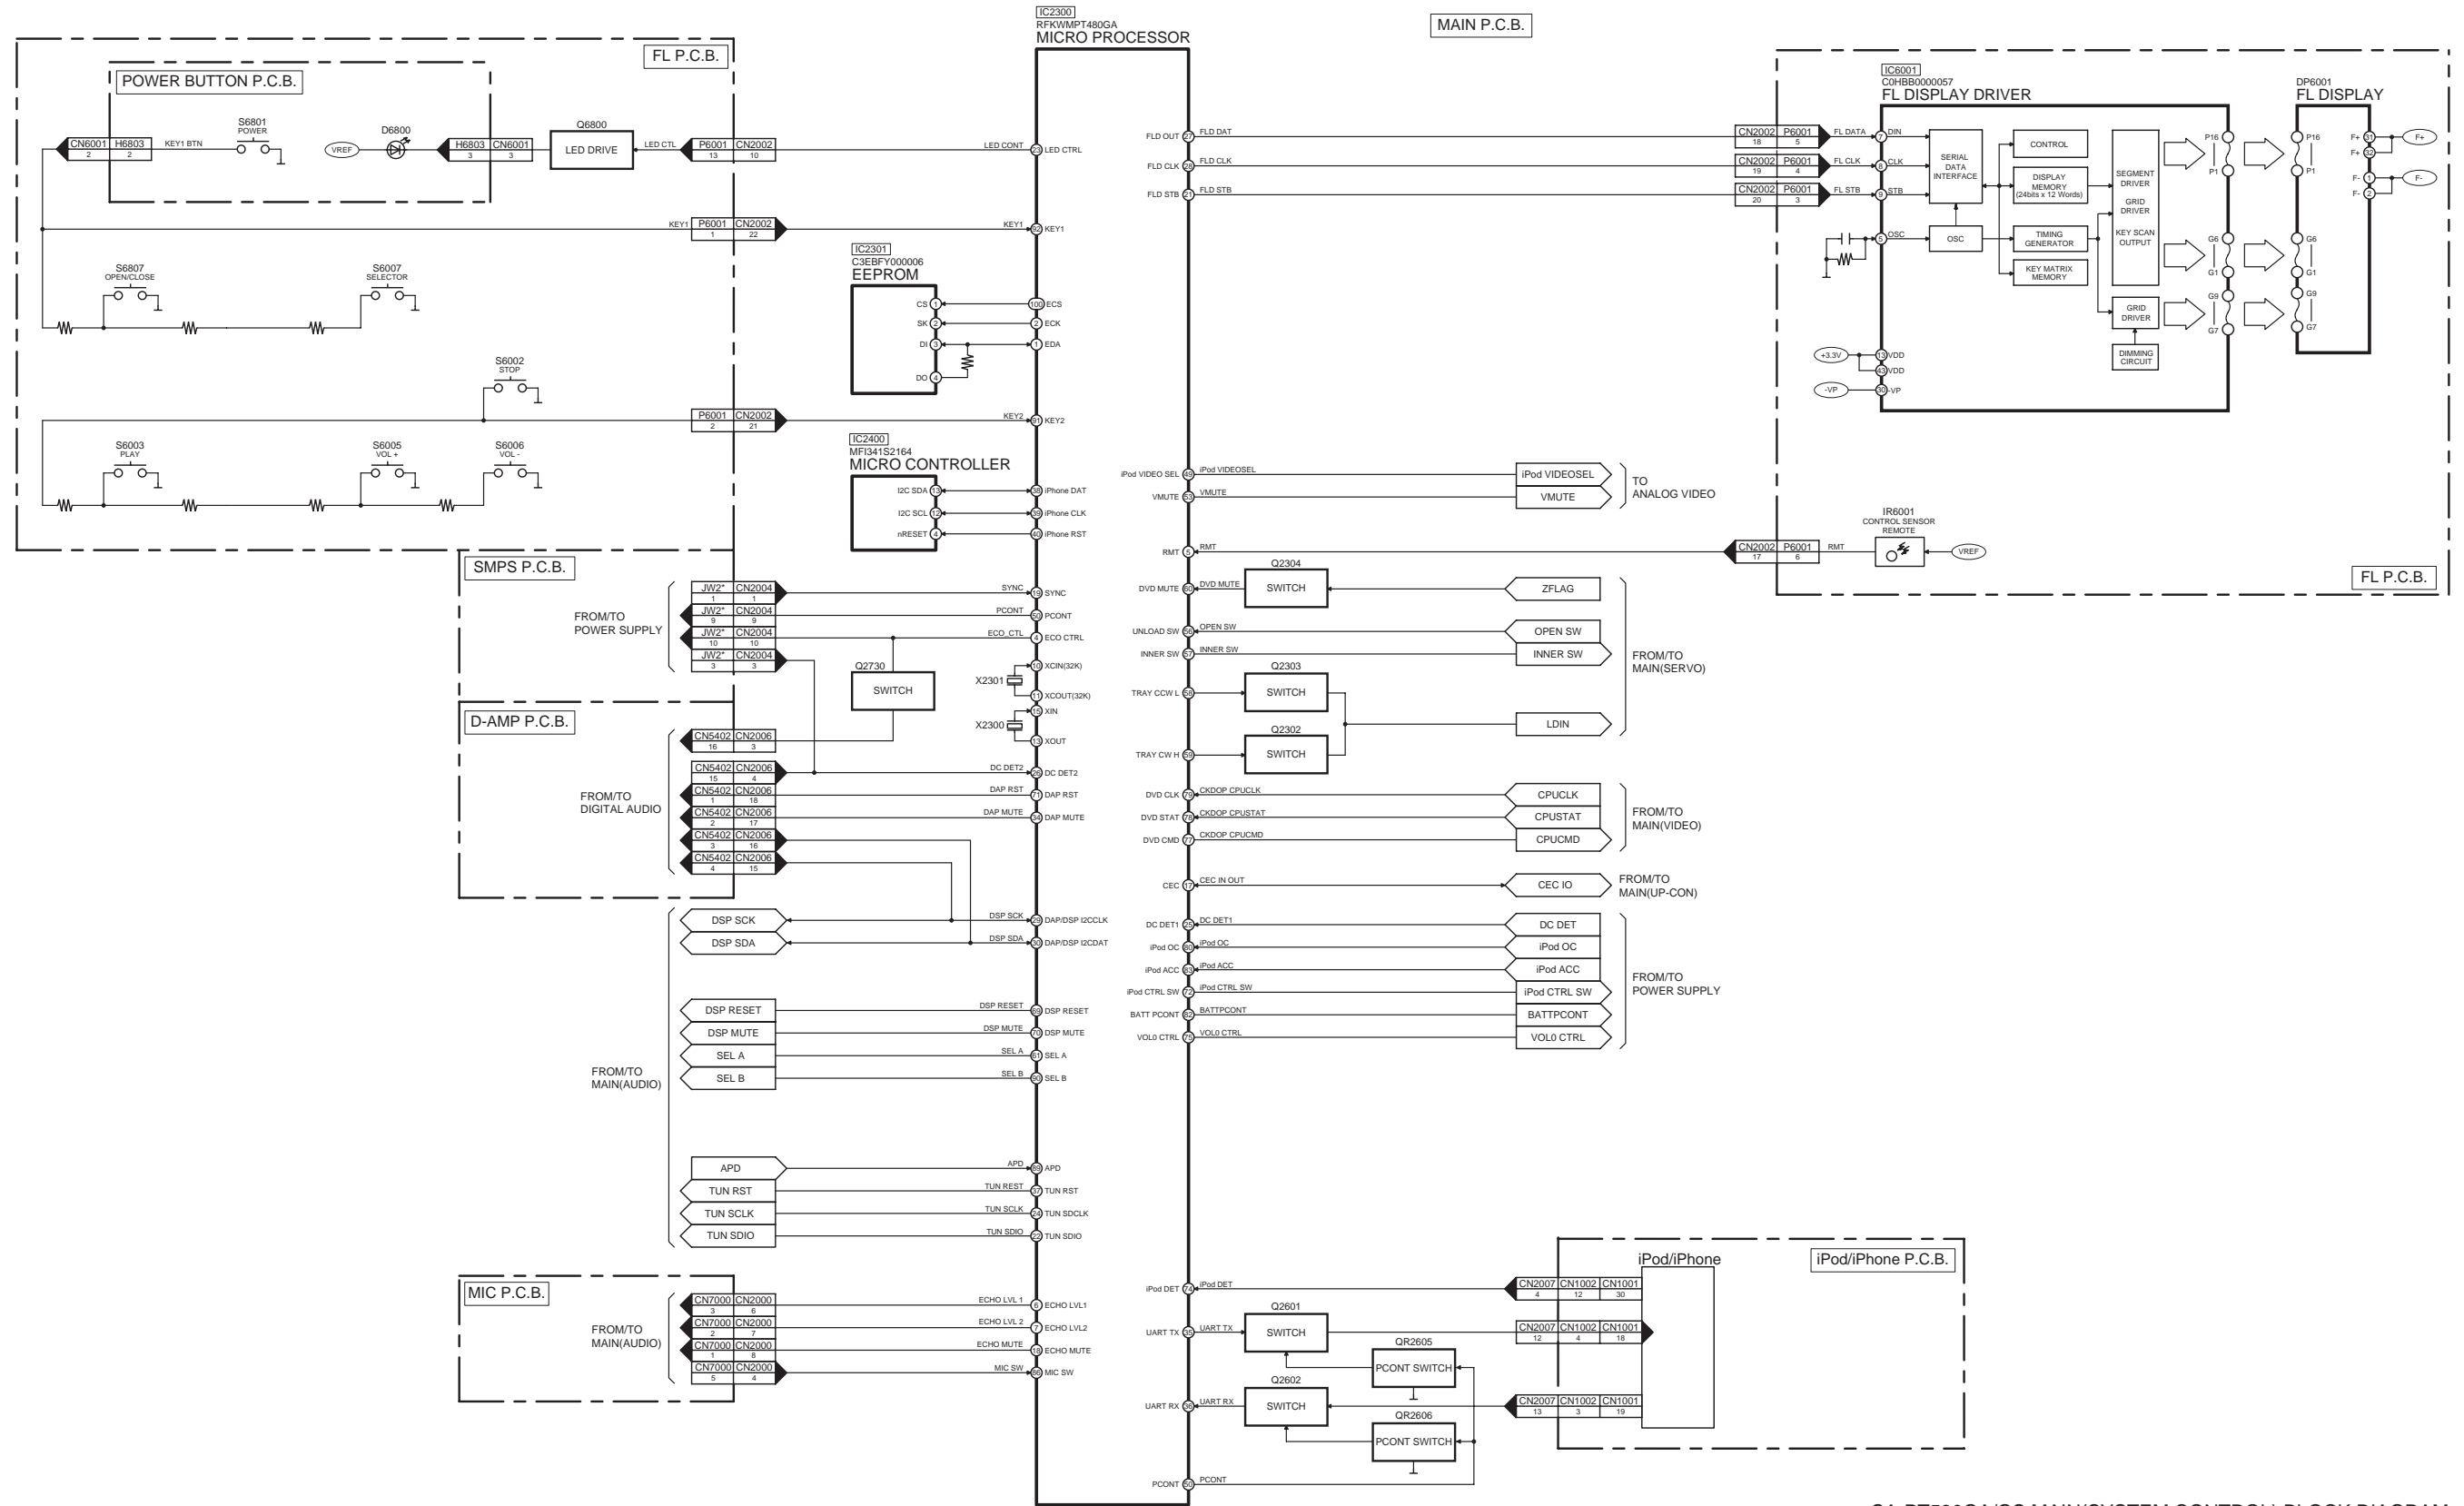
14.2. Main(System Control)



SA-PT580GA/GS MAIN(SYSTEM CONTROL) BLOCK DIAGRAM

14.3. Main(UP-CON)

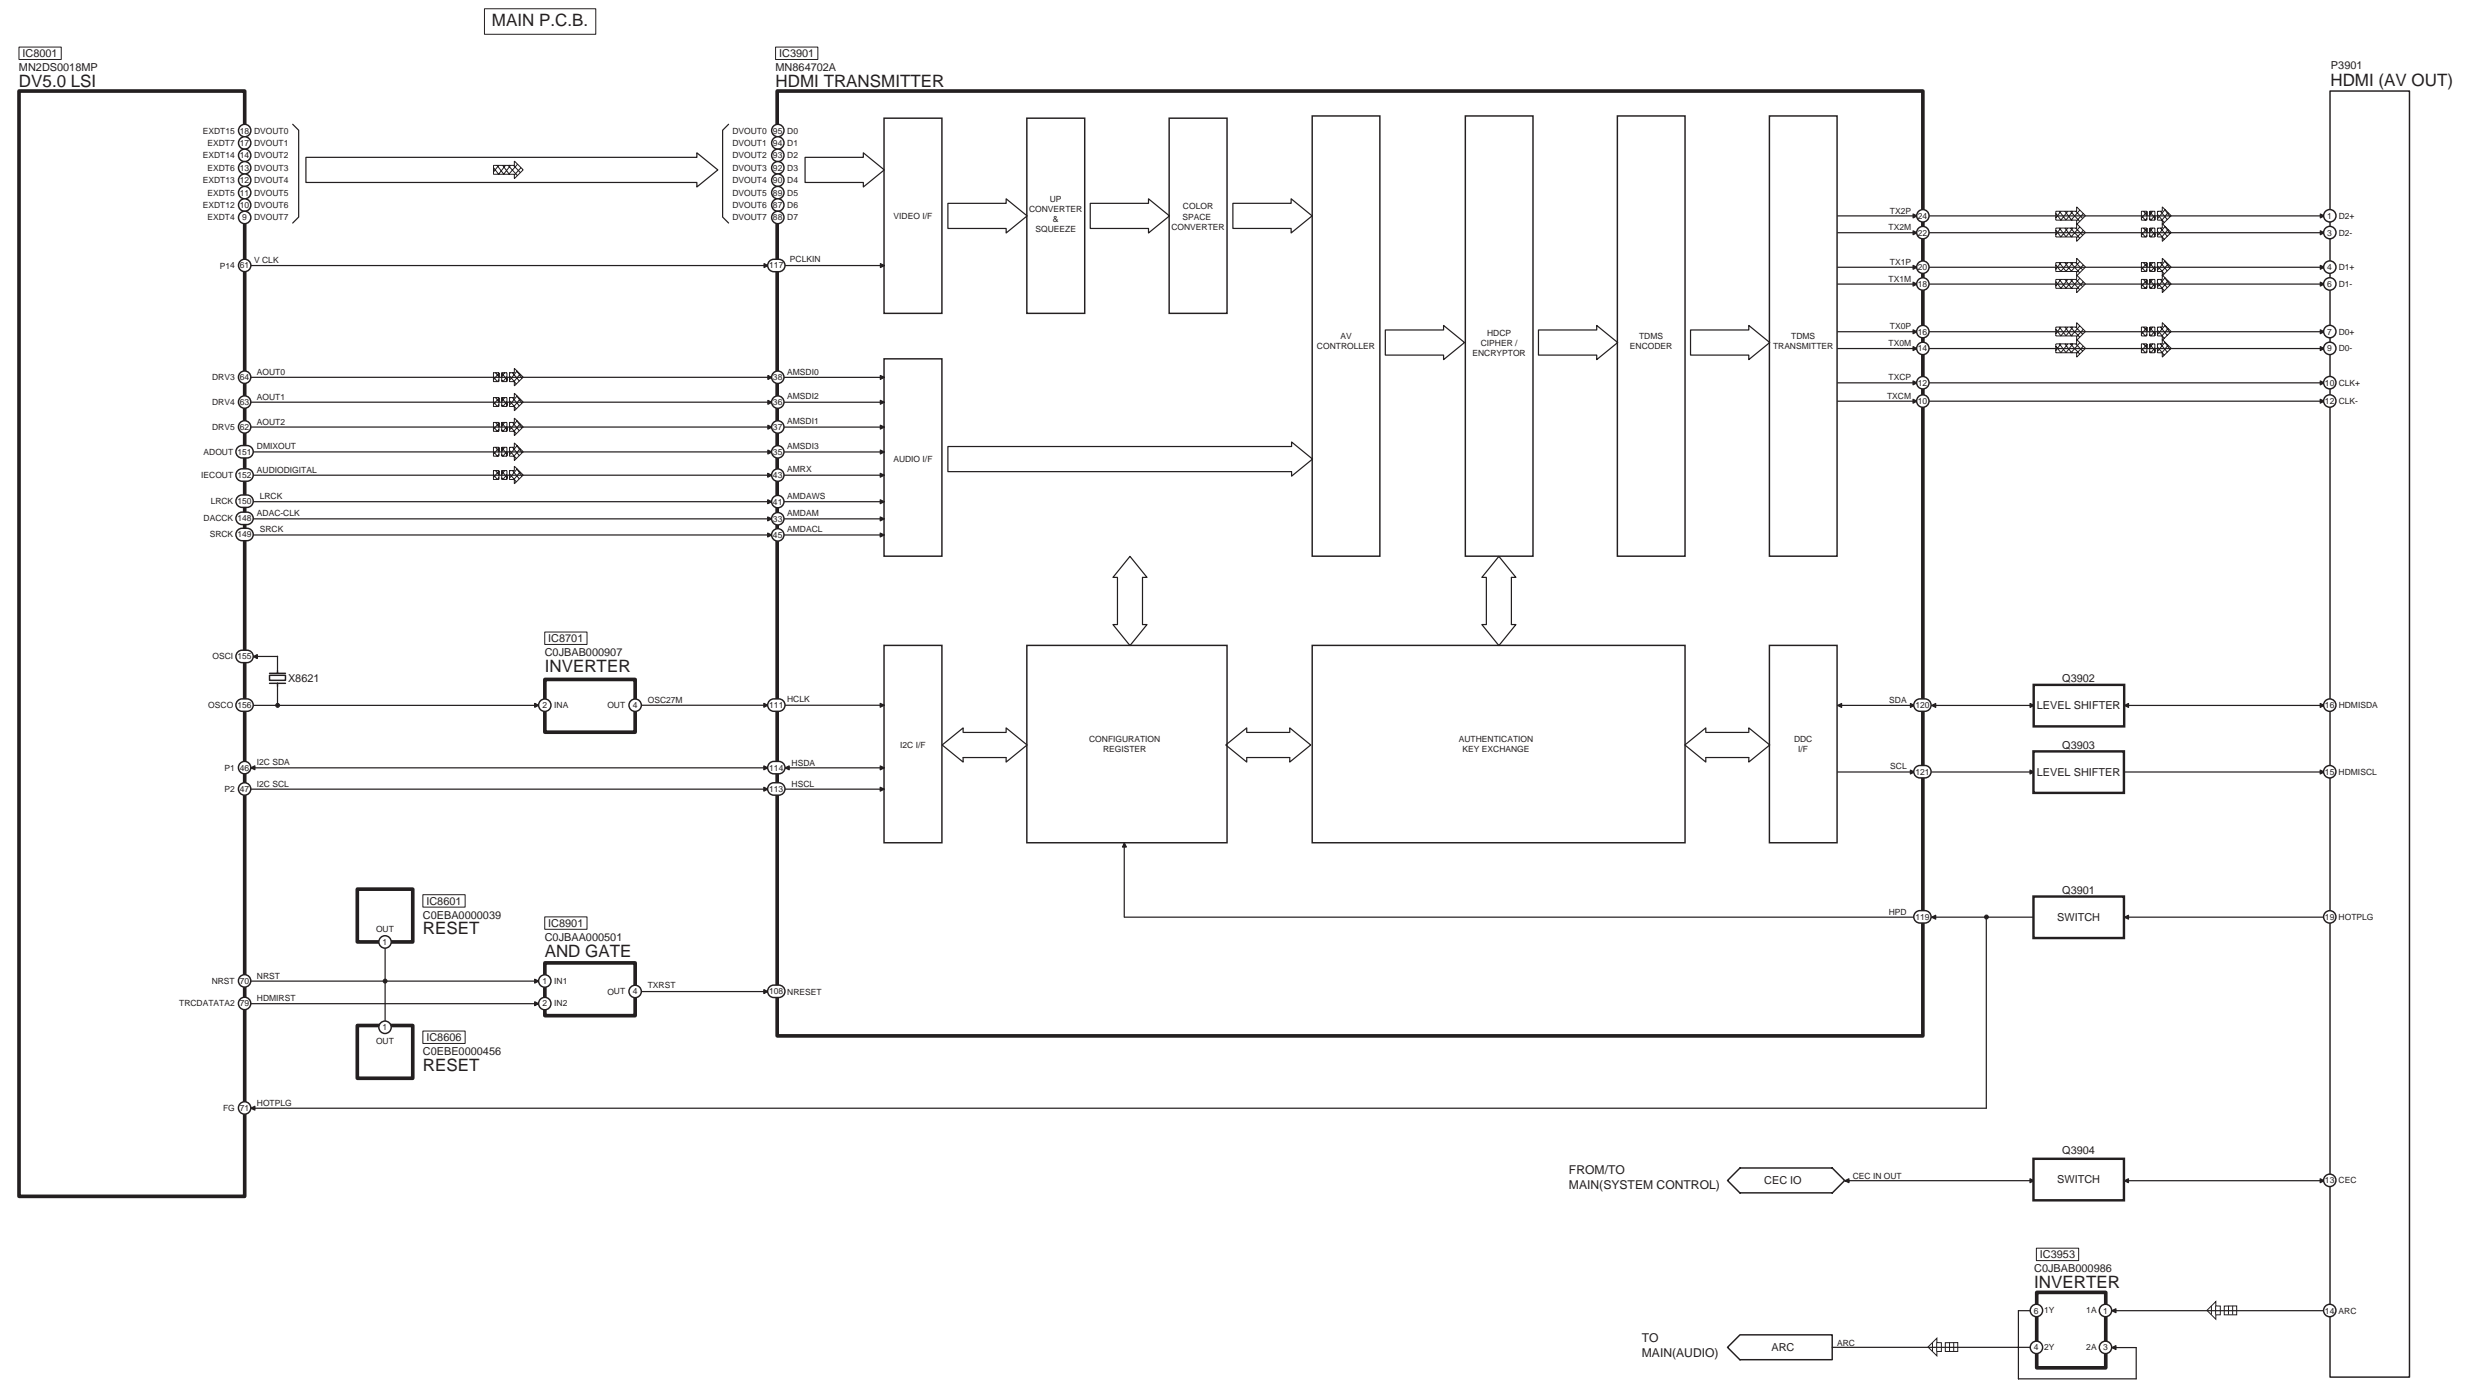
 : HDMI AUDIO INPUT SIGNAL LINE
  : AUDIO OUTPUT SIGNAL LINE
  : VIDEO OUTPUT SIGNAL LINE



SA-PT580GA/GS MAIN(UP-CON) BLOCK DIAGRAM

14.4. Main(Audio)

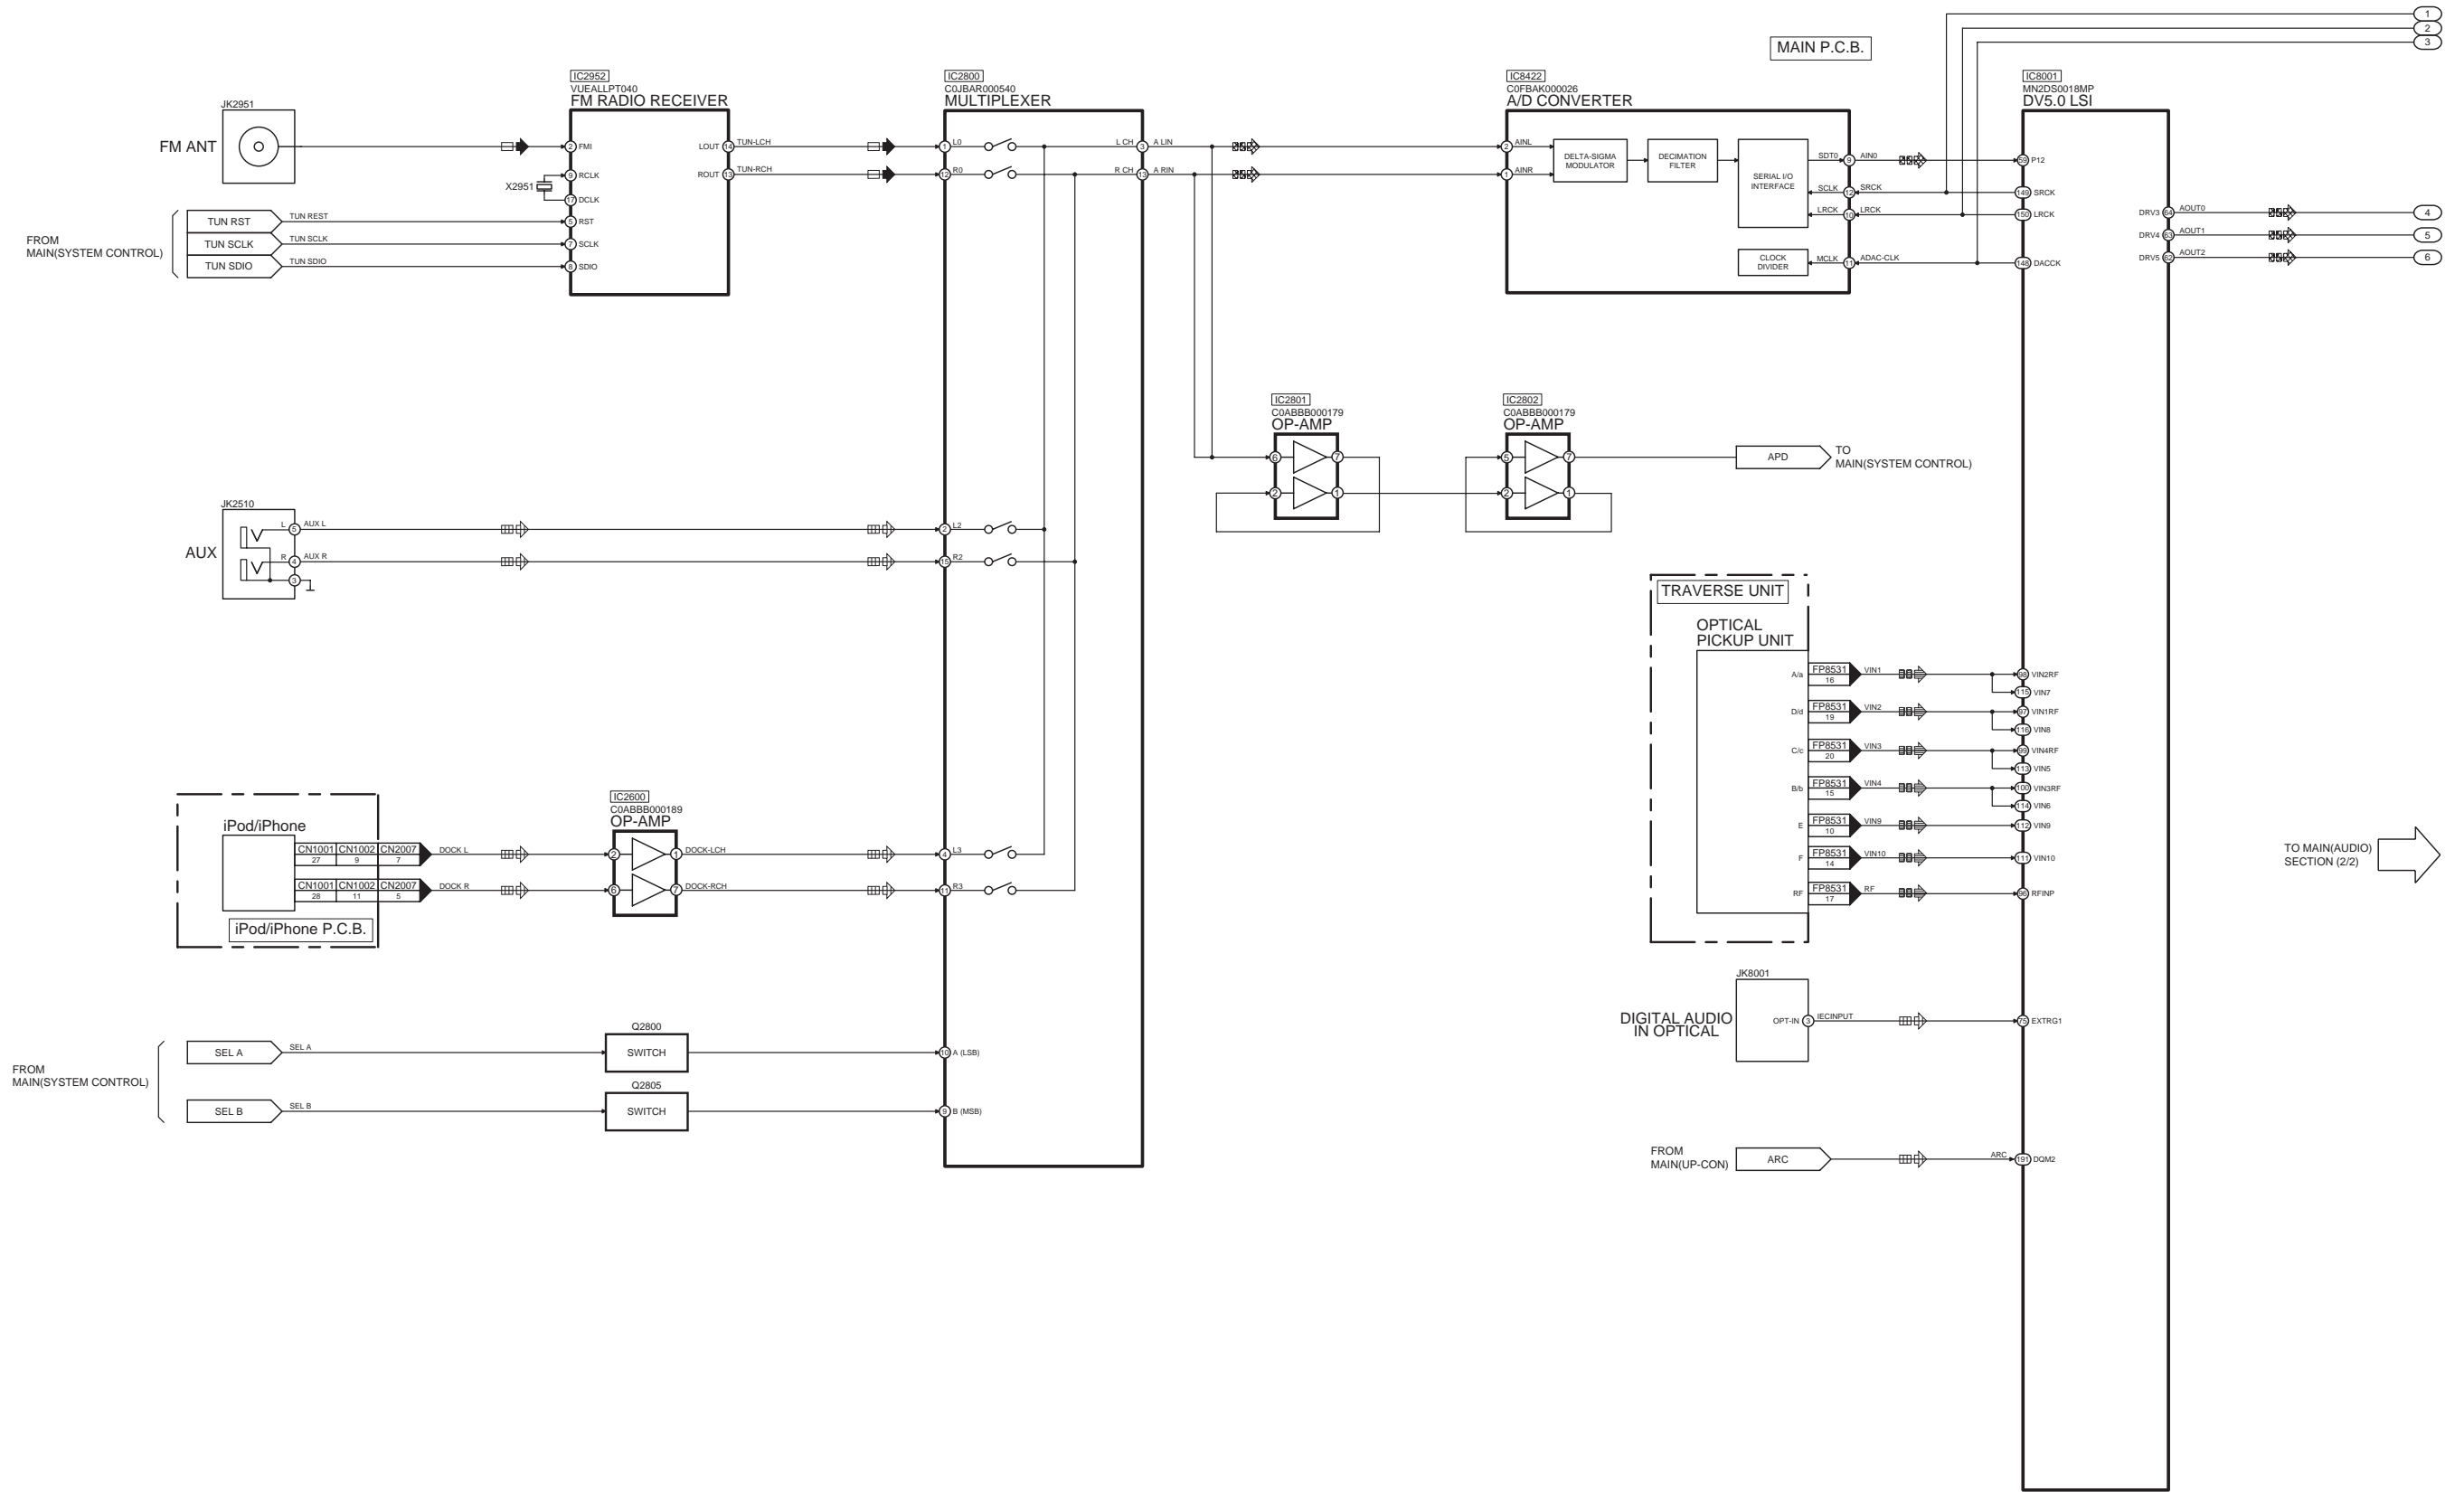
: CD/DVD AUDIO INPUT SIGNAL LINE
 : AUX/iPod/OPTICAL/HDMI/MIC AUDIO INPUT SIGNAL LINE
 : AUDIO OUTPUT SIGNAL LINE
 : FM SIGNAL LINE



SA-PT580GA/GS MAIN(AUDIO) (1/2) BLOCK DIAGRAM

 : CD/DVD AUDIO INPUT SIGNAL LINE
  : AUX/MP3/OPTICAL/HDMI/MIC AUDIO INPUT SIGNAL LINE
  : AUDIO OUTPUT SIGNAL LINE
  : FM SIGNAL LINE

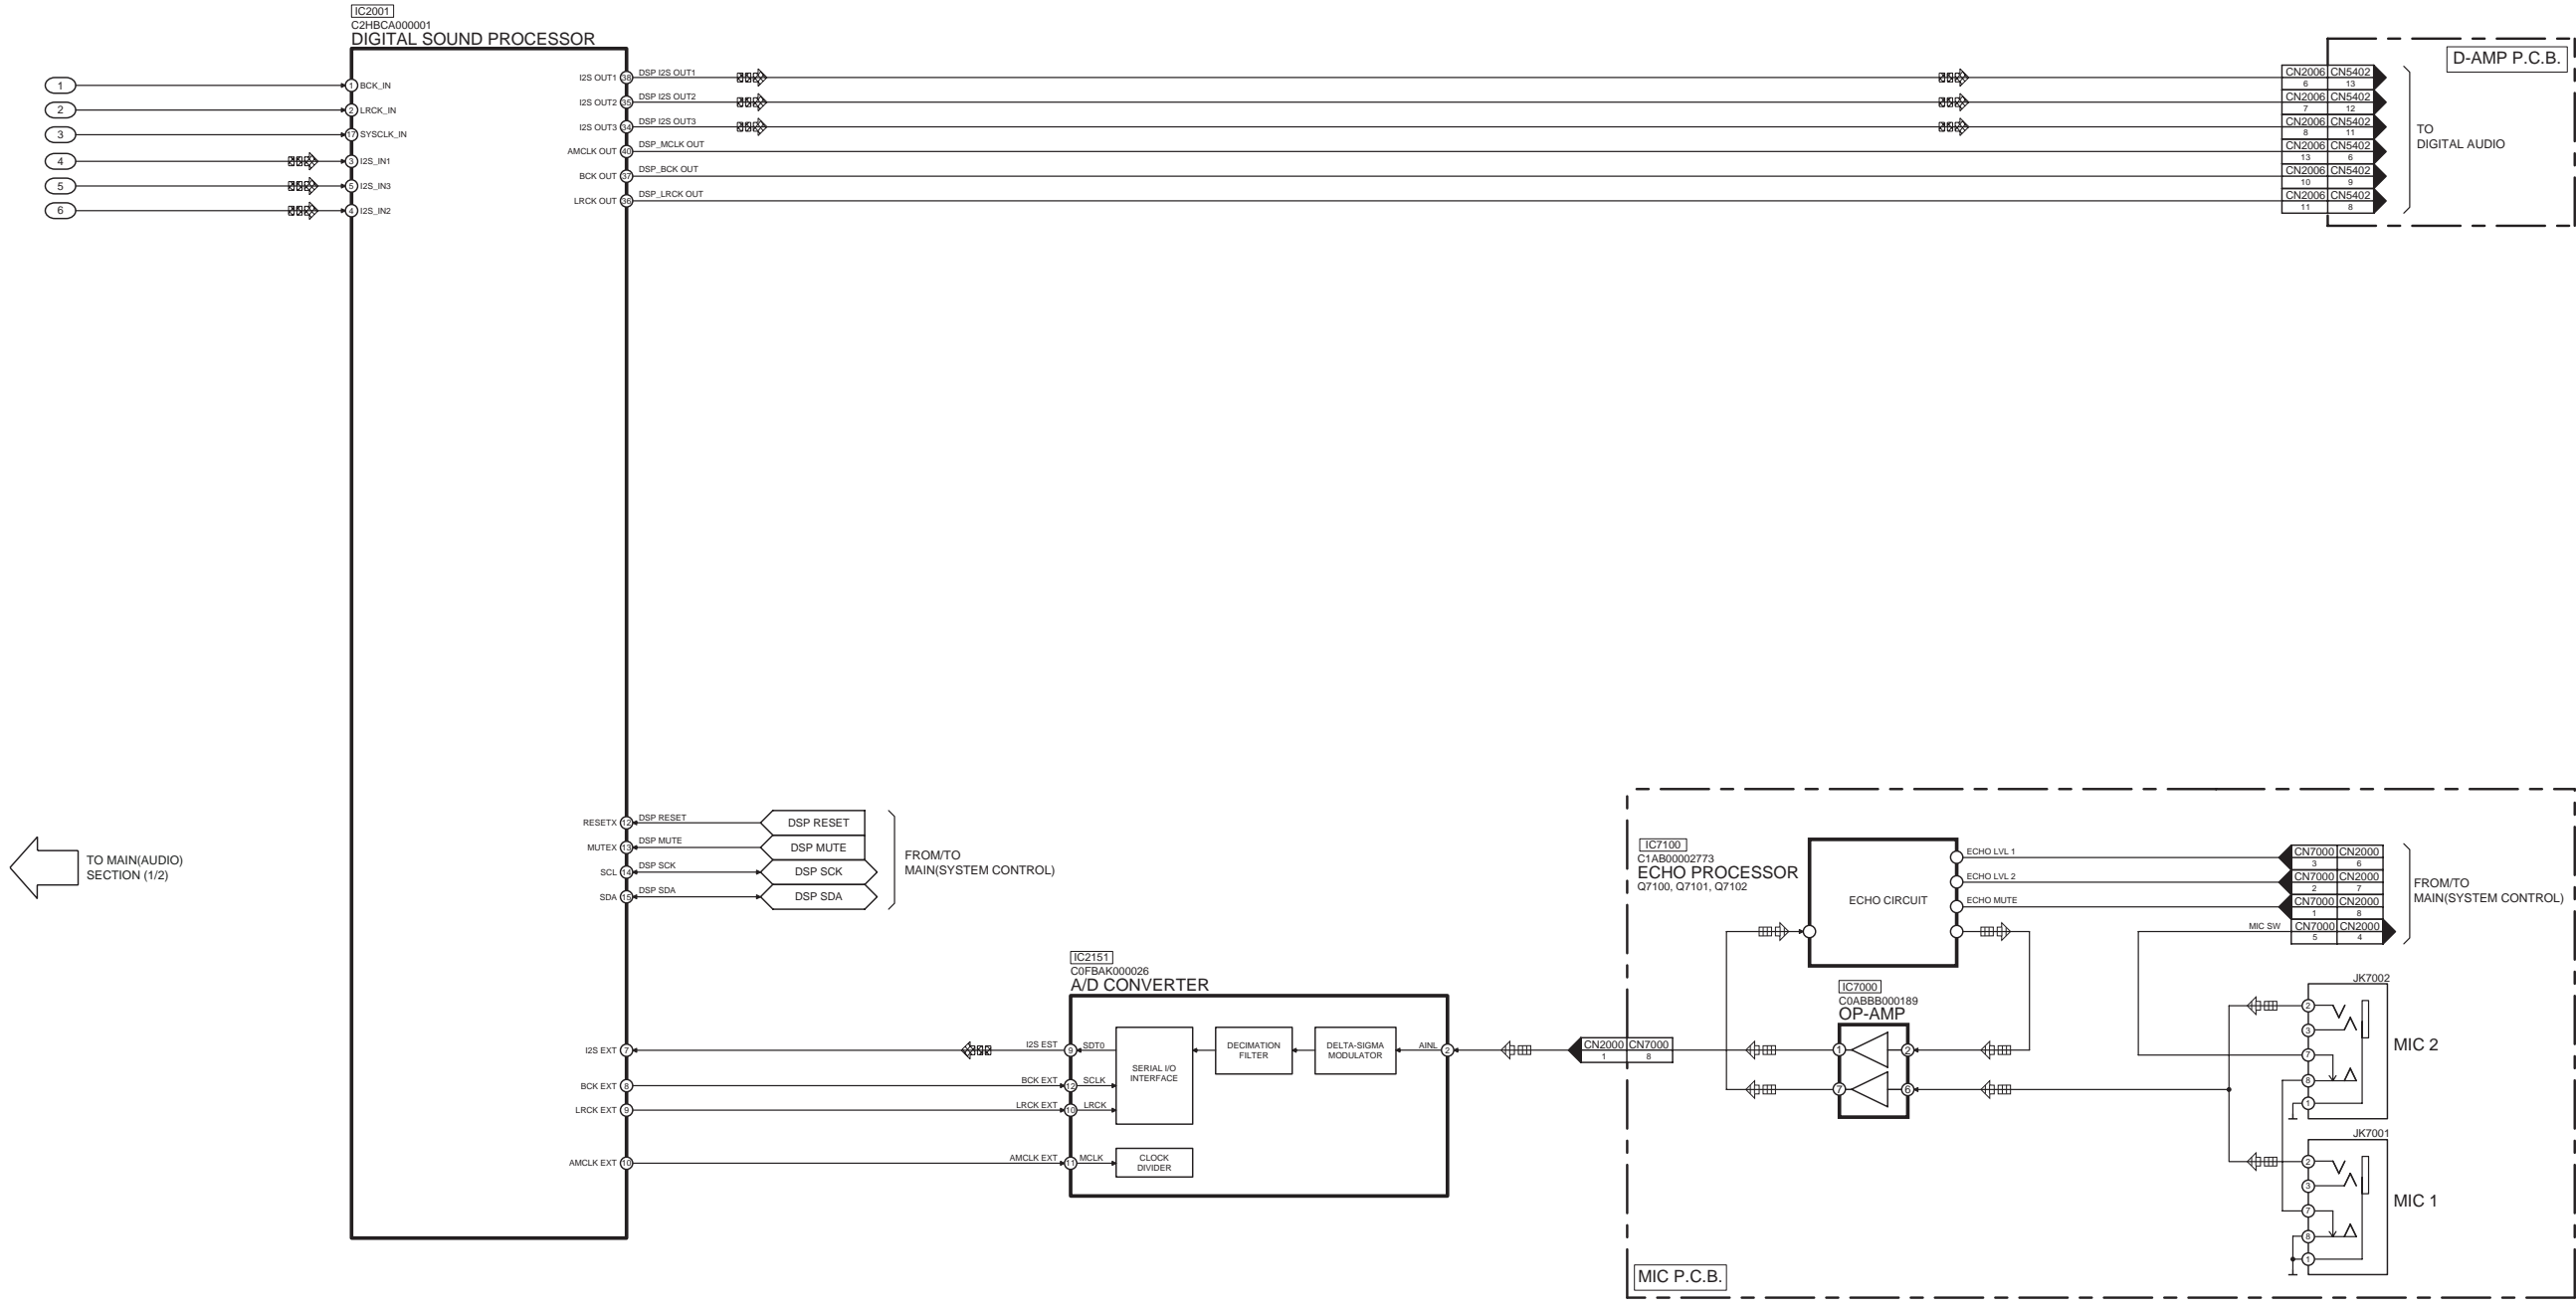MAIN P.C.B.




← TO MAIN(AUDIO) SECTION (1/2)

SA-PT580GA/GS MAIN(AUDIO) (2/2) BLOCK DIAGRAM

14.5. Main(Video)

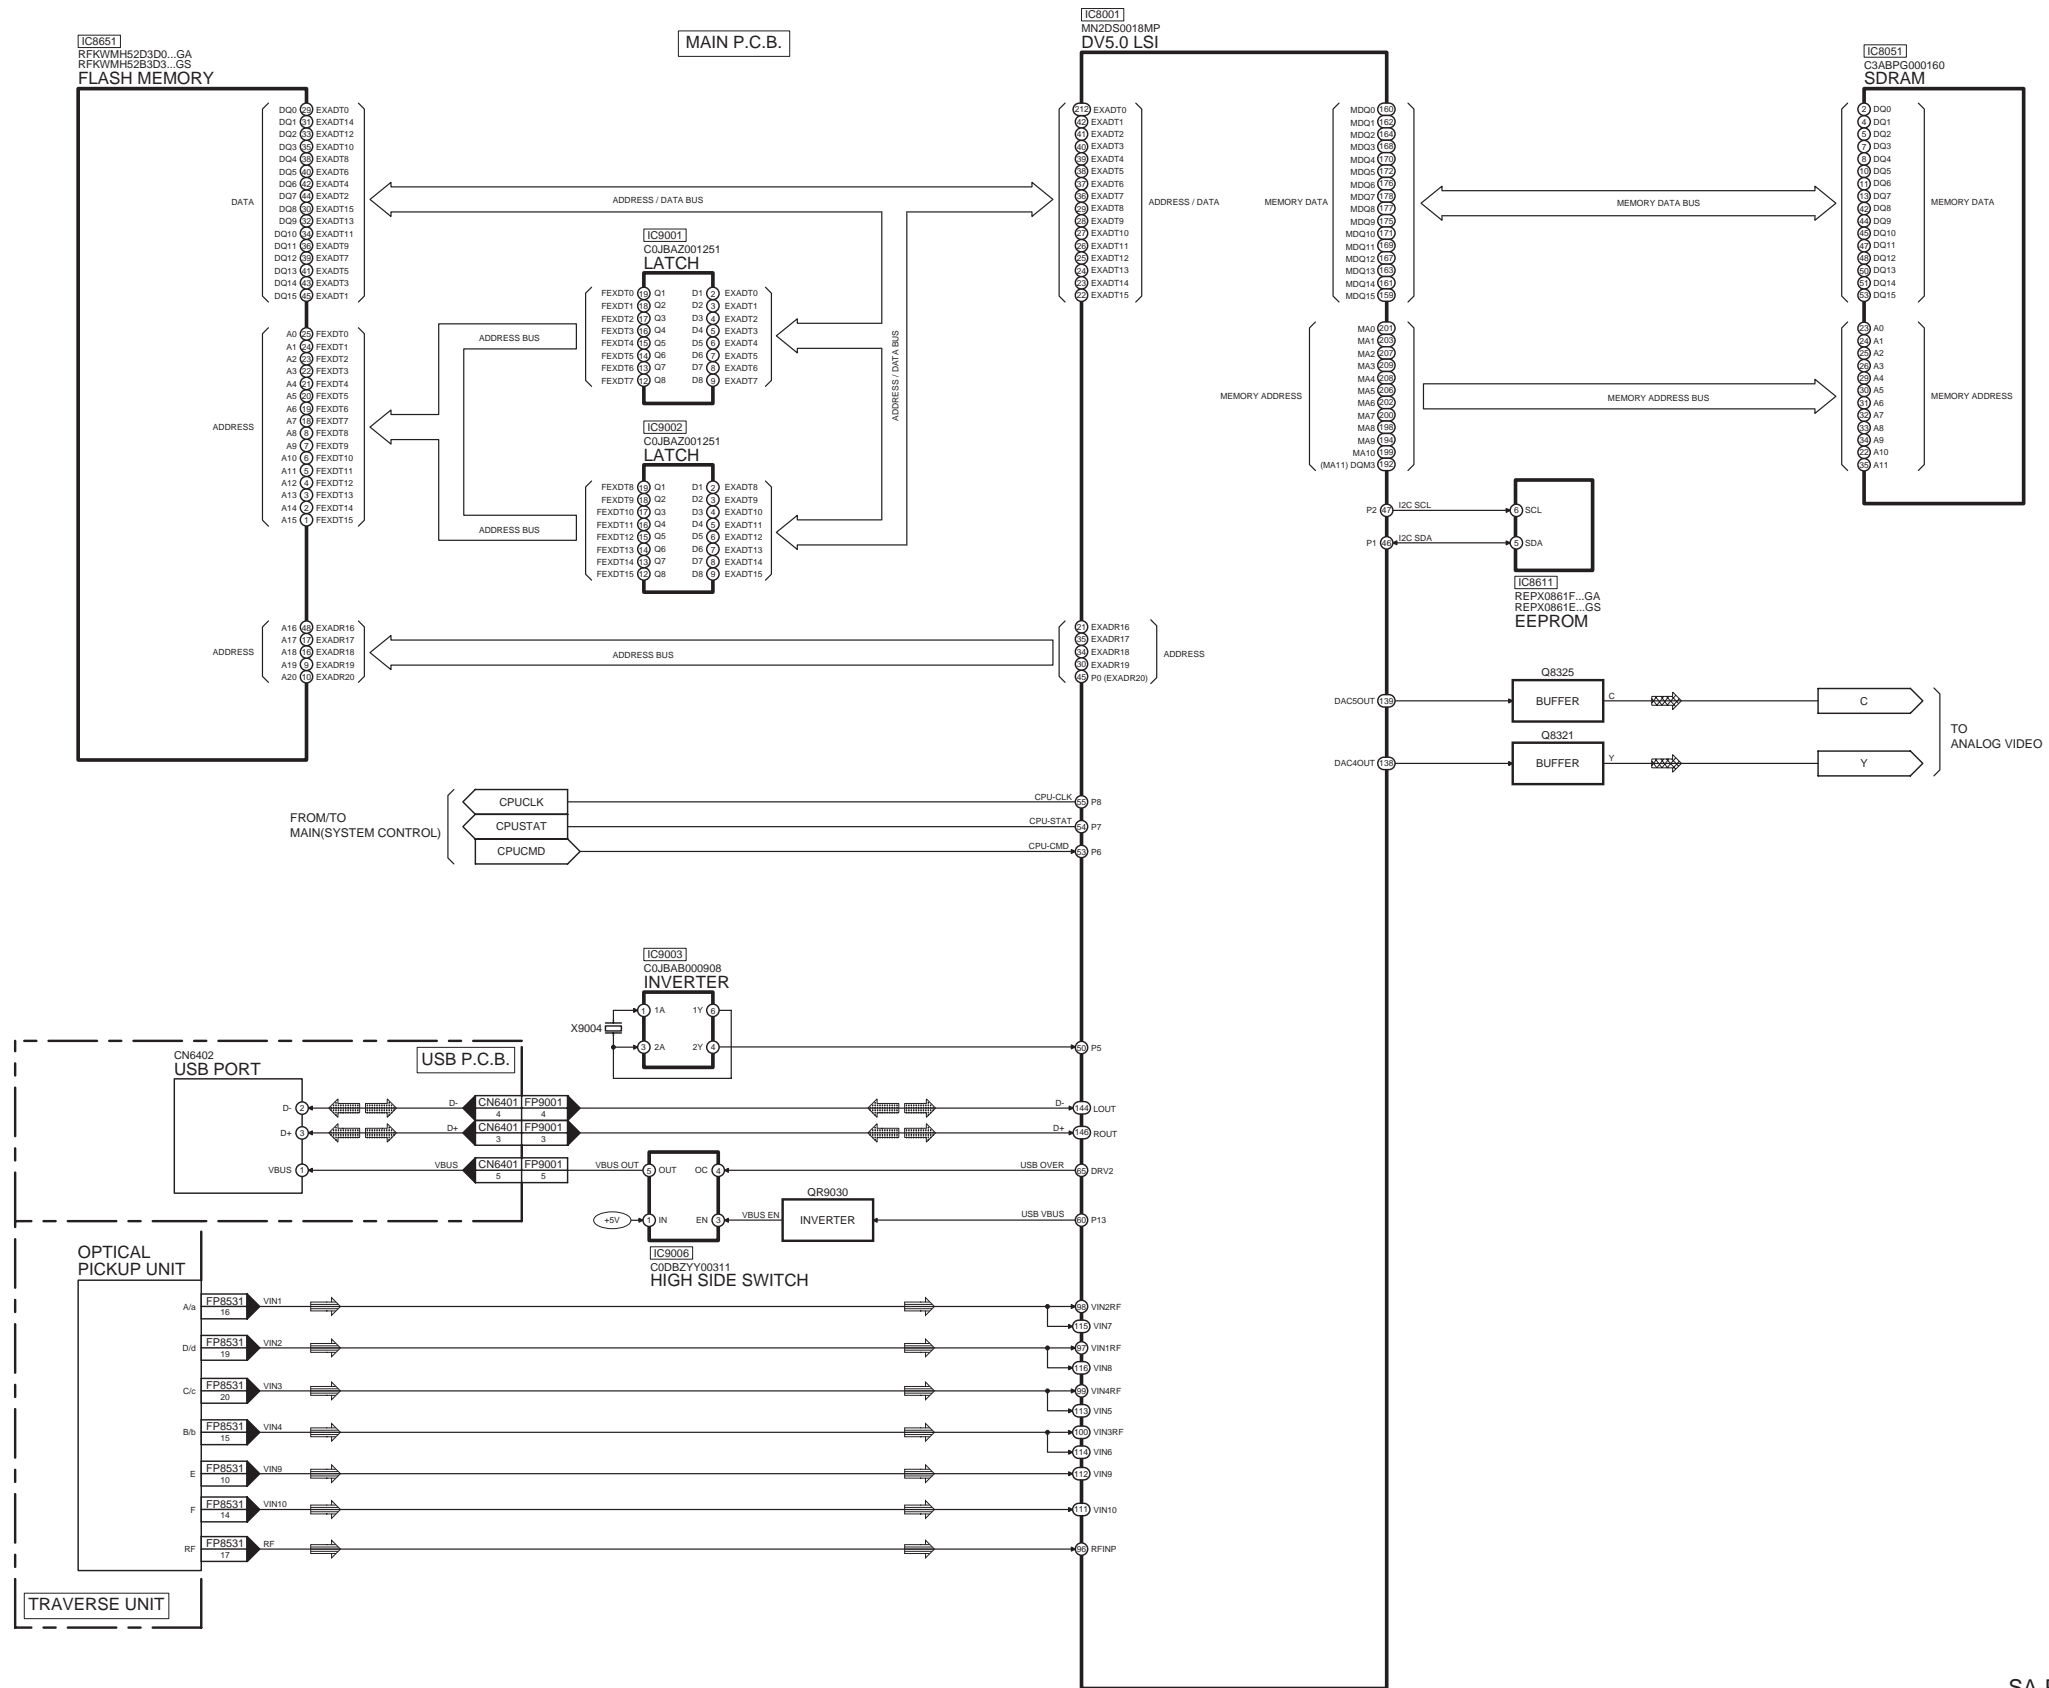
⇒ : CD/DVD VIDEO INPUT SIGNAL LINE ⇄ : VIDEO OUTPUT SIGNAL LINE ⇄ : USB SIGNAL LINE



SA-PT580GA/GS MAIN(VIDEO) BLOCK DIAGRAM

14.6. Digital Audio

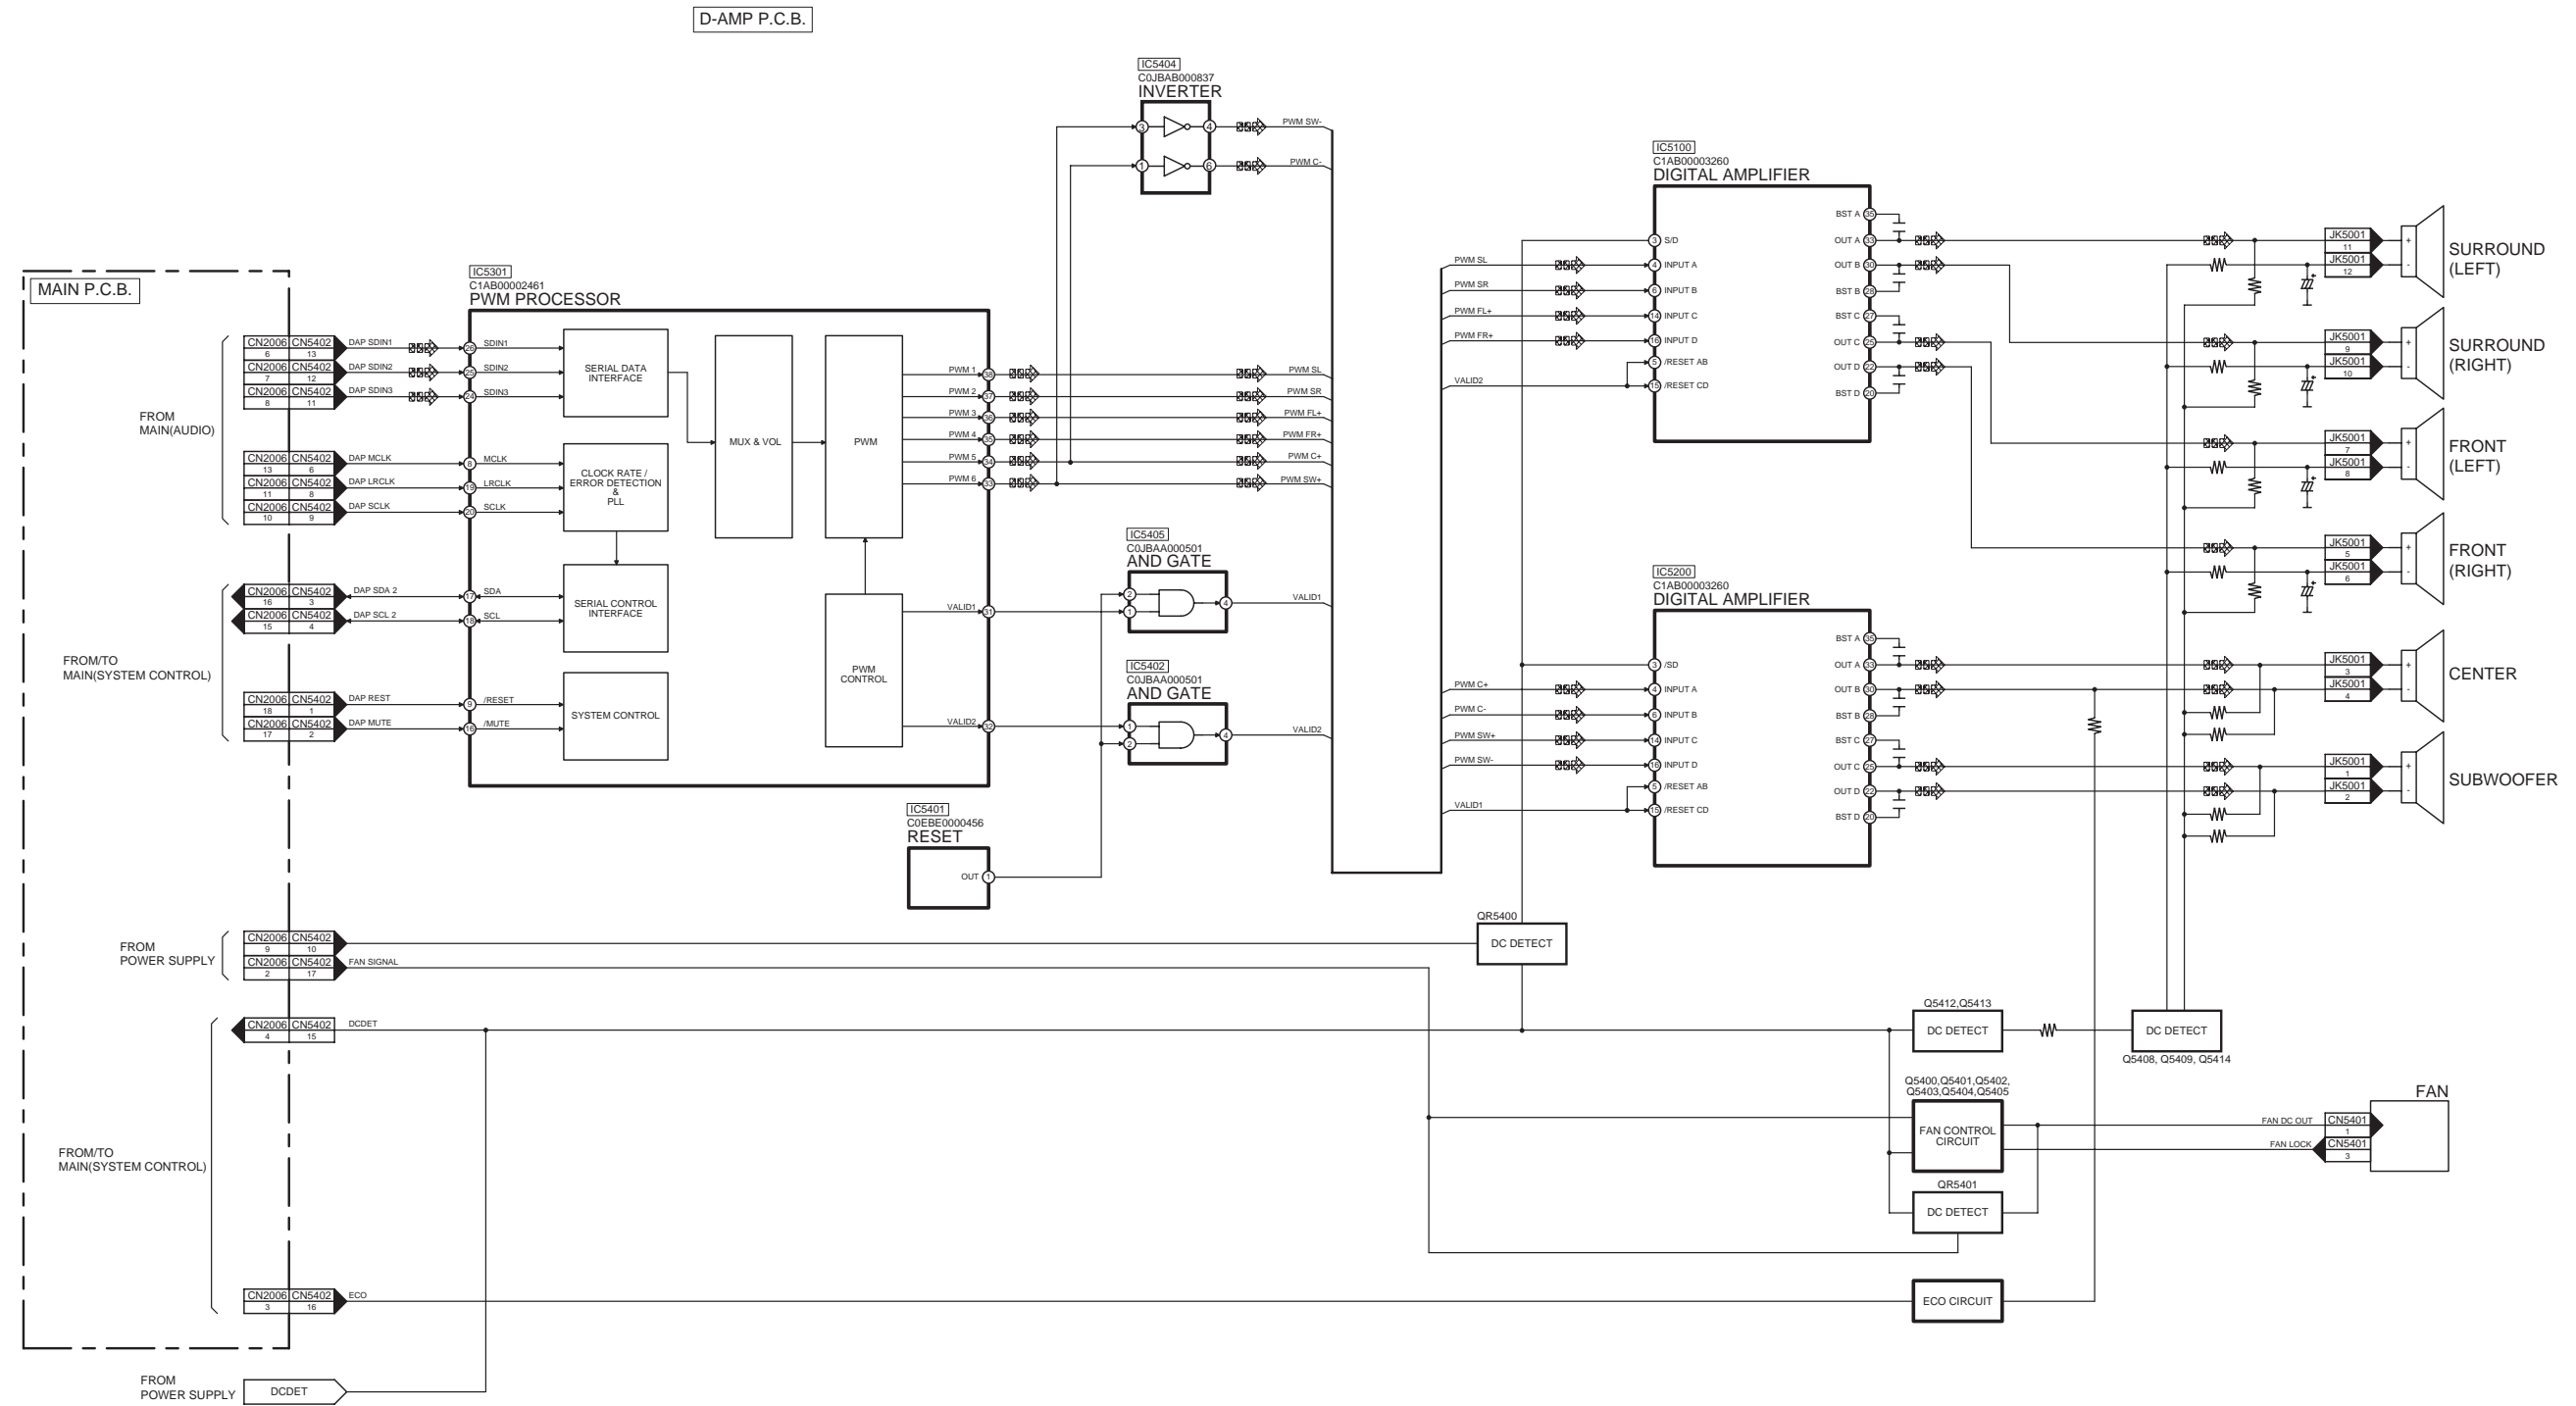
↔ : AUDIO OUTPUT SIGNAL LINE



SA-PT580GA/GS DIGITAL AUDIO BLOCK DIAGRAM


14.7. Analog Video

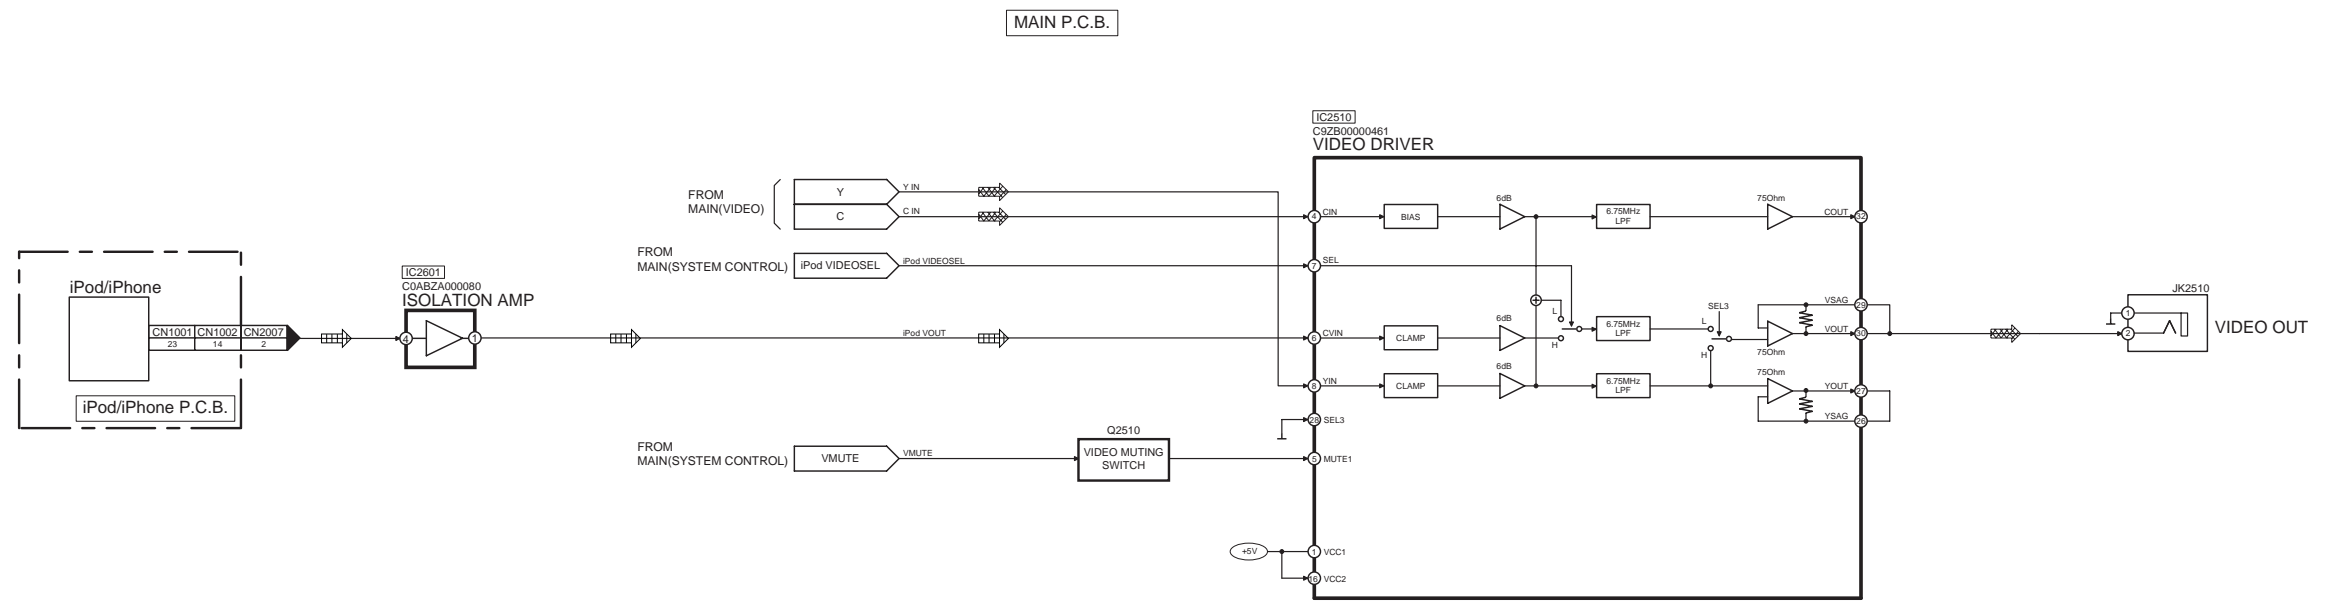▬▬▬: iPod VIDEO INPUT SIGNAL LINE ▬▬▬: VIDEO OUTPUT SIGNAL LINE




SA-PT580GA/GS ANALOG VIDEO BLOCK DIAGRAM

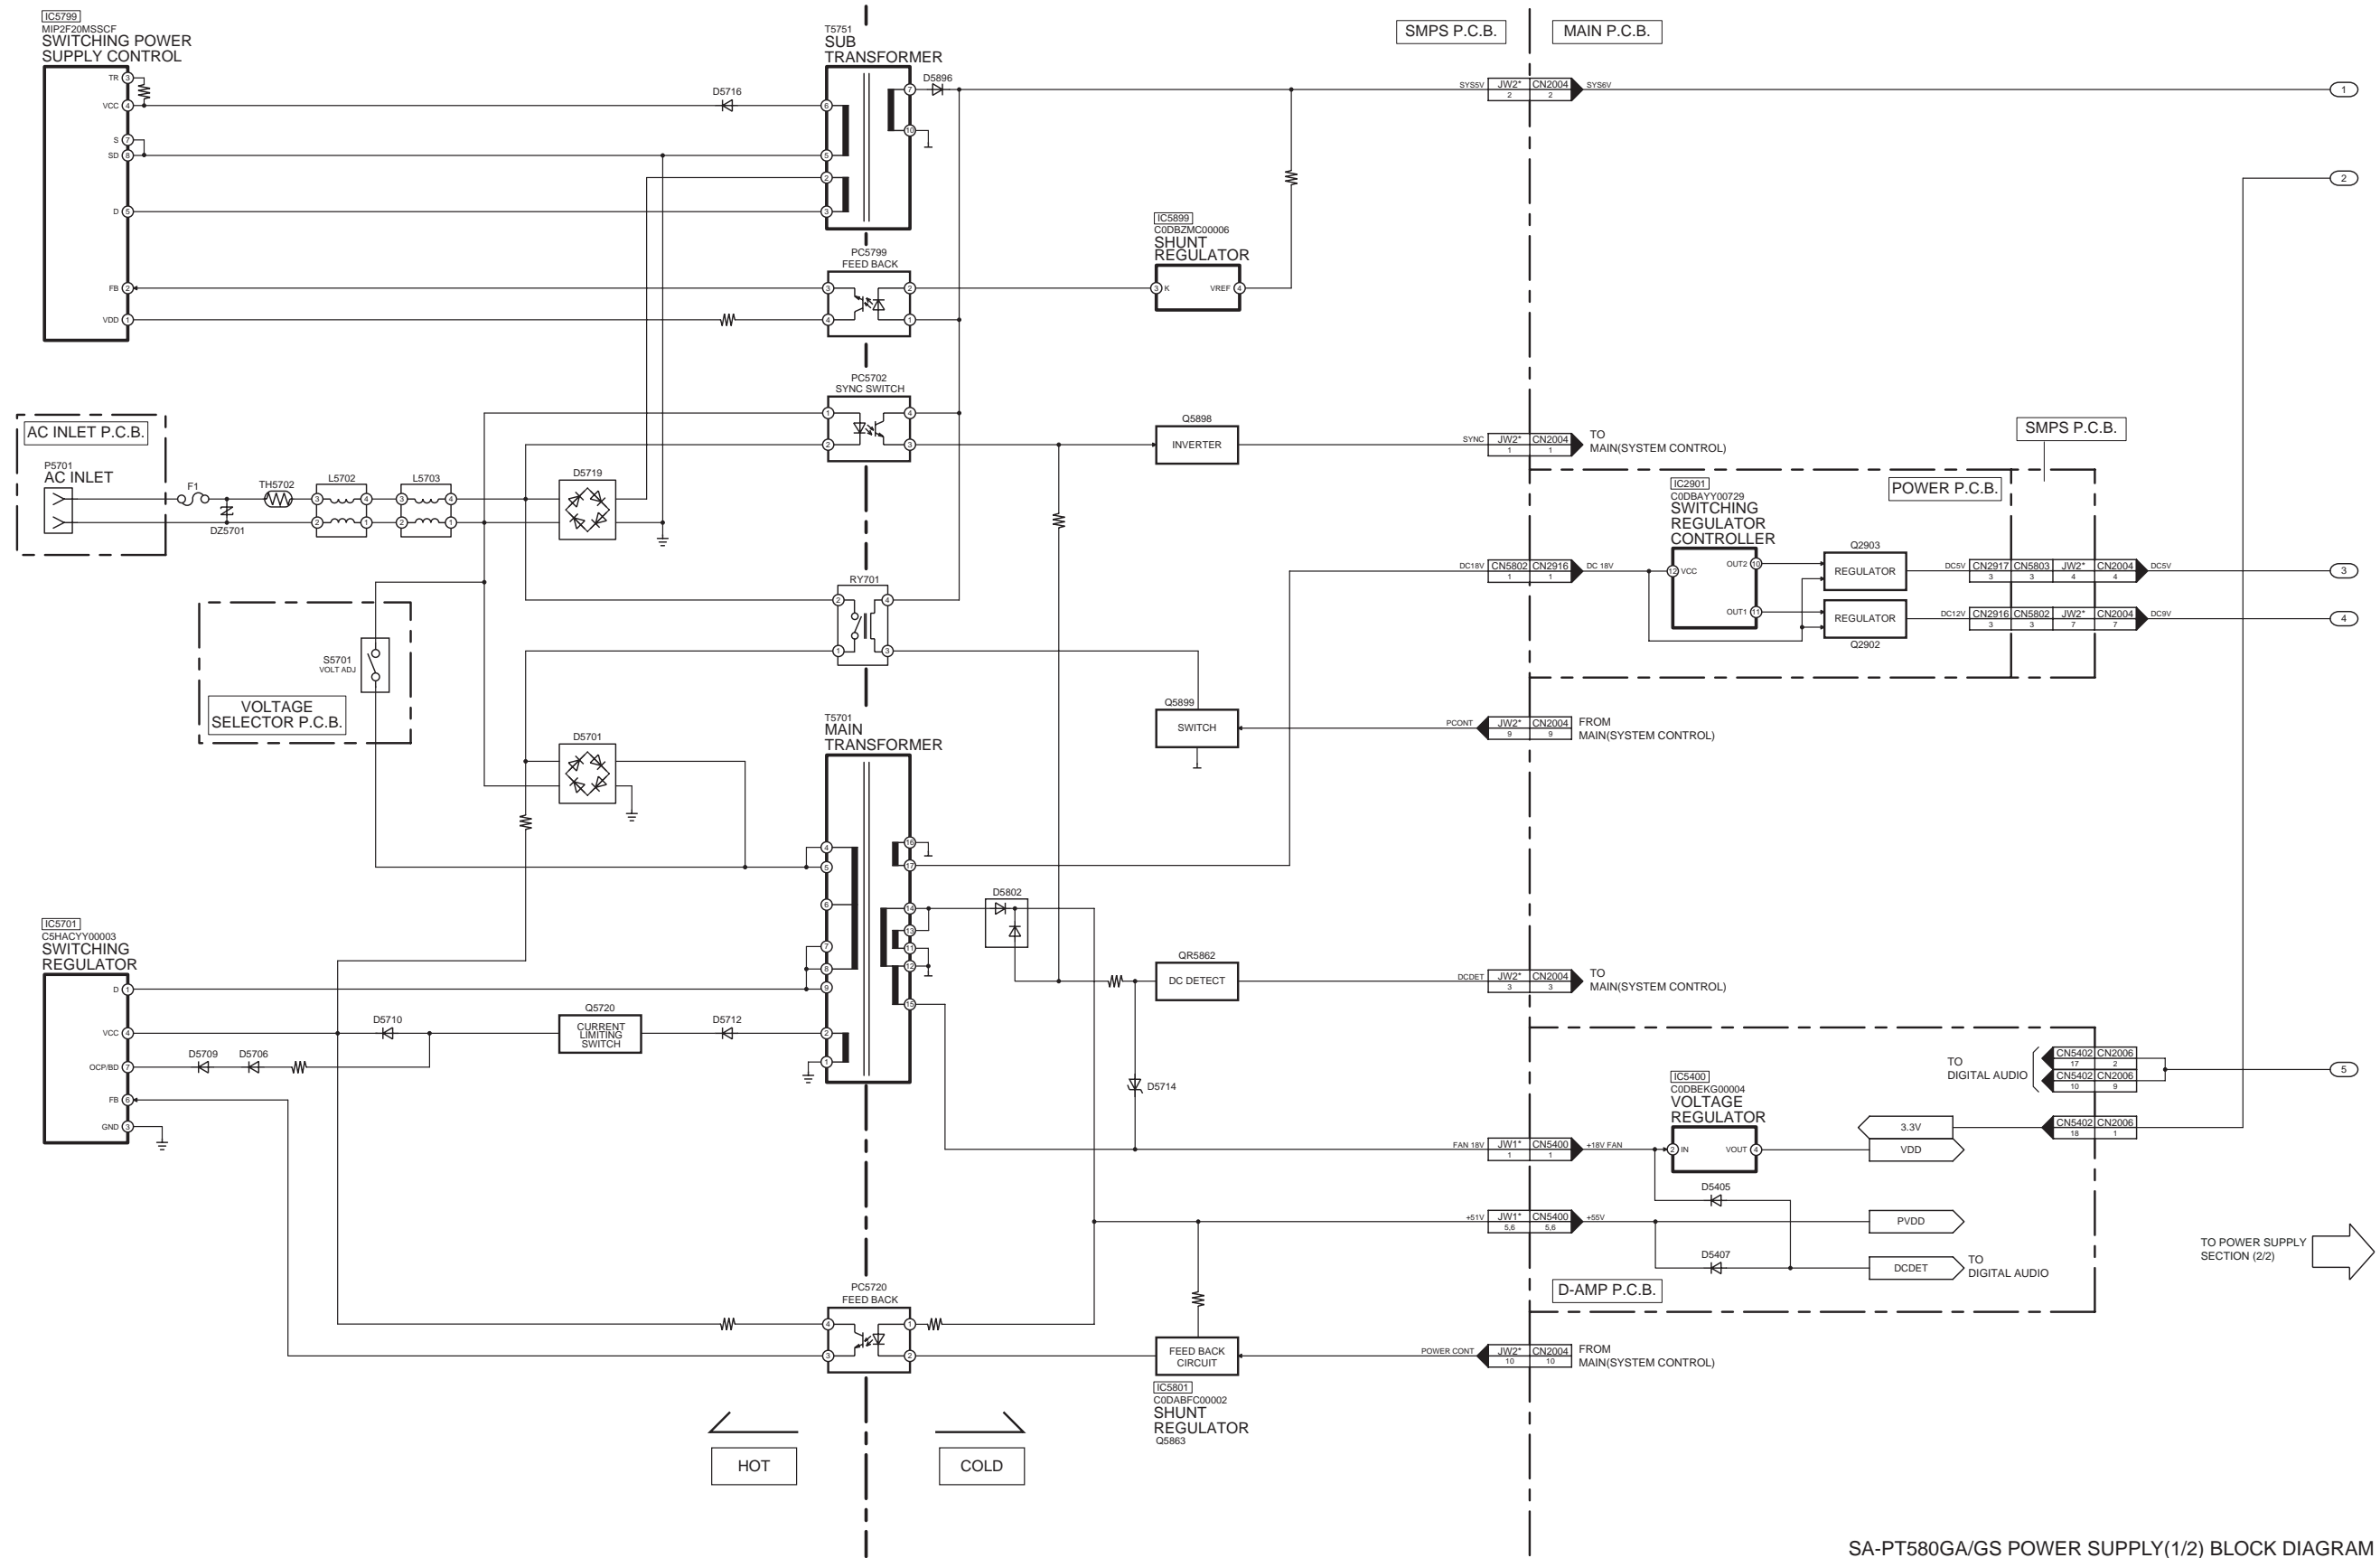14.8. Power Supply




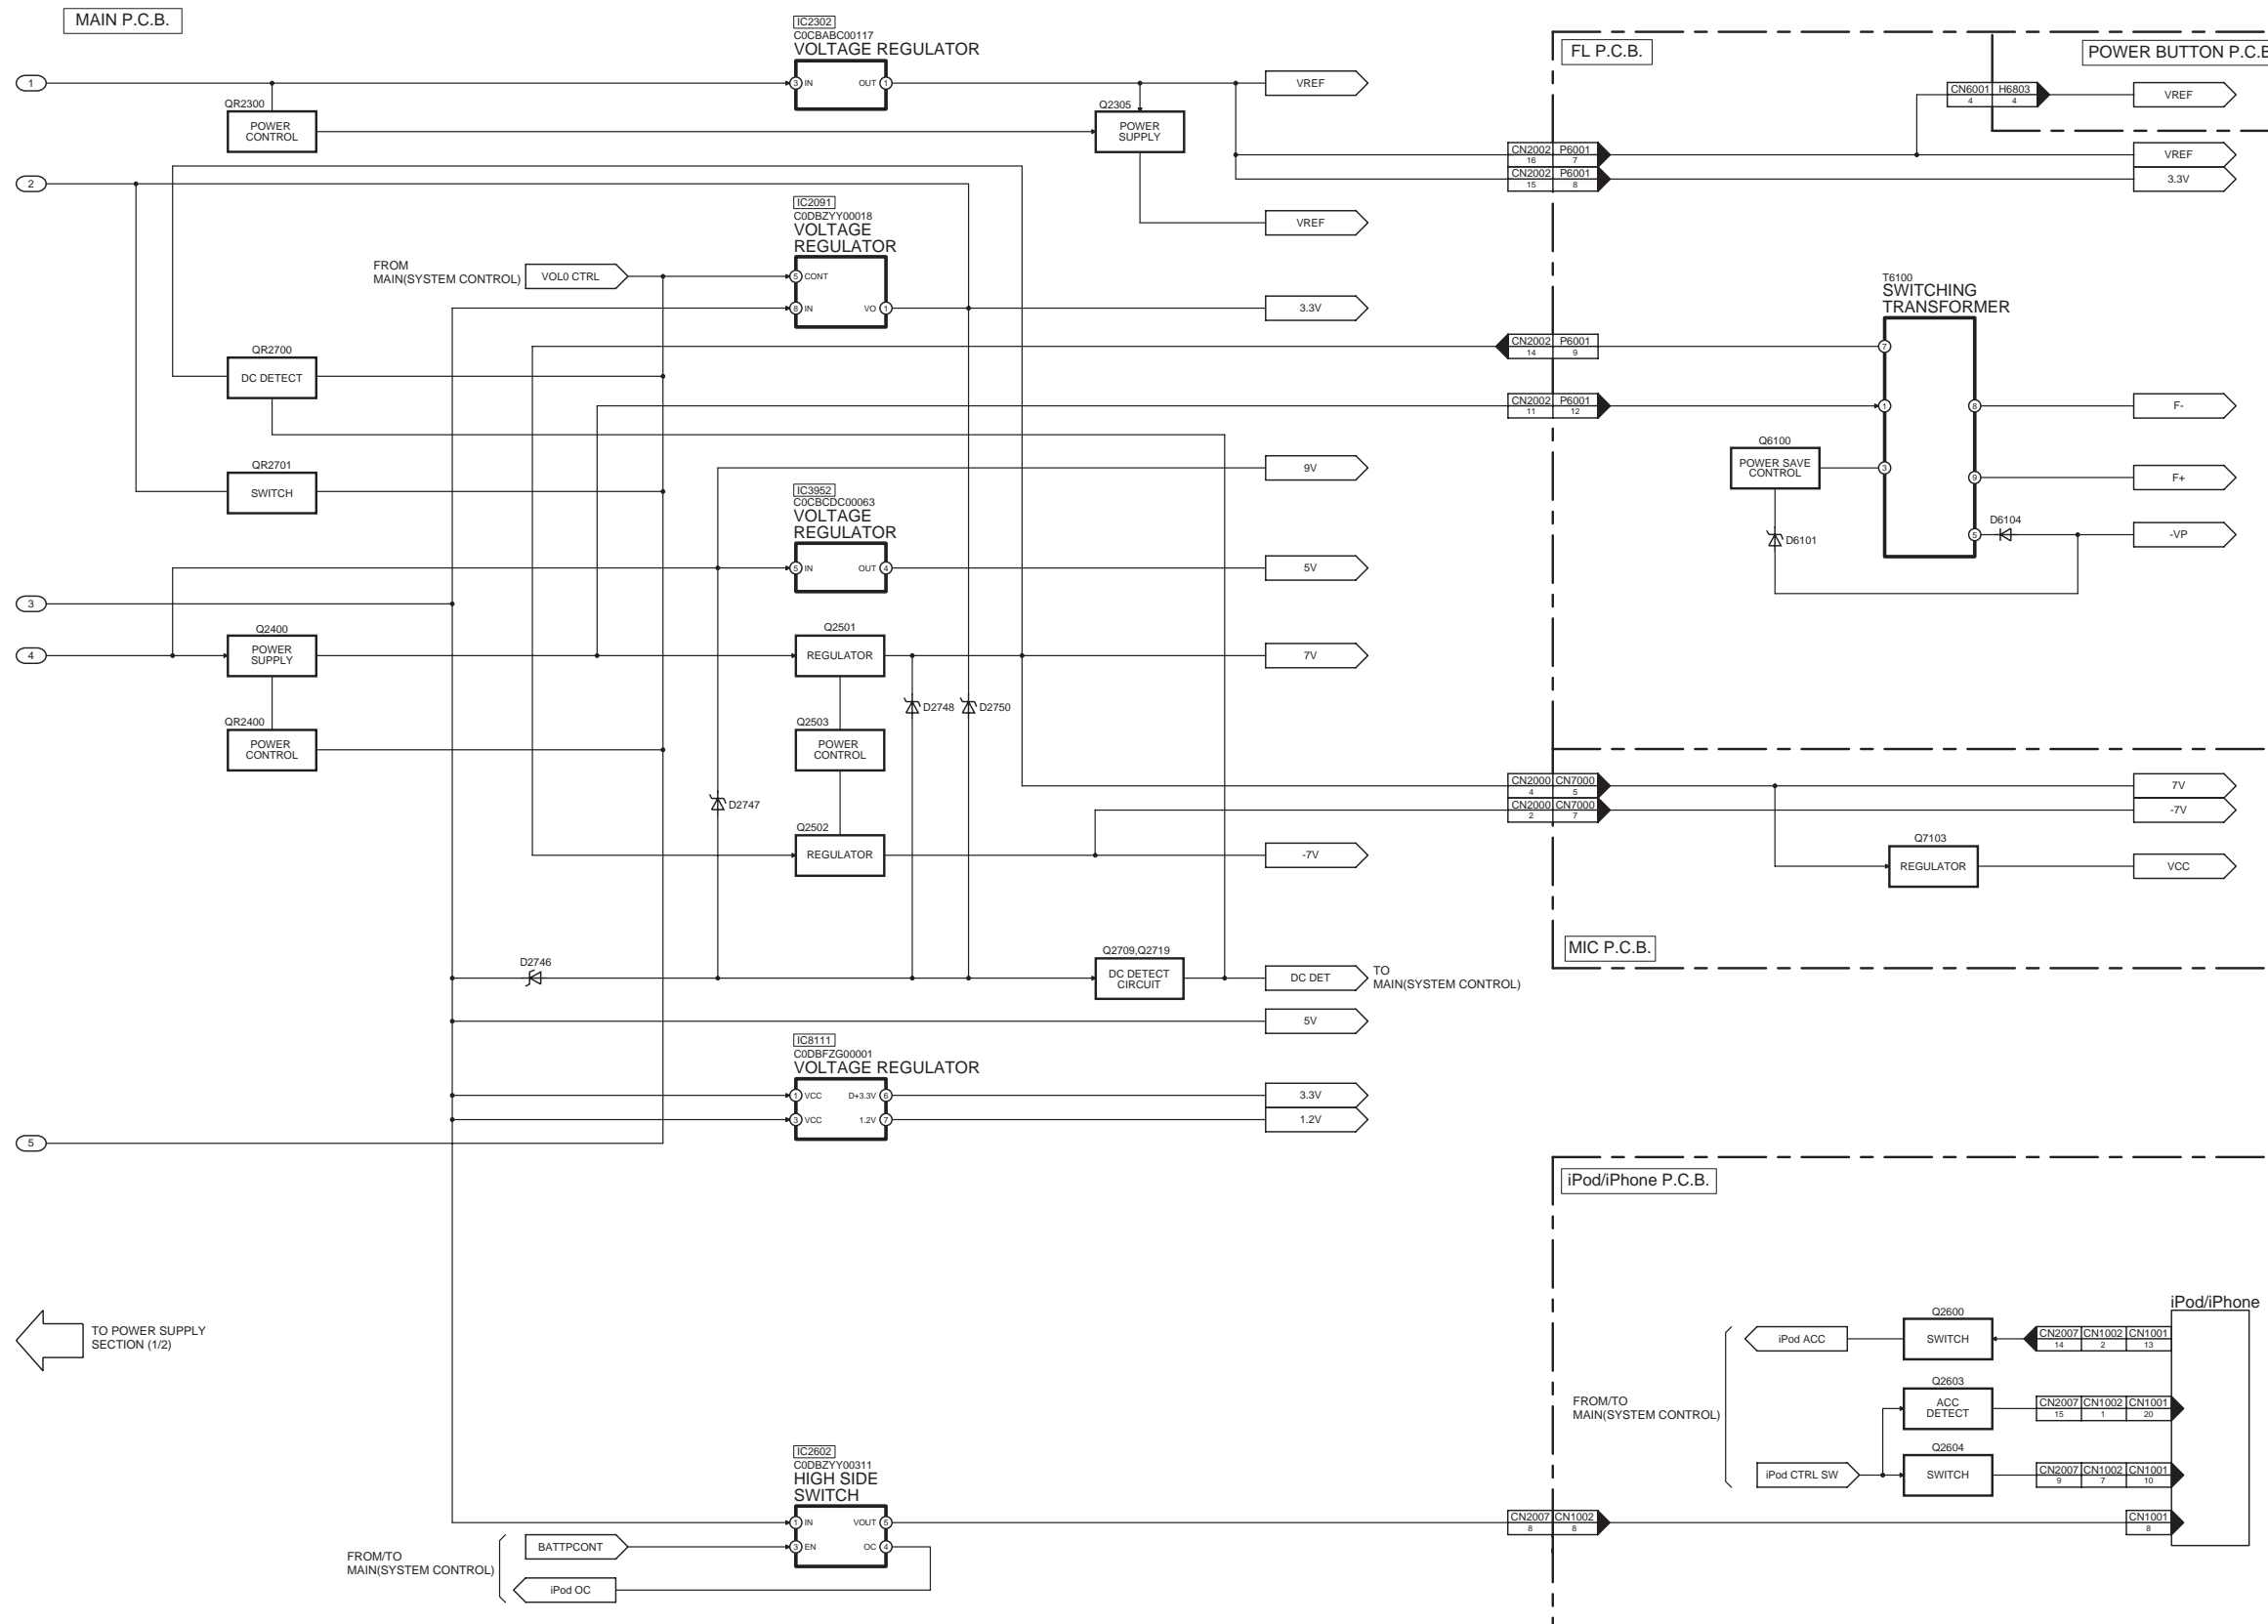SA-PT580GA/GS POWER SUPPLY(1/2) BLOCK DIAGRAM



SA-PT580GA/GS POWER SUPPLY(2/2) BLOCK DIAGRAM

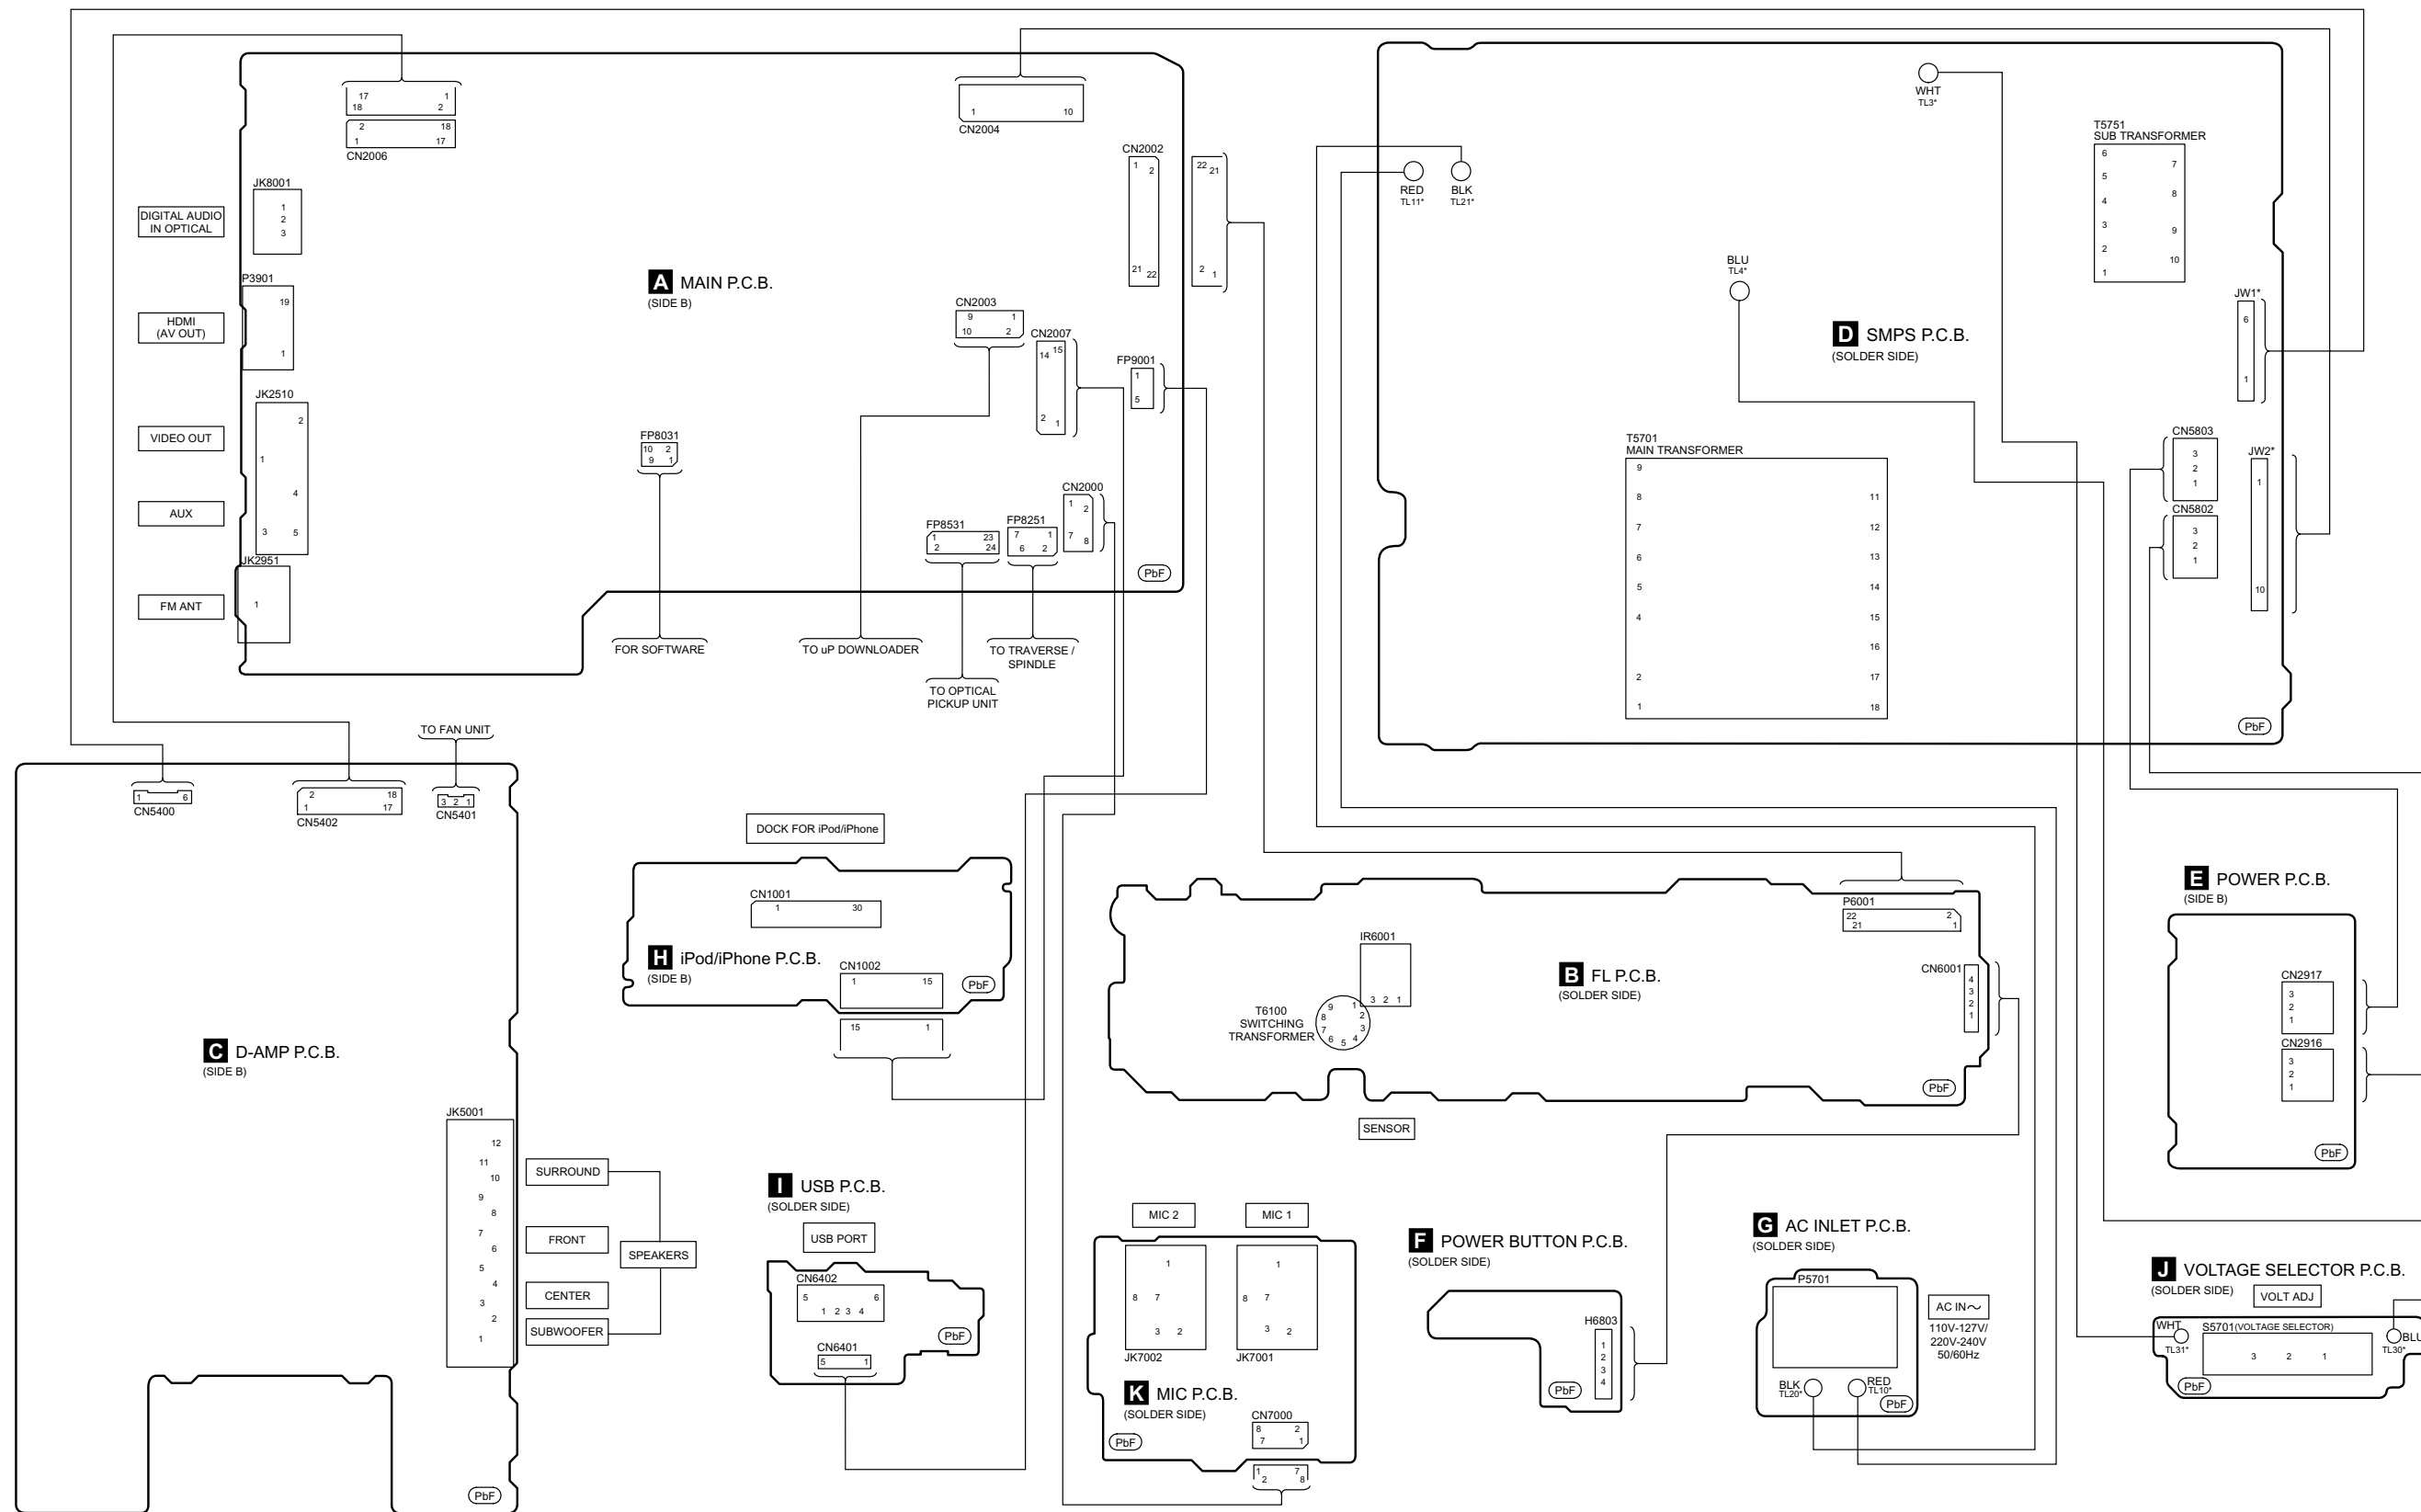15 Wiring Connection Diagram



NOTE: " * " REF IS FOR INDICATION ONLY.

SA-PT580GA/GS WIRING CONNECTION DIAGRAM

16 Schematic Diagram Notes

• This schematic diagram may be modified at any time with the development of new technology.

Notes:

- S6002:** Stop switch (■).
- S6003:** Play switch (▶).
- S6005:** Vol (+) switch.
- S6006:** Vol (-) switch.
- S6007:** Selector switch (+).
- S6801:** Power switch (⏻/⏺).
- S6807:** Open/Close switch (▲).
- S5701:** VOLT ADJ switch.

• Important safety notice:

Components identified by ⚠ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high quality sound (capacitors), low-noise (resistors), etc are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

• In case of AC rated voltage Capacitors, the part no. and values will be indicated in the Schematic Diagram.

AC rated voltage capacitors:
C5700, C5701, C5702, C5703, C5705, C5706

• Resistor

Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).

• Capacitor

Unit of capacitance is μF, unless otherwise noted. F=Farads, pF=pico-Farad.











• Coil

Unit of inductance is H, unless otherwise noted.

• *

REF is for indication only.

• Voltage and signal line


-  : +B signal line
-  : -B signal line
-  : Audio output signal line
-  : Video output signal line
-  : CD/DVD Audio input signal line
-  : CD/DVD Video input signal line
-  : Optical/HDMI/iPod/iPhone/AUX/Mic Audio input signal line
-  : iPod/iPhone Video input signal line
-  : FM signal Line
-  : USB signal Line

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE F1 T8AH 250V FUSE



RISK OF FIRE-REPLACE FUSE AS MARKED.

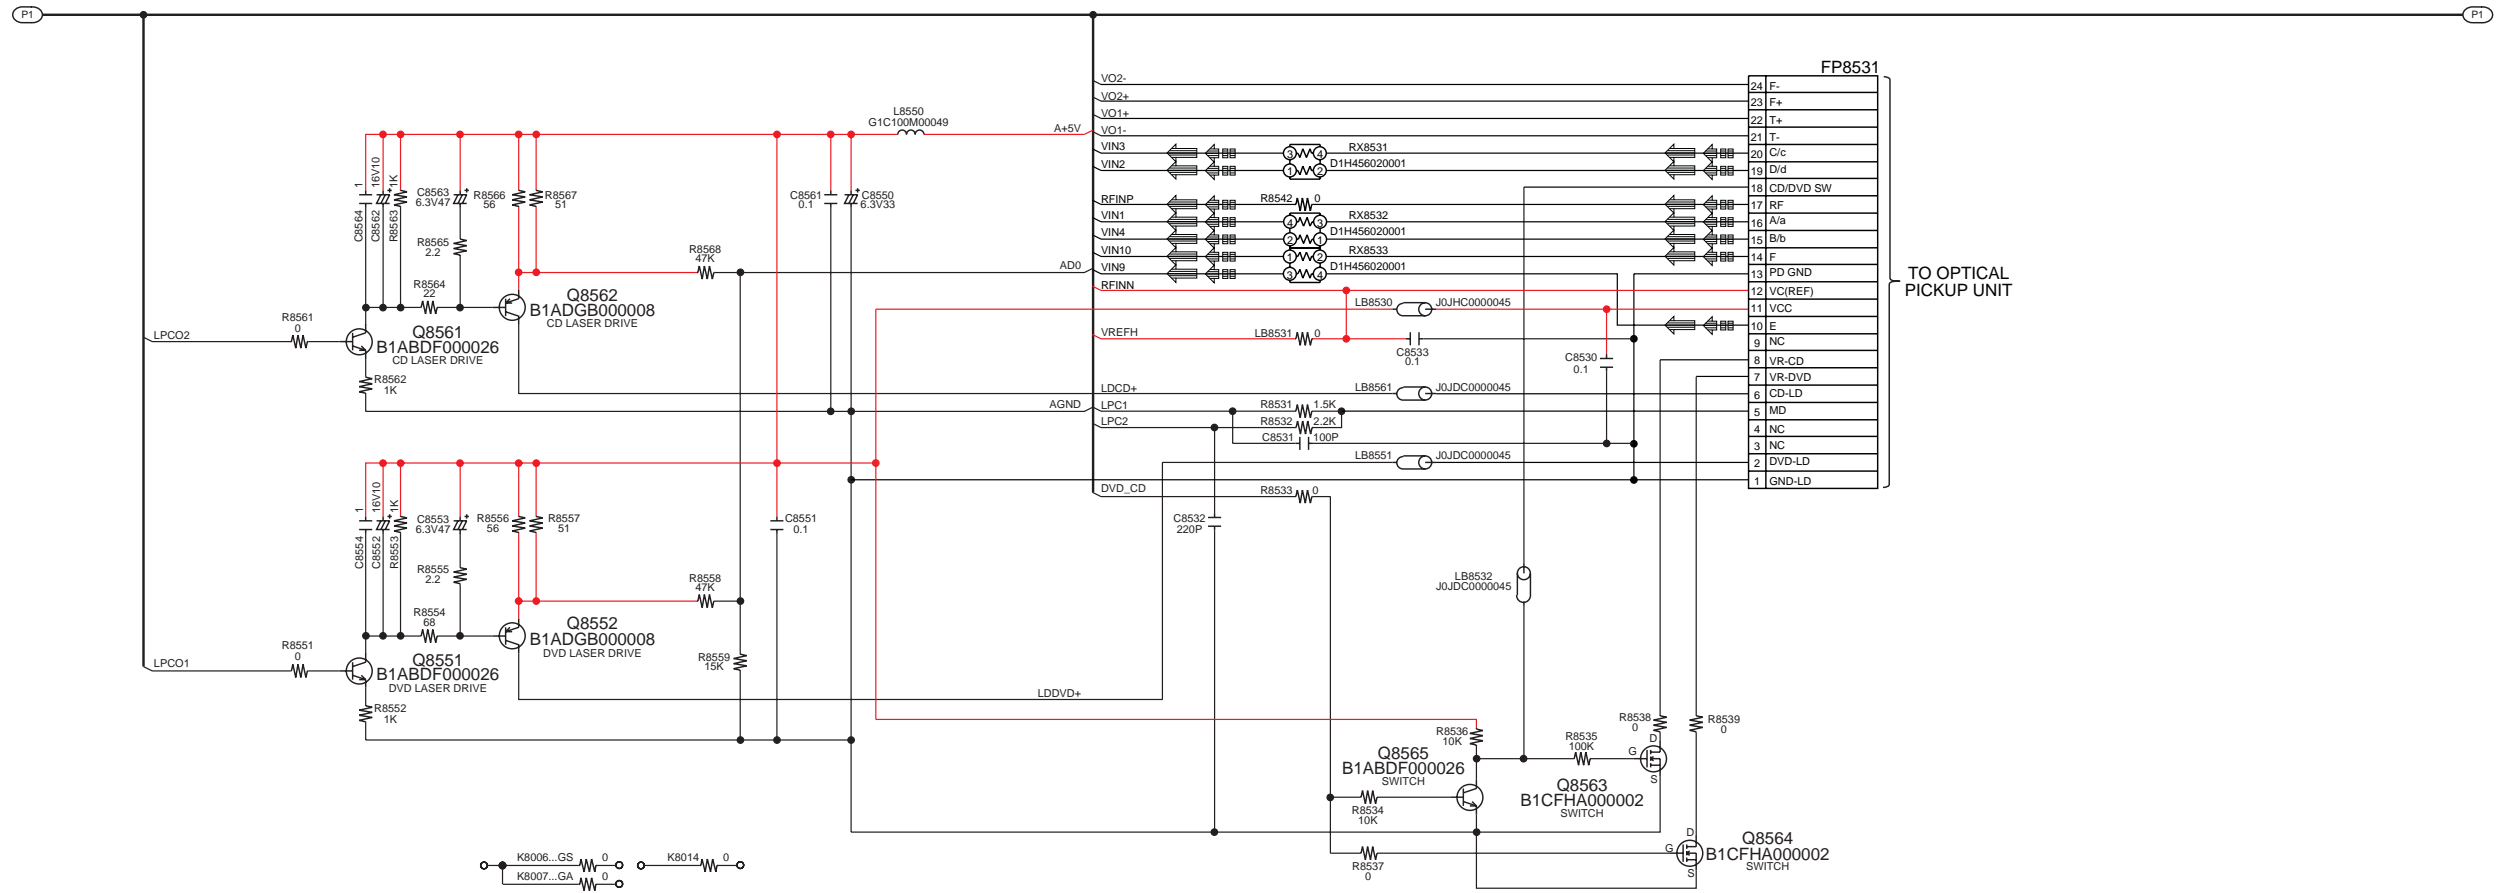
FUSE CAUTION



These symbols located near the fuse indicates that the fuse used is a fast operating type. For continued protection against fire hazard, replace with the same type fuse. For rating, refer to the marking adjacent to the symbol.

A MAIN(DV5U) CIRCUIT

— : +B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : OPTICAL/HDMI AUDIO INPUT SIGNAL LINE : CD/DVD VIDEO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : VIDEO OUTPUT SIGNAL LINE : USB SIGNAL LINE



TO OPTICAL PICKUP UNIT

24	F-
23	F+
22	T+
21	T-
20	C/c
19	D/d
18	CD/DVD SW
17	RF
16	A/a
15	B/b
14	F
13	PD GND
12	VCI(REF)
11	VCC
10	E
9	NC
8	VR-CD
7	VR-DVD
6	CD-LD
5	MD
4	NC
3	NC
2	DVD-LD
1	GND-LD

← TO MAIN(DV5U) SECTION (1/6)

TO MAIN(DV5U) SECTION (3/6) →

↓ TO MAIN(DV5U) SECTION (5/6)


DV: MAIN(DV5U); SCHEMATIC DIAGRAM - 1 ~ 6
 HD: MAIN(HDMI); SCHEMATIC DIAGRAM - 7
 MA: MAIN(MICON); SCHEMATIC DIAGRAM - 8 ~ 13

1/6	2/6	3/6
4/6	5/6	6/6

SA-PT580GA/GS MAIN(DV5U) CIRCUIT

A SCHEMATIC DIAGRAM - 3
MAIN(DV5U) CIRCUIT

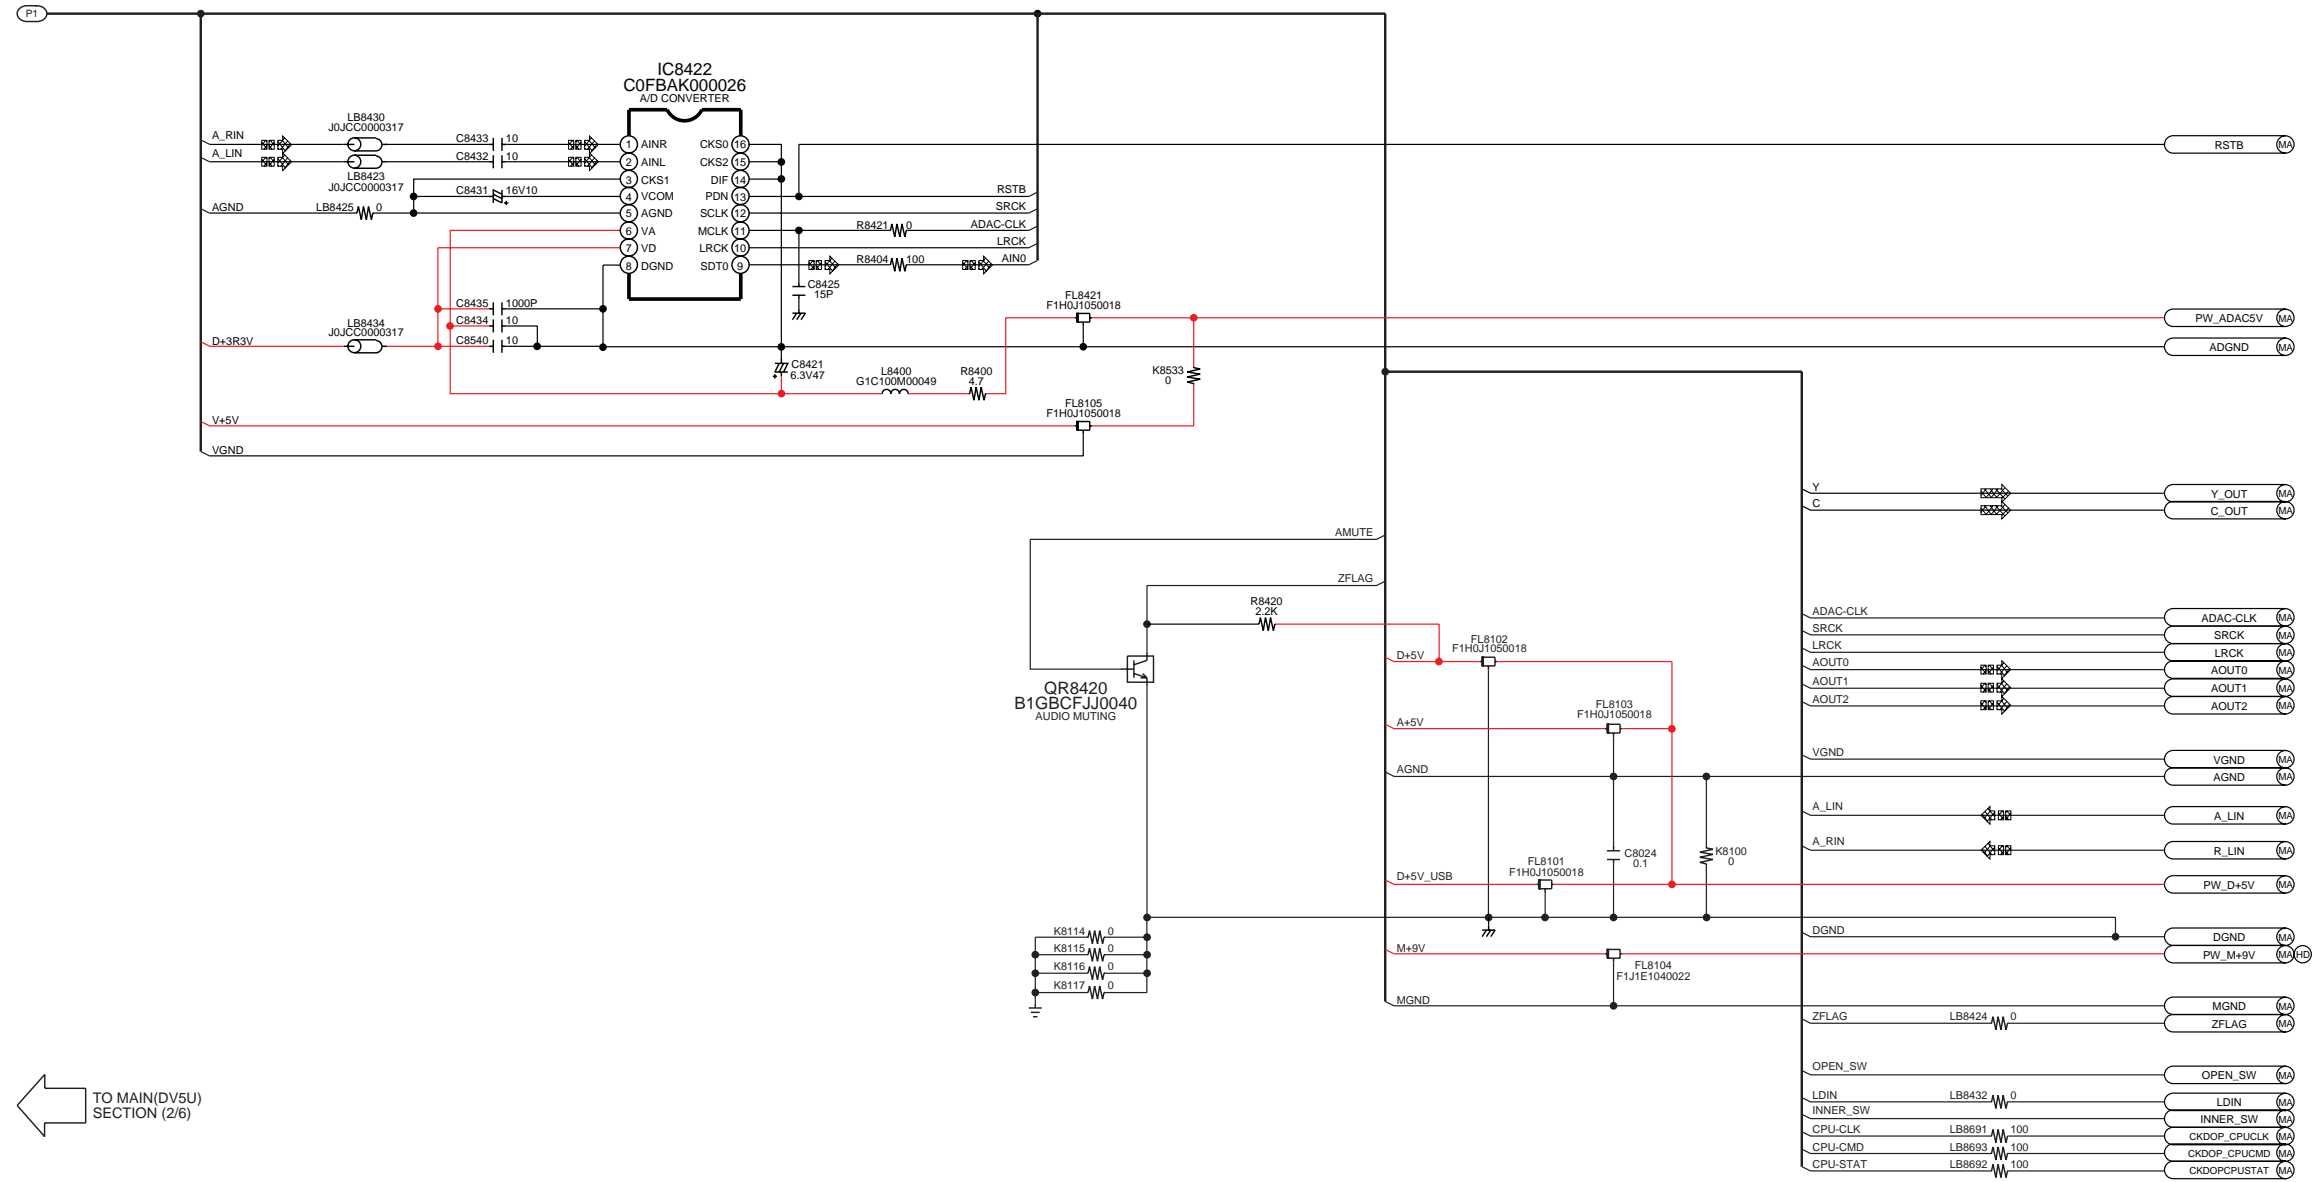— : +B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : OPTICAL/HDMI AUDIO INPUT SIGNAL LINE : CD/DVD VIDEO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : VIDEO OUTPUT SIGNAL LINE : USB SIGNAL LINE



← TO MAIN(DV5U) SECTION (2/6)

↓ TO MAIN(DV5U) SECTION (6/6)

DV: MAIN(DV5U): SCHEMATIC DIAGRAM - 1 ~ 6
 HD: MAIN(HDMI): SCHEMATIC DIAGRAM - 7
 MA: MAIN(MICON): SCHEMATIC DIAGRAM - 8 ~ 13

1/6	2/6	3/6
4/6	5/6	6/6

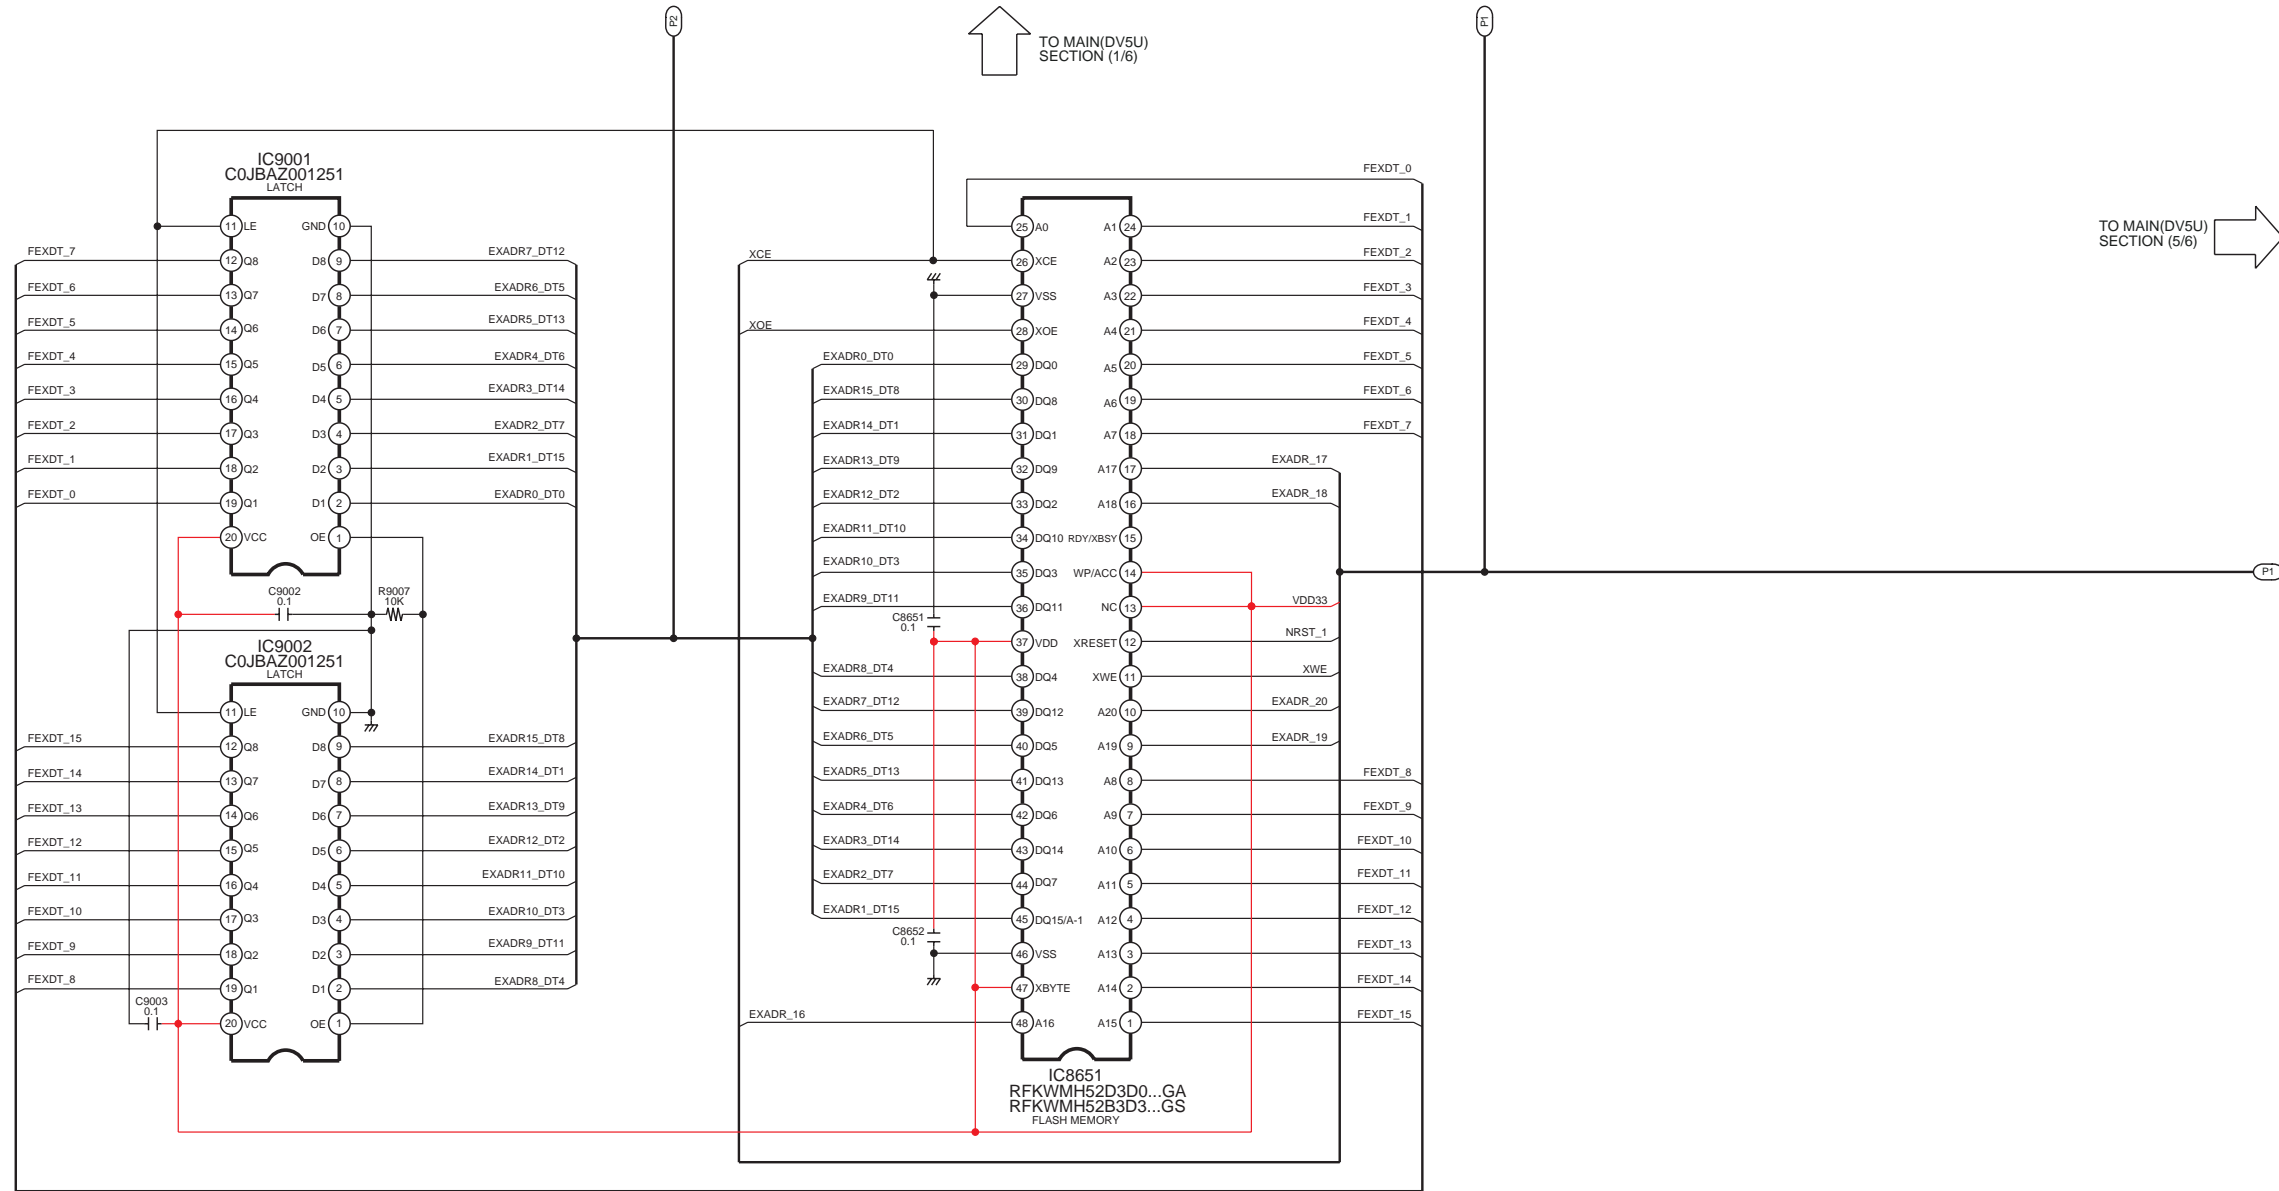
SA-PT580GA/GS MAIN(DV5U) CIRCUIT

A
B
C
D
E
F
G
H

SCHEMATIC DIAGRAM - 4

A MAIN(DV5U) CIRCUIT

— : +B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : OPTICAL/HDMI AUDIO INPUT SIGNAL LINE : CD/DVD VIDEO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : VIDEO OUTPUT SIGNAL LINE : USB SIGNAL LINE



DV: MAIN(DV5U); SCHEMATIC DIAGRAM - 1 ~ 6
 HD: MAIN(HDMI); SCHEMATIC DIAGRAM - 7
 MA: MAIN(MICON); SCHEMATIC DIAGRAM - 8 ~ 13


1/6	2/6	3/6
4/6	5/6	6/6

SA-PT580GA/GS MAIN(DV5U) CIRCUIT

SCHEMATIC DIAGRAM - 5

A MAIN(DV5U) CIRCUIT

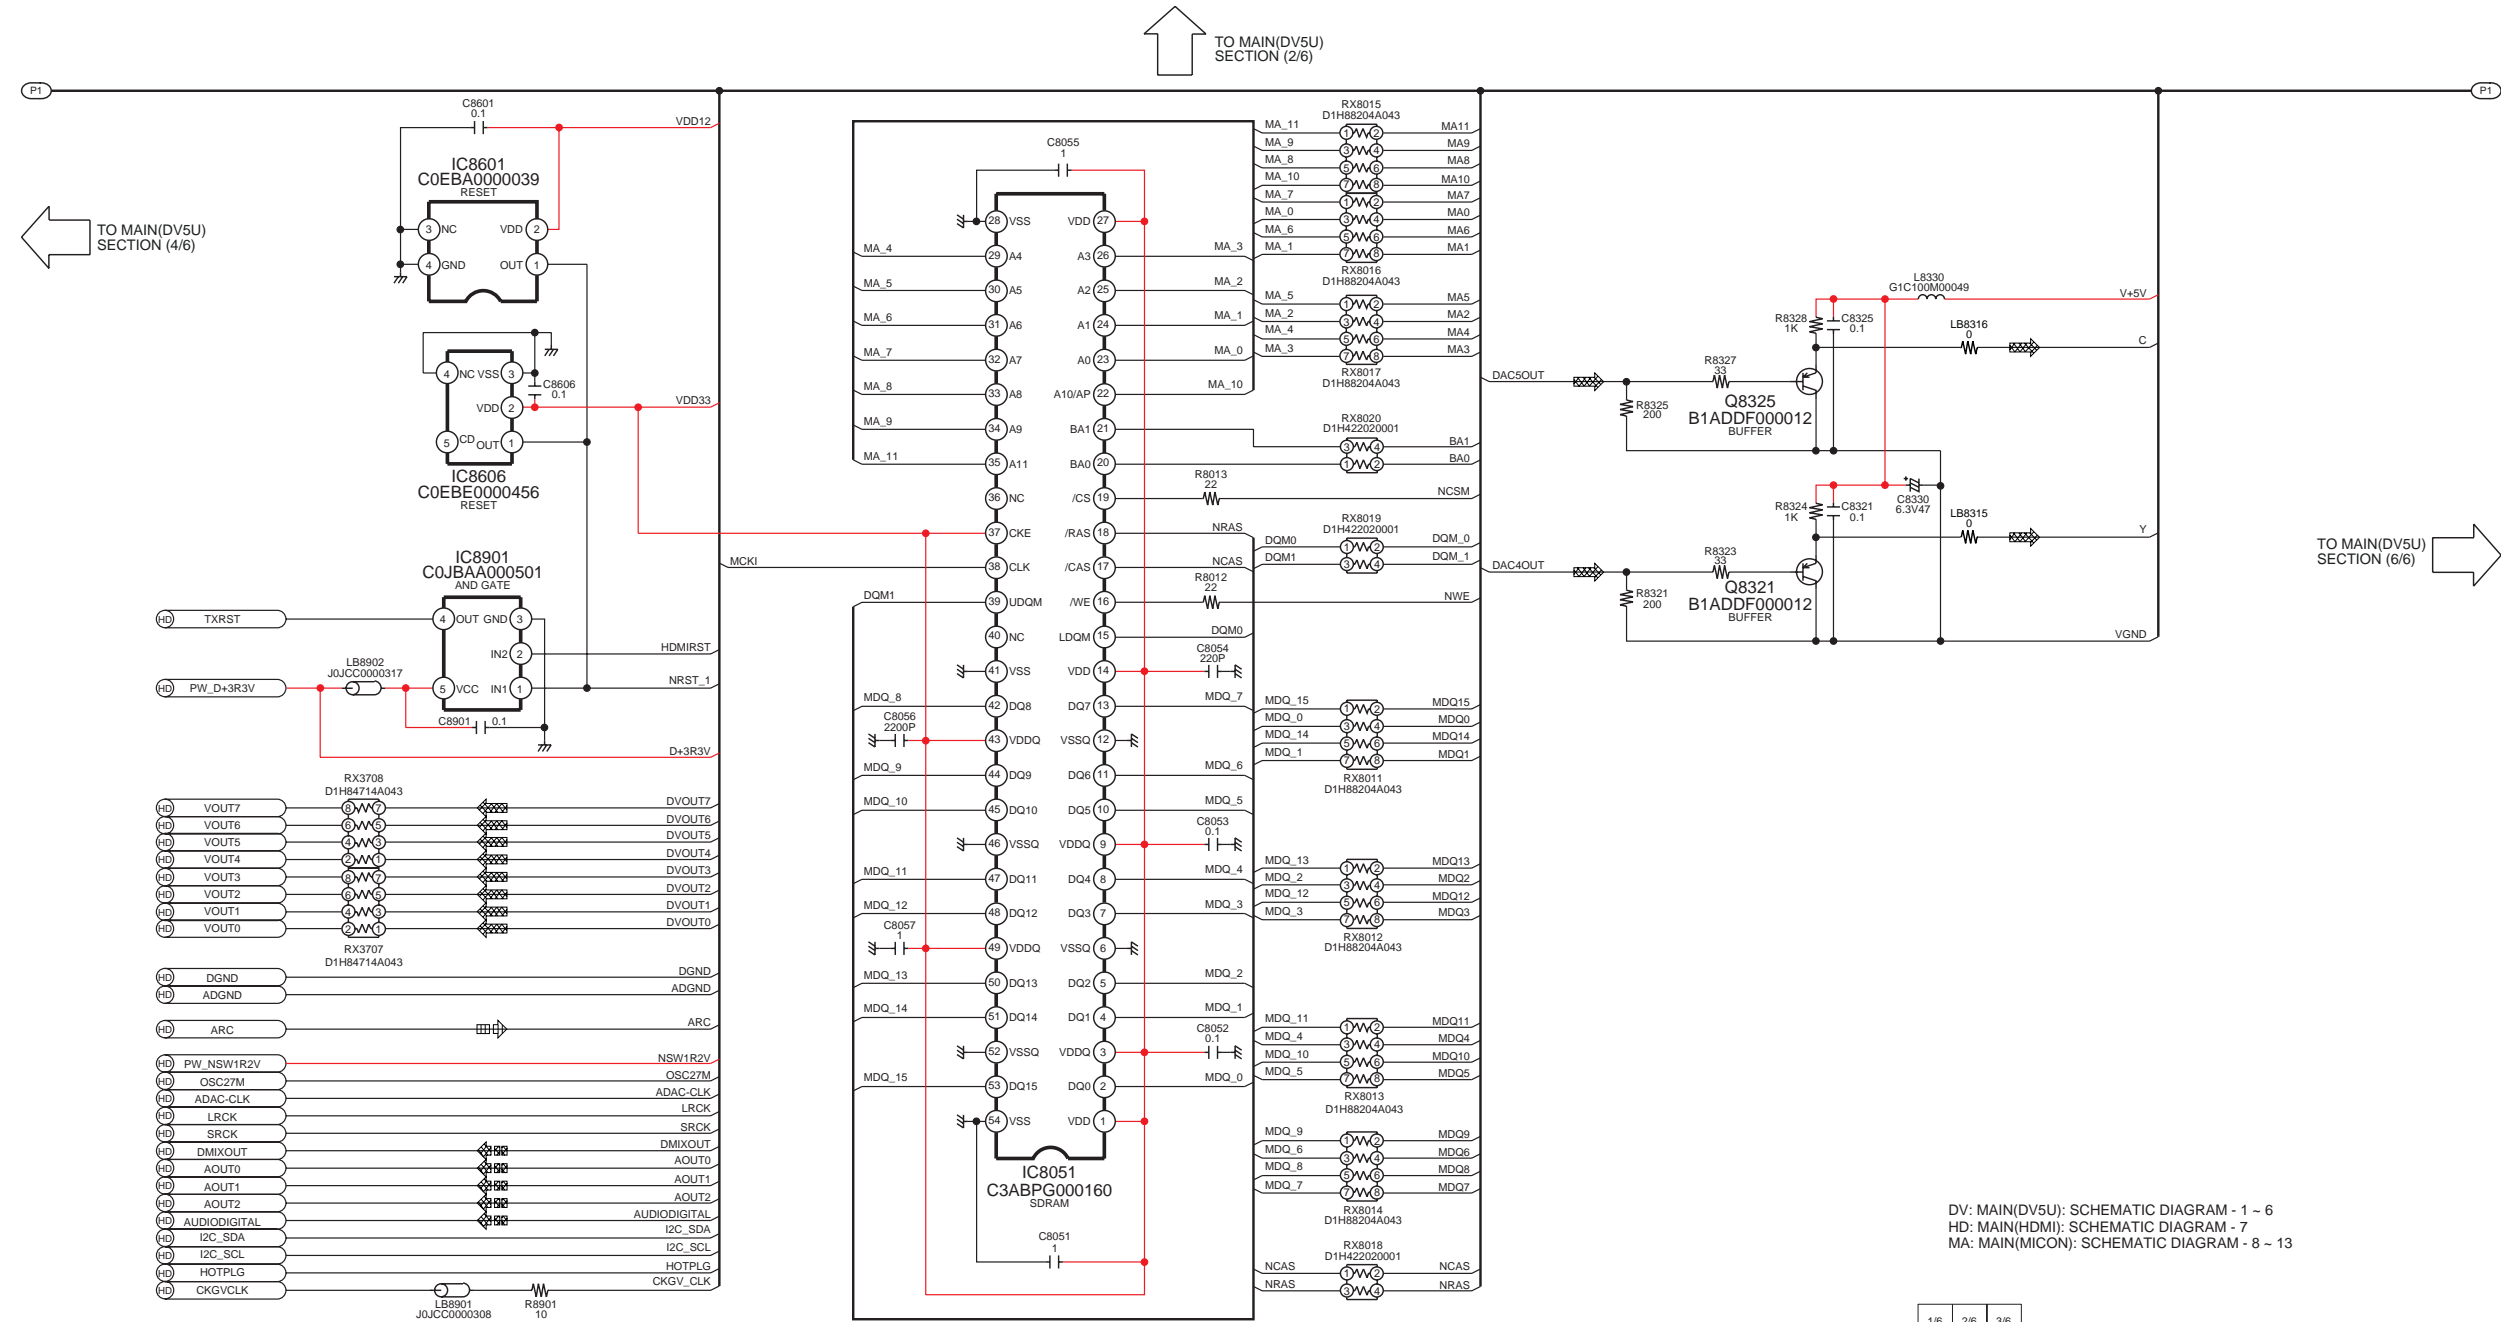—: +B SIGNAL LINE : CD/DVD AUDIO INPUT SIGNAL LINE : OPTICAL/HDMI AUDIO INPUT SIGNAL LINE : CD/DVD VIDEO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : VIDEO OUTPUT SIGNAL LINE : USB SIGNAL LINE



DV: MAIN(DV5U): SCHEMATIC DIAGRAM - 1 - 6
 HD: MAIN(HDMI): SCHEMATIC DIAGRAM - 7
 MA: MAIN(MICON): SCHEMATIC DIAGRAM - 8 - 13


1/6	2/6	3/6
4/6	5/6	6/6

SA-PT580GA/GS MAIN(DV5U) CIRCUIT

SCHEMATIC DIAGRAM - 8

A MAIN(MICON) CIRCUIT

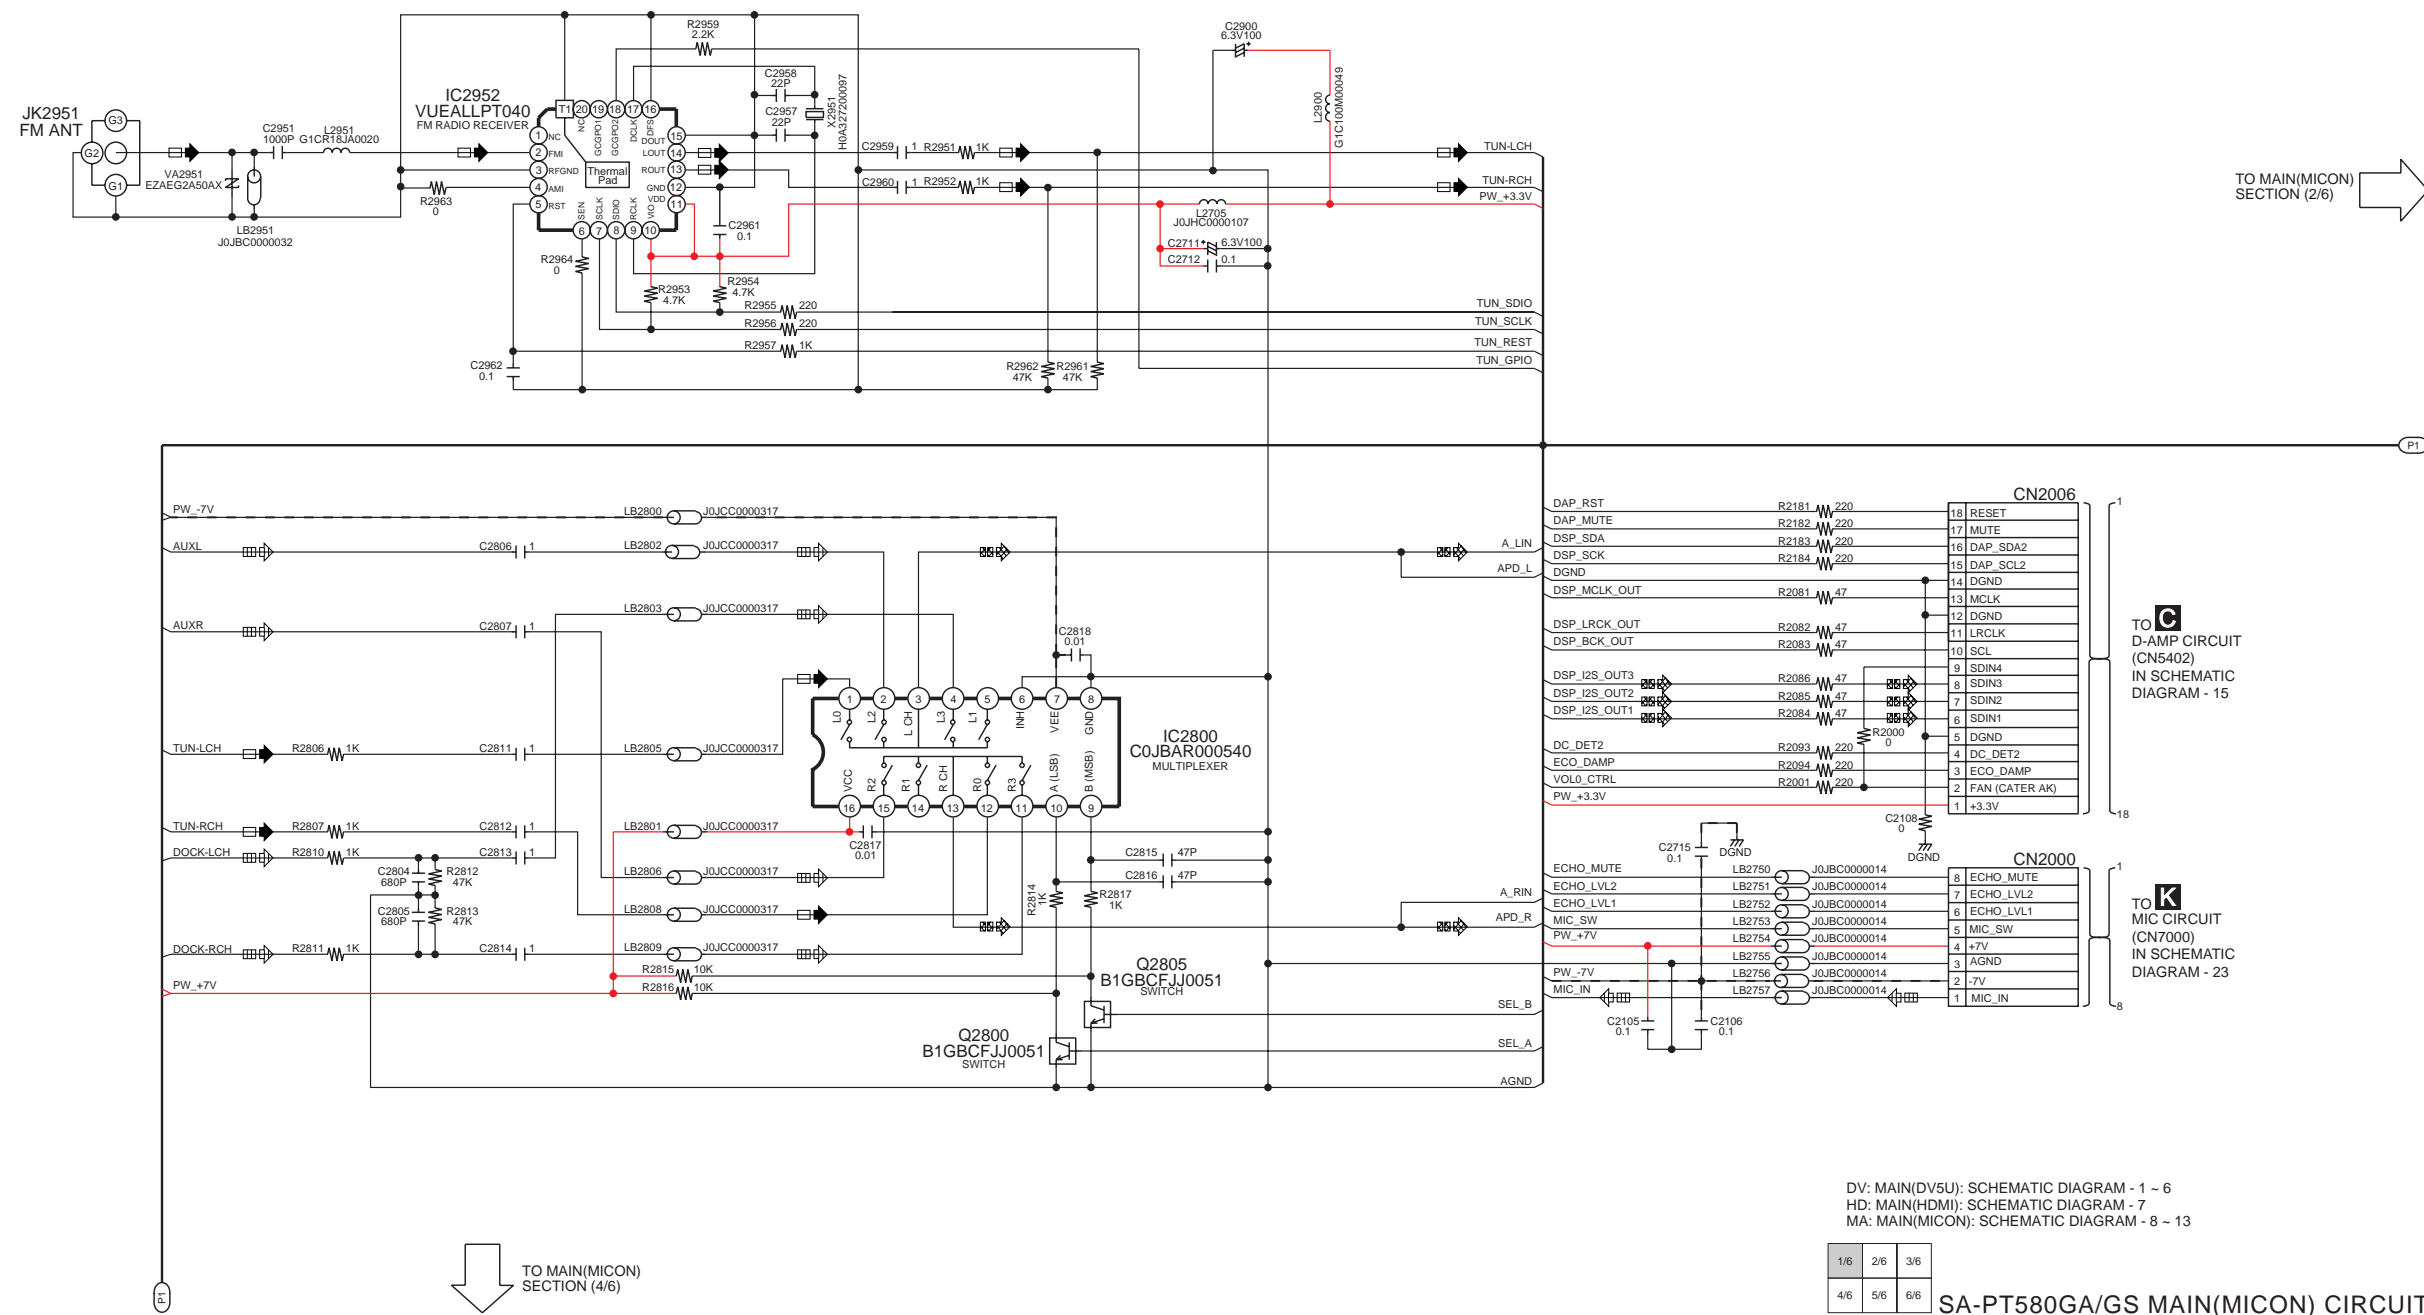—+B SIGNAL LINE —-B SIGNAL LINE □□□: iPod/iPhone/AUX/MIC AUDIO INPUT SIGNAL LINE □□□: iPod/iPhone VIDEO INPUT SIGNAL LINE □□□: AUDIO OUTPUT SIGNAL LINE □□□: VIDEO OUTPUT SIGNAL LINE □▶: FM SIGNAL LINE



DV: MAIN(DV5U): SCHEMATIC DIAGRAM - 1 - 6
 HD: MAIN(HDMI): SCHEMATIC DIAGRAM - 7
 MA: MAIN(MICON): SCHEMATIC DIAGRAM - 8 - 13


1/6	2/6	3/6
4/6	5/6	6/6

SA-PT580GA/GS MAIN(MICON) CIRCUIT

SCHEMATIC DIAGRAM - 9

A MAIN(MICON) CIRCUIT

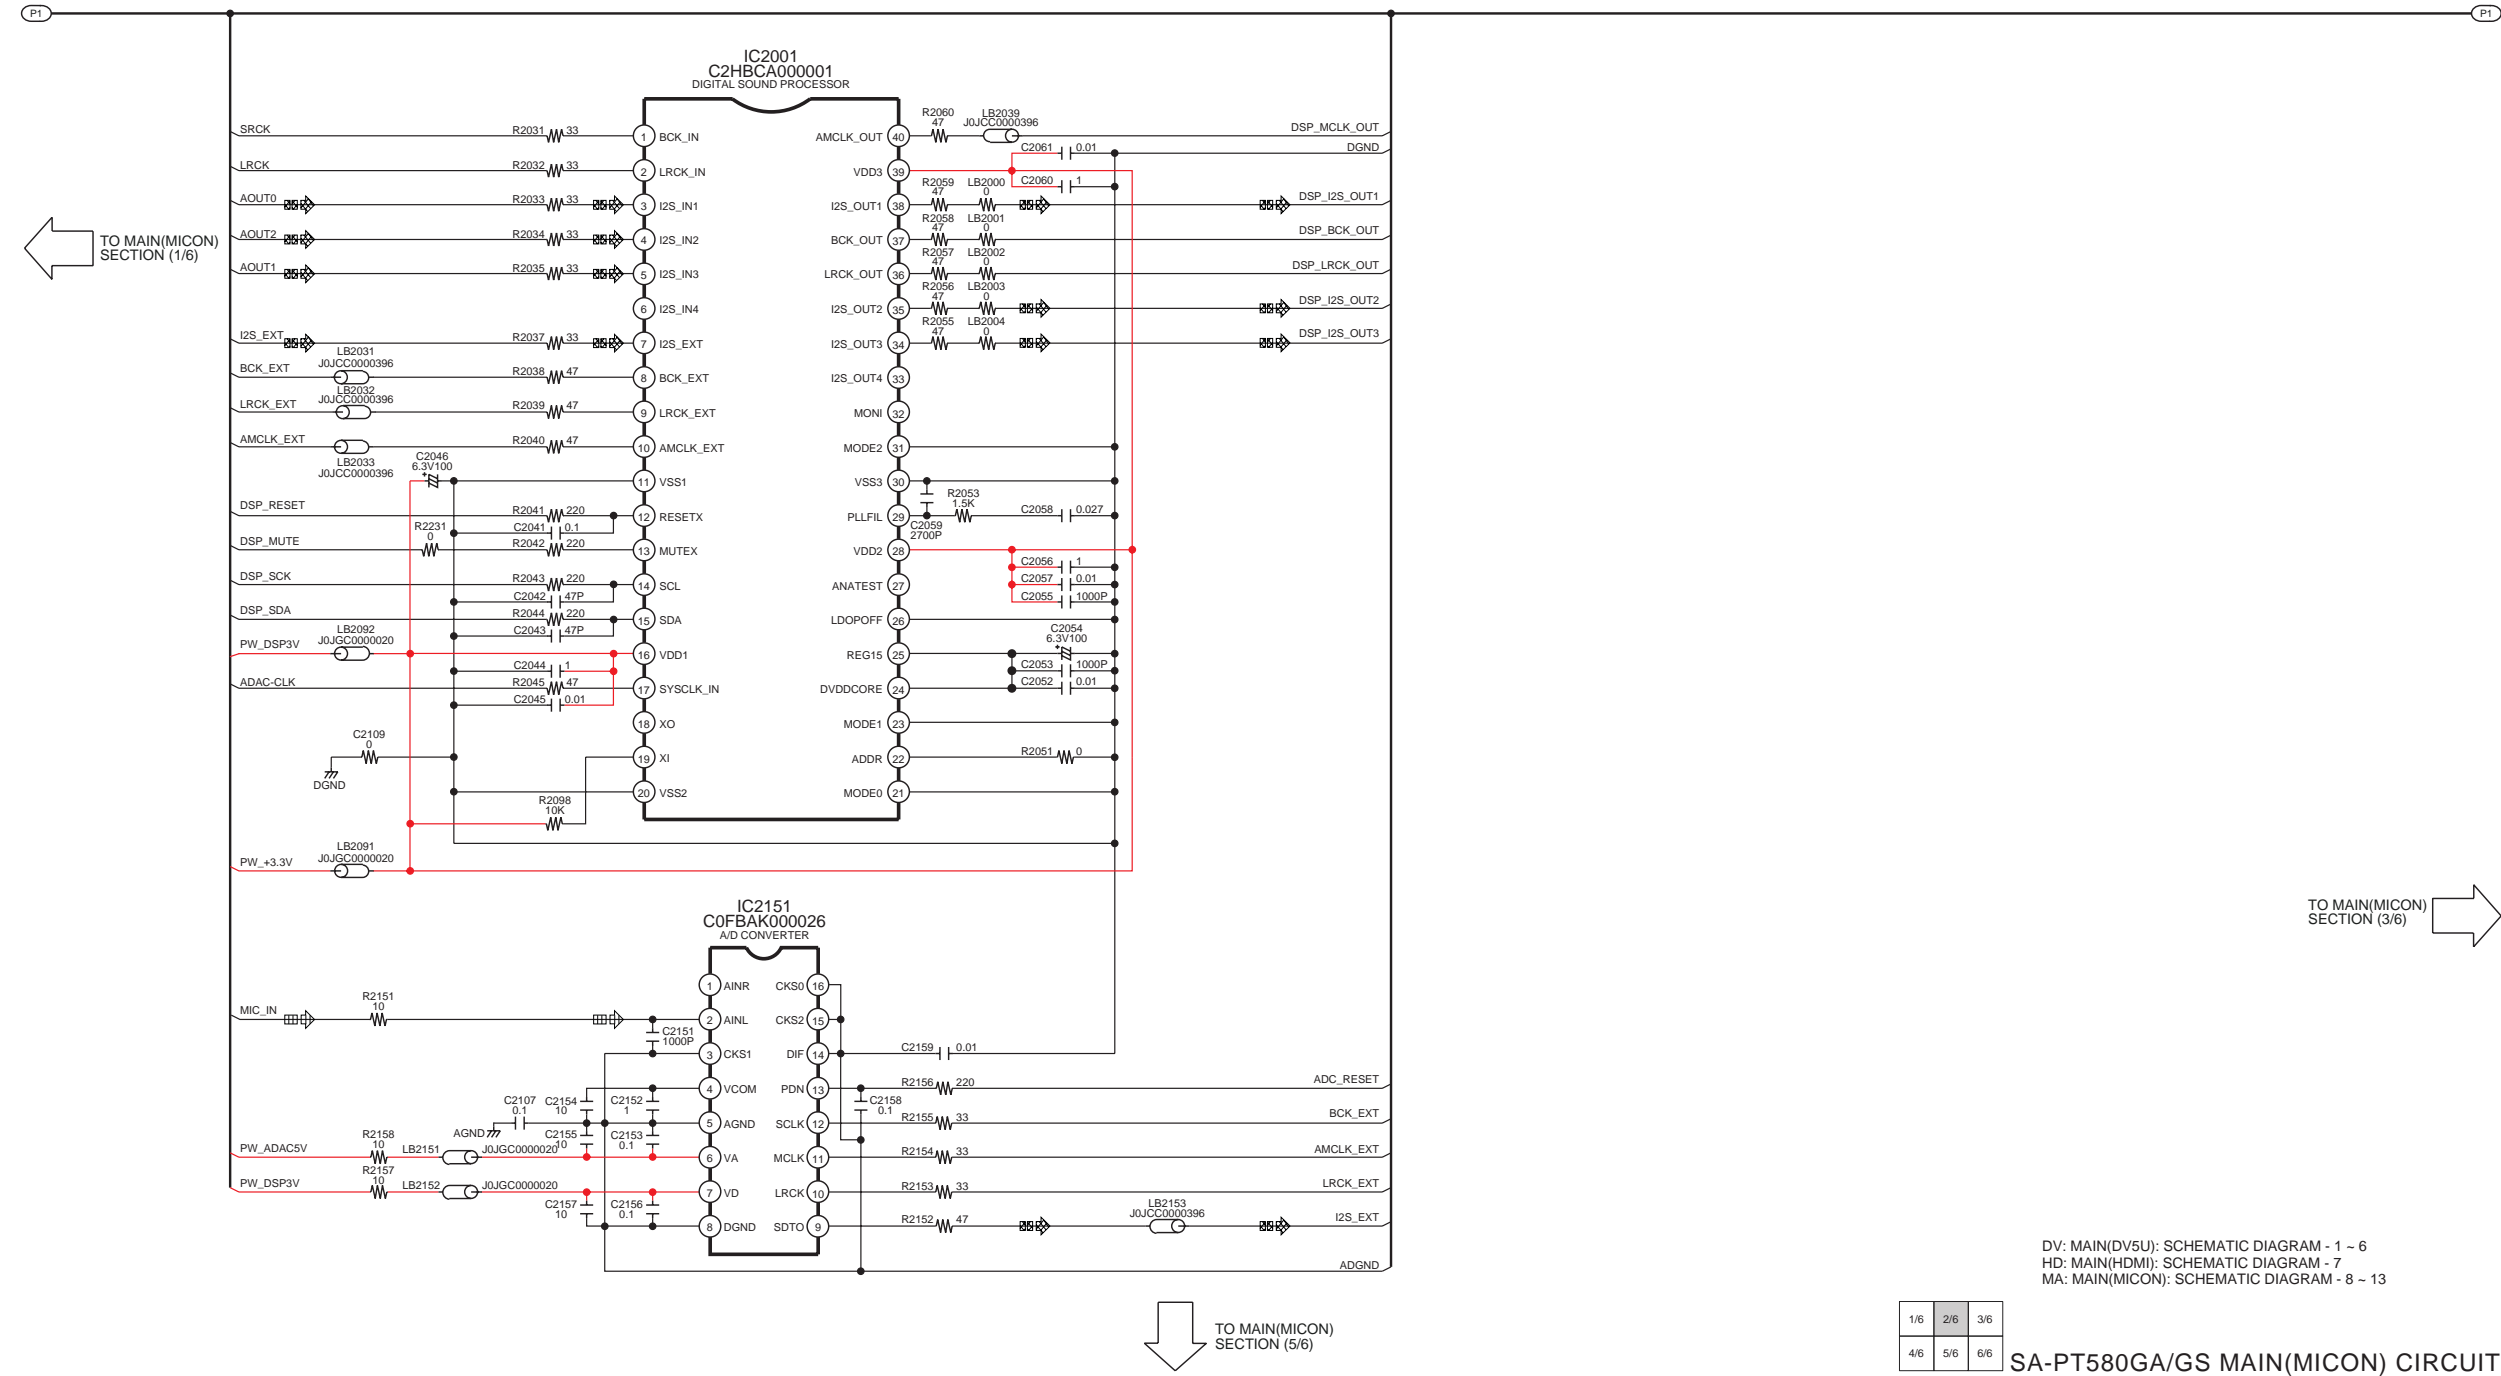—: +B SIGNAL LINE - - -: -B SIGNAL LINE : iPod/iPhone/AUX/MIC AUDIO INPUT SIGNAL LINE : iPod/iPhone VIDEO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : VIDEO OUTPUT SIGNAL LINE : FM SIGNAL LINE



DV: MAIN(DV5U): SCHEMATIC DIAGRAM - 1 ~ 6
 HD: MAIN(HDMI): SCHEMATIC DIAGRAM - 7
 MA: MAIN(MICON): SCHEMATIC DIAGRAM - 8 ~ 13


1/6	2/6	3/6
4/6	5/6	6/6

SA-PT580GA/GS MAIN(MICON) CIRCUIT

SCHEMATIC DIAGRAM - 10


A MAIN(MICON) CIRCUIT

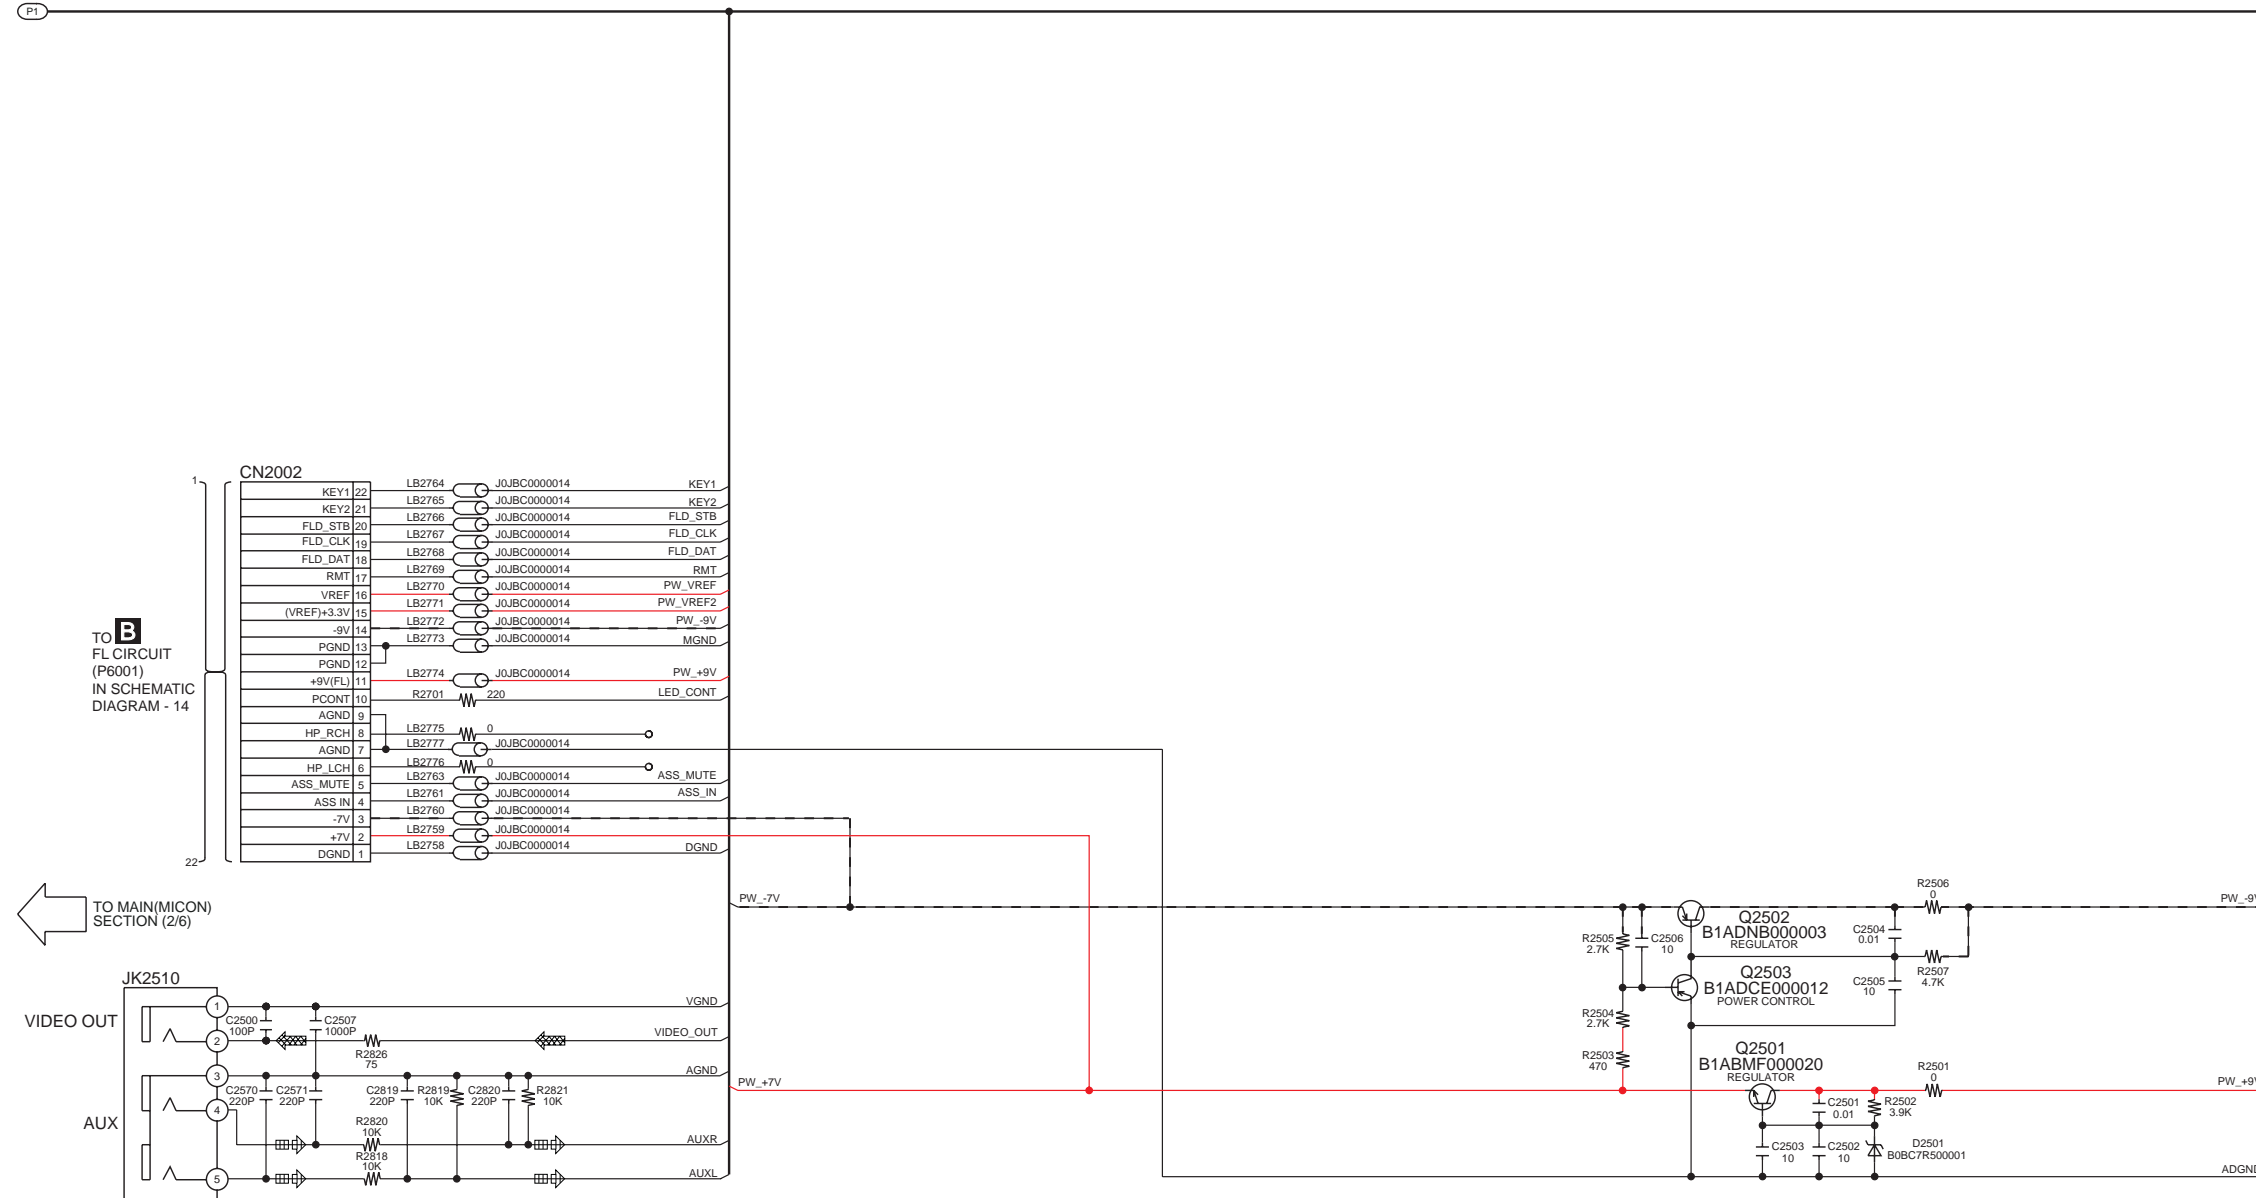—+ : +B SIGNAL LINE - - : -B SIGNAL LINE : iPod/iPhone/AUX/MIC AUDIO INPUT SIGNAL LINE : iPod/iPhone VIDEO INPUT SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE : VIDEO OUTPUT SIGNAL LINE : FM SIGNAL LINE



TO **B** FL CIRCUIT (P6001) IN SCHEMATIC DIAGRAM - 14

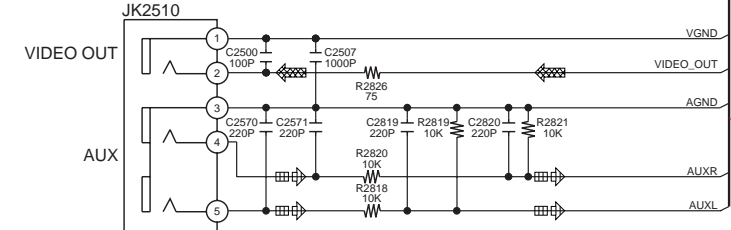TO MAIN(MICON) SECTION (2/6)



DV: MAIN(DV5U): SCHEMATIC DIAGRAM - 1 ~ 6
 HD: MAIN(HDMI): SCHEMATIC DIAGRAM - 7
 MA: MAIN(MICON): SCHEMATIC DIAGRAM - 8 ~ 13

TO MAIN(MICON) SECTION (6/6)


1/6	2/6	3/6
4/6	5/6	6/6

SA-PT580GA/GS MAIN(MICON) CIRCUIT

SCHEMATIC DIAGRAM - 13

A MAIN(MICON) CIRCUIT

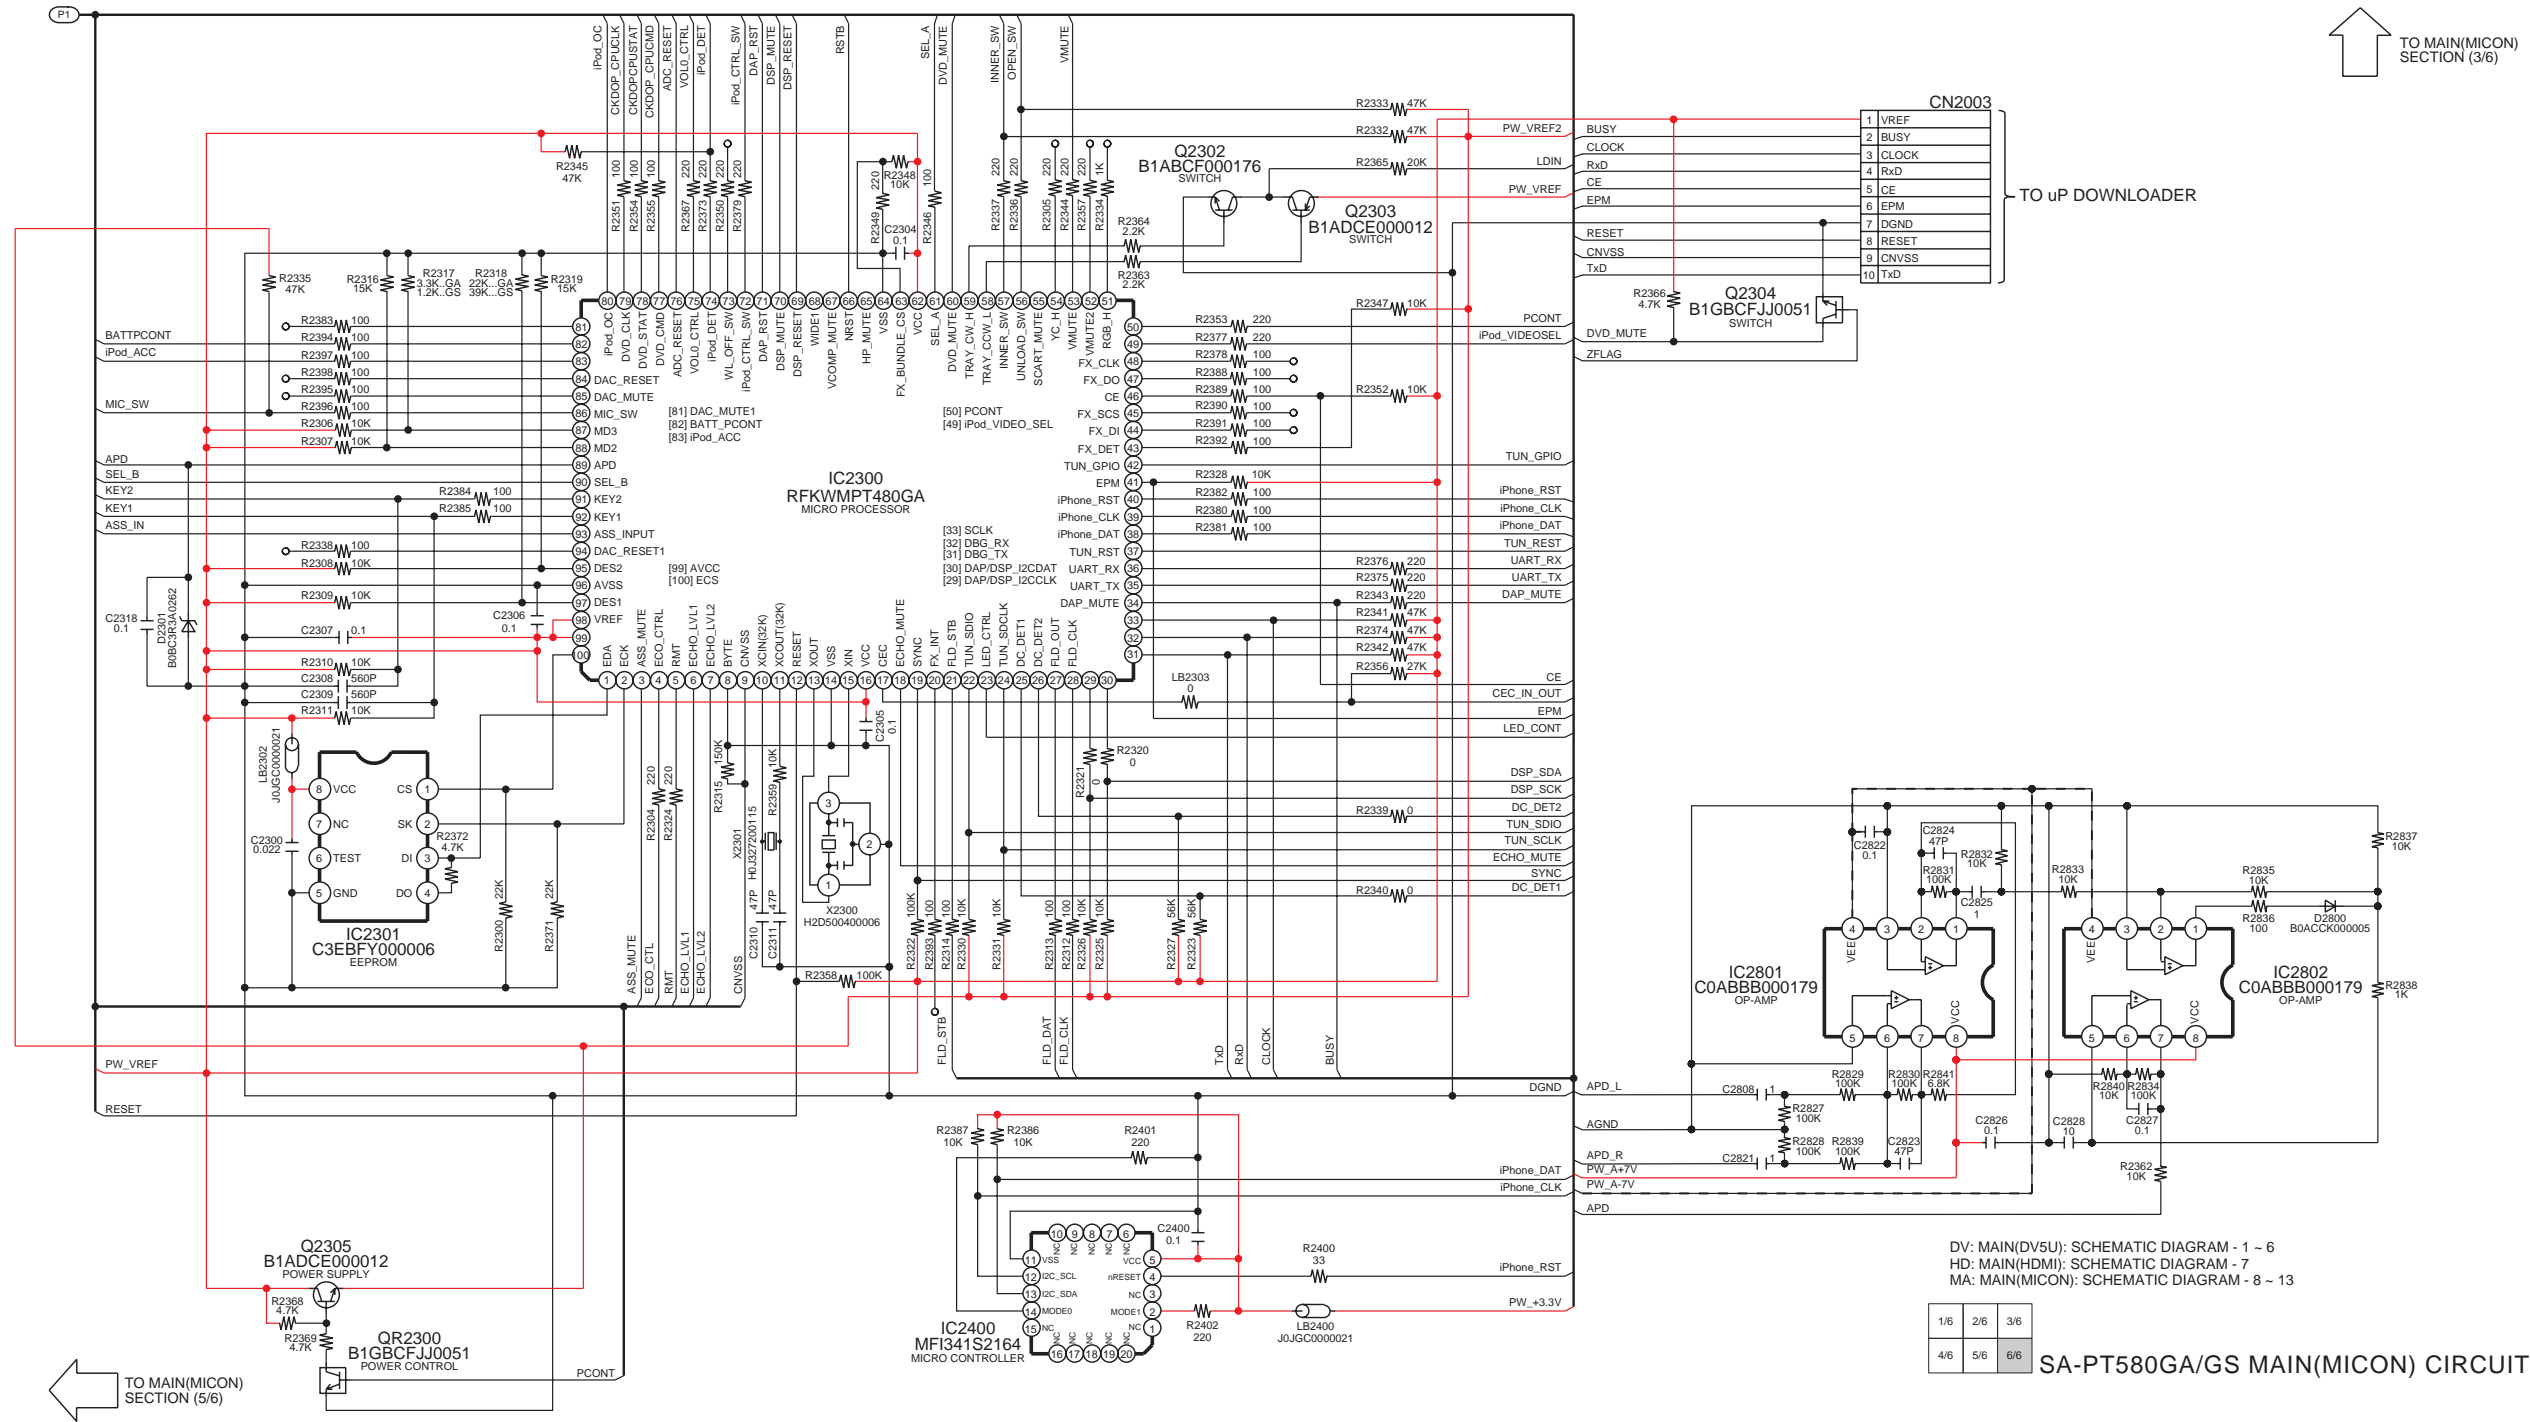
— : +B SIGNAL LINE - - - : -B SIGNAL LINE  : iPod/iPhone/AUX/MIC AUDIO INPUT SIGNAL LINE  : iPod/iPhone VIDEO INPUT SIGNAL LINE  : AUDIO OUTPUT SIGNAL LINE  : VIDEO OUTPUT SIGNAL LINE  : FM SIGNAL LINE



17.3. D-Amp Circuit

SCHEMATIC DIAGRAM - 15
C D-AMP CIRCUIT

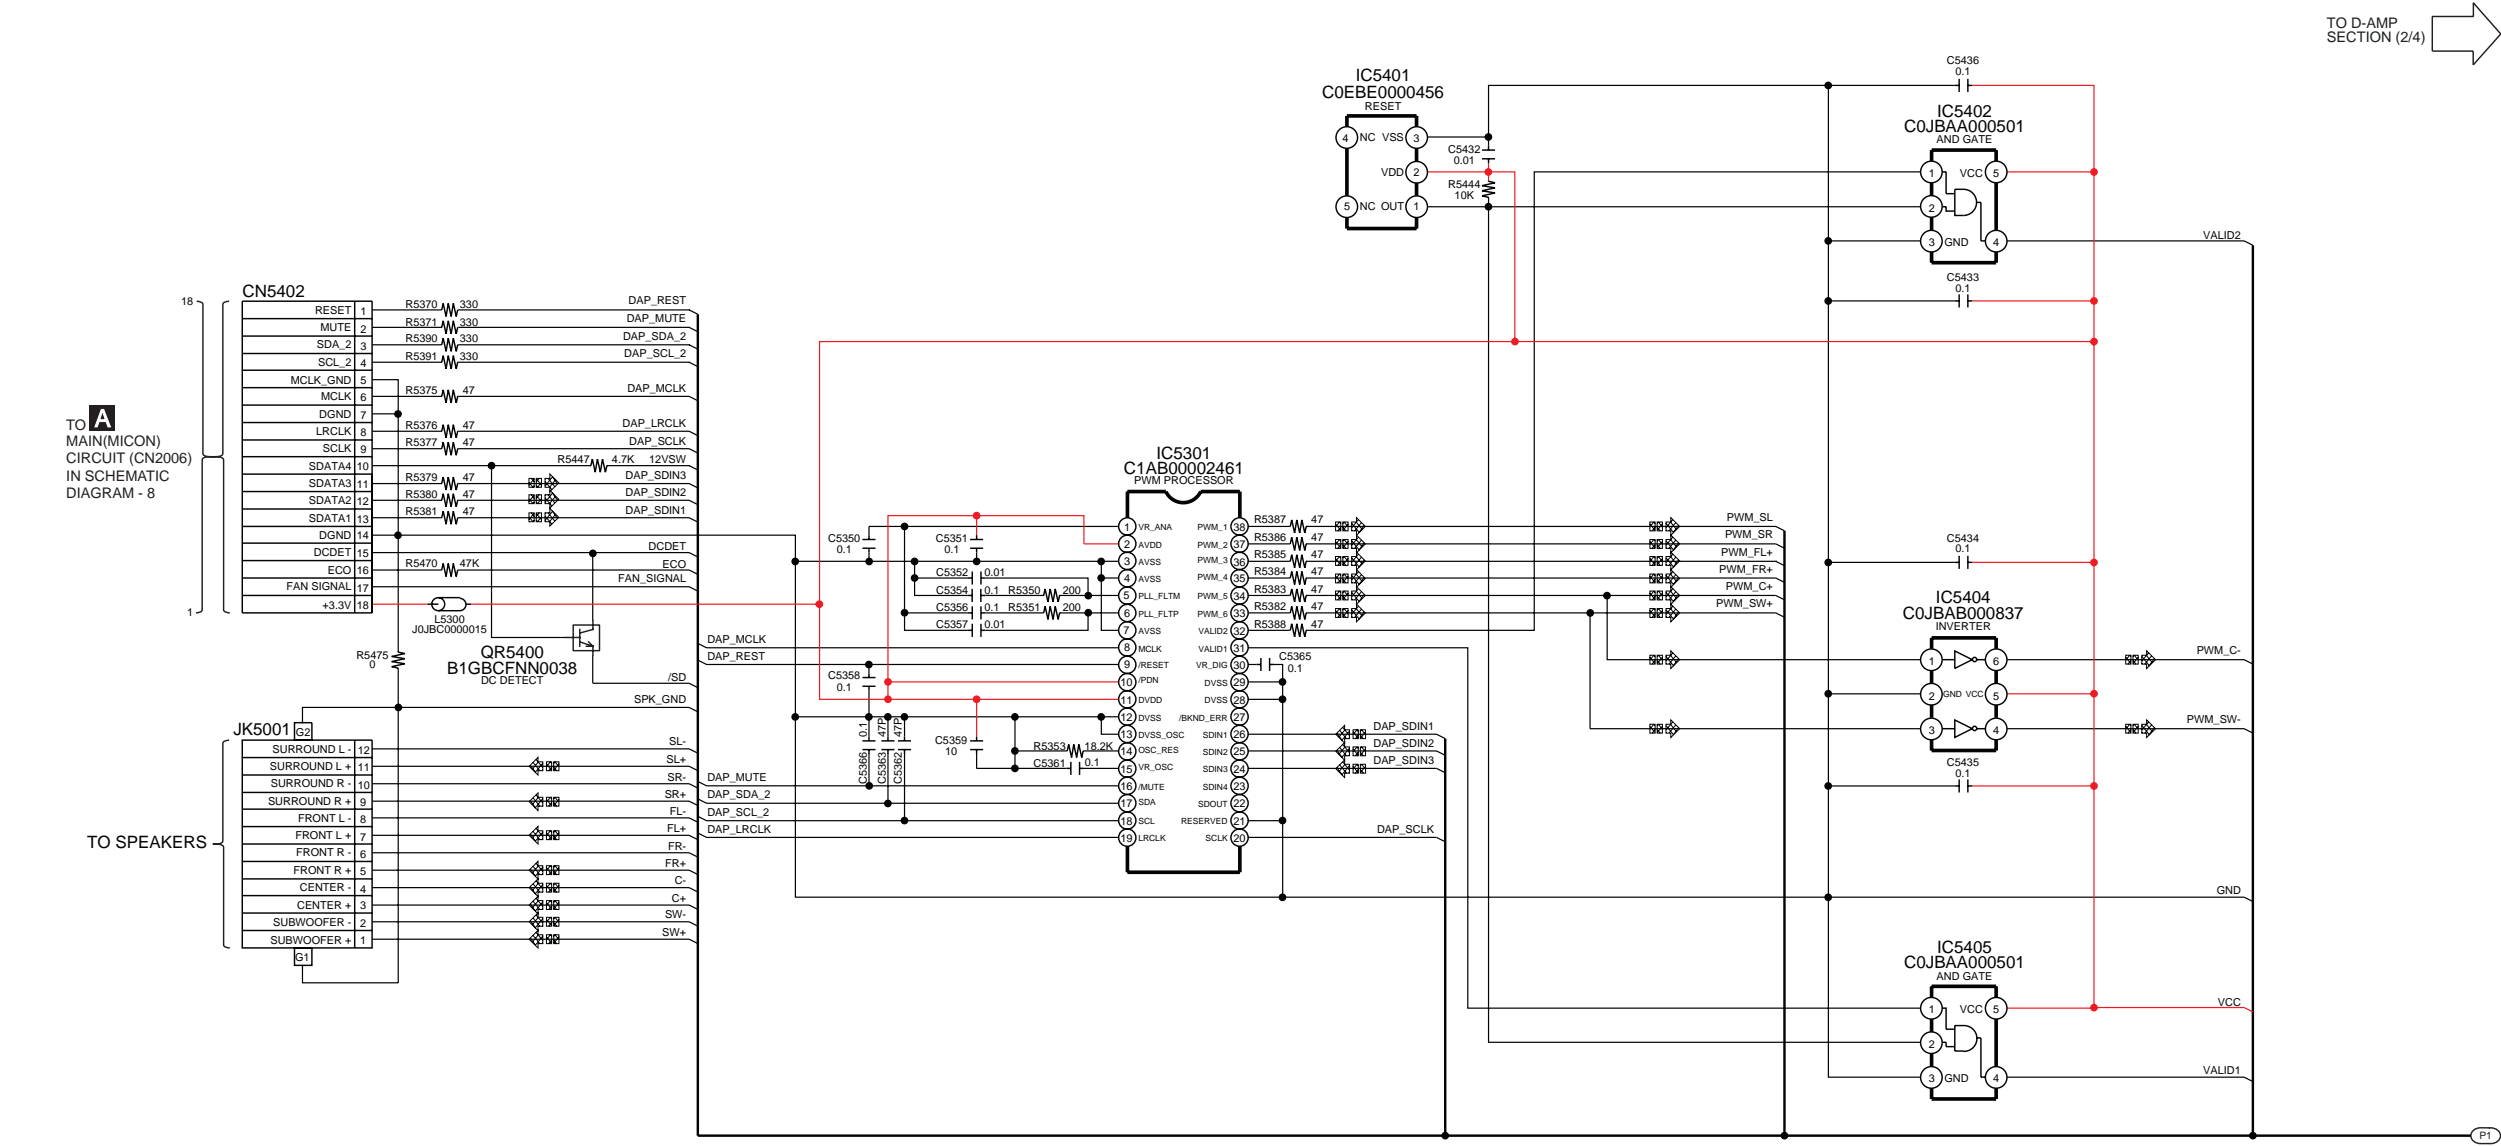— : +B SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE



↓ TO D-AMP SECTION (3/4)

TO D-AMP SECTION (2/4) →

1/4	2/4
3/4	4/4

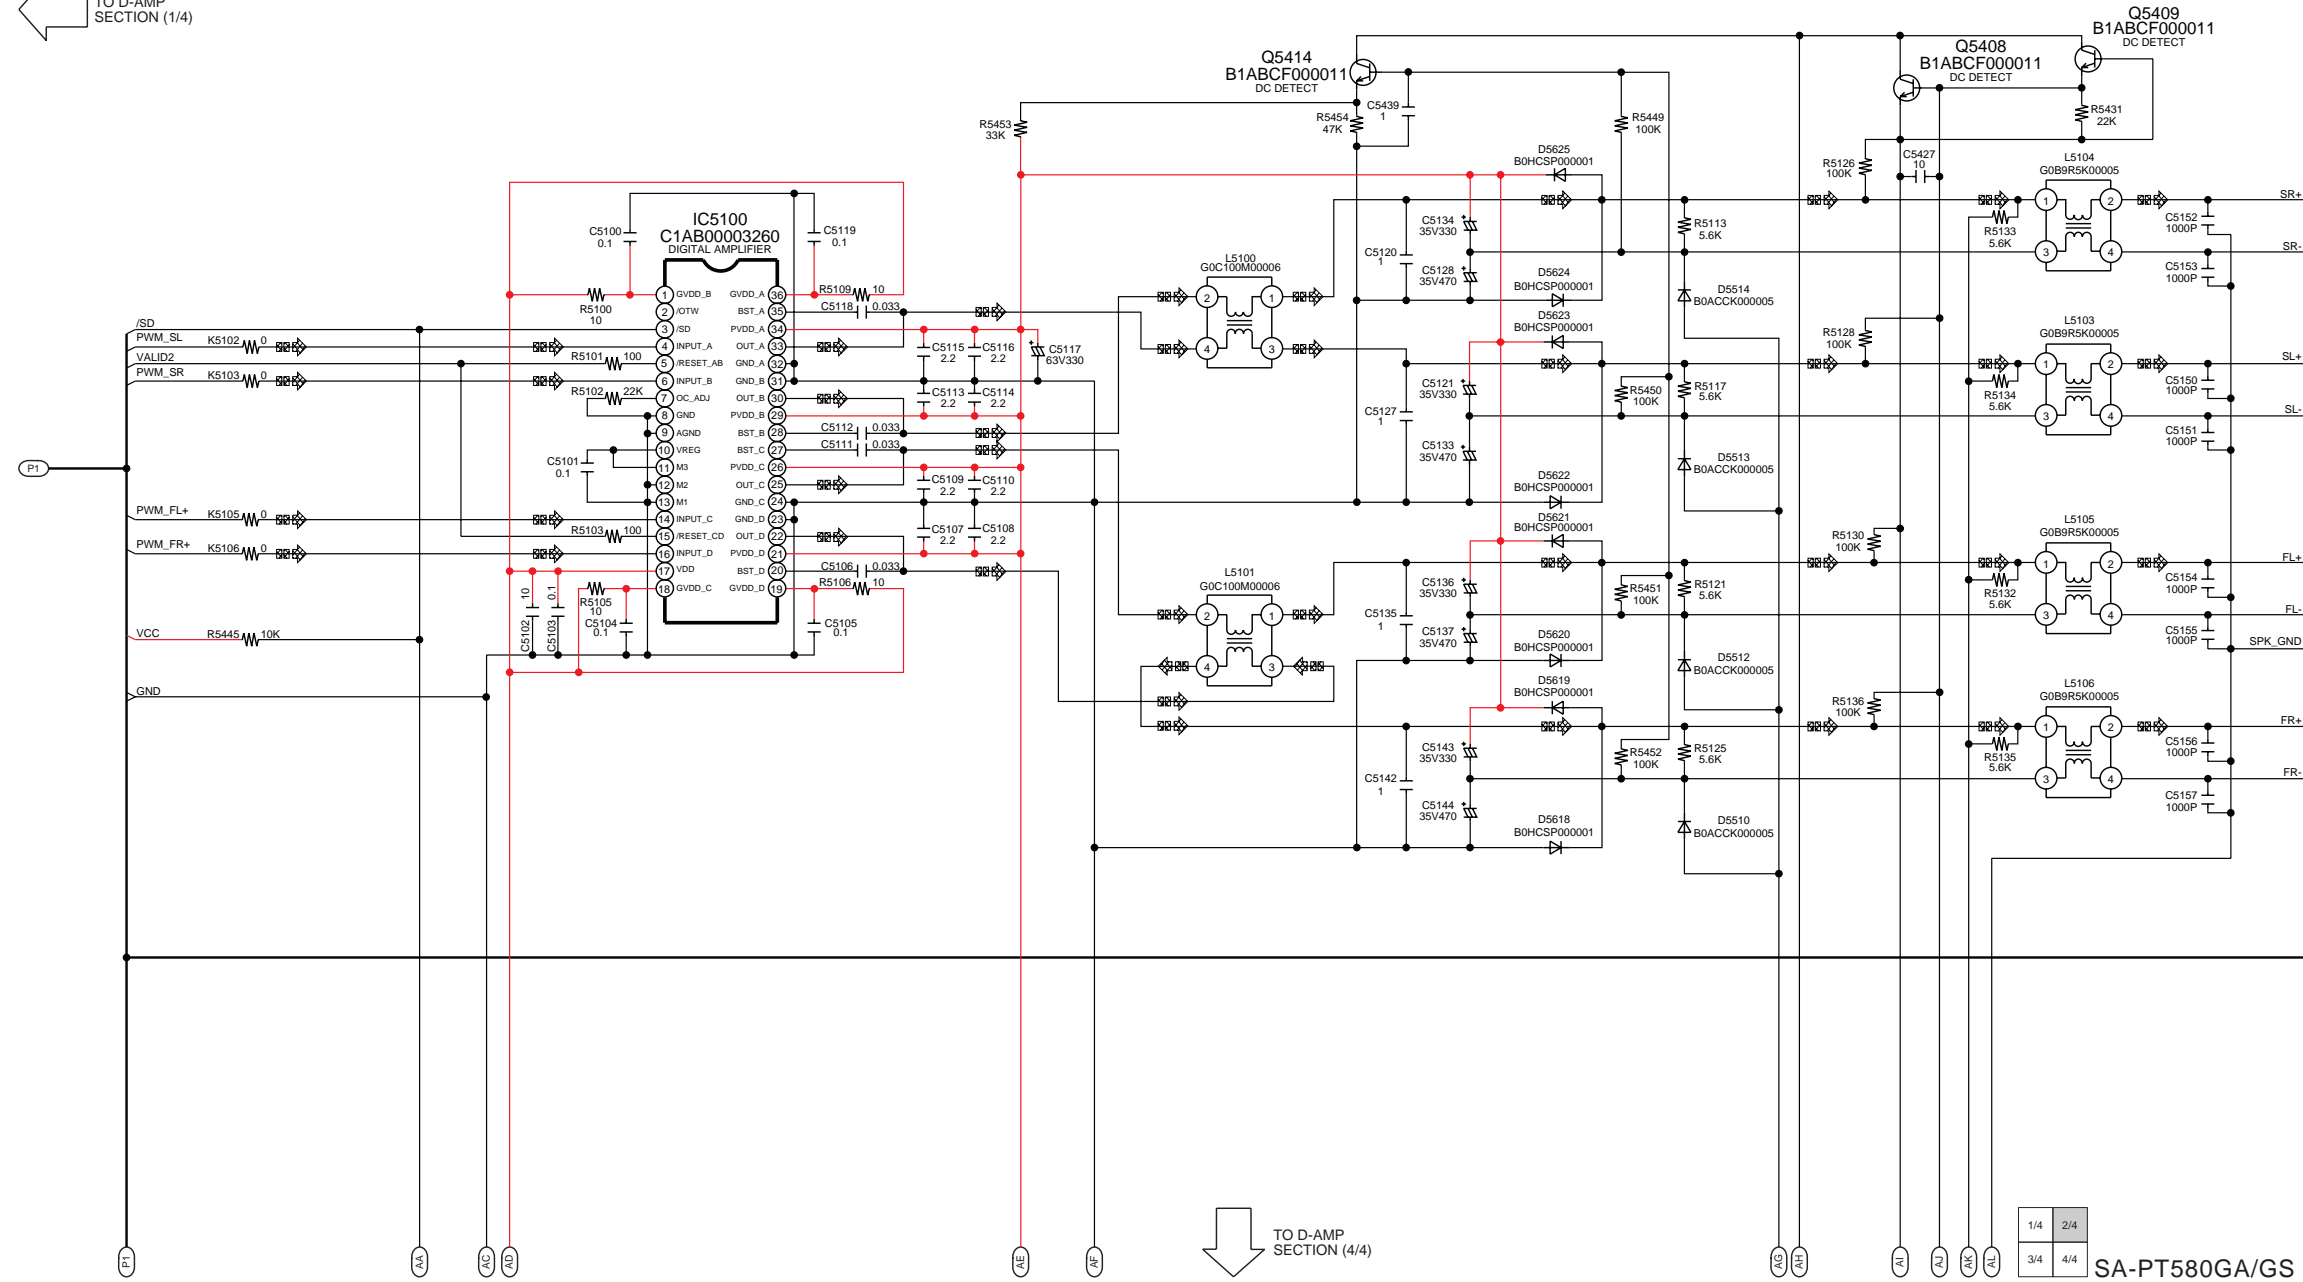
SA-PT580GA/GS D-AMP CIRCUIT

SCHEMATIC DIAGRAM - 16

C D-AMP CIRCUIT

— : +B SIGNAL LINE : AUDIO OUTPUT SIGNAL LINE

← TO D-AMP SECTION (1/4)



↓ TO D-AMP SECTION (4/4)

1/4	2/4
3/4	4/4

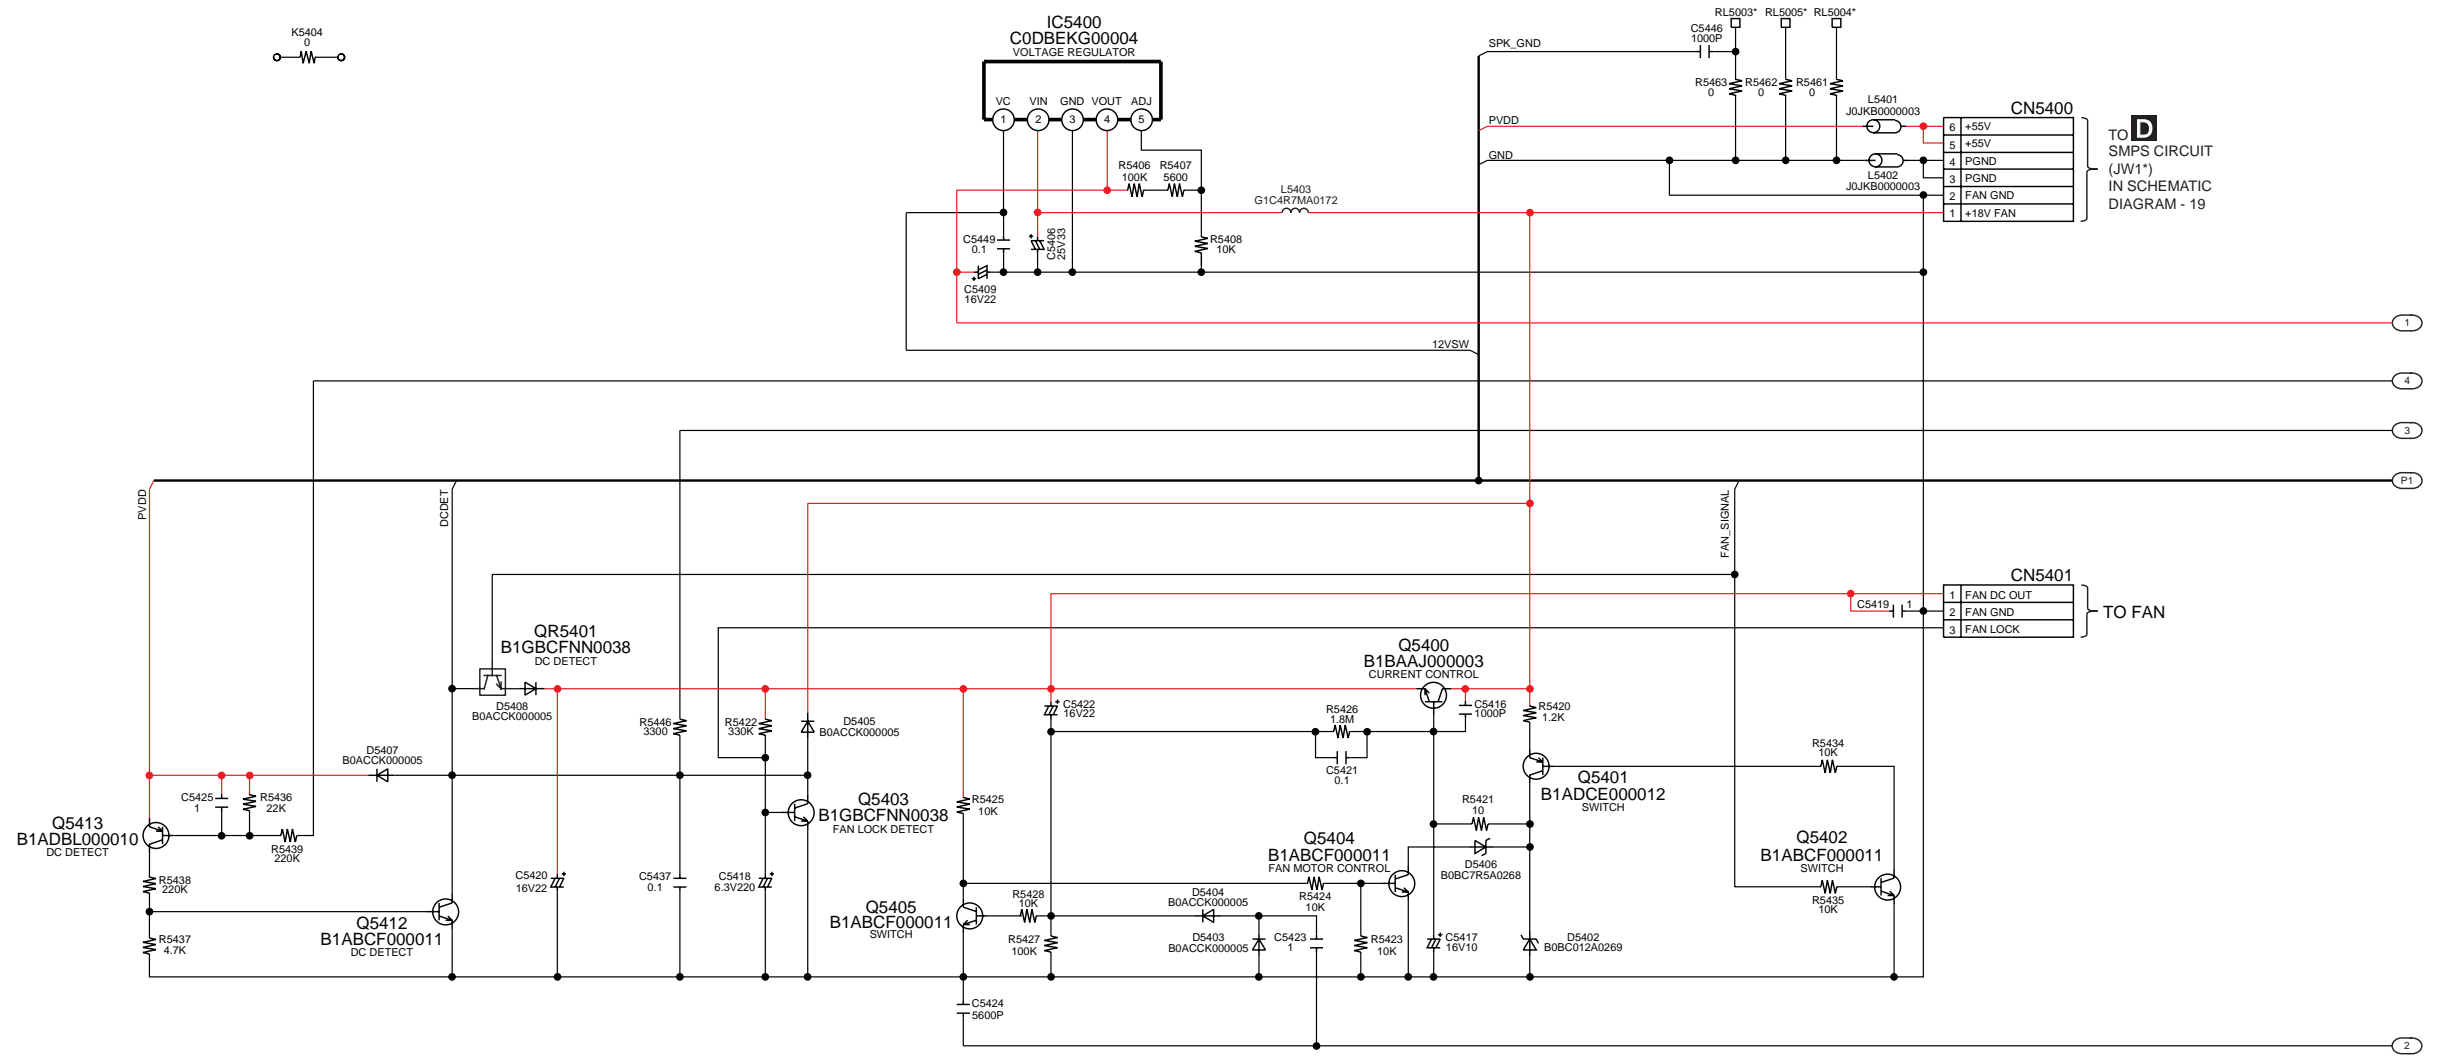
SA-PT580GA/GS D-AMP CIRCUIT

A
B
C
D
E
F
G
H

SCHEMATIC DIAGRAM - 17
C D-AMP CIRCUIT

— : +B SIGNAL LINE  : AUDIO OUTPUT SIGNAL LINE

↑ TO D-AMP SECTION (1/4)



TO D-AMP SECTION (4/4) →

1/4	2/4
3/4	4/4


SA-PT580GA/GS D-AMP CIRCUIT

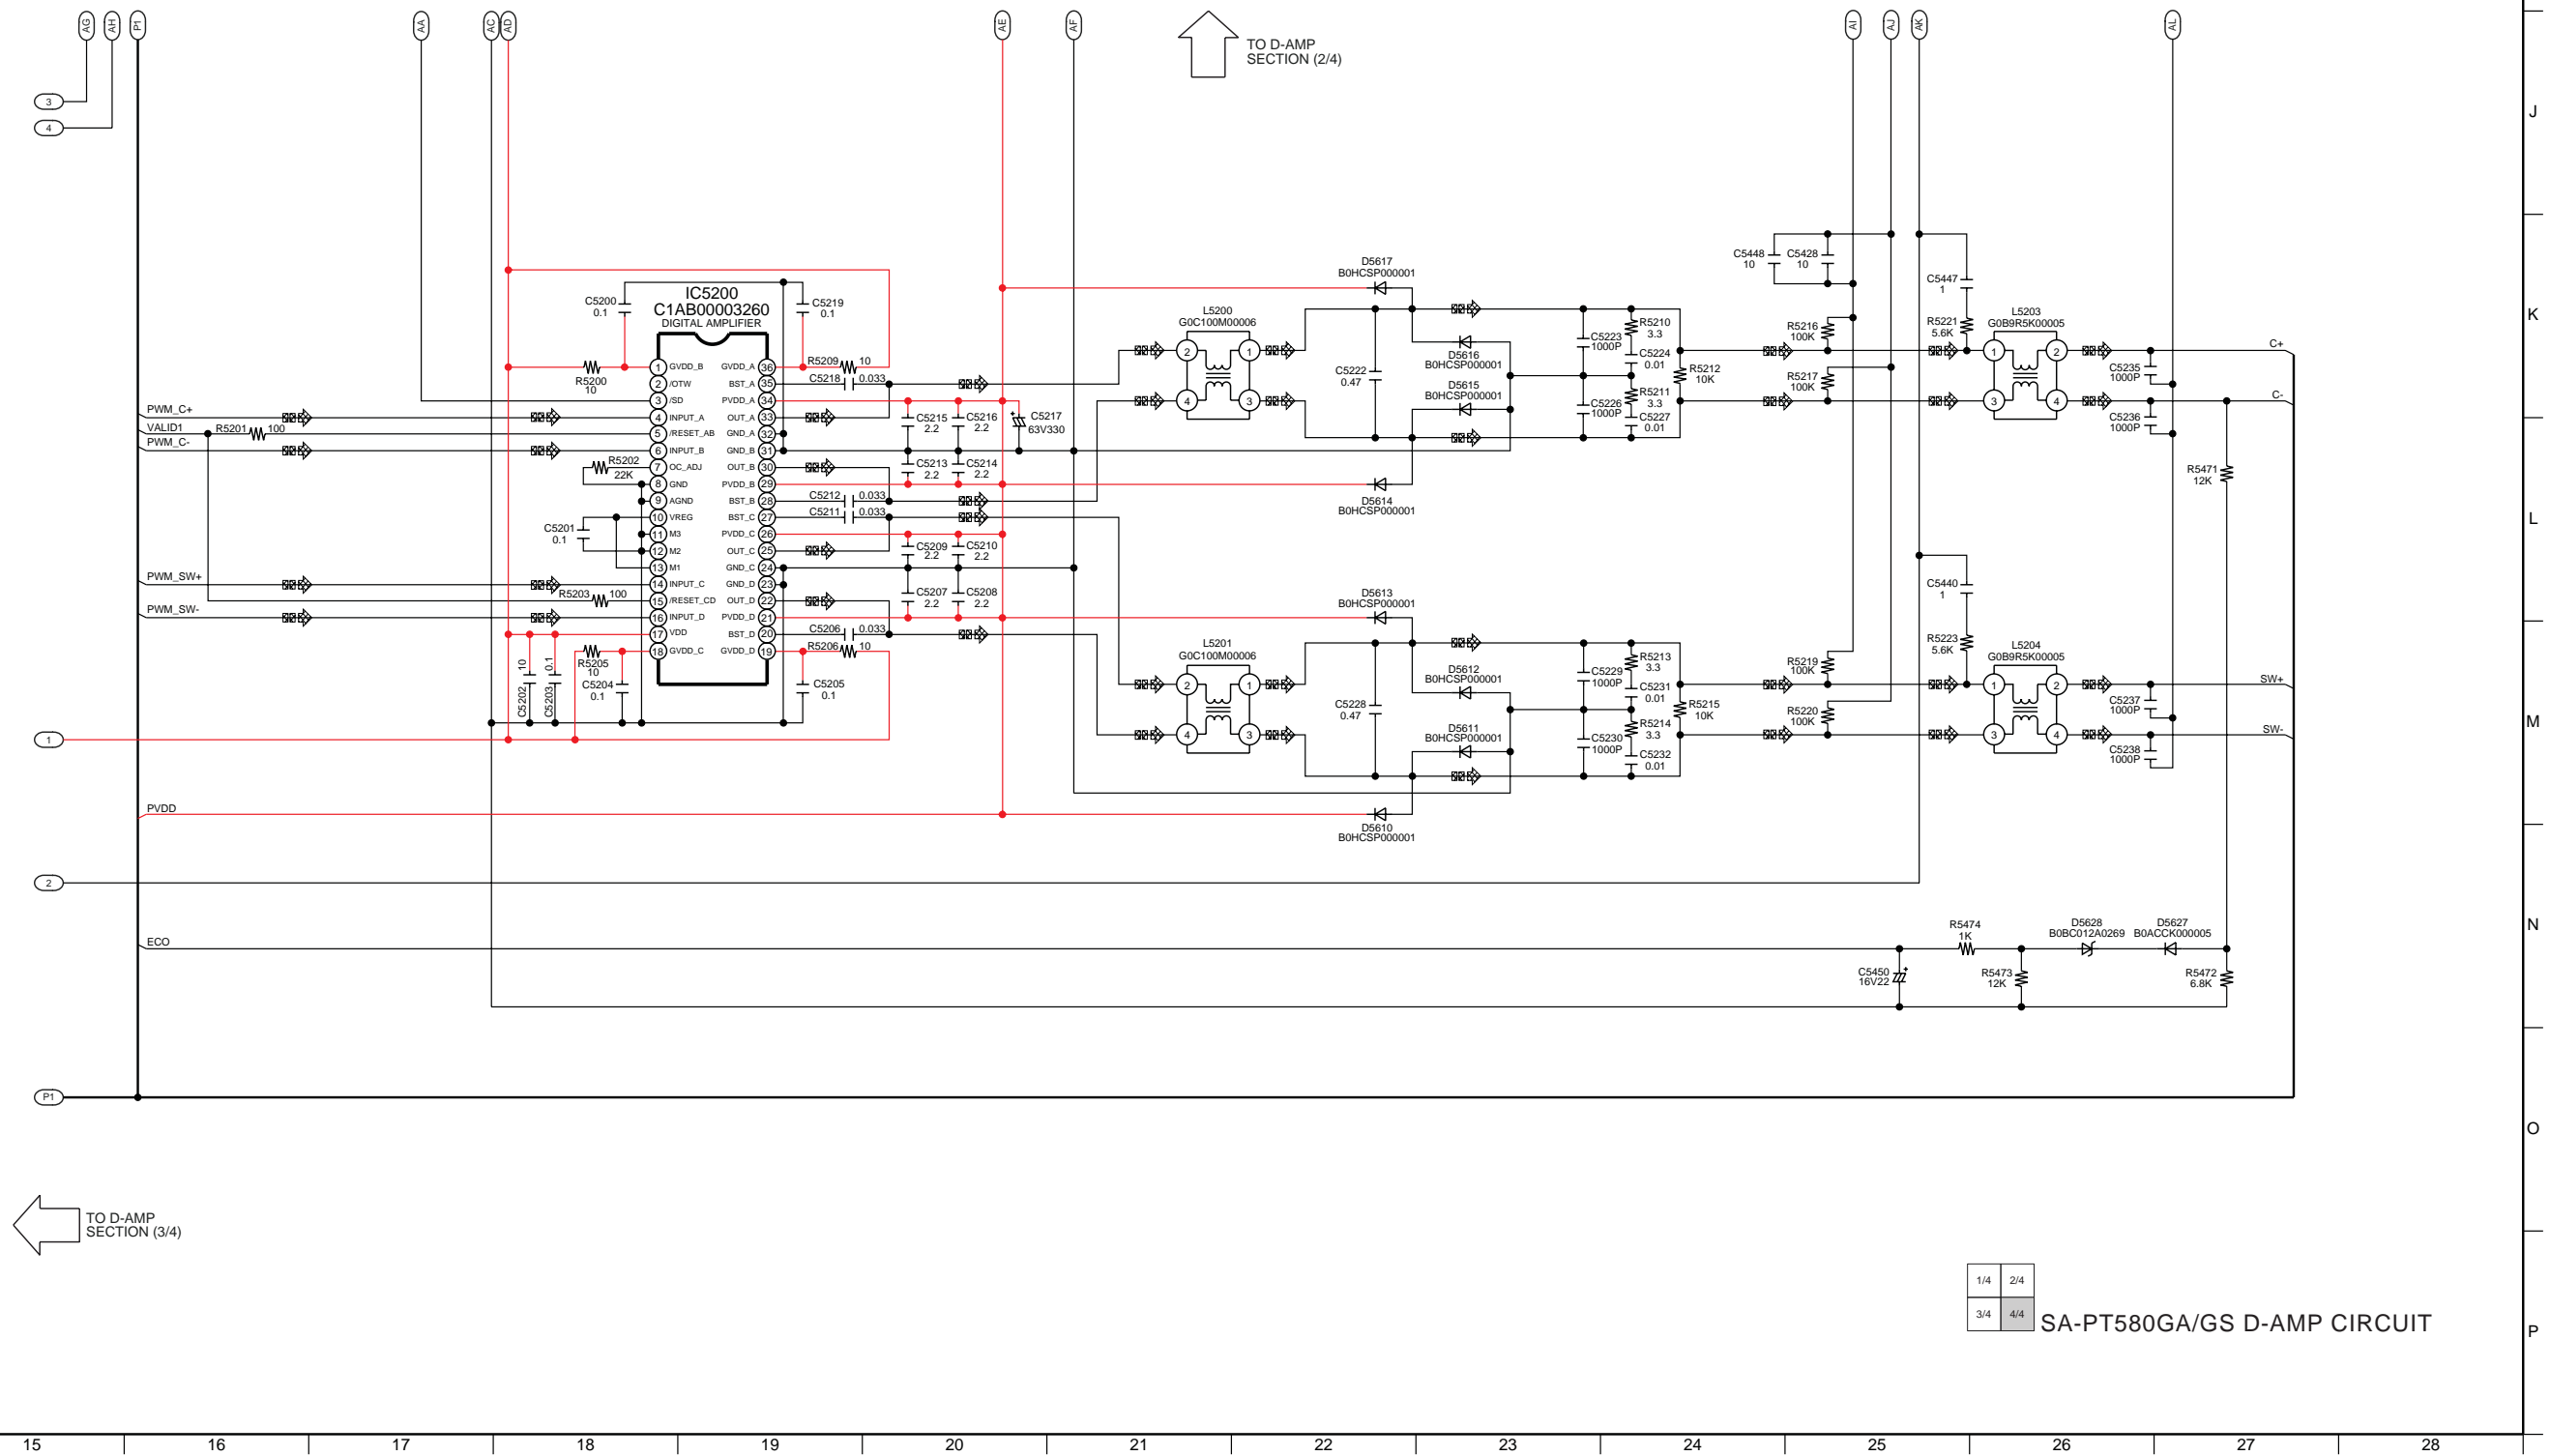
I
J
K
L
M
N
O
P

1 2 3 4 5 6 7 8 9 10 11 12 13 14

SCHEMATIC DIAGRAM - 18

C D-AMP CIRCUIT

— : +B SIGNAL LINE  : AUDIO OUTPUT SIGNAL LINE




1/4	2/4
3/4	4/4

SA-PT580GA/GS D-AMP CIRCUIT

17.4. SMPS Circuit

SCHMATIC DIAGRAM - 19
D SMPS CIRCUIT

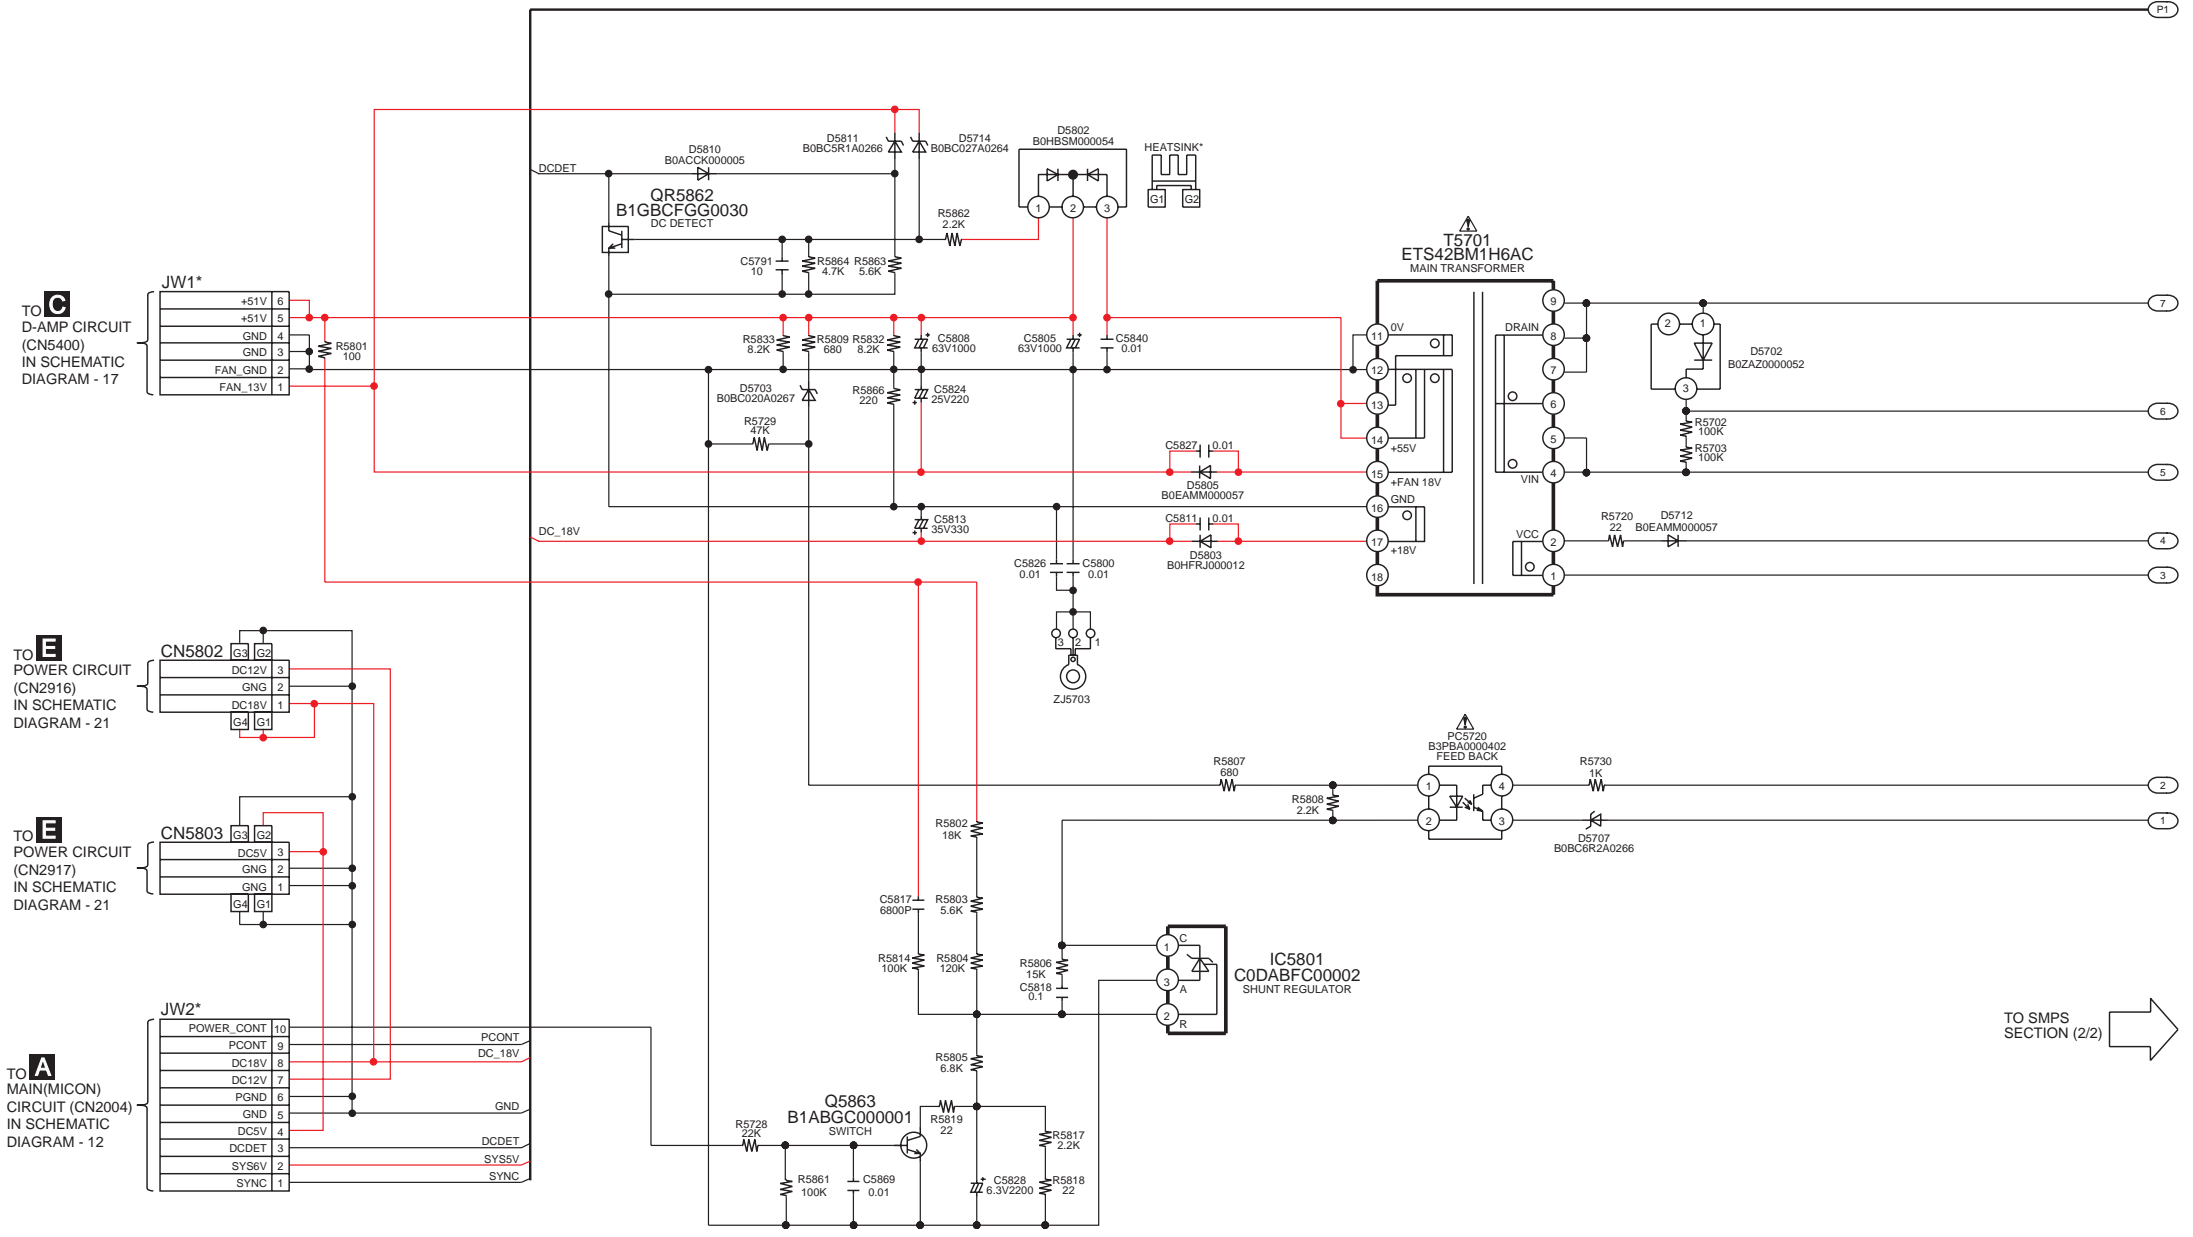
— : +B SIGNAL LINE — : -B SIGNAL LINE



TO SMPS SECTION (2/2) →

SCHEMATIC DIAGRAM - 20
D SMPS CIRCUIT

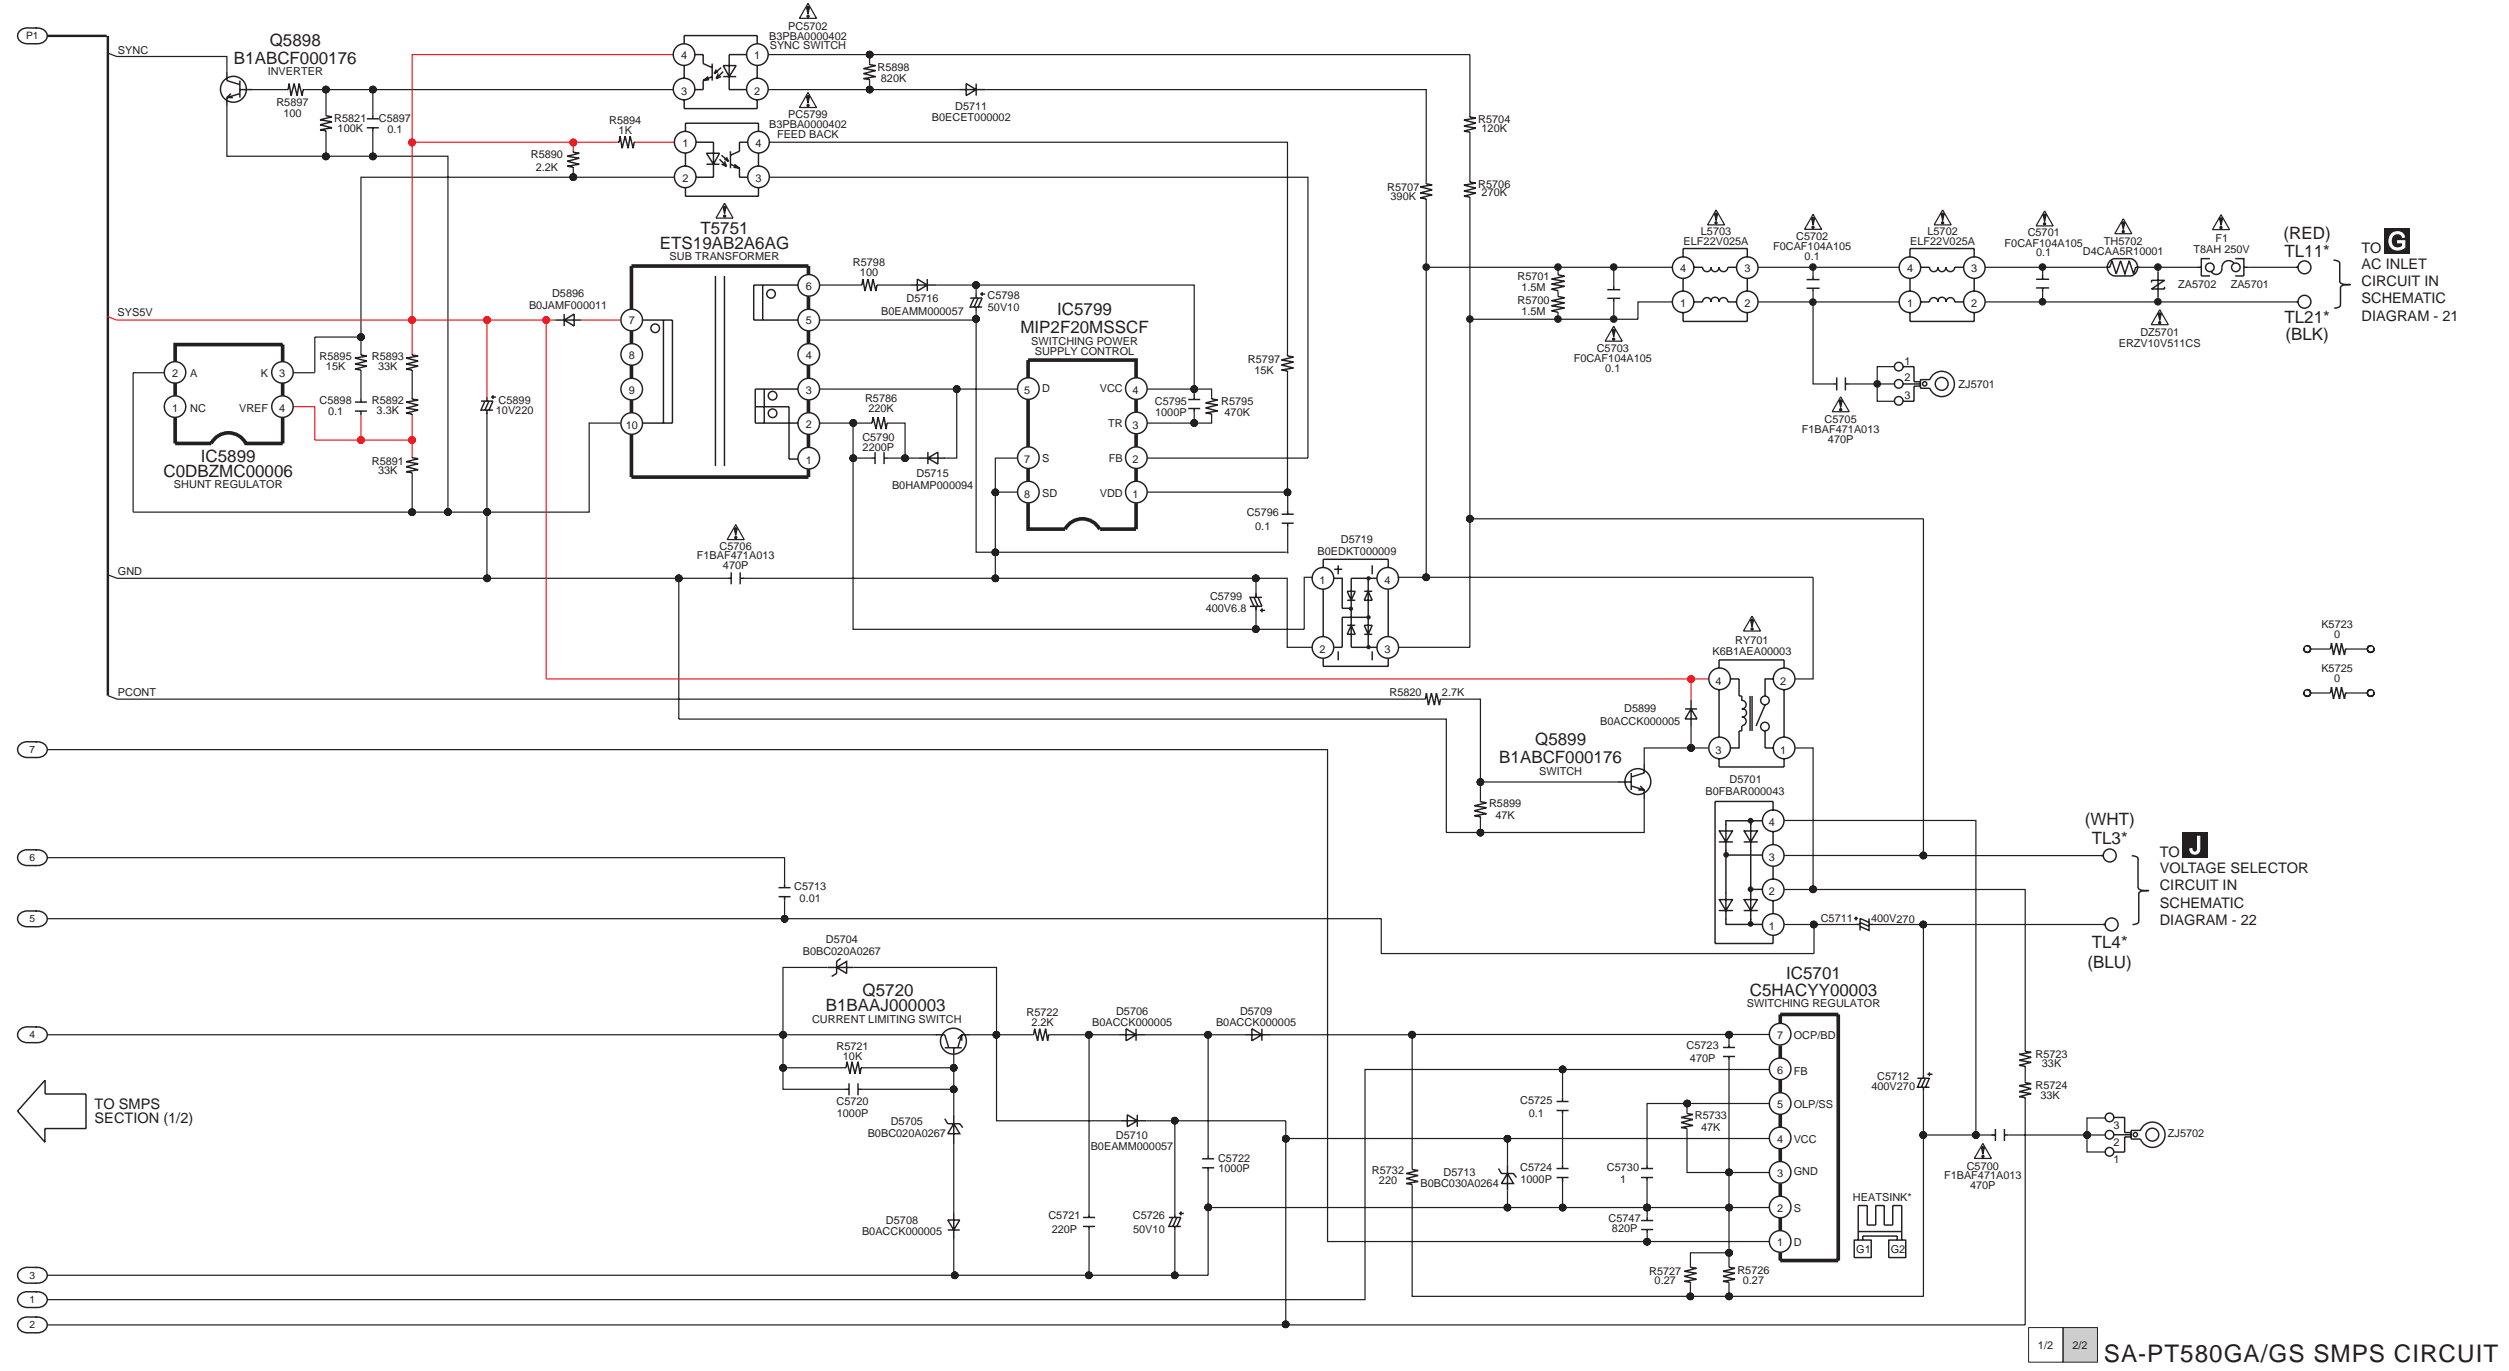— : +B SIGNAL LINE — : -B SIGNAL LINE




1/2 2/2 SA-PT580GA/GS SMPS CIRCUIT

17.5. Power, Power Button & AC Inlet Circuit

SCHMATIC DIAGRAM - 21


E POWER CIRCUIT

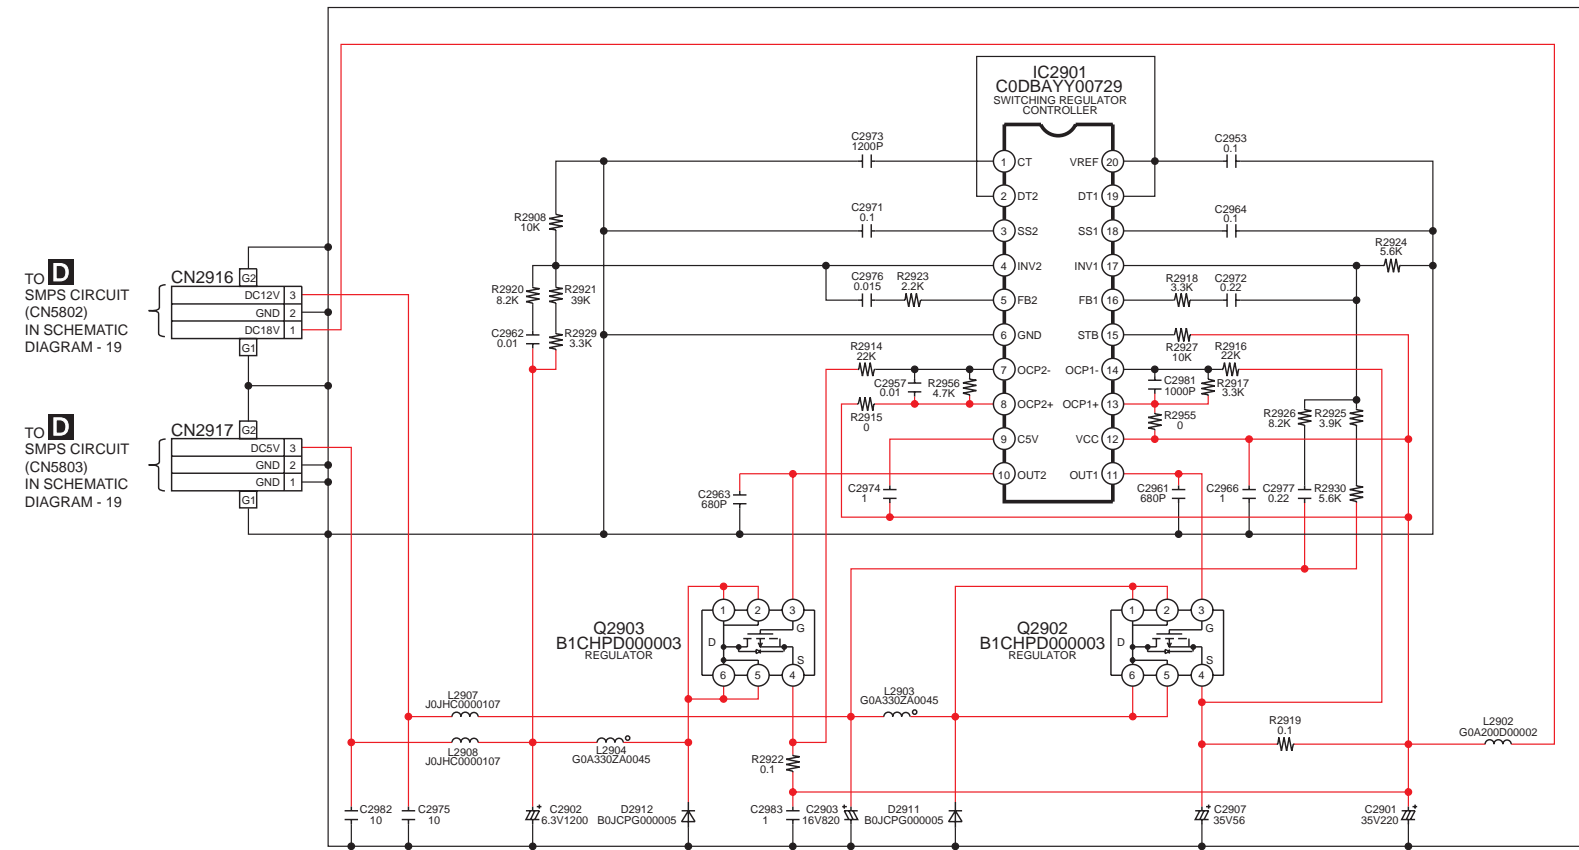— : +B SIGNAL LINE




F POWER BUTTON CIRCUIT

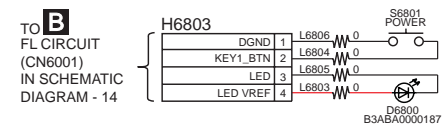— : +B SIGNAL LINE



G AC INLET CIRCUIT

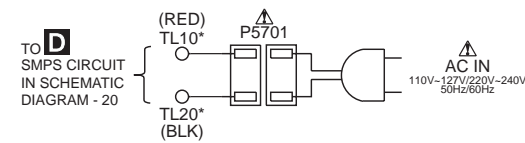


SA-PT580GA/GS POWER / POWER BUTTON / AC INLET CIRCUIT

17.6. iPod/iPhone, USB & Voltage Selector Circuit

SCHEMATIC DIAGRAM - 22

H iPod/iPhone CIRCUIT

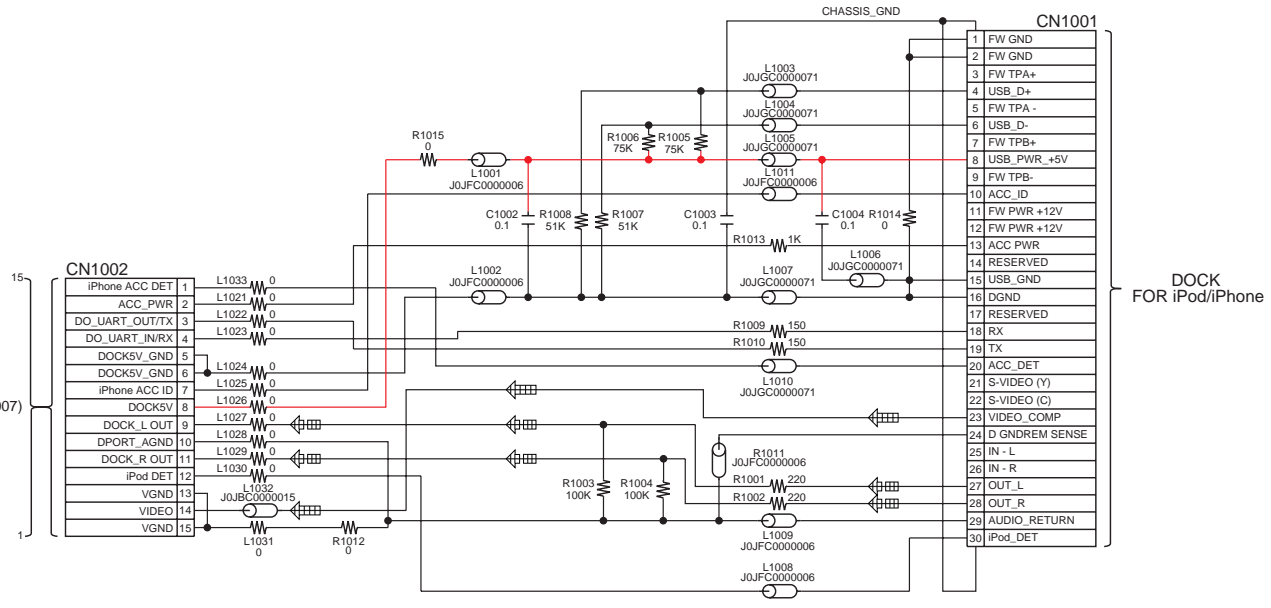
—: +B SIGNAL LINE : iPod/iPhone AUDIO INPUT SIGNAL LINE : iPod/iPhone VIDEO INPUT SIGNAL LINE



TO **A** MAIN(MICON) CIRCUIT (CN2007) IN SCHEMATIC DIAGRAM - 11


I USB CIRCUIT

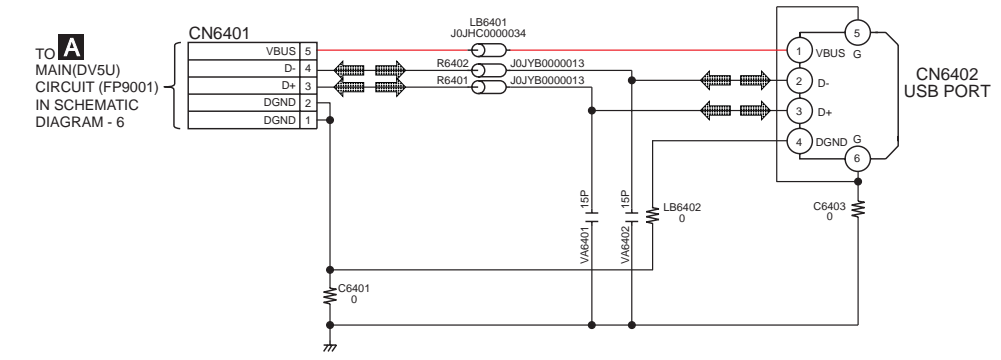—: +B SIGNAL LINE : USB SIGNAL LINE



TO **A** MAIN(DV5U) CIRCUIT (FP9001) IN SCHEMATIC DIAGRAM - 6

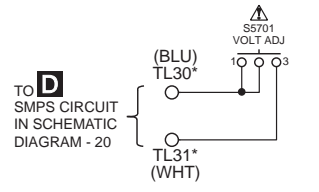J VOLTAGE SELECTOR CIRCUIT



TO **D** SMPS CIRCUIT IN SCHEMATIC DIAGRAM - 20

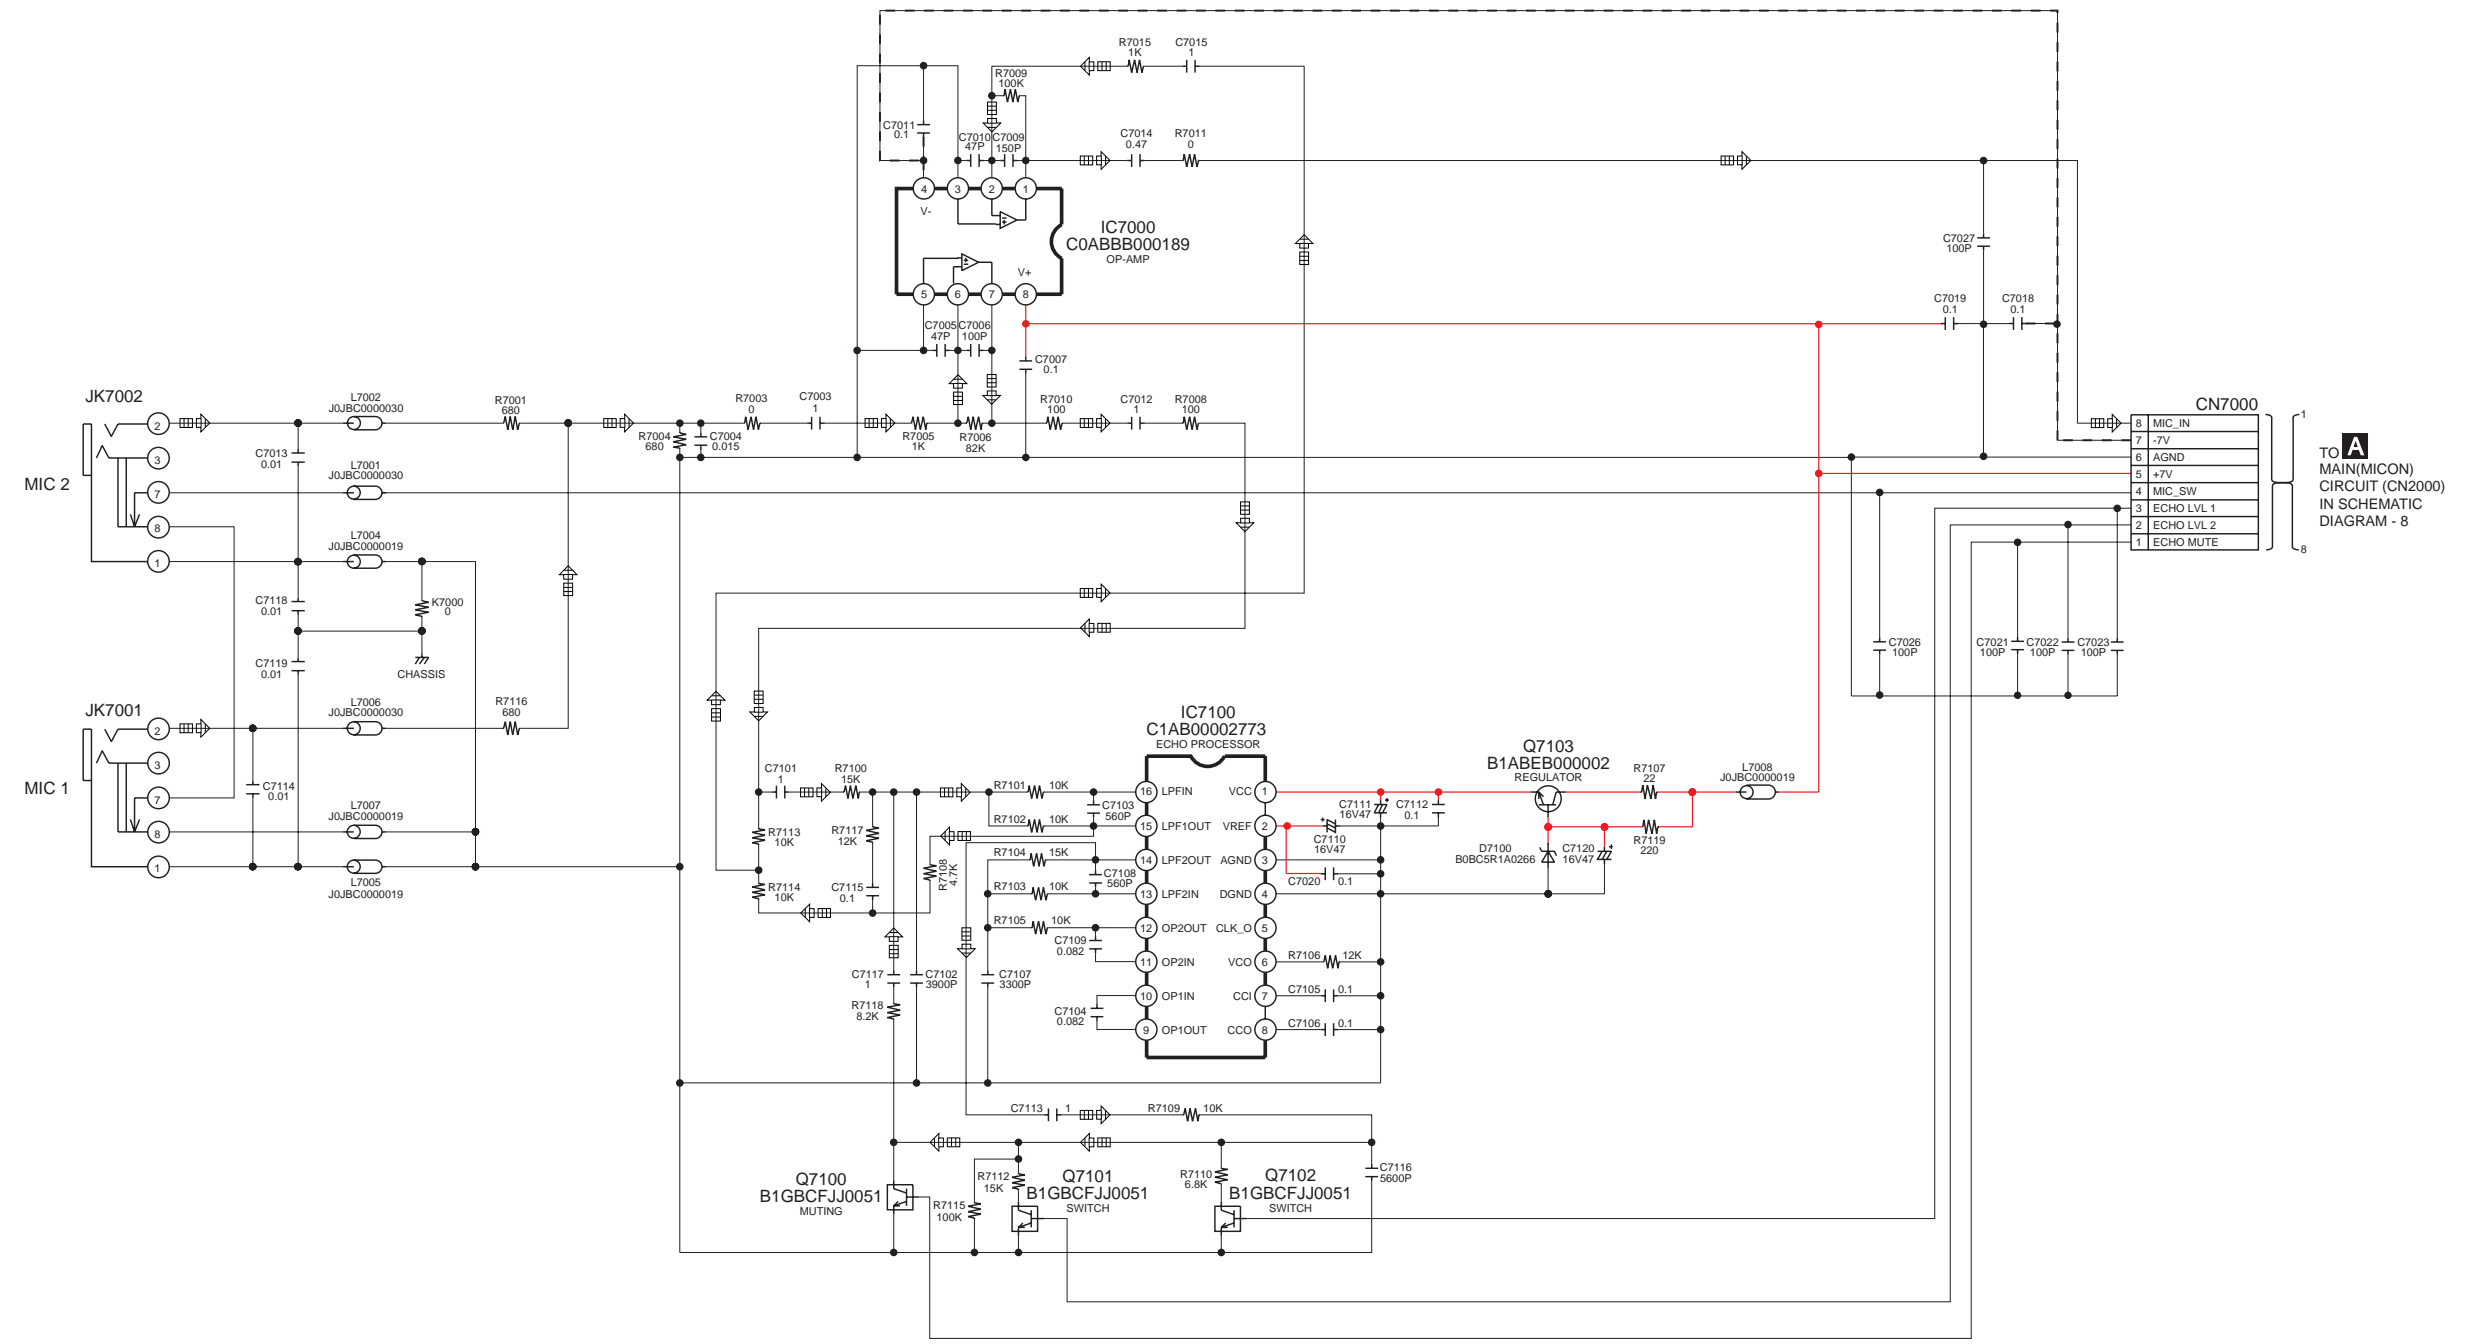
SA-PT580GA/GS iPod/iPhone / USB / VOLTAGE SELECTOR CIRCUIT

17.7. Mic Circuit

SCHMATIC DIAGRAM - 23

K MIC CIRCUIT

—+ : +B SIGNAL LINE - - - : -B SIGNAL LINE □□□ : MIC AUDIO INPUT SIGNAL LINE



TO MAIN(MICON) CIRCUIT (CN2000) IN SCHEMATIC DIAGRAM - 8

SA-PT580GA/GS MIC CIRCUIT

18 Printed Circuit Board

18.1. Main P.C.B.

A MAIN P.C.B. (REPX0861F...GA)
(REPX0861E...GS)



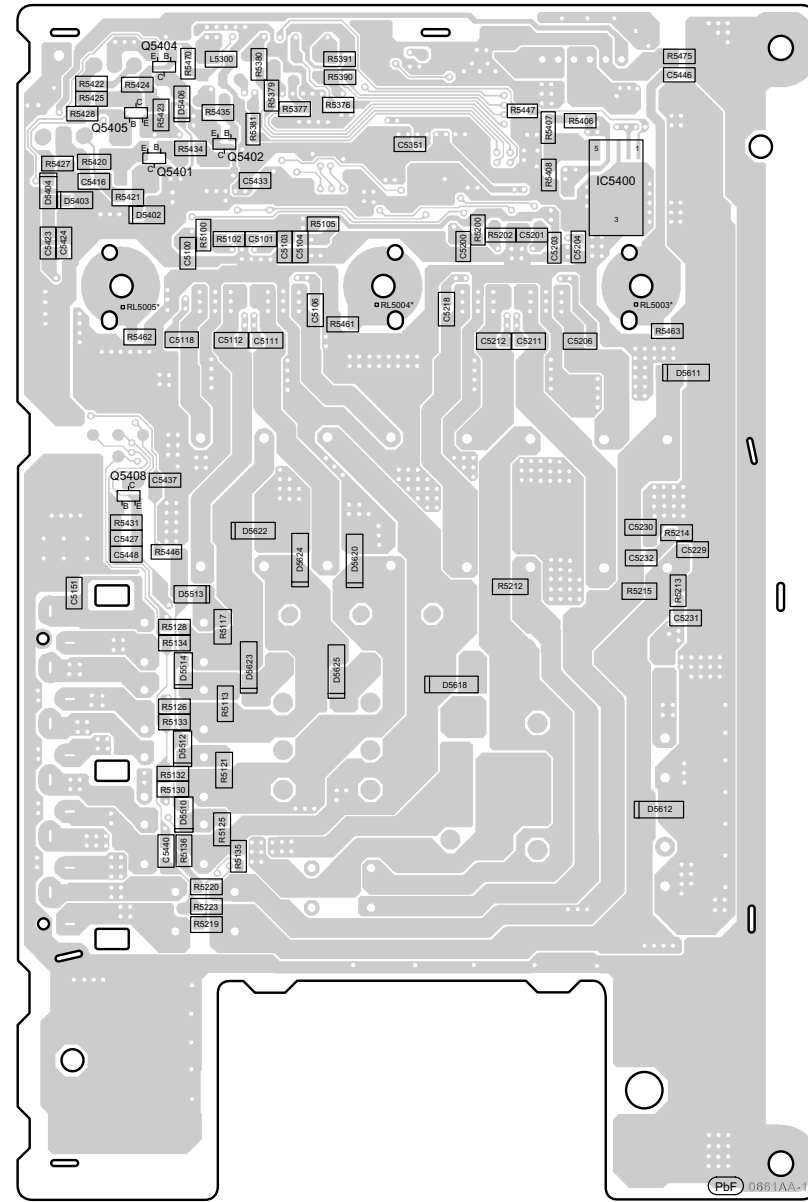
(SIDE A)

SA-PT580GA/GS
MAIN P.C.B.


18.3. D-Amp P.C.B.

C D-AMP P.C.B. (REPX0801BA)


H
G
F
E
D
C
B
A



(SIDE A)

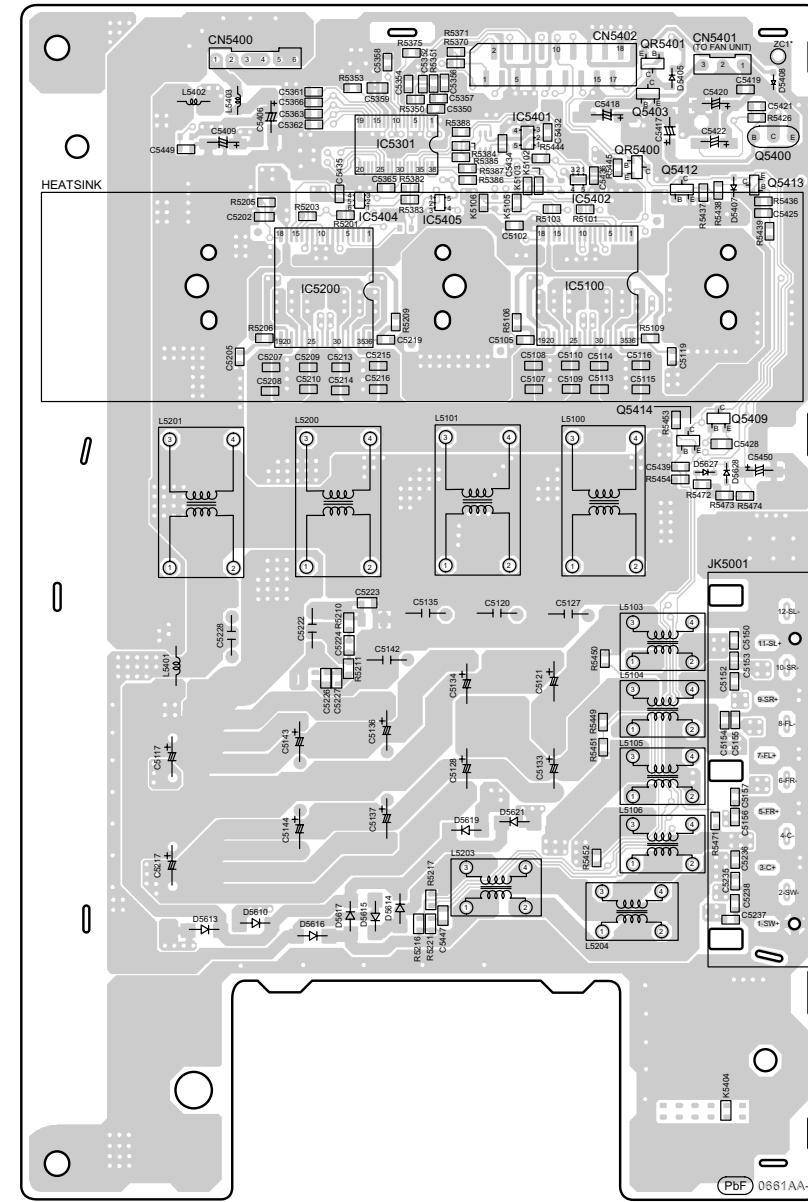

(SIDE B)

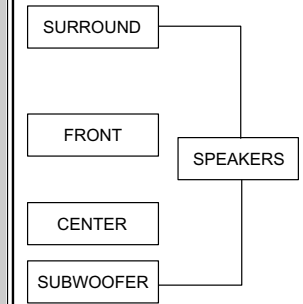

NOTE: "*" REF IS FOR INDICATION ONLY.

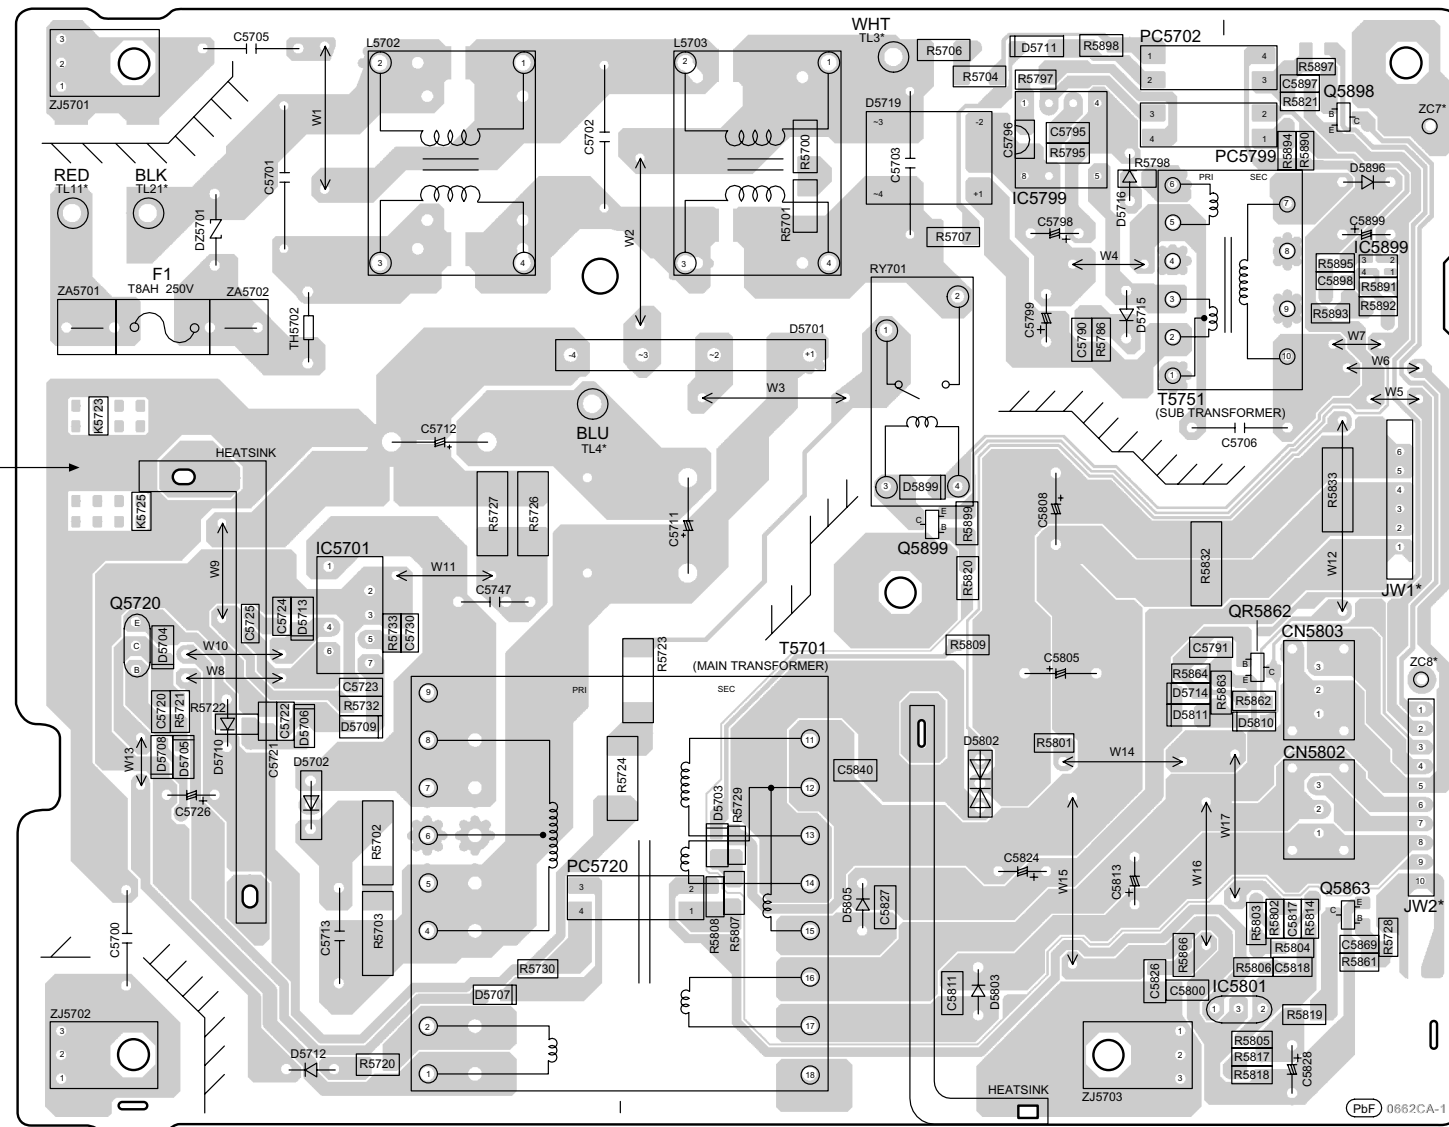
SA-PT580GA/GS
D-AMP P.C.B.

1 2 3 4 5 6 7 8 9 10 11 12 13

18.4. SMPS P.C.B.

D SMPS P.C.B. (REPX0803B)

CAUTION
RISK OF ELECTRIC SHOCK
AC VOLTAGE LINE.
PLEASE DO NOT TOUCH THIS P.C.B



NOTE: "*" REF IS FOR INDICATION ONLY.

SA-PT580GA/GS
SMPS P.C.B.

19 Terminal Function of ICs

19.1. IC2300 (RFKWMPT480GA): IC MICROPROCESSOR

Pin No.	TERMINAL NAME	I/O	Description
1	EDA	O	EEPROM IC Data Signal
2	ECK	O	EEPROM IC Clock Signal
3	ASS_MUTE	O	Bypass Auto Speaker Circuit
4	ECO_CTRL	O	Control Voltage Supply of D-AMP (For Echo Mode)
5	RMT	I	Remote Control Signal
6	ECHO_LVL1	I/O	Echo Control level 1
7	ECHO_LVL2	I/O	Echo Control level 2
8	BYTE	I	External data bus width select input
9	CNVSS	I	Micon Programming-Processor / Single Chip Mode
10	XCIN(32K)	I	Clock In (32KHz)
11	XCOUT(32K)	O	Clock Out (32KHz)
12	RESET	I	Microp Reset Signal
13	XOUT	I	Clock In
14	VSS	-	GND
15	XIN	O	Clock Out
16	VCC	-	VCC +3.3V
17	CEC	I	CEC IN/OUT PORT
18	ECHO_MUTE	O	Bypass Echo Circuit
19	SYNC	I	AC Sync Signal
20	FX_INT	I	Interrupt from Wireless module
21	FLD_STB	O	FL Display Strobe Signal
22	TUN_SDIO	O	Tuner I2C Data
23	LED_CTRL	O	Power On LED control
24	TUN_SDCLK	O	Tuner I2C Clock
25	DC_DET1	I	Power Supply Failure Detection (F76)
26	DC_DET2	I	D-Amp and Fan Failure Detection (F61)
27	FLD_OUT	O	FL Display Data Out Signal
28	FLD_CLK	O	FL Display Clock Signal
29	DAP/DSP_I2CCLK	I/O	I2C Clock to DSP / DAP
30	DAP/DSP_I2CDAT	I/O	I2C Data to DSP / DAP
31	DBG_TX	O	UART TX for Debug
32	DBG_RX	I	UART RX for Debug
33	SCLK	I	Clock Signal (For Flash Writing)
34	DAP_MUTE	O	DAP Master mute
35	UART_TX	I/O	iPod UART Transmitter Data
36	UART_RX	I	iPod UART Receiver Data
37	TUN_RST	I/O	Tuner Reset Signal
38	iPhone_DAT	I	I2C Data to iPod IC (Software I2C control)
39	iPhone_CLK	I	I2C Clock to iPod IC (Software I2C control)
40	iPhone_RST	O	Reset Signal to iPhone
41	EPM	L	For Downloading Purpose (with pull down)
42	TUN_GPIO	I	Tuner General Purpose IO
43	FX_DET	H	Wireless Detection
44	FX_DI	-	Not in use
45	FX_SCS	-	Not in use
46	CE	I	For Downloading Purpose (with pull up)
47	FX_DO	-	Not in use
48	FX_CLK	-	Not in use
49	iPod_VIDEO_SEL	O	Selection of Composite Output from ipod or Back end

50	PCONT	O	System Power Control
51	RGB_H	-	Not in use
52	VMUTE2	-	Not in use
53	VMUTE	I/O	Video Mute Control
54	YC_H	-	Not in use
55	SCART_MUTE	-	Not in use
56	UNLOAD_SW	I	DLS6E Unload Switch Signal
57	INNER_SW	I	DLS6E Inner Switch
58	TRAY_CCW_L	O	DLS6E Tray Close Signal
59	TRAY_CW_H	O	DLS6E Tray Open Signal
60	DVD_MUTE	I	Mute Signal from DVD Module (Reverse logic of ZFLAG)
61	SEL_A	O	Analog Input Selector Control A
62	VCC	-	+3.3V System Supply
63	FX_BUNDLE_CS	I	Chip Select for Wireless Bundled model for Smart Setup
64	VSS	-	System Ground
65	HP_MUTE	O	Mute Signal for Headphone
66	NRST	I	DAC Reset signal (from DV)
67	VCOMP_MUTE	-	No Connection
68	WIDE1	-	No Connection
69	DSP_RESET	O	DSP Reset Signal
70	DSP_MUTE	O	DSP Mute Signal
71	DAP_RST	O	DAP Reset
72	iPod_CTRL_SW	O	iPod Control Switch
73	WL_OFF_SW	O	Wireless Off Switch
74	iPod_DET	I	iPod Insertion Detection
75	VOL0_CTRL	O	Volume Control
76	ADC_RESET	O	ADC Reset Signal
77	DVD_CMD	O	DVD Command
78	DVD_STAT	I	DVD Status
79	DVD_CLK	I	DVD Clock
80	iPod_OC	I	iPod Overcurrent Protection
81	DAC_MUTE1	-	Not in Use
82	BATT_PCONT	I/O	iPod Charging Power Control
83	iPod_ACC	I	iPod Authorisation IC
84	DAC_RESET	-	Not in use
85	DAC_MUTE	-	Not in use
86	MIC_SW	I	MIC Plug in Detection
87	MD3	I	DVD Panel Code Digit 3
88	MD2	I	DVD Panel Code Digit 2
89	APD	I	Detect Auto Power Down Level
90	SEL_B	O	Analog Input Selector Control B
91	KEY2	I	Keyline 2: 1st key is OPEN/CLOSE During STOP mode, act as K11 After wake up, act as AN5
92	KEY1	I	Keyline 1: 1st key is POWER During STOP mode, act as K10 After wake up, act as AN4
93	ASS_INPUT	-	Not in use
94	DAC_RESET1	-	Not in use
95	DES2	I	Model Selector
96	AVSS	-	Analog GND
97	DES1	I	Series Selector
98	VREF	-	Voltage Reference +3.3V
99	AVCC	-	Analog +3.3V Supply
100	ECS	O	EEPROM IC Chip Select


19.2. IC6001 (C0HBB0000057): IC FL Driver

Pin No.	Terminal Name	I/O	Function
1	LED1	-	No Connection
2	LED2	-	No Connection
3	LED3	-	No Connection
4	LED4	-	No Connection
5	OSC	I	Oscillator Input
6	DOUT	-	Data Output
7	DIN	I	Data Input
8	CLK	I	Clock Input
9	STB	I	Serial Interface Strobe
10	K1	-	Key Data Input 1 (No Connection)
11	K2	-	Key Data Input 2 (No Connection)
12	GND	-	GND
13	VCC	-	Power Supply (+5V)
14	P18	O	Segment Output 18
15	P17	O	Segment Output 17
16	P16	O	Segment Output 16
17	P15	O	Segment Output 15
18	P14	O	Segment Output 14
19	P13	O	Segment Output 13
20	P12	O	Segment Output 12
21	P11	O	Segment Output 11
22	P10	O	Segment Output 10
23	P9	O	Segment Output 9
24	P8	O	Segment Output 8
25	P7	O	Segment Output 7
26	P6	O	Segment Output 6
27	P5	O	Segment Output 5
28	P4	O	Segment Output 4
29	P3	O	Segment Output 3
30	-VP	-	Voltage Supply
31	P2	O	Segment Output 2
32	P1	O	Segment Output 1
33	G1	O	Grid Segment Output 1
34	G2	O	Grid Segment Output 2
35	G3	O	Grid Segment Output 3
36	G4	O	Grid Segment Output 4
37	G5	O	Grid Segment Output5
38	G6	O	Grid Segment Output 6
39	G7	O	Grid Segment Output7
40	G8	O	Grid Segment Output 8
41	G9	O	Grid Segment Output 9
42	NC	O	Grid Segment Output 10
43	VCC	-	Voltage Supply (+5V)
44	GND	-	GND


20 Exploded View and Replacement Parts List

20.1. Exploded View and Mechanical Replacement Part List

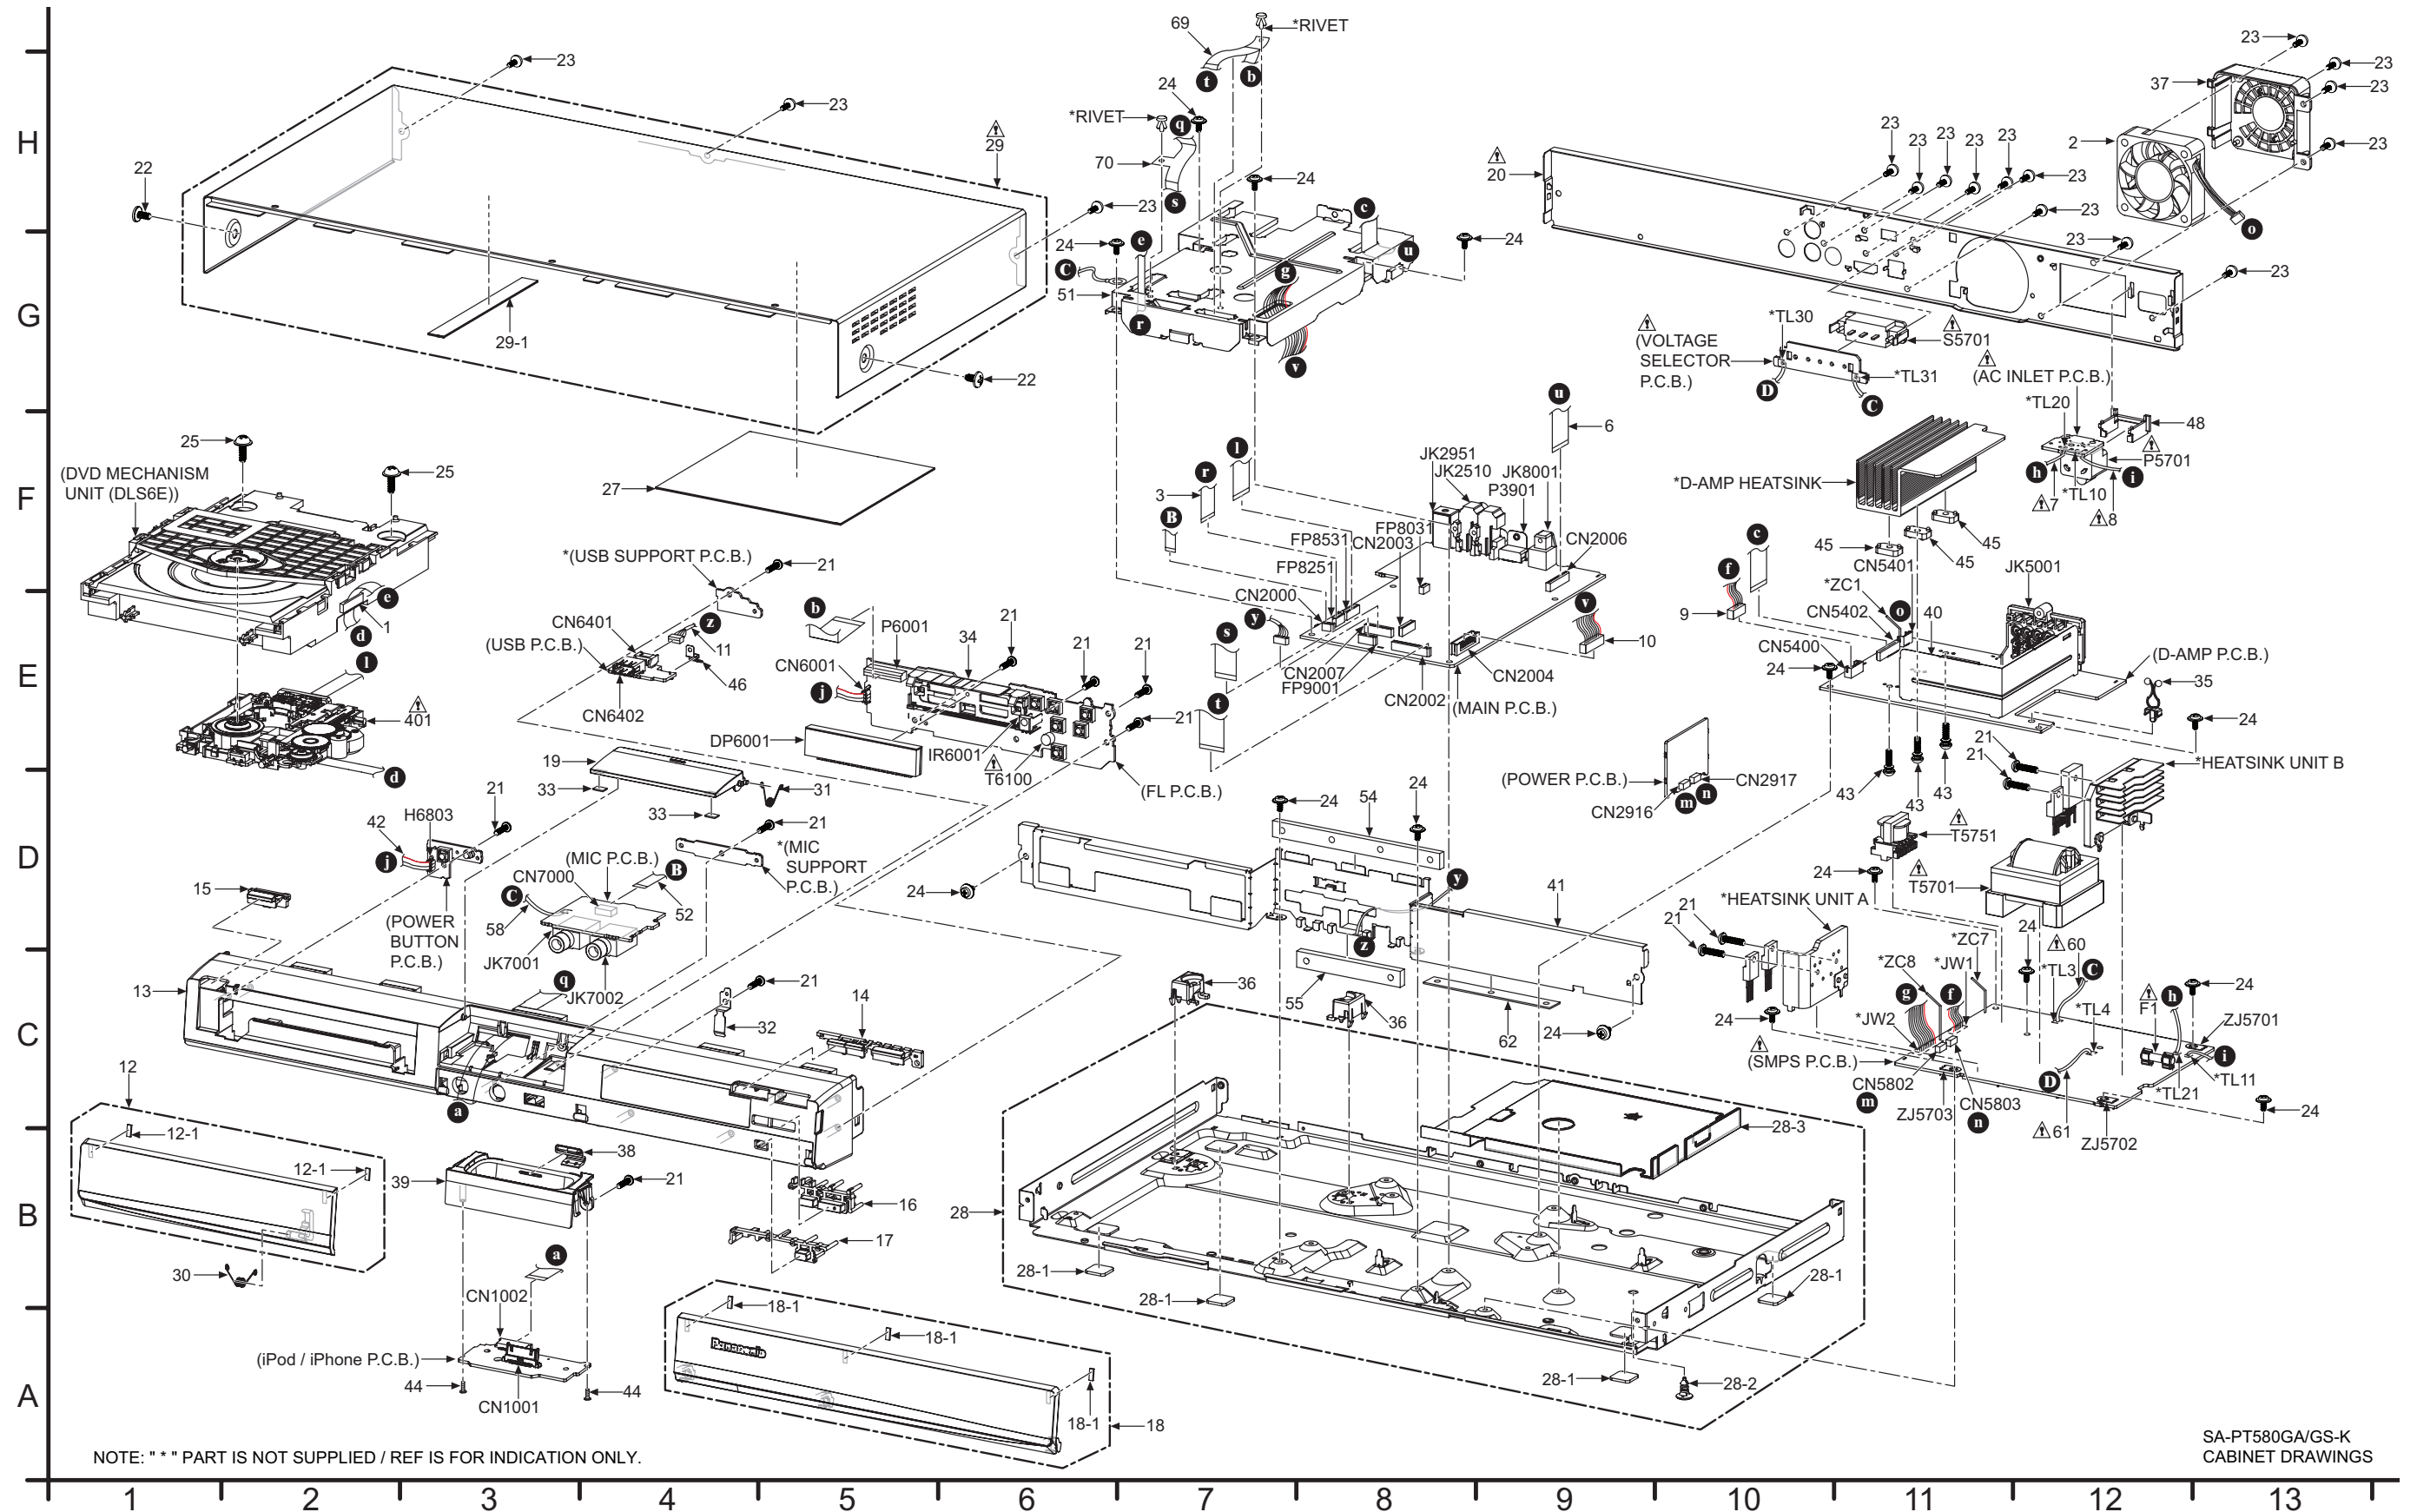20.1.1. Cabinet Parts Location



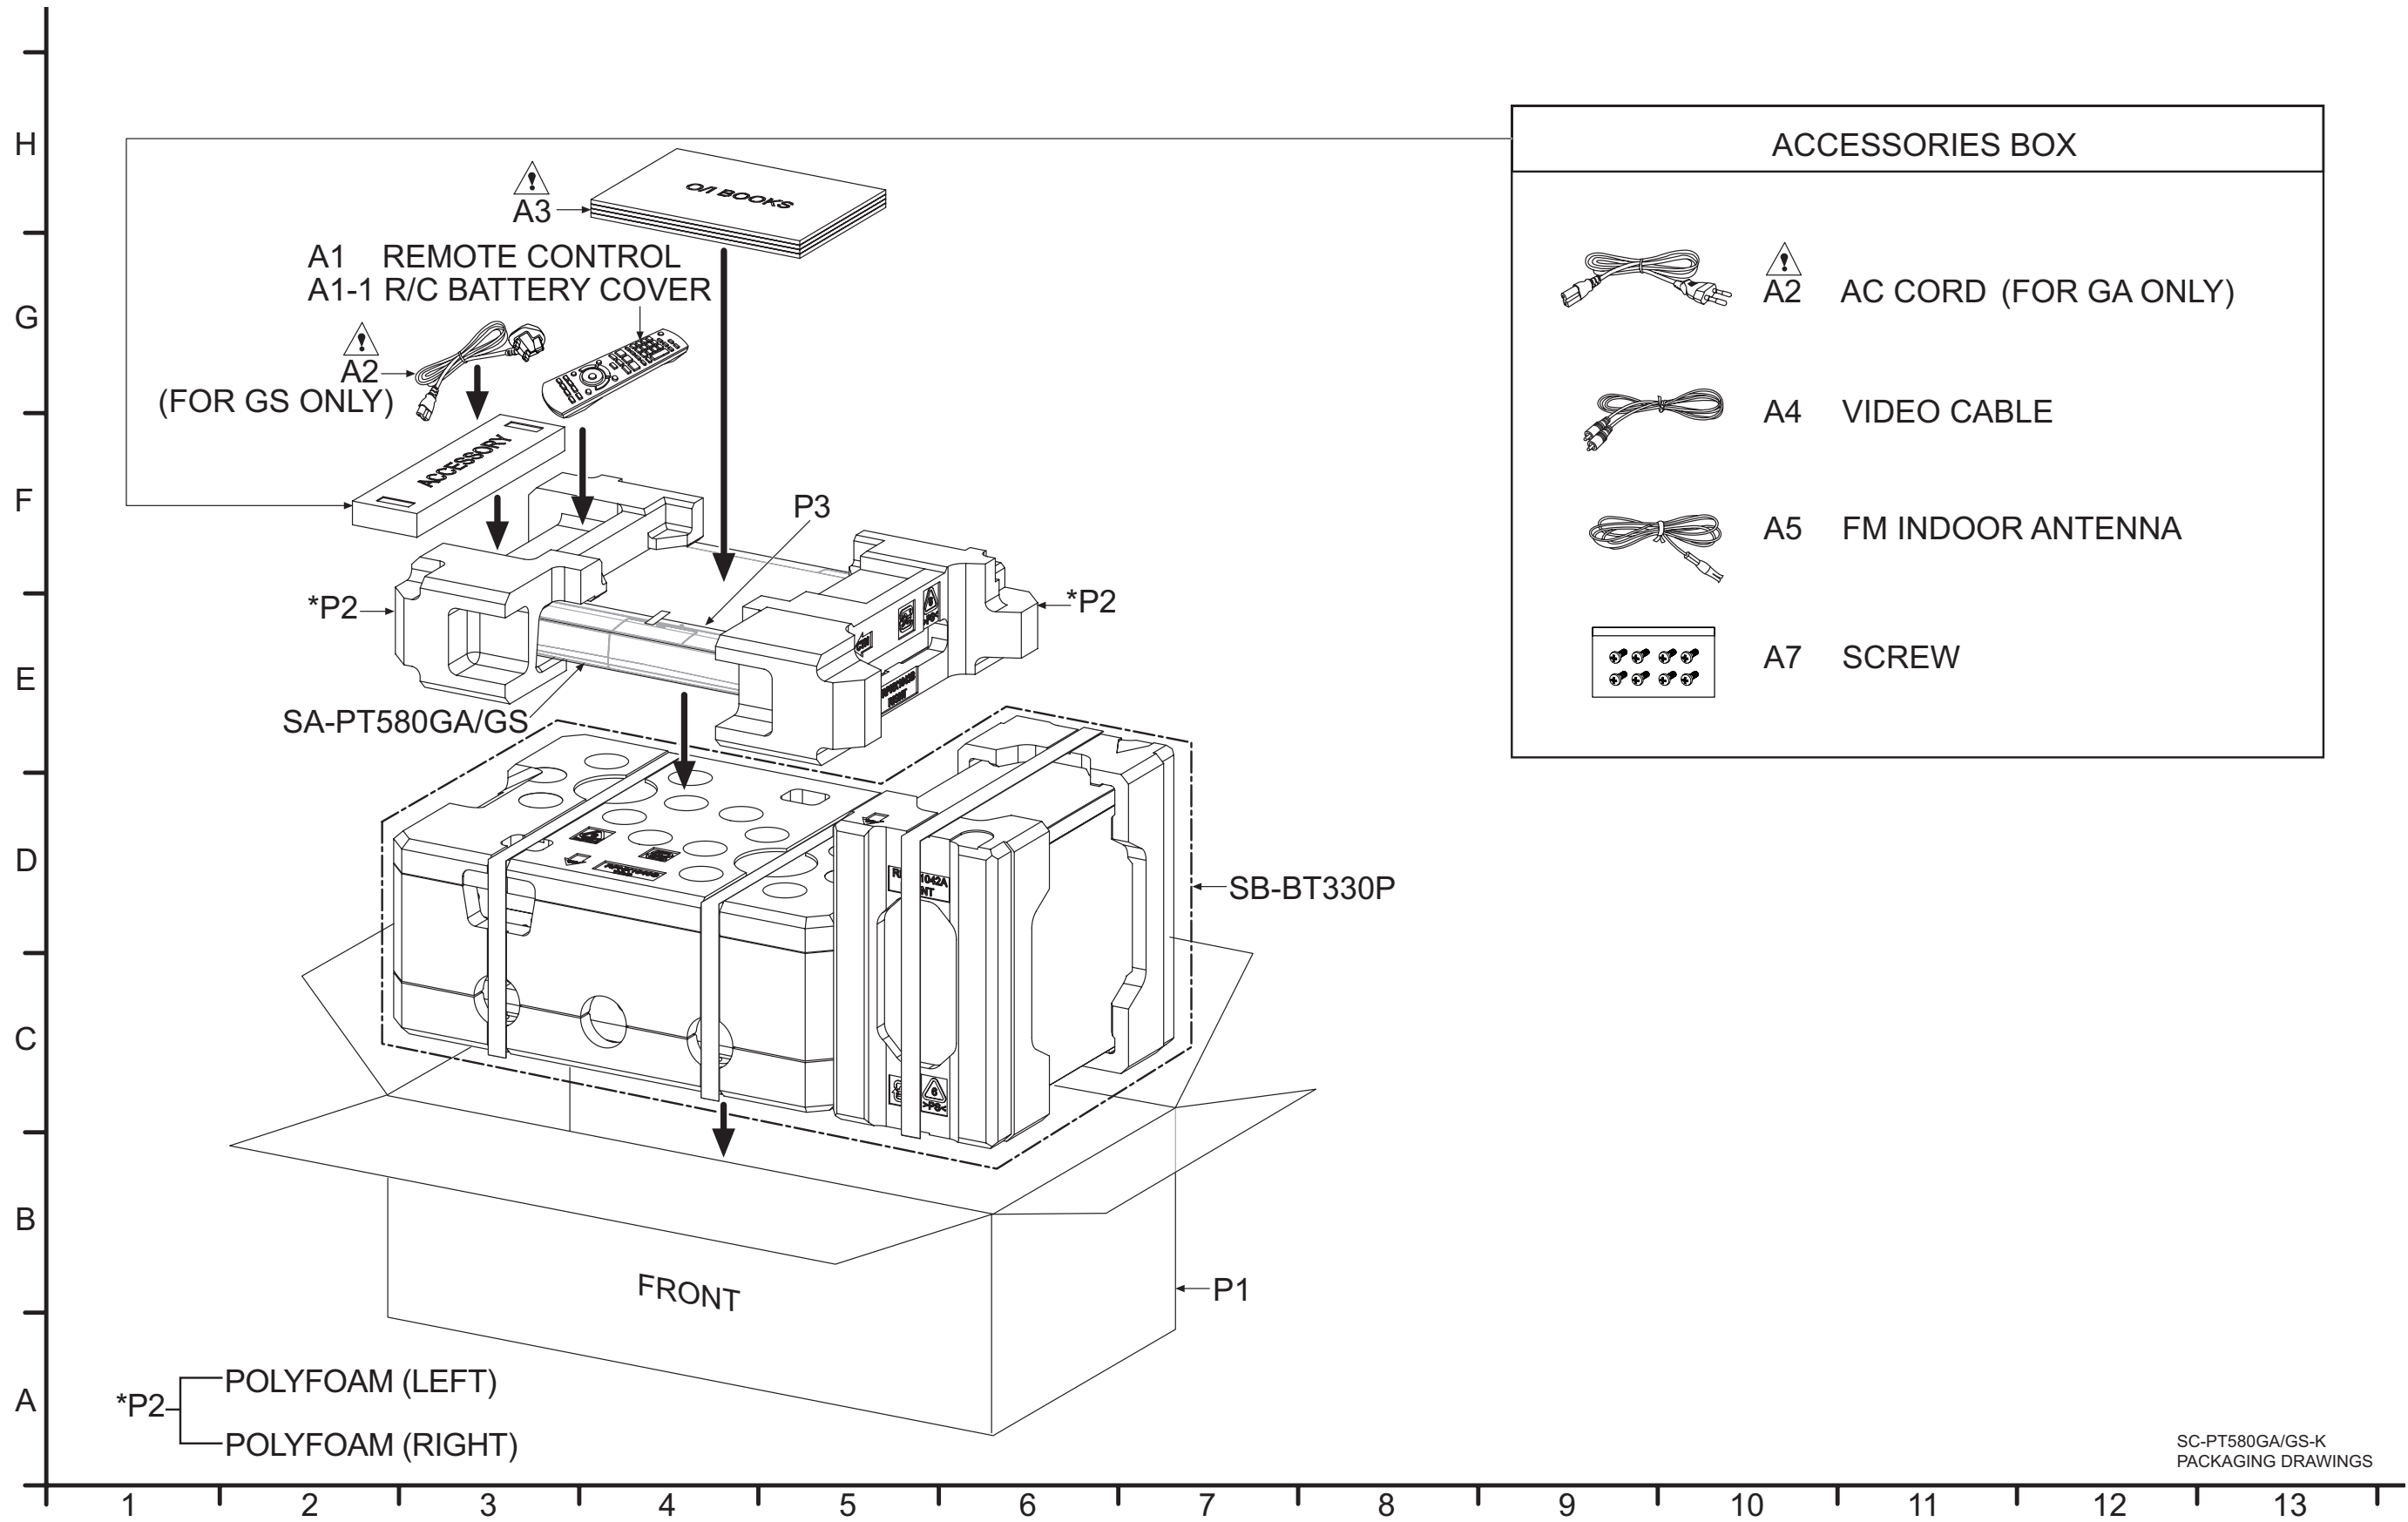20.1.2. Packaging



SC-PT580GA/GS-K
PACKAGING DRAWINGS

20.1.3. Mechanical Replacement Part List

Important Safety Notice

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

RTL (Retention Time Limited)

Note: The marking (RTL) indicates that the Retention Time is Limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

Note:

- When replacing any of these components, be sure to use only manufacturer's specified parts shown in the replacement part list.
- The parenthesized indications on the Remarks column specify the destination & product color (Refer to the cover page for the information).
- Parts without these indications shall be used for all areas.
- This product uses a laser diode. Refer to "Precaution of Laser Diode".
- All parts mentioned are supplied by PAVCSG unless indicated likewise.
- Parts mentioned [SPG] in the Remarks column are supplied by PAVC-CSG.
- Reference for O/I book languages are as follows:

Ar:	Arabic	Du:	Dutch	It:	Italian	Sp:	Spanish
Cf:	Canadian French	En:	English	Ko:	Korean	S:	Swedish
Cz:	Czech	Fr:	French	Po:	Polish	Co:	Traditional Chinese
Da:	Danish	Ge:	German	Ru:	Russian	Cn:	Simplified Chinese
Pe:	Persian	Ur:	Ukraine	Pr:	Portuguese		

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
			CABINET AND CHASSIS		
	1	J0KD00000018	FERRITE CORE	1	
	2	L6FAJCCH0007	FAN UNIT	1	
	3	REEX11113	7P FFC (MECHA-MAIN)	1	
	6	REEX11116	18P FFC (MAIN-DAMP)	1	
\triangle	7	REXX1122	1P BLACK WIRE (AC-SMPS)	1	
\triangle	8	REXX1123	1P RED WIRE (AC-SMPS)	1	
	9	REXX1096	6P CABLE WIRE (SMPS-DAMP)	1	
	10	REXX1099	10P CABLE WIRE (SMPS-MAIN)	1	
	11	REXX1119	5P WIRE (USB-MAIN)	1	
	12	RYQX1020-K	DVD LID UNIT	1	
	12-1	RMX0302	DAMPER RUBBER	2	
	13	RFKGP580EEK	FRONT PANEL ASS'Y	1	
	14	RGUX1001-K	OPEN CLOSE BUTTON	1	
	15	RGUX1003-K	POWER BUTTON	1	
	16	RGUX1005-K	PLAY STOP BUTTON	1	
	17	RGUX1006-K1	SELECTOR BUTTON	1	
	18	RYQX1021A-K	FRONT LID UNIT	1	
	18-1	RMX0302	DAMPER RUBBER	3	
	19	RGKX1003-K1	CRADLE LID	1	
\triangle	20	RGRX1001C-E	REAR PANEL	1	GS
\triangle	20	RGRX1001C-F	REAR PANEL	1	GA
	21	RHD26046	SCREW	13	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	22	RHD30007-K2J	SCREW	2	
	23	RHD30119-S	SCREW	16	
	24	RHD301003	SCREW	15	
	25	RHDV30006	SCREW	2	
	27	RXQX1026	SMPS TOP PC SHEET UNIT	1	
	28	RXQX1011-2	BOTTOM CHASSIS ASS'Y	1	
	28-1	RKAX0028-K	LEG CUSHION	4	
	28-2	RMNX1026	PCB SUPPORT	1	
	28-3	RXQX1013	SMPS BOTTOM PC SHEET UNIT	1	
\triangle	29	RKMX1002-K2	TOP CABINET	1	
	29-1	RKAX1008	MECHA RUBBER	1	
	30	RMBX1004	DVD LID SPRING	1	
	31	RMCX1002	CRADLE LID SPRING	1	
	32	RMCX1003	FRONT LID SPRING PLATE	1	
	33	RMGX1002	CRADLE LID DAMPER	2	
	34	RMNX0329	FL HOLDER	1	
	35	RMNX1025	WIRE HOLDER	1	
	36	RMQX0382-2	MECHA HOLDER	2	
	37	RMQX1006-K2	FAN COVER	1	
	38	RMVX1003-K	CRADLE KEY	1	
	39	RMVX1004A-K1	CRADLE COVER	1	
	40	RSCX1014-1	D-AMP PCB SHIELD	1	
	41	RXQX1027-1	FRONT SHIELD UNIT	1	
	42	RWJ1104320XX	4P CABLE WIRE (POWER BTN-FL)	1	
	43	RHD3261002	SCREW	3	
	44	VHD1224-1	SCREW	2	
	45	RMZX1011	HEAT SINK SPACER	3	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	46	RMCX1007	USB GROUND SPRING	1	
	48	RMN0941	AC INLET HOLDER	1	
	51	RSCX1033-2	MAIN PCB SHIELD UNIT	1	
	52	REEX1120	8P FFC (MAIN-MIC)	1	
	54	RMQX1025-J	GASKET (TOP)	1	
	55	RMQX1037-J	GASKET (BOTTOM)	1	
	58	REXX1111	1P GROUND WIRE FOR MIC	1	
△	60	REXX1120	1P WHITE WIRE (SMPS-VOLTAGE SELECTOR)	1	
△	61	REXX1121	1P BLUE WIRE (SMPS-VOLTAGE SELECTOR)	1	
	62	RMQX1052-1L	GASKET	1	
	69	RFKZPT980GAK	22P FFC (FL-MAIN)	1	
	70	RFKZPT480EBK	15P FFC (iPod MAIN)	1	
			TRVERSE DECK		
△	401	RAEX1022Z-V	TRVERSE UNIT	1	
			PACKING MATERIALS		
	P1	RPGX3122	PACKING CASE	1	GS
	P1	RPGX3123	PACKING CASE	1	GA
	P2	RPNX1043	POLYFOAM	1	
	P3	RPFX1012	MIRAMAT SHEET	1	
			ACCESSORIES		
	A1	N2QAYB000516	REMOTE CONTROL	1	
	A1-1	RKK-PT470EBK	R/C BATTERY COVER	1	
△	A2	K2CQ2CA00007	AC CORD	1	
△	A2	K2CZ3YY00005	AC CORD	1	GS
△	A3	RQTX1114-G	O/I BOOK (Ar/Pe)	1	GS
△	A3	RQTX1115-B	O/I BOOK (En)	1	
△	A3	RQTX1117-K	O/I BOOK (Ch)	1	GA
	A4	K2KA2BA00001	VIDEO CABLE	1	
	A5	RSAX0002	FM INDOOR ANTENNA	1	
	A7	XTN5+10FFJK	SCREW	8	

20.2. Electrical Replacement Part List

Important Safety Notice

Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

RTL (Retention Time Limited)

Note: The marking (RTL) indicates that the Retention Time is Limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

Note:

- When replacing any of these components, be sure to use only manufacturer's specified parts shown in the replacement part list.
- The parenthesized indications on the Remarks column specify the destination & product color (Refer to the cover page for the information).
- Parts without these indications shall be used for all areas.
- This product uses a laser diode. Refer to "Precaution of Laser Diode".
- Capacitor value are in microfarads (μ F) unless specified otherwise, P=Pico-farads (μ F), F=Farads.
- Resistance values are in ohms, unless specified otherwise, 1K=1000 (OHM).
- All parts mentioned are supplied by PAVCSG unless indicated likewise.
- Parts mentioned [SPG] in the Remarks column are supplied by PAVC-CSG.

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
			PRINTED CIRCUIT BOARDS		
	PCB1	REPX0790B	iPod/iPhone P.C.B.	1	(RTL)
	PCB2	REPX0792CA	FL P.C.B.	1	(RTL)
	PCB3	REPX0792CB	USB P.C.B.	1	(RTL)
	PCB4	REPX0792CC	MIC P.C.B.	1	(RTL)
	PCB5	REPX0792CD	POWER BUTTON P.C.B.	1	(RTL)
	PCB6	REPX0801BA	D-AMP P.C.B.	1	(RTL)
	PCB7	REPX0801BB	POWER P.C.B.	1	(RTL)
	\triangle PCB8	REPX0803B	AC INLET P.C.B.	1	(RTL)
	\triangle PCB9	REPX0803B	SMPs P.C.B.	1	(RTL)
	\triangle PCB10	REPX0803B	VOLTAGE SELECTOR P.C.B.	1	(RTL)
	PCB11	REPX0861E	MAIN P.C.B.	1	(RTL) GS
	PCB11	REPX0861F	MAIN P.C.B.	1	(RTL) GA
			INTEGRATED CIRCUITS		
	IC2001	C2HBCA000001	IC	1	
	IC2091	C0DBZYY00018	IC	1	
	IC2151	C0FBAK000026	IC	1	
	IC2300	RFKWMPT480GA	IC	1	
	IC2301	C3EBFY000006	IC	1	
	IC2302	C0CBABC00117	IC	1	
	IC2400	MFI341S2164	IC	1	
	IC2510	C9ZB00000461	IC	1	
	IC2600	C0ABBB000189	IC	1	
	IC2601	C0ABZA000080	IC	1	
	IC2602	C0DBZYY00311	IC	1	
	IC2800	C0JBAR000540	IC	1	
	IC2801	C0ABBB000179	IC	1	
	IC2802	C0ABBB000179	IC	1	
	IC2901	C0DBAYY00729	IC	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	IC2952	VUEALLPT040	IC	1	[SPG]
	IC3901	MN864702A	IC	1	
	IC3952	C0CBCDC00063	IC	1	
	IC3953	C0JBAB000986	IC	1	
	IC5100	C1AB00003260	IC	1	
	IC5200	C1AB00003260	IC	1	
	IC5301	C1AB00002461	IC	1	
	IC5400	C0DBEKG00004	IC	1	
	IC5401	C0EBE0000456	IC	1	
	IC5402	C0JBAA000501	IC	1	
	IC5404	C0JBAB000837	IC	1	
	IC5405	C0JBAA000501	IC	1	
	IC5701	C5HACYY00003	IC	1	
	IC5799	MIP2F20MSSCF	IC	1	
	IC5801	C0DABFC00002	IC	1	
	IC5899	C0DBZMC00006	IC	1	
	IC6001	C0HBB0000057	IC	1	
	IC7000	C0ABBB000189	IC	1	
	IC7100	C1AB00002773	IC	1	
	IC8001	MN2DS0018MP	IC	1	
	IC8051	C3ABPG000160	IC	1	
	IC8111	C0DBFZG00001	IC	1	
	IC8251	C0GBG0000048	IC	1	
	IC8422	C0FBAK000026	IC	1	
	IC8601	C0EBA0000039	IC	1	
	IC8606	C0EBE0000456	IC	1	
	IC8611	REPX0861E	IC	1	GS
	IC8611	REPX0861F	IC	1	GA
	IC8651	RFKWMH52B3D3	IC	1	GS
	IC8651	RFKWMH52D3D0	IC	1	GA
	IC8701	C0JBAB000907	IC	1	
	IC8901	C0JBAA000501	IC	1	
	IC9001	C0JBAZ001251	IC	1	
	IC9002	C0JBAZ001251	IC	1	
	IC9003	C0JBAB000908	IC	1	
	IC9006	C0DBZYY00311	IC	1	
			TRANSISTORS		

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	Q2302	B1ABCF000176	TRANSISTOR	1	
	Q2303	B1ADCE000012	TRANSISTOR	1	
	Q2304	B1GBCFJJ0051	TRANSISTOR	1	
	Q2305	B1ADCE000012	TRANSISTOR	1	
	Q2400	B1ADNB000003	TRANSISTOR	1	
	Q2501	B1ABMF000020	TRANSISTOR	1	
	Q2502	B1ADNB000003	TRANSISTOR	1	
	Q2503	B1ADCE000012	TRANSISTOR	1	
	Q2510	B1GBCFJN0038	TRANSISTOR	1	
	Q2600	B1GBCFJJ0051	TRANSISTOR	1	
	Q2601	B1ADCE000012	TRANSISTOR	1	
	Q2602	B1ADCE000012	TRANSISTOR	1	
	Q2603	B1CFHA000002	TRANSISTOR	1	
	Q2604	B1CFHA000002	TRANSISTOR	1	
	Q2709	B1ABCF000176	TRANSISTOR	1	
	Q2719	B1GBCFJJ0051	TRANSISTOR	1	
	Q2730	B1ABCF000176	TRANSISTOR	1	
	Q2800	B1GBCFJJ0051	TRANSISTOR	1	
	Q2805	B1GBCFJJ0051	TRANSISTOR	1	
	Q2902	B1CHPD000003	TRANSISTOR	1	
	Q2903	B1CHPD000003	TRANSISTOR	1	
	Q3901	B1ABDF000026	TRANSISTOR	1	
	Q3902	B1CFHA000002	TRANSISTOR	1	
	Q3903	B1CFHA000002	TRANSISTOR	1	
	Q3904	B1CFHA000002	TRANSISTOR	1	
	Q5400	B1BAAJ000003	TRANSISTOR	1	
	Q5401	B1ADCE000012	TRANSISTOR	1	
	Q5402	B1ABCF000011	TRANSISTOR	1	
	Q5403	B1GBCFNN0038	TRANSISTOR	1	
	Q5404	B1ABCF000011	TRANSISTOR	1	
	Q5405	B1ABCF000011	TRANSISTOR	1	
	Q5408	B1ABCF000011	TRANSISTOR	1	
	Q5409	B1ABCF000011	TRANSISTOR	1	
	Q5412	B1ABCF000011	TRANSISTOR	1	
	Q5413	B1ADBL000010	TRANSISTOR	1	
	Q5414	B1ABCF000011	TRANSISTOR	1	
	Q5720	B1BAAJ000003	TRANSISTOR	1	
	Q5863	B1ABGC000001	TRANSISTOR	1	
	Q5898	B1ABCF000176	TRANSISTOR	1	
	Q5899	B1ABCF000176	TRANSISTOR	1	
	Q6100	B1BABK000001	TRANSISTOR	1	
	Q6800	B1ABEB000002	TRANSISTOR	1	
	Q7100	B1GBCFJJ0051	TRANSISTOR	1	
	Q7101	B1GBCFJJ0051	TRANSISTOR	1	
	Q7102	B1GBCFJJ0051	TRANSISTOR	1	
	Q7103	B1ABEB000002	TRANSISTOR	1	
	Q8321	B1ADDF000012	TRANSISTOR	1	
	Q8325	B1ADDF000012	TRANSISTOR	1	
	Q8551	B1ABDF000026	TRANSISTOR	1	
	Q8552	B1ADGB000008	TRANSISTOR	1	
	Q8561	B1ABDF000026	TRANSISTOR	1	
	Q8562	B1ADGB000008	TRANSISTOR	1	
	Q8563	B1CFHA000002	TRANSISTOR	1	
	Q8564	B1CFHA000002	TRANSISTOR	1	
	Q8565	B1ABDF000026	TRANSISTOR	1	
	QR2300	B1GBCFJJ0051	TRANSISTOR	1	
	QR2400	B1GBCFJJ0051	TRANSISTOR	1	
	QR2605	B1GBCFJJ0051	TRANSISTOR	1	
	QR2606	B1GBCFJJ0051	TRANSISTOR	1	
	QR2700	B1GBCFJJ0051	TRANSISTOR	1	
	QR2701	B1GBCFJJ0051	TRANSISTOR	1	
	QR5400	B1GBCFNN0038	TRANSISTOR	1	
	QR5401	B1GBCFNN0038	TRANSISTOR	1	
	QR5862	B1GBCFGG0030	TRANSISTOR	1	
	QR8420	B1GBCFJJ0040	TRANSISTOR	1	
	QR9030	B1GDCFJJ0002	TRANSISTOR	1	
			DIODES		
	D2301	B0BC3R3A0262	DIODE	1	
	D2501	B0BC7R500001	DIODE	1	
	D2744	B0ACCK000012	DIODE	1	
	D2745	B0ACCK000012	DIODE	1	
	D2746	B0BC6R8A0266	DIODE	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	D2747	B0BC011A0264	DIODE	1	
	D2748	B0BC010A0269	DIODE	1	
	D2750	B0BC5R1A0262	DIODE	1	
	D2800	B0ACCK000005	DIODE	1	
	D2911	B0JCPG000005	DIODE	1	
	D2912	B0JCPG000005	DIODE	1	
	D3901	B0JCCE000008	DIODE	1	
	D5402	B0BC012A0269	DIODE	1	
	D5403	B0ACCK000005	DIODE	1	
	D5404	B0ACCK000005	DIODE	1	
	D5405	B0ACCK000005	DIODE	1	
	D5406	B0BC7R5A0268	DIODE	1	
	D5407	B0ACCK000005	DIODE	1	
	D5408	B0ACCK000005	DIODE	1	
	D5510	B0ACCK000005	DIODE	1	
	D5512	B0ACCK000005	DIODE	1	
	D5513	B0ACCK000005	DIODE	1	
	D5514	B0ACCK000005	DIODE	1	
	D5610	B0HCSP000001	DIODE	1	
	D5611	B0HCSP000001	DIODE	1	
	D5612	B0HCSP000001	DIODE	1	
	D5613	B0HCSP000001	DIODE	1	
	D5614	B0HCSP000001	DIODE	1	
	D5615	B0HCSP000001	DIODE	1	
	D5616	B0HCSP000001	DIODE	1	
	D5617	B0HCSP000001	DIODE	1	
	D5618	B0HCSP000001	DIODE	1	
	D5619	B0HCSP000001	DIODE	1	
	D5620	B0HCSP000001	DIODE	1	
	D5621	B0HCSP000001	DIODE	1	
	D5622	B0HCSP000001	DIODE	1	
	D5623	B0HCSP000001	DIODE	1	
	D5624	B0HCSP000001	DIODE	1	
	D5625	B0HCSP000001	DIODE	1	
	D5627	B0ACCK000005	DIODE	1	
	D5628	B0BC012A0269	DIODE	1	
	D5701	B0FBAR000043	DIODE	1	
	D5702	B0ZAZ0000052	DIODE	1	
	D5703	B0BC020A0267	DIODE	1	
	D5704	B0BC020A0267	DIODE	1	
	D5705	B0BC020A0267	DIODE	1	
	D5706	B0ACCK000005	DIODE	1	
	D5707	B0BC6R2A0266	DIODE	1	
	D5708	B0ACCK000005	DIODE	1	
	D5709	B0ACCK000005	DIODE	1	
	D5710	B0EAMM000057	DIODE	1	
	D5711	B0ECET000002	DIODE	1	
	D5712	B0EAMM000057	DIODE	1	
	D5713	B0BC030A0264	DIODE	1	
	D5714	B0BC027A0264	DIODE	1	
	D5715	B0HAMP000094	DIODE	1	
	D5716	B0EAMM000057	DIODE	1	
	D5719	B0EDKT000009	DIODE	1	
	D5802	B0HBSM000054	DIODE	1	
	D5803	B0HFRJ000012	DIODE	1	
	D5805	B0EAMM000057	DIODE	1	
	D5810	B0ACCK000005	DIODE	1	
	D5811	B0BC5R1A0266	DIODE	1	
	D5896	B0JAMF000011	DIODE	1	
	D5899	B0ACCK000005	DIODE	1	
	D6100	B0JCMD000010	DIODE	1	
	D6101	B0BC024A0267	DIODE	1	
	D6102	B0JCMD000010	DIODE	1	
	D6103	B0BC2R4A0263	DIODE	1	
	D6104	B0HAJM000005	DIODE	1	
	D6800	B3ABA0000187	DIODE	1	
	D7100	B0BC5R1A0266	DIODE	1	
	D8211	B0ACCK000012	DIODE	1	
	△ DZ5701	ERZV10V511CS	ZNR	1	
			VARISTOR		
	VA2951	EZAEG2A50AX	ESD SUPPRESSOR	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
			SWITCHES		
△	S5701	K0ABCA000007	AC VOLT ADJ	1	
	S6002	EVQ21405R	SW STOP	1	
	S6003	EVQ21405R	SW PLAY	1	
	S6005	EVQ21405R	SW VOL+	1	
	S6006	EVQ21405R	SW VOL-	1	
	S6007	EVQ21405R	SW SELECTOR	1	
	S6801	EVQ21405R	SW POWER	1	
	S6807	EVQ21405R	SW OPEN/CLOSE	1	
			CONNECTORS		
	CN1001	MFI514S0117	30P CONNECTOR	1	
	CN1002	K1MN15BA0139	15P CONNECTOR	1	
	CN2000	K1MN08A00068	8P CONNECTOR	1	
	CN2002	K1MN22AA0076	22P CONNECTOR	1	
	CN2003	K1MN10AA0076	10P CONNECTOR	1	
	CN2004	K1KA10A00430	10P CONNECTOR	1	
	CN2006	K1MN18A00061	18P CONNECTOR	1	
	CN2007	K1MN15AA0046	15P CONNECTOR	1	
	CN2916	K1KA03BA0116	3P CONNECTOR	1	
	CN2917	K1KA03BA0116	3P CONNECTOR	1	
	CN5400	K1KA06A00452	6P CONNECTOR	1	
	CN5401	K1KA03AA0301	3P CONNECTOR	1	
	CN5402	K1MN18AA0046	18P CONNECTOR	1	
	CN5802	K1KA03AA0292	3P CONNECTOR	1	
	CN5803	K1KA03AA0292	3P CONNECTOR	1	
	CN6001	K1YZ04000002	4P CABLE HOLDER	1	
	CN6401	K1KA05BA0061	5P CONNECTOR	1	
	CN6402	K1FY104B0011	USB CONNECTOR	1	
	CN7000	K1MN08B00013	8P CONNECTOR	1	
	FP8031	K1MY10AA0021	10P CONNECTOR	1	
	FP8251	K1MN07AA0076	7P CONNECTOR	1	
	FP8531	K1MN24A00062	24P CONNECTOR	1	
	FP9001	K1KA05AA0051	5P CONNECTOR	1	
	P3901	K1FY119E0014	HDMI CONNECTOR	1	
	P6001	K1MN22AA0004	22P CONNECTOR	1	
			COILS AND INDUCTORS		
	L1001	J0JFC0000006	INDUCTOR	1	
	L1002	J0JFC0000006	INDUCTOR	1	
	L1003	J0JGC0000071	INDUCTOR	1	
	L1004	J0JGC0000071	INDUCTOR	1	
	L1005	J0JGC0000071	INDUCTOR	1	
	L1006	J0JGC0000071	INDUCTOR	1	
	L1007	J0JGC0000071	INDUCTOR	1	
	L1008	J0JFC0000006	INDUCTOR	1	
	L1009	J0JFC0000006	INDUCTOR	1	
	L1010	J0JGC0000071	INDUCTOR	1	
	L1011	J0JFC0000006	INDUCTOR	1	
	L1032	J0JBC0000015	INDUCTOR	1	
	L2001	G1C4R7MA0172	INDUCTOR	1	
	L2510	G1C100K00019	INDUCTOR	1	
	L2700	J0JHC0000107	INDUCTOR	1	
	L2701	J0JHC0000107	INDUCTOR	1	
	L2703	J0JHC0000107	INDUCTOR	1	
	L2704	J0JHC0000107	INDUCTOR	1	
	L2705	J0JHC0000107	INDUCTOR	1	
	L2900	G1C100M00049	INDUCTOR	1	
	L2902	G0A200D00002	CHOKE COIL	1	
	L2903	G0A330ZA0045	CHOKE COIL	1	
	L2904	G0A330ZA0045	CHOKE COIL	1	
	L2907	J0JHC0000107	INDUCTOR	1	
	L2908	J0JHC0000107	INDUCTOR	1	
	L2951	G1CR18JA0020	INDUCTOR	1	
	L3903	G1BYYC000026	COMMON MODE EMI FILTER	1	
	L3904	G1BYYC000026	COMMON MODE EMI FILTER	1	
	L3905	G1BYYC000026	COMMON MODE EMI FILTER	1	
	L3906	G1BYYC000026	COMMON MODE EMI FILTER	1	
	L5100	G0C100M00006	INDUCTOR	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	L5101	G0C100M00006	INDUCTOR	1	
	L5103	G0B9R5K00005	LINE FILTER	1	
	L5104	G0B9R5K00005	LINE FILTER	1	
	L5105	G0B9R5K00005	LINE FILTER	1	
	L5106	G0B9R5K00005	LINE FILTER	1	
	L5200	G0C100M00006	INDUCTOR	1	
	L5201	G0C100M00006	INDUCTOR	1	
	L5203	G0B9R5K00005	LINE FILTER	1	
	L5204	G0B9R5K00005	LINE FILTER	1	
	L5300	J0JBC0000015	INDUCTOR	1	
	L5401	J0JKB0000003	INDUCTOR	1	
	L5402	J0JKB0000003	INDUCTOR	1	
	L5403	G1C4R7MA0172	INDUCTOR	1	
△	L5702	ELF22V025A	LINE FILTER	1	
△	L5703	ELF22V025A	LINE FILTER	1	
	L6006	J0JBC0000014	INDUCTOR	1	
	L6007	J0JBC0000014	INDUCTOR	1	
	L6100	J0JBC0000041	INDUCTOR	1	
	L6101	G0C390JA0055	INDUCTOR	1	
	L7001	J0JBC0000030	INDUCTOR	1	
	L7002	J0JBC0000030	INDUCTOR	1	
	L7004	J0JBC0000019	INDUCTOR	1	
	L7005	J0JBC0000019	INDUCTOR	1	
	L7006	J0JBC0000030	INDUCTOR	1	
	L7007	J0JBC0000019	INDUCTOR	1	
	L7008	J0JBC0000019	INDUCTOR	1	
	L8001	G1C100M00049	INDUCTOR	1	
	L8201	G1C100M00049	INDUCTOR	1	
	L8251	G1C100M00049	INDUCTOR	1	
	L8301	G1C100M00049	INDUCTOR	1	
	L8302	G1C100M00049	INDUCTOR	1	
	L8303	G1C100M00049	INDUCTOR	1	
	L8330	G1C100M00049	INDUCTOR	1	
	L8400	G1C100M00049	INDUCTOR	1	
	L8501	G1C100M00049	INDUCTOR	1	
	L8550	G1C100M00049	INDUCTOR	1	
	LB2031	J0JCC00000396	INDUCTOR	1	
	LB2032	J0JCC00000396	INDUCTOR	1	
	LB2033	J0JCC00000396	INDUCTOR	1	
	LB2039	J0JCC00000396	INDUCTOR	1	
	LB2068	J0JBC0000014	INDUCTOR	1	
	LB2091	J0JGC0000020	INDUCTOR	1	
	LB2092	J0JGC0000020	INDUCTOR	1	
	LB2151	J0JGC0000020	INDUCTOR	1	
	LB2152	J0JGC0000020	INDUCTOR	1	
	LB2153	J0JCC00000396	INDUCTOR	1	
	LB2300	J0JBC0000015	INDUCTOR	1	
	LB2301	J0JBC0000015	INDUCTOR	1	
	LB2302	J0JGC0000021	INDUCTOR	1	
	LB2400	J0JGC0000021	INDUCTOR	1	
	LB2616	J0JCC00000317	INDUCTOR	1	
	LB2750	J0JBC0000014	INDUCTOR	1	
	LB2751	J0JBC0000014	INDUCTOR	1	
	LB2752	J0JBC0000014	INDUCTOR	1	
	LB2753	J0JBC0000014	INDUCTOR	1	
	LB2754	J0JBC0000014	INDUCTOR	1	
	LB2755	J0JBC0000014	INDUCTOR	1	
	LB2756	J0JBC0000014	INDUCTOR	1	
	LB2757	J0JBC0000014	INDUCTOR	1	
	LB2758	J0JBC0000014	INDUCTOR	1	
	LB2759	J0JBC0000014	INDUCTOR	1	
	LB2760	J0JBC0000014	INDUCTOR	1	
	LB2761	J0JBC0000014	INDUCTOR	1	
	LB2763	J0JBC0000014	INDUCTOR	1	
	LB2764	J0JBC0000014	INDUCTOR	1	
	LB2765	J0JBC0000014	INDUCTOR	1	
	LB2766	J0JBC0000014	INDUCTOR	1	
	LB2767	J0JBC0000014	INDUCTOR	1	
	LB2768	J0JBC0000014	INDUCTOR	1	
	LB2769	J0JBC0000014	INDUCTOR	1	
	LB2770	J0JBC0000014	INDUCTOR	1	
	LB2771	J0JBC0000014	INDUCTOR	1	
	LB2772	J0JBC0000014	INDUCTOR	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	LB2773	J0JBC0000014	INDUCTOR	1	
	LB2774	J0JBC0000014	INDUCTOR	1	
	LB2777	J0JBC0000014	INDUCTOR	1	
	LB2800	J0JCC00000317	INDUCTOR	1	
	LB2801	J0JCC00000317	INDUCTOR	1	
	LB2802	J0JCC00000317	INDUCTOR	1	
	LB2803	J0JCC00000317	INDUCTOR	1	
	LB2805	J0JCC00000317	INDUCTOR	1	
	LB2806	J0JCC00000317	INDUCTOR	1	
	LB2808	J0JCC00000317	INDUCTOR	1	
	LB2809	J0JCC00000317	INDUCTOR	1	
	LB2951	J0JBC0000032	INDUCTOR	1	
	LB3901	J0JHC0000045	INDUCTOR	1	
	LB3902	J0JHC0000045	INDUCTOR	1	
	LB3903	J0JCC0000042	INDUCTOR	1	
	LB3904	J0JCC0000042	INDUCTOR	1	
	LB3905	J0JCC0000042	INDUCTOR	1	
	LB3906	J0JCC0000042	INDUCTOR	1	
	LB3907	J0JHC0000045	INDUCTOR	1	
	LB3908	J0JHC0000045	INDUCTOR	1	
	LB3909	J0JHC0000045	INDUCTOR	1	
	LB6401	J0JHC0000034	INDUCTOR	1	
	LB8001	J0JHC0000045	INDUCTOR	1	
	LB8011	J0JHC0000045	INDUCTOR	1	
	LB8401	J0JCC0000396	INDUCTOR	1	
	LB8423	J0JCC00000317	INDUCTOR	1	
	LB8430	J0JCC00000317	INDUCTOR	1	
	LB8434	J0JCC00000317	INDUCTOR	1	
	LB8530	J0JHC0000045	INDUCTOR	1	
	LB8532	J0JDC0000045	INDUCTOR	1	
	LB8551	J0JDC0000045	INDUCTOR	1	
	LB8561	J0JDC0000045	INDUCTOR	1	
	LB8701	J0JCC0000308	INDUCTOR	1	
	LB8702	J0JCC0000308	INDUCTOR	1	
	LB8901	J0JCC0000308	INDUCTOR	1	
	LB8902	J0JCC0000317	INDUCTOR	1	
	LB9001	J0JCC0000042	INDUCTOR	1	
	LB9004	J0JCC0000308	INDUCTOR	1	
			TRANSFORMERS		
△	T5701	ETS42BM1H6AC	TRANSFORMER	1	
△	T5751	ETS19AB2A6AG	SUB TRANSFORMER	1	
△	T6100	G4D1A0000142	SWITCHING TRANSFORMER	1	
			PHOTO COUPLERS		
△	PC5702	B3PBA0000402	PHOTO COUPLER	1	
△	PC5720	B3PBA0000402	PHOTO COUPLER	1	
△	PC5799	B3PBA0000402	PHOTO COUPLER	1	
			TERMINALS		
	ZJ5701	K4CZ01000027	TERMINAL	1	
	ZJ5702	K4CZ01000027	TERMINAL	1	
	ZJ5703	K4CZ01000027	TERMINAL	1	
			OSCILLATORS		
	X2300	H2D500400006	CRYSTAL OSCILLATOR	1	
	X2301	H0J327200115	CRYSTAL OSCILLATOR	1	
	X2951	H0A327200097	CRYSTAL OSCILLATOR	1	
	X8621	H0J270500131	CRYSTAL OSCILLATOR	1	
	X9004	H1A4805B0038	CRYSTAL OSCILLATOR	1	
			RELAY		
△	RY701	K6B1AEA00003	RELAY	1	
			FUSE		
△	F1	K5D802BNA005	FUSE	1	
			FL DISPLAY		

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	DP6001	A2BB00000175	LCD DISPLAY	1	
			COMPONENT COMBINATION		
	IR6001	B3RAB0000081	REMOTE CONTROL SENSOR	1	
			HOLDER		
	H6803	K1YZ04000002	4P CABLE HOLDER	1	
			FUSE HOLDERS		
	ZA5701	K3GE1ZZ00001	FUSE HOLDER	1	
	ZA5702	K3GE1ZZ00001	FUSE HOLDER	1	
			THERMISTOR		
△	TH5702	D4CAA5R10001	THERMISTOR	1	
			JACKS		
	JK2510	K2HA3YYB0016	JK AUX	1	
	JK2951	K4ZZ01000276	JK FM ANT	1	
	JK5001	K4AZ12A00007	JK SPEAKER	1	
	JK7001	K2HC1YYA0022	JK MIC1	1	
	JK7002	K2HC1YYA0022	JK MIC2	1	
	JK8001	B3RAB0000056	JK OPTICAL IN	1	
△	P5701	K2AA2B000011	AC INLET	1	
			CHIP JUMPERS		
	K2700	D0GBR00JA008	0 1/16W	1	
	K2701	D0GBR00JA008	0 1/16W	1	
	K2702	D0GBR00JA008	0 1/16W	1	
	K2703	D0GBR00JA008	0 1/16W	1	
	K2704	D0GBR00JA008	0 1/16W	1	
	K2705	D0GBR00JA008	0 1/16W	1	
	K2710	D0GBR00JA008	0 1/16W	1	
	K2711	D0GBR00JA008	0 1/16W	1	
	K2712	D0GBR00JA008	0 1/16W	1	
	K3903	D0GBR00JA008	0 1/16W	1	
	K3905	ERJ2GE0R00X	0 1/16W	1	
	K3906	D0GBR00JA008	0 1/16W	1	
	K3908	D0GBR00JA008	0 1/16W	1	
	K5102	D0GBR00JA008	0 1/16W	1	
	K5103	D0GBR00JA008	0 1/16W	1	
	K5105	D0GBR00JA008	0 1/16W	1	
	K5106	D0GBR00JA008	0 1/16W	1	
	K5404	D0GBR00JA008	0 1/16W	1	
	K5723	D0GBR00JA008	0 1/16W	1	
	K5725	D0GBR00JA008	0 1/16W	1	
	K7000	D0GBR00JA008	0 1/16W	1	
	K8006	D0GBR00JA008	0 1/16W	1	GS
	K8007	D0GBR00JA008	0 1/16W	1	GA
	K8014	D0GBR00JA008	0 1/16W	1	
	K8100	D0GBR00JA008	0 1/16W	1	
	K8114	D0GBR00JA008	0 1/16W	1	
	K8115	D0GBR00JA008	0 1/16W	1	
	K8116	D0GBR00JA008	0 1/16W	1	
	K8117	D0GBR00JA008	0 1/16W	1	
	K8251	D0GBR00JA008	0 1/16W	1	
	K8252	D0GBR00JA008	0 1/16W	1	
	K8533	D0GBR00JA008	0 1/16W	1	
	L1021	D0GBR00JA008	0 1/16W	1	
	L1022	D0GBR00JA008	0 1/16W	1	
	L1023	D0GBR00JA008	0 1/16W	1	
	L1024	D0GBR00JA008	0 1/16W	1	
	L1025	D0GBR00JA008	0 1/16W	1	
	L1026	D0GBR00JA008	0 1/16W	1	
	L1027	D0GBR00JA008	0 1/16W	1	
	L1028	D0GBR00JA008	0 1/16W	1	
	L1029	D0GBR00JA008	0 1/16W	1	
	L1030	D0GBR00JA008	0 1/16W	1	
	L1031	D0GBR00JA008	0 1/16W	1	
	L1033	D0GBR00JA008	0 1/16W	1	
	L6005	D0GBR00JA008	0 1/16W	1	
	L6803	D0GBR00JA008	0 1/16W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	L6804	D0GBR00JA008	0 1/16W	1	
	L6805	D0GBR00JA008	0 1/16W	1	
	L6806	D0GBR00JA008	0 1/16W	1	
	L8250	D0GBR00JA008	0 1/16W	1	
	LB2000	D0GBR00JA008	0 1/16W	1	
	LB2001	D0GBR00JA008	0 1/16W	1	
	LB2002	D0GBR00JA008	0 1/16W	1	
	LB2003	D0GBR00JA008	0 1/16W	1	
	LB2004	D0GBR00JA008	0 1/16W	1	
	LB2067	D0GBR00JA008	0 1/16W	1	
	LB2303	D0GBR00JA008	0 1/16W	1	
	LB2600	D0GBR00JA008	0 1/16W	1	
	LB2601	D0GBR00JA008	0 1/16W	1	
	LB2602	D0GBR00JA008	0 1/16W	1	
	LB2603	D0GBR00JA008	0 1/16W	1	
	LB2604	D0GBR00JA008	0 1/16W	1	
	LB2605	D0GBR00JA008	0 1/16W	1	
	LB2606	D0GBR00JA008	0 1/16W	1	
	LB2775	D0GBR00JA008	0 1/16W	1	
	LB2776	D0GBR00JA008	0 1/16W	1	
	LB6402	D0GDR00JA017	0 1/10W	1	
	LB8255	ERJ2GE0R00X	0 1/16W	1	
	LB8315	ERJ2GE0R00X	0 1/16W	1	
	LB8316	ERJ2GE0R00X	0 1/16W	1	
	LB8317	ERJ2GE0R00X	0 1/16W	1	
	LB8424	ERJ2GE0R00X	0 1/16W	1	
	LB8425	ERJ2GE0R00X	0 1/16W	1	
	LB8432	ERJ2GE0R00X	0 1/16W	1	
	LB8531	ERJ2GE0R00X	0 1/16W	1	
	LB9002	D0GBR00JA008	0 1/16W	1	
	LB9003	D0GBR00JA008	0 1/16W	1	
	W201	D0GFR00JA017	0 1/8W	1	
	W202	D0GFR00JA017	0 1/8W	1	
	W203	D0GDR00JA017	0 1/10W	1	
	W6051	D0GDR00JA017	0 1/10W	1	
	W6052	D0GDR00JA017	0 1/10W	1	
	W6054	D0GDR00JA017	0 1/10W	1	
	W6056	D0GDR00JA017	0 1/10W	1	
	W6057	D0GBR00JA008	0 1/16W	1	
	W6058	D0GDR00JA017	0 1/10W	1	
	W6059	D0GBR00JA008	0 1/16W	1	
	W6060	D0GDR00JA017	0 1/10W	1	
	W6061	D0GBR00JA008	0 1/16W	1	
	W6062	D0GBR00JA008	0 1/16W	1	
	W6063	D0GDR00JA017	0 1/10W	1	
	W6064	D0GDR00JA017	0 1/10W	1	
	W6065	D0GDR00JA017	0 1/10W	1	
	W6066	D0GDR00JA017	0 1/10W	1	
	W6077	D0GDR00JA017	0 1/10W	1	
	W6078	D0GDR00JA017	0 1/10W	1	
	W6079	D0GBR00JA008	0 1/16W	1	
	W6080	D0GDR00JA017	0 1/10W	1	
	W6081	D0GBR00JA008	0 1/16W	1	
	W6150	D0GBR00JA008	0 1/16W	1	
	W6151	D0GBR00JA008	0 1/16W	1	
	W6152	D0GDR00JA017	0 1/10W	1	
	W6153	D0GBR00JA008	0 1/16W	1	
	W6154	D0GBR00JA008	0 1/16W	1	
	W6155	D0GDR00JA017	0 1/10W	1	
			RESISTORS		
	LB2614	D0GA471JA023	470 1/16W	1	
	LB2615	D0GA471JA023	470 1/16W	1	
	LB8691	D0GA101JA023	100 1/16W	1	
	LB8692	D0GA101JA023	100 1/16W	1	
	LB8693	D0GA101JA023	100 1/16W	1	
	R1001	D0GA221JA023	220 1/16W	1	
	R1002	D0GA221JA023	220 1/16W	1	
	R1003	D0GA104JA023	100K 1/16W	1	
	R1004	D0GA104JA023	100K 1/16W	1	
	R1005	D0GA753Z0001	75K 1/16W	1	
	R1006	D0GA753Z0001	75K 1/16W	1	
	R1007	D0GA513Z0002	51K 1/16W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R1008	D0GA513Z0002	51K 1/16W	1	
	R1009	ERJ2GEJ151X	150 1/16W	1	
	R1010	ERJ2GEJ151X	150 1/16W	1	
	R1011	J0JFC0000006	INDUCTOR	1	
	R1012	D0GBR00JA008	0 1/16W	1	
	R1013	D0GA102JA023	1K 1/16W	1	
	R1014	ERJ2GE0R00X	0 1/16W	1	
	R1015	D0GBR00JA008	0 1/16W	1	
	R2000	D0GBR00JA008	0 1/16W	1	
	R2001	D0GB221JA007	220 1/10W	1	
	R2031	D0GB330JA008	33 1/16W	1	
	R2032	D0GB330JA008	33 1/16W	1	
	R2033	D0GB330JA008	33 1/16W	1	
	R2034	D0GB330JA008	33 1/16W	1	
	R2035	D0GB330JA008	33 1/16W	1	
	R2037	D0GB330JA008	33 1/16W	1	
	R2038	D0GB470JA008	47 1/16W	1	
	R2039	D0GB470JA008	47 1/16W	1	
	R2040	D0GB470JA008	47 1/16W	1	
	R2041	D0GB221JA007	220 1/10W	1	
	R2042	D0GB221JA007	220 1/10W	1	
	R2043	D0GB221JA007	220 1/10W	1	
	R2044	D0GB221JA007	220 1/10W	1	
	R2045	D0GB470JA008	47 1/16W	1	
	R2051	D0GBR00JA008	0 1/16W	1	
	R2053	D0GB152JA008	1.5K 1/16W	1	
	R2055	D0GB470JA008	47 1/16W	1	
	R2056	D0GB470JA008	47 1/16W	1	
	R2057	D0GB470JA008	47 1/16W	1	
	R2058	D0GB470JA008	47 1/16W	1	
	R2059	D0GB470JA008	47 1/16W	1	
	R2060	D0GB470JA008	47 1/16W	1	
	R2081	D0GB470JA008	47 1/16W	1	
	R2082	D0GB470JA008	47 1/16W	1	
	R2083	D0GB470JA008	47 1/16W	1	
	R2084	D0GB470JA008	47 1/16W	1	
	R2085	D0GB470JA008	47 1/16W	1	
	R2086	D0GB470JA008	47 1/16W	1	
	R2091	D0GB103JA008	10K 1/16W	1	
	R2093	D0GB221JA007	220 1/10W	1	
	R2094	D0GB221JA007	220 1/10W	1	
	R2098	D0GB103JA008	10K 1/16W	1	
	R2100	D0GBR00JA008	0 1/16W	1	
	R2151	D0GB100JA008	10 1/16W	1	
	R2152	D0GB470JA008	47 1/16W	1	
	R2153	D0GB330JA008	33 1/16W	1	
	R2154	D0GB330JA008	33 1/16W	1	
	R2155	D0GB330JA008	33 1/16W	1	
	R2156	D0GB221JA007	220 1/10W	1	
	R2157	D0GD100JA017	10 1/10W	1	
	R2158	D0GD100JA017	10 1/10W	1	
	R2181	D0GB221JA007	220 1/10W	1	
	R2182	D0GB221JA007	220 1/10W	1	
	R2183	D0GB221JA007	220 1/10W	1	
	R2184	D0GB221JA007	220 1/10W	1	
	R2231	D0GDR00JA017	0 1/10W	1	
	R2300	D0GB223JA008	22K 1/16W	1	
	R2304	D0GB221JA007	220 1/10W	1	
	R2305	D0GB221JA007	220 1/10W	1	
	R2306	D0GB103JA008	10K 1/16W	1	
	R2307	D0GB103JA008	10K 1/16W	1	
	R2308	D0GB103JA008	10K 1/16W	1	
	R2309	D0GB103JA008	10K 1/16W	1	
	R2310	D0GB103JA008	10K 1/16W	1	
	R2311	D0GB103JA008	10K 1/16W	1	
	R2312	D0GB101JA008	100 1/16W	1	
	R2313	D0GB101JA008	100 1/16W	1	
	R2314	D0GB101JA008	100 1/16W	1	
	R2315	D0GB154JA008	150K 1/16W	1	
	R2316	D0GB153JA008	15K 1/16W	1	
	R2317	D0GB122JA008	1.2K 1/16W	1	GS
	R2317	D0GB332JA008	3.3K 1/16W	1	GA
	R2318	D0GB223JA008	22K 1/16W	1	GA

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R2318	D0GB393JA008	39K 1/16W	1	GS
	R2319	D0GB153JA008	15K 1/16W	1	
	R2320	D0GBR00JA008	0 1/16W	1	
	R2321	D0GBR00JA008	0 1/16W	1	
	R2322	D0GB104JA008	100K 1/16W	1	
	R2323	D0GB563JA008	56K 1/16W	1	
	R2324	D0GB221JA007	220 1/10W	1	
	R2325	D0GB103JA008	10K 1/16W	1	
	R2326	D0GB103JA008	10K 1/16W	1	
	R2327	D0GB563JA008	56K 1/16W	1	
	R2328	D0GB103JA008	10K 1/16W	1	
	R2330	D0GB103JA008	10K 1/16W	1	
	R2331	D0GB103JA008	10K 1/16W	1	
	R2332	D0GB473JA008	47K 1/16W	1	
	R2333	D0GB473JA008	47K 1/16W	1	
	R2334	D0GB102JA008	1K 1/16W	1	
	R2335	D0GB473JA008	47K 1/16W	1	
	R2336	D0GB221JA007	220 1/10W	1	
	R2337	D0GB221JA007	220 1/10W	1	
	R2338	D0GB101JA008	100 1/16W	1	
	R2339	D0GBR00JA008	0 1/16W	1	
	R2340	D0GBR00JA008	0 1/16W	1	
	R2341	D0GB473JA008	47K 1/16W	1	
	R2342	D0GB473JA008	47K 1/16W	1	
	R2343	D0GB221JA007	220 1/10W	1	
	R2344	D0GB221JA007	220 1/10W	1	
	R2345	D0GB473JA008	47K 1/16W	1	
	R2346	D0GB101JA008	100 1/16W	1	
	R2347	D0GB103JA008	10K 1/16W	1	
	R2348	D0GB103JA008	10K 1/16W	1	
	R2349	D0GB221JA007	220 1/10W	1	
	R2350	D0GB221JA007	220 1/10W	1	
	R2351	D0GB101JA008	100 1/16W	1	
	R2352	D0GB103JA008	10K 1/16W	1	
	R2353	D0GB221JA007	220 1/10W	1	
	R2354	D0GB101JA008	100 1/16W	1	
	R2355	D0GB101JA008	100 1/16W	1	
	R2356	D0GB273JA008	27K 1/16W	1	
	R2357	D0GB221JA007	220 1/10W	1	
	R2358	D0GA104JA023	100K 1/16W	1	
	R2359	D0GB103JA008	10K 1/16W	1	
	R2362	D0GB103JA008	10K 1/16W	1	
	R2363	D0GB222JA008	2.2K 1/16W	1	
	R2364	D0GB222JA008	2.2K 1/16W	1	
	R2365	D0GB203JA008	20K 1/16W	1	
	R2366	D0GB472JA008	4.7K 1/16W	1	
	R2367	D0GB221JA007	220 1/10W	1	
	R2368	D0GB472JA008	4.7K 1/16W	1	
	R2369	D0GB472JA008	4.7K 1/16W	1	
	R2371	D0GB223JA008	22K 1/16W	1	
	R2372	D0GB472JA008	4.7K 1/16W	1	
	R2373	D0GB221JA007	220 1/10W	1	
	R2374	D0GB473JA008	47K 1/16W	1	
	R2375	D0GB221JA007	220 1/10W	1	
	R2376	D0GB221JA007	220 1/10W	1	
	R2377	D0GB221JA007	220 1/10W	1	
	R2378	D0GB101JA008	100 1/16W	1	
	R2379	D0GB221JA007	220 1/10W	1	
	R2380	D0GB101JA008	100 1/16W	1	
	R2381	D0GB101JA008	100 1/16W	1	
	R2382	D0GB101JA008	100 1/16W	1	
	R2383	D0GB101JA008	100 1/16W	1	
	R2384	D0GB101JA008	100 1/16W	1	
	R2385	D0GB101JA008	100 1/16W	1	
	R2386	D0GB103JA008	10K 1/16W	1	
	R2387	D0GB103JA008	10K 1/16W	1	
	R2388	D0GB101JA008	100 1/16W	1	
	R2389	D0GB101JA008	100 1/16W	1	
	R2390	D0GB101JA008	100 1/16W	1	
	R2391	D0GB101JA008	100 1/16W	1	
	R2392	D0GB101JA008	100 1/16W	1	
	R2393	D0GB101JA008	100 1/16W	1	
	R2394	D0GB101JA008	100 1/16W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R2395	D0GB101JA008	100 1/16W	1	
	R2396	D0GB101JA008	100 1/16W	1	
	R2397	D0GB101JA008	100 1/16W	1	
	R2398	D0GB101JA008	100 1/16W	1	
	R2399	ERJ3GEYJ3R3V	3.3 1/10W	1	
	R2400	D0GB330JA008	33 1/16W	1	
	R2401	D0GB221JA007	220 1/10W	1	
	R2402	D0GB221JA007	220 1/10W	1	
	R2403	D0GA103JA023	10K 1/16W	1	
	R2404	D0GA332JA023	3.3K 1/16W	1	
	R2500	ERJ2GE0R00X	0 1/16W	1	
	R2501	D0GBR00JA008	0 1/16W	1	
	R2502	D0GB392JA008	3.9K 1/16W	1	
	R2503	D0GB471JA008	470 1/16W	1	
	R2504	D0GB272JA008	2.7K 1/16W	1	
	R2505	D0GB272JA008	2.7K 1/16W	1	
	R2506	D0GBR00JA008	0 1/16W	1	
	R2507	D0GB472JA008	4.7K 1/16W	1	
	R2510	D0GB102JA008	1K 1/16W	1	
	R2511	ERJ2GE0R00X	0 1/16W	1	
	R2512	ERJ2GE0R00X	0 1/16W	1	
	R2514	ERJ2GE0R00X	0 1/16W	1	
	R2516	ERJ2GE0R00X	0 1/16W	1	
	R2600	D0GB473JA008	47K 1/16W	1	
	R2602	D0GA223JA023	22K 1/16W	1	
	R2603	D0GA103JA023	10K 1/16W	1	
	R2604	D0GA223JA023	22K 1/16W	1	
	R2605	D0GA223JA023	22K 1/16W	1	
	R2607	D0GA221JA023	220 1/16W	1	
	R2608	D0GA223JA023	22K 1/16W	1	
	R2609	D0GA223JA023	22K 1/16W	1	
	R2610	D0GA223JA023	22K 1/16W	1	
	R2611	D0GB750JA008	75 1/16W	1	
	R2612	D0GB101JA008	100 1/16W	1	
	R2613	D0GB101JA008	100 1/16W	1	
	R2615	ERJ3GEYF334V	330K 1/10W	1	
	R2616	ERJ3GEYF224V	220K 1/10W	1	
	R2618	D0GB102JA008	1K 1/16W	1	
	R2620	D0GB101JA008	100 1/16W	1	
	R2621	D0GB101JA008	100 1/16W	1	
	R2622	D0GB104JA008	100K 1/16W	1	
	R2623	D0GB472JA008	4.7K 1/16W	1	
	R2624	D0GB473JA008	47K 1/16W	1	
	R2625	D0GB473JA008	47K 1/16W	1	
	R2626	D0GB472JA008	4.7K 1/16W	1	
	R2627	D0GB104JA008	100K 1/16W	1	
	R2630	D0GB102JA008	1K 1/16W	1	
	R2631	D0GB102JA008	1K 1/16W	1	
	R2632	D0GA104JA023	100K 1/16W	1	
	R2633	D0GA104JA023	100K 1/16W	1	
	R2700	D0GB104JA008	100K 1/16W	1	
	R2701	D0GB221JA007	220 1/10W	1	
	R2702	D0GA103JA023	10K 1/16W	1	
	R2703	D0GA103JA023	10K 1/16W	1	
	R2709	D0GB393JA008	39K 1/16W	1	
	R2737	D0GB393JA008	39K 1/16W	1	
	R2738	D0GB333JA008	33K 1/16W	1	
	R2741	D0GB103JA008	10K 1/16W	1	
	R2806	D0GA102JA023	1K 1/16W	1	
	R2807	D0GA102JA023	1K 1/16W	1	
	R2810	D0GA102JA023	1K 1/16W	1	
	R2811	D0GA102JA023	1K 1/16W	1	
	R2812	D0GA473JA023	47K 1/16W	1	
	R2813	D0GA473JA023	47K 1/16W	1	
	R2814	D0GA102JA023	1K 1/16W	1	
	R2815	D0GA103JA023	10K 1/16W	1	
	R2816	D0GA103JA023	10K 1/16W	1	
	R2817	D0GA102JA023	1K 1/16W	1	
	R2818	D0GB103JA008	10K 1/16W	1	
	R2819	D0GB103JA008	10K 1/16W	1	
	R2820	D0GB103JA008	10K 1/16W	1	
	R2821	D0GB103JA008	10K 1/16W	1	
	R2822	D0GB221JA007	220 1/10W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R2823	D0GB221JA007	220 1/10W	1	
	R2824	D0GB473JA008	47K 1/16W	1	
	R2825	D0GB473JA008	47K 1/16W	1	
	R2826	ERJ2GEJ750X	75 1/16W	1	
	R2827	D0GA104JA023	100K 1/16W	1	
	R2828	D0GA104JA023	100K 1/16W	1	
	R2829	D0GA104JA023	100K 1/16W	1	
	R2830	D0GA104JA023	100K 1/16W	1	
	R2831	D0GA104JA023	100K 1/16W	1	
	R2832	D0GA103JA023	10K 1/16W	1	
	R2833	D0GA103JA023	10K 1/16W	1	
	R2834	D0GA104JA023	100K 1/16W	1	
	R2835	D0GA103JA023	10K 1/16W	1	
	R2836	D0GA101JA023	100 1/16W	1	
	R2837	D0GA103JA023	10K 1/16W	1	
	R2838	D0GA102JA023	1K 1/16W	1	
	R2839	D0GA104JA023	100K 1/16W	1	
	R2840	D0GA103JA023	10K 1/16W	1	
	R2841	D0GA682JA023	6.8K 1/16W	1	
	R2908	ERJ3RBD1002V	10K 1/16W	1	
	R2914	D0GB223JA008	22K 1/16W	1	
	R2915	D0GBR00JA008	0 1/16W	1	
	R2916	D0GB223JA008	22K 1/16W	1	
	R2917	D0GB332JA008	3.3K 1/16W	1	
	R2918	D0GB332JA008	3.3K 1/16W	1	
	R2919	D1BDR1000003	0.1 1/4W	1	
	R2920	D0GB822JA008	8.2K 1/16W	1	
	R2921	ERJ3RBD3902V	39K 1/16W	1	
	R2922	D1BDR1000003	0.1 1/4W	1	
	R2923	D0GB222JA008	2.2K 1/16W	1	
	R2924	ERJ3RBD5601V	5.6K 1/16W	1	
	R2925	ERJ3RBD3902V	39K 1/16W	1	
	R2926	D0GB822JA008	8.2K 1/16W	1	
	R2927	D0GB103JA008	10K 1/16W	1	
	R2929	ERJ3RBD3301V	3.3K 1/16W	1	
	R2930	ERJ3RBD5601V	5.6K 1/16W	1	
	R2951	D0GB102JA008	1K 1/16W	1	
	R2952	D0GB102JA008	1K 1/16W	1	
	R2953	D0GA472JA023	4.7K 1/16W	1	
	R2954	D0GA472JA023	4.7K 1/16W	1	
	R2955	D0GA221JA023	220 1/16W	1	
	R2955	D0GBR00JA008	0 1/16W	1	
	R2956	D0GB221JA007	220 1/10W	1	
	R2956	D0GB472JA008	4.7K 1/16W	1	
	R2957	D0GA102JA023	1K 1/16W	1	
	R2959	D0GB222JA008	2.2K 1/16W	1	
	R2961	D0GB473JA008	47K 1/16W	1	
	R2962	D0GB473JA008	47K 1/16W	1	
	R2963	D0GBR00JA008	0 1/16W	1	
	R2964	D0GBR00JA008	0 1/16W	1	
	R3900	D0GA104JA023	100K 1/16W	1	
	R3901	ERJ2GEJ511X	510 1/16W	1	
	R3902	D0GA103JA023	10K 1/16W	1	
	R3903	D0GA103JA023	10K 1/16W	1	
	R3904	D0GA472JA023	4.7K 1/16W	1	
	R3905	D0GA222JA023	2.2K 1/16W	1	
	R3906	D0GA472JA023	4.7K 1/16W	1	
	R3907	D0GA222JA023	2.2K 1/16W	1	
	R3921	ERJ2GE0R00X	0 1/16W	1	
	R3924	ERJ2GE0R00X	0 1/16W	1	
	R3925	D0GA103JA023	10K 1/16W	1	
	R3942	D0GA221JA023	220 1/16W	1	
	R3947	D0GA103JA023	10K 1/16W	1	
	R3949	D0GA103JA023	10K 1/16W	1	
	R3950	D0GA104JA023	100K 1/16W	1	
	R3952	D0GA510JA023	51 1/16W	1	
	R3955	D0GA510JA023	51 1/16W	1	
	R3956	D0GA101JA023	100 1/16W	1	
	R3958	D0GA103JA023	10K 1/16W	1	
	R5100	D0GB100JA008	10 1/16W	1	
	R5101	D0GB101JA008	100 1/16W	1	
	R5102	D0GB223JA008	22K 1/16W	1	
	R5103	D0GB101JA008	100 1/16W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R5105	D0GB100JA008	10 1/16W	1	
	R5106	D0GB100JA008	10 1/16W	1	
	R5109	D0GB100JA008	10 1/16W	1	
	R5113	D0GD562JA017	5.6K 1/10W	1	
	R5117	D0GD562JA017	5.6K 1/10W	1	
	R5121	D0GD562JA017	5.6K 1/10W	1	
	R5125	D0GD562JA017	5.6K 1/10W	1	
	R5126	D0GB104JA008	100K 1/16W	1	
	R5128	D0GB104JA008	100K 1/16W	1	
	R5130	D0GB104JA008	100K 1/16W	1	
	R5132	D0GB562JA008	5.6K 1/16W	1	
	R5133	D0GB562JA008	5.6K 1/16W	1	
	R5134	D0GB562JA008	5.6K 1/16W	1	
	R5135	D0GB562JA008	5.6K 1/16W	1	
	R5136	D0GB104JA008	100K 1/16W	1	
	R5200	D0GB100JA008	10 1/16W	1	
	R5201	D0GB101JA008	100 1/16W	1	
	R5202	D0GB223JA008	22K 1/16W	1	
	R5203	D0GB101JA008	100 1/16W	1	
	R5205	D0GB100JA008	10 1/16W	1	
	R5206	D0GB100JA008	10 1/16W	1	
	R5209	D0GB100JA008	10 1/16W	1	
	R5210	ERJ3GEYJ3R3V	3.3 1/10W	1	
	R5211	ERJ3GEYJ3R3V	3.3 1/10W	1	
	R5212	D0GD103JA017	10K 1/10W	1	
	R5213	ERJ3GEYJ3R3V	3.3 1/10W	1	
	R5214	ERJ3GEYJ3R3V	3.3 1/10W	1	
	R5215	D0GD103JA017	10K 1/10W	1	
	R5216	D0GB104JA008	100K 1/16W	1	
	R5217	D0GB104JA008	100K 1/16W	1	
	R5219	D0GB104JA008	100K 1/16W	1	
	R5220	D0GB104JA008	100K 1/16W	1	
	R5221	D0GB562JA008	5.6K 1/16W	1	
	R5223	D0GB562JA008	5.6K 1/16W	1	
	R5350	ERJ3GEYJ201V	200 1/10W	1	
	R5351	ERJ3GEYJ201V	200 1/10W	1	
	R5353	ERJ3EKF1822V	18.2K 1/10W	1	
	R5370	D0GB331JA008	330 1/16W	1	
	R5371	D0GB331JA008	330 1/16W	1	
	R5375	D0GB470JA008	47 1/16W	1	
	R5376	D0GB470JA008	47 1/16W	1	
	R5377	D0GB470JA008	47 1/16W	1	
	R5379	D0GB470JA008	47 1/16W	1	
	R5380	D0GB470JA008	47 1/16W	1	
	R5381	D0GB470JA008	47 1/16W	1	
	R5382	D0GB470JA008	47 1/16W	1	
	R5383	D0GB470JA008	47 1/16W	1	
	R5384	D0GB470JA008	47 1/16W	1	
	R5385	D0GB470JA008	47 1/16W	1	
	R5386	D0GB470JA008	47 1/16W	1	
	R5387	D0GB470JA008	47 1/16W	1	
	R5388	D0GB470JA008	47 1/16W	1	
	R5390	D0GB331JA008	330 1/16W	1	
	R5391	D0GB331JA008	330 1/16W	1	
	R5406	ERJ3RBD104V	100K 1/16W	1	
	R5407	ERJ3RBD562V	5.6K 1/16W	1	
	R5408	ERJ3RBD103V	10K 1/16W	1	
	R5420	D0GD122JA017	1.2K 1/10W	1	
	R5421	D0GB100JA008	10 1/16W	1	
	R5422	D0GB334JA008	330K 1/16W	1	
	R5423	D0GB103JA008	10K 1/16W	1	
	R5424	D0GB103JA008	10K 1/16W	1	
	R5425	D0GB103JA008	10K 1/16W	1	
	R5426	ERJ3GEYJ185V	1.8M 1/10W	1	
	R5427	D0GB104JA008	100K 1/16W	1	
	R5428	D0GB103JA008	10K 1/16W	1	
	R5431	D0GB223JA008	22K 1/16W	1	
	R5434	D0GB103JA008	10K 1/16W	1	
	R5435	D0GB103JA008	10K 1/16W	1	
	R5436	D0GB223JA008	22K 1/16W	1	
	R5437	D0GB472JA008	4.7K 1/16W	1	
	R5438	D0GB224JA008	220K 1/16W	1	
	R5439	D0GB224JA008	220K 1/16W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R5444	D0GB103JA008	10K 1/16W	1	
	R5445	D0GB103JA008	10K 1/16W	1	
	R5446	D0GB332JA008	3.3K 1/16W	1	
	R5447	D0GB472JA008	4.7K 1/16W	1	
	R5449	D0GB104JA008	100K 1/16W	1	
	R5450	D0GB104JA008	100K 1/16W	1	
	R5451	D0GB104JA008	100K 1/16W	1	
	R5452	D0GB104JA008	100K 1/16W	1	
	R5453	D0GB333JA008	33K 1/16W	1	
	R5454	D0GB473JA008	47K 1/16W	1	
	R5461	D0GBR00JA008	0 1/16W	1	
	R5462	D0GBR00JA008	0 1/16W	1	
	R5463	D0GBR00JA008	0 1/16W	1	
	R5470	D0GB473JA008	47K 1/16W	1	
	R5471	D0GB123JA008	12K 1/16W	1	
	R5472	D0GB682JA008	6.8K 1/16W	1	
	R5473	D0GB123JA008	12K 1/16W	1	
	R5474	D0GB102JA008	1K 1/16W	1	
	R5475	D0GBR00JA008	0 1/16W	1	
	R5700	ERJ8GEYJ155V	1.5M 1/4W	1	
	R5701	ERJ8GEYJ155V	1.5M 1/4W	1	
	R5702	ERJ1TYJ104U	100K 1/2W	1	
	R5703	ERJ1TYJ104U	100K 1/2W	1	
	R5704	ERJ8GEYJ124V	120K 1/4W	1	
	R5706	ERJ8GEYJ274V	270K 1/4W	1	
	R5707	D0GF394JA017	390K 1/4W	1	
	R5720	D0GD220JA017	22 1/10W	1	
	R5721	D0GD103JA017	10K 1/10W	1	
	R5722	D0GD222JA017	2.2K 1/10W	1	
	R5723	ERJ1TYJ333U	33K 1/2W	1	
	R5724	ERJ1TYJ333U	33K 1/2W	1	
	R5726	ERJ1TRQJR27U	0.27 1/2W	1	
	R5727	ERJ1TRQJR27U	0.27 1/2W	1	
	R5728	D0GB223JA008	22K 1/16W	1	
	R5729	D0GB473JA008	47K 1/16W	1	
	R5730	D0GB102JA008	1K 1/16W	1	
	R5732	ERJ6GEYJ221V	220 1/8W	1	
	R5733	D0GB473JA008	47K 1/16W	1	
	R5786	D0GD224JA017	220K 1/10W	1	
	R5795	D0GD474JA017	470K 1/10W	1	
	R5797	D0GB153JA008	15K 1/16W	1	
	R5798	D0GB101JA008	100 1/16W	1	
	R5801	D0GB101JA008	100 1/16W	1	
	R5802	D0HB183ZA002	18K 1/16W	1	
	R5803	D0GD562JA017	5.6K 1/10W	1	
	R5804	ERJ6RED124V	120K 1/10W	1	
	R5805	ERJ3RBD682V	6.8K 1/16W	1	
	R5806	D0GB153JA008	15K 1/16W	1	
	R5807	D0GD681JA017	680 1/10W	1	
	R5808	D0GB222JA008	2.2K 1/16W	1	
	R5809	D0GD681JA017	680 1/10W	1	
	R5814	D0GB104JA008	100K 1/16W	1	
	R5817	ERJ3RBD222V	2.2K 1/16W	1	
	R5818	D0GB220JA008	22 1/16W	1	
	R5819	D0GD220JA017	22 1/10W	1	
	R5820	D0GD272JA017	2.7K 1/10W	1	
	R5821	D0GB104JA008	100K 1/16W	1	
	R5832	ERJ1TYJ822U	8.2K 1/2W	1	
	R5833	ERJ1TYJ822U	8.2K 1/2W	1	
	R5861	D0GB104JA008	100K 1/16W	1	
	R5862	D0GD222JA017	2.2K 1/10W	1	
	R5863	D0GD562JA017	5.6K 1/10W	1	
	R5864	D0GB472JA008	4.7K 1/16W	1	
	R5866	ERJ6GEYJ221V	220 1/8W	1	
	R5890	D0GB222JA008	2.2K 1/16W	1	
	R5891	ERJ3RBD333V	33K 1/16W	1	
	R5892	ERJ3RBD332V	3.3K 1/16W	1	
	R5893	ERJ3RBD333V	33K 1/16W	1	
	R5894	D0GB102JA008	1K 1/16W	1	
	R5895	D0GB153JA008	15K 1/16W	1	
	R5897	D0GB101JA008	100 1/16W	1	
	R5898	D0GD824JA017	820K 1/10W	1	
	R5899	D0GD473JA017	47K 1/10W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R6004	D0GBR00JA008	0 1/16W	1	
	R6005	D0GB470JA008	47 1/16W	1	
	R6006	D0GB101JA008	100 1/16W	1	
	R6007	ERJ8GEYJ1R8V	1.8 1/4W	1	
	R6008	ERJ8GEYJ1R8V	1.8 1/4W	1	
	R6010	D0GB680JA008	68 1/16W	1	
	R6011	D0GB680JA008	68 1/16W	1	
	R6012	D0GB102JA008	1K 1/16W	1	
	R6015	D0GB563JA008	56K 1/16W	1	
	R6016	D0GB122JA008	1.2K 1/16W	1	
	R6017	D0GB152JA008	1.5K 1/16W	1	
	R6018	D0GB222JA008	2.2K 1/16W	1	
	R6019	D0GB332JA008	3.3K 1/16W	1	
	R6020	D0GB472JA008	4.7K 1/16W	1	
	R6021	D0GB152JA008	1.5K 1/16W	1	
	R6022	D0GB222JA008	2.2K 1/16W	1	
	R6023	D0GB332JA008	3.3K 1/16W	1	
	R6024	D0GB472JA008	4.7K 1/16W	1	
	R6025	D0GBR00JA008	0 1/16W	1	
	R6030	D0GB103JA008	10K 1/16W	1	
	R6031	D0GB121JA008	120 1/16W	1	
	R6100	D0GB472JA008	4.7K 1/16W	1	
	R6101	D0GB104JA008	100K 1/16W	1	
	R6102	D0GB470JA008	47 1/16W	1	
	R6103	D0GBR00JA008	0 1/16W	1	
	R6401	J0JYB0000013	INDUCTOR	1	
	R6402	J0JYB0000013	INDUCTOR	1	
	R6801	D0GB122JA008	1.2K 1/16W	1	
	R7001	D0GB681JA008	680 1/16W	1	
	R7003	D0GBR00JA008	0 1/16W	1	
	R7004	D0GB681JA008	680 1/16W	1	
	R7005	D0GB102JA008	1K 1/16W	1	
	R7006	D0GB823JA008	82K 1/16W	1	
	R7008	D0GB101JA008	100 1/16W	1	
	R7009	D0GB104JA008	100K 1/16W	1	
	R7010	D0GB101JA008	100 1/16W	1	
	R7011	D0GBR00JA008	0 1/16W	1	
	R7015	D0GB102JA008	1K 1/16W	1	
	R7100	D0GB153JA008	15K 1/16W	1	
	R7101	D0GB103JA008	10K 1/16W	1	
	R7102	D0GB103JA008	10K 1/16W	1	
	R7103	D0GB103JA008	10K 1/16W	1	
	R7104	D0GB153JA008	15K 1/16W	1	
	R7105	D0GB103JA008	10K 1/16W	1	
	R7106	D0GB123JA008	12K 1/16W	1	
	R7107	D0GB220JA008	22 1/16W	1	
	R7108	D0GB472JA008	4.7K 1/16W	1	
	R7109	D0GB103JA008	10K 1/16W	1	
	R7110	D0GB682JA008	6.8K 1/16W	1	
	R7112	D0GB153JA008	15K 1/16W	1	
	R7113	D0GB103JA008	10K 1/16W	1	
	R7114	D0GB103JA008	10K 1/16W	1	
	R7115	D0GB104JA008	100K 1/16W	1	
	R7116	D0GB681JA008	680 1/16W	1	
	R7117	D0GB123JA008	12K 1/16W	1	
	R7118	D0GB822JA008	8.2K 1/16W	1	
	R7119	D0GB221JA007	220 1/10W	1	
	R8001	D0GA103JA023	10K 1/16W	1	
	R8003	D0GA103JA023	10K 1/16W	1	
	R8011	D0GA220JA023	22 1/16W	1	
	R8012	D0GA220JA023	22 1/16W	1	
	R8013	D0GA220JA023	22 1/16W	1	
	R8025	D0GBR00JA008	0 1/16W	1	
	R8211	D0GA103JA023	10K 1/16W	1	
	R8221	D0GA822JA023	8.2K 1/16W	1	
	R8225	D0GA822JA023	8.2K 1/16W	1	
	R8230	D0GA222JA023	2.2K 1/16W	1	
	R8231	D0GA752JA023	7.5K 1/16W	1	
	R8232	D0GA752JA023	7.5K 1/16W	1	
	R8251	D0GD6R8JA017	6.8 1/10W	1	
	R8252	D0GA103JA023	10K 1/16W	1	
	R8261	D0GA823JA023	82K 1/16W	1	
	R8262	D0GA153JA023	15K 1/16W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R8263	D0GA823JA023	82K 1/16W	1	
	R8264	D0GA153JA023	15K 1/16W	1	
	R8311	ERJ2RHD242X	2.4K 1/16W	1	
	R8312	ERJ2RHD102X	1K 1/16W	1	
	R8313	ERJ2RHD153X	15K 1/16W	1	
	R8314	ERJ2RHD153X	15K 1/16W	1	
	R8315	ERJ2RKD240X	24 1/16W	1	
	R8316	ERJ2RKD240X	24 1/16W	1	
	R8317	D0GA153JA023	15K 1/16W	1	
	R8318	D0GA153JA023	15K 1/16W	1	
	R8321	ERJ3RBD201V	200 1/16W	1	
	R8323	D0GA330JA023	33 1/16W	1	
	R8324	D0GA102JA023	1K 1/16W	1	
	R8325	ERJ3RBD201V	200 1/16W	1	
	R8327	D0GA330JA023	33 1/16W	1	
	R8328	D0GA102JA023	1K 1/16W	1	
	R8400	D0GB4R7JA008	4.7 1/16W	1	
	R8401	D0GA101JA023	100 1/16W	1	
	R8402	D0GA101JA023	100 1/16W	1	
	R8403	D0GA101JA023	100 1/16W	1	
	R8404	D0GA101JA023	100 1/16W	1	
	R8406	D0GA470JA023	47 1/16W	1	
	R8420	D0GA222JA023	2.2K 1/16W	1	
	R8421	ERJ2GE0R00X	0 1/16W	1	
	R8501	D0GA103JA023	10K 1/16W	1	
	R8502	D0GA103JA023	10K 1/16W	1	
	R8503	D0GA103JA023	10K 1/16W	1	
	R8504	D0GA103JA023	10K 1/16W	1	
	R8531	D0GA152JA023	1.5K 1/16W	1	
	R8532	D0GA222JA023	2.2K 1/16W	1	
	R8533	ERJ2GE0R00X	0 1/16W	1	
	R8534	D0GA103JA023	10K 1/16W	1	
	R8535	D0GA104JA023	100K 1/16W	1	
	R8536	D0GA103JA023	10K 1/16W	1	
	R8537	ERJ2GE0R00X	0 1/16W	1	
	R8538	ERJ2GE0R00X	0 1/16W	1	
	R8539	ERJ2GE0R00X	0 1/16W	1	
	R8541	D0GA153JA023	15K 1/16W	1	
	R8542	ERJ2GE0R00X	0 1/16W	1	
	R8551	ERJ2GE0R00X	0 1/16W	1	
	R8552	D0GA102JA023	1K 1/16W	1	
	R8553	D0GA102JA023	1K 1/16W	1	
	R8554	D0GA680JA023	68 1/16W	1	
	R8555	D0GA2R2JA023	2.2 1/16W	1	
	R8556	D0GB560JA008	56 1/16W	1	
	R8557	D0GB510JA008	51 1/16W	1	
	R8558	D0GA473JA023	47K 1/16W	1	
	R8559	D0GA153JA023	15K 1/16W	1	
	R8561	ERJ2GE0R00X	0 1/16W	1	
	R8562	D0GA102JA023	1K 1/16W	1	
	R8563	D0GA102JA023	1K 1/16W	1	
	R8564	D0GA220JA023	22 1/16W	1	
	R8565	D0GA2R2JA023	2.2 1/16W	1	
	R8566	D0GB560JA008	56 1/16W	1	
	R8567	D0GB510JA008	51 1/16W	1	
	R8568	D0GA473JA023	47K 1/16W	1	
	R8601	D0GA104JA023	100K 1/16W	1	
	R8602	ERJ2GE0R00X	0 1/16W	1	
	R8611	D0GA101JA023	100 1/16W	1	
	R8613	D0GA101JA023	100 1/16W	1	
	R8621	D0GA105JA023	1M 1/16W	1	
	R8622	ERJ2RHD102X	1K 1/16W	1	
	R8702	D0GA100JA023	10 1/16W	1	
	R8901	D0GA100JA023	10 1/16W	1	
	R9001	ERJ2GE0R00X	0 1/16W	1	
	R9002	ERJ2GE0R00X	0 1/16W	1	
	R9007	D0GA103JA023	10K 1/16W	1	
	R9008	D0GA105JA023	1M 1/16W	1	
	R9009	D0GA102JA023	1K 1/16W	1	
	R9010	D0GA100JA023	10 1/16W	1	
	R9023	D0GA103JA023	10K 1/16W	1	
	R9036	D0GA103JA023	10K 1/16W	1	
	R9037	D0GA103JA023	10K 1/16W	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	R9040	D0GA103JA023	10K 1/16W	1	
	R9041	D0GA103JA023	10K 1/16W	1	
	R9043	D0GA103JA023	10K 1/16W	1	
	R9044	D0GA103JA023	10K 1/16W	1	
	R9045	D0GA103JA023	10K 1/16W	1	
	R9046	D0GA103JA023	10K 1/16W	1	
	R9047	D0GA103JA023	10K 1/16W	1	
	R9048	D0GA103JA023	10K 1/16W	1	
	R9049	D0GA103JA023	10K 1/16W	1	
	R9055	D0GA472JA023	4.7K 1/16W	1	
	R9080	D0GA103JA023	10K 1/16W	1	
	R9083	D0GA470JA023	47 1/16W	1	
	R9084	D0GA470JA023	47 1/16W	1	
	R9085	D0GA470JA023	47 1/16W	1	
	R9086	D0GA470JA023	47 1/16W	1	
	R9087	D0GA470JA023	47 1/16W	1	
	R9088	D0GA470JA023	47 1/16W	1	
	R9099	ERJ2GE0R00X	0 1/16W	1	
			RESISTOR NETWORKS		
	RX3707	D1H84714A043	RESISTOR NETWORK	1	
	RX3708	D1H84714A043	RESISTOR NETWORK	1	
	RX3901	D1H410120001	RESISTOR NETWORK	1	
	RX8001	D1H410320002	RESISTOR NETWORK	1	
	RX8011	D1H88204A043	RESISTOR NETWORK	1	
	RX8012	D1H88204A043	RESISTOR NETWORK	1	
	RX8013	D1H88204A043	RESISTOR NETWORK	1	
	RX8014	D1H88204A043	RESISTOR NETWORK	1	
	RX8015	D1H88204A043	RESISTOR NETWORK	1	
	RX8016	D1H88204A043	RESISTOR NETWORK	1	
	RX8017	D1H88204A043	RESISTOR NETWORK	1	
	RX8018	D1H422020001	RESISTOR NETWORK	1	
	RX8019	D1H422020001	RESISTOR NETWORK	1	
	RX8020	D1H422020001	RESISTOR NETWORK	1	
	RX8031	D1H447220001	RESISTOR NETWORK	1	
	RX8032	D1H447220001	RESISTOR NETWORK	1	
	RX8401	D1H410120001	RESISTOR NETWORK	1	
	RX8402	D1H410120001	RESISTOR NETWORK	1	
	RX8531	D1H456020001	RESISTOR NETWORK	1	
	RX8532	D1H456020001	RESISTOR NETWORK	1	
	RX8533	D1H456020001	RESISTOR NETWORK	1	
	RX8611	D1H447220001	RESISTOR NETWORK	1	
	RX9014	D1H85604A043	RESISTOR NETWORK	1	
	RX9015	D1H85604A043	RESISTOR NETWORK	1	
	RX9016	D1H85604A043	RESISTOR NETWORK	1	
	RX9017	D1H85604A043	RESISTOR NETWORK	1	
	RX9018	D1H447220001	RESISTOR NETWORK	1	
	RX9020	D1H447220001	RESISTOR NETWORK	1	
			CAPACITORS		
	C1002	F1G1C104A083	0.1uF 16V	1	
	C1003	F1G1C104A083	0.1uF 16V	1	
	C1004	F1G1C104A083	0.1uF 16V	1	
	C2041	F1H1C104A042	0.1uF 16V	1	
	C2042	F1H1H470A004	47pF 50V	1	
	C2043	F1H1H470A004	47pF 50V	1	
	C2044	F1H0J1050013	1uF 6.3V	1	
	C2045	F1H1H103A219	0.01uF 50V	1	
	C2046	F2G0J101A031	100uF 6.3V	1	
	C2052	F1H1H103A219	0.01uF 50V	1	
	C2053	F1H1H102A219	1000pF 50V	1	
	C2054	F2G0J101A031	100uF 6.3V	1	
	C2055	F1H1H102A219	1000pF 50V	1	
	C2056	F1H0J1050013	1uF 6.3V	1	
	C2057	F1H1H103A219	0.01uF 50V	1	
	C2058	F1H1C2730001	0.027uF 16V	1	
	C2059	F1H1H272A219	2700pF 50V	1	
	C2060	F1H0J1050013	1uF 6.3V	1	
	C2061	F1H1H103A219	0.01uF 50V	1	
	C2062	F1J1A106A043	10uF 10V	1	
	C2091	F1H1C104A042	0.1uF 16V	1	
	C2092	F1H1C104A042	0.1uF 16V	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	C2093	F1H1H471A219	470pF 50V	1	
	C2094	F1H0J1050013	1uF 6.3V	1	
	C2102	F1H1H102A219	1000pF 50V	1	
	C2104	F1G1A104A014	0.1uF 10V	1	
	C2105	F1H1H104A013	0.1uF 50V	1	
	C2106	F1H1H104A013	0.1uF 50V	1	
	C2107	F1H1C104A042	0.1uF 16V	1	
	C2108	D0GBR00JA008	0 1/16W	1	
	C2109	D0GBR00JA008	0 1/16W	1	
	C2151	F1H1H102A219	1000pF 50V	1	
	C2152	F1H0J1050013	1uF 6.3V	1	
	C2153	F1H1C104A042	0.1uF 16V	1	
	C2154	F1J0J106A020	10uF 6.3V	1	
	C2155	F1J0J106A020	10uF 6.3V	1	
	C2156	F1H1C104A042	0.1uF 16V	1	
	C2157	F1J0J106A020	10uF 6.3V	1	
	C2158	F1H1C104A042	0.1uF 16V	1	
	C2159	F1H1H103A219	0.01uF 50V	1	
	C2300	F1H1H223A219	0.022uF 50V	1	
	C2304	F1H1H104A013	0.1uF 50V	1	
	C2305	F1H1H104A013	0.1uF 50V	1	
	C2306	F1H1H104A013	0.1uF 50V	1	
	C2307	F1J1H104A459	0.1uF 50V	1	
	C2308	F1H1H561A013	560pF 50V	1	
	C2309	F1H1H561A013	560pF 50V	1	
	C2310	F1H1H470A004	47pF 50V	1	
	C2311	F1H1H470A004	47pF 50V	1	
	C2315	F1K1H105A149	1uF 50V	1	
	C2316	F1K1H105A149	1uF 50V	1	
	C2318	F1H1H104A013	0.1uF 50V	1	
	C2400	F1H1H104A013	0.1uF 50V	1	
	C2500	F1G1H101A566	100pF 50V	1	
	C2501	F1H1H103A219	0.01uF 50V	1	
	C2502	F1J1A106A043	10uF 10V	1	
	C2503	F1J1A106A043	10uF 10V	1	
	C2504	F1H1H103A219	0.01uF 50V	1	
	C2505	F1J1A106A043	10uF 10V	1	
	C2506	F1J1A106A043	10uF 10V	1	
	C2507	F1G1E1020001	1000pF 25V	1	
	C2510	F1H1C105A097	1uF 16V	1	
	C2511	EEEB0J102UP	1000uF 6.3V	1	
	C2515	F1H1H103A219	0.01uF 50V	1	
	C2516	EEEB0J101P	100uF 6.3V	1	
	C2517	EEEB0J220R	22uF 6.3V	1	
	C2518	F1H1H103A219	0.01uF 50V	1	
	C2520	F1H1H104A013	0.1uF 50V	1	
	C2521	F1H1H560A230	56pF 50V	1	
	C2570	F1H1H2210001	220pF 50V	1	
	C2571	F1H1H2210001	220pF 50V	1	
	C2602	F1H1H220A230	22pF 50V	1	
	C2603	F1H1H220A230	22pF 50V	1	
	C2604	F1H0J1050013	1uF 6.3V	1	
	C2606	F1H1H103A219	0.01uF 50V	1	
	C2607	F1H1H220A230	22pF 50V	1	
	C2608	F1H1H220A230	22pF 50V	1	
	C2609	F1H0J1050013	1uF 6.3V	1	
	C2610	EEEB1C470P	47uF 16V	1	
	C2611	F1H0J106A009	10uF 6.3V	1	
	C2612	F1H0J106A009	10uF 6.3V	1	
	C2613	F1H1H104A013	0.1uF 50V	1	
	C2614	EEEB1C100R	10uF 16V	1	
	C2616	F1H1H103A219	0.01uF 50V	1	
	C2617	F1H1H104A013	0.1uF 50V	1	
	C2618	EEEB0J102UP	1000uF 6.3V	1	
	C2620	F1H1H103A219	0.01uF 50V	1	
	C2622	F1H1H102A219	1000pF 50V	1	
	C2623	D0GBR00JA008	0 1/16W	1	
	C2624	F1H1H220A230	22pF 50V	1	
	C2625	F1H1H560A230	56pF 50V	1	
	C2626	F1H1H330A230	33pF 50V	1	
	C2704	EEEB0J101P	100uF 6.3V	1	
	C2705	EEEB0J101P	100uF 6.3V	1	
	C2707	EEEB0J101P	100uF 6.3V	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	C2708	F1G1A1040006	0.1uF 10V	1	
	C2709	F1H1H104A013	0.1uF 50V	1	
	C2710	EEEB1C101UP	100uF 16V	1	
	C2711	F2G0J101A031	100uF 6.3V	1	
	C2712	F1G1C104A077	0.1uF 16V	1	
	C2713	F1H1H104A013	0.1uF 50V	1	
	C2714	F1H1H104A013	0.1uF 50V	1	
	C2715	F1H1H104A013	0.1uF 50V	1	
	C2804	F1H1H681A935	680pF 50V	1	
	C2805	F1H1H681A935	680pF 50V	1	
	C2806	F1H1C105A097	1uF 16V	1	
	C2807	F1H1C105A097	1uF 16V	1	
	C2808	F1H1A105A025	1uF 10V	1	
	C2811	F1H1C105A097	1uF 16V	1	
	C2812	F1H1C105A097	1uF 16V	1	
	C2813	F1H1C105A097	1uF 16V	1	
	C2814	F1H1C105A097	1uF 16V	1	
	C2815	F1H1H470A004	47pF 50V	1	
	C2816	F1H1H470A004	47pF 50V	1	
	C2817	F1H1H103A219	0.01uF 50V	1	
	C2818	F1H1H103A219	0.01uF 50V	1	
	C2819	F1H1H2210001	220pF 50V	1	
	C2820	F1H1H2210001	220pF 50V	1	
	C2821	F1H1A105A025	1uF 10V	1	
	C2822	F1G1A1040006	0.1uF 10V	1	
	C2823	F1G1H470A444	47pF 50V	1	
	C2824	F1G1H470A444	47pF 50V	1	
	C2825	F1H1A105A025	1uF 10V	1	
	C2826	F1G1A1040006	0.1uF 10V	1	
	C2827	F1G1A1040006	0.1uF 10V	1	
	C2828	F1J1A106A043	10uF 10V	1	
	C2900	F2G0J101A031	100uF 6.3V	1	
	C2901	F2A1V2210049	220uF 35V	1	
	C2902	F2A0J1220028	1200uF 6.3V	1	
	C2903	F2A1C8210008	820uF 16V	1	
	C2907	F2A1V5600013	56uF 35V	1	
	C2951	F1H1H102A219	1000pF 50V	1	
	C2953	F1H1H104A013	0.1uF 50V	1	
	C2957	F1H1H103A219	0.01uF 50V	1	
	C2957	F1H1H220A230	22pF 50V	1	
	C2958	F1H1H220A230	22pF 50V	1	
	C2959	F1H1A105A025	1uF 10V	1	
	C2960	F1H1A105A025	1uF 10V	1	
	C2961	F1G1C104A077	0.1uF 16V	1	
	C2961	F1H1H681A013	680pF 50V	1	
	C2962	F1G1C104A077	0.1uF 16V	1	
	C2962	F1H1H103A219	0.01uF 50V	1	
	C2963	F1H1H681A013	680pF 50V	1	
	C2964	F1H1H104A013	0.1uF 50V	1	
	C2966	F1J1V1050001	1uF 35V	1	
	C2971	F1H1H104A013	0.1uF 50V	1	
	C2972	F1H1C224A068	0.22uF 16V	1	
	C2973	F1H1H122A013	1200pF 50V	1	
	C2974	F1H1A105A025	1uF 10V	1	
	C2975	F1K1C1060001	10uF 16V	1	
	C2976	F1H1H153A219	0.015uF 50V	1	
	C2977	F1H1C224A068	0.22uF 16V	1	
	C2981	F1H1H102A219	1000pF 50V	1	
	C2982	F1K1C1060001	10uF 16V	1	
	C2983	F1J1V1050001	1uF 35V	1	
	C3901	EEE0GA331WP	330uF 4V	1	
	C3902	EEE0GA331WP	330uF 4V	1	
	C3904	EEE0GA331WP	330uF 4V	1	
	C3906	EEE0GA331WP	330uF 4V	1	
	C3907	F1G1A1040006	0.1uF 10V	1	
	C3908	F1G1A1040006	0.1uF 10V	1	
	C3909	F1H0J1050013	1uF 6.3V	1	
	C3910	F1G1A1040006	0.1uF 10V	1	
	C3911	F1H0J1050013	1uF 6.3V	1	
	C3913	F1G1A1040006	0.1uF 10V	1	
	C3914	F1G1A1040006	0.1uF 10V	1	
	C3915	F1H0J1050013	1uF 6.3V	1	
	C3916	F1G1A1040006	0.1uF 10V	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	C3917	F1H0J1050013	1uF 6.3V	1	
	C3918	F1G1A1040006	0.1uF 10V	1	
	C3919	F1H0J1050013	1uF 6.3V	1	
	C3920	F1H0J1050013	1uF 6.3V	1	
	C3921	F1G1A1040006	0.1uF 10V	1	
	C3922	F1G1A1040006	0.1uF 10V	1	
	C3923	F1H0J1050013	1uF 6.3V	1	
	C3924	F1H0J1050013	1uF 6.3V	1	
	C3925	F1G1A1040006	0.1uF 10V	1	
	C3926	F1G1A1040006	0.1uF 10V	1	
	C3927	F1H0J1050013	1uF 6.3V	1	
	C3928	F1G1A1040006	0.1uF 10V	1	
	C3929	F1G1A1040006	0.1uF 10V	1	
	C3930	F1H0J1050013	1uF 6.3V	1	
	C3931	F1H1H104A013	0.1uF 50V	1	
	C3932	F1H0J1050013	1uF 6.3V	1	
	C3940	F1G1A1040006	0.1uF 10V	1	
	C3944	F1G1C104A083	0.1uF 16V	1	
	C3954	F1G1C104A083	0.1uF 16V	1	
	C3955	F1G1C1030007	0.01uF 16V	1	
	C3956	F1H0J1050013	1uF 6.3V	1	
	C3964	F1G1A1040006	0.1uF 10V	1	
	C3965	F1G1H100A565	10pF 50V	1	
	C3966	F1H0J1050013	1uF 6.3V	1	
	C3967	F1G1A1040006	0.1uF 10V	1	
	C3968	F1H0J1050013	1uF 6.3V	1	
	C3970	F1H0J1050013	1uF 6.3V	1	
	C3971	F1G1A1040006	0.1uF 10V	1	
	C3972	F1H1C104A008	0.1uF 16V	1	
	C5100	F1H1H104A013	0.1uF 50V	1	
	C5101	F1H1H104A013	0.1uF 50V	1	
	C5102	F1J1C106A059	10uF 16V	1	
	C5103	F1H1H104A013	0.1uF 50V	1	
	C5104	F1H1H104A013	0.1uF 50V	1	
	C5105	F1H1H104A013	0.1uF 50V	1	
	C5106	F1J2A333A024	0.033uF 100V	1	
	C5107	F1L2A2250002	2.2uF 100V	1	
	C5108	F1L2A2250002	2.2uF 100V	1	
	C5109	F1L2A2250002	2.2uF 100V	1	
	C5110	F1L2A2250002	2.2uF 100V	1	
	C5111	F1J2A333A024	0.033uF 100V	1	
	C5112	F1J2A333A024	0.033uF 100V	1	
	C5113	F1L2A2250002	2.2uF 100V	1	
	C5114	F1L2A2250002	2.2uF 100V	1	
	C5115	F1L2A2250002	2.2uF 100V	1	
	C5116	F1L2A2250002	2.2uF 100V	1	
	C5117	F2A1J3310032	330uF 63V	1	
	C5118	F1J2A333A024	0.033uF 100V	1	
	C5119	F1H1H104A013	0.1uF 50V	1	
	C5120	F0C1J1050003	1uF 63V	1	
	C5121	F2A1V3310040	330uF 35V	1	
	C5127	F0C1J1050003	1uF 63V	1	
	C5128	F2A1V4710076	470uF 35V	1	
	C5133	F2A1V4710076	470uF 35V	1	
	C5134	F2A1V3310040	330uF 35V	1	
	C5135	F0C1J1050003	1uF 63V	1	
	C5136	F2A1V3310040	330uF 35V	1	
	C5137	F2A1V4710076	470uF 35V	1	
	C5142	F0C1J1050003	1uF 63V	1	
	C5143	F2A1V3310040	330uF 35V	1	
	C5144	F2A1V4710076	470uF 35V	1	
	C5150	F1H2A102A009	1000pF 100V	1	
	C5151	F1H2A102A009	1000pF 100V	1	
	C5152	F1H2A102A009	1000pF 100V	1	
	C5153	F1H2A102A009	1000pF 100V	1	
	C5154	F1H2A102A009	1000pF 100V	1	
	C5155	F1H2A102A009	1000pF 100V	1	
	C5156	F1H2A102A009	1000pF 100V	1	
	C5157	F1H2A102A009	1000pF 100V	1	
	C5200	F1H1H104A013	0.1uF 50V	1	
	C5201	F1H1H104A013	0.1uF 50V	1	
	C5202	F1J1C106A059	10uF 16V	1	
	C5203	F1H1H104A013	0.1uF 50V	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	C5204	F1H1H104A013	0.1uF 50V	1	
	C5205	F1H1H104A013	0.1uF 50V	1	
	C5206	F1J2A333A024	0.033uF 100V	1	
	C5207	F1L2A2250002	2.2uF 100V	1	
	C5208	F1L2A2250002	2.2uF 100V	1	
	C5209	F1L2A2250002	2.2uF 100V	1	
	C5210	F1L2A2250002	2.2uF 100V	1	
	C5211	F1J2A333A024	0.033uF 100V	1	
	C5212	F1J2A333A024	0.033uF 100V	1	
	C5213	F1L2A2250002	2.2uF 100V	1	
	C5214	F1L2A2250002	2.2uF 100V	1	
	C5215	F1L2A2250002	2.2uF 100V	1	
	C5216	F1L2A2250002	2.2uF 100V	1	
	C5217	F2A1J3310032	330uF 63V	1	
	C5218	F1J2A333A024	0.033uF 100V	1	
	C5219	F1H1H104A013	0.1uF 50V	1	
	C5222	ECQV1H474JL3	0.47uF 50V	1	
	C5223	F1H2A102A009	1000pF 100V	1	
	C5224	F1H1H103A219	0.01uF 50V	1	
	C5226	F1H2A102A009	1000pF 100V	1	
	C5227	F1H1H103A219	0.01uF 50V	1	
	C5228	ECQV1H474JL3	0.47uF 50V	1	
	C5229	F1H2A102A009	1000pF 100V	1	
	C5230	F1H2A102A009	1000pF 100V	1	
	C5231	F1H1H103A219	0.01uF 50V	1	
	C5232	F1H1H103A219	0.01uF 50V	1	
	C5235	F1H2A102A009	1000pF 100V	1	
	C5236	F1H2A102A009	1000pF 100V	1	
	C5237	F1H2A102A009	1000pF 100V	1	
	C5238	F1H2A102A009	1000pF 100V	1	
	C5350	F1H1H104A013	0.1uF 50V	1	
	C5351	F1H1H104A013	0.1uF 50V	1	
	C5352	F1H1H103A219	0.01uF 50V	1	
	C5354	F1H1H104A013	0.1uF 50V	1	
	C5356	F1H1H104A013	0.1uF 50V	1	
	C5357	F1H1H103A219	0.01uF 50V	1	
	C5358	F1H1H104A013	0.1uF 50V	1	
	C5359	F1J1A106A043	10uF 10V	1	
	C5361	F1H1H104A013	0.1uF 50V	1	
	C5362	F1H1H470A004	47pF 50V	1	
	C5363	F1H1H470A004	47pF 50V	1	
	C5365	F1H1H104A013	0.1uF 50V	1	
	C5366	F1H1H104A013	0.1uF 50V	1	
	C5406	EEE1EA330WR	33uF 25V	1	
	C5409	EEE1CA220WR	22uF 16V	1	
	C5416	F1H1H102A219	1000pF 50V	1	
	C5417	EEE1CA100SR	10uF 16V	1	
	C5418	EEE0JA221WP	220uF 6.3V	1	
	C5419	F1H1E105A116	1uF 25V	1	
	C5420	EEE1CA220WR	22uF 16V	1	
	C5421	F1H1H104A013	0.1uF 50V	1	
	C5422	EEE1CA220WR	22uF 16V	1	
	C5423	F1J1V1050001	1uF 35V	1	
	C5424	F1H1H562A219	5600pF 50V	1	
	C5425	F1H1C105A097	1uF 16V	1	
	C5427	F1J1A106A043	10uF 10V	1	
	C5428	F1J1A106A043	10uF 10V	1	
	C5432	F1H1H103A219	0.01uF 50V	1	
	C5433	F1H1H104A013	0.1uF 50V	1	
	C5434	F1H1H104A013	0.1uF 50V	1	
	C5435	F1H1H104A013	0.1uF 50V	1	
	C5436	F1H1H104A013	0.1uF 50V	1	
	C5437	F1H1H104A013	0.1uF 50V	1	
	C5439	F1H1C105A097	1uF 16V	1	
	C5440	F1J1V1050001	1uF 35V	1	
	C5446	F1H2A102A009	1000pF 100V	1	
	C5447	F1J1V1050001	1uF 35V	1	
	C5448	F1J1A106A043	10uF 10V	1	
	C5449	F1H1H104A013	0.1uF 50V	1	
	C5450	EEE1CA220WR	22uF 16V	1	
	△	C5700	F1BAF471A013	470pF	1
	△	C5701	F0CAF104A105	0.1uF	1
	△	C5702	F0CAF104A105	0.1uF	1

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
△	C5703	F0CAF104A105	0.1uF	1	
△	C5705	F1BAF471A013	470pF	1	
△	C5706	F1BAF471A013	470pF	1	
	C5711	F2A2G2710002	270uF 400V	1	
	C5712	F2A2G2710002	270uF 400V	1	
	C5713	F0C2J1030005	0.01uF 630V	1	
	C5720	F1H1H102A219	1000pF 50V	1	
	C5721	F1H1H2210001	220pF 50V	1	
	C5722	F1H1H102A219	1000pF 50V	1	
	C5723	F1H1H471A219	470pF 50V	1	
	C5724	F1H1H102A219	1000pF 50V	1	
	C5725	F1H1H104A013	0.1uF 50V	1	
	C5726	F2A1H100A454	10uF 50V	1	
	C5730	F1H1E105A116	1uF 25V	1	
	C5747	F1B3A821A009	820pF 1000V	1	
	C5790	F1K2J2220002	2200pF 630V	1	
	C5791	F1J0J106A020	10uF 6.3V	1	
	C5795	F1H1H102A219	1000pF 50V	1	
	C5796	F1H1H104A013	0.1uF 50V	1	
	C5798	F2A1H100A454	10uF 50V	1	
	C5799	F2B2G6R80001	6.8uF 400V	1	
	C5800	F1J2E1030004	0.01uF 250V	1	
	C5805	F2A1J1020045	1000uF 63V	1	
	C5808	F2A1J1020045	1000uF 63V	1	
	C5811	F1J2E1030004	0.01uF 250V	1	
	C5813	F2A1V331B150	330uF 35V	1	
	C5817	F1H2A682A002	6800pF 100V	1	
	C5818	F1H1H104A013	0.1uF 50V	1	
	C5824	F2A1E221B422	220uF 25V	1	
	C5826	F1J2E1030004	0.01uF 250V	1	
	C5827	F1J2E1030004	0.01uF 250V	1	
	C5828	F2A0J222A247	2200uF 6.3V	1	
	C5840	F1J2E1030004	0.01uF 250V	1	
	C5869	F1H1H103A219	0.01uF 50V	1	
	C5897	F1H1H104A013	0.1uF 50V	1	
	C5898	F1H1H104A013	0.1uF 50V	1	
	C5899	F2A1A2210063	220uF 10V	1	
	C6001	F1J1V1050001	1uF 35V	1	
	C6005	F1J1V1050001	1uF 35V	1	
	C6010	F1J1A4750002	4.7uF 10V	1	
	C6012	F1H1H1010005	100pF 50V	1	
	C6013	F1H1H1010005	100pF 50V	1	
	C6014	F1H1H1010005	100pF 50V	1	
	C6015	F1J1V1050001	1uF 35V	1	
	C6016	F1H1H1010005	100pF 50V	1	
	C6018	F2A0J1000008	10uF 6.3V	1	
	C6019	F1H1H104A013	0.1uF 50V	1	
	C6100	F2A1C470A630	47uF 16V	1	
	C6101	F1H1H562A219	5600pF 50V	1	
	C6102	F2A1V330A921	33uF 35V	1	
	C6103	F2A0J221A024	220uF 6.3V	1	
	C6104	F2A1V470A942	47uF 35V	1	
	C6105	F1J1C106A059	10uF 16V	1	
	C6401	D0GBR00JA008	0 1/16W	1	
	C6403	D0GBR00JA008	0 1/16W	1	
	C7003	F1H1C105A097	1uF 16V	1	
	C7004	F1H1C153A001	0.015uF 16V	1	
	C7005	F1H1H470A004	47pF 50V	1	
	C7006	F1H1H101A720	100pF 50V	1	
	C7007	F1H1H104A013	0.1uF 50V	1	
	C7009	F1H1H151A792	150pF 50V	1	
	C7010	F1H1H470A004	47pF 50V	1	
	C7011	F1H1H104A013	0.1uF 50V	1	
	C7012	F1H1A105A025	1uF 10V	1	
	C7013	F1H1H103A219	0.01uF 50V	1	
	C7014	F1H1C474A140	0.47uF 16V	1	
	C7015	F1H1C105A097	1uF 16V	1	
	C7018	F1H1H104A013	0.1uF 50V	1	
	C7019	F1H1H104A013	0.1uF 50V	1	
	C7020	F1H1H104A013	0.1uF 50V	1	
	C7021	F1H1H1010005	100pF 50V	1	
	C7022	F1H1H1010005	100pF 50V	1	
	C7023	F1H1H1010005	100pF 50V	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	C7026	F1H1H1010005	100pF 50V	1	
	C7027	F1H1H1010005	100pF 50V	1	
	C7101	F1H1C105A097	1uF 16V	1	
	C7102	F1H1H392A013	3900pF 50V	1	
	C7103	F1H1H561A013	560pF 50V	1	
	C7104	F1H1C823A001	0.082uF 16V	1	
	C7105	F1H1H104A013	0.1uF 50V	1	
	C7106	F1H1H104A013	0.1uF 50V	1	
	C7107	F1H1H332A013	3300pF 50V	1	
	C7108	F1H1H561A013	560pF 50V	1	
	C7109	F1H1C823A001	0.082uF 16V	1	
	C7110	F2A1C470A016	47uF 16V	1	
	C7111	F2A1C470A016	47uF 16V	1	
	C7112	F1H1H104A013	0.1uF 50V	1	
	C7113	F1H1C105A097	1uF 16V	1	
	C7114	F1H1H103A219	0.01uF 50V	1	
	C7115	F1H1C104A042	0.1uF 16V	1	
	C7116	F1H1H562A219	5600pF 50V	1	
	C7117	F1H1C105A097	1uF 16V	1	
	C7118	F1H1H103A219	0.01uF 50V	1	
	C7119	F1H1H103A219	0.01uF 50V	1	
	C7120	F2A1C470A016	47uF 16V	1	
	C8001	EEE0GA331WP	330uF 4V	1	
	C8002	F2G0J330A031	33uF 6.3V	1	
	C8003	F1G1C104A083	0.1uF 16V	1	
	C8004	F1G1C104A083	0.1uF 16V	1	
	C8005	F1G1C104A083	0.1uF 16V	1	
	C8006	F1G1C104A083	0.1uF 16V	1	
	C8007	F1G1C104A083	0.1uF 16V	1	
	C8010	F1G1H221A444	220pF 50V	1	
	C8011	F2G0J101A031	100uF 6.3V	1	
	C8012	F1G1C104A083	0.1uF 16V	1	
	C8013	F1G1C104A083	0.1uF 16V	1	
	C8014	F1G1C104A083	0.1uF 16V	1	
	C8015	F1G1C104A083	0.1uF 16V	1	
	C8016	F1G1C104A083	0.1uF 16V	1	
	C8018	F1G1C104A083	0.1uF 16V	1	
	C8020	F1G1C104A083	0.1uF 16V	1	
	C8021	F1G1C104A083	0.1uF 16V	1	
	C8022	F1G1C104A083	0.1uF 16V	1	
	C8023	F1G1C104A083	0.1uF 16V	1	
	C8024	F1G1C104A083	0.1uF 16V	1	
	C8026	F1G1C104A083	0.1uF 16V	1	
	C8051	F1H0J1050013	1uF 6.3V	1	
	C8052	F1G1A1040006	0.1uF 10V	1	
	C8053	F1G1C104A083	0.1uF 16V	1	
	C8054	F1G1H221A444	220pF 50V	1	
	C8055	F1H0J1050013	1uF 6.3V	1	
	C8056	F1G1E2220001	2200pF 25V	1	
	C8057	F1H0J1050013	1uF 6.3V	1	
	C8111	F1J1A106A043	10uF 10V	1	
	C8112	F1H0J1050013	1uF 6.3V	1	
	C8113	F1G1C153A039	0.015uF 16V	1	
	C8118	F1G1C153A039	0.015uF 16V	1	
	C8151	F1H0J4750005	4.7uF 6.3V	1	
	C8201	F2G0J101A031	100uF 6.3V	1	
	C8202	F1G1A1040006	0.1uF 10V	1	
	C8211	F1G1E1220001	1200pF 25V	1	
	C8221	F1G1E1020001	1000pF 25V	1	
	C8222	F1G1E8210002	820pF 25V	1	
	C8225	F1G1E1020001	1000pF 25V	1	
	C8226	F1G1E1020001	1000pF 25V	1	
	C8231	F1G1A1040006	0.1uF 10V	1	
	C8232	F1G1A1040006	0.1uF 10V	1	
	C8251	F2G0J221A031	220uF 6.3V	1	
	C8252	F1G1C104A083	0.1uF 16V	1	
	C8255	F2G1C220A037	22uF 16V	1	
	C8256	F1G1C104A083	0.1uF 16V	1	
	C8257	F2G1C470A076	47uF 16V	1	
	C8258	F1G1C104A083	0.1uF 16V	1	
	C8260	F1G1H221A541	220pF 50V	1	
	C8261	F1G1C104A083	0.1uF 16V	1	
	C8262	F1G1C104A083	0.1uF 16V	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	C8264	F1G1C104A083	0.1uF 16V	1	
	C8301	F2G0J221A031	220uF 6.3V	1	
	C8302	F2G0J330A031	33uF 6.3V	1	
	C8303	F1G1A1040006	0.1uF 10V	1	
	C8304	F1G1A1040006	0.1uF 10V	1	
	C8305	F1G1A1040006	0.1uF 10V	1	
	C8311	F1G1A1040006	0.1uF 10V	1	
	C8312	F1H0J1050013	1uF 6.3V	1	
	C8313	F1H0J1050013	1uF 6.3V	1	
	C8321	F1G1A1040006	0.1uF 10V	1	
	C8325	F1G1A1040006	0.1uF 10V	1	
	C8330	F2G0J470A031	47uF 6.3V	1	
	C8364	F1G1C104A083	0.1uF 16V	1	
	C8401	F1G1H150A565	15pF 50V	1	
	C8421	F2G0J470A031	47uF 6.3V	1	
	C8425	F1G1H150A565	15pF 50V	1	
	C8429	F1G1C104A083	0.1uF 16V	1	
	C8431	F2G1C100A072	10uF 16V	1	
	C8432	F1J1A106A043	10uF 10V	1	
	C8433	F1J1A106A043	10uF 10V	1	
	C8434	F1J1A106A043	10uF 10V	1	
	C8435	F1G1E1020001	1000pF 25V	1	
	C8501	F2G0J101A031	100uF 6.3V	1	
	C8502	F1G1C104A083	0.1uF 16V	1	
	C8503	F1G1C104A083	0.1uF 16V	1	
	C8504	F1G1C104A083	0.1uF 16V	1	
	C8505	F1G1C104A083	0.1uF 16V	1	
	C8506	F1G1C104A083	0.1uF 16V	1	
	C8511	F1H0J1050013	1uF 6.3V	1	
	C8512	F1H0J1050013	1uF 6.3V	1	
	C8513	F1G1A1040006	0.1uF 10V	1	
	C8514	F1G1A1040006	0.1uF 10V	1	
	C8515	F1G1A1040006	0.1uF 10V	1	
	C8516	F1G1A1040006	0.1uF 10V	1	
	C8521	F1G1A1040006	0.1uF 10V	1	
	C8522	F1G1A1040006	0.1uF 10V	1	
	C8523	F1G1C104A083	0.1uF 16V	1	
	C8524	F1G1C104A083	0.1uF 16V	1	
	C8525	F1G1C562A039	5600pF 16V	1	
	C8526	F1G1C183A039	0.018uF 16V	1	
	C8527	F1G1A333A013	0.033uF 10V	1	
	C8528	F1H0J1050013	1uF 6.3V	1	
	C8529	F1H0J1050013	1uF 6.3V	1	
	C8530	F1G1C104A083	0.1uF 16V	1	
	C8531	F1G1H101A566	100pF 50V	1	
	C8532	F1G1H221A444	220pF 50V	1	
	C8533	F1G1C104A083	0.1uF 16V	1	
	C8540	F1J1A106A043	10uF 10V	1	
	C8541	F1G1E4720002	4700pF 25V	1	
	C8550	F2G0J330A031	33uF 6.3V	1	
	C8551	F1G1C104A083	0.1uF 16V	1	
	C8552	F2G1C100A072	10uF 16V	1	
	C8553	F2G0J470A031	47uF 6.3V	1	
	C8554	F1H0J1050013	1uF 6.3V	1	
	C8561	F1G1C104A083	0.1uF 16V	1	
	C8562	F2G1C100A072	10uF 16V	1	
	C8563	F2G0J470A031	47uF 6.3V	1	
	C8564	F1H0J1050013	1uF 6.3V	1	
	C8601	F1G1C104A083	0.1uF 16V	1	
	C8602	F1G1C153A039	0.015uF 16V	1	
	C8606	F1G1C104A083	0.1uF 16V	1	
	C8611	F1G1C104A083	0.1uF 16V	1	
	C8621	F1G1H8R00009	8.0pF 50V	1	
	C8622	F1G1H8R00009	8.0pF 50V	1	
	C8651	F1G1C104A083	0.1uF 16V	1	
	C8652	F1G1C104A083	0.1uF 16V	1	
	C8701	F1G1A1040006	0.1uF 10V	1	
	C8901	F1G1C104A083	0.1uF 16V	1	
	C9001	F1H1H104A013	0.1uF 50V	1	
	C9002	F1G1C104A083	0.1uF 16V	1	
	C9003	F1G1C104A083	0.1uF 16V	1	
	C9004	F1G1H100A565	10pF 50V	1	
	C9005	F1G1H120A565	12pF 50V	1	

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
	C9006	F1G1A1040006	0.1uF 10V	1	
	C9007	F1G1C104A083	0.1uF 16V	1	
	C9008	F1G1H221A444	220pF 50V	1	
	C9009	F1G1H100A565	10pF 50V	1	
	FL8101	F1H0J1050018	1uF 6.3V	1	
	FL8102	F1H0J1050018	1uF 6.3V	1	
	FL8103	F1H0J1050018	1uF 6.3V	1	
	FL8104	F1J1E1040022	0.1uF 25V	1	
	FL8105	F1H0J1050018	1uF 6.3V	1	
	FL8421	F1H0J1050018	1uF 6.3V	1	
	VA6401	F1H1H1500009	15pF 50V	1	
	VA6402	F1H1H1500009	15pF 50V	1	

